


OPEN POROUS MEDIA

OPM Flow Reference Manual

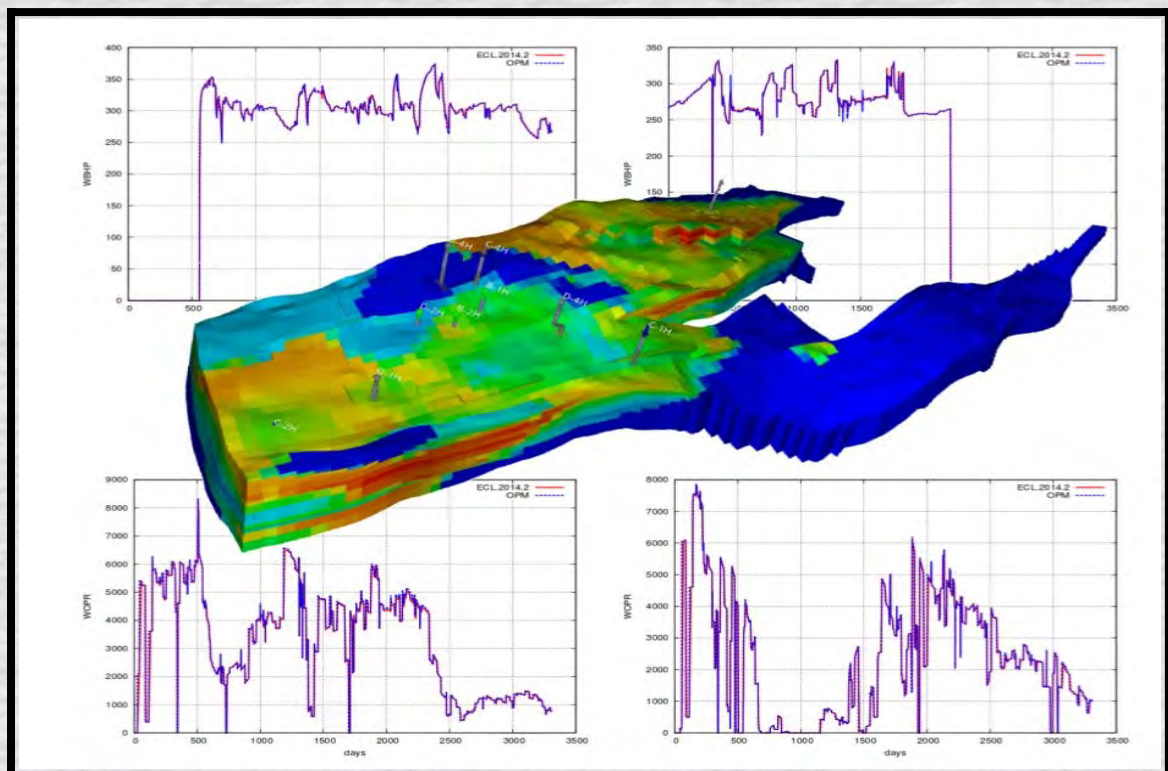

OPM FLOW VERSION: 2021-10

MANUAL REVISION: Rev-0

OPEN POROUS MEDIA

OPM Flow Reference Manual

(2021-10)

DOCUMENT CONTROL				
Company	Equinor ASA			
Confidentiality, copyright and reproduction	This document is Copyright 2021 by the OPEN POROUS MEDIA team.			
	<u>Documentation Contributors:</u>			
	Jostein Alvestad	David Baxendale	Kai Bao	Markus Blatt
	Joakim Hove	Andreas Lauser	Cintia Goncalves Machado	David Landa-Marbán
	Arne Morten Kvarving	Atgeirr Rasmussen	Alf Birger Rustad	Tor Harald Sandve
	Bård Skaflestad	Torbjørn Skille	Pieter J.Verveer	
	One may distribute or modify the document under the terms of the Creative Commons Attribution-ShareALike 4.0 International License, version 4.0 or later (http://creativecommons.org/licenses/by/4.0/).			
	All trademarks within this guide belong to their legitimate owners.			
Document Type	OPEN POROUS MEDIA			
Document Title	OPM Flow Reference Manual (2021-10)			
Document Version	Rev-0			
Document Ref.	2021-10-RPT			
Author and Editor	OPM-OP AS			
	Heyerdahlsvei 12b, 0777 Oslo, Norway			
	David Baxendale			
	david.baxendale@opm-op.com			
Document Name	D:\Projects\Equinor\Miscellaneous\M70 Technical Reports and Notes\Reference\OPM_Flow_Reference_Manual_2021-10_Rev-0.odt			

OPEN POROUS MEDIA
OPM Flow Reference Manual
(2021-10)

[illegible]

TABLE OF CONTENTS

CHAPTER 1: INTRODUCTION.....	43
1.1 Overview.....	44
CHAPTER 2: INSTALLING AND RUNNING FLOW.....	49
2.1 Installing OPM Flow.....	50
2.1.1 Ubuntu Linux 18.04 (64-bit version only) and Higher.....	50
2.1.2 Red Hat Enterprise or CentOS (version 6 or 7).....	51
2.1.3 Windows 7 and 10 Using VirtualBox.....	51
2.1.4 Windows 10 - Windows Subsystem for Linux.....	56
2.1.5 Using a Docker Container.....	59
2.1.6 Installing from Source.....	59
2.2 Running OPM Flow 2021-10 From The Command Line.....	60
2.3 Running OPM Flow Using OPMRUN.....	77
CHAPTER 3: KEYWORD DOCUMENTATION STRUCTURE.....	85
3.1 Introduction.....	86
3.2 Keyword Definitions.....	87
3.3 Multi-Section Keywords.....	87
3.4 Keyword Formats.....	88
3.4.1 Keyword Format Type - Comment.....	88
3.4.2 Keyword Format Type - Activation.....	88
3.4.3 Keyword Format Type - Vector (Row Vector).....	89
3.4.4 Keyword Format Type - Vector (Columnar Vector).....	91
3.4.5 Keyword Format Type - Array.....	92
3.5 Input File Structure.....	93
CHAPTER 4: GLOBAL SECTION KEYWORDS.....	95
4.1 Introduction.....	96
4.2 Data Requirements.....	96
4.3 Keyword Definitions.....	98
4.3.1 COLUMNS - Define Input File Column Margins.....	99
4.3.2 DEBUG - Define the Debug Data to be Printed to File.....	100
4.3.3 ECHO - Activate Echoing of User Input Files to the Print File.....	101
4.3.4 END - Define the End of the Input File.....	102
4.3.5 ENDINC - Define the End of an Include File.....	103
4.3.6 ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	104
4.3.7 EXTRAPMS - Activate Extrapolation Warning Messages.....	105
4.3.8 FORMFEED - Defined the Print File Form-Feed Character.....	106
4.3.9 INCLUDE - Load Another Data File at the Current Position.....	107
4.3.10 MESSAGE - Output User Message.....	108
4.3.11 MESSAGES - Define Message Print Limits and Stop Limits.....	109
4.3.12 NOECHO - Deactivate Echoing of User Input Files to the Print File.....	111
4.3.13 NOWARN - Deactivate Warning Messages.....	112
4.3.14 SKIP - Activate Skipping of All Keywords and Input Data.....	113
4.3.15 SKIP100 - Activate Skipping of Black-Oil Keywords and Input Data.....	114
4.3.16 SKIP300 - Activate Skipping of "Compositional" Keywords and Input Data.....	115
4.3.17 WARN - Activate Warning Messages.....	116
CHAPTER 5: RUNSPEC SECTION.....	117

5.1 Introduction.....	118
5.2 Data Requirements.....	118
5.2.1 Example.....	127
5.3 Keyword Definitions.....	131
5.3.1 ACTDIMS - ACTION Keyword Dimensions.....	132
5.3.2 ACTPARAM - Define Action Facility Target and Tolerance Parameters.....	133
5.3.3 AITS - Activate Intelligent Time Stepping.....	134
5.3.4 AITSOFF - Deactivate Intelligent Time Stepping.....	135
5.3.5 ALKALINE - Activate the Alkaline Phase and Model.....	136
5.3.6 API - Activate API Tracking.....	137
5.3.7 AQUDIMS - Define Aquifer Dimensions.....	138
5.3.8 AUTOREF - Define Auto Refinement Options.....	139
5.3.9 BIGMODEL - Activate Big Model Option (Retired).....	140
5.3.10 BLACKOIL - Activate Black Oil Phases.....	141
5.3.11 BPARA - Activate Block Parallel License.....	142
5.3.12 BPIDIMS - Define the Dimensions of the Interpolated Block Quantities.....	143
5.3.13 BRINE - Activate Brine Tracking Option.....	144
5.3.14 CART - Activate Cartesian Geometry.....	146
5.3.15 CBMOPTS - Define Coal Bed Methane Options.....	147
5.3.16 CO2STORE - Activate the CO ₂ Storage Model.....	148
5.3.17 COAL - Activate the Coal Phase (CBM Model).....	150
5.3.18 COLUMNS - Define Input File Column Margins.....	151
5.3.19 CPR - Activate Constrained Pressure Residual ("CPR") Linear Solver.....	152
5.3.20 DEBUG - Define the Debug Data to be Printed to File.....	153
5.3.21 DIFFUSE - Activate Molecular Diffusion Option.....	154
5.3.22 DIMENS - Define the Dimension of the Model.....	155
5.3.23 DISGAS - Activate the Dissolved Gas Phase in the Model.....	156
5.3.24 DISPDIMS - Define the Maximum Number of Dispersion Tables.....	157
5.3.25 DUALPERM - Activate Dual Permeability Model.....	158
5.3.26 DUALPORO - Activate Dual Porosity Model.....	159
5.3.27 DYNRDIMS - Define Dynamic Region Dimensions.....	160
5.3.28 ECHO - Activate Echoing of User Input Files to the Print File.....	161
5.3.29 ECLMC - Activate Multi-Component Brine Model.....	162
5.3.30 END - Define the End of the Input File.....	163
5.3.31 ENDINC - Define the End of an Include File.....	163
5.3.32 ENDSALE - Activate Relative Permeability End-Point Scaling Option.....	164
5.3.33 ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	166
5.3.34 EQLDIMS - Define the Equilibration Data Dimensions.....	167
5.3.35 EQLOPTS - Activate the Equilibration Options.....	168
5.3.36 EXTRAPMS - Activate Extrapolation Warning Messages.....	169
5.3.37 FAULTDIM - Define the Number of Fault Segments.....	170
5.3.38 FIELD - Activate the Oil Field System of Units for the Model.....	171
5.3.39 FMTHMD - Activate The Format History Match Gradient File Option.....	172
5.3.40 FMTIN - Activate The Format Input File Option.....	173
5.3.41 FMTOU - Activate The Format Output File Option.....	175
5.3.42 FOAM - Activate the Foam Phase and Model.....	177
5.3.43 FORMFEED - Defined the Print File Form-Feed Character.....	178
5.3.44 FRICTION - Activate Wellbore Friction Option.....	179
5.3.45 FULLIMP - Activate Fully Implicit Solution Option.....	180
5.3.46 GAS - Activate the Gas Phase in the Model.....	181
5.3.47 GASFIELD - Define Gas Field Operations Options.....	182
5.3.48 GDIMS - Activate Instantaneous Gradient Option and Define Dimensions.....	183
5.3.49 GIMODEL - Activate Gi Pseudo Compositional Option.....	184
5.3.50 GRAVDR - Activate Gravity Drainage and Imbibition for Dual Porosity Model.....	185
5.3.51 GRAVDRB - Activate Vertical Discretized Gravity Drainage and Imbibition for Dual Porosity Model.....	186
5.3.52 GRAVDRM - Activate Alternative Gravity Drainage and Imbibition for Dual Porosity Model.....	187
5.3.53 GRIDOPTS - Grid Processing Options.....	188
5.3.54 HMDIMS - Define History Match Gradient Parameter Dimensions.....	190
5.3.55 HYST - Activate the Hysteresis Option (Retired).....	191

5.3.56 IMPES - Activate Implicit Pressure Explicit Saturation Solution Option.....	192
5.3.57 IMPLICIT - Activate Fully Implicit Solution Option.....	193
5.3.58 INCLUDE - Load Another Data File at the Current Position.....	194
5.3.59 INSPEC - Activate the INSPEC File Option.....	195
5.3.60 LAB - Activate the Laboratory System of Units for the Model.....	196
5.3.61 LGR - Define Local Grid Refinement Dimensions and Parameters.....	197
5.3.62 LGRCOPY - Activate Local Grid Refinement Inheritance.....	199
5.3.63 LICENSES - Define Required Licenses for Run.....	200
5.3.64 LIVEOIL - Activate the Live Oil Phase (Oil with Free and Dissolved Gas).....	201
5.3.65 LOAD - Load a SAVE File for a Fast Restart.....	202
5.3.66 LOWSALT - Activate the Low Salt Brine Phase in the Brine Model.....	203
5.3.67 MEMORY - Define Allocated Memory (Retired).....	204
5.3.68 MESSAGE - Output User Message.....	205
5.3.69 MESSAGES - Define Message Print Limits and Stop Limits.....	205
5.3.70 MESSRVC - Activate or Deactivate Database Message File Output.....	206
5.3.71 METRIC - Activate the Metric System of Units for the Model.....	207
5.3.72 MICP - Activate the Microbially Induced Calcite Precipitation Model.....	208
5.3.73 MISCIBLE - Define Miscibility Todd-Longstaff Parameters.....	209
5.3.74 MONITOR - Activate Output of the Monitoring Data and File.....	210
5.3.75 MSGFILE - Active or Deactivate Message File Output.....	211
5.3.76 MULTIN - Activate the Non-Unified Multiple Input File Option.....	212
5.3.77 MULTOUT - Activate the Non-Unified Multiple Output File Option.....	214
5.3.78 MULTOUTS - Activate Non-Unified Multiple Summary Output File Option.....	216
5.3.79 MULTREAL - Activate Commercial Simulator's Multi-Realization License.....	217
5.3.80 NETWORK - Activate the Extended Network Option and Define Parameters.....	218
5.3.81 NINEPOIN - Activate the Nine-Point Discretization Option.....	219
5.3.82 NMATRIX - Activate the Discretized Matrix Dual Porosity Option.....	220
5.3.83 NNEWTF - Activate the Non-Newtonian Fluid Model.....	221
5.3.84 NOCASC - Activate Linear Solver Tracer Algorithm.....	222
5.3.85 NODPPM - Deactivate Fracture Porosity-Permeability Calculation.....	223
5.3.86 NOECHO - Deactivate Echoing of User Input Files to the Print File.....	224
5.3.87 NOHYST - Deactivate the Hysteresis Option.....	225
5.3.88 NOINSPEC - Deactivate Output of the INIT Index File.....	226
5.3.89 NOMONITO - Deactivate Output of the Monitoring Data and File.....	227
5.3.90 NONNC - Deactivate Non-Neighbor Connections.....	228
5.3.91 NORSSPEC - Deactivate Output of the RESTART Index File.....	229
5.3.92 NOSIM - Activate the No Simulation Mode for Data File Checking.....	230
5.3.93 NOWARN - Deactivate Warning Messages.....	231
5.3.94 NRSOUT - Defined Maximum Number of RESTART Elements.....	232
5.3.95 NSTACK - Define the Stack Length for the Iterative Linear Solver.....	233
5.3.96 NUMRES - Define the Number of Reservoir Grids.....	234
5.3.97 NUPCOL - Define the Number of Newtonian Iterations Used to Update Well Targets.....	235
5.3.98 OIL - Activate the Oil Phase in the Model.....	236
5.3.99 OPTIONS - Activate Various Program Options.....	237
5.3.100 PARALLEL - Define Parallel Run Configuration.....	238
5.3.101 PARTTRAC - Activate and Define Partitioned Tracer Option.....	239
5.3.102 PATHS - Define Filename Directory Path Aliases.....	240
5.3.103 PEDIMS - Define Petro-Elastic Model Regions and Table Dimensions.....	241
5.3.104 PETOPTS - Define Petrel and Generic Simulation File Options.....	242
5.3.105 PIMTDIMS - Define Well Productivity Scaling Table Dimensions.....	243
5.3.106 POLYMER - Activate the Polymer Phase in the Model.....	244
5.3.107 PRECSALT - Activate the OPM Flow Salt Precipitation Model.....	245
5.3.108 PSTEADY - Activate Pseudo Steady State Flow Calculation Option.....	246
5.3.109 RADIAL - Radial Grid Activation Option.....	247
5.3.110 REGDIMS - Define the Maximum Number of Regions for a Region Array.....	248
5.3.111 RIVRDIMS - Define the River Dimensions and Associated Data.....	250
5.3.112 ROCKCOMP - Activate Rock Compaction.....	251
5.3.113 RPTCPL - Activate Couple Simulation Reporting.....	253
5.3.114 RPTHMD - Define Well History Match Gradient Reporting Options.....	254
5.3.115 RPTRUNSP - Activate RUNSPEC Reporting.....	255
5.3.116 RSSPEC - Activate Output of the RESTART Index File.....	256
5.3.117 RUNSPEC - Define the Start of the RUNSPEC Section of Keywords.....	257
5.3.118 SAMG - Activate Algebraic Multi-Grid Linear Solver.....	258

5.3.119 SATOPTS - Activate Relative Permeability Assignment Options.....	259
5.3.120 SAVE - Activate Output of a SAVE File for Fast Restarts.....	263
5.3.121 SCDPDIMS - Define Scale Deposition and Damage Table Dimensions.....	264
5.3.122 SKIP - Activate Skipping of All Keywords and Input Data.....	265
5.3.123 SKIP100 - Activate Skipping of Black-Oil Keywords and Input Data.....	265
5.3.124 SKIP300 - Activate Skipping of "Compositional" Keywords and Input Data.....	265
5.3.125 SMRYDIMS - Define Maximum Number of Summary Vectors to be Written.....	266
5.3.126 SOLVDIMS - Define PEBI Grid Nested Factorization Solver Dimensions.....	267
5.3.127 SOLVENT - Activate the SOLVENT Phase in the Model.....	268
5.3.128 SPIDER - Spider Grid Activation Option.....	269
5.3.129 START - Simulation Start Date.....	270
5.3.130 SURFACT - Activate the Surfactant Phase in the Model.....	271
5.3.131 SURFACTW - Activate the Surfactant Phase with Wettability Changes in the Model.....	272
5.3.132 TABDIMS - Define the Number of Tables and the Table Dimensions.....	273
5.3.133 TEMP - Activate the Temperature Modeling Option.....	276
5.3.134 THERMAL- Activate the Thermal Modeling Option.....	277
5.3.135 TITLE - Define the Title for the Input Deck.....	280
5.3.136 TRACERS - Activate Tracer Options and Set Tracer Array Dimensions.....	281
5.3.137 TRPLPORO - Activate the Triple Porosity Model Option.....	283
5.3.138 UDADIMS - Define the Dimensions of the User Defined Arguments.....	284
5.3.139 UDQDIMS - Define the Dimensions of the User Defined UDQ Feature.....	285
5.3.140 UDQPARAM - Define Parameters for the User Defined Quantity Feature.....	287
5.3.141 UDTDIMS - Define the Dimensions of the User Defined Tables.....	289
5.3.142 UNCODHMD - Activate History Match Gradient Unencoded Output.....	290
5.3.143 UNIFIN - Activate The Unified Input File Option.....	291
5.3.144 UNIFOUT - Activate The Unified Output File Option.....	293
5.3.145 UNIFOUTS - Activate The Unified Output Summary File Option.....	295
5.3.146 UNIFSAVE - Activate The Unified Output Save File Option.....	296
5.3.147 VAPOIL - Activate the Vaporize Oil in Wet Gas Phase in the Model.....	297
5.3.148 VAPWAT - Activate Vaporize Water in the Dry and Wet Gas Phases.....	298
5.3.149 VE - Activate Vertical Equilibrium Model (Global).....	299
5.3.150 VFPIIDIMS - Injection Vertical Flow Performance Table Dimensions.....	300
5.3.151 VFPPDIMS - Production Vertical Flow Performance Table Dimensions.....	301
5.3.152 VISAGE - Activate External Reservoir Geo-Mechanics VISAGE Option.....	302
5.3.153 VISCD - Activate Dual Porosity Viscous Displacement Option.....	303
5.3.154 WARN - Activate Warning Messages.....	304
5.3.155 WATER - Activate the Water Phase in the Model.....	305
5.3.156 WELLDIMS - Define the Wells and Group Dimensions.....	306
5.3.157 WPOTCALC - Well Potential Calculation Options.....	308
5.3.158 WSEGDIMS - Define Multi-Segment Well Dimensions.....	309

CHAPTER 6: GRID SECTION.....311

6.1 Introduction.....	312
6.2 Data Requirements.....	313
6.2.1 Cartesian Regular Grids.....	313
6.2.2 Irregular Corner-Point Grids.....	315
6.2.3 Radial Grids.....	318
6.2.4 Spider Grids.....	322
6.2.5 Rock Properties.....	325
6.3 Keyword Definitions.....	327
6.3.1 ACTNUM - Set the Status of a Grid Block To Active or Inactive.....	328
6.3.2 ADD - Add a Constant to a Specified Array.....	329
6.3.3 ADDREG - Add a Constant to an Array based on a Region Number.....	331
6.3.4 ADDZCORN - Add a Constant to the ZCORN Depth Array.....	333
6.3.5 AMALGAM - Define LGR Amalgamations.....	334
6.3.6 AQUANCON - Define Analytical Connections to the Grid.....	335
6.3.7 AQUCON - Define Numerical Aquifer Connections to the Grid.....	337
6.3.8 AQUCT - Define Carter-Tracy Analytical Aquifers.....	340
6.3.9 AQUNNC - Define Numerical Aquifer Non-Neighbor Connections.....	344
6.3.10 AQUNUM - Define Numerical Aquifer Properties.....	345

6.3.11	AUTOCOAR - Define Auto Refinement Grid Coarsen Area.....	348
6.3.12	BOUNDARY - Define a Boundary Box for Printing.....	349
6.3.13	BOX - Define a Range of Grid Blocks to Enter Property Data.....	350
6.3.14	BTOTALFA - Dual Porosity Matrix to Fracture Multiplier (All Cells).....	352
6.3.15	BTOTALFV - Dual Porosity Matrix to Fracture Multiplier (Individual Cells).....	353
6.3.16	CARFIN - Define a Cartesian Local Grid Refinement.....	354
6.3.17	COALNUM - Define the Coal Region Numbers.....	356
6.3.18	COARSEN - Define Grid Coarsening Cells.....	357
6.3.19	COLLAPSE - Define Compressed Vertical Equilibrium Cells.....	358
6.3.20	COLUMNS - Define Input File Column Margins.....	359
6.3.21	COORD - Define a Set of Coordinates Lines for a Reservoir Grid.....	360
6.3.22	COORDSYS - Define Coordinate Grid Options.....	362
6.3.23	COPY - Copy Array Data to Another Array.....	363
6.3.24	COPYBOX - Copy Array Data Defined by a Box.....	365
6.3.25	COPYREG - Copy an Array to Another Array based on a Region Number.....	368
6.3.26	CRITPERM - Define Minimum Permeability for Vertical Equilibrium Grid Cell Compression.....	370
6.3.27	DEBUG - Define the Debug Data to be Printed to File.....	371
6.3.28	DIFFMR - Define Grid Block Radial Direction Diffusivity Multipliers.....	372
6.3.29	DIFFMR- - Define Grid Block Negative Radial Direction Diffusivity Multipliers.....	373
6.3.30	DIFFMTH - Define Grid Block Theta Direction Diffusivity Multipliers.....	374
6.3.31	DIFFMTH- - Define Grid Block Negative Theta Direction Diffusivity Multipliers.....	375
6.3.32	DIFFMX - Define Grid Block X-Direction Diffusivity Multipliers.....	376
6.3.33	DIFFMX- - Define Grid Block Negative X-Direction Diffusivity Multipliers.....	377
6.3.34	DIFFMY - Define Grid Block Y-Direction Diffusivity Multipliers.....	378
6.3.35	DIFFMY- - Define Grid Block Negative Y-Direction Diffusivity Multipliers.....	379
6.3.36	DIFFMZ - Define Grid Block Z-Direction Diffusivity Multipliers.....	380
6.3.37	DIFFMZ- - Define Grid Block Negative Z-Direction Diffusivity Multipliers.....	381
6.3.38	DOMAINS - Define the Parallel Domain Properties.....	382
6.3.39	DPGRID - Activate The Matrix Cell to Fracture Cell Option.....	383
6.3.40	DPNUM - Define Dual and Single Porosity Grid Block Array.....	384
6.3.41	DR - Define the Size of Grid Blocks in the R Direction for All Cells.....	385
6.3.42	DRV - Define the Size of Grid Blocks in the R Direction via a Vector.....	387
6.3.43	DTHETA - Define the Size of Grid Blocks in the THETA Direction for All Cells.....	388
6.3.44	DTHETAV - Sets the Size of Grid Blocks in THETA Direction via a Vector.....	389
6.3.45	DUMPFLUX - Activate Writing Out of a Flux File.....	390
6.3.46	DX - Define the Size of Grid Blocks in the X Direction for All Cells.....	391
6.3.47	DXV - Define the Size of Grid Blocks in the X Direction via a Vector.....	392
6.3.48	DY - Define the Size of Grid Blocks in the Y Direction for All Cells.....	393
6.3.49	DYV - Define the Size of Grid Blocks in the Y Direction via a Vector.....	394
6.3.50	DZ - Define the Size of Grid Blocks in the Z Direction for All Cells.....	395
6.3.51	DZMATRIX - Matrix Block Height for Gravity Drainage Model For All Cells.....	396
6.3.52	DZMTRX - Matrix Block Height for Gravity Drainage Model for the Grid.....	397
6.3.53	DZMTRXV - Matrix Block Height for Gravity Drainage Model For All Cells.....	398
6.3.54	DZNET - Define Grid Block Net Thickness for All Cells.....	399
6.3.55	DZV - Define the Size of Grid Blocks in the Z Direction via a Vector.....	400
6.3.56	ECHO - Activate Echoing of User Input Files to the Print File.....	401
6.3.57	END - Define the End of the Input File.....	401
6.3.58	ENDBOX - Define the End of the BOX Defined Grid.....	402
6.3.59	ENDFIN - End the Definition of a Local Grid Refinement.....	403
6.3.60	ENDINC - Define the End of an Include File.....	404
6.3.61	ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	404
6.3.62	EQLZCORN - Modify the Depth of the Corner-Point Depth Array.....	405
6.3.63	EQUALREG - Sets an Array to a Constant by Region Number.....	406
6.3.64	EQUALS - Sets a Specified Array to a Constant.....	409
6.3.65	EXTFIN - Define an External Unstructured Local Grid Refinement.....	412
6.3.66	EXTHOST - Define Host Cells for External LGRs.....	413
6.3.67	EXTRAPMS - Activate Extrapolation Warning Messages.....	414
6.3.68	EXTREPGL - Define Host Cells for External Unstructured LGRs.....	415
6.3.69	FAULTS - Define Faults in the Grid Geometry.....	416
6.3.70	FILEUNIT - Activate Unit Consistency Checking.....	418
6.3.71	FLUXNUM - Define the Flux Regions.....	419
6.3.72	FLUXREG - Define Active Flux Regions.....	420

6.3.73 FLUXTYPE - Defines the Flux Boundary Type.....	421
6.3.74 FORMFEED - Defined the Print File Form-Feed Character.....	422
6.3.75 GDFILE - Load a Grid File.....	423
6.3.76 GDORIENT - Define Grid Orientation Parameters.....	424
6.3.77 GETDATA - Load and Assign Data Array from INIT or RESTART Files.....	425
6.3.78 GRID - Define the Start of the GRID Section of Keywords.....	426
6.3.79 GRIDFILE - Set the Grid File Output Options.....	427
6.3.80 GRIDUNIT - Define the Grid Units.....	428
6.3.81 HALFTRAN - Activate Half Block Transmissibility Calculations.....	429
6.3.82 HEATCR - Define Reservoir Rock Heat Capacity for All Cells.....	430
6.3.83 HEATCRT - Define Reservoir Rock Heat Capacity Temperature Dependence for All Cells.....	431
6.3.84 HMAQUNUM - History Match Numerical Aquifer Gradient Parameters.....	432
6.3.85 HMFAULTS - History Match Fault Gradient Parameters.....	433
6.3.86 HMMLAQUN - History Match Numerical Aquifer Gradient Multipliers.....	434
6.3.87 HMMLT - History Match Grid Permeability Gradient Cumulative Multipliers.....	435
6.3.88 HMMMREGT - History Match Region Transmissibility Gradient Cumulative Multipliers.....	436
6.3.89 HMMULRGT - History Match Region Transmissibility Parameters.....	437
6.3.90 HMMULTFT - History Match Fault Transmissibility Gradient Cumulative Multipliers.....	438
6.3.91 HMMULTSG - History Match Dual porosity Sigma Gradient Cumulative Multipliers.....	439
6.3.92 HRFIN - Define the Ratio of LGR Grid Blocks in the R-Direction.....	440
6.3.93 HXFIN - Define the Ratio of LGR Grid Blocks in the X-Direction.....	441
6.3.94 HYFIN - Define the Ratio of LGR Grid Blocks in the Y-Direction.....	442
6.3.95 HZFIN - Define the Ratio of LGR Grid Blocks in the Z-Direction.....	443
6.3.96 IHOST - Assign LGRs to Parallel Process Number.....	444
6.3.97 IMPORT - Import Grid File Data at the Current Position.....	445
6.3.98 INCLUDE - Load Another Data File at the Current Position.....	446
6.3.99 INIT - Activate the INIT File Option.....	447
6.3.100 INRAD - Define the Inner Radius of a Radial Grid.....	448
6.3.101 IONROCK - Define the Ion Exchange Capacity for All the Cells.....	449
6.3.102 ISOLNUM - Define the Independent Reservoir Regions.....	450
6.3.103 JFUNC - Activate the Leverett J-function Option.....	451
6.3.104 JFUNCR - Activate the Leverett J-function Saturation Table Option.....	454
6.3.105 LGRCOPY - Activate Local Grid Refinement Inheritance.....	457
6.3.106 LINKPERM - Assign Cell Permeabilities to Cell Faces.....	458
6.3.107 LTOSIGMA - Dual Porosity Viscous Displacement Sigma Parameters.....	459
6.3.108 LX - Dual Porosity Viscous Displacement X Direction Matrix Size for All Cells.....	460
6.3.109 LXFEN - Define Logarithmic LGR Grid Block Spacing in the X-Direction.....	461
6.3.110 LY - Dual Porosity Viscous Displacement Y Direction Matrix Size for All Cells.....	462
6.3.111 LYFIN - Define Logarithmic LGR Grid Block Spacing in the Y-Direction.....	464
6.3.112 LZ - Dual Porosity Viscous Displacement Z Direction Matrix Size for All Cells.....	465
6.3.113 LZFIN - Define Logarithmic LGR Grid Block Spacing in the Z-Direction.....	467
6.3.114 MAPAXES - Define the Map Origin Input Data.....	468
6.3.115 MAPUNITS - Define the Map Axes Units.....	469
6.3.116 MAXVALUE - Sets a Maximum Value for an Array Element.....	470
6.3.117 MESSAGE - Output User Message.....	472
6.3.118 MESSAGES - Define Message Print Limits and Stop Limits.....	472
6.3.119 MINNNCT - Set a Minimum Non-Neighbor Connection Transmissibility.....	473
6.3.120 MINPORV - Set a Minimum Grid Block Pore Volume Threshold for All Cells.....	474
6.3.121 MINPV - Set a Minimum Grid Block Pore Volume Threshold for All Cells.....	475
6.3.122 MINPVV - Set a Minimum Grid Block Pore Volume Threshold for Individual Cells.....	476
6.3.123 MINVALUE - Set a Minimum Value for an Array Element.....	477
6.3.124 MPFANUM - Define Multi-Point Flux Discretization Regions.....	479
6.3.125 MPFNNC - Define Multi-Point Flux Non-Neighbor Connections.....	480
6.3.126 MULTFLT - Multiply the Transmissibility of a Defined Fault by a Constant.....	481
6.3.127 MULTIPLY - Multiply a Specified Array by a Constant.....	482
6.3.128 MULTIREG - Multiply an Array by a Constant based on a Region Number.....	484
6.3.129 MULTNUM - Define the Multiple Transmissibility Regions.....	486
6.3.130 MULTPV - Multiply Cell Pore Volumes by a Constant.....	487
6.3.131 MULTR - Multiply Cell Transmissibility in the +R Direction.....	488
6.3.132 MULTR- - Multiply Cell Transmissibility in the -R Direction.....	489
6.3.133 MULTREGD - Multiply Diffusivities Between Regions.....	490
6.3.134 MULTREGH - Multiply Thermal Conductivities Between Regions.....	492
6.3.135 MULTREGP - Multiply Pore Volumes Based On Region Number.....	494

6.3.136	MULTREGT - Multiply Transmissibilities Between Regions.....	495
6.3.137	MULTTHT - Multiply Cell Transmissibility in the +Theta Direction.....	497
6.3.138	MULTTHT - Multiply Cell Transmissibility in the -Theta Direction.....	498
6.3.139	MULTX - Multiply Cell Transmissibility in the +X Direction.....	499
6.3.140	MULTX - Multiply Cell Transmissibility in the -X Direction.....	500
6.3.141	MULTY - Multiply Cell Transmissibility in the +Y Direction.....	501
6.3.142	MULTY - Multiply Cell Transmissibility in the -Y Direction.....	502
6.3.143	MULTZ - Multiply Cell Transmissibility in the +Z Direction.....	503
6.3.144	MULTZ - Multiply Cell Transmissibility in the -Z Direction.....	504
6.3.145	NEWTRAN - Activate Irregular Corner-Point Grid Transmissibilities.....	505
6.3.146	NINENUM - Define the Nine-Point Discretization Region.....	506
6.3.147	NMATOPTS - Define the Discretized Matrix Dual Porosity Parameters.....	507
6.3.148	NNC - Define Non-Neighbor Connections Between Cells Manually.....	508
6.3.149	NODPPM - Deactivate Fracture Porosity-Permeability Calculation.....	511
6.3.150	NOECHO - Deactivate Echoing of User Input Files to the Print File.....	511
6.3.151	NOGGF - Deactivate Output of Grid Geometry File.....	512
6.3.152	NOWARN - Deactivate Warning Messages.....	513
6.3.153	NTG - Define the Net-to-Gross Ratio for All the Cells.....	514
6.3.154	NXFIN - Define the Number of LGR Grid Blocks in the X-Direction.....	515
6.3.155	NYFIN - Define the Number of LGR Grid Blocks in the Y-Direction.....	516
6.3.156	NZFIN - Define the Number of LGR Grid Blocks in the Z-Direction.....	517
6.3.157	OLDTRAN - Activate Cartesian Regular Grid Transmissibilities.....	518
6.3.158	OLDTRANR - Activate Radial Regular Grid Transmissibilities.....	519
6.3.159	OPERATE - Define Mathematical Operations on Arrays.....	520
6.3.160	OPERATER - Define Mathematical Operations on Arrays by Region.....	523
6.3.161	OPERNUM - Define Regions for Mathematical Operations on Arrays.....	527
6.3.162	OUTRAD - Define the Outer Radius of a Radial Grid.....	528
6.3.163	PARAOPTS - Define Parallel Run Options.....	530
6.3.164	PEBI - Activate and Defined PEBI Grid Options.....	531
6.3.165	PERMAVE - Define Average Transmissibility Coefficients.....	532
6.3.166	PERMJFUN - Define Leverett J-Function Permeability for All Cells.....	533
6.3.167	PERMR - Define the Permeability for Each Cell in the R Direction.....	534
6.3.168	PERMTHT - Define the Permeability for Each Cell in the THETA Direction.....	535
6.3.169	PERMX - Define the Permeability in the X Direction for All the Cells.....	536
6.3.170	PERMY - Define the Permeability in the Y Direction for All the Cells.....	537
6.3.171	PERMZ - Define the Permeability in the Z Direction for All the Cells.....	538
6.3.172	PETGRID - Load a Generic Simulation Grid File.....	540
6.3.173	PINCH - Define Pinch-Out Layer Options.....	541
6.3.174	PINCHNUM - Define Pinch-Out Regions for the PINCHREG Keyword.....	543
6.3.175	PINCHOUT - Define Pinch-Out Layers Option (Fixed).....	544
6.3.176	PINCHREG - Define Pinch-Out Region Options.....	545
6.3.177	PINCHXY - Define Pinch-Out Areal Options.....	547
6.3.178	PORO - Define the Porosity Values for All the Cells.....	548
6.3.179	PYEND - End the Definition of a PYINPUT Section.....	549
6.3.180	PYINPUT - Define the Start of a PYINPUT Section.....	551
6.3.181	QMOBIL Activate or Deactivate LGR End-Point Mobility Correction.....	553
6.3.182	RADFIN - Define a Radial Local Grid Refinement with One Column.....	554
6.3.183	RADFIN4 - Define a Radial Local Grid Refinement with Four Columns.....	555
6.3.184	REFINE - Start the Definition of a Local Grid Refinement.....	556
6.3.185	RESVNUM - Define Reservoir Coordinate Data Set.....	557
6.3.186	ROCKFRAC - Define the Rock Volume to Bulk Volume Fraction for All the Cells.....	559
6.3.187	RPTGRID - Define GRID Section Reporting.....	560
6.3.188	RPTGRIDL - Define GRID Section Reporting for LGRs.....	562
6.3.189	RPTINIT - Define Output to the INIT File.....	564
6.3.190	RPTISOL - Activate Isolated Reservoir Number Reporting.....	565
6.3.191	SIGMA - Dual Porosity Matrix to Fracture Sigma (All Cells).....	566
6.3.192	SIGMAGD - Dual Porosity Matrix to Fracture Sigma for Gravity Drainage (All Cells).....	567
6.3.193	SIGMAGDV - Dual Porosity Matrix to Fracture Sigma Gravity Drainage (Individual Cells).....	568
6.3.194	SIGMAV - Dual Porosity Matrix to Fracture Sigma (Individual Cells).....	569
6.3.195	SKIP - Activate Skipping of All Keywords and Input Data.....	570
6.3.196	SKIP100 - Activate Skipping of Black-Oil Keywords and Input Data.....	570
6.3.197	SKIP300 - Activate Skipping of "Compositional" Keywords and Input Data.....	570

6.3.198 SMULTX - Multiply Cell Transmissibility in the +X Direction (Auto-Refinement).....	571
6.3.199 SMULTY - Multiply Cell Transmissibility in the +Y Direction (Auto-Refinement).....	572
6.3.200 SMULTZ - Multiply Cell Transmissibility in the +Z Direction (Auto-Refinement).....	573
6.3.201 SOLVDIRS - Define Linear Solver Principal Directions.....	574
6.3.202 SOLVNUM - Define PEBI Grid Correspondence to Solver Order.....	575
6.3.203 SPECGRID- Define the Dimensions of a Corner-Point Grid.....	576
6.3.204 THCGAS - Define Gas Phase Thermal Conductivity for All Cells.....	577
6.3.205 THCOIL - Define Oil Phase Thermal Conductivity for All Cells.....	578
6.3.206 THCONR - Define Rock and Fluid Thermal Conductivity for All Cells.....	579
6.3.207 THCONSF - Define Gas Saturation Dependent Thermal Conductivity Scaling Factor for All Cells.....	580
6.3.208 THCROCK - Define Reservoir Rock Thermal Conductivity for All Cells.....	582
6.3.209 THCWATER - Define Water Phase Thermal Conductivity for All Cells.....	583
6.3.210 THPRESFT - Define Fault Threshold Pressures.....	584
6.3.211 TOPS - Define the Depth at the Center of the Top Face for Each Cell.....	586
6.3.212 TRANGL - Define Non-Neighbor Connections Between Global and LGR Cells Manually..	588
6.3.213 USEFLUX - Activate Flux Boundary Model and Define Flux File.....	590
6.3.214 USENOFLO - Activate Flux Boundary Model Without a Flux File.....	591
6.3.215 VEDEBUG - Vertical Equilibrium Debug Data Output.....	592
6.3.216 VEFIN - Activate Vertical Equilibrium Model (LGR).....	593
6.3.217 WARN - Activate Warning Messages.....	594
6.3.218 ZCORN - Define the Depth of Each Corner-Point of a Grid Block.....	595

CHAPTER 7: EDIT SECTION.....597

7.1 Introduction.....	598
7.2 Data Requirements.....	598
7.3 Keyword Definitions.....	600
7.3.1 ADD - Add a Constant to a Specified Array.....	600
7.3.2 ADDREG - Add a Constant to an Array based on a Region Number.....	600
7.3.3 BOUNDARY - Define a Boundary Box for Printing.....	600
7.3.4 BOX - Define a Range of Grid Blocks to Enter Property Data.....	600
7.3.5 COLUMNS - Define Input File Column Margins.....	600
7.3.6 COPY - Copy Array Data to Another Array.....	600
7.3.7 COPYREG - Copy an Array to Another Array based on a Region Number.....	601
7.3.8 DEBUG - Define the Debug Data to be Printed to File.....	601
7.3.9 DEPTH - Edits the Depth at the Center of Each Cell.....	602
7.3.10 DIFFR - Define Grid Block Radial Direction Diffusivity Values.....	603
7.3.11 DIFFTHT - Define Grid Block Theta Direction Diffusivity Values.....	604
7.3.12 DIFFX - Define Grid Block X-Direction Diffusivity Values.....	605
7.3.13 DIFFY - Define Grid Block Y-Direction Diffusivity Values.....	606
7.3.14 DIFFZ - Define Grid Block Z-Direction Diffusivity Values.....	607
7.3.15 ECHO - Activate Echoing of User Input Files to the Print File.....	608
7.3.16 EDIT - Define the Start of the EDIT Section of Keywords.....	609
7.3.17 EDITNNC - Scale Non-Neighbor Connections Between Cells Manually.....	610
7.3.18 EDITNNCR - Reset Non-Neighbor Connections Between Cells Manually.....	613
7.3.19 END - Define the End of the Input File.....	616
7.3.20 ENDBOX - Define the End of the BOX Defined Grid.....	616
7.3.21 ENDFIN - End the Definition of a Local Grid Refinement.....	616
7.3.22 ENDINC - Define the End of an Include File.....	616
7.3.23 ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	616
7.3.24 EQUALREG - Sets an Array to a Constant by Region Number.....	616
7.3.25 EQUALS - Sets a Specified Array to a Constant.....	616
7.3.26 EXTRAPMS - Activate Extrapolation Warning Messages.....	617
7.3.27 FILEUNIT - Activate Unit Consistency Verification.....	617
7.3.28 FORMFEED - Defined the Print File Form-Feed Character.....	617
7.3.29 GETDATA - Load and Assign Data Array from INIT or RESTART File.....	617
7.3.30 HMMULT - History Match Grid Transmissibility & Pore Volume Gradient Cumulative Multipliers.....	618
7.3.31 IMPORT - Import Grid File Data at the Current Position.....	619
7.3.32 INCLUDE - Load Another Data File at the Current Position.....	619

7.3.33 LGRCOPY - Activate Local Grid Refinement Inheritance.....	619
7.3.34 MAXVALUE - Sets a Maximum Value for an Array Element.....	619
7.3.35 MESSAGE - Output User Message.....	619
7.3.36 MESSAGES - Define Message Print Limits and Stop Limits.....	619
7.3.37 MINVALUE - Set a Minimum Value for an Array Element.....	620
7.3.38 MULTFLT - Multiply the Transmissibility of a Defined Fault by a Constant.....	620
7.3.39 MULTIPLY - Multiply a Specified Array by a Constant.....	620
7.3.40 MULTIREG - Multiply an Array by a Constant based on a Region Number.....	620
7.3.41 MULTPV - Multiply Cell Pore Volumes by a Constant.....	620
7.3.42 MULTR - Multiply Cell Transmissibility in the +R Direction.....	620
7.3.43 MULTR- - Multiply Cell Transmissibility in the -R Direction.....	621
7.3.44 MULTREGD - Multiply Diffusivities Between Regions.....	621
7.3.45 MULTREGH - Multiply Thermal Conductivities Between Regions.....	621
7.3.46 MULTREGP - Multiply Pore Volumes Based On Region Number.....	621
7.3.47 MULTREGT - Multiply Transmissibilities Between Regions.....	621
7.3.48 MULTTHT - Multiply Cell Transmissibility in the +Theta Direction.....	621
7.3.49 MULTTHT- - Multiply Cell Transmissibility in the -Theta Direction.....	622
7.3.50 MULTX - Multiply Cell Transmissibility in the +X Direction.....	622
7.3.51 MULTX- - Multiply Cell Transmissibility in the -X Direction.....	622
7.3.52 MULTY - Multiply Cell Transmissibility in the +Y Direction.....	622
7.3.53 MULTY- - Multiply Cell Transmissibility in the -Y Direction.....	622
7.3.54 MULTZ - Multiply Cell Transmissibility in the +Z Direction.....	622
7.3.55 MULTZ- - Multiply Cell Transmissibility in the -Z Direction.....	623
7.3.56 NOECHO - Deactivate Echoing of User Input Files to the Print File.....	623
7.3.57 NOWARN - Deactivate Warning Messages.....	623
7.3.58 OPERATE - Define Mathematical Operations on Arrays.....	623
7.3.59 OPERATER - Define Mathematical Operations on Arrays by Region.....	623
7.3.60 PORV - Define the Pore Volumes for All the Cells.....	624
7.3.61 PYEND - End the Definition of a PYINPUT Section.....	625
7.3.62 PYINPUT - Define the Start of a PYINPUT Section.....	625
7.3.63 REFINE - Start the Definition of a Local Grid Refinement.....	625
7.3.64 SKIP - Activate Skipping of All Keywords and Input Data.....	625
7.3.65 SKIP100 - Activate Skipping of Black-Oil Keywords and Input Data.....	625
7.3.66 SKIP300 - Activate Skipping of "Compositional" Keywords and Input Data.....	625
7.3.67 TRANR - Define the Transmissibility in the +R Direction for All the Cells.....	626
7.3.68 TRANHT - Define the Transmissibility in the +Theta Direction for All the Cells.....	627
7.3.69 TRANX - Define the Transmissibility in the X Direction for All the Cells.....	628
7.3.70 TRANY - Define the Transmissibility in the Y Direction for All the Cells.....	629
7.3.71 TRANZ - Define the Transmissibility in the Z Direction for All the Cells.....	630
7.3.72 WARN - Activate Warning Messages.....	631

CHAPTER 8: PROPS SECTION..... 633

8.1 Introduction.....	634
8.2 Data Requirements.....	634
8.2.1 Fluid Property Tables.....	634
8.2.2 Saturation Tables (Relative Permeability and Capillary Pressure Tables).....	639
8.3 Keyword Definitions.....	643
8.3.1 ADD - Add a Constant to a Specified Array.....	643
8.3.2 ADDREG - Add a Constant to an Array based on a Region Number.....	643
8.3.3 ADSALNOD - Salt Concentration Based on SATNUM Array.....	644
8.3.4 ADSORP - Define Generalized Langmuir Adsorption Function.....	646
8.3.5 ALKADS - Define Alkaline Adsorption Functions.....	647
8.3.6 ALKROCK - Define Rock Alkaline Properties.....	648
8.3.7 ALPOLADS - Polymer Adsorption versus Alkaline Concentration Multipliers.....	649
8.3.8 ALSURFAD - Surfactant Adsorption versus Alkaline Concentration Multipliers.....	650
8.3.9 ALSURFST - Water-Oil Surface Tension versus Alkaline Concentration Multipliers.....	651
8.3.10 APIGROUP - Define API Tracking Number of Grouped Oil PVT Tables.....	652
8.3.11 AQUCT - Define Carter-Tracy Analytical Aquifers.....	653
8.3.12 AQUATAB - Define Carter-Tracy Aquifer Influence Functions.....	654
8.3.13 BDENSITY - Define the Surface Brine Density for the Fluid.....	661

8.3.14 BGGI - Define Gi Gas Formation Volume Factor Pressure Tables.....	663
8.3.15 BOGI - Define Gi Oil Formation Volume Factor Pressure Tables.....	664
8.3.16 BOX - Define a Range of Grid Blocks to Enter Property Data.....	665
8.3.17 COALADS - Define Gas and Solvent Relative Adsorption Tables.....	666
8.3.18 COALPP - Define Gas and Solvent Partial Pressure Adsorption Tables.....	667
8.3.19 COLUMNS - Define Input File Column Margins.....	668
8.3.20 COPY - Copy Array Data to Another Array.....	668
8.3.21 COPYBOX - Copy Array Data Defined by a Box.....	668
8.3.22 COPYREG - Copy an Array to Another Array based on a Region Number.....	668
8.3.23 DEBUG - Define the Debug Data to be Printed to File.....	668
8.3.24 DENSITY - Define the Surface Oil, Water Gas Densities for the Fluids.....	669
8.3.25 DEPTH TAB - River Time and Depth Tables.....	671
8.3.26 DIAGDISP - Activate Alternate Form of Tracer Dispersion.....	672
8.3.27 DIFFC - Define PVT Region Molecular Diffusion Tables.....	673
8.3.28 DIFFCOAL - Define Coal Bed Methane Gas Diffusion Data.....	675
8.3.29 DIFFDP - Activate Dual Porosity Molecular Diffusion for Matrix-Fracture Flow Only.....	676
8.3.30 DIFFMMF - Define Diffusivity Multipliers for Matrix-Fractures.....	677
8.3.31 DISPERSE - Define Dispersion Tables.....	678
8.3.32 DPKRMOD - Modify Matrix Oil Relative Permeability Data.....	679
8.3.33 DSPDEINT - Activate Brine Tracer Dispersion Interpolation by Water Density.....	680
8.3.34 ECHO - Activate Echoing of User Input Files to the Print File.....	681
8.3.35 EHYSR - Define Hysteresis Model and Parameters.....	682
8.3.36 EHYSR - Define Hysteresis Model and Parameters via SATNUM.....	685
8.3.37 END - Define the End of the Input File.....	686
8.3.38 ENDBOX - Define the End of the BOX Defined Grid.....	686
8.3.39 ENDFIN - End the Definition of a Local Grid Refinement.....	686
8.3.40 ENDINC - Define the End of an Include File.....	686
8.3.41 ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	686
8.3.42 ENKRVD - Define Relative Permeability End-Points versus Depth Functions.....	687
8.3.43 ENPCVD - Define Maximum Capillary Pressure versus Depth Functions.....	688
8.3.44 ENPTVD - Define Relative Permeability Saturation End-Points versus Depth.....	689
8.3.45 ENSPCVD - Define Capillary Pressure End-Points versus Depth.....	690
8.3.46 EPSDBGS - Write End-Point Debug Data to the DEBUG File (Multiple).....	691
8.3.47 EPSDEBUG - Write End-Point Debug Data to the DEBUG File (Individual).....	692
8.3.48 EQUALREG - Sets an Array to a Constant by Region Number.....	693
8.3.49 EQUALS - Sets a Specified Array to a Constant.....	693
8.3.50 ESSNODE - Define Salt Concentration Data for Water-Oil Surface Tension.....	694
8.3.51 EXTRAPMS - Activate Extrapolation Warning Messages.....	695
8.3.52 FHERCHBL - Define Herschel-Bulkley Data versus Polymer Concentration.....	696
8.3.53 FILEUNIT - Activate Unit Consistency Verification.....	697
8.3.54 FILLEPS - Activate Saturation End-Point Export to the INIT File.....	698
8.3.55 FOAMADS - Define Foam Rock Adsorption Tables.....	699
8.3.56 FOAMDCYO - Define Foam Decay versus Oil Saturation Tables.....	701
8.3.57 FOAMDCYW - Define Foam Decay versus Water Saturation Tables.....	702
8.3.58 FOAMFCN - Define Foam Gas Mobility Reduction versus Capillary Number.....	703
8.3.59 FOAMFRM - Define Foam Gas Mobility Reduction versus Reference Mobility.....	704
8.3.60 FOAMFSC - Define Foam Gas Mobility versus Surfactant Concentration Functions.....	705
8.3.61 FOAMFSO - Define Foam Gas Mobility Reduction versus Oil Saturation.....	708
8.3.62 FOAMFST - Define Foam Gas-Water Surface Tension versus Surfactant Concentration.....	709
8.3.63 FOAMFSW - Define Foam Gas Mobility Reduction versus Water Saturation.....	710
8.3.64 FOAMMOB - Define Foam Gas Mobility versus Foam Concentration Tables.....	711
8.3.65 FOAMMOBP - Define Foam Mobility Reduction versus Oil Pressure.....	713
8.3.66 FOAMMOBS - Define Foam Mobility Reduction versus Shear.....	714
8.3.67 FOAMOPTS - Define Foam Model Options.....	715
8.3.68 FOAMROCK - Define Foam Rock Properties.....	716
8.3.69 FORMFEED - Defined the Print File Form-Feed Character.....	718
8.3.70 GASDENT - Define Gas Density Temperature Coefficients.....	719
8.3.71 GASVISCT - Define Gas Viscosity versus Temperature Functions.....	721
8.3.72 GETDATA - Load and Assign Data Array from INIT or RESTART File.....	722
8.3.73 GIAL - Define Gi Values and PVT Properties versus Pressure.....	723
8.3.74 GINODE - Define Gi Node Values.....	724
8.3.75 GRAVCONS - Re-Define Gravity Constant.....	725
8.3.76 GRAVITY - Define the Surface Oil, Water Gas Gravities for the Fluids.....	726

8.3.77 HA - History Match End-Point Gradient Additive Modifier.....	728
8.3.78 HDISP - Define Tracer Mechanical Dispersivity Parameters.....	730
8.3.79 HM - History Match End-Point Gradient Multiplicative Modifier.....	731
8.3.80 HMMROCK - History Match Rock Compressibility Gradient Cumulative Multipliers.....	733
8.3.81 HMMROCKT - History Match Rock Compaction Gradient Cumulative Multipliers.....	734
8.3.82 HMPROPS - History Match End-Point Section Start.....	735
8.3.83 HMROCK - History Match Rock Compressibility Gradient Parameters.....	736
8.3.84 HMROCKT - History Match Rock Compaction Gradient Parameters.....	737
8.3.85 HMRREF - History Match Rock Table Reference Pressure Values.....	738
8.3.86 HWKRO - End-Point Scaling of Grid Cell Kro(Swl) (High Salinity and Water Wet).....	739
8.3.87 HWKRORG - End-Point Scaling of Grid Cell Kro(Sgcr) (High Salinity and Water Wet).....	740
8.3.88 HWKRORW - End-Point Scaling of Grid Cell Kro(Swcr) (High Salinity and Water Wet).....	741
8.3.89 HWKRW - End-Point Scaling of Grid Cell Krw(Sw =1.0) (High Salinity and Water Wet).....	742
8.3.90 HWKRWR - End-Point Scaling of Grid Cell KRWR(Sw=1.0) (High Salinity and Water Wet).....	743
8.3.91 HWPCW - End-Point Scaling of Grid Cell Water Capillary Pressure (High Salinity and Water Wet).....	744
8.3.92 HWSOGCR - End-Point Scaling Grid Cell SOGCR (High Salinity and Water Wet).....	745
8.3.93 HWSOWCR - End-Point Scaling Grid Cell SOWCR (High Salinity and Water Wet).....	746
8.3.94 HWSWCR - End-Point Scaling Grid Cell SWCR (High Salinity and Water Wet).....	747
8.3.95 HWSWL - End-Point Scaling Grid Cell SWL (High Salinity and Water Wet).....	748
8.3.96 HWSWLPC - End-Point Scaling Grid Cell SWLPC (High Salinity and Water Wet).....	749
8.3.97 HWSWU - End-Point Scaling Grid Cell SWU (High Salinity and Water Wet).....	750
8.3.98 HYDRHEAD - Define Hydraulic Head Output Reference Data.....	751
8.3.99 HYMOBGDR - Activate Carlson and Killough Alternative Drainage Hysteresis Option.....	752
8.3.100 HYSTCHCK - Activate Hysteresis Inhibition and Drainage End-Point Validation.....	753
8.3.101 IKRG - End-Point Scaling of Grid Cell Krg(Sgu) (Imbibition).....	754
8.3.102 IKRGR - End-Point Scaling of Grid Cell Krgr(1-Sogcr) (Imbibition).....	756
8.3.103 IKRO - End-Point Scaling of Grid Cell Kro(Swl) (Imbibition).....	758
8.3.104 IKRORG - End-Point Scaling of Grid Cell Kro(Sgcr) (Imbibition).....	760
8.3.105 IKRORW - End-Point Scaling of Grid Cell Kro(Swcr) (Imbibition).....	762
8.3.106 IKRW - End-Point Scaling of Grid Cell Krw(Sw =1.0) (Imbibition).....	764
8.3.107 IKRWR - End-Point Scaling of Grid Cell KRWR(Sowcr) (Imbibition).....	766
8.3.108 IMKRVD - Imbibition Relative Permeability End-Points versus Depth Functions.....	768
8.3.109 IMPCVD - Imbibition Maximum Capillary Pressure versus Depth Functions.....	769
8.3.110 IMPORT - Import Grid File Data at the Current Position.....	770
8.3.111 IMPTVD - Imbibition Relative Permeability Saturation End-Points versus Depth.....	771
8.3.112 IMSPCVD - Imbibition Capillary Pressure Connate Saturations versus Depth.....	772
8.3.113 INCLUDE - Load Another Data File at the Current Position.....	773
8.3.114 INTPC - Activate Dual Porosity Integrated Capillary Pressure Option.....	774
8.3.115 IONXROCK - Define Ion Exchange Constant by Saturation Table Regions.....	775
8.3.116 IONXSURF - Define Surfactant Ion Exchange Constant by Saturation Table Regions.....	776
8.3.117 IPCG - End-Point Scaling of Grid Cell Gas Capillary Pressure (Imbibition).....	777
8.3.118 IPCW - End-Point Scaling of Grid Cell Water Capillary Pressure (Imbibition).....	778
8.3.119 ISGCR - End-Point Scaling of Grid Cell Critical Gas Saturation (Imbibition).....	779
8.3.120 ISGL - End-Point Scaling of Grid Cell Connate Gas Saturation (Imbibition).....	780
8.3.121 ISGLPC - End-Point Scaling of Grid Cell Capillary Pressure Connate Gas Saturation (Imbibition).....	781
8.3.122 ISGU - End-Point Scaling of Grid Cell Maximum Gas Saturation (Imbibition).....	783
8.3.123 ISOGCR - End-Point Scaling of Grid Cell Critical Oil Saturation to Gas (Imbibition).....	784
8.3.124 ISOWCR - End-Point Scaling of Grid Cell Critical Oil Saturation to Water (Imbib.).....	786
8.3.125 ISWCR - End-Point Scaling of Grid Cell Critical Water Saturation (Imbibition).....	788
8.3.126 ISWL - End-Point Scaling of Grid Cell Connate Water Saturation (Imbibition).....	789
8.3.127 ISWLPC - End-Point Scaling Grid Cell Capillary Pressure Connate Water Saturations (Imbibition).....	790
8.3.128 ISWU - End-Point Scaling of Grid Cell Maximum Water Saturation (Imbibition).....	792
8.3.129 KRG - End-Point Scaling of Grid Cell Krg(Sgu) (Drainage).....	793
8.3.130 KRGR - End-Point Scaling of Grid Cell Krgr(1-Sogcr) (Drainage).....	796
8.3.131 KRO - End-Point Scaling of Grid Cell Kro(Swl) (Drainage).....	798
8.3.132 KRORG - End-Point Scaling of Grid Cell Kro(Sgcr) (Drainage).....	801
8.3.133 KRORW - End-Point Scaling of Grid Cell Kro(Swcr) (Drainage).....	803
8.3.134 KRW - End-Point Scaling of Grid Cell Krw(Sw =1.0) (Drainage).....	805
8.3.135 KRWR - End-Point Scaling of Grid Cell KRWR(Sowcr) (Drainage).....	807
8.3.136 LANGMPL - Define Langmuir Pressure Grid Cell Multiplier.....	809

8.3.137	LANGMUIR - Langmuir Adsorption Isotherm Tables.....	810
8.3.138	LANGSOLV - Langmuir Adsorption Isotherm Solvent Tables.....	811
8.3.139	LCUNIT - Define Linear Combination Rate and Volume Units.....	812
8.3.140	LKRO - End-Point Scaling of Grid Cell Kro(Swl) (Low Salinity and Oil Wet).....	813
8.3.141	LKRORG - End-Point Scaling of Grid Cell Kro(Sgr) (Low Salinity and Oil Wet).....	814
8.3.142	LKRORW - End-Point Scaling of Grid Cell Kro(Swcr) (Low Salinity and Oil Wet).....	815
8.3.143	LKRW - End-Point Scaling of Grid Cell Krw(Sw =1.0) (Low Salinity and Oil Wet).....	816
8.3.144	LKRWR - End-Point Scaling of Grid Cell KRWR(Sowcr) (Low Salinity and Oil Wet).....	817
8.3.145	LPCW - End-Point Scaling of Grid Cell Water Capillary Pressure (Low Salinity and Oil Wet).....	818
8.3.146	LSALTFNC - Define Low Salt Weighting Factors versus Salt Concentration Functions.....	819
8.3.147	LSOGCR - End-Point Scaling Grid Cell SOGCR (Low Salinity and Oil Wet).....	820
8.3.148	LSOWCR - End-Point Scaling Grid Cell SOWCR (Low Salinity and Oil Wet).....	821
8.3.149	LSWCR - End-Point Scaling Grid Cell SWCR (Low Salinity and Oil Wet).....	822
8.3.150	LSWL - End-Point Scaling Grid Cell SWL (Low Salinity and Oil Wet).....	823
8.3.151	LSWLPC - End-Point Scaling Grid Cell SWLPC (Low Salinity and Oil Wet).....	824
8.3.152	LSWU - End-Point Scaling Grid Cell SWU (Low Salinity and Oil Wet).....	825
8.3.153	LWKRO - End-Point Scaling of Grid Cell Kro(Swl) (Low Salinity and Water Wet).....	826
8.3.154	LWKRORG - End-Point Scaling of Grid Cell Kro(Sgr) (Low Salinity and Water Wet).....	827
8.3.155	LWKRORW - End-Point Scaling of Grid Cell Kro(Swcr) (Low Salinity and Water Wet).....	828
8.3.156	LWKRW - End-Point Scaling of Grid Cell Krw(Sw =1.0) (Low Salinity and Water Wet).....	829
8.3.157	LWKRWR - End-Point Scaling of Grid Cell KRWR(Sw=1.0) (Low Salinity and Water Wet).....	830
8.3.158	LWPCW - End-Point Scaling of Grid Cell Water Capillary Pressure (Low Salinity and Water Wet).....	831
8.3.159	LWSOGCR - End-Point Scaling Grid Cell SOGCR (Low Salinity and Water Wet).....	832
8.3.160	LWSOWCR - End-Point Scaling Grid Cell SOWCR (Low Salinity and Water Wet).....	833
8.3.161	LWSWCR - End-Point Scaling Grid Cell SWCR (Low Salinity and Water Wet).....	834
8.3.162	LWSWL - End-Point Scaling Grid Cell SWL (Low Salinity and Water Wet).....	835
8.3.163	LWSWLPC - End-Point Scaling Grid Cell SWLPC (Low Salinity and Water Wet).....	836
8.3.164	LWSWU - End-Point Scaling Grid Cell SWU (Low Salinity and Water Wet).....	837
8.3.165	MASSFLOW - Define River Mass Flow versus Time Tables.....	838
8.3.166	MAXVALUE - Sets a Maximum Value for an Array Element.....	839
8.3.167	MESSAGE - Output User Message.....	839
8.3.168	MESSAGES - Define Message Print Limits and Stop Limits.....	839
8.3.169	MINVALUE - Set a Minimum Value for an Array Element.....	839
8.3.170	MICPPARA - Define Microbially Induced Calcite Precipitation Parameters.....	840
8.3.171	MISC - Define Solvent Miscibility-Immiscibility Transform Functions.....	843
8.3.172	MLANG - Define Langmuir Maximum Gas Concentration for All Grid Cells.....	845
8.3.173	MLANGSLV - Define Langmuir Maximum Solvent Concentration for All Grid Cells.....	846
8.3.174	MSFN - Miscible Normalized Relative Permeability Tables.....	847
8.3.175	MULTIPLY - Multiply a Specified Array by a Constant.....	848
8.3.176	MULTIREG - Multiply an Array by a Constant based on a Region Number.....	848
8.3.177	NOECHO - Deactivate Echoing of User Input Files to the Print File.....	848
8.3.178	NOWARN - Deactivate Warning Messages.....	848
8.3.179	NOWARNP - Deactivate End-Point Scaling Warning Messages.....	849
8.3.180	OILDENT - Define Oil Density Temperature Coefficients.....	850
8.3.181	OILVISCT - Define Oil Viscosity versus Temperature Functions.....	852
8.3.182	OPERATE - Define Mathematical Operations on Arrays.....	854
8.3.183	OPERATER - Define Mathematical Operations on Arrays by Region.....	854
8.3.184	OVERBURD - Define Rock Overburden Pressure versus Depth Tables.....	855
8.3.185	PCG - End-Point Scaling of Grid Cell Maximum Gas Capillary Pressure (Drainage).....	857
8.3.186	PCG32D - Gas-Oil Capillary Pressure versus Oil and Water Saturation Tables.....	859
8.3.187	PCW - End-Point Scaling of Grid Cell Water Capillary Pressure (Drainage).....	860
8.3.188	PCW32D - Water-Oil Capillary Pressure versus Oil and Gas Saturation Tables.....	861
8.3.189	PECOEFS - Define Petro-Elastic Model Coefficients.....	862
8.3.190	PEGTAB - Petro-Elastic Pressure Shear Modulus Table.....	863
8.3.191	PEKTAB - Petro-Elastic Pressure Bulk Modulus Table.....	864
8.3.192	PERMEFACT - Permeability Multiplication Factor as a Function of Porosity Change.....	865
8.3.193	PLMIXPAR - Define the Polymer Todd-Longstaff Mixing Parameters.....	867
8.3.194	PLYADS - Define Polymer Rock Adsorption Tables.....	868
8.3.195	PLYADSS - Define Polymer Rock Adsorption with Salt Dependence Tables.....	870
8.3.196	PLYATEMP - Define Polymer Adsorption Table Temperature.....	872
8.3.197	PLYCAMAX - Define Polymer-Rock Maximum Adsorption by Cell.....	874

8.3.198	PLYDHFLF - Define Polymer Thermal Degradation Half-Life Tables.....	875
8.3.199	PLYESAL - Define Polymer Effective Salinity Coefficient.....	876
8.3.200	PLYKRRF - Define Polymer Rock Permeability Reduction by Cell.....	877
8.3.201	PLYMAX - Define Polymer-Salt Viscosity Mixing Concentrations.....	878
8.3.202	PLYRMDEN - Define Polymer Model In Situ Rock Density.....	879
8.3.203	PLYROCK - Define Polymer-Rock Properties.....	880
8.3.204	PLYSHEAR - Activate and Define Polymer Shearing Parameters.....	882
8.3.205	PLYSHLOG - Activate and Define the Polymer Shearing Logarithmic Parameters.....	883
8.3.206	PLYTRRF - Define Polymer Rock Permeability Reduction versus Temperature.....	886
8.3.207	PLYTRRFA - Define Polymer Rock Permeability Reduction versus Temperature Option..	887
8.3.208	PLYVISC - Define Polymer Viscosity Scaling Factors.....	888
8.3.209	PLYVISCS - Define Polymer-Salt Viscosity Scaling Factors.....	890
8.3.210	PLYVISCT - Define Polymer-Temperature Viscosity Scaling Factors.....	891
8.3.211	PLYVSCST - Define Polymer-Salt-Temperature Viscosity Scaling Factors.....	892
8.3.212	PMAX - Maximum and Minimum Pressure for Total Compressibility Check.....	893
8.3.213	PMISC - Define Miscibility versus Pressure Tables.....	894
8.3.214	PPCWMAX - Define SWATINIT Calculated Capillary Pressure Constraints.....	895
8.3.215	PROPS - Define the Start of the PROPS Section of Keywords.....	897
8.3.216	PVCD0 - Oil PVT Properties for Dead Oil (Constant Compressibility).....	898
8.3.217	PVCO - Oil PVT Properties for Live Oil.....	900
8.3.218	PVDG - Gas PVT Properties for Dry Gas.....	902
8.3.219	PVDO - Oil PVT Properties for Dead Oil.....	904
8.3.220	PVDS - Solvent PVT Properties for the Solvent Model.....	906
8.3.221	PVTG - Gas PVT Properties for Wet Gas with Vaporized Oil.....	908
8.3.222	PVTGW - Gas PVT Properties for Dry Gas with Vaporized Water.....	910
8.3.223	PVTGWO - Gas PVT Properties for Wet Gas with Vaporized Water and Oil.....	913
8.3.224	PVTO - Oil PVT Properties for Live Oil.....	916
8.3.225	PVTSOL - Oil PVT Properties for Live Oil versus CO ₂ Mass Fraction.....	919
8.3.226	PVTW - Define Water Fluid Properties for Various Regions.....	923
8.3.227	PVTWSALT - Define Brine Water Fluid Properties for Various Regions.....	925
8.3.228	PYEND - End the Definition of a PYINPUT Section.....	928
8.3.229	PYINPUT - Define the Start of a PYINPUT Section.....	928
8.3.230	PVZG - Gas PVT Properties for Dry Gas (Z-Factor).....	929
8.3.231	QHRATING - Define River Mass Flow versus Depth Tables.....	932
8.3.232	REFINE - Start the Definition of a Local Grid Refinement.....	933
8.3.233	RIVRXSEC - Define River Cross-Section versus Depth Parameters.....	934
8.3.234	RKTRMDIR - Activate ROCKTAB Keyword Directional Transmissibility Multipliers.....	935
8.3.235	ROCK - Define the Rock Compressibility for Various Regions.....	936
8.3.236	ROCK2D - Pore Volume Compaction versus Pressure and Sw Tables.....	938
8.3.237	ROCK2DTR - Transmissibility Compaction versus Pressure and Sw Tables.....	940
8.3.238	ROCKOPTS - Define Rock Compaction and Compressibility Options.....	942
8.3.239	ROCKPAMA - Define Coal Palmer-Mansorri Rock Model Parameters.....	944
8.3.240	ROCKTAB - Rock Compaction Tables.....	945
8.3.241	ROCKTABH - Rock Compaction Hysteresis Tables.....	948
8.3.242	ROCKTABW - Rock Compaction Tables (Water Induced).....	951
8.3.243	ROCKTHSG - Rock Compaction Hysteresis Tables (Dual Porosity).....	952
8.3.244	ROCKTSIG - Rock Compaction Tables (Dual Porosity).....	953
8.3.245	ROCKWNODE - Water Saturation Values for Compaction Pressure-Sw Tables.....	954
8.3.246	RPTPROPS - Define PROPS Section Reporting.....	956
8.3.247	RSCONST - Define Constant GOR (Rs) for All Dead Oil PVT Fluids.....	957
8.3.248	RSCONSTT - Define Constant GOR (Rs) for Each Dead Oil PVT Fluid.....	958
8.3.249	RSGI - Define Gas-Oil Ratio versus Pressure and Gi Tables.....	959
8.3.250	RTEMP - Define the Initial Reservoir Temperature for the Model.....	960
8.3.251	RTEMPA - Define the Initial Reservoir Temperature for the Model.....	961
8.3.252	RVCONST - Define Constant CGR (Rv) for All Dry Gas PVT Fluids.....	962
8.3.253	RVCONSTT - Define Constant CGR (Rv) for Each Dry Gas PVT Fluid.....	963
8.3.254	RVGI - Define Condensate-Gas Ratio versus Pressure and Gi Tables.....	964
8.3.255	RWGSALT - Water Vaporization versus Pressure and Salt Concentration.....	965
8.3.256	SALINITY - Define the Reservoir Salinity for All Cells.....	967
8.3.257	SALTNODE - Salt Concentration Based PVTNUM Array.....	968
8.3.258	SALT SOL - Define the Salt Solubility Limit for All Cells.....	969
8.3.259	SCALECRS - Define End-Point Scaling Option.....	970
8.3.260	SCALELIM - End-Point Scaling versus Depth Maximum Water Saturation.....	972

8.3.261	SDENSITY - Define the Miscible or Solvent Surface Gas Density.....	973
8.3.262	SGCR - End-Point Scaling Grid Cell Critical Gas Saturations.....	974
8.3.263	SGCWMIS - Miscible Critical Gas versus Water Saturation Functions.....	975
8.3.264	SGF32D - Gas Saturation Tables versus Oil and Water Saturations.....	976
8.3.265	SGFN - Gas Saturation Tables (Format Type 2).....	977
8.3.266	SGL - End-Point Scaling Grid Cell Connate Gas Saturations.....	978
8.3.267	SGLPC - End-Point Scaling Grid Cell Capillary Pressure Connate Gas Saturations.....	979
8.3.268	SGOF - Gas-Oil Saturation Tables versus Gas (Format Type 1).....	981
8.3.269	SGU - End-Point Scaling Grid Cell Gas Saturation.....	983
8.3.270	SGWFN - Gas-Water Saturation Tables (Format Type 2).....	984
8.3.271	SHRATE - Activate and Define the Polymer Shearing Logarithmic Parameters.....	986
8.3.272	SKIP - Activate Skipping of All Keywords and Input Data.....	987
8.3.273	SKIP100 - Activate Skipping of Black-Oil Keywords and Input Data.....	987
8.3.274	SKIP300 - Activate Skipping of "Compositional" Keywords and Input Data.....	987
8.3.275	SKRO - End-Point Scaling of Grid Cell Kro(Swl) (Surfactant).....	988
8.3.276	SKRORG - End-Point Scaling of Grid Cell Kro(Sgcr) (Surfactant).....	989
8.3.277	SKRORW - End-Point Scaling of Grid Cell Kro(Swcr) (Surfactant).....	990
8.3.278	SKRW - End-Point Scaling of Grid Cell Krw(Sw =1.0) (Surfactant).....	991
8.3.279	SKRWR - End-Point Scaling of Grid Cell KRWR(Sowcr) (Surfactant).....	992
8.3.280	SLGOF - Gas-Oil Saturation Tables versus Gas (Format Type 1).....	993
8.3.281	SOCRS - End-Point Scaling Grid Cell Miscible Critical Oil Saturation with Respect to Water.....	995
8.3.282	SOF2 - Oil Saturation Tables with Respect to Gas or Water (Format Type 2).....	996
8.3.283	SOF3 - Oil Saturation Tables with Respect to Gas and Water (Format Type 2).....	998
8.3.284	SOF32D - Oil Saturation Tables with Respect to Water and Gas (Three Phase).....	1000
8.3.285	SOGCR - End-Point Scaling Grid Cell Critical Oil Saturation with Respect to Gas.....	1001
8.3.286	SOMGAS - STONE1 Model Minimum Oil Saturation versus Gas Saturation.....	1002
8.3.287	SOMWAT - STONE1 Model Minimum Oil Saturation versus Water Saturation.....	1003
8.3.288	SORWMIS - Miscible Residual Oil versus Water Saturation Functions.....	1004
8.3.289	SOWCR - End-Point Scaling Grid Cell Critical Oil Saturation with Respect to Water.....	1005
8.3.290	SPECHEAT - Define the Specific Heat of Oil, Water and Gas.....	1006
8.3.291	SPECROCK - Define the Specific Heat of the Reservoir Rock.....	1008
8.3.292	SSFN - Solvent and Gas Relative Permeability Tables.....	1010
8.3.293	SSGCR - End-Point Scaling Grid Cell Surfactant Critical Gas Saturations.....	1012
8.3.294	SSGL - End-Point Scaling Grid Cell Surfactant Connate Gas Saturations.....	1013
8.3.295	SSOGCR - End-Point Scaling Grid Cell Surfactant Critical Oil Saturation with Respect to Gas.....	1014
8.3.296	SSOWCR - End-Point Scaling Grid Cell Surfactant Critical Oil Saturation with Respect to Water.....	1015
8.3.297	SSWCR - End-Point Scaling Grid Cell Critical Water Saturation.....	1016
8.3.298	SSWL - End-Point Scaling Grid Cell Surfactant Connate Water Saturation.....	1017
8.3.299	SSWU - End-Point Scaling Grid Cell Surfactant Maximum Water Saturation.....	1018
8.3.300	STOG Define Capillary Pressure Oil-Gas Surface Tension versus Pressure.....	1019
8.3.301	STONE - Activate Stone's Second Three Phase Oil Relative Permeability Model (Alias for STONE2).....	1020
8.3.302	STONE1 - Activate Stone's First Three Phase Oil Relative Permeability Model.....	1021
8.3.303	STONE1EX - Define Stone's First Three Phase Oil Relative Permeability Parameter.....	1022
8.3.304	STONE2 - Activate Stone's Second Three Phase Oil Relative Permeability Model.....	1023
8.3.305	STOW Define Capillary Pressure Oil-Water Surface Tension versus Pressure.....	1024
8.3.306	STWG Define Capillary Pressure Water-Gas Surface Tension versus Pressure.....	1025
8.3.307	SURFADDW - Defined Surfactant Adsorbed Concentration versus Wettability Fraction.....	1026
8.3.308	SURFADS - Define Surfactant Rock Adsorption Tables.....	1027
8.3.309	SURFCAPD - Capillary Number versus Miscibility Tables.....	1029
8.3.310	SURFESAL - Define Surfactant Effective Salinity Coefficient.....	1030
8.3.311	SURFROCK - Define Surfactant-Rock Properties.....	1031
8.3.312	SURFST - Surfactant Water-Oil Surface Tension versus Surfactant Concentration.....	1032
8.3.313	SURFSTES - Surfactant Water-Oil Surface Tension versus Surfactant and Salt Concentrations.....	1033
8.3.314	SURFVISC - Surfactant Solution Viscosity versus Concentration.....	1034
8.3.315	SWATINIT - Define the Initial Water Saturation Array for Capillary Pressure Scaling.....	1036
8.3.316	SWCR - End-Point Scaling Grid Cell Critical Water Saturation.....	1037
8.3.317	SWF32D - Water Saturation Tables with Respect to Oil and Gas (Three Phase).....	1038
8.3.318	SWFN - Water Saturation Tables (Format Type 2).....	1039

8.3.319 SWL - End-Point Scaling Grid Cell Connate Water Saturation.....	1041
8.3.320 SWLPC - End-Point Scaling Grid Cell Capillary Pressure Connate Water Saturations....	1042
8.3.321 SWOF - Water-Oil Saturation Tables (Format Type 1).....	1044
8.3.322 SWU - End-Point Scaling Grid Cell Maximum Water Saturation.....	1046
8.3.323 TEMPNODE - Temperature Table for Polymer Solution Viscosity.....	1047
8.3.324 TEMPTVD - Activate Temperature Flux Limited Transport Option.....	1048
8.3.325 TLMIXPAR - Define the Miscible Todd-Longstaff Mixing Parameters.....	1049
8.3.326 TOLCRIT - Define The Critical Saturation Tolerance.....	1050
8.3.327 TPAMEPS - Volumetric Strain versus Coal Gas Concentration Tables.....	1051
8.3.328 TPAMEPSS - Volumetric Strain versus Coal Solvent Concentration Tables.....	1052
8.3.329 TRACER - Define Passive Tracer Variables.....	1053
8.3.330 TRACERKM - Multi-Partitioned Tracer Option K(P) Tables.....	1055
8.3.331 TRACERKP - Standard Partitioned Tracer Option K(P) Tables.....	1056
8.3.332 TRACITVD - Activate and Define Tracer Implicit Flux Limited Transport Option.....	1057
8.3.333 TRACTVD - Activate Tracer Explicit Flux Limited Transport Option.....	1058
8.3.334 TRADS - Environmental Tracer Adsorption Tables.....	1059
8.3.335 TRDCY - Environmental Tracer Decay Tables.....	1060
8.3.336 TRDIF - Tracer Diffusion Tables.....	1061
8.3.337 TRDIS - Tracer Dispersion Table Number Allocation.....	1062
8.3.338 TRNHD - Activate Dispersion Non-Homogeneous Diffusion Option.....	1063
8.3.339 TRROCK - Environmental Tracer-Rock Property Data.....	1064
8.3.340 TZONE - End-Point Scaling Transition Zone Options.....	1065
8.3.341 VDFLOW - Velocity Dependent Flow Coefficient for Grid Block Flow (Grid).....	1067
8.3.342 VDFLOWR - Velocity Dependent Flow Coefficient for Grid Block Flow (Region).....	1068
8.3.343 VEFRAC - Vertical Equilibrium Relative Permeability Fraction (Grid).....	1069
8.3.344 VEFRACP - Vertical Equilibrium Capillary Pressure Fraction (Grid).....	1070
8.3.345 VEFRACPV - Vertical Equilibrium Capillary Pressure Fraction (Cell).....	1071
8.3.346 VEFRACV - Vertical Equilibrium Relative Permeability Fraction (Cell).....	1072
8.3.347 VISCREF - Define Viscosity-Temperature Reference Conditions.....	1073
8.3.348 WAGHYSTR - Define Water-Alternating-Gas Hysteresis Parameters.....	1074
8.3.349 WARN - Activate Warning Messages.....	1075
8.3.350 WATDENT - Define Water Density Temperature Coefficients.....	1076
8.3.351 WATVISCT - Define Water Viscosity versus Temperature Functions.....	1077

CHAPTER 9: REGIONS SECTION.....1079

9.1 Introduction.....	1080
9.2 Data Requirements.....	1080
9.3 Keyword Definitions.....	1084
9.3.1 ADD - Add a Constant to a Specified Array.....	1084
9.3.2 ADDREG - Add a Constant to an Array based on a Region Number.....	1084
9.3.3 BOUNDARY - Define a Boundary Box for Printing.....	1084
9.3.4 BOX - Define a Range of Grid Blocks to Enter Property Data.....	1084
9.3.5 COLUMNS - Define Input File Column Margins.....	1084
9.3.6 COPY - Copy Array Data to Another Array.....	1084
9.3.7 COPYBOX - Copy Array Data Defined by a Box.....	1085
9.3.8 COPYREG - Copy an Array to Another Array based on a Region Number.....	1085
9.3.9 DEBUG - Define the Debug Data to be Printed to File.....	1085
9.3.10 ECHO - Activate Echoing of User Input Files to the Print File.....	1085
9.3.11 END - Define the End of the Input File.....	1085
9.3.12 ENDBOX - Define the End of the BOX Defined Grid.....	1085
9.3.13 ENDFIN - End the Definition of a Local Grid Refinement.....	1085
9.3.14 ENDINC - Define the End of an Include File.....	1086
9.3.15 ENDNUM - Define the End-Point Scaling Depth Region Numbers.....	1087
9.3.16 ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	1088
9.3.17 EQLNUM - Define the Equilibration Region Numbers.....	1089
9.3.18 EQUALREG - Sets an Array to a Constant by Region Number.....	1090
9.3.19 EQUALS - Sets a Specified Array to a Constant.....	1090
9.3.20 EXTRAPMS - Activate Extrapolation Warning Messages.....	1090
9.3.21 FILEUNIT - Activate Unit Consistency Verification.....	1090
9.3.22 FIP - Define the Fluid In-Place Names and Region and Numbers.....	1091

9.3.23 FIPNUM - Define the Fluid In-Place Region Numbers.....	1094
9.3.24 FIPOWG - Activate Oil, Gas, and Water FIP Zone Reporting.....	1096
9.3.25 FORMFEED - Defined the Print File Form-Feed Character.....	1097
9.3.26 GETDATA - Load and Assign Data Array from INIT or RESTART File.....	1097
9.3.27 HA - History Match End-Point Gradient Additive Modifier.....	1097
9.3.28 HBNUM - Define Herschel-Bulkley Region Numbers.....	1098
9.3.29 HM - History Match Region Gradient Parameters.....	1099
9.3.30 HMPROPS - History Match End-Point Section Start.....	1101
9.3.31 HWSNUM - Define the Saturation Table Region Numbers (High Salinity and Water Wet)	1102
9.3.32 IMBNUM - Define the Imbibition Saturation Table Region Numbers.....	1103
9.3.33 IMBNUMMF - Define the Imbibition Saturation Table Region Numbers (Matrix-Fracture)	1104
9.3.34 IMPORT - Import Grid File Data at the Current Position.....	1105
9.3.35 INCLUDE - Load Another Data File at the Current Position.....	1105
9.3.36 KRUNUM - Define the Directional Saturation Table Region Numbers.....	1106
9.3.37 KRUNUMMF - Define the Saturation Table Region Numbers (Matrix-Fracture).....	1107
9.3.38 LSLTWNUM - Define the Low Salt Water Wet Saturation Table Region Numbers.....	1108
9.3.39 LSNUM - Define the Low Salt Oil Wet Saturation Table Region Numbers.....	1109
9.3.40 LWSLTNUM - Define the Low Salt Oil Wet Saturation Table Region Numbers.....	1110
9.3.41 LWSNUM - Define the Low Salt Water Wet Saturation Table Region Numbers.....	1111
9.3.42 MESSAGE - Output User Message.....	1112
9.3.43 MESSAGES - Define Message Print Limits and Stop Limits.....	1112
9.3.44 MISNUM - Define the Miscibility Region Numbers.....	1113
9.3.45 MULTIPLY - Multiply a Specified Array by a Constant.....	1114
9.3.46 MULTIREG - Multiply an Array by a Constant based on a Region Number.....	1114
9.3.47 NOECHO - Deactivate Echoing of User Input Files to the Print File.....	1114
9.3.48 NOWARN - Deactivate Warning Messages.....	1114
9.3.49 OPERATE - Define Mathematical Operations on Arrays.....	1114
9.3.50 OPERATER - Define Mathematical Operations on Arrays by Region.....	1114
9.3.51 OPERNUM - Define Regions for Mathematical Operations on Arrays.....	1115
9.3.52 PENUM - Define the Petro-Elastic Region Numbers.....	1116
9.3.53 PLMIXNUM - Define the Polymer Region Numbers.....	1117
9.3.54 PVTNUM - Define the PVT Regions.....	1118
9.3.55 PYEND - End the Definition of a PYINPUT Section.....	1120
9.3.56 PYINPUT - Define the Start of a PYINPUT Section.....	1120
9.3.57 REFIN - Start the Definition of a Local Grid Refinement.....	1120
9.3.58 REGIONS - Define the Start of the REGIONS Section of Keywords.....	1121
9.3.59 RESIDNUM - Define Vertical Equilibrium Residual Flow Region Numbers.....	1122
9.3.60 ROCKNUM - Define Rock Compaction Table Region Numbers.....	1123
9.3.61 RPTREGS - Define REGIONS Section Reporting.....	1124
9.3.62 SATNUM - Define the Saturation Table Region Numbers.....	1125
9.3.63 SKIP - Activate Skipping of All Keywords and Input Data.....	1126
9.3.64 SKIP100 - Activate Skipping of Black-Oil Keywords and Input Data.....	1126
9.3.65 SKIP300 - Activate Skipping of "Compositional" Keywords and Input Data.....	1126
9.3.66 SURFNUM - Define the Surfactant Miscible Saturation Table Region Numbers.....	1127
9.3.67 SURFNUM - Define the Saturation Table Region Numbers (High Salinity and Water Wet)	1128
9.3.68 TNUM - Define Passive Tracer Concentration Regions.....	1129
9.3.69 TRKPF - Define Partitioned Tracer Regions.....	1131
9.3.70 WARN - Activate Warning Messages.....	1133
9.3.71 WH2NUM - Define WAG Hysteresis Saturation Table Region Numbers (Two Phase).....	1134
9.3.72 WH3NUM - Define WAG Hysteresis Saturation Table Region Numbers (Three Phase)....	1135

CHAPTER 10: SOLUTION SECTION..... 1137

10.1 Introduction.....	1138
10.2 Data Requirements.....	1142
10.2.1 Equilibrium Initialization.....	1142
10.2.2 Enumeration Initialization.....	1143
10.2.3 Restart Initialization.....	1144
10.2.4 Section Keywords.....	1147

10.3 Keyword Definitions.....	1154
10.3.1 ADD - Add a Constant to a Specified Array.....	1154
10.3.2 ADDREG - Add a Constant to an Array based on a Region Number.....	1154
10.3.3 APIVD - Equilibration Oil API Gravity versus Depth Tables.....	1155
10.3.4 AQANCONL - Define Analytical Connections to a LGR Grid.....	1157
10.3.5 AQANNC - Define Analytic Aquifer Non-Neighbor Connections.....	1159
10.3.6 AQANTRC - Define Analytic Aquifer Initial Tracer Concentrations.....	1160
10.3.7 AQUALIST - Define An Analytic Aquifer Name to Aquifer Numbers.....	1161
10.3.8 AQUANCON - Define Analytical Connections to the Grid.....	1162
10.3.9 AQUCHGAS - Define Constant Pressure Gas Analytical Aquifer Properties.....	1163
10.3.10 AQUCHWAT - Define Constant Pressure Water Analytical Aquifer Properties.....	1164
10.3.11 AQUCON - Define Numerical Aquifer Connections to the Grid.....	1165
10.3.12 AQUCT - Define Carter-Tracy Analytical Aquifers.....	1165
10.3.13 AQUFET - Define Fetkovich Analytical Aquifer and Connections.....	1166
10.3.14 AQUFETP - Define Fetkovich Analytical Aquifers.....	1169
10.3.15 AQUFLUX - Define Constant Flux Analytical Aquifer.....	1172
10.3.16 BOUNDARY - Define a Boundary Box for Printing.....	1173
10.3.17 BOX - Define a Range of Grid Blocks to Enter Property Data.....	1173
10.3.18 COLUMNS - Define Input File Column Margins.....	1173
10.3.19 COPY - Copy Array Data to Another Array.....	1173
10.3.20 COPYREG - Copy an Array to Another Array based on a Region Number.....	1173
10.3.21 DATUM - Define the Datum Depth for the Model.....	1174
10.3.22 DATUMR - Define Datum Depths for the FIPNUM Regions.....	1175
10.3.23 DATUMRX - Define Datum Depths for the FIP Allocated Regions.....	1176
10.3.24 DEBUG - Define the Debug Data to be Printed to File.....	1177
10.3.25 DYNAMICR - Start of Dynamic Region Parameter Definition.....	1178
10.3.26 ECHO - Activate Echoing of User Input Files to the Print File.....	1179
10.3.27 END - Define the End of the Input File.....	1179
10.3.28 ENDBOX - Define the End of the BOX Defined Grid.....	1179
10.3.29 ENDDYN - End of Dynamic Region Parameter Definition.....	1180
10.3.30 ENDFIN - End the Definition of a Local Grid Refinement.....	1181
10.3.31 ENDINC - Define the End of an Include File.....	1181
10.3.32 ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	1181
10.3.33 EQUALREG - Sets an Array to a Constant by Region Number.....	1181
10.3.34 EQUALS - Sets a Specified Array to a Constant.....	1181
10.3.35 EQUIL - Define the Equilibration Initialization Data.....	1182
10.3.36 EXTRAPMS - Activate Extrapolation Warning Messages.....	1186
10.3.37 FILEUNIT - Activate Unit Consistency Verification.....	1186
10.3.38 FORMFEED - Defined the Print File Form-Feed Character.....	1186
10.3.39 GASCONC - Define the Initial Equilibration Coal Gas Concentration for All Grid Blocks.....	1187
10.3.40 GASSATC - Define the Initial Equilibration Saturated Coal Gas Concentration for All Grid Blocks.....	1188
10.3.41 GCVD - Define Equilibration Coal Gas Concentration versus Depth Tables.....	1189
10.3.42 GETDATA - Load and Assign Data Array from INIT or RESTART File.....	1191
10.3.43 GETGLOB - Activate Loading of Global Grid Restart Data Option.....	1192
10.3.44 GI - Define the Initial Equilibration Gi Values for All Grid Blocks.....	1193
10.3.45 HMAQUCT - History Match Carter-Tracy Aquifer Gradient Parameters.....	1194
10.3.46 HMAQUFET - History Match Fetkovich Aquifer Gradient Parameters.....	1195
10.3.47 HMMLCTAQ - History Match Carter-Tracy Aquifer Gradient Multipliers.....	1196
10.3.48 HMMLFTAQ - History Match Fetkovich Aquifer Gradient Multipliers.....	1197
10.3.49 HMMLTWCN - History Match Well Connection and Skin Multipliers.....	1198
10.3.50 HMWELCON - History Match Well Connection and Skin Parameters.....	1199
10.3.51 IMPORT - Import Grid File Data at the Current Position.....	1200
10.3.52 INCLUDE - Load Another Data File at the Current Position.....	1200
10.3.53 MESSAGE - Output User Message.....	1200
10.3.54 MESSAGES - Define Message Print Limits and Stop Limits.....	1200
10.3.55 MULTIPLY - Multiply a Specified Array by a Constant.....	1200
10.3.56 MULTIREG - Multiply an Array by a Constant based on a Region Number.....	1200
10.3.57 NOECHO - Deactivate Echoing of User Input Files to the Print File.....	1201
10.3.58 NOHMD - Deactivate History Match Gradient Derivative Calculations.....	1202
10.3.59 NOHMO - Deactivate History Match Gradient Derivative Calculations (Alias).....	1203
10.3.60 NOWARN - Deactivate Warning Messages.....	1204
10.3.61 OILAPI - Define the Initial Equilibration Oil API for All Grid Blocks.....	1205

10.3.62 OPERATE - Define Mathematical Operations on Arrays.....	1206
10.3.63 OPERATER - Define Mathematical Operations on Arrays by Region.....	1206
10.3.64 OUTSOL - Define Data to be Written to the RESTART File (Retired).....	1207
10.3.65 PBUB - Define the Initial Equilibration Bubble-Point Pressure for All Grid Blocks.....	1208
10.3.66 PBVD - Equilibration Bubble-Point versus Depth Tables.....	1209
10.3.67 PDEW - Define the Initial Equilibration Dew-Point Pressure for All Grid Blocks.....	1210
10.3.68 PDVD - Define Equilibration Dew-Point versus Depth Tables.....	1211
10.3.69 PRESSURE - Define the Initial Equilibration Pressures for All Grid Blocks.....	1212
10.3.70 PRVD - Define the Initial Equilibration Pressures versus Depth.....	1213
10.3.71 PYEND - End the Definition of a PYINPUT Section.....	1215
10.3.72 PYINPUT - Define the Start of a PYINPUT Section.....	1215
10.3.73 RAINFALL - Constant Flux Aquifer Rainfall Flux by Month.....	1216
10.3.74 RBDECONT - Define River Grid Block Contact Area versus Depth.....	1217
10.3.75 REFIN - Start the Definition of a Local Grid Refinement.....	1218
10.3.76 RESTART - Restart Run From an Existing Restart File.....	1219
10.3.77 RIVERSYS - Define River System (Branch Structure and Boundary Conditions).....	1221
10.3.78 RPTRST - Define Data to be Written to the RESTART File.....	1222
10.3.79 RPTSOL - Define SOLUTION Section Reporting.....	1225
10.3.80 RS - Define the Initial Equilibration GOR (Rs) for All Grid Blocks.....	1226
10.3.81 RSVD - Equilibration Dissolved Gas-Oil Ratio (Rs) versus Depth Tables.....	1227
10.3.82 RTEMP - Define the Initial Reservoir Temperature for the Model.....	1228
10.3.83 RTEMPA - Define the Initial Reservoir Temperature for the Model.....	1228
10.3.84 RTEMPVD - Define the Initial Reservoir Temperature versus Depth Tables.....	1229
10.3.85 RV - Define the Initial Equilibration CGR (Rv) for All Grid Blocks.....	1231
10.3.86 RVVD - Equilibration Vaporized Oil-Gas Ratio (Rv) versus Depth Tables.....	1232
10.3.87 SALT - Define the Initial Equilibration Salt Concentration for All Grid Blocks.....	1233
10.3.88 SALTVD - Equilibration Salt Precipitated Concentration versus Depth Tables.....	1234
10.3.89 SALTREST - Define the Restart Salt Concentration for All Grid Blocks.....	1236
10.3.90 SALTVD - Equilibration Salt Concentration versus Depth Tables.....	1237
10.3.91 SBIOF - Define The Initial Equilibration Biofilm Volume Fraction For All Grid Blocks.....	1240
10.3.92 SCALC - Define The Initial Equilibration Calcite Volume Fraction For All Grid Blocks.....	1241
10.3.93 SCVD - Define Equilibration Coal Solvent Concentration versus Depth Tables.....	1242
10.3.94 SFOAM - Define the Initial Equilibration Foam Concentration for All Grid Blocks.....	1244
10.3.95 SGAS - Define the Initial Equilibration Gas Saturation for All Grid Blocks.....	1245
10.3.96 SKIP - Activate Skipping of All Keywords and Input Data.....	1246
10.3.97 SKIP100 - Activate Skipping of Black-Oil Keywords and Input Data.....	1246
10.3.98 SKIP300 - Activate Skipping of "Compositional" Keywords and Input Data.....	1246
10.3.99 SMICR - Define The Initial Equilibration Microbial Concentration For All Grid Blocks.....	1247
10.3.100 SOIL - Define the Initial Equilibration Oil Saturation for All Grid Blocks.....	1248
10.3.101 SOLUTION - Define the Start of the SOLUTION Section of Keywords.....	1249
10.3.102 SOLVCONC - Define the Initial Coal Solvent Concentration for All Grid Blocks.....	1250
10.3.103 SOLVFRAC - Define the Initial Gas Solvent Fraction for All Grid Blocks.....	1251
10.3.104 SOXYG - Define The Initial Equilibration Oxygen Concentration For All Grid Blocks.....	1252
10.3.105 SPOLY - Define the Initial Equilibration Polymer Concentration for All Grid Blocks.....	1253
10.3.106 SSOL - Define the Initial Equilibration Solvent Saturation for All Grid Blocks.....	1254
10.3.107 SUREA - Define The Initial Equilibration Urea Concentration For All Grid Blocks.....	1255
10.3.108 SURF - Define the Initial Equilibration Polymer Concentration for All Grid Blocks.....	1256
10.3.109 SWAT - Define the Initial Equilibration Water Saturation for All Grid Blocks.....	1257
10.3.110 TBLK - Define Tracer Initial Grid Block Concentrations.....	1258
10.3.111 TEMPI - Define the Initial Temperature Values for All Cells.....	1260
10.3.112 TEMPVD - Define the Initial Reservoir Temperature versus Depth Tables.....	1261
10.3.113 THPRES - Define Equilibration Region Threshold Pressures.....	1263
10.3.114 TVDP - Define the Initial Equilibration Tracer Saturation versus Depth Functions.....	1265
10.3.115 VAPPARS - Oil Vaporization Parameters.....	1268
10.3.116 VISDATES - Define External Reservoir Geo-Mechanics VISAGE Stress Dates.....	1270
10.3.117 VISOPTS - Define External Reservoir Geo-Mechanics VISAGE Options.....	1271
10.3.118 WARN - Activate Warning Messages.....	1272

CHAPTER 11: SUMMARY SECTION..... 1273

11.1 Introduction.....	1274
------------------------	------

11.2 Data Requirements.....	1277
-----------------------------	------

11.2.1 Summary Variable Mnemonic Syntax.....	1277
11.2.2 Summary Variable Format.....	1279
11.2.3 Aquifer Summary Variables.....	1282
11.2.4 Field, Group, Well, Well Connection and Completion Summary Variables.....	1283
11.2.5 Field, Group and Well Control Mode Summary Variables.....	1290
11.2.6 Field, Region and Block Summary Variables.....	1292
11.2.7 Field and Region Summary Recovery Variables.....	1297
11.2.8 Option Specific Summary Variables - Alkaline Model.....	1299
11.2.9 Option Specific Summary Variables - API and Tracer Tracking.....	1300
11.2.10 Option Specific Summary Variables - Asphaltene Model.....	1302
11.2.11 Option Specific Summary Variables - Brine Model.....	1303
11.2.12 Option Specific Summary Variables - Coal Bed Methane Model.....	1305
11.2.13 Option Specific Summary Variables - Conductive Faults Model.....	1305
11.2.14 Option Specific Summary Variables - Environmental Tracers.....	1305
11.2.15 Option Specific Summary Variables - Foam Model Tracers.....	1306
11.2.16 Option Specific Summary Variables - Gas Field Operations Model.....	1307
11.2.17 Option Specific Summary Variables - Gas Lift Optimization Model.....	1308
11.2.18 Option Specific Summary Variables - Gas Calorific Value Reporting.....	1309
11.2.19 Option Specific Summary Variables - Gi Psuedo-Compositional Model.....	1309
11.2.20 Option Specific Summary Variables - LGR and Coarsening.....	1309
11.2.21 Option Specific Summary Variables - Multi-Segment Wells.....	1310
11.2.22 Option Specific Summary Variables - Network Model.....	1313
11.2.23 Option Specific Summary Variables - OPM Flow Simulation Performance.....	1315
11.2.24 Option Specific Summary Variables - Polymer Model.....	1319
11.2.25 Option Specific Summary Variables - Pseudo Steady State.....	1322
11.2.26 Option Specific Summary Variables - Reservoir Coupling.....	1322
11.2.27 Option Specific Summary Variables - Solvent Model.....	1323
11.2.28 Option Specific Summary Variables - Surfactant Model.....	1324
11.2.29 Option Specific Summary Variables - Thermal Model.....	1325
11.2.30 Option Specific Summary Variables - User Define Quantities.....	1326
11.2.31 Option Specific Summary Variables - Wellbore Friction model.....	1328
11.3 Keyword Definitions.....	1329
11.3.1 ALL - Export Standard Summary Variable Vectors to File.....	1330
11.3.2 COLUMNS - Define Input File Column Margins.....	1333
11.3.3 DATE - Activate the DATE Option for the SUMMARY File.....	1334
11.3.4 DEBUG - Define the Debug Data to be Printed to File.....	1335
11.3.5 ECHO - Activate Echoing of User Input Files to the Print File.....	1335
11.3.6 END - Define the End of the Input File.....	1335
11.3.7 ENDINC - Define the End of an Include File.....	1335
11.3.8 ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	1335
11.3.9 EXCEL - Activate the EXCEL Option for the SUMMARY File.....	1336
11.3.10 EXTRAPMS - Activate Extrapolation Warning Messages.....	1337
11.3.11 FMWSET - Export Well Status Vectors for the Field to File.....	1338
11.3.12 FORMFEED - Defined the Print File Form-Feed Character.....	1340
11.3.13 GMWSET - Export Well Status Vectors by Group to File.....	1341
11.3.14 INCLUDE - Load Another Data File at the Current Position.....	1343
11.3.15 MESSAGE - Output User Message.....	1343
11.3.16 MESSAGES - Define Message Print Limits and Stop Limits.....	1343
11.3.17 MONITOR - Activate Output of the Monitoring Data and File.....	1343
11.3.18 NARROW - Activate Run Summary Narrow Column Output Option.....	1344
11.3.19 NEWTON - Activate Newton Iteration SUMMARY Output.....	1345
11.3.20 NMESSAGE - Export Cumulative Message Summary Variables to File.....	1346
11.3.21 NOECHO - Deactivate Echoing of User Input Files to the Print File.....	1348
11.3.22 NOMONITO - Deactivate Output of the Monitoring Data and File.....	1348
11.3.23 NOWARN - Deactivate Warning Messages.....	1348
11.3.24 OFM - Activate OFM File Output of the SUMMARY Data.....	1349
11.3.25 PERFORMA - Export Standard Simulator Performance Summary Variables to File.....	1350
11.3.26 PYEND - End the Definition of a PYINPUT Section.....	1352
11.3.27 PYINPUT - Define the Start of a PYINPUT Section.....	1352
11.3.28 RPTONLY - Activate the Report Time Steps Only Option for the SUMMARY File.....	1353
11.3.29 RPTONLYO - Deactivate the Report Time Steps Only Option for the SUMMARY File.....	1354
11.3.30 RPTSMRY - Activate or Deactivate Summary List Report.....	1355

11.3.31 RUNSUM - Activate RSM File Output of the SUMMARY Data.....	1356
11.3.32 SEPARATE - Activate the Separate RSM File Output Option.....	1357
11.3.33 SUMMARY - Define the Start of the SUMMARY Section of Keywords.....	1358
11.3.34 SUMTHIN - Define SUMMARY Data Reporting Time Steps.....	1359
11.3.35 WARN - Activate Warning Messages.....	1360

CHAPTER 12: SCHEDULE SECTION.....1361

12.1 Introduction.....	1362
12.2 Data Requirements.....	1363
12.2.1 History Matching Runs.....	1372
12.2.2 Prediction Runs.....	1374
12.2.3 Well Productivity.....	1379
12.3 Keyword Definitions.....	1382
12.3.1 ACTION - Define Action Conditions and Command Processing (Field).....	1383
12.3.2 ACTIONG - Define Action Conditions and Command Processing (Groups).....	1384
12.3.3 ACTIONR - Define Action Conditions and Command Processing (Regions).....	1385
12.3.4 ACTIONS - Define Action Conditions and Command Processing (Well Segments).....	1386
12.3.5 ACTIONW - Define Action Conditions and Command Processing (Wells).....	1387
12.3.6 ACTIONX - Define Action Conditions and Command Processing.....	1388
12.3.7 AITS - Activate Intelligent Time Stepping.....	1398
12.3.8 AITSOFF - Deactivate Intelligent Time Stepping.....	1398
12.3.9 APILIM - Define API Tracking Grid Block Limits.....	1399
12.3.10 AQUCHGAS - Define Constant Pressure Gas Analytical Aquifer Properties.....	1400
12.3.11 AQUCHWAT - Define Constant Pressure Water Analytical Aquifer Properties.....	1400
12.3.12 AQUCT - Define Carter-Tracy Analytical Aquifers.....	1400
12.3.13 AQUCWFAC - Modify Constant Pressure Water Analytical Aquifer Properties.....	1401
12.3.14 AQUFETP - Define Fetkovich Analytical Aquifers.....	1402
12.3.15 AQUFLUX - Define Constant Flux Analytical Aquifer.....	1402
12.3.16 BOUNDARY - Define a Boundary Box for Printing.....	1402
12.3.17 BOX - Define a Range of Grid Blocks to Enter Property Data.....	1402
12.3.18 BRANPROP - Define Network Branch Properties for Extended Network Option.....	1403
12.3.19 CALTRAC - Define a Gas Calorific Value Tracer.....	1406
12.3.20 CECON - Define Well Connections Economic Limit Criteria.....	1407
12.3.21 CECONT - Define Well Connections Tracer Economic Limit Criteria.....	1408
12.3.22 COLUMNS - Define Input File Column Margins.....	1409
12.3.23 COMPDAT - Define Well Connections to the Grid.....	1410
12.3.24 COMPDATL - Define Well Connections to a LGR Grid.....	1414
12.3.25 COMPDATM - Define Well Connections to an Amalgamated LGR Grid.....	1418
12.3.26 COMPFLSH - Assign COMPDAT Differential-Flash Liberation Ratios.....	1419
12.3.27 COMPIMB - Assign Imbibition Saturation Tables to Well Connections.....	1420
12.3.28 COMPINJK - Assign Injection well Relative Permeability Values.....	1422
12.3.29 COMPLMPL - Assign Well LGR Connections to Completions.....	1423
12.3.30 COMPLUMP - Assign Well Connections to Completions.....	1426
12.3.31 COMPOFF - Deactivate Network Automatic Compressors.....	1428
12.3.32 COMPORD - Define Well Connection Ordering.....	1429
12.3.33 COMPRIV - Define Grid Cell Connections to a River.....	1431
12.3.34 COMP RP - Re-Scale Fluid Saturations of Well Connections.....	1432
12.3.35 COMP RP L - Re-Scale Fluid Saturations of Well LGR Connections.....	1433
12.3.36 COMPSEGL - Define Well Connections for Multi-Segment Wells in a LGR.....	1434
12.3.37 COMPSEGS - Define Well Connections for Multi-Segment Wells.....	1437
12.3.38 COMPVE - Re-Define Well Connection Depths.....	1440
12.3.39 COMPVEL - Re-Define Well LGR Connection Depths.....	1441
12.3.40 CPIFACT - Define Well Connection Transmissibility Multipliers.....	1442
12.3.41 CPIFACTL - Define Well Connection Transmissibility Multipliers in a LGR.....	1443
12.3.42 CSKIN - Re-Define Well Connection Skin Factors.....	1444
12.3.43 DATES - Advance Simulation by Reporting Date.....	1445
12.3.44 DCQDEFN - Define Gas DCQ Units as Rate or Energy.....	1448
12.3.45 DEBUG - Define the Debug Data to be Printed to File.....	1449
12.3.46 DELAYACT - Define Delayed Action Keywords.....	1450
12.3.47 DIFFMMF - Define Diffusivity Multipliers for Matrix-Fractures.....	1451

12.3.48 DIMPES - Define IMPES Dynamic Solution Parameters.....	1452
12.3.49 DIMPLICIT - Activate Fully Implicit Dynamic Solution Formulation.....	1453
12.3.50 DRILPRI - Define Prioritized Drilling Queue Priority Parameters.....	1454
12.3.51 DRSDT - Solution Gas (Rs) Maximum Rate of Increase Parameters.....	1455
12.3.52 DRSDTCON - CO ₂ Convective Dissolution Parameter (χ).....	1457
12.3.53 DRSDTR - Solution Gas (Rs) Maximum Rate of Increase Parameters by Region.....	1461
12.3.54 DRVDT - Solution Oil (Rv) Maximum Rate of Increase Parameters.....	1463
12.3.55 DRVDTR - Solution Oil (Rv) Maximum Rate of Increase Parameters by Region.....	1464
12.3.56 DUMPCUPL - Activate Output to the Reservoir Coupling File.....	1466
12.3.57 DYNAMICR - Define Dynamic Region Parameters.....	1467
12.3.58 ECHO - Activate Echoing of User Input Files to the Print File.....	1467
12.3.59 END - Define the End of the Input File.....	1467
12.3.60 ENDACTIO - End the Definition of ACTION Commands.....	1468
12.3.61 ENDBOX - Define the End of the BOX Defined Grid.....	1469
12.3.62 ENDDYN- End of Dynamic Region Parameter Definition.....	1469
12.3.63 ENDFIN - End the Definition of a Local Grid Refinement.....	1469
12.3.64 ENDINC - Define the End of an Include File.....	1469
12.3.65 ENDSKIP - DeActivate Skipping of Keywords and Input Data.....	1469
12.3.66 EPSDBGS - Write End-Point Debug Data to the DEBUG File (Multiple).....	1469
12.3.67 EPSDEBUG - Write End-Point Debug Data to the DEBUG File (Individual).....	1470
12.3.68 EXCAVATE - Set the Status of a Grid Block To Active or Excavate.....	1471
12.3.69 EXIT - Exit Simulation from within an Action Section.....	1472
12.3.70 EXTRAPMS - Activate Extrapolation Warning Messages.....	1474
12.3.71 FBHPDEF - Define Well Default BHP Target and Constraints.....	1475
12.3.72 FILEUNIT - Activate Unit Consistency Verification.....	1476
12.3.73 FORMFEED - Defined the Print File Form-Feed Character.....	1476
12.3.74 GASBEGIN - Define Start of Annual Scheduling Section.....	1477
12.3.75 GASEND - Define End of Annual Scheduling Section.....	1478
12.3.76 GASFCOMP - Define Automatic Gas Compressors.....	1479
12.3.77 GASFDECR - Define Field Gas Sales Contract Monthly Reduction.....	1480
12.3.78 GASFDELC - Define Gas Deliverability Calculation.....	1481
12.3.79 GASFTARG - Define Field Gas Sales Contract Monthly Target.....	1482
12.3.80 GASMONT - Define Start of Annual Scheduling Event.....	1483
12.3.81 GASPERIO - Advance Simulation by Gas Contract Period.....	1484
12.3.82 GASYEAR - Advance Simulation by Gas Contract Year.....	1485
12.3.83 GCALECON - Group Economic Criteria for Production Calorific Groups.....	1486
12.3.84 GCONCAL - Group Production Calorific Targets.....	1488
12.3.85 GCONENG - Group Production Energy Targets.....	1490
12.3.86 GCONINJE - Group Injection Targets and Constraints.....	1491
12.3.87 GCONPRI - Group Production Priority Targets and Constraints.....	1495
12.3.88 GCONPROD - Group Production Targets and Constraints.....	1498
12.3.89 GCONSALE - Define Group Sales Gas Production Targets and Constraints.....	1504
12.3.90 GCONSUMP - Define Group Gas Consumption and Gas Import Targets.....	1507
12.3.91 GCONTOL - Define Group Constraint Tolerance.....	1509
12.3.92 GCUTBACK - Define Group Cutback Limits and Parameters.....	1511
12.3.93 GCUTBACT - Define Group Tracer Cutback Limits and Parameters.....	1512
12.3.94 GDCQ - Define Group Multiple Daily Contract Quantities.....	1513
12.3.95 GDCQECON - Group Economic Criteria for DCQ Production Groups.....	1514
12.3.96 GDRILPOT - Define Group Potential Rates for Automatic Drilling.....	1515
12.3.97 GECON - Group Economic Criteria for Production Groups.....	1516
12.3.98 GECONT - Group Tracer Economic Criteria for Production Groups.....	1519
12.3.99 GEFAC - Define Group Efficiency.....	1522
12.3.100 GLIFTLIM - Group Artificial Lift Constraints.....	1524
12.3.101 GLIFTOPT - Define Group Gas Optimization Limits.....	1526
12.3.102 GNETDP - Group Network Pressure and Rate Controls.....	1528
12.3.103 GNETINJE - Define Group Injection Network Configuration.....	1529
12.3.104 GNETPUMP - Standard Network Automatic Compressor and Pumps.....	1530
12.3.105 GPMAINT - Define Group Pressure Maintenance Targets and Controls.....	1531
12.3.106 GRADGRUP - Define Group History Match Gradient File Output.....	1535
12.3.107 GRADRESV - Define Solution Derivative History Match Gradient Output.....	1536
12.3.108 GRADRFT - Define RFT Derivative History Match Gradient Output.....	1537
12.3.109 GRADWELL - Define Well History Match Gradient File Output.....	1538
12.3.110 GRDREACH - Define River and Grid Block Connections.....	1539

12.3.111 GRUPMAST - Define Master and Slave Groups.....	1540
12.3.112 GRUPNET - Define Group Standard Network Parameters.....	1541
12.3.113 GRUPRIG - Group Drilling and Workover Rig Specifications.....	1545
12.3.114 GRUPSLAV - Define Slave Groups in Slave Reservoirs.....	1546
12.3.115 GRUPTARG - Modify Group Targets and Constraints Values.....	1547
12.3.116 GRUPTREE - Define Group Tree Hierarchy.....	1549
12.3.117 GSATINJE - Define Group Satellite Injection Rates.....	1551
12.3.118 GSATPROD - Define Group Satellite Production Rates.....	1554
12.3.119 GSEPCOND - Assign Group Separators.....	1557
12.3.120 GSSCPTST - Perform Sustainable Capacity Test.....	1558
12.3.121 GSWINGF - Define Group Multiple Gas Contract Parameters.....	1559
12.3.122 GTADD - Add a Constant to a Group Target or Constraint.....	1560
12.3.123 GTMULT - Multiply Group Target or Constraint by a Constant.....	1561
12.3.124 GUIDECAL - Scale Guide Rates Based on Gas Calorific Value.....	1562
12.3.125 GUIDERAT - Define Group Guide Rate Formula.....	1563
12.3.126 GUPFREQ - Instantaneous Gradient Option Update Frequency.....	1568
12.3.127 GWRTWCV - Instantaneous Gradient Option Well Variables.....	1569
12.3.128 HMWPIMLT - History Match Well Productivity Index Parameters.....	1570
12.3.129 INCLUDE - Load Another Data File at the Current Position.....	1571
12.3.130 LGRFREE - Activate Local Grid Refinement Independent Time Steps.....	1572
12.3.131 LGRLOCK - Deactivate Local Grid Refinement Independent Time Steps.....	1573
12.3.132 LGROFF - Deactivate a Local Grid Refinement.....	1574
12.3.133 LGRON - Activate a Local Grid Refinement.....	1575
12.3.134 LIFTOPT - Activate Gas Lift Optimization.....	1576
12.3.135 LINCOM - Define Linear Combination Coefficients.....	1578
12.3.136 MATCORR - Activate the Material Balance Correction Option.....	1579
12.3.137 MESSAGE - Output User Message.....	1580
12.3.138 MESSAGES - Define Message Print Limits and Stop Limits.....	1580
12.3.139 MESSOPTS - Reset Severity Level for Forced Time Steps.....	1581
12.3.140 MULSGGD - Multiply Matrix-Fracture Coupling for Oil-Gas Gravity Drainage for All Cells.....	1582
12.3.141 MULSGGDV - Multiply Matrix-Fracture Coupling for Oil-Gas Gravity Drainage for Individual Cells.....	1583
12.3.142 MULTFLT - Multiply the Transmissibility of a Defined Fault by a Constant.....	1584
12.3.143 MULTPV - Multiply Cell Pore Volumes by a Constant.....	1584
12.3.144 MULTR - Multiply Cell Transmissibility in the +R Direction.....	1584
12.3.145 MULTR- - Multiply Cell Transmissibility in the -R Direction.....	1584
12.3.146 MULTREGT - Multiply Transmissibilities Between Regions.....	1584
12.3.147 MULTSIG - Multiply Matrix-Fracture Coupling for All Cells.....	1585
12.3.148 MULTSIGV - Multiply Matrix-Fracture Coupling for Individual Cells.....	1586
12.3.149 MULTTHT - Multiply Cell Transmissibility in the +Theta Direction.....	1587
12.3.150 MULTTHT- - Multiply Cell Transmissibility in the -Theta Direction.....	1587
12.3.151 MULTX - Multiply Cell Transmissibility in the +X Direction.....	1587
12.3.152 MULTX- - Multiply Cell Transmissibility in the -X Direction.....	1587
12.3.153 MULTY - Multiply Cell Transmissibility in the +Y Direction.....	1587
12.3.154 MULTY- - Multiply Cell Transmissibility in the -Y Direction.....	1587
12.3.155 MULTZ - Multiply Cell Transmissibility in the +Z Direction.....	1588
12.3.156 MULTZ- - Multiply Cell Transmissibility in the -Z Direction.....	1588
12.3.157 NCONSUMP - Node Gas Consumption (Extended Network).....	1589
12.3.158 NEFAC - Node Efficiency Factors (Extended Network).....	1590
12.3.159 NETBALAN - Network Balancing Parameters.....	1591
12.3.160 NETCOMPA - Define Automatic Compressors (Extended Network).....	1594
12.3.161 NEXT - Maximum Next Time Step Size (Alias for NEXTSTEP).....	1595
12.3.162 NEXTSTEP - Maximum Next Time Step Size.....	1596
12.3.163 NEXTSTPL - Maximum Next Time Step Size (LGR).....	1599
12.3.164 NODEPROP - Define Network Node Properties for Extended Network.....	1600
12.3.165 NOECHO - Deactivate Echoing of User Input Files to the Print File.....	1603
12.3.166 NOHMD - Deactivate History Match Gradient Derivative Calculations.....	1603
12.3.167 NOHMO - Deactivate History Match Gradient Derivative Calculations (Alias).....	1603
12.3.168 NOSIM - Activate the No Simulation Mode for Data File Checking.....	1603
12.3.169 NOWARN - Deactivate Warning Messages.....	1603
12.3.170 NUPCOL - Define the Number of Newtonian Iterations Used to Update Well Targets.....	1604
12.3.171 NWATREM - Node Water Removal (Extended Network).....	1605

12.3.172	OUTSOL - Define Data to be Written to the RESTART File (Retired).....	1606
12.3.173	PICOND - Define the Generalized Pseudo Pressure Parameters.....	1607
12.3.174	PIMULTAB - Define Well Productivity Index versus Water Cut Tables.....	1608
12.3.175	PLYADS - Define Polymer Rock Adsorption Tables.....	1610
12.3.176	PLYDHFLF - Define Polymer Thermal Degradation Half-Life Tables.....	1610
12.3.177	PLYMAX - Define Polymer-Salt Viscosity Mixing Concentrations.....	1610
12.3.178	PLYROCKM - Modify Polymer-Rock Properties.....	1611
12.3.179	PLYSHEAR - Activate and Define Polymer Shearing Parameters.....	1612
12.3.180	PLYSHLOG - Activate and Define the Polymer Shearing Logarithmic Parameters.....	1612
12.3.181	PLYVISC - Define Polymer Viscosity Scaling Fact.....	1612
12.3.182	PLYVISCs - Define Polymer-Salt Viscosity Scaling Factors.....	1612
12.3.183	PLYVISCT - Define Polymer-Temperature Viscosity Scaling Factors.....	1612
12.3.184	PLYVSCST - Define Polymer-Salt-Temperature Viscosity Scaling Factors.....	1613
12.3.185	PRIORITY - Activate and Define Well Prioritization Coefficients.....	1614
12.3.186	PRORDER - Define a Group Production Rules Sequence.....	1616
12.3.187	PYACTION - Define Python Based Action Conditions and Command Processing.....	1617
12.3.188	PYEND - End the Definition of a PYINPUT Section.....	1622
12.3.189	PYINPUT - Define the Start of a PYINPUT Section.....	1622
12.3.190	QDRILL - Define Sequential Drilling Queue Wells.....	1623
12.3.191	RAINFALL - Constant Flux Aquifer Rainfall Flux by Month.....	1624
12.3.192	RCMASTS - Reservoir Coupling Group Minimum Time Step for Flow Restriction.....	1625
12.3.193	REACHES - Define River Reaches Structure.....	1626
12.3.194	READDATA - Read Schedule Data Based on Current Time Step.....	1627
12.3.195	REFINE - Start the Definition of a Local Grid Refinement.....	1628
12.3.196	RIVDEBUG - Define the Debug Data to be Printed to File (Rivers).....	1629
12.3.197	RIVERSYS - Define River System (Branch Structure and Boundary Conditions).....	1630
12.3.198	RIVRPROP - Modify River Reaches Properties.....	1631
12.3.199	RIVSALT - Define River Upstream Flow Salt Concentrations.....	1632
12.3.200	RIVTRACE - Define River Upstream Flow Tracer Concentrations.....	1633
12.3.201	RPTHMG - Define Well History Match Gradient Reporting (Groups).....	1634
12.3.202	RPTHMW - Define Well History Match Gradient Reporting (Wells).....	1635
12.3.203	RPTONLY - Activate the Report Time Steps Only Option for the SUMMARY File.....	1636
12.3.204	RPTONLYO - Deactivate the Report Time Steps Only Option for the SUMMARY File.....	1636
12.3.205	RPTRST - Define Data to be Written to the RESTART File.....	1636
12.3.206	RPTSCHED - Define SCHEDULE Section Reporting.....	1637
12.3.207	SAVE - Activate Output of a SAVE File for Fast Restarts.....	1645
12.3.208	SCDATAB - Well Connection PI Multipliers versus Scale Deposit.....	1646
12.3.209	SCDETAB - Well Connection Karst Aquifer Properties for Scale Deposit.....	1647
12.3.210	SCDPTAB - Well Connection Scale Deposition Tables.....	1648
12.3.211	SCDPTRAC - Allocate Sea Water Tracer for Scale Deposition.....	1649
12.3.212	SCHEDULE - Define the Start of the SCHEDULE Section of Keywords.....	1650
12.3.213	SEPVALS - Define Separator Oil Formation Volume Factor and GOR.....	1651
12.3.214	SHRATE - Activate and Define the Polymer Shearing Logarithmic Parameters.....	1652
12.3.215	SIMULATE - Activate the Simulation Mode.....	1653
12.3.216	SKIP - Activate Skipping of All Keywords and Input Data.....	1654
12.3.217	SKIP100 - Activate Skipping of Black-Oil Keywords and Input Data.....	1654
12.3.218	SKIP300 - Activate Skipping of "Compositional" Keywords and Input Data.....	1654
12.3.219	SKIPREST - Activate Skipping of Restart Schedule Data.....	1655
12.3.220	SLAVES - Define Slave Reservoir Simulation Parameters.....	1656
12.3.221	SUMTHIN - Define SUMMARY DATA Reporting Time Steps.....	1657
12.3.222	SURFVISC - Surfactant Solution Viscosity versus Concentration.....	1657
12.3.223	SWINGFAC - Define Field Gas Contract Parameters.....	1658
12.3.224	TIGHTEN - Tighten and Relax Numerical Controls.....	1659
12.3.225	TIGHTENP - Tighten and Relax Numerical Controls Individually.....	1660
12.3.226	TIME - Advance Simulation by Cumulative Reporting Time.....	1661
12.3.227	TSTEP - Advance Simulation by Reporting Time.....	1663
12.3.228	TUNING - Numerical Tuning Control.....	1665
12.3.229	TUNINGDP - Numerical Tuning Control for High Throughput Cases.....	1670
12.3.230	TUNINGH - Numerical Tuning Control for History Match Gradient Calculations.....	1671
12.3.231	TUNINGL - Numerical Tuning Control for All LGRs.....	1672
12.3.232	TUNINGS - Numerical Tuning Control for Individual LGRs.....	1676
12.3.233	UDQ - Declare User Define Quantities ("UDQ").....	1681
12.3.234	UDT - Declare User Define Tables ("UDT").....	1687

12.3.235 USECUPL - Load a Reservoir Coupling File.....	1688
12.3.236 VAPPARS - Oil Vaporization Parameters.....	1689
12.3.237 VFPCHK - Define Production Vertical Flow Performance BHP Check.....	1690
12.3.238 VFPINJ - Define Injection Vertical Flow Performance Tables.....	1692
12.3.239 VFPPROD - Define Production Vertical Flow Performance Tables.....	1695
12.3.240 VFPTABL - Define Production Vertical Flow Performance ALQ Interpolation.....	1701
12.3.241 WAITBAL - Wait On Network Balance Before Allowing Further Actions.....	1702
12.3.242 WALKALIN - Define Water Injection Alkaline Concentration.....	1703
12.3.243 WALQCALC - Define Well VFP Surface ALQ Phase Density.....	1704
12.3.244 WAPI - Define Oil Well Injection API Gravity.....	1705
12.3.245 WARN - Activate Warning Messages.....	1706
12.3.246 WBHGLR - Define Well Bottom-Hole GLR Constraint.....	1707
12.3.247 WBOREVOL - Define Effective Wellbore Storage Volume.....	1708
12.3.248 WCALCVAL - Define Gas Well Calorific Value.....	1709
12.3.249 WCONHIST - Define Well Historical Production Rates and Pressures.....	1710
12.3.250 WCONINJ - Well Injection Targets and Constraints.....	1714
12.3.251 WCONINJE - Well Injection Targets and Constraints.....	1715
12.3.252 WCONINJH - Well Historical Observed Injection Rates and Pressures.....	1719
12.3.253 WCONINJP - Define Well Injection Targets and Constraints for Pattern Flood Wells....	1723
12.3.254 WCONPROD - Define Well Production Targets and Constraints.....	1724
12.3.255 WCUTBACK - Define Well Cutback Limits and Parameters.....	1728
12.3.256 WCUTBACT - Define Well Tracer Cutback Limits and Parameters.....	1729
12.3.257 WCYCLE - Define Automatic Well Opening and Closing Cycling Parameters.....	1730
12.3.258 WDFAC - Define Gas Flow Dependent Skin Factor.....	1731
12.3.259 WDFACCOR - Gas Flow Dependent Skin Factor (Correlation).....	1732
12.3.260 WDRILPRI - Add Wells to the Drilling Priority Drilling Queue.....	1733
12.3.261 WDRILRES - Activate Prevention of Multi-Completions in the Same Cell for Queued Wells.....	1734
12.3.262 WDRILTIM - Define Drilling Parameters for Automatic Drilling of New Wells.....	1735
12.3.263 WECON - Well Economic Criteria for Production Wells.....	1736
12.3.264 WECONINJ - Well Economic Criteria for Injection Wells.....	1741
12.3.265 WECONT - Well Economic Tracer Criteria for Production Wells.....	1743
12.3.266 WEFAC - Define Well Efficiency.....	1746
12.3.267 WELCNTL - Modify Well Control and Targets.....	1748
12.3.268 WELDEBUG - Define the Well Debug Data to be Printed to File.....	1750
12.3.269 WELDRAW - Define Maximum Draw Down for Production Wells.....	1751
12.3.270 WELEVNT - Define Well WPWEM Summary Mnemonic Output Value.....	1752
12.3.271 WELMOVEL - Move Global Well Into an LGR.....	1753
12.3.272 WELOPEN - Define Well and Well Connections Flowing Status.....	1754
12.3.273 WELOPENL - Define Well and Well Connections Flowing Status (LGR).....	1757
12.3.274 WELPI - Define Well Productivity and Injectivity Indices.....	1759
12.3.275 WELPRI - Assign Well Priority.....	1761
12.3.276 WELSEGS - Define Multi-Segment Wells and Their Segment Structure.....	1762
12.3.277 WELSOMIN - Define Well Connection Minimum Oil Saturation for Opening.....	1770
12.3.278 WELSPECL - Define Well Specifications for Local Grid Refinements.....	1771
12.3.279 WELSPECS - Define Well Specifications.....	1775
12.3.280 WELTARG - Modify Well Target and Constraint Values.....	1779
12.3.281 WFOAM - Define Well Foam Injection Concentrations.....	1782
12.3.282 WFRICSEG - Convert Friction Well to Multi-Segment Well.....	1783
12.3.283 WFRICSG - Convert Friction Well to Multi-Segment Well (LGR).....	1784
12.3.284 WFRICTN - Define Well as a Friction Well.....	1785
12.3.285 WFRICTNL - Define Well as a Friction Well (LGR).....	1786
12.3.286 WGASPROD - Define Sale Gas Well Production Targets.....	1787
12.3.287 WGORPEN - Define Well GOR Penalty Parameters.....	1788
12.3.288 WGRUPCON - Define Well Guide Rates for Group Control.....	1789
12.3.289 WHEDREFD - Define Well Hydraulic Head Reference Depth.....	1791
12.3.290 WHISTCTL - Define Well Historical Target Phase.....	1792
12.3.291 WHTEMP - Define Well Tubing Head Temperature Parameters.....	1794
12.3.292 WINJMULT - Define Well Pressure Dependent Injectivity Multipliers.....	1795
12.3.293 WINJTEMP - Define Injection Fluid Thermal Properties.....	1798
12.3.294 WLIFT - Define Well Re-Tubing, THP and Lift Switching Workover Operations.....	1800
12.3.295 WLIFTOPT - Define Well Gas Lift Optimization Parameters.....	1801
12.3.296 WLIMTOL - Define Well Constraint Tolerance.....	1806

12.3.297 WLIST - Define Well Lists (Static).....	1807
12.3.298 WLISTARG - Modify Well List Target and Constraint Values (Static).....	1809
12.3.299 WLISTNAM - Define Well Lists (WLISTARG).....	1811
12.3.300 WMICP - Define Water Injection Well's Microbial, Oxygen, And Urea Concentrations.....	1813
12.3.301 WNETCTRL - Define Well Control for Network Control Option.....	1815
12.3.302 WNETDP - Define Well THP to Network Pressure Drop.....	1816
12.3.303 WORKLIM - Define Well Workover Time.....	1817
12.3.304 WORKTHP - Define Well Workover Options for THP Killed Wells.....	1818
12.3.305 WPAVE - Well Block Average Pressure Calculation Parameters for All Wells.....	1819
12.3.306 WPAVEDEP - Define Well Reference Depth for Pressure Calculations.....	1821
12.3.307 WPIMULT - Define Well Connection Multipliers.....	1823
12.3.308 WPIMULTL - Define Well Connection Multipliers (LGR).....	1825
12.3.309 WPITAB - Assign Well Productivity Index versus Water Cut Tables.....	1827
12.3.310 WPLUG - Define Well Plug Back Length.....	1828
12.3.311 WPOLYMER - Define Water Injection Well Polymer and Salt Concentrations.....	1829
12.3.312 WPOLYRED - Define Well Polymer-Water Viscosity Reduction Factor.....	1831
12.3.313 WREGROUP - Automatic Re-Assignment of Wells to Groups.....	1832
12.3.314 WRFT - Activate Well RFT Reporting to the RFT File.....	1833
12.3.315 WRFTPLT - Activate Well RFT and PLT Reporting to the RFT File.....	1835
12.3.316 WSALT - Define Water Injection Well Salt Concentrations.....	1838
12.3.317 WSCLEAN - Well Deposited Scale Adjustment.....	1840
12.3.318 WSCLENL - Well Deposited Scale Adjustment (LGR).....	1841
12.3.319 WSCCTAB - Assign Well Scale Deposition and Scale Damage Tables.....	1842
12.3.320 WSEGAICD - Define Multi-Segment Well Autonomous ICD Connections.....	1843
12.3.321 WSEGDFIN - Define Multi-Segment Well Drift Flux Slip Model Input Data.....	1850
12.3.322 WSEGDFMD - Define Multi-Segment Well Drift Flux Slip Model.....	1851
12.3.323 WSEGDFPA - Define Multi-Segment Well Drift Flux Slip Model Parameters.....	1852
12.3.324 WSEGEXSS - Define Multi-Segment Well Import-Export Segment Volumes.....	1853
12.3.325 WSEGFLIM - Define Multi-Segment Well Artificial Choke Connections.....	1854
12.3.326 WSEGFMOD - Define Multi-Segment Well Model.....	1855
12.3.327 WSEGINIT - Define Multi-Segment Well Initial Conditions.....	1856
12.3.328 WSEGITER - Define Multi-Segment Wells Iteration Parameters.....	1857
12.3.329 WSEGLABY - Define Multi-Segment Well Labyrinth ICD Connections.....	1858
12.3.330 WSEGLINK - Define Multi-Segment Well Looped Flow Paths.....	1859
12.3.331 WSEGMULT - Define Multi-Segment Well Frictional Pressure Loss Multipliers.....	1860
12.3.332 WSEGPORP - Modify Multi-Segment Wells and Their Segment Structure.....	1861
12.3.333 WSEGPULL - Define a Multi-Segment Well Down-Hole Separator Pump.....	1863
12.3.334 WSEGSEP - Define a Multi-Segment Well Down-Hole Separator.....	1864
12.3.335 WSEGSICD - Define Multi-Segment Well Spiral ICD Connections.....	1865
12.3.336 WSEGSOLV Define Multi-Segment Well Iterative Linear Solver Parameters.....	1872
12.3.337 WSEGTABL - Assign Multi-Segment Well VLP Tables to Segments.....	1873
12.3.338 WSEGVALV - Define Multi-Segment Well Sub-Critical Valve.....	1874
12.3.339 WSOLVENT - Define Gas Injection Well Solvent Fraction.....	1879
12.3.340 WSURFACT - Define Water Injection Well Surfactant Concentration.....	1880
12.3.341 WTADD - Add a Constant to a Well Target or Constraint.....	1881
12.3.342 WTEMP - Define An Injection Well's Fluid Temperature.....	1882
12.3.343 WTEMPQ - Output Well Names and Well Lists to the Print File.....	1883
12.3.344 WTEST - Well Testing Criteria for Re-Opening Closed Wells.....	1884
12.3.345 WTHPMAX - Define a Well's Maximum Flowing THP for Shut-In.....	1886
12.3.346 WTMULT - Multiple a Well Target or Constraint by a Constant.....	1887
12.3.347 WTRACER - Define An Injection Well's Tracer Concentration.....	1889
12.3.348 WVFDP - Modify Well BHP Obtained from VFP Tables.....	1891
12.3.349 WVFPEXP - Define Well VFP Interpolation Options.....	1893
12.3.350 WWPAVE - Well Block Average Pressure Calculation Parameters for Individual Wells.....	1894
12.3.351 ZIPP2OFF - Deactivate Automatic Time Step Control.....	1897
12.3.352 ZIPPY2 - Activate Automatic Time Step Control.....	1898

APPENDIX A: KEYWORD INDEX - ALPHABETIC LISTING.....1899

A.....	1901
B.....	1903

C.....	1904
D.....	1906
E.....	1909
F.....	1911
G.....	1913
H.....	1916
I.....	1921
J.....	1927
K.....	1928
L.....	1930
M.....	1932
N.....	1934
O.....	1936
P.....	1937
Q.....	1941
R.....	1942
S.....	1945
T.....	1951
U.....	1953
V.....	1954
W.....	1955
X.....	1960
Y.....	1961
Z.....	1962

APPENDIX B: OPM FLOW RELEASE HISTORY..... 1963

B.1 Release 2021-10.....	1966
B.2 Release 2021-04.....	1974
B.3 Release 2020-10.....	1980
B.4 Release 2020-04.....	1984
B.5 Release 2019-10.....	1987
B.6 Release 2019-04.....	1991
B.7 Release 2018-10.....	1993
B.8 Release 2018-04.....	1994
B.9 Release 2017-10 Update 1.....	1996
B.10 Release 2017-10.....	1996

B.11 Release 2017-04.....	1996
APPENDIX C: OPMRUN - FLOW JOB SCHEDULER.....	1999
C.1 Introduction.....	2003
C.2 OPMRUN Functionality.....	2005
C.2.1 Add Job and Select Run Type.....	2006
C.2.2 Edit Job Data and Parameter File.....	2008
C.2.3 Load Previously Saved Queue.....	2010
C.2.4 Reset Job Queue Parameters.....	2011
C.2.5 Run Jobs in Queue with Various Options.....	2012
C.2.6 Menu Options.....	2015
C.3 OPMRUN Tools.....	2019
C.3.1 OPMRUN Tools: Job File Compression Utility for Saving Space and Archiving.....	2019
C.3.2 OPMRUN Tools: Simulator Input/Keywords.....	2020
C.3.3 OPMRUN Tools: Simulator Input/Production Schedule.....	2031
C.3.4 OPMRUN Tools: Simulator Input/Sensitivities.....	2034
C.3.5 OPMRUN Tools: Simulator Input/Well Specification.....	2040
C.3.6 OPMRUN Tools: ResInsight.....	2043
C.3.7 OPMRUN Tools: Well Trajectory Conversion.....	2043
APPENDIX D: PYTHON INTERFACE TO OPM FLOW.....	2047
D.1 Introduction.....	2050
D.2 Working with the Input Deck.....	2050
D.2.1 The Parser Object.....	2050
D.2.2 Loading an Input Deck.....	2051
D.2.3 Units.....	2051
D.2.4 Accessing the Input Deck.....	2052
D.2.5 Special Parsing.....	2053
D.2.6 Creating EclipseState and Grid Objects.....	2054
D.2.7 Creating a Schedule.....	2055
D.3 Working with the Result Files.....	2055
D.3.1 Loading a Grid File.....	2055
D.3.2 Loading a Summary Case of Results.....	2055
D.3.3 Loading a Restart File.....	2056
APPENDIX E: RUNNING PREVIOUS RELEASES OF OPM FLOW.....	2057
E.1 Running OPM Flow 2021-04.....	2060
E.2 Running OPM Flow 2020-10.....	2073
E.3 Running OPM Flow 2020-04.....	2086
E.4 Running OPM Flow 2019-10.....	2101
E.5 Running OPM Flow 2019-04.....	2114
E.6 Running OPM Flow 2018-10.....	2126
E.7 Running OPM Flow 2018-04.....	2137
APPENDIX F: OPM FLOW OUTPUT FILE FORMATS.....	2143
F.1 Overview.....	2147
F.1.1 File Types.....	2147
F.1.2 File Naming Conventions.....	2151
F.1.3 Unformatted File Format Considerations.....	2153
F.1.4 File Output Format.....	2155
F.2 EGRID - Model Structural Data for Irregular Corner-Point Grids File.....	2159

F.2.1 EGRID Header Keywords.....	2161
F.2.2 EGRID Global Irregular Corner Point Grid Keywords.....	2164
F.2.3 EGRID LGR Irregular Corner Point Grid Keywords.....	2168
F.2.4 EGRID Non-Neighbor Connections for Irregular Corner Point Grid Keywords.....	2171
F.3 EGRID - Model Structural Data for Unstructured Grids File.....	2174
F.4 EGRID - Model Structural Data for Mixed Grids File.....	2174
F.5 GRID - Model Structural Data File.....	2174
F.6 INIT - Model Initialization and Static Data File.....	2175
F.6.1 INIT Index File.....	2175
F.6.2 INIT Data File Specification.....	2176
F.6.3 INIT Data - Static Data Header Keywords.....	2179
F.6.4 INIT Data - Static Grid Array Data Keywords.....	2184
F.6.5 INIT Data - LGR Static Data Header Keywords.....	2187
F.6.6 INIT Data - LGR Grid Array Data Keywords.....	2190
F.6.7 INIT Data - Static Tabular Data Header Keyword.....	2192
F.6.8 INIT Data - Static Tabular and Constant Data Array Keywords.....	2195
F.7 RESTART Files - Dynamic Data (Solution, Groups, Wells, Connections, Aquifers etc.).....	2197
F.7.1 RESTART Index Files.....	2198
F.7.2 RESTART Data File Specification.....	2199
F.7.3 RESTART Data - Header Keywords.....	2201
F.7.4 RESTART Data - Group, Well and Connection Data Keywords.....	2212
F.7.5 RESTART Data - UDAQ and ACTIONX Keywords.....	2231
F.7.6 RESTART Data - Aquifer Data Keywords.....	2237
F.7.7 RESTART Data - Hidden Keyword.....	2242
F.7.8 RESTART Data - Solution Data keyword.....	2243
F.7.9 RESTART Data - LGR Grid Header Keywords.....	2251
F.7.10 RESTART Data - LGR Solution Data Keywords.....	2253
F.8 RFT Files - Pressure, Saturation and Production Log Data.....	2256
F.8.1 RFT Data File Specification.....	2256
F.8.2 RFT Data File - Time and Date keywords.....	2257
F.8.3 RFT Data File - Well and Connection Data Keyword.....	2258
F.8.4 RFT Data File - RFT Solution Data Keyword.....	2260
F.8.5 RFT Data File - Solution PLT Data Keywords.....	2262
F.8.6 RFT Data File - Solution Multi-Segment Well Keywords.....	2262
F.8.7 RFT Data File - Solution River Keywords.....	2262
F.9 SUMMARY Files - Time Based Vector Data.....	2263
F.9.1 Enhanced SUMMARY Data File Keywords.....	2263
F.9.2 SUMMARY Index File keywords.....	2266
F.9.3 SUMMARY Data File Keywords.....	2271
F.10 SAVE Files - Initialization and Solution Data.....	2273

INDEX OF TABLES

Table 2.1: OPM Flow 2021-10 Command Line Options.....	75
Table 3.1: Example Keyword Table Section.....	87
Table 3.2: ADD Keyword Table Section.....	87
Table 3.3: PORO Keyword Description.....	92
Table 3.4: OPM Flow Input Deck Sections.....	93
Table 4.1: Alphabetic List of <i>GLOBAL Section</i> Keywords.....	97
Table 4.2: EXTRAPMS Keyword Description.....	105
Table 4.3: FORMFEED Keyword Description.....	106
Table 4.4: INCLUDE Keyword Description.....	107
Table 4.5: MESSAGES Keyword Description.....	110
Table 5.1: Minimum Set of RUNSPEC Keywords Required by OPM Flow.....	119
Table 5.2: Alphabetic List of RUNSPEC Keywords.....	126
Table 5.3: ACTDIMS Keyword Description.....	132
Table 5.4: ACTPARAM Keyword Description.....	133
Table 5.5: AQUDIMS Keyword Description.....	138
Table 5.6: BRINE Keyword Description.....	144
Table 5.7: DIMENS Keyword Description.....	155
Table 5.8: ENDSIZE Keyword Description.....	165
Table 5.9: EQLDIMS Keyword Description.....	167
Table 5.10: EQLOPTS Keyword Description.....	168
Table 5.11: FAULTDIM Keyword Description.....	170
Table 5.12: FMTIN Keyword Description.....	174
Table 5.13: FMOUT Keyword Description.....	176
Table 5.14: FRICTION Keyword Description.....	179
Table 5.15: GRAVDRM Keyword Description.....	187
Table 5.16: GRIDOPTS Keyword Description.....	188
Table 5.17: LGR Keyword Description.....	197
Table 5.18: MISCIBLE Keyword Description.....	209
Table 5.19: MSGFILE Keyword Description.....	211
Table 5.20: MULTIN Keyword Description.....	213
Table 5.21: MULTOUT Keyword Description.....	215
Table 5.22: NETWORK Keyword Description.....	218
Table 5.23: NMATRIX Keyword Description.....	220
Table 5.24: NNEWTF Keyword Description.....	221
Table 5.25: NRSOUT Keyword Description.....	232
Table 5.26: NSTACK Keyword Description.....	233
Table 5.27: NUMRES Keyword Description.....	234
Table 5.28: NUPCOL Keyword Description.....	235
Table 5.29: OPTIONS Keyword Description.....	237
Table 5.30: PARALLEL Keyword Description.....	238
Table 5.31: PATHS Keyword Description.....	240
Table 5.32: PIMTDIMS Keyword Description.....	243
Table 5.33: REGDIMS Keyword Description.....	248
Table 5.34: ROCKCOMP Keyword Description.....	252
Table 5.35: SATOPTS Keyword Description.....	261
Table 5.36: SATOPTS Relative Permeability Function Allocation Keywords.....	261
Table 5.37: SCDPDIMS Keyword Description.....	264
Table 5.38: SMRYDIMS Keyword Description.....	266
Table 5.39: START Keyword Description.....	270
Table 5.40: TABDIMS Keyword Description.....	274
Table 5.41: Reservoir Temperature Keywords.....	276
Table 5.42: OPM Flow's THERMAL Option Associated Keywords.....	278
Table 5.43: TITLE Keyword Description.....	280
Table 5.44: TRACERS Keyword Description.....	281
Table 5.45: TRPLPORO Keyword Description.....	283
Table 5.46: UDADIMS Keyword Description.....	284
Table 5.47: UDQDIMS Keyword Description.....	285
Table 5.48: UDQPARAM Keyword Description.....	287
Table 5.49: UDTDIMS Keyword Description.....	289
Table 5.50: UNIFIN Keyword Description.....	292
Table 5.51: UNIFOUT Keyword Description.....	294

Table 5.52: VFPIIDIMS Keyword Description.....	300
Table 5.53: VFPPDIMS Keyword Description.....	301
Table 5.54: WELLDIMS Keyword Description.....	307
Table 5.55: WESEGDIMS Keyword Description.....	309
Table 6.1: Key Static Grid Properties.....	325
Table 6.2: ACTNUM Keyword Description.....	328
Table 6.3: ADD Keyword Description.....	329
Table 6.4: ADD Keyword Applicable Arrays by Section.....	330
Table 6.5: ADDREG Keyword Description.....	331
Table 6.6: ADDREG Keyword Applicable Arrays by Section.....	332
Table 6.7: AQUANCON Keyword Description.....	336
Table 6.8: AQUCON Keyword Description.....	338
Table 6.9: AQUCT Keyword Description.....	341
Table 6.10: AQUNUM Keyword Description.....	346
Table 6.11: BOX Keyword Description.....	350
Table 6.12: CARFIN Keyword Description.....	355
Table 6.13: COALNUM Keyword Description.....	356
Table 6.14: COORD Keyword Description.....	360
Table 6.15: COORDSYS Keyword Description.....	362
Table 6.16: COPY Keyword Description.....	363
Table 6.17: COPY Keyword Applicable Arrays by Section.....	364
Table 6.18: COPYBOX Keyword Description.....	366
Table 6.19: COPYBOX Keyword Applicable Arrays by Section.....	366
Table 6.20: COPYREG Keyword Description.....	368
Table 6.21: COPYREG Keyword Applicable Arrays by Section.....	369
Table 6.22: DR Keyword Description.....	385
Table 6.23: DRV Keyword Description.....	387
Table 6.24: DTHETA Keyword Description.....	388
Table 6.25: DTHETA Keyword Description.....	389
Table 6.26: DX Keyword Description.....	391
Table 6.27: DXV Keyword Description.....	392
Table 6.28: DY Keyword Description.....	393
Table 6.29: DYV Keyword Description.....	394
Table 6.30: DZ Keyword Description.....	395
Table 6.31: DZNET Keyword Description.....	399
Table 6.32: DZV Keyword Description.....	400
Table 6.33: EQUALREG Keyword Description.....	406
Table 6.34: EQUALREG Keyword Applicable Arrays by Section.....	407
Table 6.35: EQUALS Keyword Description.....	409
Table 6.36: EQUALS Keyword Applicable Arrays by Section.....	410
Table 6.37: FAULTS Keyword Description.....	416
Table 6.38: FILEUNIT Keyword Description.....	418
Table 6.39: FLUXNUM Keyword Description.....	419
Table 6.40: GDFILE Keyword Description.....	423
Table 6.41: GRIDFILE Keyword Description.....	427
Table 6.42: GRIDUNIT Keyword Description.....	428
Table 6.43: HEATCR Keyword Description.....	430
Table 6.44: HEATCRT Keyword Description.....	431
Table 6.45: HMMLT Keyword List.....	435
Table 6.46: HRFIN Keyword Description.....	440
Table 6.47: HXFIN Keyword Description.....	441
Table 6.48: HYFIN Keyword Description.....	442
Table 6.49: HZFIN Keyword Description.....	443
Table 6.50: IMPORT Keyword Description.....	445
Table 6.51: INRAD Keyword Description.....	448
Table 6.52: ISOLNUM Keyword Description.....	450
Table 6.53: JFUNC Keyword Description.....	452
Table 6.54: JFUNCR Keyword Description.....	455
Table 6.55: LX Keyword Description.....	460
Table 6.56: LY Keyword Description.....	462
Table 6.57: LZ Keyword Description.....	465
Table 6.58: MAPAXES Keyword Description.....	468
Table 6.59: MAPUNITS Keyword Description.....	469

Table 6.60: MAXVALUE Keyword Description.....	470
Table 6.61: MAXVALUE Keyword Applicable Arrays by Section.....	471
Table 6.62: MINPORV Keyword Description.....	474
Table 6.63: MINPV Keyword Description.....	475
Table 6.64: MINPVV Keyword Description.....	476
Table 6.65: MINVALUE Keyword Description.....	477
Table 6.66: MINVALUE Keyword Applicable Arrays by Section.....	478
Table 6.67: MULTFLT Keyword Description.....	481
Table 6.68: MULTIPLY Keyword Description.....	482
Table 6.69: MULTIPLY Keyword Applicable Arrays by Section.....	483
Table 6.70: MULTIREG Keyword Description.....	484
Table 6.71: MULTIREG Keyword Applicable Arrays by Section.....	485
Table 6.72: MULTNUM Keyword Description.....	486
Table 6.73: MULTPV Keyword Description.....	487
Table 6.74: MULTR Keyword Description.....	488
Table 6.75: MULTR- Keyword Description.....	489
Table 6.76: MULTREGD Keyword Description.....	490
Table 6.77: MULTREGH Keyword Description.....	492
Table 6.78: MULTREGP Keyword Description.....	494
Table 6.79: MULTREGT Keyword Description.....	495
Table 6.80: MULTTHT Keyword Description.....	497
Table 6.81: MULTTHT- Keyword Description.....	498
Table 6.82: MULTX Keyword Description.....	499
Table 6.83: MULTX- Keyword Description.....	500
Table 6.84: MULTY Keyword Description.....	501
Table 6.85: MULTY- Keyword Description.....	502
Table 6.86: MULTZ Keyword Description.....	503
Table 6.87: MULTZ- Keyword Description.....	504
Table 6.88: NINENUM Keyword Description.....	506
Table 6.89: NNC Keyword Description.....	509
Table 6.90: NTG Keyword Description.....	514
Table 6.91: NXFIN Keyword Description.....	515
Table 6.92: NYFIN Keyword Description.....	516
Table 6.93: NZFIN Keyword Description.....	517
Table 6.94: OPERATE Keyword Description.....	521
Table 6.95: OPERATE Keyword Applicable Arrays by Section.....	521
Table 6.96: OPERATE Keyword Description.....	524
Table 6.97: OPERATE Keyword Applicable Arrays by Section.....	524
Table 6.98: OPERNUM Keyword Description.....	527
Table 6.99: OUTRAD Keyword Description.....	528
Table 6.100: OUTRAD Radial Grid Example.....	529
Table 6.101: PEBI Keyword Description.....	531
Table 6.102: PERMJFUN Keyword Description.....	533
Table 6.103: PERMR Keyword Description.....	534
Table 6.104: PERMTHT Keyword Description.....	535
Table 6.105: PERMX Keyword Description.....	536
Table 6.106: PERMY Keyword Description.....	537
Table 6.107: PERMZ Keyword Description.....	538
Table 6.108: PINCH Keyword Description.....	542
Table 6.109: PINCHNUM Keyword Description.....	543
Table 6.110: PINCHREG Keyword Description.....	546
Table 6.111: PINCHXY Keyword Description.....	547
Table 6.112: PORO Keyword Description.....	548
Table 6.113: PYINPUT Keyword Description.....	551
Table 6.114: RESVNUM Keyword Description.....	557
Table 6.115: NTG Keyword Description.....	559
Table 6.116: RPTGRID Keyword Description.....	560
Table 6.117: RPTGRIDL Keyword Description.....	562
Table 6.118: SMULTX Keyword Description.....	571
Table 6.119: SMULTY Keyword Description.....	572
Table 6.120: SMULTX Keyword Description.....	573
Table 6.121: SPECGRID Keyword Description.....	576
Table 6.122: THCGAS Keyword Description.....	577

Table 6.123: THCOIL Keyword Description.....	578
Table 6.124: THCONR Keyword Description.....	579
Table 6.125: THCROCK Keyword Description.....	580
Table 6.126: THCROCK Keyword Description.....	582
Table 6.127: THCWATER Keyword Description.....	583
Table 6.128: THPRESFT Keyword Description.....	584
Table 6.129: TOPS Keyword Description.....	586
Table 6.130: TRANGL Keyword Description.....	588
Table 6.131: ZCORN Keyword Description.....	595
Table 7.1: EDIT Section Arrays Available for Modification.....	598
Table 7.2: Depth Keyword Description.....	602
Table 7.3: EDITNNC Keyword Description.....	611
Table 7.4: EDITNNCR Keyword Description.....	614
Table 7.5: HMMULT Keyword List.....	618
Table 7.6: PORV Keyword Description.....	624
Table 7.7: TRANR Keyword Description.....	626
Table 7.8: TRANR Keyword Description.....	627
Table 7.9: TRANX Keyword Description.....	628
Table 7.10: TRANY Keyword Description.....	629
Table 7.11: TRANZ Keyword Description.....	630
Table 8.1: Fluid Property Keywords versus Oil, Gas and Water Fluid Type.....	635
Table 8.2: Fluid Property Keywords versus CO ₂ (Storage), Foam, Polymer and Solvent Fluid Types.....	636
Table 8.3: Oil-Water Relative Permeability End-Point Data Definitions.....	640
Table 8.4: Gas-Oil Relative Permeability End-Point Data Definitions.....	641
Table 8.5: Saturation Table Formats and Phases.....	641
Table 8.6: ADSALNOD Keyword Description.....	644
Table 8.7: AQUATAB Keyword Description.....	654
Table 8.8: Carter-Tracy Aquifer Influence Functions ($R_D = 1.5, 2.0, 2.5$ and 3.0).....	655
Table 8.9: Carter-Tracy Aquifer Influence Functions ($R_D = 3.5, 4.0, 4.5$ and 5.0).....	656
Table 8.10: Carter-Tracy Aquifer Influence Functions ($R_D = 6.0, 7.0, 8.0$ and 9.0).....	657
Table 8.11: Carter-Tracy Aquifer Influence Functions ($R_D = 10$ and Finite Linear).....	658
Table 8.12: Carter-Tracy Infinite Radial Aquifer Influence Function (Default).....	659
Table 8.13: BDENSITY Keyword Description.....	661
Table 8.14: DENSITY Keyword Description.....	669
Table 8.15: DIFFC Keyword Description.....	674
Table 8.16: EHYSTR Keyword Description.....	684
Table 8.17: EHYSTRR Keyword Description.....	685
Table 8.18: FOAMADS Keyword Description.....	699
Table 8.19: FOAMFSC Keyword Description.....	706
Table 8.20: FOAMMOB Keyword Description.....	711
Table 8.21: FOAMOPTS Keyword Description.....	715
Table 8.22: FOAMROCK Keyword Description.....	716
Table 8.23: GASDENT Keyword Description.....	719
Table 8.24: GASVISCT Keyword Description.....	721
Table 8.25: GRAVCONS Keyword Description.....	725
Table 8.26: GRAVITY Keyword Description.....	726
Table 8.27: HA Keyword List.....	728
Table 8.28: HM Keyword List.....	731
Table 8.29: IKRG Keyword Description.....	754
Table 8.30: Critical Displacement Relationships.....	755
Table 8.31: IKRGR Keyword Description.....	756
Table 8.32: Critical Displacement Relationships.....	756
Table 8.33: IKRO Keyword Description.....	758
Table 8.34: Critical Displacement Relationships.....	759
Table 8.35: IKRORG Keyword Description.....	760
Table 8.36: Critical Displacement Relationships.....	760
Table 8.37: IKRORW Keyword Description.....	762
Table 8.38: Critical Displacement Relationships.....	762
Table 8.39: IKRW Keyword Description.....	764
Table 8.40: Critical Displacement Relationships.....	765
Table 8.41: IKRWR Keyword Description.....	766
Table 8.42: Critical Displacement Relationships.....	766
Table 8.43: IPCG Keyword Description.....	777

Table 8.44: IPCW Keyword Description.....	778
Table 8.45: ISGCR Keyword Description.....	779
Table 8.46: ISGL Keyword Description.....	780
Table 8.47: ISGLPC Keyword Description.....	781
Table 8.48: ISGU Keyword Description.....	783
Table 8.49: ISOGCR Keyword Description.....	784
Table 8.50: ISOWCR Keyword Description.....	786
Table 8.51: ISWCR Keyword Description.....	788
Table 8.52: ISWL Keyword Description.....	789
Table 8.53: ISWLPC Keyword Description.....	790
Table 8.54: ISWU Keyword Description.....	792
Table 8.55: KRG Keyword Description.....	793
Table 8.56: Critical Displacement Relationships.....	794
Table 8.57: KRGR Keyword Description.....	796
Table 8.58: Critical Displacement Relationships.....	796
Table 8.59: KRO Keyword Description.....	798
Table 8.60: Critical Displacement Relationships.....	799
Table 8.61: KRORG Keyword Description.....	801
Table 8.62: Critical Displacement Relationships.....	801
Table 8.63: KRORW Keyword Description.....	803
Table 8.64: Critical Displacement Relationships.....	803
Table 8.65: KRW Keyword Description.....	805
Table 8.66: Critical Displacement Relationships.....	806
Table 8.67: KRWR Keyword Description.....	807
Table 8.68: Critical Displacement Relationships.....	807
Table 8.69: MICPPARA Keyword Description.....	841
Table 8.70: MISC Keyword Description.....	843
Table 8.71: MSFN Keyword Description.....	847
Table 8.72: OILDENT Keyword Description.....	850
Table 8.73: OILVISCT Keyword Description.....	852
Table 8.74: OVERBURD Keyword Description.....	855
Table 8.75: PCG Keyword Description.....	857
Table 8.76: PCW Keyword Description.....	860
Table 8.77: PERMFACT Keyword Description.....	865
Table 8.78: PLMIXPAR Keyword Description.....	867
Table 8.79: PLYADS Keyword Description.....	868
Table 8.80: PLYADSS Keyword Description.....	870
Table 8.81: PLYATEMP Keyword Description.....	872
Table 8.82: PLYDHFLF Keyword Description.....	875
Table 8.83: PLYMAX Keyword Description.....	878
Table 8.84: PLYROCK Keyword Description.....	880
Table 8.85: PLYSHEAR Keyword Description.....	882
Table 8.86: PLYSHLOG Keyword Description.....	884
Table 8.87: PLYVISC Keyword Description.....	888
Table 8.88: PMISC Keyword Description.....	894
Table 8.89: PPCWMAX Keyword Description.....	895
Table 8.90: PVCDO Keyword Description.....	898
Table 8.91: PVCO Keyword Description.....	901
Table 8.92: PVDG Keyword Description.....	902
Table 8.93: PVDO Keyword Description.....	904
Table 8.94: PVDS Keyword Description.....	906
Table 8.95: PVTG Keyword Description.....	909
Table 8.96: PVTGW Keyword Description.....	911
Table 8.97: PVTGW Keyword Description.....	914
Table 8.98: PVTO Keyword Description.....	917
Table 8.99: PVTSQL Keyword Description.....	921
Table 8.100: PVTW Keyword Description.....	923
Table 8.101: PVTWSALT Keyword Description.....	926
Table 8.102: PVZG Keyword Description.....	929
Table 8.103: ROCK Keyword Description.....	936
Table 8.104: ROCK2D Keyword Description.....	938
Table 8.105: ROCK2DTR Keyword Description.....	940
Table 8.106: ROCKOPTS Keyword Description.....	943

Table 8.107: ROCKTAB Keyword Description.....	946
Table 8.108: ROCKTABH Keyword Description.....	949
Table 8.109: ROCKWNOD Keyword Description.....	954
Table 8.110: RPTPROPS Keyword Description.....	956
Table 8.111: RSCONST Keyword Description.....	957
Table 8.112: RSCONSTT Keyword Description.....	958
Table 8.113: RTEMP Keyword Description.....	960
Table 8.114: RTEMPA Keyword Description.....	961
Table 8.115: RVCONST Keyword Description.....	962
Table 8.116: RVCONSTT Keyword Description.....	963
Table 8.117: RWGSALT Keyword Description.....	965
Table 8.118: SALINITY Keyword Description.....	967
Table 8.119: SALTNODE Keyword Description.....	968
Table 8.120: SALTSQL Keyword Description.....	969
Table 8.121: SCALECRS Keyword Description.....	970
Table 8.122: End-Point Arrays Used in the End-Point Scaling Options.....	970
Table 8.123: SDENSITY Keyword Description.....	973
Table 8.124: SGCR Keyword Description.....	974
Table 8.125: SGCWMIS Keyword Description.....	975
Table 8.126: SGFN Keyword Description.....	977
Table 8.127: SGL Keyword Description.....	978
Table 8.128: SGLPC Keyword Description.....	979
Table 8.129: SGOF Keyword Description.....	981
Table 8.130: SGU Keyword Description.....	983
Table 8.131: SGWFN Keyword Description.....	984
Table 8.132: SKRO Keyword Description.....	988
Table 8.133: SKRORG Keyword Description.....	989
Table 8.134: SKRORW Keyword Description.....	990
Table 8.135: SKRW Keyword Description.....	991
Table 8.136: SKRWR Keyword Description.....	992
Table 8.137: SLGOF Keyword Description.....	993
Table 8.138: SOGCR Keyword Description.....	995
Table 8.139: SOF2 Keyword Description.....	996
Table 8.140: SOF3 Keyword Description.....	998
Table 8.141: SOGCR Keyword Description.....	1001
Table 8.142: SORWMIS Keyword Description.....	1004
Table 8.143: SOWCR Keyword Description.....	1005
Table 8.144: SPECHEAT Keyword Description.....	1006
Table 8.145: SPECROCK Keyword Description.....	1008
Table 8.146: SSFN Keyword Description.....	1010
Table 8.147: SSGCR Keyword Description.....	1012
Table 8.148: SSGL Keyword Description.....	1013
Table 8.149: SSOGCR Keyword Description.....	1014
Table 8.150: SSOWCR Keyword Description.....	1015
Table 8.151: SSWCR Keyword Description.....	1016
Table 8.152: SSWL Keyword Description.....	1017
Table 8.153: SSWU Keyword Description.....	1018
Table 8.154: STONE1EX Keyword Description.....	1022
Table 8.155: SURFADS Keyword Description.....	1027
Table 8.156: SURFROCK Keyword Description.....	1031
Table 8.157: SURFVISC Keyword Description.....	1034
Table 8.158: SWATINIT Keyword Description.....	1036
Table 8.159: SWCR Keyword Description.....	1037
Table 8.160: SWFN Keyword Description.....	1039
Table 8.161: SWL Keyword Description.....	1041
Table 8.162: SWLPC Keyword Description.....	1042
Table 8.163: SWOF Keyword Description.....	1044
Table 8.164: SWU Keyword Description.....	1046
Table 8.165: TLMIXPAR Keyword Description.....	1049
Table 8.166: TOLCRIT Keyword Description.....	1050
Table 8.167: TRACER Keyword Description.....	1053
Table 8.168: TZONE Keyword Description.....	1065
Table 8.169: VISCREF Keyword Description.....	1073

Table 8.170: WATDENT Keyword Description.....	1076
Table 8.171: WATVISCT Keyword Description.....	1077
Table 9.1: REGION Section Allocation Array Summary.....	1082
Table 9.2: ENDNUM Keyword Description.....	1087
Table 9.3: EQLNUM Keyword Description.....	1089
Table 9.4: FIP Keyword Description.....	1091
Table 9.5: FIPNUM Keyword Description.....	1094
Table 9.6: HM Region Grid Gradient Parameter Keyword List.....	1099
Table 9.7: HM Region End-Point Gradient Parameter Keyword List.....	1100
Table 9.8: HWSNUM Keyword Description.....	1102
Table 9.9: IMBNUM Keyword Description.....	1103
Table 9.10: KRNUM Keyword Description.....	1106
Table 9.11: LSLTWNUM Keyword Description.....	1108
Table 9.12: LSNUM Keyword Description.....	1109
Table 9.13: LWSLTNUM Keyword Description.....	1110
Table 9.14: LWSNUM Keyword Description.....	1111
Table 9.15: MISNUM Keyword Description.....	1113
Table 9.16: PLMIXNUM Keyword Description.....	1117
Table 9.17: PVTNUM Keyword Description.....	1118
Table 9.18: RESIDNUM Keyword Description.....	1122
Table 9.19: ROCKNUM Keyword Description.....	1123
Table 9.20: RPTREGS Keyword Description.....	1124
Table 9.21: SATNUM Keyword Description.....	1125
Table 9.22: SURFNUM Keyword Description.....	1127
Table 9.23: SURFWNUM Keyword Description.....	1128
Table 9.24: TNUM Keyword Name Format.....	1129
Table 9.25: TNUM Keyword Data Description.....	1129
Table 9.26: TRKPF Keyword Name Format.....	1131
Table 9.27: TRKPF Keyword Data Description.....	1131
Table 9.28: WH2NUM Keyword Description.....	1134
Table 9.29: WH3NUM Keyword Description.....	1135
Table 10.1: Minimum Set of SOLUTION Equilibrium Keywords Required by OPM Flow.....	1142
Table 10.2: Minimum Set of SOLUTION Enumeration Keywords Required by OPM Flow.....	1144
Table 10.3: SOLUTION <i>Restart</i> Initialization Keywords Required by OPM Flow.....	1145
Table 10.4: Alphabetic List of SOLUTION Keywords.....	1151
Table 10.5: APIVD Keyword Description.....	1155
Table 10.6: AQANCONL Keyword Description.....	1158
Table 10.7: AQUFET Keyword Description.....	1167
Table 10.8: AQUFETP Keyword Description.....	1170
Table 10.9: DATUM Keyword Description.....	1174
Table 10.10: DATUMR Keyword Description.....	1175
Table 10.11: DATUMR Keyword Description.....	1176
Table 10.12: EQUIL Keyword Description.....	1184
Table 10.13: GASCONC Keyword Description.....	1187
Table 10.14: GASSATC Keyword Description.....	1188
Table 10.15: GCVD Keyword Description.....	1189
Table 10.16: OILAPI Keyword Description.....	1205
Table 10.17: PBUB Keyword Description.....	1208
Table 10.18: PBVD Keyword Description.....	1209
Table 10.19: PDEW Keyword Description.....	1210
Table 10.20: PDVD Keyword Description.....	1211
Table 10.21: PRESSURE Keyword Description.....	1212
Table 10.22: PRVD Keyword Description.....	1213
Table 10.23: RESTART Keyword Description.....	1219
Table 10.24: RPTRST Keyword Description.....	1223
Table 10.25: Data Sets Automatically Written to the RESTART File.....	1224
Table 10.26: RPTSOL Keyword Description.....	1225
Table 10.27: RS Keyword Description.....	1226
Table 10.28: RSVD Keyword Description.....	1227
Table 10.29: RTEMPVD Keyword Description.....	1229
Table 10.30: RV Keyword Description.....	1231
Table 10.31: RVVD Keyword Description.....	1232
Table 10.32: SALT Keyword Description.....	1233

Table 10.33: SALTPVD Keyword Description.....	1234
Table 10.34: SALTREST Keyword Description.....	1236
Table 10.35: SALTVD Keyword Description.....	1237
Table 10.36: SBIOF Keyword Description.....	1240
Table 10.37: SCALC Keyword Description.....	1241
Table 10.38: SCVD Keyword Description.....	1242
Table 10.39: SFOAM Keyword Description.....	1244
Table 10.40: SGAS Keyword Description.....	1245
Table 10.41: SMICR Keyword Description.....	1247
Table 10.42: SOIL Keyword Description.....	1248
Table 10.43: SOLVCONC Keyword Description.....	1250
Table 10.44: SOLVFRAC Keyword Description.....	1251
Table 10.45: SOXYG Keyword Description.....	1252
Table 10.46: SPOLY Keyword Description.....	1253
Table 10.47: SSOL Keyword Description.....	1254
Table 10.48: SUREA Keyword Description.....	1255
Table 10.49: SURF Keyword Description.....	1256
Table 10.50: SWAT Keyword Description.....	1257
Table 10.51: TBLK Keyword Description.....	1258
Table 10.52: TEMPI Keyword Description.....	1260
Table 10.53: TEMPVD Keyword Description.....	1261
Table 10.54: THPRES Keyword Description.....	1263
Table 10.55: TVDP Keyword Name Format.....	1265
Table 10.56: TVDP Keyword Description.....	1266
Table 10.57: VAPPARS Keyword Description.....	1268
Table 11.1: OPM Flow Summary Output File Summary.....	1274
Table 11.2: RUNSPEC Input and Output File Format Keywords.....	1275
Table 11.3: OPM Flow File Naming Conventions.....	1276
Table 11.4: Summary Variable Mnemonic Syntax.....	1277
Table 11.5: Summary Variable Mnemonics Examples.....	1278
Table 11.6: Summary Variable Mnemonics Examples Not Following the General Syntax.....	1278
Table 11.7: Summary Variable Format.....	1281
Table 11.8: Aquifer Summary Variables.....	1282
Table 11.9: Field, Group, Well, Well Connection and Completion Summary Variables.....	1289
Table 11.10: Field and Group Control Mode Reporting.....	1290
Table 11.11: Well Control Mode Reporting.....	1291
Table 11.12: Block, Field and Region Summary Variables.....	1296
Table 11.13: Field and Region Summary Recovery Variables.....	1297
Table 11.14: API and Tracer Tracking Summary Variables.....	1300
Table 11.15: Brine and Multi-Component Brine Model Summary Variables.....	1304
Table 11.16: Foam Model Tracers Summary Variables.....	1306
Table 11.17: <i>Gas Lift Optimization</i> Model Summary Variables.....	1308
Table 11.18: Multi-Segment Wells Summary Variables.....	1312
Table 11.19: <i>Network</i> Model Summary Variables.....	1313
Table 11.20: OPM Flow Simulator Performance Summary Variables.....	1318
Table 11.21: Polymer Model Summary Variables.....	1321
Table 11.22: Solvent Model Summary Variables.....	1323
Table 11.23: Thermal Model Summary Variables.....	1325
Table 11.24: User Define Quantities Summary Variables.....	1326
Table 11.25: Standard Production, Injection, and Pressure Summary Variables.....	1331
Table 11.26: Standard Aquifer Summary Variables.....	1331
Table 11.27: FMWSET - Standard Field and Group Well Status Summary Variables.....	1339
Table 11.28: GMWSET - Standard Field and Group Well Status Summary Variables.....	1342
Table 11.29: Simulator Performance Summary Variables (Cumulative Messages).....	1346
Table 11.30: Simulator Performance Summary Variables (Numerical Performance).....	1351
Table 11.31: RPTSMRY Keyword Description.....	1355
Table 11.32: SUMTHIN Keyword Description.....	1359
Table 12.1: Major Well Specification Keywords.....	1365
Table 12.2: Major Group Specification Keywords.....	1366
Table 12.3: Schedule Advancement, Control and Reporting Keywords.....	1367
Table 12.4: ACTIONX Keyword Description.....	1390
Table 12.5: ACTIONX Variable Definitions.....	1394
Table 12.6: ACTIONX Schedule Section Keyword Status.....	1395

Table 12.7: BRANPROP Keyword Description.....	1404
Table 12.8: COMPDAT Keyword Description.....	1412
Table 12.9: COMPDATL Keyword Description.....	1416
Table 12.10: COMPIMB Keyword Description.....	1421
Table 12.11: COMPLUPL Keyword Description.....	1424
Table 12.12: COMPLUMP Keyword Description.....	1427
Table 12.13: COMPORD Keyword Description.....	1429
Table 12.14: COMPSEGL Keyword Description.....	1436
Table 12.15: COMPSEGS Keyword Description.....	1438
Table 12.16: DATES Keyword Description.....	1445
Table 12.17: DRSDT Keyword Description.....	1455
Table 12.18: DRSDTCON Keyword Description.....	1457
Table 12.19: DRSDTR Keyword Description.....	1461
Table 12.20: DRVDT Keyword Description.....	1463
Table 12.21: DRVDTR Keyword Description.....	1464
Table 12.22: EXIT Keyword Description.....	1472
Table 12.23: GCALECON Keyword Description.....	1486
Table 12.24: GCONCAL Keyword Description.....	1488
Table 12.25: GCONENG Keyword Description.....	1490
Table 12.26: GCONINJE Keyword Description.....	1493
Table 12.27: GCONPRI Keyword Description.....	1496
Table 12.28: GCONPROD Keyword Description.....	1502
Table 12.29: GCONSALE Keyword Description.....	1505
Table 12.30: GCONSUMP Keyword Description.....	1508
Table 12.31: GCONTOL Keyword Description.....	1510
Table 12.32: GDCQECON Keyword Description.....	1514
Table 12.33: GECON Keyword Description.....	1517
Table 12.34: GECONT Keyword Description.....	1520
Table 12.35: GEFAC Keyword Description.....	1522
Table 12.36: GLIFTLIM Keyword Description.....	1524
Table 12.37: GLIFTOPT Keyword Description.....	1526
Table 12.38: GPMAINT Keyword Description.....	1533
Table 12.39: GRUPNET Keyword Description.....	1543
Table 12.40: GRUPTARG Keyword Description.....	1548
Table 12.41: GRUPTREE Keyword Description.....	1549
Table 12.42: GSATINJE Keyword Description.....	1552
Table 12.43: GSATPROD Keyword Description.....	1555
Table 12.44: GUIDERAT Keyword Description.....	1565
Table 12.45: LGRFREE Keyword Description.....	1572
Table 12.46: LGRLOCK Keyword Description.....	1573
Table 12.47: LGROFF Keyword Description.....	1574
Table 12.48: LGRON Keyword Description.....	1575
Table 12.49: LIFTOPT Keyword Description.....	1577
Table 12.50: NETBALAN Keyword Description.....	1593
Table 12.51: NEXT Keyword Description.....	1595
Table 12.52: NEXTSTEP Keyword Description.....	1596
Table 12.53: NEXTSTPL Keyword Description.....	1599
Table 12.54: NODEPROP Keyword Description.....	1601
Table 12.55: PIMULTAB Keyword Description.....	1608
Table 12.56: PRIORITY Keyword Description.....	1615
Table 12.57: PYACTION Keyword Description.....	1618
Table 12.58: PYACTION Module Script Definition.....	1619
Table 12.59: RPTSCHEM Keyword Description.....	1638
Table 12.60: SCDPTRAC Keyword Description.....	1649
Table 12.61: TIME Keyword Description.....	1661
Table 12.62: TSTEP Keyword Description.....	1663
Table 12.63: TUNING Keyword Description.....	1668
Table 12.64: TUNINGDP Keyword Description.....	1670
Table 12.65: TUNINGH Keyword Description.....	1671
Table 12.66: TUNINGL Keyword Description.....	1675
Table 12.67: TUNINGS Keyword Description.....	1679
Table 12.68: UDQ Keyword Description.....	1682
Table 12.69: ACTIONX User Defined <i>Argument</i> Supported Keywords.....	1684

Table 12.70: VFPCHK Keyword Description.....	1690
Table 12.71: VFPINJ Keyword Description.....	1693
Table 12.72: VFPPROD Keyword Description.....	1698
Table 12.73: VFPTABL Keyword Description.....	1701
Table 12.74: WCONHIST Keyword Description.....	1712
Table 12.75: WCONINJE Keyword Description.....	1717
Table 12.76: WCONINJH Keyword Description.....	1721
Table 12.77: WCONPROD Keyword Description.....	1727
Table 12.78: WECON Keyword Description.....	1740
Table 12.79: WECONINJ Keyword Description.....	1741
Table 12.80: WECONT Keyword Description.....	1744
Table 12.81: WEFAC Keyword Description.....	1746
Table 12.82: WELCNTL Keyword Description.....	1749
Table 12.83: WEOPEN Keyword Description.....	1754
Table 12.84: WEOPENL Keyword Description.....	1758
Table 12.85: WELPI Keyword Description.....	1759
Table 12.86: WELSEGS Keyword Description.....	1766
Table 12.87: WELSPECL Keyword Description.....	1774
Table 12.88: WELSPECS Keyword Description.....	1778
Table 12.89: WELTARG Keyword Description.....	1780
Table 12.90: WFOAM Keyword Description.....	1782
Table 12.91: WGRUPCON Keyword Description.....	1790
Table 12.92: WHEDREFD Keyword Description.....	1791
Table 12.93: WHISTCTL Keyword Description.....	1792
Table 12.94: WHTEMP Keyword Description.....	1794
Table 12.95: WINJMULT Keyword Description.....	1796
Table 12.96: WINJTEMP Keyword Description.....	1798
Table 12.97: WLIFTOPT Keyword Description.....	1804
Table 12.98: WLIST Keyword Description.....	1807
Table 12.99: WLISTARG Keyword Description.....	1810
Table 12.100: WLISTNAM Keyword Description.....	1811
Table 12.101: WMICP Keyword Description.....	1813
Table 12.102: WPAVE Keyword Description.....	1820
Table 12.103: WPAVDEP Keyword Description.....	1821
Table 12.104: WPIMULT Keyword Description.....	1823
Table 12.105: WPIMULT Keyword Description.....	1825
Table 12.106: WPITAB Keyword Description.....	1827
Table 12.107: WPOLYMER Keyword Description.....	1829
Table 12.108: WRFT Keyword Description.....	1833
Table 12.109: WRFTPLT Keyword Description.....	1836
Table 12.110: WSALT Keyword Description.....	1838
Table 12.111: WSEGAICD Keyword Description.....	1845
Table 12.112: WSEGPROP Keyword Description.....	1862
Table 12.113: WSEGSICD Keyword Description.....	1867
Table 12.114: WSEGVAlV Keyword Description.....	1876
Table 12.115: WELVALV Conversion Factor Constants and Units.....	1876
Table 12.116: WSOLVENT Keyword Description.....	1879
Table 12.117: WSURFACT Keyword Description.....	1880
Table 12.118: WTEMP Keyword Description.....	1882
Table 12.119: WTEST Keyword Description.....	1885
Table 12.120: WTMULT Keyword Description.....	1888
Table 12.121: WTRACER Keyword Description.....	1889
Table 12.122: WVFPDP Keyword Description.....	1891
Table 12.123: WWPAVE Keyword Description.....	1895
Table B.1: OPM Flow 2021-10 New and Depreciated Command Line Options.....	1968
Table B.2: New SUMMARY Keywords for the 2021-10 Release.....	1970
Table B.3: OPM Flow 2021-04 Major Command Line Option Changes.....	1975
Table B.4: New SUMMARY Keywords for the 2021-04 Release.....	1977
Table B.5: New Keywords for the 2020-04 Release.....	1985
Table B.6: New Keywords for the 2019-10 Release.....	1989
Table B.7: New Keywords for the 2019-04 Release.....	1992
Table B.8: New Keywords for the 2018-10 Release.....	1993
Table B.9: New Keywords for the 2018-04 Release.....	1995

Table E.1: OPM Flow 2021-04 Command Line Options.....	2072
Table E.2: OPM Flow 2020-10 Command Line Options.....	2085
Table E.3: OPM Flow 2020-04 Command Line Options.....	2100
Table E.4: OPM Flow 2019-10 Command Line Options.....	2113
Table E.5: OPM Flow 2019-04 Command Line Options.....	2125
Table E.6: OPM Flow 2018-10 Command Line Options.....	2136
Table E.7: OPM Flow 2018-04 Command Line Options.....	2141
Table F.1: OPM Flow Output File Types Summary.....	2150
Table F.2: RUNSPEC Input and Output File Format Keywords.....	2151
Table F.3: OPM Flow File Naming Conventions.....	2153
Table F.4: Big-Endian and Little-Endian Representation.....	2154
Table F.5: Output File Keyword Format.....	2155
Table F.6: INTEHEAD Keyword - IWEL Example.....	2157
Table F.7: EGRID - Model Structural Data for Irregular Corner-Point Grids.....	2160
Table F.8: EGRID Header Keywords.....	2162
Table F.9: EGRID Global Irregular Corner Point Grid Keywords.....	2166
Table F.10: EGRID LGR Irregular Corner Point Grid Keywords.....	2169
Table F.11: EGRID NNC Keywords for Irregular Corner Point Grids.....	2172
Table F.12: INIT Data File Structure.....	2178
Table F.13: INIT Data - Static Data Header Keywords.....	2182
Table F.14: INIT Data - Static Grid Array Data Keywords.....	2186
Table F.15: INIT Data - LGR Static Data Header Keywords.....	2188
Table F.16: INIT Data - LGR Grid Array Data Keywords.....	2190
Table F.17: INIT Data - Static Tabular Data Header Keyword.....	2194
Table F.18: INIT Data - Static Tabular and Constant Data Array Keywords.....	2195
Table F.19: RESTART Data File Structure.....	2200
Table F.20: RESTART Data - Header Keywords.....	2210
Table F.21: RESTART Data - Group, Well and Connection Keywords (Groups).....	2217
Table F.22: RESTART Data - Group, Well and Connection Keywords (Multi-Segment Wells).....	2220
Table F.23: RESTART Data - Group, Well and Connection Keywords (Wells).....	2225
Table F.24: RESTART Data - Group, Well and Connection Keywords (Connections).....	2228
Table F.25: RESTART Data - Group, Well and Connection Keywords (Tracers).....	2229
Table F.26: RESTART Data - Group, Well and Connection Keywords (Network).....	2230
Table F.27: RESTART Data - UDQ Keywords.....	2233
Table F.28: RESTART Data - ACTIONX Keywords.....	2236
Table F.29: RESTART Data - Analytical Aquifer Data Keywords.....	2239
Table F.30: RESTART Data - Numerical Aquifer Data Keywords.....	2240
Table F.31: RESTART Data - Hidden Keyword.....	2242
Table F.32: RESTART Data - Solution Data keyword.....	2243
Table F.33: RESTART Data - Solution Data Keyword for Tracer Concentration Name.....	2244
Table F.34: RESTART Data - Solution Data Keywords.....	2249
Table F.35: RESTART Data - LGR Grid Header Keywords.....	2252
Table F.36: RESTART Data - LGR Solution Data Keywords.....	2253
Table F.37: RFT Data File Format.....	2257
Table F.38: RFT Data File - Time and Date Keywords.....	2257
Table F.39: RFT Data File - Well and Connection Data Keyword.....	2259
Table F.40: RFT Data File - RFT Solution Data Keywords.....	2260
Table F.41: Enhanced SUMMARY File Keywords.....	2265
Table F.42: SUMMARY Index File Keywords (Global).....	2268
Table F.43: SUMMARY Index File Keywords (LGR).....	2268
Table F.44: SUMMARY Index File Keywords (Commercial Simulator).....	2269
Table F.45: SUMMARY Data File Keywords.....	2271
Table F.46: SUMMARY Data File Keywords (LGR).....	2272

INDEX OF FIGURES

Figure 1.1: Enhanced Oil Recovery Processes.....	45
Figure 2.1: VirtualBox Main Screen Showing Various Guest Virtual Machines.....	52
Figure 2.2: Ubuntu Live CD Initial Display.....	53
Figure 2.3: Ubuntu Guest Virtual Machine Desktop in VirtualBox Example.....	54
Figure 2.4: Ubuntu Guest Virtual Machine- Showing a Command Terminal.....	54
Figure 2.5: Ubuntu Guest Virtual Machine - Running OPM Flow Help.....	55
Figure 2.6: Windows 10 - Activate WSL.....	56
Figure 2.7: Windows 10 - Application Store.....	56
Figure 2.8: Windows 10 - WSL Installation of Ubuntu 18.04 LTS.....	57
Figure 2.9: Windows 10 WSL - Running OPM Flow Help.....	58
Figure 2.10: OPMRUN - Initial Display.....	77
Figure 2.11: OPMRUN - Display Elements.....	78
Figure 2.12: OPMRUN - Add Job Dialog.....	78
Figure 2.13: OPMRUN - Load Job Queue Dialog Box and Queue Display.....	79
Figure 2.14: OPMRUN - Edit Job Parameter File.....	80
Figure 2.15: OPMRUN - Select Run Option Dialog.....	80
Figure 2.16: OPMRUN - Running Jobs in the Queue.....	81
Figure 2.17: OPMRUN - Session Log File.....	81
Figure 3.1: Table of Contents Footer.....	86
Figure 3.2: Keyword Index Footer.....	86
Figure 3.3: Alphabetic Listing of Keywords.....	86
Figure 6.1: Numerical Model Dimensions.....	312
Figure 6.2: SPE Simulation Case #01 Cartesian Regular Grid.....	313
Figure 6.3: Norne Field Grid Skeleton.....	315
Figure 6.4: Norne Field Corner-Point Geometry Example.....	316
Figure 6.5: Norne Grid Ternary Solution Display.....	317
Figure 6.6: Cartesian and Radial Grids Comparison.....	318
Figure 6.7: 3D Radial Grid (Odeh Example).....	318
Figure 6.8: Odeh Radial Grid in OPM ResInsight (Commercial Simulator Run).....	320
Figure 6.9: Odeh Radial Grid in OPM ResInsight (OPM Flow Run).....	321
Figure 6.10: 3-D Spider Grid (Odeh Example).....	322
Figure 7.1: Volve Full Field Model PORV Array.....	599
Figure 7.2: Volve Full Field Model TRANX Array.....	599
Figure 8.1: Volve Field Live Oil PVT Data.....	637
Figure 8.2: Volve Field Gas Dry PVT Data.....	638
Figure 8.3: Example Oil-Water Relative Permeability Curves.....	639
Figure 8.4: Example Gas-Oil Relative Permeability Curves.....	640
Figure 9.1: Volve Full Field Model SATNUM Array.....	1083
Figure 9.2: Volve Full Field Model EQUIL Array.....	1083
Figure 12.1: Calibration of Well Productivity Index.....	1375
Figure 12.2: Well Calibration Example.....	1376
Figure 12.3: Extend Network Example.....	1404
Figure 12.4: Norne Group Tree Hierarchy Example.....	1550
Figure 12.5: Extend Network Example.....	1601
Figure 12.6: RPTSCHED: FIP (Balance) Report.....	1639
Figure 12.7: RPTSCHED: FIPRESV (Reservoir Volumes) Report.....	1639
Figure 12.8: RPTSCHED: WELLS - Injection Sub-Report.....	1640
Figure 12.9: RPTSCHED: WELLS - Production Sub-Report.....	1640
Figure 12.10: RPTSCHED: WELLS - Cumulative Production and Injection Sub-Report.....	1641
Figure 12.11: RPTSCHED: WELSPECS - Production Well Control Sub-Report.....	1641
Figure 12.12: RPTSCHED: WELSPECS - Well Connection Data Sub-Report.....	1642
Figure 12.13: RPTSCHED: WELSPECS - Multi Segment Well Structure Sub-Report.....	1643
Figure 12.14: RPTSCHED: WELSPECS - Multi Segment Well Connection Sub-Report.....	1643
Figure 12.15: Multi-Segment Well OP01 Completion 3D View.....	1769
Figure 12.16: Multi-Segment Well Example (Wells OP01 and OP02).....	1849
Figure B.1: Module Structure for 2019-10 Release.....	1990
Figure B.2: Module Structure for 2018-04 Release.....	1994
Figure C.1: OPMRUN - Initial Display.....	2005
Figure C.2: OPMRUN - Display Elements.....	2006
Figure C.3: OPMRUN - Add Job Dialog Box.....	2006
Figure C.4: OPMRUN - Add Job and Select Run Type.....	2007

Figure C.5: OPMRUN - Edit Job Data and Parameter File.....	2008
Figure C.6: OPMRUN - Edit Job Parameter File.....	2009
Figure C.7: OPMRUN - Load Job Queue Dialog Box and Queue Display.....	2010
Figure C.8: OPMRUN - Reset Job Queue Parameters.....	2011
Figure C.9: OPMRUN - Reset Job Queue Parameters Dialog.....	2011
Figure C.10: OPMRUN - Run Jobs in the Queue.....	2012
Figure C.11: OPMRUN - Select Run Option Dialog.....	2012
Figure C.12: OPMRUN - Log File Creation.....	2013
Figure C.13: OPMRUN - Session Log.....	2014
Figure C.14: OPMRUN - Edit Data File.....	2015
Figure C.15: OPMRUN - Set Default Parameter Set.....	2016
Figure C.16: OPMRUN - Set Application Options.....	2017
Figure C.17: OPMRUN - Set Project Directories.....	2017
Figure C.18: OPMRUN Tools -Compression Utility.....	2019
Figure C.19: OPMRUN Tools - Compression Utility Application.....	2019
Figure C.20: OPMRUN Tools - Keywords Application.....	2020
Figure C.21: OPMRUN Tools - Keywords HEADER Comment Example.....	2021
Figure C.22: OPMRUN Tools - Keywords File Menu.....	2022
Figure C.23: OPMRUN Tools - Keywords Edit Menu.....	2022
Figure C.24: OPMRUN Tools - Keywords Generate Menu.....	2022
Figure C.25: OPMRUN Tools - Keywords Help.....	2022
Figure C.26: OPMRUN Tools - Keywords Generator Help.....	2023
Figure C.27: OPMRUN Tools - Keywords Velocity Template Help.....	2023
Figure C.28: OPMRUN Tools - Keywords File Imports.....	2024
Figure C.29: OPMRUN Tools - Keywords Section Standard Set of Keywords Example.....	2025
Figure C.30: OPMRUN Tools - Keywords Summary Section Keywords.....	2026
Figure C.31: OPMRUN Tools - Keywords Schedule Section and Date Schedule.....	2027
Figure C.32: OPMRUN Tools - Keywords Data (Sets) Option.....	2028
Figure C.33: OPMRUN Tools - Keywords Model Option.....	2029
Figure C.34: OPMRUN Tools - Keywords User Templates Option.....	2030
Figure C.35: OPMRUN Tools - Production Schedule Input File Example.....	2031
Figure C.36: OPMRUN Tools - Production Schedule Application.....	2032
Figure C.37: OPMRUN Tools - Production Schedule Output Example.....	2033
Figure C.38: OPMRUN Tools - Sensitivity Application.....	2034
Figure C.39: OPMRUN Tools - Sensitivity Base Case Data File Example.....	2035
Figure C.40: OPMRUN Tools - Sensitivity Load Factors Example.....	2036
Figure C.41: OPMRUN Tools - Sensitivity Factor Editing Example.....	2037
Figure C.42: OPMRUN Tools - Sensitivity Scenario Option Selection Example.....	2038
Figure C.43: OPMRUN Tools - Sensitivity Case Generation and OPMRUN Queue File.....	2039
Figure C.44: OPMRUN Tools - Well Specification OPM ResInsight Well Completion File Format.....	2040
Figure C.45: OPMRUN Tools - Well Specification OPM ResInsight Reservoir Layer File.....	2041
Figure C.46: OPMRUN Tools - Well Specification Application.....	2042
Figure C.47: OPMRUN Tools - Well Specification WELSPECS and COMPDAT Output Example.....	2042
Figure C.48: OPMRUN Tools - Well Specification OPM ResInsight Perforation File Output.....	2043
Figure C.49: OPMRUN Tools - Well Trajectory Conversion Input File.....	2043
Figure C.50: OPMRUN Tools - Well Trajectory Application.....	2044
Figure C.51: OPMRUN Tools - Well Trajectory Output Trajectory File.....	2045
Figure F.1: IWEL Property Keyword Example.....	2157
Figure F.2: ICON Property Keyword Example.....	2158

CHAPTER 1: INTRODUCTION

1.1 OVERVIEW

The Open Porous Media (“OPM”) numerical simulator, OPM Flow, is a fully-implicit, black-oil simulator capable of running industry-standard simulation models¹. The simulator’s input file is compatible to the commercial simulator, although OPM Flow has additional keywords for supporting additional functionality not found in the commercial simulator. The simulator’s output files, except for the print and debug files, are compatible with the commercial simulator, and are readable by commercial post-processing software as well as by OPM ResInsight. OPM ResInsight is the Open Porous Media’s post-processing software.

The simulator is implemented using automatic differentiation to enable rapid development of new fluid models. In most simulators the coefficients of the linearized systems of equations (Jacobian matrix) required by the nonlinear Newtonian solver, have traditionally been computed by evaluating the closed-form expressions obtained by differentiating the discretized flow equations analytically. Differentiating these flow equations manually and programming the resulting formulas is time-consuming and error-prone. Thus, even simple extensions in functional dependencies can be difficult to accommodate into existing simulators. Automatic differentiation eliminates these drawbacks.

OPM Flow Runs under Linux and Windows Subsystem for Linux.

The program is in active development with new features added in each bi-annual release. Currently the program has the following functionality:

Model Formulation:

- Back-oil with dissolved gas and vaporized oil.
- Rock-dependent capillary and relative-permeability curves.
- End-point scaling and hysteresis.
- Oil vaporization controls (VAPPARS).
- Rock compaction.

Enhance Oil Recovery Models:

Enhanced Oil Recovery (“EOR”) is a term applied to methods used for recovering oil from a petroleum reservoir beyond that recoverable by primary and secondary methods. Primary recovery normally refers to production using the energy inherent in the reservoir from gas under pressure or a natural water drive. Secondary recovery usually refers to injection of water or water flooding. Thus, Enhanced Oil Recovery is often synonymous with tertiary recovery. Improved Oil Recovery (“IOR”) and Advanced Oil Recovery (“AOR”) have similar meaning, except they also apply to primary and secondary methods, and sometimes EOR methods can be used earlier in the sequence. Originally water flooding was considered as Enhanced Oil Recovery, but now EOR is generally considered to follow water flooding.


There are four major EOR groups of methods:

- thermal recovery,
- gas miscible recovery,
- chemical flooding, and
- microbial flooding.

These main groups are further subdivided into individual processes as illustrated in Figure I.1. For example the thermal recovery methods consist of steam flooding and cyclic steam stimulation, as well as in-situ

¹ Rasmussen, A.F., Sandve, T.H., Bao, K., Lauser, A., Hove, J., Skaflestad, B., Klöfkorn, R., Blatt, M., Rustad, A.B., Sævareid, O. et al. [2019] *The Open Porous Media Flow Reservoir Simulator*. arXiv preprint arXiv:1910.06059.

combustion. Figure I.1 also includes hot water as a process for thermal EOR, but this process is rarely used in the industry as a drive mechanism as steam contains significantly more heat than hot water and therefore steam is more effective in heating up the in situ oil. Note that microbial EOR methods, are not shown in Figure I.1, due to their limited use in the industry.

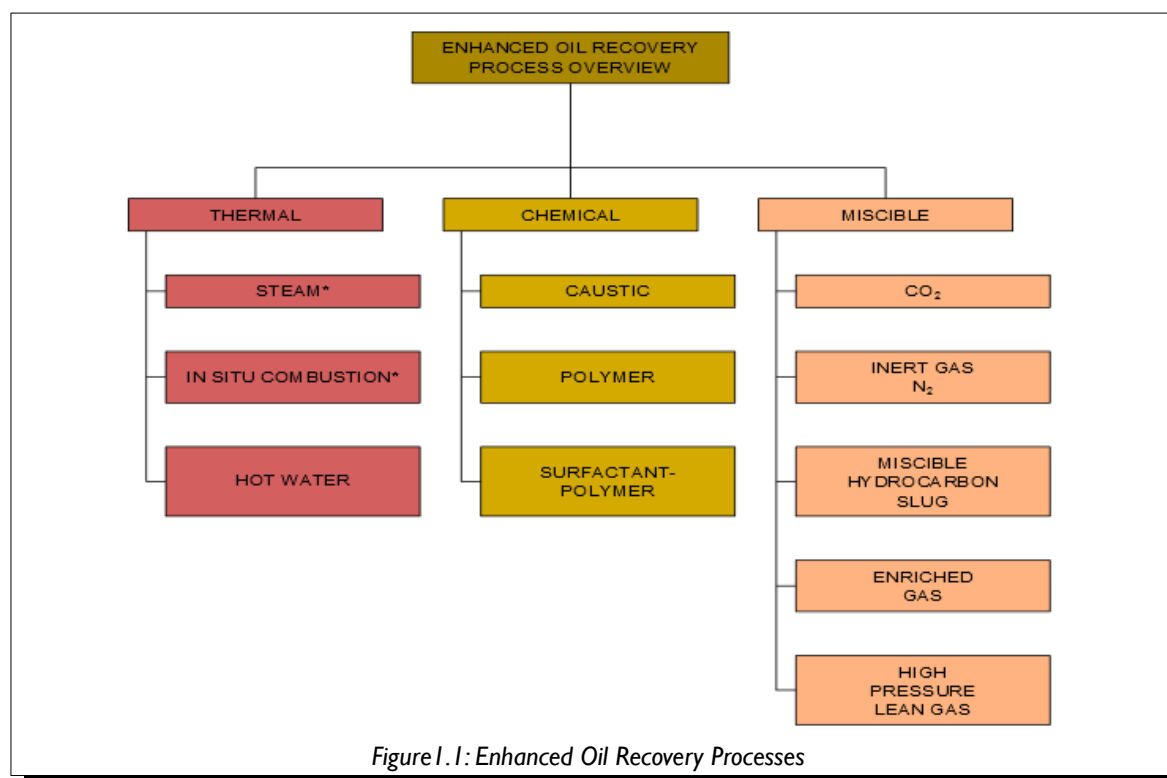

Chemical flooding methods include polymer flooding (including polymer gels), micellar-polymer flooding, and alkaline flooding. Quite often these type of floods are combined to form a more efficient displacement process, for example in an Alkaline Surfactant Polymer (“ASP”) process.

Conventional gas flooding is an immiscible process, that is the oil and gas phases remain separate during the displacement drive. For the EOR gas drive the displacement is miscible, here the gas “mixes” with the oil to form a single phase fluid in the reservoir. Gas miscible processes are subdivided into carbon dioxide flooding, cyclic carbon dioxide stimulation, nitrogen flooding and nitrogen-CO₂ flooding.

Various EOR models are available based on extending the black-oil model with a fourth component in the simulator.

- **CO₂ Standard EOR Model:** OPM Flow’s CO₂ Standard EOR model is based on the solvents model in which uses an extra component by extending the black-oil oil formulation with a fourth component in the simulator by adding a CO₂ component to the gas phase. This is the standard formulation used by most black-oil simulators.
- **CO₂ Dynamic EOR Model:** Although the CO₂ Standard EOR model is commonly used, the formulation cannot account for the mass transfer of the various components and phases. The extended black-oil formulations often poorly represent the PVT properties of the oil-CO₂ mixtures, resulting in poor agreement with the compositional formulation. OPM Flow’s CO₂ Dynamic EOR Model black-oil formulation attempts to overcome this limitation by making the black-oil properties dependent on the fraction of CO₂ in the cell². This approach models the oil-CO₂ mixture more accurately and thus give results closer to the compositional simulator. Note the model is not

² T. H. Sandve, O. Sæviareid and I. Aavatsmark: “Improved Extended Blackoil Formulation – for CO₂ EOR Simulations.” in ECMOR XVII – The 17th European Conference on the – Mathematics of Oil Recovery, September 2020.

restricted to CO₂ utilization, as long as the appropriate oil-injection-gas dependent properties are entered in the model.

- **Foam Model:** An experimental foam module has been added to OPM Flow 2019-10 release. With this it is possible to simulate certain types of surfactant injection. Such injection stimulates formation of foam to change mobility ratios, and give better reservoir sweep. The implemented foam model treats surfactant transported in the gas phase, and reduces the mobility of that phase depending on the surfactant concentration. In addition to mobility reduction, foam adsorption to the reservoir rock is included in the model.
- **Polymer Model:** In OPM Flow's polymer model is based on a black-oil polymer formulation, which is developed by extending the black-oil model with a polymer component. The effects of the polymer mixing are simulated based on the Todd-Longstaff³ mixing model, and adsorption, dead pore space, and permeability reduction effects are also considered. A logarithmic shear thinning/thickening model has also been incorporated since the 2015-10 Release (see [Flow-polymer](#)). Note that the Polymer model has now been incorporated into the main OPM Flow simulator and is no longer a separate simulator.
- **Solvent Model:** Similar to the polymer model, OPM Flow's solvent model again uses an extra component by extending the black-oil oil formulation with a fourth component in the simulator by adding a solvent component to the gas phase (see [Flow-solvent](#)). Note that Solvent model has now been incorporated into the main OPM Flow simulator and is no longer a separate simulator.

CO₂ Storage:

- Brine-CO₂ PVT module that generates brine and CO₂ PVT properties directly eliminating user input for PVT.
- Thermal properties generated by OPM Flow include the CO₂ enthalpy represented as a table internally in the simulator. The liquid enthalpy depends on the dissolved CO₂ and salinity as well as pressure and temperature. The water enthalpy is automatically calculated and modified to account for salinity and for CO₂ following.
- Diffusion for fine grid modeling is implemented via diffusion coefficients that depend on temperature, pressure, and salinity. The diffusion coefficient is computed internally for pure water and modified to account for salinity. The effect of the porous media on the diffusion is modeled using an industry relationship. In addition, the coefficient can also be given as an input parameter using a keyword.
- CO₂ convective dissolution of carbon dioxide (CO₂) into in situ brine within a grid cell is implemented together with a convective dissolution parameter for controlling the rate of dissolution.
- Microbially Induced Calcite Precipitation ("MICP") model for the modeling biochemical processes in creating barriers by calcium carbonate cementation, the technology has the potential to be used for sealing leakage zones in geological formations⁴ and ⁵.

³ M. R. Todd and W. J. Longstaff, *The Development, Testing, and Application Of a Numerical Simulator for Predicting Miscible Flood Performance*. In: *J. Petrol. Tech.* 24.7 (1972), pages 874-882.

⁴ Landa-Marbán, D., Tveit, S., Kumar, K., Gasda, S.E., 2021. *Practical approaches to study microbially induced calcite precipitation at the eld scale*. *Int. J. Greenh. Gas Control* 106, 103256. <https://doi.org/10.1016/j.ijggc.2021.103256>.

⁵ Landa-Marbán, D., Kumar, K., Tveit, S., Gasda, S.E., 2021. *Numerical studies of CO₂ leakage remediation by micp-based plugging technology*. In: Røkke, N.A. and Knuutila, H.K. (Eds) *Short Papers from the 11th International Trondheim CCS conference*, ISBN: 978-82-536-1714-5, 284-290.

Description of Geology:

- Rectilinear and fully-unstructured grid.
- Corner-point grids from the commercial simulator input, including fault and region multipliers, minimum pore volume, pinch outs, etc.
- Spider grids that are similar to radial grids for modeling near well bore effects that enable visualization in OPM ResInsight.
- Analytical and numerical aquifers.

Well and Group Controls:

- Bottom-hole pressure and surface/reservoir rate.
- Group controls, including voidage replacement, network model, gas lift optimization, guide rate control for producers and injection groups and well, etc.
- Shut/stop/open individual completions.
- History-matching wells.
- Multi-segment wells together with various inflow control devices (“ICDs”)
- Well lists.
- Action conditions and command processing via the ACTIONX and UDQ keywords employed in the commercial simulator.
- Python interface to control and process simulator data.

Input and Output:

- General reader/parser for Eclipse input decks.
- XML-based or simple text-format input of additional parameters.
- Flexible output of summary and restart files in Eclipse format.
- Logging to terminal and print file.
- Front-end graphical interface for running the simulator with various tools, including: case compression and uncompression, keyword generation etc.

Simulation Technology:

- Fully-implicit in time.
- Automatic differentiation
- Two-point flux approximation in space with upstream-mobility weighting.
- Flexible assembly through the use of automatic differentiation.
- Block-structured linear solver with ILU0 pre-conditioner.
- Adaptive step-size controls.
- Parallel processing.

CHAPTER 2: INSTALLING AND RUNNING FLOW

2.1 INSTALLING OPM FLOW

OPM Flow can be installed and used in a variety of ways. Perhaps the simplest way is to use the operating system's package manager to install the OPM modules as binary packages, including OPM Flow and other OPM programs. That way all prerequisite libraries will automatically be installed on the system. This is supported on Ubuntu Linux version 16.04 and Red Hat Enterprise (or CentOS) version 6 or 7.

OPM Flow can also be used via a Docker container. This allows OPM Flow to run on any system that supports Docker, including Microsoft Windows, without installing prerequisite libraries or affecting any other software on your system.

Finally, OPM Flow can be installed by compiling from source on Linux or macOS systems.

2.1.1 UBUNTU LINUX 18.04 (64-BIT VERSION ONLY) AND HIGHER

The easiest way to install the Ubuntu packages is to first add the OPM personal package archive (ppa). In order to do that we need to install the apt-add-repository command.

```
sudo apt-get update  
  
sudo apt-get install software-properties-common
```

Then we add the repository, and run update again:

```
sudo apt-add-repository ppa:opm/ppa  
  
sudo apt-get update
```

At this point, all the OPM modules should be available to install. To see a list of (for example) the opm-simulators packages:

```
apt-cache search opm-simulators
```

Then to install the opm-simulators programs (including OPM Flow) and their dependencies,

```
sudo apt-get install mpi-default-bin  
  
sudo apt-get install libopm-simulators-bin
```

Notes

- 1) The mpi install above is required for the mpi libraries which the OPM executables are linked to, even those that are not intended to be run with mpirun. The reason the OPM packages do not depend on that package is that by Debian policy the user should be allowed to choose which MPI implementation to use (above we picked the default set by Ubuntu).
- 2) If an old versions of prerequisite libraries have already been installed (for example from installing a previous release of OPM Flow) it may be necessary to upgrade them via the following commands:

```
sudo apt-get update  
  
sudo apt-get upgrade
```


- 3) Some users have experienced trouble with OPM Flow simply aborting with no error message. In some cases that can be related to locale issues. Check by running the “locale” command. OPM Flow requires the “C” or an English locale to run correctly. One way to fix this can be to put the following in your “.bash_profile” (note the initial period or full stop in the filename), and open a new terminal (command) window:

```
LANG="en_US.UTF-8"
export LANG
LC_ALL="en_US.UTF-8"
export LC_ALL
```

2.1.2 RED HAT ENTERPRISE OR CENTOS (VERSION 6 OR 7)

First add the OPM package repository:

```
sudo yum-config-manager --add-repo \
http://www.opm-project.org/package/opm.repo
```

The OPM software is split in several packages. To list all available OPM packages one can use:

```
sudo yum search opm-
```

For example you can install the opm-simulators binary package to get access to the OPM Flow reservoir simulator:

```
sudo yum install opm-simulators-bin
```

Development packages are available using the -devel suffix. For example, to install the opm-upscaling development package use:

```
sudo yum install opm-upscaling-devel
```

2.1.3 WINDOWS 7 AND 10 USING VIRTUALBOX

Oracle VM VirtualBox's (formerly Sun VirtualBox, Sun xVM VirtualBox and Innotek VirtualBox) is a free and open source hosted hypervisor for x86 virtualization, developed by Oracle Corporation. The software was originally created by Innotek, who were acquired by Sun Microsystems in 2008, which was in turn acquired by Oracle in 2010. VirtualBox may be installed on Windows, macOS, Linux, Solaris and Open Solaris operating systems. The software supports the creation and management of guest virtual machines running Windows, Linux, BSD, OS/2, Solaris, Haiku, and OSx86, as well as limited virtualization of macOS guests on Apple hardware. For some guest operating systems, a "Guest Additions" package of device drivers and system applications is available, which typically improves performance, especially that of graphics⁶.

The OPM web site outlines the install process using VirtualBox, Vagrant⁷ and a Vagrant file to automatically set up a virtual environment – see https://opm-project.org/?page_id=294&page=2 for details on this approach.

⁶ After <https://en.wikipedia.org/wiki/VirtualBox>.

⁷ See <https://www.vagrantup.com/> for details

Alternatively, one can use the more standard approach of installing virtual machines using VirtualBox. The basic outline for this method to use VirtualBox to run a guest Linux distribution and install OPM Flow in the guest Linux virtual machine. Note only the Linux distributions mentioned previously should be used as a guest virtual machine, although any of the Ubuntu “flavors” (Kubuntu, Lubuntu, Ubuntu Mate etc.) will work as well. The steps are:

1) Installing VirtualBox⁸

- First download the latest VirtualBox software from Oracle’s web site at <https://www.virtualbox.org/> for Windows host machines.
- Install the software via double clicking on the executable and following the on screen instructions.

2) Create a Guest Linux Virtual Machine.

- Download a suitable Linux distribution in ISO format that supports running OPM Flow, for example Ubuntu 20.04 LTS (64-bit version only) from <https://ubuntu.com/download/desktop> or CentOS Linux (version 6 or 7) from <https://www.centos.org/download/>.
- Start VirtualBox, which should display a screen similar to the one below without all the guest virtual machines.


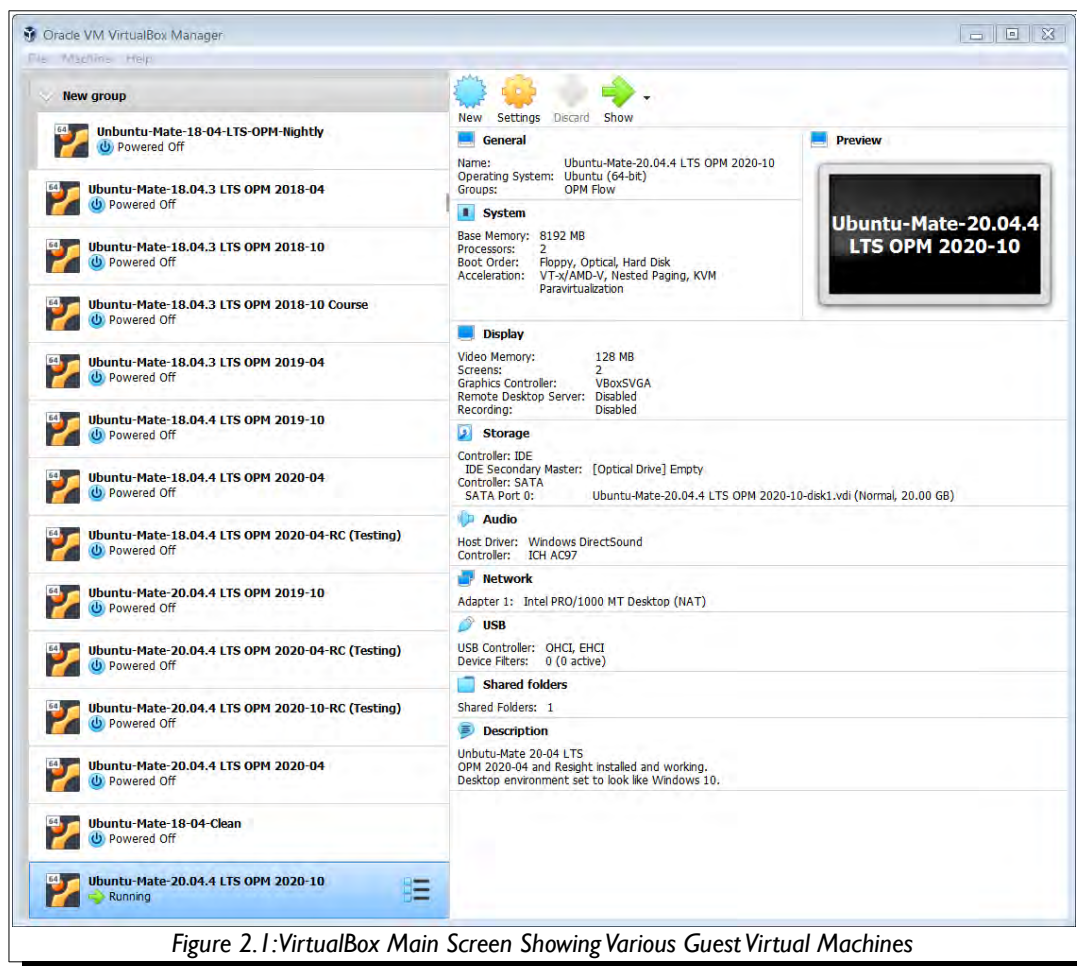


Figure 2.1: VirtualBox Main Screen Showing Various Guest Virtual Machines

- Then click the "New" icon button to install a new guest virtual machine.

⁸ See also <https://www.virtualbox.org/wiki/Documentation> for further and more detailed information.


- Identify the operating system type (Linux) and the Linux distribution that one wishes to install (Ubuntu 64-bit or RedHat for one of the CentOS distributions).
- Set the amount of RAM, should be 4GB or more; note the guest machine properties can subsequently be changed after the guest machine has been created.
- Create a virtual hard drive, the default virtual disk of VDI is normally used, and select either the dynamic or the fixed option. Next select the size of the virtual disk, the size should be sufficient to allow for the operating system and any other software, including OPM Flow, to be installed. For Ubuntu 20.04 LTS the operating system needs at least 10 GB. VirtualBox will then create the guest virtual machine.
- The next step is to start the guest virtual machine and installing the Linux operating system. This can be done by double clicking on the guest virtual machine and then selecting the previously downloaded IOS file. For Ubuntu 20.04 LTS the machine will boot into a live distribution, that is the guest virtual machine is running from a “live CD”, shown below.

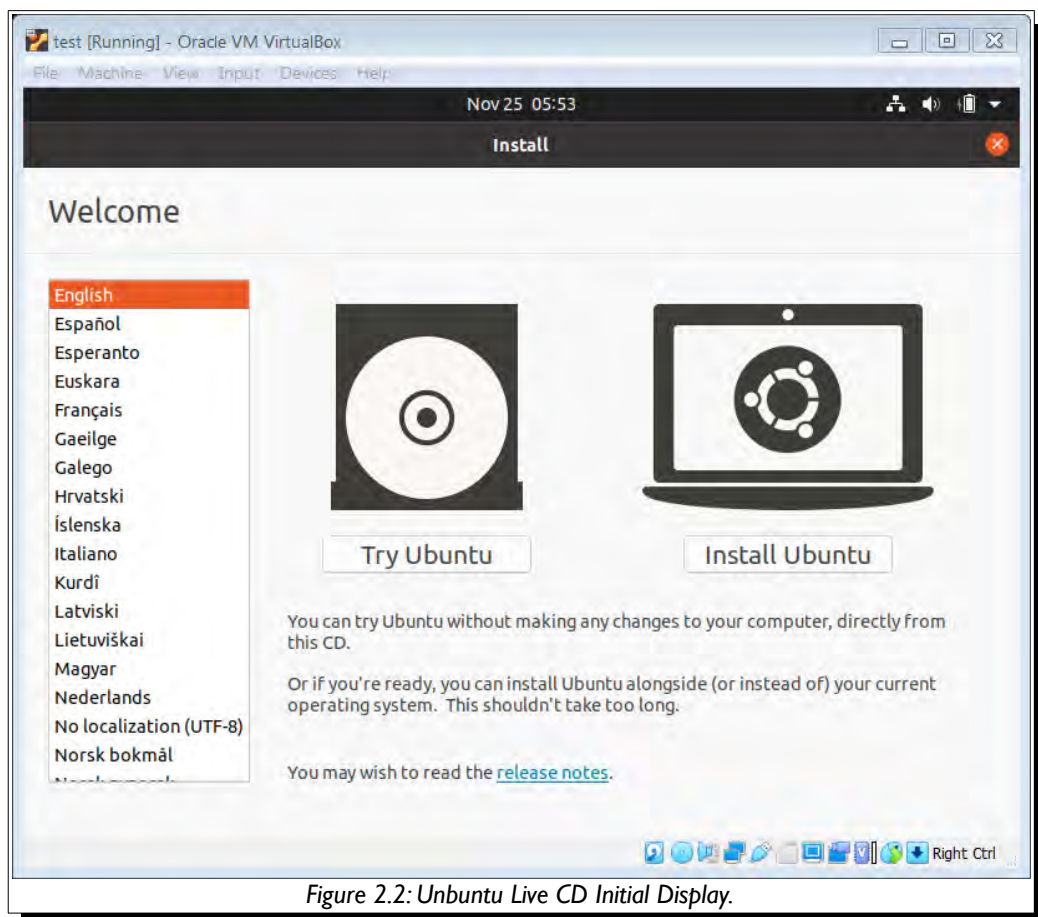


- Select the “Install Ubuntu” option to install the operating system. The “Try Ubuntu” option means the guest machine will run from a “Live CD”.
- Follow the on screen instructions to install the operating system, together with any updates suggested by the installer. Once the installation is complete the guest machine will re-boot as a normal guest Linux machine.

3) Installing OPM Flow in the Guest Virtual Machine.

- Boot up your virtual machine by selecting the machine and selecting the “Start” icon on the main VirtualBox screen (Figure 2.1). One should then be presented with the newly created guest virtual machine, similar to one shown in Figure 2.3, that displays the standard Ubuntu desktop.

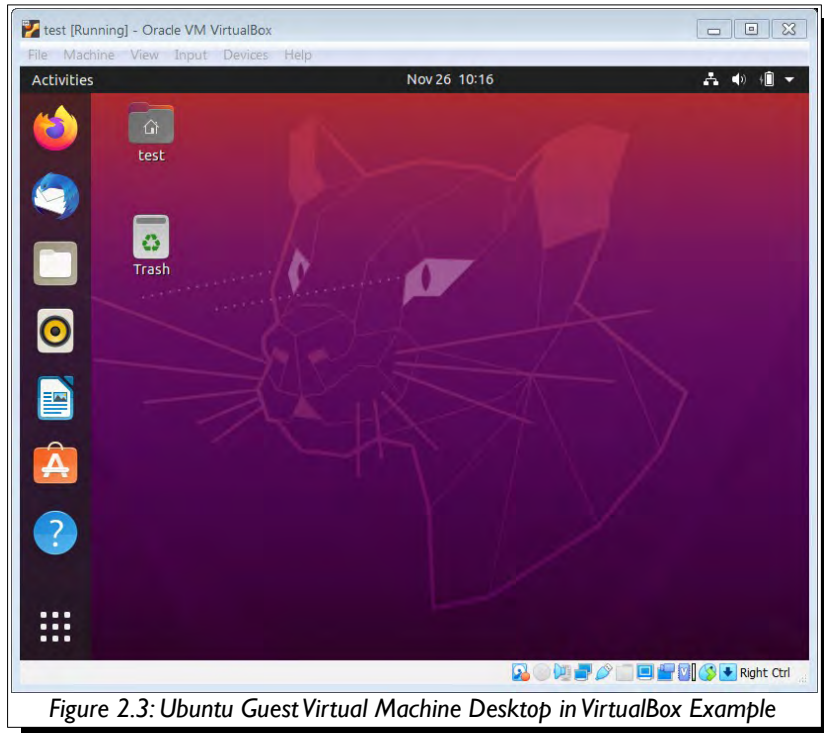

- In order to install OPM Flow in the guest virtual machine one first needs to open a command terminal using ALT+CNTRL+T key sequence (Figure 2.4).

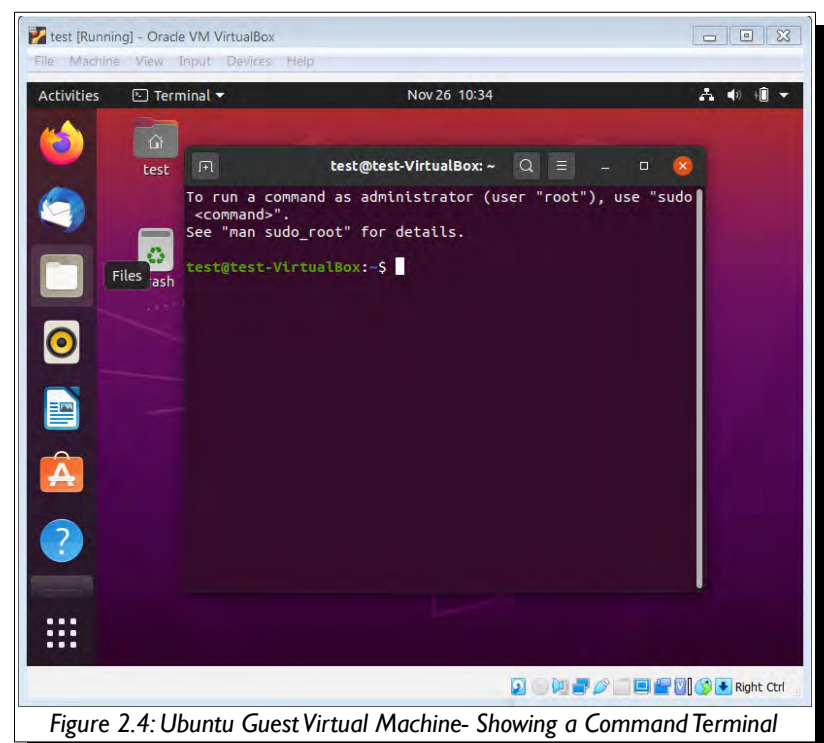

- One can then use the same commands as for a host machine, as described earlier in Sections 2.1.1 Ubuntu Linux 18.04 (64-bit version only) and Higher and 2.1.2 Red Hat Enterprise or CentOS (version 6 or 7) to install the software. To check if OPM Flow is installed, execute the following command in the terminal window:

```
flow --help
```

Which should then display the command line for the installed version of OPM Flow, as depicted in Figure 2.5

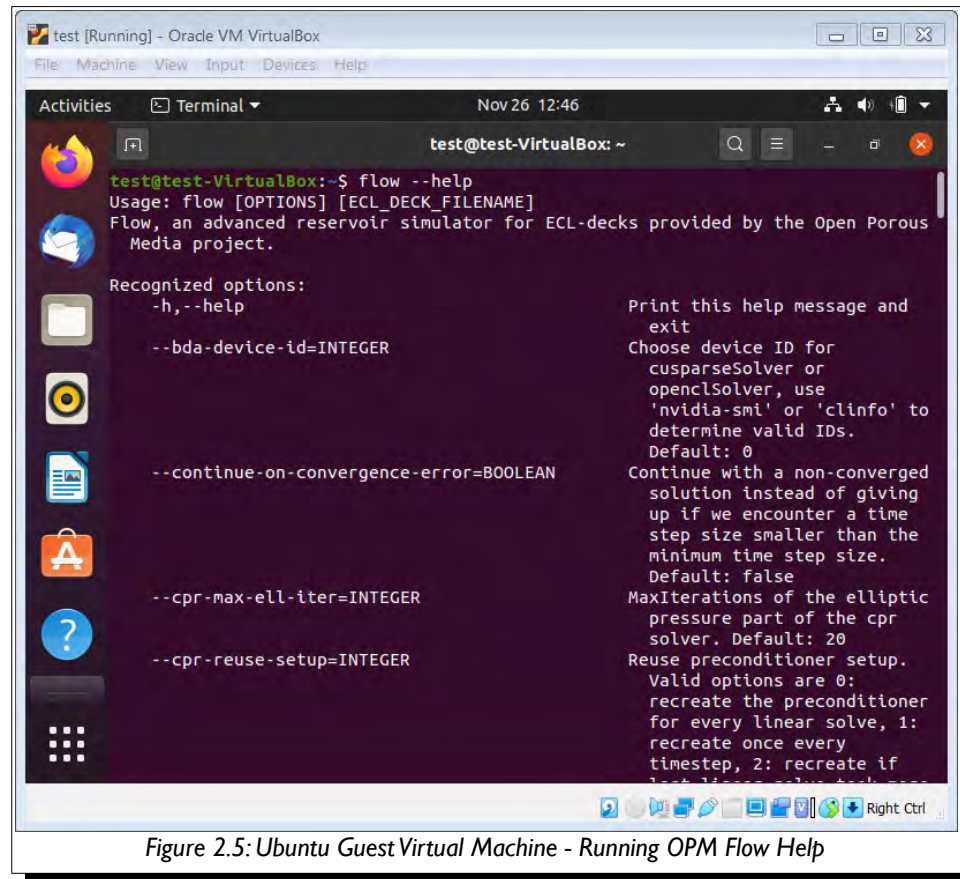


Figure 2.5: Ubuntu Guest Virtual Machine - Running OPM Flow Help

4) Using OPM Flow in a Linux Virtual Machine.

- The guest virtual machine only has access to files within the guest machine. To enable the guest to have access to the host machine files; on the main VirtualBox screen (Figure 2.1), select the “Setting” icon and then the “Shared Folders” option to set a share directory between the guest and the host machines. One can then have all the input and output files on the host machine and run OPM Flow in the guest virtual machine.
- Note one should shut down the guest virtual machine in the normal way to avoid potential file corruptions.
- One may also take snapshots of the current state of the virtual machine, as a form of backup if one changes the configuration of the virtual machine, or if one updates to the latest release of OPM Flow.

Historically this has been one of the preferred methods to run OPM Flow on Windows machines and still has several advantages, including being able to export and import various guest virtual machines for testing various versions of the simulator. However, Microsoft, with the introduction of Windows Subsystem for Linux (“WSL”) have create a more seamless method for running OPM Flow on Windows 10 machines. This option is outlined in the next section.

2.1.4 WINDOWS 10 – WINDOWS SUBSYSTEM FOR LINUX

The first release of WSL was on August 2nd, 2016 and there has been various updates to this version which is known as WSL 1. On May 6th, 2019 WSL 2 was announced, that was a complete re-write of the Windows Subsystem for Linux, and offers significant performance improvements over WSL 1. Note that WSL 2 requires Windows 10 version 1903 or higher, with Build 18362 or higher, for x64 systems. WSL 2 is based on a virtual machine with an actual Linux Kernel that can immediately react to system calls. Such an architecture enables Full System call capabilities.

To run OPM Flow under WSL 1 or WSL 2 one has to first activate WSL, then install a Linux distribution from the Application store, and then finally install OPM Flow. The detail instruction are as follows:

- 1) Activating Windows Subsystem for Linux.
 - On the Windows 10 machine, Click Start and navigate to Control Panel, then Select the Programs Category. Under Programs and Features, click on Turn Windows Features on or off and click the check box next to the Windows Subsystem for Linux option, to enable WSL.

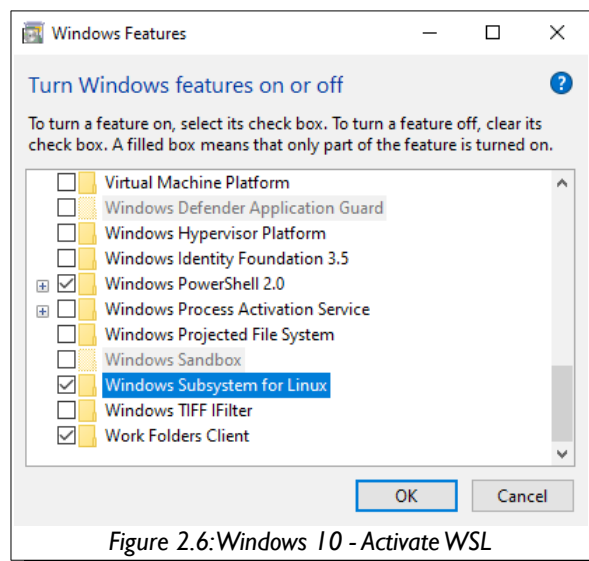


Figure 2.6: Windows 10 - Activate WSL

You may also have to ensure that CPU virtualization has been activated in your computer's BIOS.

- 2) Installing a Linux Distribution.
 - To install the Linux distribution in Windows 10, click Start and then select the Microsoft Store.
 - Using the search box available in the Microsoft Store, pick one of the distributions that is compatible with OPM Flow (Figure 2.7).



Figure 2.7: Windows 10 - Application Store

- After selecting the distribution, click Install or Get to install the Linux Distribution. Note the installer will ask you to sign into your account, but you can close the pop-up window if you don't want to sign in at this time.
- On completion of the installation process the Linux distribution will be installed on Windows 10 and ready for use. Furthermore, the distribution will be available directly in the Start Menu itself in the form of a standard everyday application (Figure 2.8).

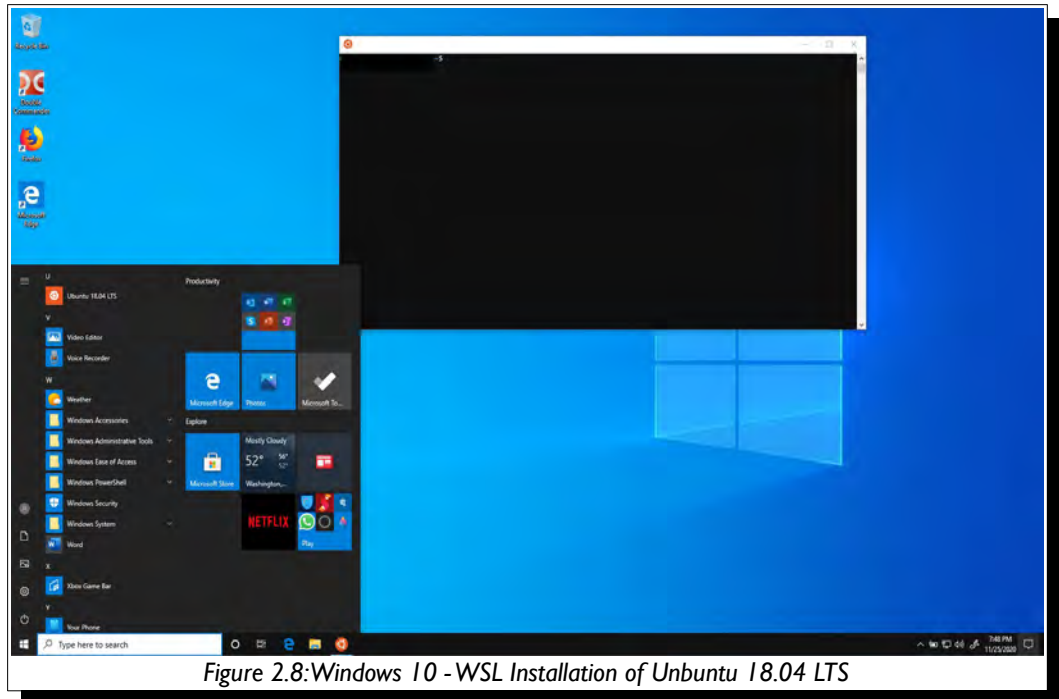


Figure 2.8: Windows 10 - WSL Installation of Ubuntu 18.04 LTS

- When starting the Linux Distribution for the first time, a brief setup process will take place. Basically, it will ask for the username and password you want to set for the Linux environment, a similar process as when you install a Linux distribution via VirtualBox.
- To check the version of WSL that will be used to run the Linux distribution, in PowerShell use the following command:

```
wsl -l -v
```

- To set the WSL for a given distribution, for example Ubuntu-18-04 to WSL 2, in PowerShell use the following command:

```
wsl --set-version Ubuntu-18-04 2
```

- And finally to set the default version for WSL for all Linux distributions, use the following PowerShell command:

```
wsl --set-default-version 2
```


3) Installing OPM Flow in a WSL Linux Distribution:

- Click on installed Linux distribution in the Start Menu to open a Linux terminal session, and then execute the Linux commands as described earlier in Sections 2.1.1 Ubuntu Linux 18.04 (64-bit version only) and Higher and 2.1.2 Red Hat Enterprise or CentOS (version 6 or 7) to install the software.

- To check if OPM Flow is installed, execute the following command in the Linux terminal window:

```
flow --help
```

Which should then display the command line for the installed version of OPM Flow, as depicted in Figure 2.9.

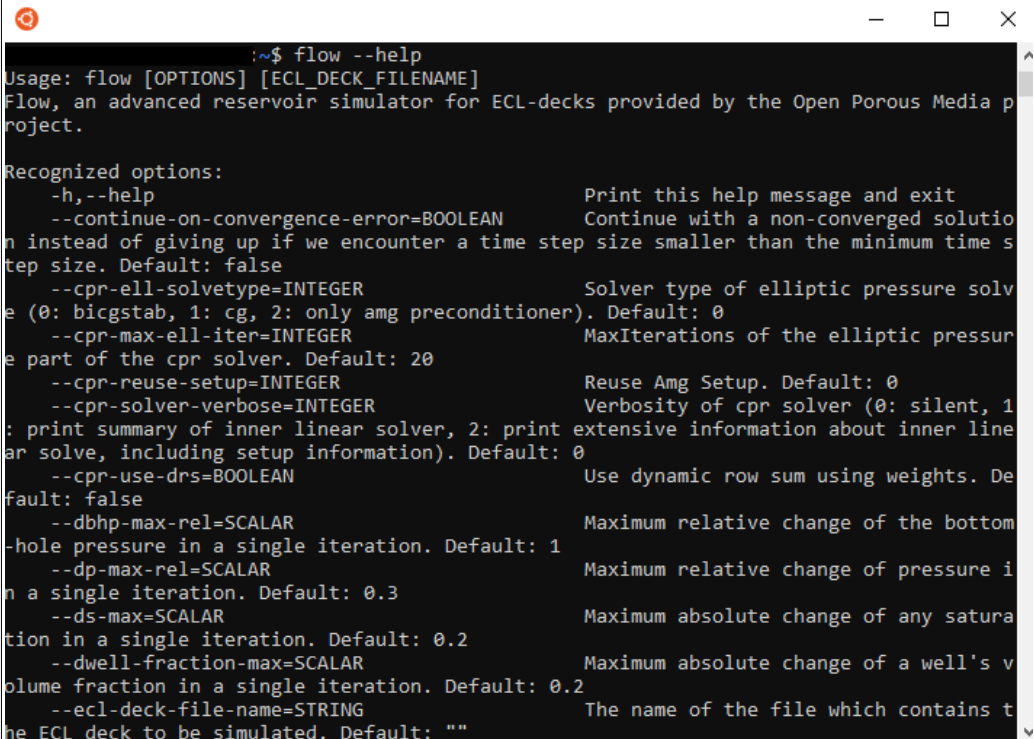

```

~$ flow --help
Usage: flow [OPTIONS] [ECL_DECK_FILENAME]
Flow, an advanced reservoir simulator for ECL-decks provided by the Open Porous Media project.

Recognized options:
  -h, --help                                Print this help message and exit
  --continue-on-convergence-error=BOOLEAN    Continue with a non-converged solution instead of giving up if we encounter a time step size smaller than the minimum time step size. Default: false
  --cpr-ell-solvetype=INTEGER                Solver type of elliptic pressure solve (0: bicgstab, 1: cg, 2: only amg preconditioner). Default: 0
  --cpr-max-ell-iter=INTEGER                MaxIterations of the elliptic pressure part of the cpr solver. Default: 20
  --cpr-reuse-setup=INTEGER                 Reuse Amg Setup. Default: 0
  --cpr-solver-verbose=INTEGER              Verbosity of cpr solver (0: silent, 1: print summary of inner linear solver, 2: print extensive information about inner linear solve, including setup information). Default: 0
  --cpr-use-drs=BOOLEAN                     Use dynamic row sum using weights. Default: false
  --dbhp-max-rel=SCALAR                     Maximum relative change of the bottom hole pressure in a single iteration. Default: 1
  --dp-max-rel=SCALAR                       Maximum relative change of pressure in a single iteration. Default: 0.3
  --ds-max=SCALAR                           Maximum absolute change of any saturation in a single iteration. Default: 0.2
  --dwell-fraction-max=SCALAR               Maximum absolute change of a well's volume fraction in a single iteration. Default: 0.2
  --ecl-deck-file-name=STRING               The name of the file which contains the ECL deck to be simulated. Default: ""

```

Figure 2.9: Windows 10 WSL - Running OPM Flow Help

One can also use the Windows command terminal, instead of the WSL Linux Terminal, to do the same thing by adding WSL character string before the command, that is:

```
wsl flow --help
```

4) Using OPM Flow via the Windows 10 WSL Linux Virtual Machine.

- Similar to running OPM Flow using a Linux distribution installed in VirtualBox, the WSL Linux virtual machine only has access to files within WSL virtual machine. To access the Windows 10 file system, one has to execute the Linux CD command in the WSL Linux Terminal, the command has the form:

```
cd /mnt/<drive letter>
```

For example, to access the Windows 10 system drive C one would use the following command:

```
cd /mnt/c
```

One can then run OPM Flow from the desired directory in the WSL Linux virtual machine and use OPM ResInsight under Windows 10 to view the results of the simulation run.

User experience indicates this approach of running OPM Flow under Windows 10 is the most integrated and convenient method, compared to the VirtualBox approach, especially for the less technically advance users.

2.1.5 USING A DOCKER CONTAINER

See the tutorial on the OPM website [Running Flow in Docker](#).

2.1.6 INSTALLING FROM SOURCE

See instructions on the OPM website [Building from Source](#).

2.2 RUNNING OPM FLOW 2021-10 FROM THE COMMAND LINE

This section describes how to run the OPM Flow simulator and the various command line options associated with this release, the command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from your terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA. Alternatively, you can type the path to the binary and the *.DATA file, as per the example below:

```
path_to_binary/flow path_to_data/CASENAME
```

The simulator can also be run using command line parameters for example to run the previous CASENAME one could use:

```
flow --ecl-deck-file-name=path_to_data/CASENAME
```

Note that there must be no spaces around the equals sign and there should be no spaces in CASENAME. If there are spaces in CASENAME, which can typically occur on Windows based systems, then the CASENAME should be enclosed in quotes; thus instead of CASE NAME use "CASE NAME".

By default output files are generated in the same folder as the *.DATA file. To override this one can use the `--ecl-output-dir` command line parameter, for instance:

```
flow --ecl-output-dir=foo CASENAME
```

will send the output files to the foo directory. Alternatively one can use a parameter file to define the input deck and the various parameters via:

```
flow --parameter-file=path_to_data/CASENAME.param
```

If one wishes to use the same parameter file for various cases one can use the same parameter file followed by the DATA file, for example:

```
flow --parameter-file=path_to_data/CASENAME.param CASENAME.DATA
```

If OPM Flow is installed with parallel capabilities:

```
mpirun -np 4 flow --parameter-file=path_to_data/CASENAME.param
```

will start OPM Flow on four nodes etc.

A list of command line options for this release is outlined in Table 2.1 and past releases are documented in section [APPENDIX E: RUNNING PREVIOUS RELEASES OF OPM FLOW](#).

Note

On Red Hat based distributions, including centOS distributions, one needs to install the openmpi version of the simulator, opm-simulators-openmpi-bin, via:

```
sudo yum install opm-simulators-openmpi-bin
```

and then set the MPI version to use. The way this is done is by first making the module command available, by running the following command:

```
./usr/share/Modules/init/bash
```

Then query for the installed modules with:

```
module avail
```

And lastly, you tell the system it to use openmpi with:

```
module add mpi/openmpi-x86_64
```

On Ubuntu based distributions, there is no need for this as openmpi is installed and mpirun just works.

Additional tutorials for running OPM Flow is available on OPM website in the [Tutorials](#) section.

OPM Flow accepts command line options to control various aspects of the simulator's run time behavior, as described in the table below. To give a command line option use "key=value" syntax, with no spaces around the equals sign. It is also possible to put multiple options together in a parameter file. To do so, put one option on each line of the file with ".param" as the extension and pass that filename as a command line parameter to OPM Flow using:

```
flow --parameter-file=CASENAME.PARAM
```

to instruct OPM Flow to read the parameter file.

Note

OPM Flow release 2018-10 and beyond have switched to the eWoms/ebos⁹ command line interface. Previously the simulator used only OPM Flow specific command line parameters which were internally translated to the equivalent eWoms/ebos command line parameters. The pre 2018-10 set of command line parameters are now deprecated but are still documented in section [APPENDIX E: RUNNING PREVIOUS RELEASES OF OPM FLOW](#) for backward compatibility with previous releases of the simulator.

A complete list of the active user facing command line options and their function is given in the Table 2.1 for the current release. These commands are the options listed with command line `--help` option, there is also a `--help-all` option that lists all the command line options included in the release, including obsolete, hidden and deprecated options.

⁹ eWorms is a C++ software framework concerned with fully-implicit numerical models for flow and transport in porous media. It is developed as an integral part of the Open Porous Media (OPM) initiative.

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
General eWoms/ebos Command Line Parameters			
1	-h or --help	A character string that causes OPM Flow to print a help message that gives a brief description of the available command line parameters. This now only prints the active user facing command line options.	N/A
2	--help-all	Prints all the command line options included in the release, including obsolete, hidden and depreciated options.	N/A
3	--accelerator-mode	A defined character string that defines the usage of the GPU (cusparseSolver or openclSolver) or FPGA (fpgaSolver) as the linear solver, usage '--accelerator-mode=[none cusparse opencl fpga amgcl]'.	"none"
4	--allow-distributed-wells	A boolean value set to true of false that allows the perforations of a well to be distributed to interior of multiple processes in a parallel run (true), or not (false).	false
5	--alternative-well-rate-init	A boolean value set to true of false that causes the simulator to use an alternative well rate initialization procedure (true).	true
6	--bda-device-id	Choose device ID for cusparseSolver or openclSolver, use 'nvidia-smi' or 'clinfo' commands to determine valid IDs.	0
7	--continue-on-convergence-error	A Boolean value set to true or false that instructs the simulator to continue (true) with a non-converged solution instead of giving up (false) if it encounter a time step size smaller than the minimum time step size.	false
8	--cpr-max-ell-iter	A positive integer that sets the maximum number of iterations for the elliptic pressure part of the Constrained Pressure Residual ("CPR") solver.	20
9	--cpr-reuse-setup	A positive integer that defines if the CPR solver should re-use the Amg setup. Valid options are: 0 : Recreate the pre-conditioner for every linear solve. 1 : Recreate once every time step. 2 : Recreate if last linear solve took more than 10 iterations. 3 : Never recreate.	3
10	--dbph-max-rel	A real positive value that sets maximum relative change of the bottom-hole pressure in a single iteration	1.0

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
11	--dp-max-rel	A real positive double precision value that sets the maximum allowed relative change of pressure per iteration.	0.3
12	--ds-max	A real positive double precision value that sets the maximum allowed change in saturation per iteration.	0.2
13	--dwell-fraction-max	A real positive value that sets the maximum allowed change in well's volume fraction per iteration.	0.2
14	--ecl-deck-file-name	<p>A character string that defines the name of the OPM Flow input file which contains the simulator's ECLIPSE formatted input deck to be simulated.</p> <p>Note that there must be no spaces in the filename. If there are spaces, which can typically occur on Windows based systems, then the filename should be enclosed in quotes; thus instead of FILE NAME use "FILE NAME".</p>	""
15	--ecl-enable-drift-compensation	A Boolean value set to true or false that enables (true) or disables (false) partial compensation of systematic mass losses via the source term of the next time step.	true
16	--ecl-output-double-precision	<p>A Boolean value set to true or false that switches on (true) or off (false) double precision in restart files.</p> <p>Useful for 'perfect' restarts.</p>	false
17	--ecl-output-interval	An integer value defining the number of report steps that ought to be skipped between two writes of restart files results.	-1
18	--ecl-strict-parsing	<p>A Boolean value set to true or false that switches on (true) or off (false) strict parsing mode for parsing - all errors are collected before the application exists.</p> <p>Useful for debugging initial runs.</p>	false
19	--edge-weights-method	<p>A defined positive integer value that defines the edge-weighting strategy:</p> <p>0 : For uniform, 1 : for trans, or 2 : for log(trans).</p>	1
20	--enable-adaptive-time-stepping	A Boolean value set to true or false that turns on (true) or off (false) adaptive time stepping. If set to false the report time steps provided by the input deck are used.	true

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
21	--enable-async-ecl-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to restart and summary files in the commercial simulators format.	true
22	--enable-async-vtk-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to the VTK output files.	true
23	--enable-dry-run	<p>A Boolean value set to true or false that specifies if the simulation should actually run, (true) or just check the input deck (false).</p> <p>This option is equivalent to activating the NOSIM keyword in the RUNSPEC section of the input deck (see section 5.3.92 NOSIM – Activate the No Simulation Mode for Data File Checking).</p> <p>The default value of “auto” will use whatever is stipulated in the input deck via the NOSIM keyword.</p>	“auto”
24	--enable-ecl-output	A Boolean value set to true or false that specifies if the binary output files (restart, summary files, etc.) should be written in the commercial simulator’s format (true), or OPM Flow’s format (false).	true
25	--enable-esmry	A Boolean value that switches on (true) or off (false) the output SUMMARY vectors to the ESMRY file for fast loading of summary data.	false
26	--enable-logging-fallout-warning	A Boolean value set to true or false that sets the developer option to see whether logging was on non-root processors (true). If set to true output will be appended to the *.DBG or *.PRT files.	false
27	--enable-opm-rst-file	A Boolean value set to true or false to write OPM specific data sets to the commercial simulators restart file to enable restart of an OPM Flow runs (true) by OPM Flow, or not to write the data (false).	false
28	--enable-storage-cache	A Boolean value set to true or false that turns on (true) or off (false) storing previous storage terms and avoid re-calculating them.	true
29	--enable-terminal-output	A Boolean value set to true or false that turns on (true) or off (false) high-level information about the simulation's progress to the terminal	true

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
30	--enable-tracer-model	A Boolean value set to true or false that turns on (true) or off (false) transport tracer calculations for when tracers have been declared in the input deck.	true
31	--enable-tuning	A Boolean value set to true or false that instructs OPM Flow to read the time stepping parameters from the TUNING - Numerical Tuning Control keyword in the input deck, if set to true. Note that only the first record of the TUNING keyword is processed.	false
32	--enable-vtk-output	A Boolean value set to true or false that turns on (true) or off (false) a global switch for writing VTK files.	false
33	--enable-well-operability-check	A Boolean value set to true or false that enables (true) checking of a well's operating status, or disables (false) the checking.	true
34	--enable-well-operability-check-iter	A Boolean value set to true or false that enables (true) checking of a well's operating status <u>during iterations</u> , or disables (false) the checking <u>during iterations</u> .	false
35	--enable-write-all-solutions	A Boolean value set to true or false that turns on (true) or off (false) the writing of all solutions to disk instead of only the ones for the report steps.	false
OPM Flow Specific Command Line Parameters			
36	--flow-linear-solver-verbosity	A positive integer value that defines the output from linear solver: 0 : No extra output, 1 : output per solution iteration, or 2 : output per iteration.	0
37	--flow-newton-max-iterations	A positive integer that defines the maximum number of Newton iterations per time step used by the simulator.	20
38	--flow-newton-min-iterations	A real positive value that sets the minimum number of Newton iterations per time step used by the simulator.	1
39	--force-disable-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow <u>not to print</u> the Fluid In-Place report after each report time step (true) or not (false).	false
40	--force-disable-resv-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow to <u>not to print</u> the Reservoir Volume Fluid In-Place report after each report time step (true) or not (false).	false

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
General eWoms/ebos Command Line Parameters			
41	--fpga-bitstream	A character string that specifies the bit stream file for the fpgaSolver (including path), usage: '--fpga-bitstream=<filename>'.	""
42	--full-time-step-initially	A Boolean value set to true or false that instructs OPM Flow to always attempt to finish a report step using a single time step (true) or not (false).	false
43	--ignore-keywords	A character string that defines a list of keywords which should be ignored by OPM Flow. The keyword string should be enclosed in quotes and each keyword separated by a colon, that is ':' .	""
44	--ilu-fillin-level	A positive integer value that sets the fill in level for the ILU pre-conditioner.	0
45	--ilu-redblack	A Boolean value set to true or false that instructs OPM Flow to use red-black partitioning for the ILU pre-conditioner. (true) or not (false).	false
46	--ilu-relaxation	A real positive double precision value that sets the relaxation factor of the linear solver's ILU pre-conditioner	0.9
47	--ilu-reorder-spheres	A Boolean value set to true or false that specifies OPM Flow to reorder the entries of the matrix in the red-black ILU pre-conditioner in spheres starting at an edge (true) or not (false) If false the original ordering is preserved in each color. Otherwise try to ensure D4 ordering (in a 2D structured grid, the diagonal elements are consecutive).	false
48	--initial-time-step-in-days	A real double precision value that sets the size of initial time step in days.	1.0
49	--linear-solver-ignore-convergence-failure	A Boolean value set to true or false that if set to true convergences failures in the linear solver are ignored. This option should be used with care, as the results may be unreliable.	false
50	--linear-solver-max-iter	A positive integer value that defines the maximum number of linear iterations.	200
51	--linear-solver-reduction	A real positive double precision value that sets the tolerance for the linear solver. The linear solver convergences when the residual is reduced sufficiently.	0.01
52	--linear-solver-require-full-sparsity-pattern	A Boolean value set to true or false that if set to true the simulator will produce the full sparsity pattern for the linear solver.	false

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
53	--linear-solver-restart	A positive integer value that sets the number of iterations after which GMRES is restarted.	40
54	--linsolver	<p>A defined quoted character string that sets the configuration of the solver; valid values are:</p> <ol style="list-style-type: none"> 1) ilu0 (default), 2) cpr_quasiimpes, 3) cpr_trueimpes, or 4) a file specified by the LinearSolverConfigurationJsonFile parameter. <p>The default is "ilu0".</p> <p>Alternatively one can enter a character string enclosed in quotes that defines the filename of a JSON configuration file for the flexible linear solver system. In this case the file extension should be '.json'.</p> <p>Command line parameter changed from</p> <p style="text-align: center;">--linear-solver</p> <p>to</p> <p style="text-align: center;">--lin-solver</p>	"ilu0"
55	--matrix-add-well-contributions	A Boolean value set to true or false that if set to true explicitly specifies the influences of wells between cells in the Jacobian and pre-conditioner matrices.	false
56	--max-inner-iter-ms-wells	A positive integer value that defines the maximum number of inner iterations for multi-segment wells.	100
57	--max-inner-iter-wells	A positive integer value that defines the maximum number of inner iterations for standard wells.	50
58	--max-newton-iterations-with-inner-well-iterations	A positive integer that specifies the maximum newton iterations with inner well iterations.	8.0
59	--max-pressure-change-ms-wells	A real positive value that defines the maximum relative pressure change for a single iteration of the multi-segment well model.	1.0×10^6
60	--max-residual-allowed	A real positive value that sets the absolute maximum tolerance for residuals without cutting the time step size.	1.0×10^7
61	--max-single-precision-days	A real positive value that set the maximum time step size where single precision floating point arithmetic can be used solving for the linear systems of equations.	20.0

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
62	--max-strict-iter	A positive integer that sets the maximum number of Newton iterations before relaxed tolerances are used for the CNV convergence criterion.	0
63	--max-temperature-change	A real positive value that stipulates the maximum absolute change of temperature in a single iteration.	5
64	--max-welleq-iter	A positive integer that defines the maximum number of iterations to determine the solution to the well equations.	30
65	--maximum-number-of-well-switches	A positive integer values that stipulates the maximum number of times a well can switch to the same control.	3
66	--milu-variant	<p>A defined character string that specifies which variant of the modified-ILU preconditioner ought to be used. Possible variants are:</p> <ol style="list-style-type: none"> 1) ILU (default, plain ILU), 2) MILU_1 (lump diagonal with dropped row entries), 3) MILU_2 (lump diagonal with the sum of the absolute values of the dropped row entries), 4) MILU_3 (if diagonal is positive add sum of dropped row entries. Otherwise subtract them), 5) MILU_4 (if diagonal is positive add sum of dropped row entries. Otherwise do nothing). <p>The default is "ILU"</p>	"ILU"
67	--min-time-step-based-on-newton-iterations	The minimum time step size (in days for field and metric unit and hours for lab unit) can be reduced to based on newton iteration counts.	0
68	--min-time-step-before-shutting-problematic-wells-in-days	A real positive value that sets the minimum time step size in days for which problematic wells are not shut. Time steps below this value will result in problematic wells being shut-in by the simulator.	0.01
69	--newton-max-relax	A real positive value that sets the maximum relaxation factor of a Newton iteration used by the simulator.	0.5
70	--newton-relaxation-type	A character string that defines the type of relaxation used in Newton's method, default is dampen.	"dampen"

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
71	--opencl-ilu-reorder	<p>A defined character string that selects the reordering strategy for ILU for openclSolver and fpgaSolve, and should be set to:</p> <ol style="list-style-type: none"> 1) "level_scheduling", or 2) "graph_coloring" <p>Note that "level_scheduling" behaves like Dune and cusparse; whereas, "graph_coloring" is more aggressive and is likely to be faster, but is random-based and generally increases the number of linear solves and linear iterations significantly.</p>	""
72	--opencl-platform-id	A positive integer that specifies the platform identification ("ID") for the openSolver. Use the "clinfo" command to determine valid IDs.	0
73	--output-dir	<p>A character string that defines the directory to which OPM Flow is to write the commercial simulator compatible output files (restart, summary files etc.).</p> <p>The default value results in the files be written to the same directory as the input file.</p>	""
74	--output-interval	A positive integer that specifies the number of report steps between two consecutive writes of restart data.	1
75	--output-mode	<p>A defined character string that defines the output to the *.PRT and *.DEBUG files:</p> <ol style="list-style-type: none"> 1) none: No output to the files. 2) log or false: Output logging information only. 3) all or true: Output everything. <p>For example to just output logging information use:</p> <p>--output-mode="log"</p> <p>or</p> <p>--output-mode=false</p>	"all"
76	--owner-cells-first	A Boolean value set to true or false that determines if the cells owned by a rank should be ordered before ghost/overlapping the cells (true), or not (false).	true
77	--parameter-file	A character string that defines the name of a parameter file which contains the simulator's set of run-time parameters, as listed in this table.	""
78	--pri-var-oscillation-threshold	A real positive value that defines the threshold value for the primary variable switching conditions after its meaning has switched to hinder oscillations.	1.0×10^{-5}

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
79	--print-parameters	A positive integer value that request that the <u>run</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file. 2 : Output to *.DBG and *.PRT files (default).	2
80	--print-properties	A positive integer value that request that the <u>compile</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file. 2 : Output to *.DBG and *.PRT files (default).	2
81	--project-saturations	A Boolean value set to true or false that determines if all the fluid saturations should be scaled to ensure the values are in the interval (0, 1), including runs that use solvents (true), or not (false).	false
82	--regularization-factor-msw	A real positive value that defines the "regularization factor" for multi-segment wells.	1.0
83	--relaxed-max-pv-fraction	A real positive value that defines The fraction of the pore volume of the reservoir where the volumetric error (CNV) may be violated during strict Newton iterations.	0.03
84	--relaxed-pressure-tol-msw	A real positive value that sets the relaxation tolerance for the multi-segment well <u>pressure</u> solution.	50000
85	--relaxed-well-flow-tol	A real positive value that sets the relaxation tolerance for the well flow residual.	1.0
86	--scale-linear-system	A Boolean value set to true or false that switches on (true) or off (false) the scaling of linear system of equations according to the equation scale and primary variable types.	false
87	--sched-restart	A Boolean value that determines for a restart run if the case should initialize wells and groups from the historical SCHEDULE section (true), or from the well and group data on the restart file (false). Note that the commercial simulator always uses data from the restart file (false).	true
88	--serial-partitioning	A Boolean value that determines if partitioning for parallel runs on a single process (true), or not (false).	false

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
89	--shut-unsolvable-wells	A Boolean value that determines if the simulator should shut unsolvable wells (true), or not (false).	false
90	--solve-welleq-initially	A Boolean value set to true or false that determines if the simulator should fully solve the well equations before each iteration of the reservoir model (true), or not (false). Note that the well equations are always added to the full system and solved until converged.	true
91	--solver-continue-on-convergence-failure	A Boolean value that stipulates if the simulator should continue (true) instead of stopping (false) when the minimum solver time step is reached.	false
92	--solver-growth-factor	A real positive value that specifies the allowed value a time step can be increased by, subject to the maximum allowable time step size set by the <i>--flow-solver-max-time-step-in-days</i> parameter. For example, if the current time step has converged at 10 days and <i>--flow-solver-growth-factor</i> is set to the default value, then the next time step will be $2.0 * 10$ days, that is at 20 days.	2.0
93	--solver-max-growth	A real positive value that specifies the maximum allowed value a time step can be increased by after a report time step, subject to the maximum allowable time step size set by the <i>--flow-solver-max-time-step-in-days</i> parameter.	3.0
94	--solver-max-restarts	A positive integer that defines the number of allowed consecutive restarts (or time step chops) before the simulation is terminated.	10
95	--solver-max-time-step-in-days	A real positive double precision value that specifies the maximum allowed time step size in days.	365
96	--solver-min-time-step	A real positive double precision value that specifies the minimum size of a time step in seconds. If a step cannot converge without getting cut below this step size the simulator will stop.	1.0×10^{-12}
97	--solver-restart-factor	A real positive double precision value that sets the time step chop factor of the time step after a convergence failure. For example, if the current non-convergent time step is 30 days and <i>--flow-solver-restart-factor</i> is set to the default value, then the time step will be repeated using $0.33 * 30$ days as the time step, that is 9.9 days.	0.33

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
98	--solver-verbosity	A positive integer that specifies the "chattiness" of the non-linear solver.	1
99	--strict-inner-iter-wells	A positive integer that specifies the number of inner well iterations with strict tolerance.	40
100	--strict-outer-iter-wells	A positive integer that specifies the number of newton iterations for which wells are checked with strict tolerance.	99
101	--temperature-max	A real positive value that sets the maximum absolute temperature.	400
102	--temperature-min	A real positive value that sets the minimum absolute temperature.	280
103	--threads-per-process	A positive integer value that stipulates the maximum number of threads to be instantiated per process ('-1' means 'automatic').	-1
104	--time-step-after-event-in-days	A real double precision value that sets maximum allowed time step after an event; for example, when a well is open or closed etc. The default value of -1 means that events to do effect the time stepping.	-1
105	--time-step-control	A defined character string that defines the time stepping control algorithm and is set to one of the following: <ul style="list-style-type: none"> 1) pid: PID controller based adaptive time step control as suggested by Turek and Kuzmin¹⁰. 2) pid+iteration: Use PID and linear iteration numbers to guide the time step. 3) pid+newtoniteration: Use PID and non-linear iterations numbers to guide the time step. 4) Hardcoded: Use time steps supplied by user via the time-step-control-filename parameter. 	"pid+newtoniteration"
106	--time-step-control-decay-damping-factor	A real positive value that specifies the decay rate a <u>time step</u> can be decreased by after the number target iterations has been exceeded	1.0
107	--time-step-control-decay-rate	A real positive value that specifies the decay rate a <u>time step size</u> can be decreased by after the number of target iterations has been exceeded	0.75

¹⁰ Algebraic Flux Correction III. Incompressible Flow Problems. Uni Dortmund, Turek and Kuzmin, January, 2006 (DOI: 10.1007/3-540-27206-2_8)

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
108	--time-step-control-file-name	<p>A character string enclosed in quotes that specifies a filename where time steps are specified. The default is the character string <code>timesteps</code></p> <p>For instance time steps can be generated by the <code>ecl_summary</code> application in <code>libecl</code> as per the following UNIX command line:</p> <pre>path_to_libecl_application s/ecl_summary DECK TIME > filename</pre> <p>Where:</p> <ul style="list-style-type: none"> <code>DECK</code> is the name of the data deck you want to get the time steps from, <code>TIME</code> tells the application to return the timing for the run, and "filename" is the name of the file the times are piped to. 	"timesteps"
109	--time-step-control-growth-damping-factor	A real positive value that specifies the growth rate of the <u>time step increase</u> when the number of target iterations are undercut.	3.2
110	--time-step-control-growth-rate	A real positive value that specifies the growth rate of the <u>time step size</u> when the number of target iterations are undercut.	1.25
111	--time-step-control-target-iterations	A positive integer that defines the number of linear iterations which the time step control scheme should aim for (if applicable).	30
112	--time-step-control-target-newton-iterations	A positive integer that specifies the number of Newtonian iterations which the time step control scheme should aim for (if applicable).	8
113	--time-step-control-tolerance	A real double precision value that sets the tolerance for PID (only used with the <code>pid</code> and <code>pid+</code> options defined by the <code>--time-step-control</code> option).	0.1
114	--time-step-verbosity	A positive integer that specifies the "chattiness" during the time integration.	1
115	--tolerance-cnv	A real positive double precision value that specifies the maximum non-linear tolerance error. This is the local convergence tolerance (maximum of local saturation errors).	0.01
116	--tolerance-cnv-relaxed	A real positive value that defines the relaxed local convergence tolerance that applies for iterations after the iterations with the strict tolerance.	1.0

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
I 17	--tolerance-mb	A real positive double precision value that sets the maximum mass balance error, that is the tolerated mass balance error relative to total mass present.	1.0×10^{-6}
I 18	--tolerance-pressure-ms-wells	A real positive double precision value that specifies the tolerance for the pressure equations for multi-segment wells.	1000
I 19	--tolerance-well-control	A real positive double precision value that sets the maximum tolerance for the well control equations.	1.0×10^{-7}
I 20	--tolerance-wells	A real positive double precision value that defines the maximum non-linear error for the well equations.	1.0×10^{-4}
I 21	-update-equations-scaling	A Boolean value that switches on (true) or off (false) the updating of the scaling factors for mass balance equations during the simulation.	false
I 22	--use-gmres	A Boolean value that when set to true OPM Flow will use Generalized Minimal Residual ("GMRES") solver instead of Biconjugate Gradient Stabilized ("BiCGSTAB") as the linear solver within the Newton iterations.	false
I 23	--use-multisegment-well	A Boolean value that when set to true the simulator will use the well model for multi-segment wells instead of the one for single-segment wells.	true
I 24	--use-update-stabilization	A Boolean value set to true or false that switches on (true) or off (false) the stabilized Newton option, that attempts to detect and correct oscillations or stagnation during the Newton iterations. This option may improve convergence for some cases.	true
I 25	--vtk-write-diffusion-coefficients	A Boolean value that switches on (true) or off (false) the output of the molecular diffusion coefficients to the VTK ^{II} output files.	false
I 26	--vtk-write-effective-diffusion-coefficients	A Boolean value that switches on (true) or off (false) the output of the effective molecular diffusion coefficients for the medium to the VTK output files.	false
I 27	--vtk-write-tortuosities	A Boolean value that switches on (true) or off (false) the output of the tortuosity for each phase to the VTK output files.	false

^{II} Virtualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

OPM Flow 2021-10 Command Line Options			
No.	Variable Name	Description	Default
128	--zoltan-imbalance-tol	A real positive that defines the tolerable imbalance of the load balancing provided by Zoltan package.	1.1
<p>Notes:</p> <ol style="list-style-type: none"> Cells colored green in the No. column are new command line parameters for this release. Similarly for the Default column, cells colored green indicate the default value has changed from the previous release. Items shaded in gray are considered to be developer options that should be used with caution as the values associated with these command line parameters are subject to change. VTK Graphics Command Line Parameters¹² set of commands are no longer listed via the basic help command line command: <pre>flow --help</pre> instead use: <pre>flow --help-all</pre> to get a list of supported command line Parameters. The --enable-vtk-output option above, if set to "true" will write out the data as stipulated by the compile options. One may need to compile the source code to obtain the desired output. As per all UNIX and LINUX based system the input is case dependent. If a parameter file is used to set one of the above parameters, the leading "--" should <u>not</u> be incorporated in the parameter file. 			

Table 2.1: OPM Flow 2021-10 Command Line Options

As per all UNIX and LINUX based system the input is case dependent. The command line parameters must either be entered as lower case or CamelCase, for example:

```
flow --enable-dry-run=false CASENAME.DATA
```

or:

```
flow --EnableDryRun=false CASENAME.DATA
```

If a parameter file is used to set one of the above parameters, the leading "--" should not be incorporated in the parameter file, for example on the command line use

```
flow --enable-dry-run=false CASENAME.DATA
```

but in the parameter file use:

```
ecl-deck-file-name=CASENAME.DATA
```

```
enable-dry-run=false
```

or:

```
EclDeckFileName=CASENAME.DATA
```

```
EnableDryRun=false
```

OPM Flow prints out the command line run time and compile time parameters in CamelCase in both the *.PRT and *.DBG files for reference, one can therefore use this as basis for creating additional run specific parameter files.

¹² Virtualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

Note

It is worth considering having a parameter file for each run of the form CASENAME.param, in order to re-run a case and to use the same parameters for other cases.

Example

The following example is taken for the Norne project and the comments in the example (preceded with “/#”) explain the parameter setting used in the file.

```
# -----  
# INPUT AND OUTPUT OPTIONS  
# -----  
#  
# Input File  
#  
ecl-deck-file-name=NORNE_ATW2013.DATA  
#  
# Output and Output Directory  
#  
output-dir='\"$HOME\\OPM\\NORNE\\'  
#  
# -----  
# NEWTON SOLVER PARAMETER  
# -----  
#  
# Define Numerical Tolerances  
#  
tolerance-cnv=1e-2  
tolerance-mb=1e-5  
tolerance-wells=1e-2  
#  
# Set Min Newtonian Solver iterations to 1 and Max to 15  
#  
flow-newton-min-iterations=1  
flow-newton-max-iterations=15  
#  
# -----
```

Notice that the leading “--” have not be incorporated in the parameter file, as per the notes in Table 2.1.

In order to use the above parameter file called one would use the following format:

```
flow --parameter-file=CASENAME.PARAM
```

If the above parameter file was called NORNE_ATW2013.PARAM, then the command would be:

```
flow --parameter-file=NORNE_ATW2013.PARAM
```

or:

```
flow --ParameterFile=NORNE_ATW2013.PARAM
```

2.3 RUNNING OPM FLOW USING OPMRUN

This section briefly describes how to run the OPM Flow simulator using the Graphical User Interface (“GUI”) program called OPMRUN, a more detailed description is given in [APPENDIX C: OPMRUN – FLOW JOB SCHEDULER](#), that also describes the various tools included with OPMRUN. The program is written in Python 3 and has been tested under Ubuntu-Mate 20.04 TLS. The software can be downloaded from the following link:

<https://github.com/OPM/opm-utilities/tree/master/opmrunk>

The intent is to develop a graphical user interface to OPM Flow that has similar functionality to the commercial simulator’s program, with the targeted audience being Reservoir Engineers in a production environment. Developers and experienced Linux users will already have compatible work flows. OPMRUN enables the editing and management of OPM Flow’s run time parameters, setting up job queues to run a series of simulation jobs sequentially, as well as the management of the job queues. Figure 2.10 shows the initial display.

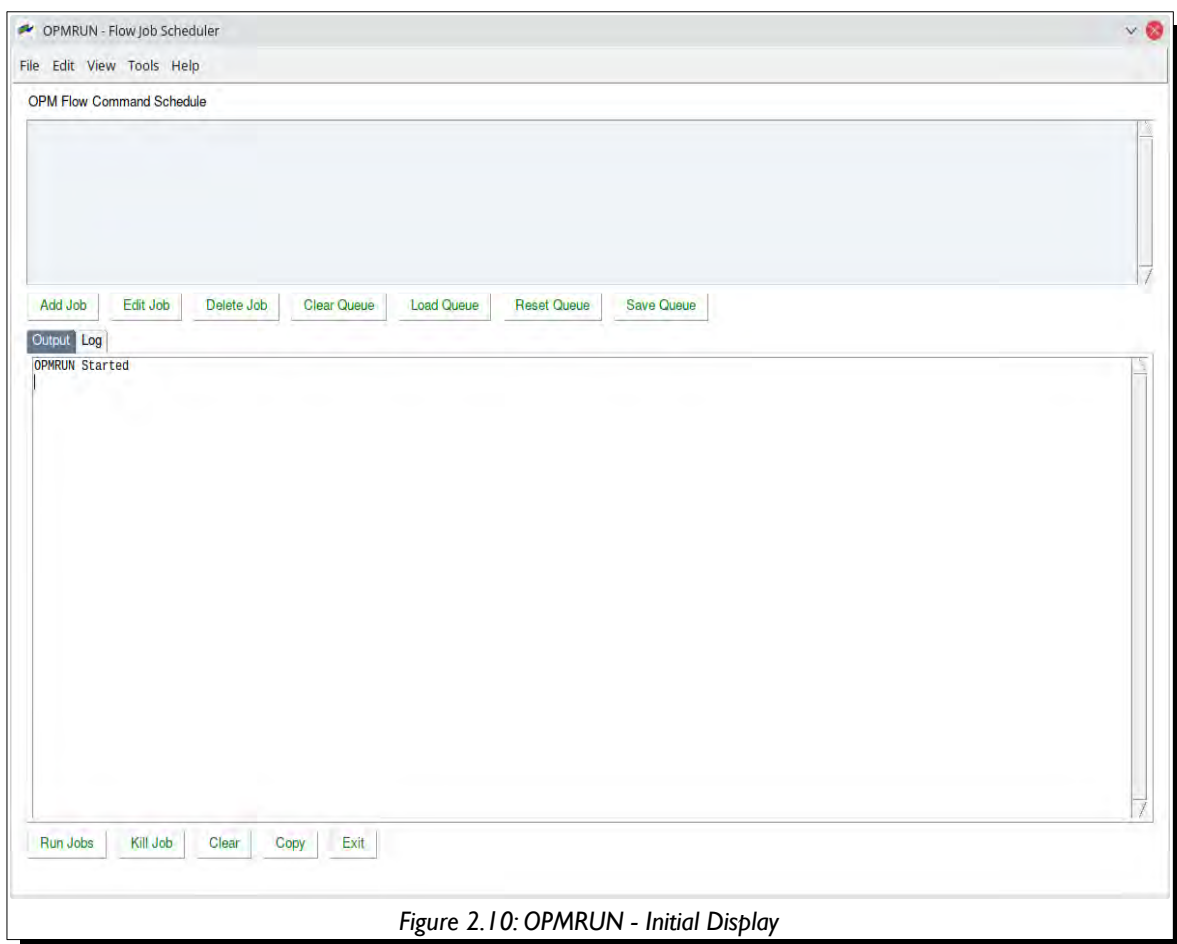


Figure 2.10: OPMRUN - Initial Display

Upon launch the program runs OPM Flow to get a list of command line parameters from the current version of OPM Flow. These default parameters can be edited for each case, or alternative default parameter sets can be loaded from an existing parameter file from another job, or a *.PRT file from a completed simulation.

As can be seen in Figure 2.11 the program has upper and lower display elements. The upper element shows a list of simulation jobs that are in the job queue and the lower element consists of two elements, one for the OPM Flow Output (the terminal output from OPM Flow) and a second element (OPM Run Log) that is a session log of the jobs run by OPMRUN. Clicking the OPM Flow Output and OPM Run Log tabs switches the display on the lowered element between two display types.

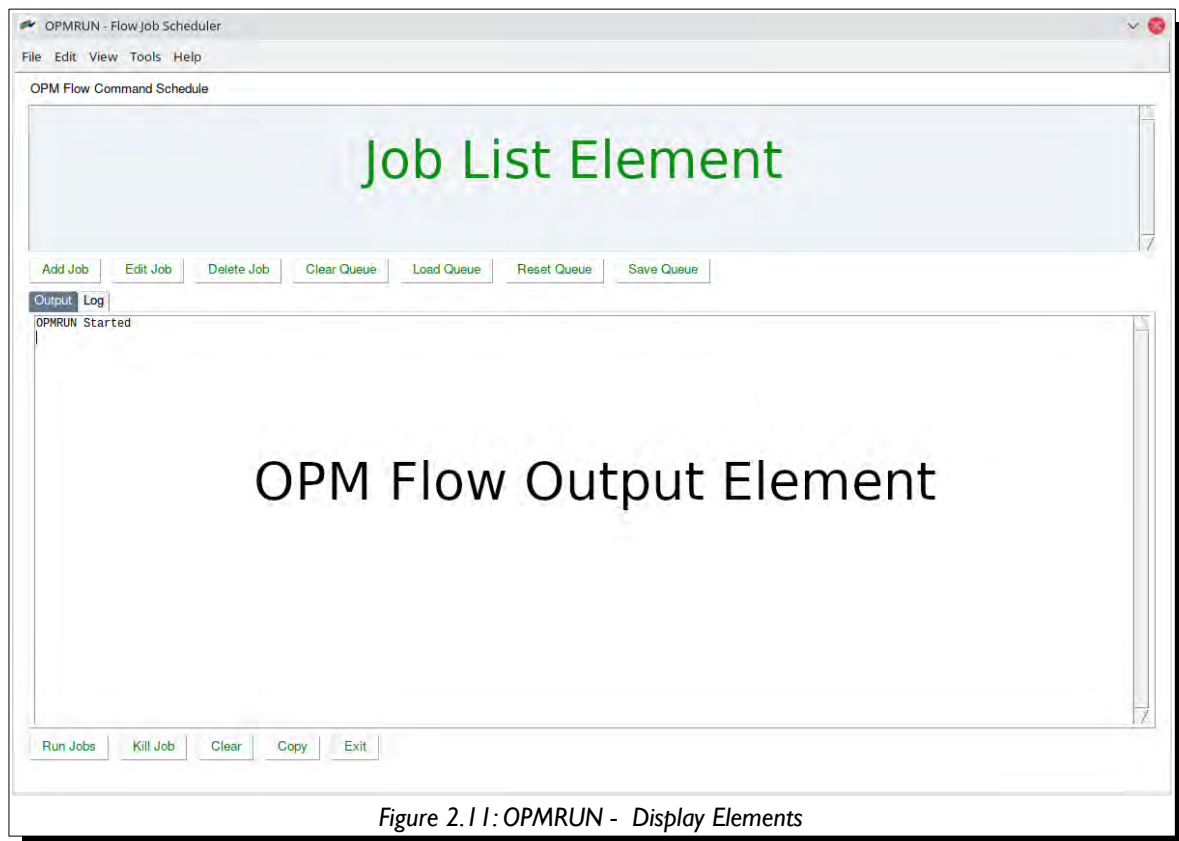


Figure 2.11: OPMRUN - Display Elements

To add jobs to the queue use the Add Job button or load an existing job queue using the Load Queue button. Jobs can be edited or deleted from the queue using the Edit Job and Delete Job buttons, and a series of jobs can be saved as a job queue by using the Save Queue button. The Clear Queue button deletes all jobs from the queue.

Pressing the Add Job button will display the following dialogue box:

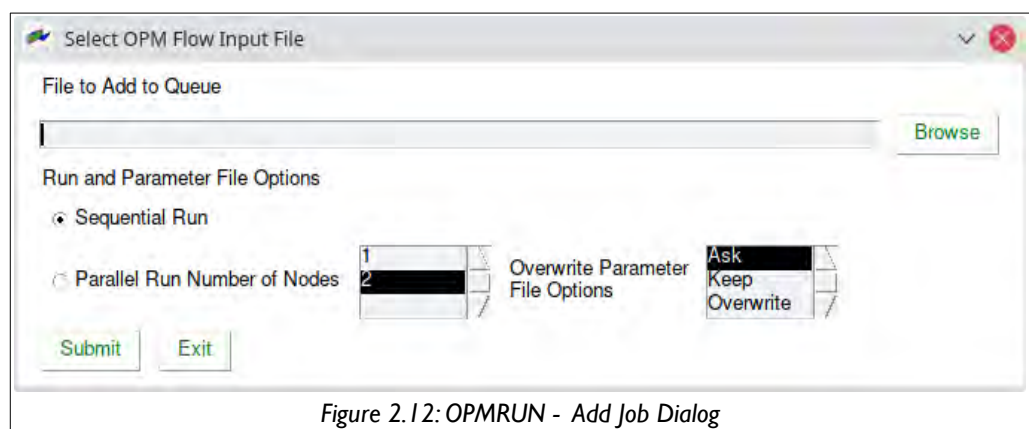


Figure 2.12: OPMRUN - Add Job Dialog

Use the *Browse* button to select the input file to add to the queue, then select the Run Parameters for this input file, then press the Submit button to add the input file to the job queue.

The *Overwrite Parameter File Options* allow for different default treatments of existing *.PARAM files, which is particularly useful when adding multiple jobs at the same time. The reason for this is because different versions of OPM Flow have different parameter sets and if a newer version of OPM Flow runs with a previous version's *.PARAM file then the simulator will stop with an error message for the various invalid

parameters for the current version of the simulator. To load a previously saved job queue, press the *Load Queue* button this will display a dialog box allowing the user to select a queue file (*.que), after pressing the *OK* button the jobs will be displayed in the *Job List Element* as illustrated in Figure 2.13.

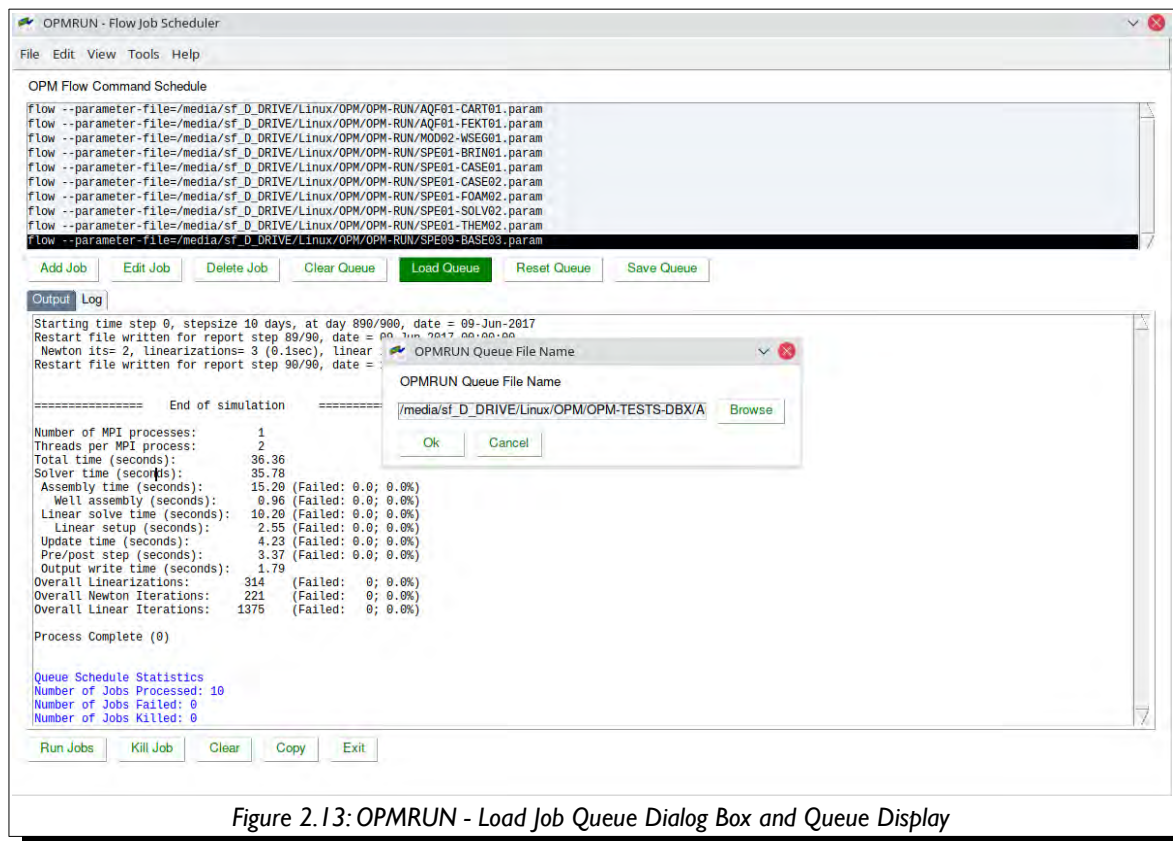



Figure 2.13: OPMRUN - Load Job Queue Dialog Box and Queue Display

Jobs in the queue can be edited by selecting the *Edit Job* button that will display two options: one to edit the input file using the defined editor and the second to edit the OPM Flow Parameter File. If the second option is selected OPMRUN will display a dialog box that shows a list of the OPM Flow command line parameters together with the parameter help information (Figure 2.14). Selecting a parameter from the list and selecting the *Edit* button will display the setting for the selected parameter (alternatively one can double click the required entry). One can then edit the parameter as required. Use the *Save* button to save the change and use the *Exit* but to save all the changes to the parameter file. The *Cancel* button will cancel all changes to the parameter file.


Alternatively one can use the:

- 1) Edit OPM Flow Parameter menu option to edit the parameter file for a job.
- 2) List OPM Flow Parameters menu option to list the commands in the parameter file for a job.
- 3) Set OPM Flow Default Parameters to set the default parameters for all subsequent jobs added to the queue. This option allows the user to load a default set of parameters from (1) OPM Flow, (2) an OPM Flow Parameter File, or (3) an OPM Flow print file (*.PRT).

One can also right-click on a job in the *Job List Element* and select one of the available options.

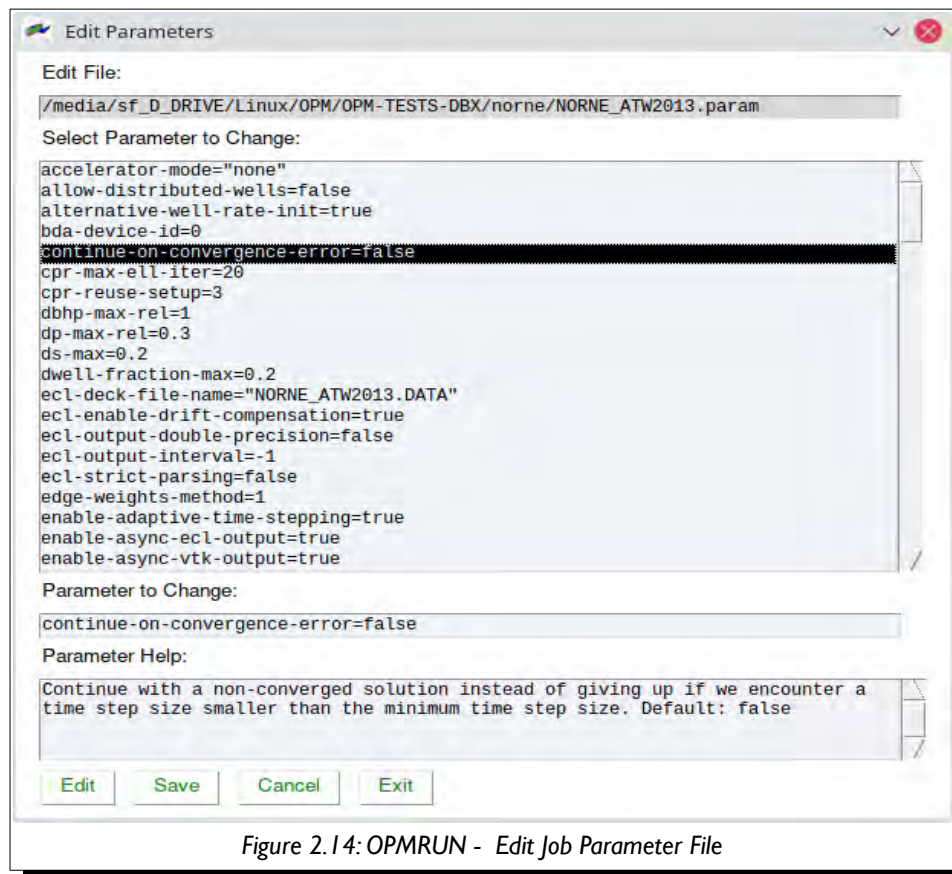

Selecting the Run Jobs button displays the Select Run Option dialog box shown in Figure 2.15.

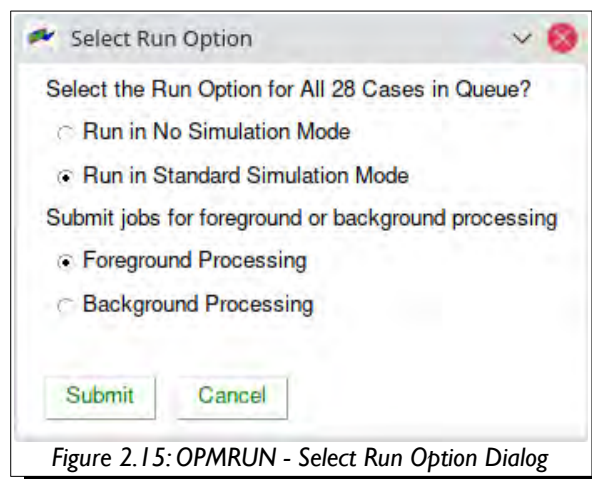

The Run in No Simulation Mode option is equivalent to setting the NOSIM option in the input deck for all jobs in the queue (see section 5.3.92 [NOSIM – Activate the No Simulation Mode for Data File Checking](#) and the `–enable-dry-run` command line parameter in Table 2.1 in section 2.2 [Running OPM Flow 2019-04 From The Command Line](#)). This allows for checking all the jobs at once.

Selecting Run in Standard Simulation Mode will run all the jobs in the queue sequentially, with the OPM Flow terminal output directed to OPM Flow Output Element, as shown in Figure 2.16. The terminal output is also directed to a *.LOG file as well, similar to what the commercial simulator does.


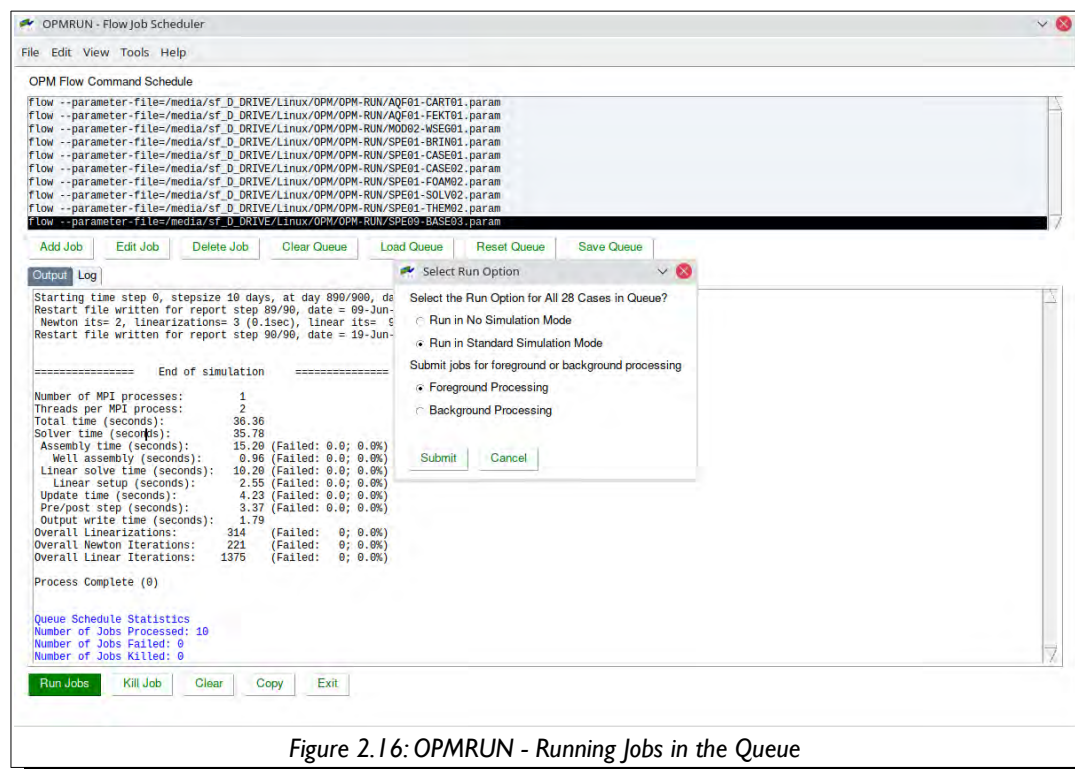


Figure 2.16: OPMRUN - Running Jobs in the Queue

Clicking the OPM Run Log tab displays the OPMRUN's session log file that records the time and date of the major events that have occurred, including the start and end times of each run. Notice also how OPMRUN deletes all the existing output files for a given job, if they exists, before running OPM Flow.

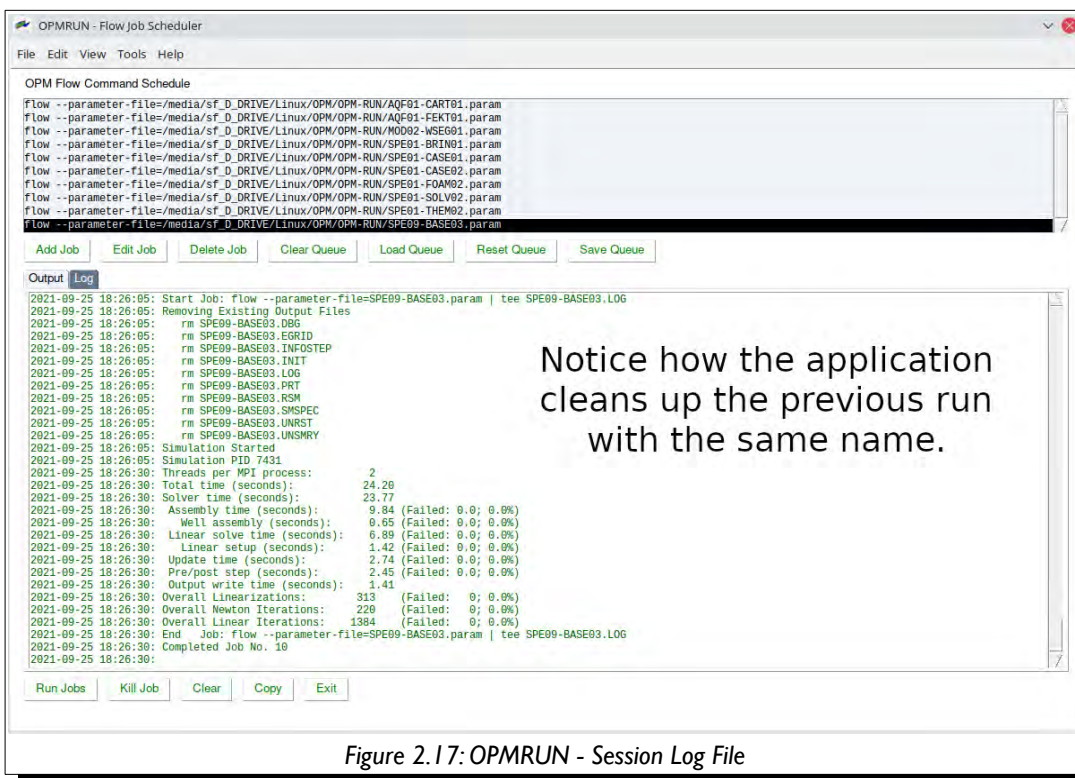

Notice how the application cleans up the previous run with the same name.

Figure 2.17: OPMRUN - Session Log File

The *Kill* button will ask the user if the current running job should be killed, and if the job is to be killed, the application will prompt as whether or not all the jobs in the queue should be killed.

The *Clear* clears the OPM Flow Output Element from the currently displayed tab (*Output* or *Log*) and the *Copy* button copies the data to the clipboard.

Finally, an example *.param file generated by OPMRUN for the 2021-10 release is shown below and on the following pages for reference:

```
#
# OPMRUN Parameter File
#
# File Name   : "/media/sf_D_DRIVE/Linux/OPM/Fields/Norne/Model/NOR01-BASE01-
R01.param"
# Created By  : david
# Date Created: 2021-10-19 18:05:23
#
accelerator-mode="none"
allow-distributed-wells=false
alternative-well-rate-init=true
bda-device-id=0
continue-on-convergence-error=false
cpr-max-ell-iter=20
cpr-reuse-setup=3
dbhp-max-rel=1
dp-max-rel=0.3
ds-max=0.2
dwell-fraction-max=0.2
ecl-deck-file-name="NOR01-BASE01-R01.DATA"
ecl-enable-drift-compensation=true
ecl-output-double-precision=false
ecl-output-interval=-1
ecl-strict-parsing=false
edge-weights-method=1
enable-adaptive-time-stepping=true
enable-async-ecl-output=true
enable-async-vtk-output=true
enable-dry-run="auto"
enable-ecl-output=true
enable-esmry=false
enable-logging-fallout-warning=false
enable-opm-rst-file=false
enable-storage-cache=true
enable-terminal-output=true
enable-tracer-model=true
enable-tuning=false
enable-vtk-output=false
enable-well-operability-check=true
enable-well-operability-check-iter=false
enable-write-all-solutions=false
flow-linear-solver-verbosity=0
flow-newton-max-iterations=20
flow-newton-min-iterations=1
force-disable-fluid-in-place-output=false
force-disable-resv-fluid-in-place-output=false
fpga-bitstream=""
full-time-step-initially=false
ignore-keywords=""
ilu-fillin-level=0
ilu-redblack=false
ilu-relaxation=0.9
ilu-reorder-spheres=false
initial-time-step-in-days=1
linear-solver-ignore-convergence-failure=false
linear-solver-max-iter=200
```

```
linear-solver-reduction=0.01
linear-solver-require-full-sparsity-pattern=false
linear-solver-restart=40
linsolver="ilu0"
matrix-add-well-contributions=false
max-inner-iter-ms-wells=100
max-inner-iter-wells=50
max-newton-iterations-with-inner-well-iterations=8
max-pressure-change-ms-wells=1e+06
max-residual-allowed=1e+07
max-single-precision-days=20
max-strict-iter=0
max-temperature-change=5
max-welleq-iter=30
maximum-number-of-well-switches=3
milu-variant="ILU"
min-time-step-based-on-newton-iterations=0
min-time-step-before-shutting-problematic-wells-in-days=0.01
newton-max-relax=0.5
newton-relaxation-type="dampen"
opencl-ilu-reorder=""
opencl-platform-id=0
output-dir=""
output-interval=1
output-mode="all"
owner-cells-first=true
parameter-file=""
pri-var-oscillation-threshold=1e-05
print-parameters=2
print-properties=2
project-saturations=false
regularization-factor-msw=1
relaxed-max-pv-fraction=0.03
relaxed-pressure-tol-msw=50000
relaxed-well-flow-tol=1
scale-linear-system=false
sched-restart=true
serial-partitioning=false
shut-unsolvable-wells=false
solve-welleq-initially=true
solver-continue-on-convergence-failure=false
solver-growth-factor=2
solver-max-growth=3
solver-max-restarts=10
solver-max-time-step-in-days=365
solver-min-time-step=1e-12
solver-restart-factor=0.33
solver-verbosity=1
strict-inner-iter-wells=40
strict-outer-iter-wells=99
temperature-max=400
temperature-min=280
threads-per-process=-1
time-step-after-event-in-days=-1
time-step-control="pid+newtoniteration"
time-step-control-decay-damping-factor=1
time-step-control-decay-rate=0.75
time-step-control-file-name="timesteps"
time-step-control-growth-damping-factor=3.2
time-step-control-growth-rate=1.25
time-step-control-target-iterations=30
time-step-control-target-newton-iterations=8
time-step-control-tolerance=0.1
time-step-verbosity=1
tolerance-cnv=0.01
```

```
tolerance-cnv-relaxed=1
tolerance-mb=1e-06
tolerance-pressure-ms-wells=1000
tolerance-well-control=1e-07
tolerance-wells=0.0001
update-equations-scaling=false
use-gmres=false
use-multisegment-well=true
use-update-stabilization=true
vtk-write-diffusion-coefficients=false
vtk-write-effective-diffusion-coefficients=false
vtk-write-tortuosities=false
zoltan-imbalance-tol=1.1
#
# End of Parameter File
```

In the above example, all the default parameters have be used.

In addition to the functionality described in this section, the application has various additional features accessible through the application's menus including:

- 1) Configuring OPMRUN various options, default editor, default terminal console for background jobs, setting default project directories, etc.
- 2) Various additional simulation input generation and conversion utilities are available including:
 - Compressing a job to save space (DATA, and all OPM Flow output files) and uncompressing previously compressed jobs.
 - Keywords, a keyword generator based on the Apache Velocity Template Language ("VTL"). The templates can therefore also be used with any editor that supports VTL, jEdit for example. There is one template per keyword, with the formatting the same as the OPM Flow manual. Over 450 templates are currently implemented. One can also customize the existing templates as well as creating User defined templates. The keywords are examples, one still has to edit the resulting deck with the actual required data, but the format with comments should make this a straight forward process.
 - A Production Schedule application that takes a comma delimited CSV file containing historical production and injection data and converts the data to an OPM Flow SCHEDULE file using the WCONHIST series of keywords. Currently only production data is supported.
 - Sensitivities application that generates sensitivity cases based on a "Base" case file. The Base file contains "Factors" (variable names), \$X01, \$X02, etc., that are substituted with user defined values using the data entered and the type of Sensitivity Scenario selected.
 - A Well Specification application that uses the standard well export files from OPM ResInsight to reformat the data in a more user-friendly manner for the WELSPECS and COMPDAT keywords. Optionally, the application can generate the COMPLUMP keyword based on the OPM ResInsight layers file, with one completion per defined reservoir layer.
 - Calling OPM ResInsight and loading the currently selected job into OPM ResInsight for viewing.
 - A Well Trajectory Conversion application that converts a Schlumberger Petrel exported well trajectory file into an OPM ResInsight file, containing all the wells.


All the aforementioned options and tools are described in detail in APPENDIX C:OPMRUN – FLOW JOB SCHEDULER,

CHAPTER 3: KEYWORD DOCUMENTATION STRUCTURE

3.1 INTRODUCTION


The OPM Flow manual is constructed in a manner to enable the reader to reference various parts of the document by using the table contents or by simply pressing on a link embedded in the text. This automatic cross referencing has been extensively employed to ensure effective documentation of the keywords used by the simulator.

There are several key features that can be used to navigate the manual in an efficient manner. The first is the “footer” which can be used to move to various sections in the manual. For example the “Table of Contents” footer shown below:

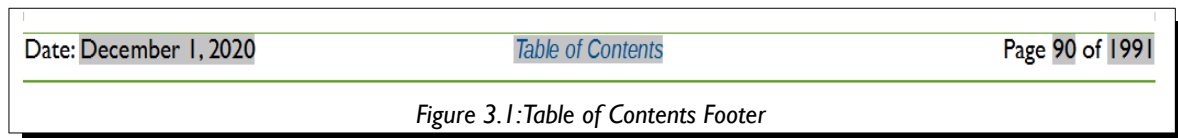


Allows the reader to move to the Table of Contents by clicking on the link (highlighted in italic blue text on a gray background in Figure 3.1). Note also that the entries in the table of contents are also “clickable” enabling the reader to move to the desired entry.

The second type of footer is the “Keyword Index” footer that also contains the Table of Contents link mentioned above. This footer is illustrated in Figure 3.2 and is displayed on a keyword definition page.

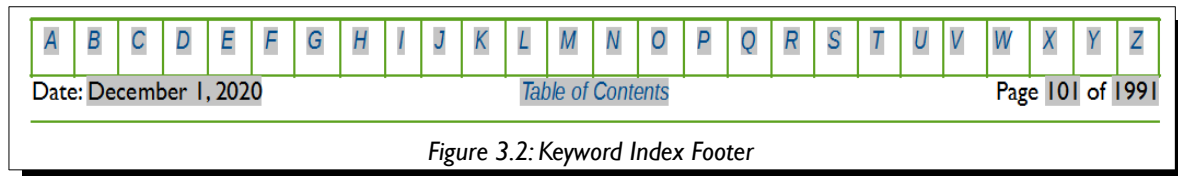

Clicking on a letter (highlighted in italic blue text on a gray background in) takes the reader to an alphabetic listing of all the keywords beginning with the selected letter (Figure 3.3).

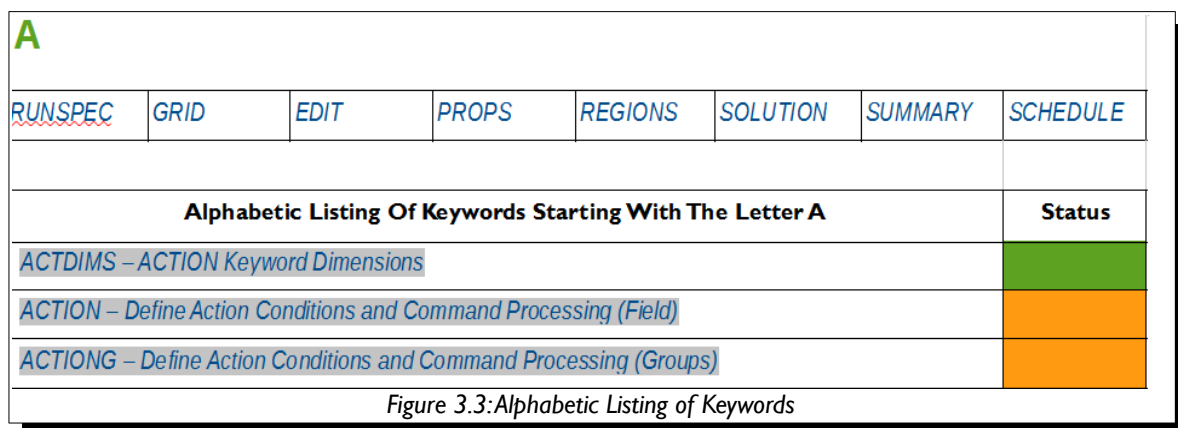

The list is color coded, so one instantly knows what keywords are implemented, with green colored cells indicating the keyword is available and is mostly or fully implemented. Cells colored orange show that keyword is recognized but not implemented in OPM Flow. Finally, cells colored red mean that keyword is available in the commercial simulator but has not been implemented in OPM Flow, and may cause an error if used in the input deck. Clicking on a keyword in the list it will move the reader to the keyword definition. Note also that clicking one of the section names, RUNSPEC, GRID, etc., in Figure 3.3, will take the reader to the beginning of the selected section.

Finally, in the PDF version of the manual if one displays the "bookmarks" in the PDF reading software one can jump to a particular keyword or section without having to scroll up or down.

3.2 KEYWORD DEFINITIONS

Each keyword is defined in it's own section that contains a section header, that contains the keyword name in capital letters followed by a brief description of the keyword's function. This is then followed by *Keyword Table Section* which defines the status of the keyword and which sections of the input deck the keyword can be utilized. Table 3.1 illustrates a typical *Keyword Table Section* defining the keyword status with the various OPM Flow sections.

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Table 3.1: Example Keyword Table Section

The cells are colored in such a manner as to quickly indicate to the reader the keyword's section availability and function availability, with **green** colored cells indicating the keyword is available for this section and is mostly or fully implemented. Cells colored gray indicate that keyword cannot be used in that particular section, and cells colored **orange** show that cell is only partially implemented within OPM Flow, for example OPM Flow may simply just recognize the keyword and ignore the keyword's function. Finally, cells colored **red** mean that keyword is available in the commercial simulator but has not been implemented in OPM Flow. In this scenario the keyword should not be used in OPM Flow as it will result in unpredictable results, including causing the simulator to abort or throw an exception.

3.3 MULTI-SECTION KEYWORDS

As there are numerous keywords that can be used within multiple OPM Flow sections of the input file, for example the **ADD** and **EQUALS** keywords, there is a need to avoid duplication of the keyword definitions but at the same time attempt to define only those keywords for a given section. Thus for multi-section keywords, the keyword is defined in the first available section that the keyword can be found. The *Keyword Table Section* as shown below for the **ADD** keyword below, indicates which sections the keyword can be utilized.

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Table 3.2: ADD Keyword Table Section

Here the keyword can be used in the GRID, EDIT, PROPS, REGIONS and SOLUTION sections as indicated by those cells colored **green** and not for the cells colored in light gray. In subsequent sections that the keyword can be used, there is a brief description description with a link to the full description of the keyword, as shown below for the **ADD** keyword.

The **ADD** keyword adds a constant to a specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the **ADD** keyword is being applied. See [ADD – Add a Constant to a Specified Array](#) in the GRID section for a full description.

A complete list of keywords in alphabetic order is given in section [APPENDIX A: KEYWORD INDEX - ALPHABETIC LISTING](#) and clicking on a specific keyword will take the reader to the keyword definition in a particular section.

3.4 KEYWORD FORMATS

All keywords in OPM Flow should be entered in capital case and start in column one, lowercase entry of keywords will produce errors and keywords not starting in column one will not be recognized. There are five types of keyword format types used by OPM Flow for data input. The description of the five types is given in the next three sections together with some examples.

3.4.1 KEYWORD FORMAT TYPE – COMMENT

Comments in the input deck can occur anywhere in the file and are preceded by “--” in columns one and two, for example for the EQL keyword:

```
--
--      MAX      MAX      RSVD      TVDP      TVDP
--      EQLNUM    DEPTH    NODES    TABLE    NODES
EQLDIMS
      9          1*       20        1*        1*
/
```

In addition, comments can be placed after “/” that terminates a record entry as shown below;

```
--
-- -- ARRAY      CONSTANT -- ----- BOX -----
--                               I1  I2   J1  J2   K1  K2
MULTIPLY
  'PERMZ'      0.50000      1*  1*   1*  1*   1*  1* / PERMZ * 0.5
/
```

3.4.2 KEYWORD FORMAT TYPE – ACTIVATION

This type of keyword format only consists of the keyword itself and is usually used to invoke a feature or to switch on or off a processing feature. The keyword is documented by describing the functionality or action the keyword performs, followed by an example. Examples of this type of keyword include API (to switch on API tracking), GAS (to activate the gas phase in the model), ECHO (to switching echoing of the input file to the output file), and SKIP (for skipping parts of the input deck). For example the GAS keyword in the RUNSPEC section would be described as:

Description

This keyword indicates that the gas phase is present in the model and must be used for oil-gas, gas-water, oil-water-gas input decks that contain the gas phase. The keyword will also invoke data input file checking to ensure that all the required gas phase input parameters are defined in the input deck.

There is no data required for this keyword.

Example

```
--
--      GAS PHASE IS PRESENT IN THE RUN
--
GAS
```

The above example declares that the gas phase is active in the model.

3.4.3 KEYWORD FORMAT TYPE - VECTOR (ROW VECTOR)

Vector based keywords consist of the keyword followed by a vector of parameters on a separate line and may consists of multiple lines of vectors with each line representing a data set (see the second example for this type of vector keyword). The vector may contain integer, real and character parameters depending on the keywords requirements. This type of keyword is documented by describing the functionality or action the keyword performs, a table describing the parameters associated with the keyword, followed by one or two examples on how to use the keyword. For example the DIMENS keyword in the RUNSPEC section would be described as:

Description

DIMENS defines the dimensions of the model entered as integer vector. The keyword can be used with all grid types.

No.	Name	Description	Default
1	NX	The number of grid blocks in the x direction for Cartesian grids or the number of grid blocks in the r direction for radial grids	None
2	NY	The number of grid blocks in the y direction for Cartesian grids or the number of grid blocks in the theta direction for radial grids.	None
3	NZ	The number of grid blocks in the z direction for both Cartesian and radial grids.	None

Notes:

- 1) The keyword is terminated by a "/".

Table 3.3: DIMENS Keyword Description

Note that NX, NY and NZ are **not maximum** values but the actual size of the grid. OPM Flow applies these parameters when reading in particular data sets. For example if NX, NY, and NZ are set to 10, 10 and 10 respectively, then for the grid property data like PORO; OPM Flow expects to read in 10 x 10 x 10 or 1,000 porosity values for the PORO array. If the number of porosity values is not equal to 1,000 then OPM Flow will produce an error.

Example

```
--
--      MAX      MAX      MAX
--      NDIVIX  NDIVIY  NDIVIZ
DIMENS
      46      112      22      /
```

The above example defines the dimensions for the Norne model of 36 cells in the x direction, 122 cells in the y direction and 22 cells in the z direction.

For vector keywords that have parameters associated with units then there is a slightly different table format to that used above to take into account the documenting the defaults for the three sets of units supported by OPM Flow, for example for the ROCK keyword is describe as follows:

Description

ROCK defines the rock compressibility for various regions in the model. The number of ROCK vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the ROCK tables to different grid blocks in the model is done via the PVTNUM keyword in the REGION section. One data set consists of one record or line which is terminated by a "/". This keyword must be defined in the OPM Flow input deck.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	Pref	Pref is a real number defining the reference pressure for the other parameters for this data set.			Default
		psia 1.032	barsa 1.032	atma 1.032	
2	Cf	Cf is a real number defining the rock compressibility at the reference pressure, Cf(Pref) and is defined as: $C_f = -\frac{1}{V} \left(\frac{dV}{dP} \right)$			Defined
		l/psia 0.0	l/barsa 0.0	l/atma 0.0	

Notes:

- 1) The each data set terminated by terminated by a "/" at the end of the line, **there is no terminator for the keyword.**

Table 3.4: ROCK Keyword Description

Example

The following shows the PVTW keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to one.

```
--
-- ROCK COMPRESSIBILITY
--
-- (1) REFERENCE PRESSURE IS TAKEN FROM THE HCPV WEIGHTED RESERVOIR PRESSURE
--     AS THE PORV IS ALREADY AT RESERVOIR CONDITIONS (FLOW USES THE REFERENCE
--     PRESSURE) TO CONVERT THE GIVEN PORV TO RESERVOIR CONDITIONS USING THE DATA
--     ON THE ROCK KEYWORD)
--
ROCK
  3566.9    5.0E-06                / ROCK COMPRESSIBILITY REGION 1
  3966.9    5.5E-06                / ROCK COMPRESSIBILITY REGION 2
  4566.9    6.0E-06                / ROCK COMPRESSIBILITY REGION 3
```

There is no terminating "/" for this keyword.

In this case the example shows a multiple data set entry of the vector format keyword, with three ROCK data sets being defined by the keyword.

3.4.4 KEYWORD FORMAT TYPE – VECTOR (COLUMNAR VECTOR)

Columnar vector based keywords consist of the keyword followed by a columnar vector of parameters in a separate column for each parameter. The vector may contain integer, real and character parameters depending on the keywords requirements. This type of keyword is documented by describing the functionality or action the keyword performs, a table describing the parameters associated with the keyword, followed by one or two examples on how to use the keyword. For example the SWFN keyword in the PROPS section would be described as:

Description

The SWFN keyword defines the water relative permeability and water-oil capillary pressure data versus water saturation tables for when water is present in the input deck. This keyword should only be used if water is present in the run.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SWAT	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the water saturation.			None
		dimensionless	dimensionless	dimensionless	
2	KRW	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the water relative permeability with respect to gas saturation. The first value in the column should be zero.			None
		dimensionless	dimensionless	dimensionless	
3	PCWO	A columnar vector of real values that are either equal or increasing down the column that defines the water-oil relative capillary pressure. If the SWATINIT keyword has been used to initialize the model then columnar vector has to be strictly monotonically increasing.			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a "/" and there is no "/" terminator for the keyword.

Table 3.3: SWFN Keyword Description

Example

```
--
--      WATER RELATIVE PERMEABILITY TABLES (SWFN)
--
SWFN
--      SWAT      KRW      PCOW
--      FRAC      FRAC      PSIA
--      -----
--      0.15      0.00000      1*
--      0.30      0.00050      1*
--      0.40      0.00390      1*
--      0.50      0.01500      1*
--      0.60      0.04100      1*
--      0.65      0.06250      1*
--      0.70      0.09150      1*
--      0.80      0.17850      1*
```

0.90	0.31640	1*	
0.95	0.40960	1*	
1.00	0.52200	1*	/ TABLE NO. 1

The example defines two SWFN tables for use when water is present in the run. In the tables the water-oil capillary pressure data has been defaulted with “1*” and will be set to zero as there are no other values for the water-oil capillary pressure columns.

3.4.5 KEYWORD FORMAT TYPE – ARRAY

This type of keyword defines a property for the grid or an area of the grid using a previously entered BOX keyword to define the area where the property will be defined. For array data a full set of values for each element in the array is required. For example, the documentation for the PORO array would be:

Description

PORO defines the porosity for all the cells in the model via an array. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PORO	PORO is an array of real numbers assigning the porosity values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*100.0.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- I) The keyword is terminated by a “/”.

Table 3.3: PORO Keyword Description

See also the DX, DY and TOPS keywords to fully define a Cartesian Regular Grid.

Example

```
--
-- DEFINE GRID BLOCK POROSITY DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PORO
  300*0.300
/
```

3.5 INPUT FILE STRUCTURE

OPM Flow input files are similar to commercial simulators that are used in the oil and gas industry, that is the input file is separate into sections in an effort to avoid an engineer's input data errors and a computer programmer's code to interpret the data. OPM Flow has been designed, from an engineer's prospective and input structure to be similar to Schlumberger's industry wide ECLIPSE 100¹³ simulator. Table 3.4 lists the various section together with a brief description of purpose of the section. As well as declaring if section is mandatory or not for a run to form a valid input deck

Section Name	Description	Required Optional
<i>RUNSPEC</i>	This is the first section in the OPM Flow input file and defines the key parameters for the simulator including the dimensions of the model, phases present in the model (oil, gas and water for example), number of tables for a given property and the maximum number of rows for each table, the maximum number of groups, wells and well completions, as well as various options to be invoked by OPM Flow.	Required
<i>GRID</i>	Defines the basic grid properties, including structure, faults and various static rock properties (porosity, permeability etc.). Upon completion of reading this section, the software calculates the pore volume (PORV) for each and the transmissibilities (TRANX, TRANY and TRANZ,) between all the cells, as well as calculating the transmissibilities of the Non-Neighbor Connections ("NNC")	Required
<i>EDIT</i>	The properties calculated by OPM Flow in the GRID section are available for editing in this section (PORV,TRANX etc.).	Optional
<i>PROPS</i>	This section defines the fluid properties for all the phases present in the run, for example oil viscosity, oil formation volume factor etc. The section also defines the rock flow properties as per the relative permeabilities and the distribution of the fluids based on the capillary pressure functions.	Required
<i>REGIONS</i>	The REGIONS section allows the engineer to define various regions in the model for reporting purposes and to define how the fluid and rock property defined in the PROPS section are allocated throughout the model.	Required
<i>SOLUTION</i>	Defines the parameters to initialize the model, fluid contacts, reservoir pressures etc., together with the data from the previous sections. This section, if requested, reports the initial in-place volumes for phases present in the model, as well as the average pressure for the various defined regions.	Required
<i>SUMMARY</i> ¹	Defines the time vector property data to be written out to various report output files for reviewing the results of the simulation. This data includes field, group, well and well completion production and injection data, for example field oil rate versus time. Grid block data can also be reported versus time as well, for example grid block pressure versus time ² .	Optional
<i>SCHEDULE</i>	The final section is the SCHEDULE that defines the field, group and well parameters, targets and constraints that should be applied to the field, group or wells, numerical controls, the operating schedule and reporting requirements.	Required
Notes: <ol style="list-style-type: none"> 1) Although the SUMMARY section is optional, it is nearly always included in order to obtain results from the simulation run. 2) The OPM ResInsight three-dimensional visualization software has a feature to display a grid block property change versus time, so it should not be necessary to export the grid block data to the SUMMARY report output files. 		

Table 3.4: OPM Flow Input Deck Sections

¹³ ECLIPSE Industry-Reference Reservoir Simulator – Reference Manual 2019.1, Schlumberger.

CHAPTER 4: GLOBAL SECTION KEYWORDS

4.1 INTRODUCTION

Keywords used in this section can be used in all input file sections, that is the RUNSPEC, GRID, EDIT PROPS, REGIONS, SOLUTION, SUMMARY and SCHEDULE sections.

4.2 DATA REQUIREMENTS

There are no data requirements for the GLOBAL section keywords, as all the keywords are optional and considered to utility keywords that can be used throughout the input deck. A complete list of these global keywords is given in Table 4.1.

No.	GLOBAL Keyword	Description	Section Applied
1	COLUMNS	<i>COLUMNS – Define Input File Column Margins.</i> The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.	ALL
2	DEBUG	<i>DEBUG – Define the Debug Data to be Printed to File.</i> This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow.	ALL
3	ECHO	<i>ECHO – Activate Echoing of User Input Files to the Print File.</i> Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.	ALL
4	END	<i>END – Define the End of the Input File.</i> This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.	ALL
5	ENDINC	<i>ENDINC – Define the End of an Include File.</i> This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file.	ALL
6	ENDSKIP	<i>ENDSKIP – DeActivate Skipping of Keywords and Input Data.</i> Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords.	ALL
7	EXTRAPMS	<i>EXTRAPMS – Activate Extrapolation Warning Messages.</i> The EXTRAPMS keyword activates extrapolation warning messages for when simulator extrapolates the PVT or VFP tables.	ALL
8	FORMFEED	<i>FORMFEED – Defined the Print File Form-Feed Character.</i> The keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files.	ALL
9	INCLUDE	<i>INCLUDE – Load Another Data File at the Current Position.</i> The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file.	ALL
10	MESSAGE	<i>MESSAGE – Output User Message.</i> The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files.	ALL
11	MESSAGES	<i>MESSAGES – Define Message Print Limits and Stop Limits.</i> The MESSAGES keyword defines the print and stops levels for various messages.	ALL
12	NOECHO	<i>NOECHO – Deactivate Echoing of User Input Files to the Print File.</i> Turns off echoing of all the input files to the print file.	ALL

No.	GLOBAL Keyword	Description	Section Applied
13	NOWARN	<i>NOWARN – Deactivate Warning Messages.</i> Turns off warning messages to be printed to the print file.	ALL
14	SKIP	<i>SKIP – Activate Skipping of All Keywords and Input Data.</i> The keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered.	ALL
15	SKIP100	<i>SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data.</i> This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered.	ALL
16	SKIP300	<i>SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data.</i> Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered.	ALL
17	WARN	<i>WARN – Activate Warning Messages.</i> Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default.	ALL
Notes: 1) Note that not all keywords and features listed above are implemented in OPM Flow. Cells not colored in the No. column indicate the keyword is supported or partially supported by OPM Flow, cells colored gray indicate that the keyword is not applicable, and finally, cells colored in orange indicate keywords that are not supported by OPM Flow and will be ignored by the simulator.			

Table 4.1: Alphabetic List of GLOBAL Section Keywords

A more detailed description of the keywords is presented in the following sections.

4.3 KEYWORD DEFINITIONS

4.3.1 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

This keyword is ignored by OPM Flow and has no effect on the simulation

<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>	<i>G</i>	<i>H</i>	<i>I</i>	<i>J</i>	<i>K</i>	<i>L</i>	<i>M</i>	<i>N</i>	<i>O</i>	<i>P</i>	<i>Q</i>	<i>R</i>	<i>S</i>	<i>T</i>	<i>U</i>	<i>V</i>	<i>W</i>	<i>X</i>	<i>Y</i>	<i>Z</i>
----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------

4.3.2 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>	<i>G</i>	<i>H</i>	<i>I</i>	<i>J</i>	<i>K</i>	<i>L</i>	<i>M</i>	<i>N</i>	<i>O</i>	<i>P</i>	<i>Q</i>	<i>R</i>	<i>S</i>	<i>T</i>	<i>U</i>	<i>V</i>	<i>W</i>	<i>X</i>	<i>Y</i>	<i>Z</i>
----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------

4.3.3 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--          SWITCH OFF ECHOING OF INPUT FILES
--
NOECHO
--
--          INCLUDE SIMULATION GRID WITH SLOPING FAULTS
--
INCLUDE
    './INCLUDE/GRID/IRAP_1005.GRDECL' /
--
--          SWITCH ON ECHOING OF INPUT FILES
--
ECHO
```

The examples deactivates the echoing of the input files, reads in the grid geometry data using the INCLUDE keyword, and then activates the echoing of the input files again.

Note

Especially for the large voluminous data sets in the GRID section, it is good practice to deactivate the echoing of the input files when loading this data to avoid the print output file becoming too large to view in a text editor.

4.3.4 END – DEFINE THE END OF THE INPUT FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

There is no data required for this keyword.

Example

```

-----
-- SCHEDULE SECTION - 2006-01-01
-----
RPTSCHED
'WELLS=2'      'WELSPECS'      'CPU=2'      'FIP=2'      /

DATES
1 JAN 2006 /
/

RPTSCHED
'NOTHING'      /

DATES
1 APR 2006 /
1 JUL 2006 /
1 OCT 2006 /
/
ECHO
--
-- *****
-- END OF FILE
-- *****
END
-----
-- SCHEDULE SECTION - 2007-01-01
-----
RPTSCHED
'WELLS=2'      'WELSPECS'      'CPU=2'      'FIP=2'      /

DATES
1 JAN 2007 /
/

```

In the above example OPM Flow will process the data up to October 1, 2006 only, and then start to run the simulation. All keywords after the END file keyword will not be read or processed.

4.3.5 ENDINC – DEFINE THE END OF AN INCLUDE FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

There is no data required for this keyword.

Example

```

-----
-- SCHEDULE SECTION - 2006-01-01
-----
RPTSCHED
'WELLS=2'      'WELSPECS'      'CPU=2'      'FIP=2'      /

DATES
1 JAN 2006 /
/

RPTSCHED
'NOTHING'      /

DATES
1 APR 2006 /
1 JUL 2006 /
1 OCT 2006 /
/
ECHO
--
-- *****
-- END OF INCLUDE FILE PROCESSING
-- *****
ENDINC
-----
-- SCHEDULE SECTION - 2007-01-01
-----
RPTSCHED
'WELLS=2'      'WELSPECS'      'CPU=2'      'FIP=2'      /

DATES
1 JAN 2007 /
/

```

In the above example OPM Flow will process the data up to October 1, 2006 only, and return control to the file that called the INCLUDE keyword, and then continue processing the input files. All keywords after the ENDINC keyword in the INCLUDE FILE will not be read or processed.

4.3.6 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      SWITCH ON SKIPPING OF KEYWORDS AND DATA
--
SKIP
--
--      INCLUDE SIMULATION GRID WITH SLOPING FAULTS
--
INCLUDE
      './INCLUDE/GRID/IRAP_1005.GRDECL' /
--
--      SWITCH ON READING OF KEYWORDS AND DATA
--
ENDSKIP
```

The example skips reading of the of the grid geometry data using the INCLUDE keyword, and then reverts back to reading the input files again.

4.3.7 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

No.	Name	Description	Default
I	EXTRAP	<p>Defines a single integer that activates the extrapolation warning message options for PVT and VFP tables. EXTRAP can have the following values:</p> <ol style="list-style-type: none"> 1) 0 – No warning messages are give (the default). 2) 1 – PVT table extrapolation warnings are printed. 3) 2 – VFP table extrapolation warnings are printed. 4) 3 – PVT and VFP table extrapolation warnings are printed. 5) 4 - PVT and VFP table extrapolation warnings are printed with additional information. 	0
<p>Notes:</p> <ol style="list-style-type: none"> 1) In addition extrapolation warnings will also be given for Rs and Rv if options (1), (3), and (4) are requested. 2) The keyword is terminated by a "/". 			

Table 4.2: EXTRAPMS Keyword Description

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE EXTRAPOLATION MESSAGES
--
EXTRAPMS
      2                                     /
```

The above example activates the default the VFP table extrapolation warnings option.

4.3.8 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be placed at the very top of the input file.

No.	Name	Description	Default
1	FORMFEED	Defines a single integer that defines the carriage control character activates, and should be set to: 1) 1 – Standard FORTRAN (the default). 2) 2 – Form-feed character ASCII(12) 3) 3 – None.	0
Notes: 1) The keyword is terminated by a "/".			

Table 4.3: FORMFEED Keyword Description

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE EXTRAPOLATION MESSAGES
--
FORMFEED
      3
```

The above example sets the carriage return character to no form-feed character.

4.3.9 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file. Although INCLUDE files can be nested, that is INCLUDE files within INCLUDE files etc., in practice this should be avoided due to the complexity of tracking the files.

No.	Name	Description	Default
I	FILENAME	A character string enclosed in quotes that defines a file to read in and be processed by OPM Flow.	None
Notes: I) The keyword is terminated by a “/”.			

Table 4.4: INCLUDE Keyword Description

Examples

The first example shown below loads the grid file from the same directory as the data file.

```
--
--      LOAD INCLUDE FILE
--
INCLUDE      'NOR-OPM-A00-GRID.inc'  /
```

The next example loads the same file one directory above from where the data file is located.

```
--
--      LOAD INCLUDE FILE
--
INCLUDE      '../NOR-OPM-A00-FAULTS.inc'  /
```

The final example loads the same file from a separate include from where the data file is located.

```
--
--      LOAD INCLUDE FILE
--
INCLUDE      '../INCLUDE/NOR-OPM-A00-FAULTS.inc'  /
```


4.3.10 MESSAGE – OUTPUT USER MESSAGE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGES keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

This keyword is ignored by OPM Flow and has no effect on the simulation.

4.3.11 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

No.	Name	Description	Default
1	PRTSMESG	An integer defining the maximum number of MESSAGE type messages to be printed after which this type of message stops printing.	1,000,000
2	PRTSCOMT	An integer defining the maximum number of COMMENT type messages to be printed after which this type of message stops printing.	1,000,000
3	PRTSWARN	An integer defining the maximum number of WARNING type messages to be printed after which this type of message stops printing.	10,000
4	PRTSPROB	An integer defining the maximum number of PROBLEM type messages to be printed after which this type of message stops printing.	100
5	PRTSERRS	An integer defining the maximum number of ERROR type messages to be printed after which this type of message stops printing.	100
6	PRTSBUGS	An integer defining the maximum number of BUG type messages to be printed after which this type of message stops printing.	100
7	STOPMESG	An integer defining the maximum number of MESSAGE type messages to be printed after which OPM Flow terminates the run. Not used by OPM Flow.	1,000,000
8	STOPCOMT	An integer defining the maximum number of COMMENT type messages to be printed after which OPM Flow terminates the run. Not used by OPM Flow.	1,000,000
9	STOPWARN	An integer defining the maximum number of WARNING type messages to be printed after which OPM Flow terminates the run. Not used by OPM Flow.	10,000
10	STOPPROB	An integer defining the maximum number of PROBLEM type messages to be printed after which OPM Flow terminates the run. Not used by OPM Flow.	100
11	STOPERRS	An integer defining the maximum number of ERROR type messages to be printed after which OPM Flow terminates the run. Not used by OPM Flow.	10
12	STOPBUGS	An integer defining the maximum number of BUG type messages to be printed after which OPM Flow terminates the run. Not used by OPM Flow.	1
13	PRTGRPMS	An integer defining the maximum number of GROUP MESSAGE type messages to be printed after which this type of message stops printing. Not used by OPM Flow.	10

No.	Name	Description	Default
Notes: <ol style="list-style-type: none"> 1) MESSAGE type messages are informative messages. 2) COMMENT type messages are probably not data errors. 3) WARNING type message are possible data errors and should be investigated. 4) PROBLEM type errors messages are associated with numerical problems. 5) ERROR type messages are errors are need to be fixed before the simulator can run the input deck. 6) BUG type of messages are potential programming errors. 7) The keyword is terminated by a "/". 			

Table 4.5: MESSAGES Keyword Description

Example

```
--
--      MESS  COMMT  WARN  PROBL  ERROR  BUG   MESS  COMMT  WARN  PROBL  ERROR  BUG
--      LIMIT  LIMIT  LIMIT  LIMIT  LIMIT  LIMIT  STOP  STOP  STOP  STOP  STOP  STOP
MESSAGES
      1*      1*      1*      1500  1*      1*      1*      1*      1*      1000  1*      1*  /
```

The above example sets the PROBLEM type message print limit to 1,500 and the stop limit to 1,000.

4.3.12 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active, but can subsequently be switched off by the NOECHO activation keyword.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      SWITCH OFF ECHOING OF INPUT FILES
--
NOECHO
--
--      INCLUDE SIMULATION GRID WITH SLOPING FAULTS
--
INCLUDE
      './INCLUDE/GRID/IRAP_1005.GRDECL' /
--
--      SWITCH ON ECHOING OF INPUT FILES
--
ECHO
```

The example deactivates the echoing of the input files, reads in the grid geometry data using the INCLUDE keyword, and then activates the echoing of the input files again.

Note

Especially for the large voluminous data sets in the GRID section, it is good practice to deactivate the echoing of the input files when loading this data to avoid the print output file becoming too large to view in a text editor.

4.3.13 NOWARN – DEACTIVATE WARNING MESSAGES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

It is recommended that WARN should always be used and action taken if necessary. For subsequent runs, the warning messages can be turned off.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      SWITCH OFF WARNING MESSAGES
NOWARN
--
--      INCLUDE SIMULATION GRID WITH SLOPING FAULTS
--
INCLUDE
    './INCLUDE/GRID/IRAP_1005.GRDECL' /
--
--      SWITCH ON WARNING MESSAGES
--
WARN
```

The example deactivates the warning messages before reading the grid geometry data using the INCLUDE keyword, and then activates the warning messages after reading the INCLUDE file.

4.3.14 SKIP – ACTIVATE SKIPPING OF ALL KEYWORDS AND INPUT DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SKIP keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered. All keywords and between the SKIP and ENDSKIP keywords are ignored by OPM Flow. See also the SKIP100 and SKIP300 keywords that skip only the black-oil and compositional keywords, respectively.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      SWITCH ON SKIPPING OF ALL KEYWORDS AND DATA
--
SKIP
--
--      INCLUDE SIMULATION GRID WITH SLOPING FAULTS
--
INCLUDE
      './INCLUDE/GRID/IRAP_1005.GRDECL' /
--
--      SWITCH ON READING OF ALL KEYWORDS AND DATA
--
ENDSKIP
```

The example skips reading of the of the grid geometry data using the INCLUDE keyword, and then reverts back to reading the input files again.

4.3.15 SKIP100 – ACTIVATE SKIPPING OF BLACK-OIL KEYWORDS AND INPUT DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered. All black-oil keywords between the SKIP100 and ENDSKIP keywords are ignored by OPM Flow. See also the SKIP and SKIP300 keywords that skip all and only the compositional keywords, respectively. There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      SWITCH ON SKIPPING OF BLACK-OIL KEYWORDS AND DATA
--
SKIP100
--
--      INCLUDE BLACK-OIL PVT DATA
--
INCLUDE
    './INCLUDE/'BLACK-OIL-PVT'      /
--
--      INCLUDE COMPOSITIONAL PVT DATA
--
INCLUDE
    './INCLUDE/'COMPOSITION-PVT-EOS'  /
--
--      SWITCH ON READING OF ALL KEYWORDS AND DATA
--
ENDSKIP
--
--      WATER PVT TABLE
--
PVTW
--      REF PRES  BW      CW      VISC      VISC
--      PSIA      RB/STB  1/PSIA  CPOISE  GRAD
--      -----
--      4840.0    1.019   2.7E-6  0.370   1*      / WATER DATA REGION 1
--
--      OIL      WAT      GAS
--      DENSITY  DENSITY  DENSITY
--      -----
DENSITY
    39.0        62.37    0.04520      / PVT DATA REGION 1
--
--      ROCK COMPRESSIBILITY
--
--      REF PRES  CF
--      PSIA      1/PSIA
--      -----
ROCK
    3966.9      5.0E-06      / ROCK COMPRESSIBILITY
```

The example skips reading of the of the 'BLACK-OIL-PVT' data set and reads the 'COMPOSITION-PVT-EOS' file using the INCLUDE keyword, before proceeding to revert back to reading the input files again.

4.3.16 SKIP300 – ACTIVATE SKIPPING OF “COMPOSITIONAL” KEYWORDS AND INPUT DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered. All “compositional” keywords between the SKIP300 and ENDSKIP keywords are ignored by OPM Flow. See also the SKIP and SKIP100 keywords that skip all and only the black-oil keywords, respectively. There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      SWITCH ON SKIPPING OF E300 KEYWORDS AND DATA
--
SKIP300
--
--      INCLUDE BLACK-OIL PVT DATA
INCLUDE
    './INCLUDE/'BLACK-OIL-PVT'      /
--
--      INCLUDE COMPOSITIONAL PVT DATA
--
INCLUDE
    './INCLUDE/'COMPOSITION-PVT-EOS'  /

--
--      SWITCH ON READING OF KEYWORDS AND DATA
--
ENDSKIP
--
--      WATER PVT TABLE
--
PVTW
--      REF PRES  BW      CW      VISC      VISC
--      PSIA      RB/STB  1/PSIA  CPOISE  GRAD
--      -----
--      4840.0    1.019   2.7E-6  0.370   1*      / WATER DATA REGION 1

--
--      OIL      WAT      GAS
--      DENSITY  DENSITY  DENSITY
--      -----
DENSITY
    39.0      62.37    0.04520      / PVT DATA REGION 1

--
--      ROCK COMPRESSIBILITY
--
--      REF PRES  CF
--      PSIA      1/PSIA
--      -----
ROCK
    3966.9    5.0E-06      / ROCK COMPRESSIBILITY
```

The example reads the 'BLACK-OIL-PVT' file using the INCLUDE keyword, then skips reading of the 'COMPOSITION-PVT-EOS' data set, before proceeding to revert back to reading the input files again.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

4.3.17 WARN – ACTIVATE WARNING MESSAGES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

It is recommended that WARN should always be used and action taken if necessary for the initial runs, once the run has been “cleaned up” the warning messages can be turned off.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      SWITCH OFF WARNING MESSAGES
--
NOWARN

--
--      INCLUDE SIMULATION GRID WITH SLOPING FAULTS
--
INCLUDE
      './INCLUDE/GRID/IRAP_1005.GRDECL' /

--
--      SWITCH ON WARNING MESSAGES
--
WARN
```

The example deactivates the warning messages before reading the grid geometry data using the INCLUDE keyword, and then activates the warning messages after reading the INCLUDE file.

CHAPTER 5: RUNSPEC SECTION

5.1 INTRODUCTION

This is the first section in the OPM Flow input file and defines the key parameters for the simulator including the dimensions of the model, phases present in the model (oil, gas and water for example), number of tables for a given property and the maximum number of rows for each table, the maximum number of groups, wells and well completions, as well as various options to be invoked by the simulator.

The section is defined by the RUNSPEC keyword and is terminated by the GRID keyword.

Keywords associated with the RUNSPEC section are either Activation type keywords to switch on a feature or declare a phase, or a Vector (Row Vector) type of keyword that declares various options or array dimensions. For example, the SATOPTS keyword that activates relative permeability assignment options, or the WELLDIMS keyword that defines the maximum number of wells, completions per well, and maximum number of groups etc. for the run. The keywords can be in any order, but the values entered impact the data the simulator expects in subsequent sections. So for example if the VAPOIL keyword has been invoked to declare that the vaporized oil phase (condensate) in wet gas¹⁴ is present in the run, then the simulator expects the PVTG keyword in the PROPS section to define the wet gas PVT properties. If the PVDG keyword (dry gas¹⁵ PVT data set), has been entered instead in the PROPS section, then the simulator will report this as an error when it reads the PVDG keyword or after processing the PROPS section.

Note that in some instances the numerical values entered need to be the actual values, as per the DIMENS keyword, or maximum values, for example the previously mentioned WELLDIMS keyword. If the requirement for the keyword is for the actual value and an incorrect value has been entered then this may or may not be directly trapped by the simulator, and may result in numerous error message associated with the data instead. Thus, if the error reporting messages in a given section are associated with data that is required to be declared via a RUNSPEC keyword, one should also verify that the RUNSPEC keyword has been correctly defined with the associated problematic data error messages. This is particularly true for the TABDIMS keyword in the RUNSPEC section where some of the variables are defined as the actual number of tables, whereas the length of the tables are a maximum value. To be clear, if NTSFUN on the TABDIMS keyword has been set to five, then there must be exactly five sets of relative permeability data entered in the PROPS section, otherwise data input errors will occur.

5.2 DATA REQUIREMENTS

Table 5.1 outlines the minimum set of keywords required by OPM Flow in order for the simulator to successfully parse the RUNSPEC section.

No.	RUNSPEC Keyword	Description	Section Applied
1	TITLE	<i>TITLE – Define the Title for the Input Deck</i> - this is printed on most reports routed to the print file.	RUNSPEC
2	DIMENS	<i>DIMENS – Define the Dimension of the Model</i> - the values entered must be the exact dimensions of the grid, otherwise the simulator will report errors.	GRID

¹⁴ Natural gas that contains significant heavy hydrocarbons such as propane, butane and other liquid hydrocarbons is known as wet gas or rich gas.

¹⁵ Natural gas that occurs in the absence of condensate or liquid hydrocarbons, or gas that had condensable hydrocarbons removed, is called dry gas. It is primarily methane with some intermediates

No.	RUNSPEC Keyword	Description	Section Applied
3	OIL, DISGAS, GAS, VAPOIL, and/or WATER	<i>OIL – Activate the Oil Phase in the Model</i> <i>DISGAS – Activate the Dissolved Gas Phase in the Model</i> <i>GAS – Activate the Gas Phase in the Model</i> <i>VAPOIL – Activate the Vaporize Oil in Wet Gas Phase in the Model</i> <i>WATER – Activate the Water Phase in the Model</i> Only the phase present in the run should be declared, so for a dry gas run then only GAS and WATER keywords should be declared, since water is always present in hydrocarbon accumulations.	PROPS
4	FIELD, LAB, or METRIC	<i>FIELD – Activate the Oil Field System of Units for the Model</i> <i>LAB – Activate the Laboratory System of Units for the Model</i> <i>METRIC – Activate the Metric System of Units for the Model</i> States the units to be used for the input deck.	ALL
5	WELLDIMS	<i>WELLDIMS – Define the Wells and Group Dimensions</i> Sets the well and group dimensions etc.	SCHEDULE
Notes: 1) This limited input for the RUNSPEC section is never used in practice, as real full field models are more complicated.			

Table 5.1: Minimum Set of RUNSPEC Keywords Required by OPM Flow

If the minimum set of RUNSPEC keywords is only entered, then the default values of the missing keywords will apply. This means for example only one set of PVT, relative permeability tables, and one equilibrium region will be assumed by the simulator.

A complete list of RUNSPEC keywords in alphabetic order is shown in Table 5.2 together with a generalized Topic column that classifies the functionality of the keyword. Note that not all keywords and features listed in Table 5.2 are implemented in OPM Flow. Cells not colored in the No. column indicate the keyword is supported, cells colored gray indicate that the keyword is not applicable, and finally, cells colored in orange indicate keywords that are not supported by OPM Flow.

No.	RUNSPEC Keyword	Description	Topic
1	ACTDIMS	<i>ACTDIMS – ACTION Keyword Dimensions.</i>	Action
2	ACTPARAM	<i>ACTPARAM – Define Action Facility Target and Tolerance Parameters .</i>	Action
3	AITS	<i>AITS – Activate Intelligent Time Stepping.</i>	Numeric
4	AITSOFF	<i>AITSOFF – Deactivate Intelligent Time Stepping.</i>	Numeric
5	ALKALINE	<i>ALKALINE – Activate the Alkaline Phase and Model.</i>	Alkaline
6	API	<i>API – Activate API Tracking.</i>	API
7	AQUDIMS	<i>AQUDIMS – Define Aquifer Dimensions.</i>	Aquifer
8	AUTOREF	<i>AUTOREF - Define Auto Refinement Options.</i>	LGR
9	BIGMODEL	<i>BIGMODEL – Activate Big Model Option (Retired).</i>	N/A
10	BLACKOIL	<i>BLACKOIL – Activate Black Oil Phases.</i>	Phases

No.	RUNSPEC Keyword	Description	Topic
11	BPARA	<i>BPARA – Activate Block Parallel License.</i>	N/A
12	BPIDIMS	<i>BPIDIMS – Define the Dimensions of the Interpolated Block Quantities.</i>	Output
13	BRINE	<i>BRINE – Activate Brine Tracking Option.</i>	Brine
14	CART	<i>CART – Activate Cartesian Geometry.</i> This the default grid type that is normally not required to be entered.	Input
15	CBMOPTS	<i>CBMOPTS – Define Coal Bed Methane Options.</i>	CBM
16	CO2STORE	<i>CO2STORE – Activate the CO2 Storage Model.</i> This is an OPM Flow implementation that is different to the commercial simulator, the keyword is a compositional keyword in the commercial simulator but has been implemented in OPM Flow's black-oil model. The keyword activates the carbon dioxide storage model for the run to account for both carbon dioxide and water phase solubility the simulators CO ₂ -Brine PVT model.	Phases
17	COAL	<i>COAL – Activate the Coal Phase (CBM Model).</i>	CBM
	COLUMNS	<i>COLUMNS – Define Input File Column Margins.</i>	Input
18	CPR	<i>CPR – Activate Constrained Pressure Residual ("CPR") Linear Solver.</i> See section 2.2 Running OPM Flow 2021-10 From The Command Line on how to invoke various numerical schemes via the OPM Flow command line interface.	Numeric
19	DEBUG	<i>DEBUG – Define the Debug Data to be Printed to File.</i>	Output
19	DIFFUSE	<i>DIFFUSE – Activate Molecular Diffusion Option.</i>	Diffusion
20	DIMENS	<i>DIMENS – Define the Dimension of the Model.</i> The values entered must be the exact dimensions of the grid, otherwise the simulator will report errors.	Input
21	DISGAS	<i>DISGAS – Activate the Dissolved Gas Phase in the Model.</i>	Phases
22	DISPDIMS	<i>DISPDIMS – Define the Maximum Number of Dispersion Tables.</i>	Dispersion
23	DUALPERM	<i>DUALPERM – Activate Dual Permeability Model.</i>	Dual-Porosity
24	DUALPORO	<i>DUALPORO – Activate Dual Porosity Model.</i>	Dual-Porosity
25	DYNRDIMS	<i>DYNRDIMS – Define Dynamic Region Dimensions.</i>	Input
26	ECHO	<i>ECHO – Activate Echoing of User Input Files to the Print File.</i>	Output
27	ECLMC	<i>ECLMC – Activate Multi-Component Brine Model.</i>	Brine
28	END	<i>END – Define the End of the Input File.</i>	Input
29	ENDINC	<i>ENDINC – Define the End of an Include File.</i>	Input
30	ENDSCALE	<i>ENDSCALE – Activate Relative Permeability End-Point Scaling Option.</i>	End-Point
31	ENDSKIP	<i>ENDSKIP – DeActivate Skipping of Keywords and Input Data.</i>	Input
32	EQLDIMS	<i>EQLDIMS – Define the Equilibration Data Dimensions.</i>	Equilibration

No.	RUNSPEC Keyword	Description	Topic
33	EQLOPTS	<i>EQLOPTS – Activate the Equilibration Options.</i>	Equilibration
34	EXTRAPMS	<i>EXTRAPMS – Activate Extrapolation Warning Messages.</i>	Output
35	FAULTDIM	<i>FAULTDIM – Define the Number of Fault Segments.</i>	Input
36	FIELD	<i>FIELD – Activate the Oil Field System of Units for the Model.</i>	Input
37	FMTHMD	<i>FMTHMD – Activate The Format History Match Gradient File Option.</i>	Output
38	FMTIN	<i>FMTIN – Activate The Format Input File Option.</i>	Input
39	FMTOUT	<i>FMTOUT – Activate The Format Output File Option.</i>	Output
40	FOAM	<i>FOAM – Activate the Foam Phase and Model.</i>	Foam
41	FORMFEED	<i>FORMFEED – Defined the Print File Form-Feed Character.</i>	Output
42	FRICTION	<i>FRICTION – Activate Wellbore Friction Option.</i>	Well
43	FULLIMP	<i>FULLIMP – Activate Fully Implicit Solution Option.</i> See section 2.2 Running OPM Flow 2021-10 From The Command Line on how to invoke various numerical schemes via the OPM Flow command line interface.	Numeric
44	GAS	<i>GAS – Activate the Gas Phase in the Model.</i>	Phases
45	GASFIELD	<i>GASFIELD – Define Gas Field Operations Options.</i>	Gas Field
46	GDIMS	<i>GDIMS – Activate Instantaneous Gradient Option and Define Dimensions .</i>	Gradient
47	GIMODEL	<i>GI - Define the Initial Equilibration Gi Values for All Grid Blocks.</i>	Phases
48	GRAVDR	<i>GRAVDR – Activate Gravity Drainage and Imbibition for Dual Porosity Model.</i>	Dual-Porosity
49	GRAVDRB	<i>GRAVDRB - Activate Vertical Discretized Gravity Drainage and Imbibition for Dual Porosity Model .</i>	Dual-Porosity
50	GRAVDRM	<i>GRAVDRM - Activate Alternative Gravity Drainage and Imbibition for Dual Porosity Model.</i>	Dual-Porosity
51	GRIDOPTS	<i>GRIDOPTS - Grid Processing Options.</i>	Input
52	HMDIMS	<i>HMDIMS – Define History Match Gradient Parameter Dimensions.</i>	Gradient
53	HYST	<i>HYST – Activate the Hysteresis Option (Retired).</i> The HYST keyword activates the hysteresis option, the keyword should be avoided and the hysteresis option should be enabled by the HYSER parameter on the SATOTPS keyword see - <i>SATOPTS – Activate Relative Permeability Assignment Options .</i>	Hysteresis
54	IMPES	<i>IMPES – Activate Implicit Pressure Explicit Saturation Solution Option.</i> See section 2.2 Running OPM Flow 2021-10 From The Command Line on how to invoke various numerical schemes via the OPM Flow command line interface.	Numeric

No.	RUNSPEC Keyword	Description	Topic
55	IMPLICIT	<i>IMPLICIT – Activate Fully Implicit Solution Option.</i> See section 2.2 Running OPM Flow 2021-10 From The Command Line on how to invoke various numerical schemes via the OPM Flow command line interface.	Numeric
56	INCLUDE	<i>INCLUDE – Load Another Data File at the Current Position.</i>	Input
57	INSPEC	<i>INSPEC – Activate the INSPEC File Option.</i>	Output
58	LAB	<i>LAB - Activate the Laboratory System of Units for the Model.</i>	Input
59	LGR	<i>LGR – Define Local Grid Refinement Dimensions and Parameters.</i>	LGR
60	LGRCOPY	<i>LGRCOPY – Activate Local Grid Refinement Inheritance.</i>	LGR
61	LICENSES	<i>LICENSES – Define Required Licenses for Run.</i>	N/A
62	LIVEOIL	<i>LIVEOIL – Activate the Live Oil Phase (Oil with Free and Dissolved Gas).</i>	Phases
63	LOAD	<i>LOAD – Load a SAVE File for a Fast Restart.</i>	Input
64	LOWSALT	<i>LOWSALT – Activate the Low Salt Brine Phase in the Brine Model.</i>	Brine
65	MEMORY	<i>MEMORY – Define Allocated Memory (Retired).</i>	N/A
66	MESSAGE	<i>MESSAGE – Output User Message.</i> The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files.	Output
67	MESSAGES	<i>MESSAGES – Define Message Print Limits and Stop Limits.</i> The MESSAGES keyword defines the print and stops levels for various messages.	Output
68	MESSSRVC	<i>MESSSRVC - Activate or Deactivate Database Message File Output.</i>	Output
69	METRIC	<i>METRIC – Activate the Metric System of Units for the Model.</i>	Input
70	MICP	<i>MICP – Activate the Microbially Induced Calcite Precipitation Model.</i> This is an OPM Flow specific keyword that activates the Microbial Induced Calcite Precipitation ("MICP") model used to investigate CO ₂ leakage remediation. The module requires that both the MICP and WATER keywords in the RUNSPEC to be active.	MICP
71	MISCIBLE	<i>MISCIBLE – Define Miscibility Todd-Longstaff Parameters.</i>	Miscible
72	MONITOR	<i>MONITOR – Activate Output of the Monitoring Data and File.</i>	Output
73	MSGFILE	<i>MSGFILE – Active or Deactivate Message File Output.</i>	Output
74	MULTIN	<i>MULTIN – Activate the Non-Unified Multiple Input File Option.</i>	Input
75	MULTOUT	<i>MULTOUT – Activate the Non-Unified Multiple Output File Option.</i>	Output
76	MULTOUTS	<i>MULTOUTS – Activate Non-Unified Multiple Summary Output File Option.</i>	Output
77	MULTREAL	<i>MULTREAL – Activate Commercial Simulator's Multi-Realization License.</i>	N/A
78	NETWORK	<i>NETWORK – Activate the Extended Network Option and Define Parameters.</i>	Network

No.	RUNSPEC Keyword	Description	Topic
79	NINEPOIN	<i>NINEPOIN – Activate the Nine-Point Discretization Option.</i>	Numeric
80	NMATRIX	<i>NMATRIX – Activate the Discretized Matrix Dual Porosity Option.</i>	Dual-Porosity
81	NNEWTF	<i>NNEWTF – Activate the Non-Newtonian Fluid Model.</i>	Numeric
82	NOCASC	<i>NOCASC – Activate Linear Solver Tracer Algorithm.</i> See section 2.2 Running OPM Flow 2021-10 From The Command Line on how to invoke various numerical schemes via the OPM Flow command line interface.	Tracers
83	NOECHO	<i>NOECHO – Deactivate Echoing of User Input Files to the Print File.</i>	
84	NOHYST	<i>NOHYST - Deactivate the Hysteresis Option.</i>	Hysteresis
85	NOINSPEC	<i>NOINSPEC – Deactivate Output of the INIT Index File.</i>	Output
86	NOMONITO	<i>NOMONITO – Deactivate Output of the Monitoring Data and File.</i>	Output
87	NONNC	<i>NONNC – Deactivate Non-Neighbor Connections.</i>	Input
88	NORSSPEC	<i>NORSSPEC – Deactivate Output of the RESTART Index File.</i>	Output
89	NOSIM	<i>NOSIM – Activate the No Simulation Mode for Data File Checking.</i>	Numeric
90	NOWARN	<i>NOWARN – Deactivate Warning Messages.</i>	Output
91	NRSOUT	<i>NRSOUT – Defined Maximum Number of RESTART Elements .</i>	Output
92	NSTACK	<i>NSTACK – Define the Stack Length for the Iterative Linear Solver.</i>	Numeric
93	NUMRES	<i>NUMRES – Define the Number of Reservoir Grids.</i> Currently, this should only be set to one in OPM Flow.	Input
94	NUPCOL	<i>NUPCOL – Define the Number of Newtonian Iterations Used to Update Well Targets.</i>	Numeric
95	OIL	<i>OIL – Activate the Oil Phase in the Model.</i>	Phases
96	OPTIONS	<i>OPTIONS – Activate Various Program Options.</i>	Options
97	PARALLEL	<i>PARALLEL – Define Parallel Run Configuration.</i> The keyword defines the run to use parallel processing and sets the domain decomposition options. See section 2.2 Running OPM Flow 2021-10 From The Command Line on how to run OPM Flow in parallel mode.	Numeric
98	PARTTRAC	<i>PARTTRAC – Activate and Define Partitioned Tracer Option.</i>	Tracers
99	PATHS	<i>PATHS – Define Filename Directory Path Aliases.</i>	Input
100	PEDIMS	<i>PEDIMS – Define Petro-Elastic Model Regions and Table Dimensions.</i>	Petro-Elastic
101	PETOPTS	<i>PETOPTS – Define Petrel and Generic Simulation File Options.</i>	Input
102	PIMTDIMS	<i>PIMTDIMS – Define Well Productivity Scaling Table Dimensions.</i>	Wells
103	POLYMER	<i>POLYMER – Activate the Polymer Phase in the Model.</i>	Polymer

No.	RUNSPEC Keyword	Description	Topic
104	PRECSALT	<i>PRECSALT – Activate the OPM Flow Salt Precipitation Model.</i> This is an OPM Flow specific keyword for the simulator's Salt Precipitation model, note that this is an extension to the commercial simulator's Brine model.	Water Vaporization
105	PSTEADY	<i>PSTEADY – Activate Pseudo Steady State Flow Calculation Option.</i>	Numeric
106	RADIAL	<i>RADIAL – Radial Grid Activation Option.</i>	Radial
107	REGDIMS	<i>REGDIMS – Define the Maximum Number of Regions for a Region Array.</i>	Input
108	RIVRDIMS	<i>RIVRDIMS – Define the River Dimensions and Associated Data.</i>	Rivers
109	ROCKCOMP	<i>ROCKCOMP – Activate Rock Compaction .</i>	Compaction
110	RPTCPL	<i>RPTCPL – Activate Couple Simulation Reporting.</i>	Output
111	RPTHMD	<i>RPTHMD - Define Well History Match Gradient Reporting Options.</i>	Gradient
112	RPTRUNSP	<i>RPTRUNSP – Activate RUNSPEC Reporting.</i>	Output
113	RSSPEC	<i>RSSPEC – Activate Output of the RESTART Index File.</i>	Output
114	RUNSPEC	<i>RUNSPEC - Define the Start of the RUNSPEC Section of Keywords</i>	
115	SAMG	<i>SAMG – Activate Algebraic Multi-Grid Linear Solver.</i> See section 2.2 Running OPM Flow 2021-10 From The Command Line on how to invoke various numerical schemes via the OPM Flow command line interface.	Numeric
116	SATOPTS	<i>SATOPTS – Activate Relative Permeability Assignment Options .</i>	Input
117	SAVE	<i>SAVE – Activate Output of a SAVE File for Fast Restarts.</i>	Output
118	SCDPDIMS	<i>SCDPDIMS – Define Scale Deposition and Damage Table Dimensions.</i>	Scale Deposition
119	SKIP	<i>SKIP – Activate Skipping of All Keywords and Input Data.</i>	Input
120	SKIP100	<i>SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data.</i>	Input
121	SKIP300	<i>SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data.</i>	Input
122	SMRYDIMS	<i>SMRYDIMS – Define Maximum Number of Summary Vectors to be Written .</i>	Output
123	SOLVDIMS	<i>SOLVDIMS – Define PEBI Grid Nested Factorization Solver Dimensions .</i> See section 2.2 Running OPM Flow 2021-10 From The Command Line on how to invoke various numerical schemes via the OPM Flow command line interface.	Numeric
124	SOLVENT	<i>SOLVFRAC – Define the Initial Gas Solvent Fraction for All Grid Blocks</i>	Solvent

No.	RUNSPEC Keyword	Description	Topic
125	SPIDER	<i>SPIDER – Spider Grid Activation Option.</i> This is an OPM Flow specific keyword for the simulator's Spider Grid option, that emulates a Radial Grid via corner-point geometry. The option employs the standard GRID section radial grid keywords to construct the grid - see the example in the section on Spider Grids (<i>Spider Grids</i>).	Radial
126	START	<i>START – Simulation Start Date.</i>	Numeric
127	SURFACT	<i>SURFACT – Activate the Surfactant Phase in the Model.</i>	Surfactant
128	SURFACTW	<i>SURFACTW – Activate the Surfactant Phase with Wettability Changes in the Model.</i>	Surfactant
129	TABDIMS	<i>TABDIMS – Define the Number of Tables and the Table Dimensions.</i>	Input
130	TEMP	<i>TEMP – Activate the Temperature Modeling Option.</i> The temperature option (TEMP keyword) and the thermal option (THERMAL keyword) are two separate modeling facilities in the commercial simulator. See <i>THERMAL – Activate the Thermal Modeling Option</i> for additional information.	Thermal
131	THERMAL	<i>THERMAL – Activate the Thermal Modeling Option.</i> This keyword activates OPM Flow's thermal modeling option. The energy black-oil implementation in OPM Flow is a mixture of the commercial simulators black-oil and the commercial simulators "compositional thermal" keywords, as well as some OPM Flow specific keywords. See the keyword for further information.	Thermal
132	TITLE	<i>TITLE – Define the Title for the Input Deck.</i>	Input
133	TRACERS	<i>TRACERS – Activate Tracer Options and Set Tracer Array Dimensions.</i>	Tracers
134	TRPLPORO	<i>TRPLPORO – Activate the Triple Porosity Model Option.</i>	Triple-Porosity
135	UDADIMS	<i>UDADIMS – Define the Dimensions of the User Defined Arguments.</i>	Action
136	UDQDIMS	<i>UDQDIMS – Define the Dimensions of the User Defined UDQ Feature.</i>	Action
137	UDQPARAM	<i>UDQPARAM – Define Parameters for the User Defined Quantity Feature.</i>	Action
138	UDTDIMS	<i>UDTDIMS – Define the Dimensions of the User Defined Tables.</i>	Action
139	UNCODHMD	<i>UNCODHMD – Activate History Match Gradient Unencoded Output.</i>	Gradient
140	UNIFIN	<i>UNIFIN – Activate The Unified Input File Option.</i>	Input
141	UNIFOUT	<i>UNIFOUT – Activate The Unified Output File Option.</i>	Output
142	UNIFOUTS	<i>UNIFOUTS – Activate The Unified Output Summary File Option.</i>	Output
143	UNIFSAVE	<i>UNIFSAVE – Activate The Unified Output Save File Option.</i>	Output
144	VAPOIL	<i>VAPOIL – Activate the Vaporize Oil in Wet Gas Phase in the Model</i>	Phases
145	VAPWAT	<i>VAPWAT – Activate Vaporize Water in the Dry and Wet Gas Phases.</i> This is an OPM Flow specific keyword for the simulator's Water Vaporization Model that is activated by declaring that vaporized water is present in the run.	Water Vaporization

No.	RUNSPEC Keyword	Description	Topic
146	VE	<i>VE – Activate Vertical Equilibrium Model (Global).</i>	Input
147	VFPIDIMS	<i>VFPIDIMS – Injection Vertical Flow Performance Table Dimensions.</i>	Well
148	VFPPDIMS	<i>VFPPDIMS – Production Vertical Flow Performance Table Dimensions.</i>	Well
149	VISAGE	<i>VISAGE - Activate External Reservoir Geo-Mechanics VISAGE Option.</i>	N/A
150	VISCD	<i>VISCD – Activate Dual Porosity Viscous Displacement Option .</i>	Dual-Porosity
151	WARN	<i>WARN – Activate Warning Messages.</i>	Output
152	WATER	<i>WATER – Activate the Water Phase in the Model.</i>	Phases
153	WELLDIMS	<i>WELLDIMS – Define the Wells and Group Dimensions.</i>	Well
154	WPOTCALC	<i>WPOTCALC – Well Potential Calculation Options.</i>	Well
155	WSEGDIMS	<i>WSEGDIMS – Define Multi-Segment Well Dimensions.</i>	Multi-Segment Well

Notes:

- 1) Note that not all keywords and features listed above are implemented in OPM Flow. Cells not colored in the No. column indicate the keyword is supported or partially supported by OPM Flow, cells colored gray indicate that the keyword is not applicable, and finally, cells colored in orange indicate keywords that are not supported by OPM Flow and will be ignored by the simulator.
- 2) For the Topic column the definition of the entries is defined as follows:

<ol style="list-style-type: none"> 1) Action: Keywords associated with the ACTIONX or OPM Flow's Python facility. 2) API: Keywords associated with the API option. 3) Brine: Keywords associated with the BRINE option. 4) CBM: COAL BED METHANE activation and options (not implemented in OPM Flow). 5) Diffusion: DIFFUSION model activation and options. 6) Dispersion: DISPERSION model activation and options. 7) Dual-Porosity: DUAL POROSITY and DUAL PERMEABILITY model activation and parameters. 8) End-Point: END-POINT SCALING activation and options. 9) Equilibration EQUIL section control and options. 10) Gas Field: GAS FIELD model activation, control and options. 11) Gradient: Keywords associated with the GRADIENT option, used in history matching. 12) Foam: FOAM model activation. 13) Hysteresis: HYSTERESIS model. 14) Input: Input control and options. 	<ol style="list-style-type: none"> 15) LGR: LOCAL GRID REFINEMENT dimensions and options. 16) MICP: MICROBIAL INDUCED CALCITE PRECIPITATION model activation. 17) Multi-Segment: Multi-Segment well dimensions and options. 18) Network: Activation and options for the NETWORK model. 19) Numeric: Keywords related to the various numeric control and options for the run. 20) Output: Output control and options. 21) Phases: Declarations related to the active phases. 22) Scale Deposition: Scale and BRINE options. 23) Solvent: SOLVENT phase options 24) Surfactant: SURFACTANT phase activation and options. 25) Thermal: THERMAL model activation and options. 26) Tracers: TRACER model options. 27) Triple-Porosity: TRIPLE POROSITY model option activation. 28) Water Vaporization: WATER VAPORIZATION activation.
--	---

Table 5.2: Alphabetic List of RUNSPEC Keywords

Note that a number of keywords can be classified under several topics, so the Topic column should only be used as a general reference guide.

5.2.1 EXAMPLE

A typical RUNSPEC section using various keywords is shown below and on the next few pages for reference.

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      DEFINE THE TITLE FOR THE RUN
--
TITLE
CASE CASENAME - SIMULATION RUN TITLE
--
--      DEFINE THE START DATE FOR THE RUN
--
START
      01 'JAN' 2021 /
--
--      SWITCH NO SIMULATION MODE FOR DATA CHECKING COMMENT OUT TO RUN THE MODEL
--
NOSIM
--
-- FLUID TYPES AND TRACER OPTIONS
--
--
--      OIL PHASE IS PRESENT IN THE RUN
--
OIL
--
--      WATER PHASE IS PRESENT IN THE RUN
--
WATER
--
--      GAS PHASE IS PRESENT IN THE RUN
--
GAS
--
--      DISSOLVED GAS IN LIVE OIL IS PRESENT IN THE RUN
--
DISGAS
--
--      VAPORIZED OIL IN WET GAS IS PRESENT IN THE RUN
--
VAPOIL
--
--      NUMBER AND TYPE OF TRACERS
--
--      NO OIL  NO WAT  NO GAS  NO ENV  DIFF    MAX    MIN    TRACER
--      TRACERS TRACERS TRACERS TRACERS CONTL  NONLIN NONLIN NONLIN
TRACERS
      0          0          1          0      'NODIFF' 1*      1*      1* /
```

```

-----
-- GRID AND EQUILBRATION DIMENSIONS AND OPTIONS
-----
--
--      MAX      MAX      MAX
--      NDIVIX  NDIVIY  NDIVIZ
DIMENS
--      46      112      22
--
--      FAULT
--      SEGMS
FAULTDIM
--      10000
--
--      MAX      MAX      RSVD      TVDP      TVDP
--      EQLNUM  DEPTH  NODES    TABLE  NODES
EQLDIMS
--      9       1*     20       1        1
--
--      MAX      TOTAL    INDEP    FLUX      TRACK    CBM      OPERN    WORK    WORK    POLY
--      FIPNUM  REGNS    REGNS    REGNS    REGNS    REGNS    REGNS    REAL   INTG    REGNS
REGDIMS
--      9       9       1*     1*     1*     1*     1*     1*     1*     1*
--
--      NEG      MAX      MAX
--      MULTS    MULTNUM PINCHNUM
GRIDOPTS
--      YES     9       1*
--
--      ACTIVATE EQUILIBRATION OPTIONS
--      MOBILE ENDPOINT(MOBILE) STEADY STATE(QUIESC) THRESHOLD(THPRES)
--      IRREVERSIBLE THRESHOLD(IRREVERS)
EQLOPTS
--      'MOBILE'  'QUIESC'  'THPRES'  'IRREVERS'
-----
-- ROCK AND SATURATION TABLES DIMENSIONS AND OPTIONS
-----
--
--      MAX      MAX      MAX      MAX      MAX      MAX      E300
--      NTSFUN  NTPVT  NSSFUN  NPPVT  NTFIP  NRPVT  BLANK  NTEND
TABDIMS
--      15     9      40     30     9      25     1*     1
--
--      DIRC    REVERSE  MAX      MAX
--      SCALE  SCALE    TABLES  NODES
ENDSCALE
--      NODIR  REVERS  1*     1*
--
--      ACTIVATE RELATIVE PERMEABILITY ASSIGNMENT HYSTERESIS OPTIONS
--      DIRECTIONAL(DIRECT) IRREVERSIBLE(IRREVERS) HYSTERESIS(HYSTER)
SATOPTS
--      'DIRECT'  'IRREVERS'  'HYSTER'

```

```

-- -----
-- GROUP, WELL AND VFP TABLE DIMENSIONS
-- -----
--
-- WELL      WELL      GRUPS   GRUPS
-- MXWELS    MXCONS   MXGRPS  MXGRPW
WELLDIMS
--      60      110      18      40 /
--
-- DEFINE WELL PRODUCTIVITY SCALING TABLE DIMENSIONS
-- MAX      MAX
-- TABLES  ENTRIES
PIMTDIMS
--      1      51 /
--
-- INJECTING VFP TABLES
-- VFP      VFP      VFP
-- MXMFLO   MXMTHP   NMMVFT
VFPIDIMS
--      10     10     12 /
--
-- PRODUCING VFP TABLES
-- VFP      VFP      VFP      VFP      VFP      VFP
-- MXMFLO   MXMTHP   MXMWFR   MXMGFR   MXMALQ   NMMVFT
VFPPDIMS
--      20     10     10     10     6      9 /
--
-- MISCELLANEOUS OPTIONS
-- -----
--
-- USER DEFINED ARGUMENT DIMENSIONS FACILITY
-- MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      RAND
-- FUNCS    ITEMS    CONNS   FIELD   GROUP   REGS    SEGM   WELL   AQUF   BLCKS   OPT
UDQDIMS
--      16     16     0      0      0      0      0      0      0      0      N /
--
-- USER DEFINED ARGUMENT DIMENSIONS
-- NO.      NOT      TOTAL
-- ARGS     USED     UDQ
UDADIMS
--      2      1*     1* /
--
-- USER DEFINED DEFAULT VALUES
-- SEED     RANGE   UNDEFINED   COMPARISON
-- INTG     -AND+   VALUE       TOLERANCE
UDQPARAM
--      1      1*     0.0        1.0E-4 /
--
-- NUMERICAL AND RUN CONTROL OPTIONS
-- -----
--
-- SET STACK SIZE FOR LINEAR SOLVER
--
-- NSTACK
--      30 /
--
-- DEFINE THE NUMBER OF ITERATIONS TO UPDATE WELL FLOW TARGETS
--
-- NUPCOL
--      3 /
--
-- SKIP      ACTIVATE
-- OPTIONS   OPTION
OPTIONS
--      77*0  1 /

```

```

-----
-- INPUT AND OUTPUT OPTIONS
-----
--
--          METRIC SYSTEM OF UNITS FOR BOTH INPUT AND OUTPUT
--
METRIC
--
--          SWITCH ON THE UNIFIED INPUT FILES OPTION
--
UNIFIN
--
--          SWITCH ON THE UNIFIED OUTPUT FILES OPTION
--
UNIFOUT
--
--          MESS  COMMT WARN  PROBL ERROR BUG  MESS COMMT WARN  PROBL ERROR BUG
--          LIMIT LIMIT LIMIT LIMIT LIMIT LIMIT STOP STOP  STOP  STOP  STOP  STOP
MESSAGES
3000  1*    1000  1000  1*    1*    1*    1*    9000  1*    9000  1*    /
--
--          DEBUG PRINTING OPTIONS
--
DEBUG
      8*0    1      11*0  1      30*0                                /
-- =====

```

The above example is rather extensive but is not unrealistic in terms of the features being activated and the array size declarations.

Previously on 32-bit systems, array sizes were important to ensure that there was sufficient addressable memory to load the input deck and to be able to run given the memory limitations, this is no longer a concern on modern 64-bit systems like Linux.

5.3 KEYWORD DEFINITIONS

5.3.1 ACTDIMS – ACTION KEYWORD DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ACTDIMS keyword defines the maximum number of properties associated with the ACTION keyword. The ACTION keyword allows the user to enter computational logic and calculations to the simulation run based on the how the simulation run is proceeding.

No.	Name	Description	Default
1	MXACTNS	A positive integer value that defines the maximum number of ACTION keywords defined in the input deck.	2
2	MXLINES	A positive integer value that defines the maximum number of lines in an ACTION statement.	50
3	MXCHARS	A positive integer value that defines the maximum characters in an ACTION statement.	80
4	MXSTATMS	A positive integer value that defines the maximum number of conditional statements in the ACTION statement.	3
Notes: 1) The keyword is terminated by a "/".			

Table 5.3:ACTDIMS Keyword Description

Only the ACTIONX keyword and computational logic have been implemented in OPM Flow.

Example

```
--      ACTION      ACTION      ACTION      ACTION
--      MXACTNS      MXLINES      MXCHARS      MXSTATMS
ACTDIMS      2          50          80          3          /
```

The above example defines the default values for the ACTDIMS keyword.

5.3.2 ACTPARAM – DEFINE ACTION FACILITY TARGET AND TOLERANCE PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ACTPARAM keyword defines the maximum target percent value for the ACTION series of keywords and the fractional equality tolerance for determining if two numbers are numerically equal when comparing values using the ACTION series of keywords. The ACTION keyword allows the user to enter computational logic and calculations to the simulation run based on the how the simulation run is proceeding.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	MXTOLS	A positive real value that defines the maximum target percent number for the ACTION series of keywords. The default value of 100 means the target is not applied.			Defined
		percent 100.0	percent 100.0	percent 100.0	
2	MXEQLS	MXEQLS a real positive number greater than zero and less than one that defines the tolerance used to determine if two real values are equal for comparing values in the ACTION series of keywords. Floating-point numbers (as implemented in computers) are never exact, one cannot compare floating point numbers for exact equality. Thus, MXEQLS defines a tolerance. For example, the default value of 1×10^{-4} means that if the difference between two real values is less than 1×10^{-4} then the values are considered equal.			Defined
		fraction 1×10^{-4}	fraction 1×10^{-4}	fraction 1×10^{-4}	

Notes:

1) The keyword is terminated by a “/”.

Table 5.4: ACTPARAM Keyword Description

Although this keyword is read by OPM Flow, the ACTION and UDQ computational logic and calculations have not been fully implemented and therefore this keyword should not be used as it may result in OPM Flow terminating.

Example

```
--
--      ACTION      ACTION
--      MXTOLS      MXEQLS
ACTPARAM
          5.0        1.0E-4 /
```

The above example defines the maximum tolerance to be 5% and the equality tolerance to be the default value of 1.0×10^{-4} .

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.3 AITS – ACTIVATE INTELLIGENT TIME STEPPING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Turns on the commercial simulator's intelligent time stepping.

This keyword is ignored by OPM Flow and has no effect on the simulation

5.3.4 AITSOFF – DEACTIVATE INTELLIGENT TIME STEPPING

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

Turns off the commercial simulator's intelligent time stepping.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.5 ALKALINE – ACTIVATE THE ALKALINE PHASE AND MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicates that an alkaline phase is present in the model and to activate the alkaline model in the run. The keyword will also invoke data input file checking to ensure that all the required alkaline model input parameters are defined in the input deck.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ALKALINE PHASE IS PRESENT IN THE RUN
--
ALKALINE
```

The above example declares that the alkaline phase is active in the model to activate alkaline model.

5.3.6 API – ACTIVATE API TRACKING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on API tracking so that the various “oil types” are tracked in the model.

In many reservoirs the initial API gravity of oil varies with depth due to the heavy viscous fractions occupying the deepest part of the reservoir whilst the lighter more mobile fractions will occupy the upper part of the reservoir. As a reservoir is depleted the API gravity of oil in a cell will gradually change as the different fluids mix.

In OPM Flow it is possible to define different PVT regions in a reservoir; as in all finite difference formulated simulators, oil moving from one region to another will suddenly assume the properties of that region it has moved to. The fluid type tracking option allows the smooth change of PVT properties in a cell to be simulated by correlating PVT properties against the API gravity of oil.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE THE API TRACKING OPTION
--
API
```

The above example switches on the API tracking facility.

5.3.7 AQUDIMS – DEFINE AQUIFER DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The AQUDIMS keyword defines the dimensions of the various aquifer property data. The data is normally entered on a single line and is terminated by a “/”.

No.	Name	Description	Default
1	MXNAQN	A positive integer value that defines the AQUNUM keyword maximum number of lines associated with this keyword, that is the maximum number of <u>numerical aquifers</u> .	1
2	MXNAQC	A positive integer value that defines the AQUCON keyword maximum number of lines of connection data associated with this keyword, that is the maximum number of lines of connection data for <u>numerical aquifers</u> .	1
3	NIFTBL	A positive integer value that defines the AQUTAB keyword maximum number of Carter-Tracy aquifer tables associated with this keyword.	1
4	NRIFTB	A positive integer value that defines the AQUTAB keyword maximum number of rows in the Carter-Tracy aquifer tables associated with this keyword. NRIFTB must not be less than 36 in order to accommodate the default infinite acting Carter-Tracy aquifer influence function.	36
5	NANAQ	A positive integer value that defines the AQUFET and AQUCT maximum number of analytical aquifers defined by these two keywords.	1
6	NCAMAX	A positive integer value that defines the maximum number of cells connected to an <u>analytical aquifer</u> .	1
7	MXNALI	A positive integer value that defines the maximum number of aquifer lists.	0
8	MXAAQL	A positive integer value that defines the maximum number of <u>analytic aquifers</u> in any single aquifer list as defined by (7).	0
Notes: 1) The keyword is terminated by a “/”.			

Table 5.5: AQUDIMS Keyword Description

Example

```
--
--      AQF      AQF      AQF      AQF      AQF      AQF      AQF      AQF
--      MXAQN    MXNAQC   NIFTBL  NRIFTB   NANAQU   NCAMAX  MXNALI  MXAAQL
AQUDIMS 1*      1*      1*      1*      1*      1*      1*      1*      /
```

The above example defines the default values for the AQUDIMS keyword.

5.3.8 AUTOREF - DEFINE AUTO REFINEMENT OPTIONS

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

The AUTOREF keyword activates the Auto Refinement option and defines the parameters for this feature.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.9 BIGMODEL – ACTIVATE BIG MODEL OPTION (RETIRED)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The original intention in the commercial simulator was to define an optimized memory allocation method to handle large models; this has since become redundant and has been retired in the commercial simulator.

This keyword is ignored by both OPM Flow and the commercial simulator and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.10 BLACKOIL – ACTIVATE BLACK OIL PHASES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword switches on the black-oil formulation, and is equivalent to setting the phases present in the model to be oil, vaporized oil, gas, and dissolved gas. Note if water is present in the model this needs to be explicitly stated via the WATER keyword in the RUNSPEC section (see also the DEADOIL and LIVEOIL keywords in the RUNSPEC section). The keyword is used by the commercial simulator's compositional THERMAL option to set the phases present in the model.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

The following example activates the black-oil phases in the model.

```
--
--      ACTIVATE BLACK-OIL PHASES
--
BLACKOIL
```

Alternatively one could explicitly declare the phases using the following keywords in the RUNSPEC section.

```
--
--      OIL PHASE IS PRESENT IN THE RUN
--
OIL
--
--      VAPORIZED OIL IN WET GAS IS PRESENT IN THE RUN
--
VAPOIL
--
--      GAS PHASE IS PRESENT IN THE RUN
--
GAS
--
--      DISSOLVED GAS IN LIVE OIL IS PRESENT IN THE RUN
--
DISGAS
```

The above example switches on the black-oil phases in the model.

5.3.11 BPARA – ACTIVATE BLOCK PARALLEL LICENSE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The BPARA keyword activates the block parallel license in the commercial simulator. There is no data required for this keyword; however the keyword should be followed by the PARALLEL keyword in the RUNSPEC section, as illustrated in the example below.

There is no data required for this keyword and there is no terminating “/” for this keyword.

OPM Flow is an open source project and therefore there is no license management of the various implemented options or the number of cores/threads that can be utilized; hence, this keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to run OPM Flow in parallel mode.

Example

```
--
--      ACTIVATE BLOCK PARALLEL LICENSE
--
BPARA
--
--      PARALLEL MULTI-CORE OPTIONS
--      NDMAIN      MACHINE TYPE
PARALLEL
      8      DISTRIBUTED
/
```

The above example sets the number of domains (or processors) to eight and for the simulation to run in block parallel mode. This has no effect in OPM Flow input decks.

5.3.12 BPIDIMS – DEFINE THE DIMENSIONS OF THE INTERPOLATED BLOCK QUANTITIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The BPDIMS keyword defines the dimensions of the interpolated grid block quantities for the BPR_X, BHD_X, BHDF_X, BSCN_X and BCTRA_X, etc. variables declared in the SUMMARY section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.13 BRINE – ACTIVATE BRINE TRACKING OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

The BRINE keyword activates the standard Brine Tracking model and optionally defines the water phase to have various salinities if the ECLMC keyword in the RUNSPEC section has been used to activate the Multi-Component Brine model, that allows for the water phase to have multiple water salinities. Note that the Multi-Component Brine model is not supported by OPM Flow.

No.	Name	Description	Default																										
I	SALTS	An optional character vector string that defines the salts to be tracked for when the Multi-Component Brine model has been activated by the ECLMC keyword in the RUNSPEC section.	None																										
		SALTS should be set to one or more of the following salt chemical formulae:																											
		<table><thead><tr><th><u>Salt Name</u></th><th><u>Salt Chemical Formulae</u></th></tr></thead><tbody><tr><td>Sodium Chloride</td><td>NaCl</td></tr><tr><td>Potassium Chloride</td><td>KCl</td></tr><tr><td>Calcium Chloride</td><td>CaCl₂</td></tr><tr><td>Magnesium Chloride</td><td>MgCl₂</td></tr><tr><td>Sodium Carbonate</td><td>Na₂CO₃</td></tr><tr><td>Potassium Carbonate</td><td>K₂CO₃</td></tr><tr><td>Calcium Carbonate</td><td>CaCO₃</td></tr><tr><td>Magnesium Carbonate</td><td>MgCO₃</td></tr><tr><td>Sodium Sulfate</td><td>Na₂SO₄</td></tr><tr><td>Potassium Sulfate</td><td>K₂SO₄</td></tr><tr><td>Calcium Sulfate</td><td>CaSO₄</td></tr><tr><td>Magnesium Sulfate</td><td>MgSO₄</td></tr></tbody></table>		<u>Salt Name</u>	<u>Salt Chemical Formulae</u>	Sodium Chloride	NaCl	Potassium Chloride	KCl	Calcium Chloride	CaCl ₂	Magnesium Chloride	MgCl ₂	Sodium Carbonate	Na ₂ CO ₃	Potassium Carbonate	K ₂ CO ₃	Calcium Carbonate	CaCO ₃	Magnesium Carbonate	MgCO ₃	Sodium Sulfate	Na ₂ SO ₄	Potassium Sulfate	K ₂ SO ₄	Calcium Sulfate	CaSO ₄	Magnesium Sulfate	MgSO ₄
		<u>Salt Name</u>		<u>Salt Chemical Formulae</u>																									
		Sodium Chloride		NaCl																									
		Potassium Chloride		KCl																									
		Calcium Chloride		CaCl ₂																									
		Magnesium Chloride		MgCl ₂																									
		Sodium Carbonate		Na ₂ CO ₃																									
		Potassium Carbonate		K ₂ CO ₃																									
		Calcium Carbonate		CaCO ₃																									
		Magnesium Carbonate		MgCO ₃																									
		Sodium Sulfate		Na ₂ SO ₄																									
		Potassium Sulfate		K ₂ SO ₄																									
Calcium Sulfate	CaSO ₄																												
Magnesium Sulfate	MgSO ₄																												
Note that the ECLMC option is currently not available in OPM Flow, so only the BRINE keyword without the optional SALT variables should be declared in the input deck.																													

Notes:

- There is no data required for this keyword if the standard Brine Tracking option is being activated and there should be no terminating “/” in this case. However, if the Multi-Component Brine Tracking option has been invoked by the ECLMC keyword, a list of SALTS must be supplied and in this case.
- The keyword is terminated by a “/”.

Table 5.6: BRINE Keyword Description

See also the PRECSALT and VAPWAT keywords in the RUNSPEC section that activates OPM Flow’s Salt Precipitation model, and the PVTWSALT keyword in the PROPS section to define the water properties with respect to salt concentration.

Example

The first example activates the standard Brine model and has no terminating “/”.

```
--
--      ACTIVATE STANDARD BRINE MODEL IN THE RUN
--
BRINE
```

The second example illustrates how to activate OPM Flow’s Salt Precipitation model which is under development, but is currently unavailable for this release.

```
--
--      ACTIVATE STANDARD BRINE MODEL IN THE RUN
--
BRINE
--
--      ACTIVATE THE OPM FLOW SALT PRECIPITATION MODEL (OPM FLOW KEYWORD)
--
PRECSALT
--
--      VAPORIZED WATER IN DRY/WET GAS IS PRESENT IN THE RUN (OPM FLOW KEYWORD)
--
VAPWAT
```

The third and final example activates the Multi-Component brine model with four different salts.

```
--
--      ACTIVATE MULTI-COMPONENT BRINE MODEL
--
ECLMC
--
--      DEFINE WATER PHASE MULTI-COMPONENT BRINE COMPONENTS
--
--      SALT1   SALT2   SALT3   SALT4   SALT5
BRINE        NA CL   CA CL2  MG C03  K2 C03
/
```

This option is currently not available in OPM Flow.

5.3.14 CART – ACTIVATE CARTESIAN GEOMETRY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

CART activates the Cartesian grid geometry for the main model, as oppose to a radial geometry. This is the default geometry and therefore the keyword does have to be used to activate this type of geometry.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.15 CBMOPTS – DEFINE COAL BED METHANE OPTIONS

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword sets the options for the Coal Bed Methane model which is activated via the COAL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>	<i>G</i>	<i>H</i>	<i>I</i>	<i>J</i>	<i>K</i>	<i>L</i>	<i>M</i>	<i>N</i>	<i>O</i>	<i>P</i>	<i>Q</i>	<i>R</i>	<i>S</i>	<i>T</i>	<i>U</i>	<i>V</i>	<i>W</i>	<i>X</i>	<i>Y</i>	<i>Z</i>
----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------

5.3.16 CO2STORE – ACTIVATE THE CO₂ STORAGE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The CO2STORE keyword activates the carbon dioxide (CO₂) storage model for the run to account for both carbon dioxide and water phase solubility, via the simulator's CO₂-Brine PVT model. This keyword is a compositional keyword in the commercial simulator but has been implemented in OPM Flow's black-oil model.

The CO₂-Brine PVT model computes the PVT properties such as density, viscosity, and enthalpy internally as functions of pressure, temperature, and composition by using analytic correlations and models from the literature rather than by interpolation from tabulated values. These values are transformed to the standard black oil equivalent PVT tables internally by the simulator. A full description of the underlying PVT models is described by Sandve et al.¹⁶. This means that the normal PVT keywords like DENSITY, PVTO, PVDG etc. are not required by OPM Flow when this model is activated, and if entered will be ignored by the simulator. Note that the CO₂-Brine PVT properties depend on the salinity and must therefore be entered in the PROPS section. Region based salinity can be provided using the SALINITY keyword.

The CO2STORE keyword must be used together with the GAS and OIL keywords in the RUNSPEC section to declare that the gas and oil phases are present in the model. Internally the oil phase refers to the brine and the gas phase to CO₂. Input / output keywords need to be consistent with this assumption. i.e., SGOF (gas-oil relative permeability) is used for the CO₂-Brine relative permeability, FOIP (Field Oil-In-Place) shows the total amount of brine in the reservoir, etc.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

The example below declares that the carbon dioxide storage model is active for the run to account for both carbon dioxide and water phase solubility using OPM Flow's CO₂-Brine PVT model. Again, note that the OIL phase refers to the brine and the GAS phase to CO₂.

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
-- FLUID TYPES AND TRACER OPTIONS
--
--
-- OIL PHASE IS PRESENT IN THE RUN BUT IS THE BRINE PHASE FOR CO2STORE
OIL
--
-- GAS PHASE IS PRESENT IN THE RUN BUT IS THE CO2 PHASE FOR CO2STORE
GAS
--
-- ACTIVATE CO2 STORAGE IN THE MODEL (OPM FLOW CO2 STORAGE KEYWORD)
--
CO2STORE
```

¹⁶ Tor Harald Sandve I, Sarah E. Gasda, Atgeirr Rasmussen, and Alf Birger Rustad. Convective dissolution in field scale CO₂ storage simulation using the OPM Flow simulator. Submitted to TCCS 11 – Trondheim Conference on CO₂ Capture, Transport and Storage Trondheim, Norway – June 21-23, 2021.

The second part of the example covers the data required for the PROPS section, in which the input keywords need to be consistent with the OIL phase referring to the Brine and the GAS to CO₂; that is SGOF (gas-oil relative permeability) is used to define the CO₂-Brine relative permeability table.

```
-- =====
--
-- PROPS SECTION
--
-- =====
PROPS
--
--      ROCK COMPRESSIBILITY
--
--      REFERENCE PRESSURE IS TAKEN FROM THE HCPV WEIGHTED RESERVOIR PRESSURE
--
--      REF PRES  CF
--      BARSA      1/BARSA
--      -----
ROCK
--      1.0000      1.0E-06 / ROCK COMPRESSIBILITY
--
--      GAS-OIL RELATIVE PERMEABILITY TABLES (SGOF) - CO2STORE PHASES
SGOF
--      SG          KRG          KROG          PCOG
--      FRAC          PSIA
--      -----
--      0.00000      0.000000      1.00000      0.0000
--      1.00000      1.000000      0.00000      0.0000 / TABLE No. 01
--
--      SET SALINITY FOR ALL CELLS (OPM FLOW KEYWORD)
--
--      SALINITY
--      0.7 /
```

No other data is required to define the fluid and rock properties in the PROPS section as the data is generated from internal analytic correlations and models by the simulator. Finally, note that units for salinity are to the 10⁻³, thus for metric units we have 10⁻³ × kg-M/kg.

The third and final part of the example sets the maximum dissolution rate for convective CO₂ mixing via the DRSDTCON keyword in the SCHEDULE section.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
--      CO2 CONVECTIVE DISSOLUTION PARAMETER
--
--      DRSDTCON
--      CO2 CONV
--      DISSOLN
--      -----
--      0.04 /
```

See the DRSDTCON keyword in the SCHEDULE section for further information on this keyword.

5.3.17 COAL – ACTIVATE THE COAL PHASE (CBM MODEL)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COAL keyword activates the coal phase and the Coal Bed Methane (“CBM”) model for the run.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE THE COAL PHASE (CBM MODEL) IN THE MODEL
--
COAL
```

The above example declares that the Coal phase is active in the run and activates the CBM model option.

5.3.18 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

See [COLUMNS – Define Input File Column Margins](#) in the GLOBAL section for a full description.

5.3.19 CPR – ACTIVATE CONSTRAINED PRESSURE RESIDUAL (“CPR”) LINEAR SOLVER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Turns on the Constrained Pressure Residual (“CPR”) linear solver. There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

Example

```
--
--      ACTIVATE CONSTRAINED PRESSURE RESIDUAL LINEAR SOLVER FOR THE RUN
--
CPR
```

The above example activates linear solver for the run.

5.3.20 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See [DEBUG – Define the Debug Data to be Printed to File](#) in the GLOBAL section for a full description.

5.3.21 DIFFUSE – ACTIVATE MOLECULAR DIFFUSION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DIFFUSE keyword activates OPM Flow's Molecular Diffusion option based on fluid and grid data (Sandve et al.¹⁷), similar to the commercial simulator. For field-scale simulations diffusion is a sub-grid phenomenon and is typically not explicitly represented in the flow equations. However, for simulations on the laboratory scale diffusion plays a direct role and therefore needs to be explicitly represented in the flow equations. Diffusion coefficients that control the diffusion depend on temperature, pressure, and salinity. In OPM Flow, the diffusion coefficients are computed internally for pure water using McLachlan and Danckwerts¹⁸ and modified to account for salinity using Ratcliff and Holdcroft¹⁹. The effect of the porous media on the diffusion is modeled using the relation suggested by Millington and Quirk²⁰. The coefficients can also be given for each PVT region as an input parameter using the DIFFC keyword in the PROPS section.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Note

The option has been tested in combination with the CO2STORE keyword, but not for the general case at this point.

Example

```
--
--      ACTIVATE MOLECULAR DIFFUSION OPTION
--
DIFFUSE
```

The above example switches on the molecular diffusion facility.

¹⁷ Tor Harald Sandve I, Sarah E. Gasda, Atgeirr Rasmussen, and Alf Birger Rustad. Convective dissolution in field scale CO₂ storage simulation using the OPM Flow simulator. Submitted to TCCS 11 – Trondheim Conference on CO₂ Capture, Transport and Storage Trondheim, Norway – June 21-23, 2021.

¹⁸ McLachlan, C. N. S., & Danckwerts, P.V. (1972). Desorption of carbon dioxide from aqueous potash solutions with and without the addition of arsenite as a catalyst. Trans. Inst. Chem. Eng. 50, 300-309.

¹⁹ Ratcliff, G.A., & Holdcroft, J. G. (1963). Diffusivities of gases in aqueous electrolyte solutions. Trans. Inst. Chem. Eng. 41(10), 315-319.

²⁰ Millington, R. J., & Quirk, J. P. (1961). Permeability of porous solids. Transactions of the Faraday Society, 57, 1200-1207

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.22 DIMENS – DEFINE THE DIMENSION OF THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DIMENS defines the dimensions of the model entered as integer vector. The keyword can be used with all grid types.

No.	Name	Description	Default
1	NX	A positive integer value that defines the number of grid blocks in the x direction for Cartesian grids or the number of grid blocks in the r direction for radial grids	None
2	NY	A positive integer value that defines the number of grid blocks in the y direction for Cartesian grids or the number of grid blocks in the theta direction for radial grids.	None
3	NZ	A positive integer value that defines the number of grid blocks in the z direction for both Cartesian and radial grids.	None
Notes: 1) The keyword is terminated by a "/".			

Table 5.7: DIMENS Keyword Description

Note that NX, NY and NZ are **not maximum** values but the actual size of the grid. OPM Flow applies these parameters when reading in particular data sets. For example if NX, NY, and NZ are set to 10, 10 and 10 respectively, then for the grid property data like PORO; OPM Flow expects to read in 10 x 10 x 10 or 1,000 porosity values for the PORO array. If the number of porosity values is not equal to 1,000 then OPM Flow will produce an error.

Example

```
--
--      MAX      MAX      MAX
--      NDIVIX  NDIVIY  NDIVIZ
DIMENS
      46      112      22      /
```

The above example defines the dimensions for the Norne model of 46 cells in the x direction, 112 cells in the y direction and 22 cells in the z direction.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.23 DISGAS – ACTIVATE THE DISSOLVED GAS PHASE IN THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicates that dissolved gas is present in live²¹ oil in the model and the keyword should only be used if there is both oil and gas phases in the model. The keyword may be used for oil-water and oil-water-gas input decks that contain the oil and gas phases. The keyword will also invoke data input file checking to ensure that all the required oil and gas phase input parameters are defined in the input deck.

If the oil has a constant and uniform dissolved gas concentration, Gas-Oil Ratio (“GOR”), and if the reservoir pressure never drops below the saturation pressure (bubble point pressure), then the model can be run more efficiently by omitting the GAS and DISGAS keywords from the RUNSPEC section, treating the oil as a dead oil²², and defining a constant Rs (GOR) value with keyword RSCONST or RSCONSTT in the PROPS section. This results in the model being run with as a dead oil problem with no active gas phase. However, OPM Flow takes into account the constant Rs in the calculations and reporting.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--          DISSOLVED GAS IN LIVE OIL IS PRESENT IN THE RUN
--
DISGAS
```

The above example declares that the dissolved gas in the oil phase is active in the model.

²¹ “Live” oil is oil that contains gas in solution, which is normally the case for most conventional oil reservoirs. However, for oil reservoirs classified as heavy oil reservoirs, the in situ dissolved gas may be negligible and oil would then be classified as gas-free oil which is commonly referred to as “dead” oil.

²² “Dead” oil is oil that it contains no dissolved gas or a relatively thick oil or residue that has lost its volatile components.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.24 DISPDIMS – DEFINE THE MAXIMUM NUMBER OF DISPERSION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DISPDIMS key defines the maximum number of dispersion tables, and the maximum number of velocity and concentration elements per table.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.25 DUALPERM – ACTIVATE DUAL PERMEABILITY MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DUALPERM keyword activates the Dual Permeability option and the Dual Porosity option for the run. In a dual porosity system flow occurs between the matrix and the fracture only, whereas in a dual permeability system flow also occurs between the matrix grid blocks²³ ²⁴ ²⁵ ²⁶ and ²⁷.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE DUAL PERMEABILITY MODEL
--
DUALPERM
```

The above example declares that the Dual Permeability option is active for the run.

²³ Warren, J.E. and Root, P.J. 1963. The Behavior of Naturally Fractured Reservoirs. SPE J. 3 (3): 245–255. SPE-426-PA. <http://dx.doi.org/10.2118/426-PA>.

²⁴ Gringarten, A.C. 1984. Interpretation of Tests in Fissured and Multilayered Reservoirs With Double-Porosity Behavior: Theory and Practice. J Pet Technol 36 (4): 549-564. SPE-10044-PA. <http://dx.doi.org/10.2118/10044-PA>.

²⁵ Serra, K., Reynolds, A.C., and Raghavan, R. 1983. New Pressure Transient Analysis Methods for Naturally Fractured Reservoirs (includes associated papers 12940 and 13014). J Pet Technol 35 (12): 2271-2283. SPE-10780-PA. <http://dx.doi.org/10.2118/10780-PA>.

²⁶ Barenblatt, G.E., Zheltov, I.P., and Kochina, I.N. 1960. Basic Concepts in the Theory of Homogeneous Liquids in Fissured Rocks. J. Appl. Math. Mech. 24: 1286-1303.

²⁷ Kazemi, H., Merrill JR., L. S., Porterfield, K. L., and Zeman, P. R. “Numerical Simulation of Water-Oil Flow in Naturally Fractured Reservoirs,” paper SPE 5719, Society of Petroleum Engineers Journal (1976) 16, No. 6, 317-326.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.26 DUALPORO – ACTIVATE DUAL POROSITY MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DUALPORO keyword activates the Dual Porosity option for the run. In a dual porosity system flow occurs between the matrix and the fracture only, whereas in a dual permeability system flow also occurs between the matrix grid blocks²⁸²⁹³⁰³¹ and ³².

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE DUAL POROSITY MODEL
--
DUALPORO
```

The above example declares that the Dual Porosity option is active for the run.

²⁸ Warren, J.E. and Root, P.J. 1963. The Behavior of Naturally Fractured Reservoirs. SPE J. 3 (3): 245–255. SPE-426-PA. <http://dx.doi.org/10.2118/426-PA>.

²⁹ Gringarten, A.C. 1984. Interpretation of Tests in Fissured and Multilayered Reservoirs With Double-Porosity Behavior: Theory and Practice. J Pet Technol 36 (4): 549-564. SPE-10044-PA. <http://dx.doi.org/10.2118/10044-PA>.

³⁰ Serra, K., Reynolds, A.C., and Raghavan, R. 1983. New Pressure Transient Analysis Methods for Naturally Fractured Reservoirs (includes associated papers 12940 and 13014). J Pet Technol 35 (12): 2271-2283. SPE-10780-PA. <http://dx.doi.org/10.2118/10780-PA>.

³¹ Barenblatt, G.E., Zheltov, I.P., and Kochina, I.N. 1960. Basic Concepts in the Theory of Homogeneous Liquids in Fissured Rocks. J. Appl. Math. Mech. 24: 1286-1303.

³² Kazemi, H., Merrill JR., L. S., Porterfield, K. L., and Zeman, P. R. “Numerical Simulation of Water-Oil Flow in Naturally Fractured Reservoirs,” paper SPE 5719, Society of Petroleum Engineers Journal (1976) 16, No. 6, 317-326.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.27 DYNRDIMS – DEFINE DYNAMIC REGION DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DYNRDIMS keyword defines the dimensions for the parameters used by the Dynamic Regions facility, including the maximum number of dynamic regions. The Dynamic Regions facility allows for property and reporting regions to vary as the run progresses, based on the parameters and logic defined by the DYNAMICR keyword in the SOLUTION and PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.28 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

See [ECHO – Activate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

5.3.29 ECLMC – ACTIVATE MULTI-COMPONENT BRINE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ECLM keyword activates the Multi-Component Brine model that allows for the water phase to have multiple water salinities. The keyword should be used in conjunction with the BRINE keyword in the RUNSPEC. Both keywords must be specified to activate the Multi-Component Brine model, whereas the BRINE keyword only is required to activate the standard brine tracking model.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

The first example activates the standard Brine Tracking model.

```
--
--      ACTIVATE STANDARD BRINE MODEL
--
BRINE
```

The next example shows the ECLMC and BRINE keywords for when the Multi-Component Brine model is required.

```
--
--      ACTIVATE MULTI-COMPONENT BRINE MODEL
--
ECLMC
--
--      DEFINE WATER PHASE MULTI-COMPONENT BRINE COMPONENTS
--
--      SALT1    SALT2    SALT3    SALT4    SALT5
BRINE
--      NACL     CACL2    MGC03                                     /
```

The above example activates the Multi-Component Brine model with three different water salinities.

5.3.30 END – DEFINE THE END OF THE INPUT FILE

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

See [END – Define the End of the Input File](#) in the GLOBAL section for a full description.

5.3.31 ENDINC – DEFINE THE END OF AN INCLUDE FILE

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

See [ENDINC – Define the End of an Include File](#) in the GLOBAL section for a full description.

5.3.32 ENDSCALE – ACTIVATE RELATIVE PERMEABILITY END-POINT SCALING OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

The ENDSCALE keyword activates OPM Flow's relative permeability end-point scaling option. The relative permeability functions are defined using the either the:

- 1) SWOF, SGOF, SLGOF series of saturation functions, or the
- 2) SWFN, SGFN, SGWFN, SOF2, SOF3, SOF32D series of functions.

And are allocated to the grid cells via the SATNUM keyword.

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWLX, SWLY and SWLZ instead of SWL etc. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWLX, SWLX-, SWLY, SWLY- SWLZ and SWLZ-, instead of SWL or the SWLX, SWLY and SWLZ set of keywords.

The keyword also defines the number of saturation end-point tables that allows for the re-scaling of the saturation functions to be a function of depth as oppose to being a grid property array. This is accomplished via the ENKRVD and ENPVTD keywords in the PROPS section.

No.	Name	Description	Default
I	DIRECT	<p>A character string that activates or deactivates directional end-point scaling option.</p> <p>If DIRECT is set to NODIR then directional end-point scaling is switch off and the same saturation function is used in the x, y and z directions (unless activated otherwise by the SATOPTS keyword in the RUNSPEC section). In this case the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR and SOGCR saturation grid arrays and the KRG, KRORG, KRORW and KRW relative permeability grid cell arrays should be use to enter the grid block end-point data.</p> <p>If DIRECT is to DIRECT then directional end-point scaling is switch on and the same saturation function is used in the x, y and z directions (unless activated otherwise by the SATOPTS keyword in the RUNSPEC section). Here the directional form of the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR and SOGCR saturation grid arrays and the KRG, KRORG, KRORW and KRW relative permeability grid cell arrays should be use to enter the grid block end-point data. For example SWLX, SWLY and SWLZ for SWL.</p> <p>Only the default option is supported by OPM Flow.</p>	NODIR

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
2	IRREVERS	<p>A character string that activates or deactivates non-reversible end-point scaling option.</p> <p>If IRREVERS is set to REVERS then the end-point scaling is set to reversible and results in the same set of end-point arrays being used for flow from the x_i to x_{i+1} direction as for the flow from the x_i to the x_{i-1} for all directions (x, y and z). Here the SWLX, SWLY and SWLZ series of keywords should be used instead of SWL type of keywords.</p> <p>Alternatively, if IRREVERS is set to IRREVERS then the end-point scaling is set to non-reversible and results in different sets of end-point arrays being applied for flow from the x_i to x_{i+1} direction and the x_i to the x_{i-1} direction, for all directions (x, y, z). in this case the SWLX+, SWLX-, SWLY+, SWLY-, SWLZ+ and SWLZ- series of keywords should be utilized instead of SWL or the SWLX, SWLY and SWLZ set of keywords.</p> <p>Only the default option is supported by OPM Flow.</p>	REVERS
3	NTENDP	<p>A positive integer that defines the maximum number of saturation end-point depth tables. The end-point depth tables are used to re-scale the saturation tables as a function of depth as oppose to being a grid block property. NTENDP may also be specified on the TABDIMS keyword, and if specified on both here and on the TABDIMS keyword the maximum value of the two is used.</p> <p>Only the default option is supported by OPM Flow.</p>	1
4	NNODES	A positive integer the defines the maximum number entries for saturation end-point depth tables.	20
5	MODE	<p>A positive integer that activates the options for temperature dependent saturation end-point scaling in the commercial compositional simulator.</p> <p>MODE should be defaulted with either 1* or zero, which means that scaling can only be performed by grid block end-point scaling properties or via saturation end-point depth tables.</p>	0
<p>Notes:</p> <ol style="list-style-type: none"> 1) Note that the IRREVERS option can only be set to IRREVERS if the DIRECT parameter is set equal to DIRECT. 2) The keyword is terminated by a "/". 			

Table 5.8: ENDSCALE Keyword Description

Example

```
--      DIRC   REVERSE   MAX      MAX
--      SCALE  SCALE     TABLES  NODES
ENDSCALE
      NODIR   REVERS    1*        1*                               /
```

The above example invokes the end-point scaling option with end-point scaling being non-directional and reversible with the default number of saturation end-point depth tables (one) with 20 entries per table.

5.3.33 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

See [ENDSKIP – DeActivate Skipping of Keywords and Input Data](#) in the GLOBAL section for a full description.

5.3.34 EQLDIMS – DEFINE THE EQUILIBRATION DATA DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The EQLDIMS keyword defines the maximum number of properties associated with equilibrating the model, that is initializing the model. A reservoir grid can be separated into separate regions in order to apply different pressure regimes and/or fluid contacts. Care should be taken that the different regions are not in communication if the pressures or fluid contacts are different for the various regions, as this would lead to an unstable initialization and would also imply errors in the model description as implemented.

No.	Name	Description	Default
1	NTEQUL	A positive integer value that defines the number of equilibration regions entered using the EQLNUM keyword in the REGIONS section and the number of entries associated with the EQUIL keyword in the SOLUTION section.	1
2	NPRSVD	A positive integer value setting the number of pressure versus depth entries used by OPM Flow in determining equilibration parameters. Unless there is a requirement for a very fine equilibration this parameter should be defaulted.	100
3	NDRXVD	A positive integer value that defines the maximum number of depth entries in equilibration property versus depth tables (RSVD, RVVD, PBVD or PDVD etc.) as defined in the SOLUTION section.	20
4	NTTRVD	A positive integer that defines the maximum number of TVDP tables that describe the initial tracer concentration versus depth.	1
5	NSTRVD	A positive integer that defines the maximum number of depth entries in the TVDP tables as described in (4)	20
Notes: 1) NTEQUL is the exact number of entries must be entered on the EQUIL keyword, otherwise OPM Flow will report an error. It is not a maximum number as for the other region arrays. 2) The keyword is terminated by a "/".			

Table 5.9: EQLDIMS Keyword Description

It is common that the EQLNUM and FIPNUM arrays are identical so that the fluid in-place reporting matches the equilibration regions. Thus, in order to avoid errors in this case, one should just use one array (say the FIPNUM property array) and use the COPY keyword to generate the EQLNUM array.

Example

```
--
--      MAX      MAX      RSVD      TVDP      TVDP
--      EQLNUM    DEPTH    NODES    TABLE    NODES
EQLDIMS
      9          1*      20        1*        1*
/
```

The above example defines nine equilibration regions the default values for the remaining parameters on the EQLDIMS keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.35 EQLOPTS – ACTIVATE THE EQUILIBRATION OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The EQLOPTS keyword defines the equilibration options by stating the character command to activate an option to be used for initializing the model. Multiple commands may be utilized to activate several equilibration options following the keyword.

No.	Name	Description	Default
1	MOBILE	A character string that activates the mobile fluid critical saturation end point correction. If the MOBILE command is stated then this option is activated. This option is not supported and should be defaulted with I* on the keyword.	None
2	QUIESC	A character string that activates the initial quiescence option that modifies the equilibrium calculated phase pressures to ensure that a steady state solution is obtained. This options ensures that there is no flow potential between the grid blocks in a given region, which is the normal case when block-centered equilibration is used by setting BOINIT on the EQUIL keyword to zero in the SOLUTION section. If the QUIESC command is stated then this option is activated. This option is not supported and should be defaulted with I* on the keyword.	None
3	THRPRES	A character string that activates the inter-region equilibration flow option. This option allows for a threshold pressure variable entered via the THRPRES keyword to define a pressure which prevents flow between regions until the THRPRES value between regions is exceeded. If the THRPRES command is stated then this option is activated.	None
4	IRREVER	A character string that activates the irreversible inter-region equilibration flow option. This option can only be invoked if the THPRES command has been stated. The option allows for different THPRES values for different directions. If the IRREVER command is stated then this option is activated. This option is not supported and should be defaulted with I* on the keyword.	None

Notes:

- 1) The keyword is terminated by a “/”.

Table 5.10: EQLOPTS Keyword Description

Example

```
--
--      ACTIVATE EQUILIBRATION OPTIONS
--      MOBILE END-POINT(MOBILE) STEADY STATE(QUIESC) THRESHOLD(THPRES)
--      IRREVERSIBLE THRESHOLD(IRREVERS)
EQLOPTS      'THPRES'  'IRREVERS' /
```

The above example activates the threshold pressure option with different threshold pressure for different directions.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

5.3.36 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

See [EXTRAPMS – Activate Extrapolation Warning Messages](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

5.3.37 FAULTDIM – DEFINE THE NUMBER OF FAULT SEGMENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FAULTDIM keyword defines the maximum number of records (or segments) that can be entered with the FAULTS keyword. The FAULTS keyword defines the faults in the grid than can be used for setting (or re-setting) transmissibility barriers across the fault planes.

No.	Name	Description	Default
I	MFSEGS	A positive integer value that defines the maximum number of records (segments) for the FAULTS keyword.	0
Notes: I) The keyword is terminated by a "/".			

Table 5.11: FAULTDIM Keyword Description

Example

```
--
--      FAULT
--      SEGMS
--
FAULTDIM
      10000
```

The above example defines the maximum number of records that can be entered using the FAULT keyword to be 10,000 segments.

5.3.38 FIELD – ACTIVATE THE OIL FIELD SYSTEM OF UNITS FOR THE MODEL

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword switches on the oil FIELD system of units for the model.

OPM Flow has three sets of units, namely: METRIC, FIELD and LAB and one of these keyword should be invoked in the RUNSPEC section to avoid any ambiguity. Both the simulator input and output units are controlled by including one of the METRIC, FIELD or LAB keywords in the RUNSPEC section of the input file.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      SWITCH ON THE FIELD SYSTEM OF UNITS FOR BOTH INPUT AND OUTPUT
--
FIELD
```

The above example switches on the FIELD system of units for the model.

5.3.39 FMTHMD – ACTIVATE THE FORMAT HISTORY MATCH GRADIENT FILE OPTION

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword switches on formatted output for the History Match Gradient output file, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.40 FMTIN – ACTIVATE THE FORMAT INPUT FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on the Format Input Files option for all input files. Similar to the commercial simulator, OPM Flow has various options for reading various input files and writing the resulting OPM Flow output files as described in Table 5.12.

Process	Keyword	Description	Files
Input	FMTIN	A character string that defines the input files to be formatted as ASCII i.e. text files, as oppose to binary files. The input deck file is always of this type. The option relates to the OPM Flow derived files that used as input, for for example when restarting from another case. <u>If the keyword is omitted then the default is for binary file input.</u>	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTIN	A character string that defines the input files to be non-unified multiple files, as opposed to unified files. In this case, one file is read in per reporting time step, as opposed to all time steps reports being read from one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I
	UNIFIN	A character string that defines the input files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. For this option a single summary file and a single restart file will be read. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Output	FMTOUT	A character string that sets all output files to be formatted as ASCII i.e. text files, as opposed to binary files. The *.PRT, *.LOG and *.DEBUG files are always of this type. The option relates to the OPM Flow output files only. In this case the files will be portable across operating systems, but will also be very large in terms of hard disk space. For this reason it is recommend that the default option is used so that binary files are outputted. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTOUT	A character string that defines the output files to be non-unified multiple files, as opposed to unified files. In this case, one file is written for each reporting time step, as opposed to all time steps reports being written in one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I

Process	Keyword	Description	Files
	UNIFOUT	<p>A character string that defines the output files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single summary file and a single restart file will be generated, as opposed to one file per report time step.</p> <p><u>If the keyword is omitted then the default is for one file per reporting time step.</u></p>	<p>*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY</p>
<p>Notes:</p> <ol style="list-style-type: none"> 1) A binary file is computer-readable but not human-readable. All executable programs are stored in binary files, as are most numeric data files. In contrast, text files are stored in a form (usually ASCII) that is human-readable. 2) For unified files if the run terminates unexpectedly, or there is sufficient disk space, then the last report output is not stored. Their main advantage is that if a number of simulations reside in one directory, their output is organized. There is no limit on the number of reporting steps that a unified file can store. 			

Table 5.12: FMTIN Keyword Description

There is no data required for this keyword.

See also [OPM FLOW OUTPUT FILE FORMATS](#) for a more detailed description of the various file types (ASCII or binary) and file structure formats (unified or non-unified formats).

Example

```
--
--      SWITCH ON THE FORMAT INPUT FILES OPTION
--
FMTIN
```

The above example switches on the format input file option.

5.3.41 FMTOUT – ACTIVATE THE FORMAT OUTPUT FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on the Format Output Files option for all output files. Similar to the commercial simulator, OPM Flow has various options for reading various input files and writing the resulting OPM Flow output files as described in Table 5.13.

Process	Keyword	Description	Files
Input	FMTIN	A character string that defines the input files to be formatted as ASCII i.e. text files, as oppose to binary files. The input deck file is always of this type. The option relates to the OPM Flow derived files that used as input, for for example when restarting from another case. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTIN	A character string that defines the input files to be non-unified multiple files, as opposed to unified files. In this case, one file is read in per reporting time step, as opposed to all time steps reports being read from one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I
	UNIFIN	A character string that defines the input files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. For this option a single summary file and a single restart file will be read. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Output	FMTOUT	A character string that sets all output files to be formatted as ASCII i.e. text files, as opposed to binary files. The *.PRT, *.LOG and *.DEBUG files are always of this type. The option relates to the OPM Flow output files only. In this case the files will be portable across operating systems, but will also be very large in terms of hard disk space. For this reason it is recommend that the default option is used so that binary files are outputted. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTOUT	A character string that defines the output files to be non-unified multiple files, as opposed to unified files. In this case, one file is written for each reporting time step, as opposed to all time steps reports being written in one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I

Process	Keyword	Description	Files
	UNIFOUT	<p>A character string that defines the output files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single summary file and a single restart file will be generated, as opposed to one file per report time step.</p> <p><u>If the keyword is omitted then the default is for one file per reporting time step.</u></p>	<p>*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY</p>
<p>Notes:</p> <ol style="list-style-type: none"> 1) A binary file is computer-readable but not human-readable. All executable programs are stored in binary files, as are most numeric data files. In contrast, text files are stored in a form (usually ASCII) that is human-readable. 2) For unified files if the run terminates unexpectedly, or there is sufficient disk space, then the last report output is not stored. Their main advantage is that if a number of simulations reside in one directory, their output is organized. There is no limit on the number of reporting steps that a unified file can store. 			

Table 5.13: FMOUT Keyword Description

There is no data required for this keyword.

See also [OPM FLOW OUTPUT FILE FORMATS](#) for a more detailed description of the various file types (ASCII or binary) and file structure formats (unified or non-unified formats).

Example

```
--
--      SWITCH ON THE FORMAT OUTPUT FILES OPTION
--
FMTOUT
```

The above example switches on the format output file option.

5.3.42 FOAM – ACTIVATE THE FOAM PHASE AND MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the foam phase and modeling option. The keyword will also invoke data input file checking to ensure that all the required foam phase input parameters are defined in the input deck. Note in the commercial simulator the FOAM phase and model can be used in conjunction with the POLYMER and SURFACT phases; this is not the case for OPM Flow. OPM Flow's FOAM phase and model is a standalone implementation and cannot be used in conjunction with either the POLYMER or SURFACT phases.

Foam flooding is an enhanced oil recovery flood process that attempts to control injected gas breakthrough in an oil reservoir by changing the mobility of the injected fluid.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

```
--
--      ACTIVATE THE FOAM PHASE IN THE MODEL
--
FOAM
```

The above example declares that the foam phase is active in the model.

5.3.43 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be placed at the very top of the input file.

See [FORMFEED – Defined the Print File Form-Feed Character](#) in the GLOBAL section for a full description.

5.3.44 FRICTION – ACTIVATE WELLBORE FRICTION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FRICTION keyword activates the Wellbore Friction option and defines the maximum number of wellbore friction wells together with the maximum number of well branches.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	MXWELS	A positive integer defining the maximum number of wellbore friction wells for this model.	0
3	MXBRAN	A positive integer defining the maximum number of branches per well. The default value of one implies a standard well with no branches.	1
Notes: 1) The keyword is terminated by a "/".			

Table 5.14: FRICTION Keyword Description

Example

```
--
--      WELL      BRANCH
--      MXWELS    MXBRAN
FRICTION
      5          1
/
```

The above example defines the maximum number of wellbore friction wells to be five and the maximum number of branches set to one, for standard wells.

5.3.45 FULLIMP – ACTIVATE FULLY IMPLICIT SOLUTION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FULLIMP keyword activates the Fully Implicit Solution formulation and solution options. OPM Flow uses a different numerical scheme which makes this keyword redundant; hence, OPM Flow ignores this keyword. It is documented here for completeness. The keyword has the same function as the IMPLICIT keyword in the RUNSPEC section.

There is no data required for this keyword and there is no terminating “/” for this keyword.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

Example

```
--
--      ACTIVATES THE FULLY IMPLICIT SOLUTION OPTION
--
FULLIMP
```

The above example switches on the fully implicit solution option; however, this has no effect in OPM Flow input decks.

5.3.46 GAS – ACTIVATE THE GAS PHASE IN THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicate that the gas phase is present in the model and must be used for oil-gas, gas-water, oil-water-gas input decks that contain the gas phase. The keyword will also invoke data input file checking to ensure that all the required gas phase input parameters are defined in the input deck.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE THE GAS PHASE IN THE MODEL
--
GAS
```

The above example declares that the gas phase is active in the model.

5.3.47 GASFIELD – DEFINE GAS FIELD OPERATIONS OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GASFIELD keyword activates and specifies the Gas Field Operations options and determines if extended compressors are present in the run and if the expedited first pass DCQ calculation should be used.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.48 GDIMS – ACTIVATE INSTANTANEOUS GRADIENT OPTION AND DEFINE DIMENSIONS

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

The GDIMS keyword activates the Instantaneous Gradient option and defines the maximum dimensions as used by the GWRTWCV keyword in the SCHEDULE section. The Instantaneous Gradient option calculates derivatives of solution quantities at the current time step with respect to variations in the variables at the current time step. This is different to Gradient option that calculates the derivatives of solution quantities at the current time step with respect to variations in the variables at the initial time step, that is a time equal to zero. Consequently, the Instantaneous Gradient option can be switched on and off by the GUPFREQ keyword in the SCHEDULE section, whereas the Gradient option cannot.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.49 GIMODEL – ACTIVATE GI PSEUDO COMPOSITIONAL OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, GIMODEL, activates the Gi Pseudo Compositional option for gas condensate and volatile oil fluids.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

The accuracy of gas condensate and volatile oil modeling using a black-oil reservoir simulator is now firmly accepted in the industry; both depletion and gas cycling above the saturation point can be modeled and yield an acceptable match compared with compositional simulators. The main deficiency with the existing black-oil formulation is the treatment of gas injection below the saturation point, where the compositional effect of the stripping of liquid components is inversely proportional to their molecular weights, is not considered. This is because the black-oil model assumes that the saturated hydrocarbon fluid properties are only functions of pressure. Thus, when dry gas is injected into a condensate reservoir below the saturation pressure the injected gas continues to re-vaporize liquid at a rate governed only by the cell pressures. Compositional modeling indicate that this not the case.

The GI option attempts to overcome the limitation of the standard black-oil approach by extending the black-oil model using the method of Cook et al.³³ to take into account the fluid property changes occurring during gas injection. This is done by extending the fluid property treatment so that the saturated fluid properties depend on pressure (as per the standard black-oil formulation) and also on an additional parameter which characterizes the compositional changes in the reservoir liquid and vapor phases at constant pressure.

There is no data required for this keyword.

Example

```
--
--      ACTIVATE THE GI PSEUDO COMPOSITIONAL OPTION
--
GIMODEL
```

The above example switches on the Gi Pseudo Compositional option.

³³ Cook, R. E., Jacoby, R. H., and Ramesh, A. B. "A Beta-type Reservoir Simulator for Approximating Compositional Effects During Gas Injection" paper SPE 4272, Society of Petroleum Engineers Journal (1974) 14, No. 5, 471-481.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.50 GRAVDR – ACTIVATE GRAVITY DRAINAGE AND IMBIBITION FOR DUAL POROSITY MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on gravity drainage and imbibition modeling between the matrix and the fracture grid blocks in dual porosity and dual permeability runs. Note that either DZMTRX or DZMTRXV keywords in the GRID section should be used to set the matrix vertical dimensions if this option is activated.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

Example

```
--
--      ACTIVATE GRAVITY DRAINAGE AND IMBIBITION FOR DUAL POROSITY MODEL
--
GRAVDR
```

The above example switches on the gravity drainage and imbibition option for the run.

5.3.51 GRAVDRB - ACTIVATE VERTICAL DISCRETIZED GRAVITY DRAINAGE AND IMBIBITION FOR DUAL POROSITY MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on vertical discretized gravity drainage and imbibition modeling between the matrix and the fracture grid blocks in dual porosity and dual permeability runs. Note that the geometry of the matrix sub-cells should be set to VERTICAL on the NMATOPS keyword in the GRID section if this option is activated.

There is no data required for this keyword and there is no terminating "/" for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE VERTICAL DISCRETIZED GRAVITY DRAINAGE AND IMBIBITION
--
GRAVDRB
```

The above example switches on the vertical discretized gravity drainage and imbibition option for the run.

5.3.52 GRAVDRM - ACTIVATE ALTERNATIVE GRAVITY DRAINAGE AND IMBIBITION FOR DUAL POROSITY MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on the alternative gravity drainage and imbibition modeling between the matrix and the fracture grid blocks in dual porosity and dual permeability runs. Either the GRAVDRM or GRAVDR keywords should be used to activate this standard or alternative type of formulation.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	OPTIONI	A defined character string that sets the matrix flow in and out of the matrix block option, and should be set to one of the following: 1) YES: oil flow is bi-directional, that is oil can flow into and out of the matrix block. 2) NO: oil flow is uni-directional, that is oil can flow out of the matrix block.	YES
Notes: 1) The keyword is terminated by a "/".			

Table 5.15: GRAVDRM Keyword Description

Example

```
--
--      ACTIVATE ALTERNATIVE GRAVITY DRAINAGE AND IMBIBITION MODEL
--
--      MATRIX
--      OPTION
GRAVDRM
      YES
```

The above example switches on the alternative gravity drainage and imbibition option for the run and sets oil flow to be bi-directional, that is oil can flow into and out of the matrix block.

5.3.53 GRIDOPTS - GRID PROCESSING OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

GRIDOPTS activates the negative directional dependent transmissibility multipliers option, defines the maximum number of MULTNUM regions and the number of PINCHNUM regions for the model.

No.	Name	Description	Default
1	TRANMULT	<p>A character string that activates the negative directional dependent transmissibility multipliers option by setting TRANMULT to YES. Setting the value to NO switches off this option.</p> <p>OPM Flow uses a positive directional dependent transmissibility formulation to describe the flow between two cells, that is for cell (I, J, K) OPM Flow calculates the x face transmissibility between (I, J, K) and (I + 1, J, K) cell face. Modification to the transmissibilities in this case is accomplished by the MULTX, MULTY and MULTZ keywords.</p> <p>Setting TRANMULT to YES invokes the option to use a negative directional dependent multiplier scheme using the MULTX-, MULTY and MULTZ- keywords. In this case OPM Flow applies the x face transmissibility between (I - 1, J, K) and (I, J, K) cell face when using the MULTX-, MULTY and MULTZ- keywords.</p> <p>This option is not supported and should be defaulted with I* or NO on the keyword.</p>	NO
2	NRMULT	<p>A positive integer value that defines the maximum number of MULTNUM regions for the MULTNUM array.</p> <p>The MULTNUM array is used in the GRID section to define various inter-region transmissibility regions in the model and NRMULT sets the maximum number of regions which is the maximum value of an element in the MULTNUM array.</p> <p>Inter-region MULTNUM transmissibility multipliers can be defined using the MULTREGT and regional pore volumes multipliers can be set using the MULTREGP keyword.</p>	0
3	NRPINC	<p>A positive integer value that defines the maximum number of PINCHNUM regions for the PINCHNUM array.</p> <p>The PINCHNUM array is used in the GRID section to define various regions in the model and NRPINC sets the maximum of regions which is the maximum value of an element in the PINCHNUM array.</p> <p>Each regions criteria for setting the pinch out criteria is set by the PINCHREG keyword.</p>	0
<p>Notes:</p> <p>1) The keyword is terminated by a “/”.</p>			

Table 5.16: GRIDOPTS Keyword Description

See also the MULTNUM, MULTREGPV, MULTREGT, PINCHNUM, and PINCHREG keywords.

Example

```
--  
--      NEG      MAX      MAX  
--      MULTS    MULTNUM PINCHNUM  
GRIDOPTS  
      NO      9      1*      /
```

The above example switches off the negative directional dependent transmissibility multipliers option and defines the maximum of MULTNUM regions to be nine. The NRPINC parameter is defaulted which means there the maximum number of PINCHREG regions is zero.

5.3.54 HMDIMS – DEFINE HISTORY MATCH GRADIENT PARAMETER DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, HMDIMS, defines the maximum parameter dimensions for the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.55 HYST – ACTIVATE THE HYSTERESIS OPTION (RETIRED)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The HYST keyword activates the hysteresis option, the keyword should be avoided and the hysteresis option should be enabled by the HYSER parameter on the SATOTPS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.56 IMPES – ACTIVATE IMPLICIT PRESSURE EXPLICIT SATURATION SOLUTION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The IMPES keyword activates the Implicit Pressure Explicit Saturation formulation and solution options, commonly known as IMPES. OPM Flow uses a different numerical scheme which makes this keyword redundant; hence, OPM Flow ignores this keyword. It is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

Example

```
--
--      ACTIVATE THE IMPES SOLUTION OPTION
--
IMPES
```

The above example switches on the IMPES solution option; however, this has no effect in OPM Flow input decks.

5.3.57 IMPLICIT – ACTIVATE FULLY IMPLICIT SOLUTION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The IMPLICIT keyword activates the Fully Implicit Solution formulation and solution options. OPM Flow uses a different numerical scheme which makes this keyword redundant; hence, OPM Flow ignores this keyword. It is documented here for completeness. The keyword has the same function as the FULLIMP keyword in the RUNSPEC section.

There is no data required for this keyword and there is no terminating “/” for this keyword.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

Example

```
--
--      ACTIVATES THE FULLY IMPLICIT SOLUTION OPTION
--
IMPLICIT
```

The above example switches on the fully implicit solution option; however, this has no effect in OPM Flow input decks.

5.3.58 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file.

See [INCLUDE – Load Another Data File at the Current Position](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

5.3.59 INSPEC – ACTIVATE THE INSPEC FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on the writing of the INIT Index file that specifies and defines the format and data type written to the INIT Data file. The INIT Data file that contains the static data specified in the GRID, PROPS and REGIONS sections. For example, the PORO, PERM and NTG arrays from the GRID section. The data is used in post-processing software, for example ResInsight, to visualize the static grid properties.

The INIT Index file can either be written out in formatted form as ASCII i.e. text files, if the FMTOUT keyword has been activated (*.FINSPEC), or binary format (*.INSPEC) if the FMTOUT keyword has not been activated. If the INIT keyword in the RUNSPEC section has been used to switch on the writing of the INIT Data file then a binary INIT Index file is automatically written out as well, unless the NOINSPEC keyword in the RUNSPEC section has been used to switch off the writing of the INIT Index file. Note that most post-processing software require the *.INSPEC file to load the *.INIT data set.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

Example

```
--
--      ACTIVATE WRITING THE INIT INDEX FILE FOR POST-PROCESSING
--
INSPEC
```

The above example switches on the writing of the INIT Index file for post-processing in ResInsight.

5.3.60 LAB - ACTIVATE THE LABORATORY SYSTEM OF UNITS FOR THE MODEL

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword switches on the LABORATORY system of units for the model.

OPM Flow has three sets of units, namely: METRIC, FIELD and LAB and one of these keyword should be invoked in the RUNSPEC section to avoid any ambiguity. Both the simulator input and output units are controlled by including one of the METRIC, FIELD or LAB keywords in the RUNSPEC section of the input file.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

```
--
--      SWITCH ON THE LABORATORY SYSTEM OF UNITS FOR BOTH INPUT AND OUTPUT
--
LAB
```

The above example switches on the LABORATORY system of units for the model.

5.3.61 LGR – DEFINE LOCAL GRID REFINEMENT DIMENSIONS AND PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, LGR, defines maximum dimensions and parameters for the Local Grid Refinement (“LGR”) option.

Currently, OPM Flow does not support the local grid refinement feature and therefore this keyword is ignored by the simulator, but is documented here for completeness.

No.	Name	Description	Default
1	MAXLGR	A positive integer value that defines the maximum number of LGRs in the model.	0
2	MAXCLS	A positive integer value that defines the maximum number of grid blocks in all the LGRs.	0
3	MCOARS	A positive integer value that defines the maximum number of amalgamated coarse grid blocks in the model.	0
4	MAMALG	A positive integer value that defines the maximum number of LGR amalgamations in the model.	0
5	MXLALG	A positive integer value that defines the maximum number of LGRs in any amalgamation in the model.	0
6	LSTACK	A positive integer that defines the maximum number of previous search directions stored by the linear solver for the LGR. See the NSTACK keyword in the RUNSPEC section for a full description.	10
7	INTOPT	A character string set to either INTERP to activate the Quandalle ³⁴ pressure correction, or NOINTERP to deactivate this option. The option applies bi-linear interpolation to the global cells surrounding an LGR in order to improve the accuracy of the flow calculations between the LGR and the host cells.	NOINTERP
8	NCHCOR	A positive integer value that defines the maximum number of grid blocks within a coarsened grid that overlap parallel domain boundaries for when the Parallel option has been invoked by the PARALLEL keyword in the RUNSPEC section. OPM Flow uses a different numerical scheme which makes this parameter redundant, see section 2.2 <i>Running OPM Flow 2021-10 From The Command Line</i> on how to run OPM Flow in parallel mode.	0
Notes: 1) The keyword is terminated by a “/”.			

Table 5.17: LGR Keyword Description

³⁴ Quandalle, Philippe & Besset, P. (1985). Reduction of Grid Effects Due to Local Sub-Gridding in Simulations Using a Composite Grid. 10.2118/13527-MS.

Example

```
--
--      LOCAL GRID REFINEMENT DIMENSIONS AND PARAMETERS
--
--      LGR      LGR      LGR      LGR      LGR      LGR      LGR      LGR
--      MAXLGR   MAXCLS   MCOARS   MAMALG   MXLALG   LSTACK   INTOPT   NCHCOR
LGR
      10        1000     1*       1*       1*       1*       INTERP  1*           /
```

The above example sets the maximum number of LGRs to 10 and the maximum number of grid blocks a LGR may contain to 1,000, and that Quandalle pressure correction should be used to improve the flow calculation.

5.3.62 LGRCOPY – ACTIVATE LOCAL GRID REFINEMENT INHERITANCE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LGRCOPY keyword activates Local Grid Refinement (“LGR”) Inheritance option that allows the LGR to inherit the properties of the global or host cell containing a LGR grid block at the start of the GRID section, as oppose to the normal process of applying this transform at the end of the GRID section. LGRCOPY can be used in the RUNSPEC, GRID and EDIT sections. If used in the RUNSPEC section then the option is applied to all LGRs defined in the input file, whereas if used in the GRID and EDIT sections the keyword must be placed inside a LGR definition section, that is between a CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) and the ENDFIN keyword. In the latter case inheritance is applied on an individual LGR basis.

Currently, OPM Flow does not support the local grid refinement feature and therefore this keyword is ignored by the simulator.

Example

The following example activates the LGR Inheritance option for all LGRs in the model.

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      ACTIVATE LOCAL GRID REFINEMENT INHERITANCE
--
LGRCOPY
```

5.3.63 LICENSES – DEFINE REQUIRED LICENSES FOR RUN

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword defines the additional software licenses that are required to invoke various licensed options in the commercial simulator at the start of the run. The commercial simulator requests a license when keywords associated with a licensed option is encountered in the input deck, this may result in the license being unavailable at the time of request and after the simulation has been initiated, resulting in the run terminating. This keyword avoids this scenario by reserving the license at the start of the run.

OPM Flow is an open source project and therefore there is no license management of the various implemented options; hence, this keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

5.3.64 LIVEOIL – ACTIVATE THE LIVE OIL PHASE (OIL WITH FREE AND DISSOLVED GAS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates oil, free and dissolved gas in the model and therefore makes the oil phase live oil³⁵ in the black-oil formulation, and is equivalent to setting the phases present in the model to be oil, dissolved gas, gas and water phases. Note if water is present in the model this needs to be explicitly stated via the WATER keyword in the RUNSPEC section (see also the BLACKOIL and DEADOIL keywords in the RUNSPEC section). The keyword is used by the commercial simulator's compositional THERMAL option to set the phases present in the model.

There is no data required for this keyword and there is no terminating "/" for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

The following example activates the black-oil phases in the model.

```
--
--      ACTIVATE LIVE-OIL PHASE
--
LIVEOIL
```

Alternatively one could explicitly declare the phases using the following keywords in the RUNSPEC section.

```
--
--      OIL PHASE IS PRESENT IN THE RUN
--
OIL
--
--      DISSOLVED GAS IN LIVE OIL IS PRESENT IN THE RUN
--
DISGAS
--
--      GAS PHASE IS PRESENT IN THE RUN
--
GAS
--
--      WATER PHASE IS PRESENT IN THE RUN
--
WATER
```

The above example switches on the oil, dissolved gas, gas and water phases in the model.

³⁵ "Live" oil is oil that contains gas in solution, which is normally the case for most conventional oil reservoirs. However, for oil reservoirs classified as heavy oil reservoirs, the in situ dissolved gas may be negligible and oil would then be classified as gas-free oil which is commonly referred to as "dead" oil.

5.3.65 LOAD – LOAD A SAVE FILE FOR A FAST RESTART

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

The LOAD keyword loads a previously generated SAVE file to enable a fast restart. A SAVE file contains all the data from a previous run's RUNSPEC, GRID, EDIT, PROPS and REGIONS sections, and thus there is no need for the simulator to calculate various parameters, including grid block transmissibilities etc. This allows for the current run to restart quicker than a conventional restart run using the RESTART keyword in the SOLUTION section via a RESTART file (*.UNRST or *.FUNRST etc.). The keyword should be the first keyword in the input deck and the RUNSPEC, GRID, EDIT, PROPS and REGIONS sections should be deleted from the input deck.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.66 LOWSALT – ACTIVATE THE LOW SALT BRINE PHASE IN THE BRINE MODEL

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword, **LOWSALT**, activates the low salt brine phase for the **Brine** option and also activates the **Brine** option. See also the **BRINE** keyword in the **RUNSPEC** section.

There is no data required for this keyword and there is no terminating "/" for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE THE LOW SALT BRINE PHASE FOR THE BRINE OPTION
--
LOWSALT
```

The above example declares that the low salt brine phase is active in the model for the Brine option.

5.3.67 MEMORY – DEFINE ALLOCATED MEMORY (RETIRED)

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword defines the memory allocation for the run.

OPM Flow and now the commercial simulator uses dynamic memory allocation and therefore the keyword has no effect and is ignored by both simulators.

<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>	<i>G</i>	<i>H</i>	<i>I</i>	<i>J</i>	<i>K</i>	<i>L</i>	<i>M</i>	<i>N</i>	<i>O</i>	<i>P</i>	<i>Q</i>	<i>R</i>	<i>S</i>	<i>T</i>	<i>U</i>	<i>V</i>	<i>W</i>	<i>X</i>	<i>Y</i>	<i>Z</i>
----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------

5.3.68 MESSAGE – OUTPUT USER MESSAGE

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGES keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

See [MESSAGE – Output User Message](#) in the GLOBAL section for a full description.

5.3.69 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

See [MESSAGES – Define Message Print Limits and Stop Limits](#) in the GLOBAL section for a full description.

5.3.70 MESSSRVC - ACTIVATE OR DEACTIVATE DATABASE MESSAGE FILE OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MESSSRVC keyword activates or deactivates output to the database message file (*.DBPRTX). The file contains all the messages from run in binary format and is used in some post-processing software to annotate production line plots from the run.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.71 METRIC – ACTIVATE THE METRIC SYSTEM OF UNITS FOR THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on the METRIC system of units for the model.

OPM Flow has three sets of units, namely: METRIC, FIELD and LAB and one of these keyword should be invoked in the RUNSPEC section to avoid any ambiguity. Both the simulator input and output units are controlled by including one of the METRIC, FIELD or LAB keywords in the RUNSPEC section of the input file.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

```
--
--      SWITCH ON THE METRIC SYSTEM OF UNITS FOR BOTH INPUT AND OUTPUT
--
METRIC
```

The above example switches on the METRIC system of units for the model.

5.3.72 MICP – ACTIVATE THE MICROBially INDUCED CALCITE PRECIPITATION MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

The MICP keyword activates the Microbially Induced Calcite Precipitation (“MICP”) model for the run. MICP is a new and sustainable technology which utilizes biochemical processes to create barriers by calcium carbonate cementation, the technology has the potential to be used for sealing leakage zones in geological formations. Further information on the mathematical model can be found in the open-access publications Landa-Marbán et al³⁶ and ³⁷.

This is an OPM Flow specif keyword used to investigate CO₂ leakage remediation. The module requires that both the MICP and WATER keywords in the RUNSPEC to be active.

There is no data required for this keyword and there is no terminating “\” for this keyword.

Example

```
--
--      ACTIVATE THE MICROBIAL INDUCED CALCITE PRECIPITATION MODEL
--
MICP
--
--      WATER PHASE IS PRESENT IN THE RUN
--
WATER
```

The above example declares that the MICP model is active for the run and activates the water phase for the MICP model

³⁶ Landa-Marbán, D., Tveit, S., Kumar, K., Gasda, S.E., 2021. Practical approaches to study microbially induced calcite precipitation at the eld scale. *Int. J. Greenh. Gas Control* 106, 103256. <https://doi.org/10.1016/j.ijggc.2021.103256>.

³⁷ Landa-Marbán, D., Kumar, K., Tveit, S., Gasda, S.E., 2021. Numerical studies of CO₂ leakage remediation by micp-based plugging technology. In: Røkke, N.A. and Knuutila, H.K. (Eds) *Short Papers from the 11th International Trondheim CCS conference*, ISBN: 978-82-536-1714-5, 284-290.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.73 MISCIBLE – DEFINE MISCIBILITY TODD-LONGSTAFF PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MISCIBLE keyword defines the options associated with the Todd-Longstaff³⁸ mixing parameters used for when polymer flooding or CO₂ EOR simulation cases are being run.

No.	Name	Description	Default
1	NTMISC	A positive integer value that declares the number miscible residual oil saturations versus water saturations tables for SORWMIS keyword and the number Todd-Longstaff mixing parameters entries on the TLMIXPAR keyword.	1
2	NSMISC	A positive integer value that sets the maximum number of entries (or rows) for each SORWMIS table defined by the SORWMIS keyword.	20
3	MISOPT	A character string that defines the numerical dispersion control options for the oil and gas relative permeability curves, set to either NONE or TWOPOINT: 1) NONE – standard single point up streaming, that is using the immediate neighbor 2) TWOPOINT – two-point up streaming, that is using the immediate neighbor plus one cell for better numerical dispersion control but with a higher computational cost. <u>Only the default value of NONE is supported.</u>	NONE
Notes: 1) The keyword is terminated by a "/".			

Table 5.18: MISCIBLE Keyword Description

Example

```
--
--      NTAB      MAX      UPSTRM
--      NTMISC    NSMISC    MISOPT
MISCIBLE
      1          20          NONE
```

The above example defines the default values for the MISCIBLE keyword, that is one table with a maximum of 20 rows per table using the standard one cell upstream option.

³⁸ M. R. Todd and W. J Longstaff, The Development, Testing, and Application Of a Numerical Simulator for Predicting Miscible Flood Performance". In: J. Petrol.Tech. 24.7 (1972), pages 874-882.

5.3.74 MONITOR – ACTIVATE OUTPUT OF THE MONITORING DATA AND FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MONITOR keyword activates the writing out of the run time monitoring information used by post-processing graphics software to display run time information, for example the simulated production and injection rates and cumulative values. OPM Flow does not have this functionality.

Hence, OPM Flow ignores this keyword but it is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE MONITORING OUTPUT DATA AND FILES
--
MONITOR
```

The above example switches on the output required for run time monitoring required by post-processing graphics software to review the simulation results in real time as the run progresses; however, this has no effect in OPM Flow input decks.

5.3.75 MSGFILE – ACTIVE OR DEACTIVATE MESSAGE FILE OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MSGFILE keyword activates or deactivates the message file output used by pre- and post-processing software. Note that message file processing is not available in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	MSGOPT	A positive integer set to 0 for to deactivate message file output or 1 to activate message file output.	1
Notes: 1) The keyword is terminated by a "/".			

Table 5.19: MSGFILE Keyword Description

Example

```
--
--      OUTPUT
--      OPTN
MSGFILE
0
```

The above example deactivates the message file output, but the keyword is ignored by OPM Flow.

5.3.76 MULTIN – ACTIVATE THE NON-UNIFIED MULTIPLE INPUT FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on the Multiple Input Files option for all input files. Similar to the commercial simulator, OPM Flow has various options for reading various input files and writing the resulting OPM Flow output files as described in Table 5.20.

Process	Keyword	Description	Files
Input	FMTIN	A character string that defines the input files to be formatted as ASCII i.e. text files, as oppose to binary files. The input deck file is always of this type. The option relates to the OPM Flow derived files that used as input, for for example when restarting from another case. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTIN	A character string that defines the input files to be non-unified multiple files, as opposed to unified files. In this case, one file is read in per reporting time step, as opposed to all time steps reports being read from one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I
	UNIFIN	A character string that defines the input files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. For this option a single summary file and a single restart file will be read. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Output	FMTOUT	A character string that sets all output files to be formatted as ASCII i.e. text files, as opposed to binary files. The *.PRT, *.LOG and *.DEBUG files are always of this type. The option relates to the OPM Flow output files only. In this case the files will be portable across operating systems, but will also be very large in terms of hard disk space. For this reason it is recommend that the default option is used so that binary files are outputted. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTOUT	A character string that defines the output files to be non-unified multiple files, as opposed to unified files. In this case, one file is written for each reporting time step, as opposed to all time steps reports being written in one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I

Process	Keyword	Description	Files
	UNIFOUT	<p>A character string that defines the output files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single summary file and a single restart file will be generated, as opposed to one file per report time step.</p> <p><u>If the keyword is omitted then the default is for one file per reporting time step.</u></p>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Notes: <ol style="list-style-type: none"> 1) A binary file is computer-readable but not human-readable. All executable programs are stored in binary files, as are most numeric data files. In contrast, text files are stored in a form (usually ASCII) that is human-readable. 2) For unified files if the run terminates unexpectedly, or there is sufficient disk space, then the last report output is not stored. Their main advantage is that if a number of simulations reside in one directory, their output is organized. There is no limit on the number of reporting steps that a unified file can store. 			

Table 5.20: MULTIN Keyword Description

There is no data required for this keyword.

See also [OPM FLOW OUTPUT FILE FORMATS](#) for a more detailed description of the various file types (ASCII or binary) and file structure formats (unified or non-unified formats).

Example

```
--
--      ACTIVATE THE MULTIPLE INPUT FILES OPTION
--
MULTIN
```

The above example switches on the multiple input file option.

5.3.77 MULTOUT – ACTIVATE THE NON-UNIFIED MULTIPLE OUTPUT FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on the Multiple Output Files option for all output files. Similar to the commercial simulator, OPM Flow has various options for reading various input files and writing the resulting OPM Flow output files as described in Table 5.21.

Process	Keyword	Description	Files
Input	FMTIN	A character string that defines the input files to be formatted as ASCII i.e. text files, as oppose to binary files. The input deck file is always of this type. The option relates to the OPM Flow derived files that used as input, for for example when restarting from another case. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTIN	A character string that defines the input files to be non-unified multiple files, as opposed to unified files. In this case, one file is read in per reporting time step, as opposed to all time steps reports being read from one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I
	UNIFIN	A character string that defines the input files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. For this option a single summary file and a single restart file will be read. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Output	FMTOUT	A character string that sets all output files to be formatted as ASCII i.e. text files, as opposed to binary files. The *.PRT, *.LOG and *.DEBUG files are always of this type. The option relates to the OPM Flow output files only. In this case the files will be portable across operating systems, but will also be very large in terms of hard disk space. For this reason it is recommend that the default option is used so that binary files are outputted. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTOUT	A character string that defines the output files to be non-unified multiple files, as opposed to unified files. In this case, one file is written for each reporting time step, as opposed to all time steps reports being written in one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I

Process	Keyword	Description	Files
	UNIFOUT	<p>A character string that defines the output files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single summary file and a single restart file will be generated, as opposed to one file per report time step.</p> <p><u>If the keyword is omitted then the default is for one file per reporting time step.</u></p>	<p>*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY</p>
<p>Notes:</p> <ol style="list-style-type: none"> 1) A binary file is computer-readable but not human-readable. All executable programs are stored in binary files, as are most numeric data files. In contrast, text files are stored in a form (usually ASCII) that is human-readable. 2) For unified files if the run terminates unexpectedly, or there is sufficient disk space, then the last report output is not stored. Their main advantage is that if a number of simulations reside in one directory, their output is organized. There is no limit on the number of reporting steps that a unified file can store. 			

Table 5.21: MULTOUT Keyword Description

There is no data required for this keyword.

See also [OPM FLOW OUTPUT FILE FORMATS](#) for a more detailed description of the various file types (ASCII or binary) and file structure formats (unified or non-unified formats).

Example

```
--
--      ACTIVATE THE MULTIPLE OUTPUT FILES OPTION
--
MULTOUT
```

The above example switches on the multiple output file option.

5.3.78 MULTOUTS – ACTIVATE NON-UNIFIED MULTIPLE SUMMARY OUTPUT FILE OPTION

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword switches on the Multiple Output Files option for SUMMARY files only, and overwrites the UNIFOUT keyword in the RUNSPEC section that activates the Unified Output Files option for all output files.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See also [OPM FLOW OUTPUT FILE FORMATS](#) for a more detailed description of the various file types (ASCII or binary) and file structure formats (unified or non-unified formats).

Example

```
--
--      ACTIVATE MULTIPLE OUTPUT SUMMARY FILES ONLY OPTION
--
MULTOUTS
```

The above example switches on the multiple output file option.

5.3.79 MULTREAL – ACTIVATE COMMERCIAL SIMULATOR’S MULTI-REALIZATION LICENSE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The MULTREAL keyword activates the commercial simulator’s Multi-Realization License option.

OPM Flow is an open source project and therefore there is no license management of the various implemented options; hence, this keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

5.3.80 NETWORK – ACTIVATE THE EXTENDED NETWORK OPTION AND DEFINE PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the Extended Network option and defines the maximum number on nodes and links (branches) in the network. The Extended Network option is a different facility to the Standard Network facility, as such, this keyword should only be used if the former network is required for the run.

No.	Name	Description	Default
1	NODMAX	NODMAX is a positive integer that defines the maximum number of nodes in the Extended Network model.	None
2	NBRMAX	NBRMAX is a positive integer that defines the maximum number of links in the Extended Network model.	None
3	NBCMAX	NBCMAX is a positive integer that defines the maximum number of branches that can be connected to a node in the Extended Network model, used in the commercial compositional simulator. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of 20.	20
Notes: 1) The keyword is terminated by a "/".			

Table 5.22: NETWORK Keyword Description

Example

```
--
--      ACTIVATE THE EXTENDED NETWORK OPTION AND DEFINE PARAMETERS
--
--      MAX.      MAX      NOT
--      NODE      LINK      USED
NETWORK
      10         12       1*                               /
```

In the above example the maximum number of nodes is set equal to ten and the maximum number of links (or branches) is set equal to 12, for the Extended Network option.

5.3.81 NINEPOIN – ACTIVATE THE NINE-POINT DISCRETIZATION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NINEPOIN keyword activates the Nine-Point Discretization formulation for the whole grid. If the keyword is absent from the run then the conventional standard five-point discretization formulation is used for the model. The nine-point scheme is based on adding additional non-neighbor connections between the diagonal neighbors in the areal plane, in order to reduce grid orientation effects³⁹.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

In none Local Grid Refinement runs the NINENUM keyword in the GRID section may be use to optionally set parts of the grid to use nine-point discretization and the remaining regions to use the conventional standard five-point discretization formulation.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE THE NINE-POINT DISCRETIZATION OPTION
--
NINEPOIN
```

The above example switches on the Nine-Point Discretization option for the whole grid.

³⁹ Yanosik, J. L. and McCracken, T. A. “A Nine-Point, Finite-Difference Reservoir Simulator for Realistic Prediction of Adverse Mobility Ratio Displacements,” paper SPE 5734, Society of Petroleum Engineers Journal (1979) 19, No. 4, 253-262.

5.3.82 NMATRIX – ACTIVATE THE DISCRETIZED MATRIX DUAL POROSITY OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NMATRIX keyword activates the Discretized Matrix Dual Porosity option and specifies the number of sub-grid blocks in the actual matrix grid blocks. See also the NMATOPS keyword in the GRID section that defines various parameters for this option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description	Default
I	NMATRIX	A positive integer value that specifies the number of sub-grid blocks in the actual matrix grid blocks.	I
Notes: I) The keyword is terminated by a "/".			

Table 5.23: NMATRIX Keyword Description

Note the keyword cannot be used in conjunction with the TRPLPORO keyword, which is also in the RUNSPEC section.

Example

```
--
-- SUB-GRIDS
-- NMATRIX
NMATRIX 4 /
```

The above example activates the Discretized Matrix Dual Porosity option and specifies the number of sub-grid blocks in the actual matrix grid block to be four.

5.3.83 NNEWTF – ACTIVATE THE NON-NEWTONIAN FLUID MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the Non-Newtonian Fluid phase and model for when the polymer phase is present in the model, as indicated by the POLYMER keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	NTHRBL	A positive integer that defines the maximum number of Herschel-Bulkley versus polymer concentration tables to be used with the polymer model, as entered via the FHERCHBL keyword in the PROPS section. The tables are allocated to different parts of the grid by the HBNUM keyword in the REGION section	NTPVT
2	NLNHBL	A positive integer that defines the maximum number of rows for each table entered by the FHERCHBL keyword in the PROPS section.	2
Notes: <ol style="list-style-type: none"> 1) The exact number of NTHRBL tables are required to completed the data set. For example, if NTHRBL is set equal to three, then there must be three tables entered for the FHERCHBL keyword. 2) The keyword is terminated by a “/”. 			

Table 5.24: NNEWTF Keyword Description

Example

```
--
--      MAX      MAX
--      NTHRBL  NLNHBL
NNEWTF
      3      5
/
```

The above example defines maximum number of Herschel-Bulkley tables to be three with a maximum number of rows for each table set to five.

5.3.84 NOCASC – ACTIVATE LINEAR SOLVER TRACER ALGORITHM

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

NOCASC keyword activates the linear solver tracer algorithm for single phase tracers.

OPM Flow uses a different numerical scheme which makes this keyword redundant; hence, OPM Flow ignores this keyword. It is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--          TRACER SOLVER OPTION
--
NOCASC
```

The above example switches on the linear solver tracer algorithm; however, this has no effect in OPM Flow input decks.

5.3.85 NODPPM – DEACTIVATE FRACTURE POROSITY-PERMEABILITY CALCULATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NODPPM keyword deactivates the default behavior of multiplying the fracture porosity by the fracture permeability to calculate the effective fracture permeability in dual porosity and dual permeability runs. Either the DUALPORO or DUALPERM keywords in the RUNSPEC section must be declared in the input file in order to use this keyword. If the default calculation is switched off by this keyword, then the effective fracture permeability is taken to be those entered for the fracture using the PERMX, PERMY and PERMZ keywords in the GRID section. If the keyword is absent from the input deck, then the entered PERMX, PERMY and PERMZ arrays for the fractures are multiplied by fracture PORO array values in order to obtain the effective fracture permeability.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      DEACTIVATE FRACTURE POROSITY-PERMEABILITY CALCULATION
--
NODPPM
```

The above example switches off the default behavior of multiplying the fracture porosity by the fracture permeability to calculate the effective fracture permeability.

5.3.86 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active, but can subsequently be switched off by the NOECHO activation keyword.

See [NOECHO – Deactivate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

5.3.87 NOHYST - DEACTIVATE THE HYSTERESIS OPTION

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

The NOHYST keyword deactivates the Hysteresis option and informs the simulator to ignore the IMBNUM array in the REGIONS section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      DEACTIVATE THE HYSTERESIS OPTION
--
NOHYST
```

The above example switches off the default behavior of multiplying the fracture porosity by the fracture permeability to calculate the effective fracture permeability.

5.3.88 NOINSPEC – DEACTIVATE OUTPUT OF THE INIT INDEX FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NOINSPEC keyword deactivates the writing out of the INIT index file (*.INSPEC). The initialization data (or static data) is written out to two files one file contains the data, *.INIT, and the second file contains an index of the data (*.INSPEC) stored in the *.INIT file. This functionality is redundant as most post-processing software require the *.INSPEC file to load the *.INIT data set.

Hence, OPM Flow ignores this keyword. It is documented here for completeness.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

```
--
--      DEACTIVATE OUTPUT OF THE INIT INDEX FILE *.INSPEC
--
NOINSPEC
```

The above example switches off the writing of the INIT index file (*.INSPEC); however, this has no effect in OPM Flow input decks.

5.3.89 NOMONITO – DEACTIVATE OUTPUT OF THE MONITORING DATA AND FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NOMONITO keyword deactivates the writing out of the run time monitoring information used by post-processing graphics software to display run time information, for example the simulated production and injection rates and cumulative values. OPM Flow does not have this functionality.

Hence, OPM Flow ignores this keyword but it is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      DEACTIVATE MONITORING OUTPUT DATA AND FILES
--
NOMONITO
```

The above example switches off the output required for run time monitoring required by post-processing graphics software to review the simulation results in real time as the run progresses; however, this has no effect in OPM Flow input decks.

5.3.90 NONNC – DEACTIVATE NON-NEIGHBOR CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NONNC keyword deactivates non-neighbor connections (“NNCs”) in the current run. NNCs create off-diagonal elements in the Jacobi matrix that impact the numerical efficiency of the solution algorithms, and thus if the run does not contain NNC’s then there is the potential for greater computation efficiency. Unfortunately, nearly all models, except for the most simple models, generate NNCs via for example:

- 1) aquifer connections,
- 2) faults, and
- 3) manually entered NNCs, including those automatically generate by pre-processing software.

Due to the limited application of this option, the feature has not been implemented in OPM Flow and hence OPM Flow ignores this keyword. It is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      DEACTIVATE NON-NEIGHBOR CONNECTIONS
--
NONNC
```

The above example switches off the NNCs; however, this has no effect in OPM Flow input decks.

5.3.91 NORSSPEC – DEACTIVATE OUTPUT OF THE RESTART INDEX FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NORSSPEC keyword deactivates the writing out of the RESTART index file (*.RSSPEC). The restart data (pressure, saturations etc. through time for each active cell) are written out to two files one file contains the data, *.UNRST for example, and the second file contains an index of the data (*.RSSPEC) stored in the *.UNRST file. This functionality is redundant as most post-processing software require the *.RSSPEC file to load the *.UNRST data set.

Hence, OPM Flow ignores this keyword. It is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      DEACTIVATE OUTPUT OF THE RESTART INDEX FILE *.RSSPEC
--
NORSSPEC
```

The above example switches off the writing of the restart index file (*.RSSPEC); however, this has no effect in OPM Flow input decks.

5.3.92 NOSIM – ACTIVATE THE No SIMULATION MODE FOR DATA FILE CHECKING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

NOSIM switches the mode of OFM Flow to data input checking mode. In this mode the input file is read and all messages and print instructions are sent to the respective output files. The SCHEDULE section is read but the simulation is not performed.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

The example below switches OPM Flow to no simulation mode for data checking of the input deck.

```
--
--      SWITCH NO SIMULATION MODE FOR DATA CHECKING COMMENT OUT TO RUN THE MODEL
--
NOSIM
```

And the next example shows how to commented out the NOSIM activation keyword so that the simulation will proceed.

```
--
--      SWITCH NO SIMULATION MODE FOR DATA CHECKING COMMENT OUT TO RUN THE MODEL
--
-- NOSIM
```

Note

Simulation input decks are complex and are therefore prone to typing errors, thus before submitting a run that will take over 15 minutes or so, it is a good idea to run the model with the NOSIM option. If no errors are found then the NOSIM keyword should be commented out by placing “--” before the keyword, and then re-running the model.

Alternatively, one could use OPMRUN to run all the jobs in the queue in NOSIM mode and have the software re-run jobs in simulation mode if there are no errors.

5.3.93 NOWARN – DEACTIVATE WARNING MESSAGES

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

See [NOWARN – Deactivate Warning Messages](#) in the GLOBAL section for a full description.

5.3.94 NRSOUT – DEFINED MAXIMUM NUMBER OF RESTART ELEMENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NRSOUT keyword specifies the maximum number of elements that can be written to the RESTART file at each reporting time step.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	NRSOUT	A positive integer value that specifies the maximum number of elements that can be written to the RESTART file at each reporting time step.	3600
Notes: I) The keyword is terminated by a "/".			

Table 5.25: NRSOUT Keyword Description

Example

```
--
--      MAX
--      NRSOUT
NRSOUT      6000      /
```

The above example sets the maximum number of elements that can be written to the RESTART file at each reporting time step to 6000.

5.3.95 NSTACK – DEFINE THE STACK LENGTH FOR THE ITERATIVE LINEAR SOLVER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NSTACK keyword defines the maximum number of previous search directions stored by the linear solver. Increasing the value of NSTACK may improve the efficiency of the solver on difficult problems, but will increase the memory requirements of the simulator. The default value of 10 should be sufficient for most problems; however, if OPM Flow is having issues with the convergence of the linear questions then increasing NSTACK and LITMAX on the TUNING keyword may improve performance.

OPM Flow uses a different numerical scheme which makes this keyword redundant; see section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	NSTACK	A positive integer that defines the maximum number of previous search directions stored by the linear solver.	10
Notes: <ol style="list-style-type: none"> 1) NSTACK and LITMAX on the TUNING keyword are related such that NSTACK should always be less than or equal to LITMAX. 2) The keyword is terminated by a "/". 			

Table 5.26: NSTACK Keyword Description

Example

```
--
--      SET STACK SIZE FOR LINEAR SOLVER
--
NSTACK      30      /
```

The above example sets maximum number of previous search directions stored by the linear solver to 30, this has no effect in OPM Flow input decks.

Note

If the run is suffering from linear convergence problems, then check the data first for any data issues before manipulating the numerical control parameters. For example, if OPM Flow has written some WARNING messages with respect to end-point scaling, etc., then resolve these messages first before adjusting the numerical controls.

5.3.96 NUMRES – DEFINE THE NUMBER OF RESERVOIR GRIDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NUMRES keyword defines the number of reservoir grids (COORD data sets) that the simulator should process. Currently, this should only be set to one in OPM Flow

No.	Name	Description	Default
I	NUMRES	A positive integer greater than one that defines the maximum number COORD data sets to be processed by OPM Flow. This should be set to one.	I
Notes: I) The keyword is terminated by a "/".			

Table 5.27: NUMRES Keyword Description

Example

```
--
--      DEFINE THE NUMBER OF RESERVOIR GRIDS (COORD DATA SETS)
--
NUMRES      1      /
```

The above example sets the maximum number of COORD data sets to be processed to one, this is the only value that can currently be used in OPM Flow.

5.3.97 NUPCOL – DEFINE THE NUMBER OF NEWTONIAN ITERATIONS USED TO UPDATE WELL TARGETS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NUPCOL keyword defines the maximum number of Newtonian iterations within a time step that may be used to update the well production and injection targets, after which the well targets will be frozen until the time step calculations have converged and the time step is complete.

Wells under group control may suffer from some dependency with other wells in the same group that are under group control. This may cause some oscillation in the production and injection well rates within the group. In order to avoid this, after the number Newtonian iterations within a time step surpasses NUPCOL, the group well rates are frozen until the time step has converged. Reducing the potential of well rate oscillations within the time step may result in the group targets and limits not being exactly being met in this case. Increasing the value of NUPCOL to greater than the default value of three, will improve the accuracy of the group targets and limits at the expense of computational efficiency.

See also section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to set various other numerical control parameters for OPM Flow.

No.	Name	Description	Default
I	NUPCOL	A positive integer that defines the maximum number of Newtonian iterations used to update well targets within a time step. Note that default value of six is different to the commercial simulator's default value of three.	6
Notes: I) The keyword is terminated by a "/".			

Table 5.28: NUPCOL Keyword Description

Example

```
--
--      DEFINE THE NUMBER OF ITERATIONS TO UPDATE WELL FLOW TARGETS
--
NUPCOL      6      /
```

The above example sets the default NUPCOL value to the default value of six.

5.3.98 OIL – ACTIVATE THE OIL PHASE IN THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicates that the oil phase is present in the model and must be used for oil-gas, oil-water, oil-water-gas input decks that contain the oil phase. The keyword will also invoke data input file checking to ensure that all the required oil phase input parameters are defined in the input deck.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      OIL PHASE IS PRESENT IN THE RUN
--
OIL
```

The above example declares that the oil phase is active in the model.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.99 OPTIONS – ACTIVATE VARIOUS PROGRAM OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The OPTIONS keyword activates various OPM Flow program options; however only the options known to be available and tested are documented out of the over 200 activation operations available in the commercial simulator.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Description	Default
I - 273	Undefined.	0
Notes: I) The keyword is terminated by a "/".		

Table 5.29: OPTIONS Keyword Description

Examples

```
--
--      SKIP      ACTIVATE
--      OPTIONS    OPTION
OPTIONS
      77*0      1
/
```

The above example activates the use of scratch files for pre-processing grid geometry data for non-neighbor connections. Note if multiple options are required then one can just repeat the format of the example to activate multiple options as the keyword does not overwrite previous entries. So for example:

```
--
--      SKIP      ACTIVATE
--      OPTIONS    OPTION
OPTIONS
      7*0      1
/

--
--      SKIP      ACTIVATE
--      OPTIONS    OPTION
OPTIONS
      77*0      1
/

--
--      SKIP      ACTIVATE
--      OPTIONS    OPTION
OPTIONS
      177*0     1
/
```

Could be used to activate the 8, 78 and 178 options if they were available.

5.3.100 PARALLEL – DEFINE PARALLEL RUN CONFIGURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PARALLEL keyword defines the run to use parallel processing and sets the domain decomposition options. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to run OPM Flow in parallel mode.

No.	Name	Description	Default
1	NPROCS	A positive integer that defines the number of domains or parallel processors to use for this run.	1
2	RTYPE	A character string set to either SERIAL to run the parallel code in serial mode for testing the code, or DISTRIBUTED to full utilize parallel processing.	PARALLEL

Notes:

- 1) The keyword is terminated by a “/”.

Table 5.30: PARALLEL Keyword Description

OPM Flow uses a different numerical scheme which makes this keyword redundant; hence, OPM Flow ignores this keyword. It is documented here for completeness.

Example

```
--
--      PARALLEL MULTI-CORE OPTIONS
--      NDMAIN      MACHINE TYPE
PARALLEL
      2      DISTRIBUTED
/
```

The above example sets the number of domains (or processors) to two and for the simulation to run in parallel mode. This has no effect in OPM Flow input decks.

5.3.101 PARTTRAC – ACTIVATE AND DEFINE PARTITIONED TRACER OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PARTTRAC keyword activates the Partitioned Tracer option and defines the maximum number of partitioned tracers, the number of TRACERKP or TRACERKM partitioning tables in the PROPS section, and the maximum number of number of rows in the TRACERKP or TRACERKM partitioning tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.102 PATHS – DEFINE FILENAME DIRECTORY PATH ALIASES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PATHS allows the user to define alias directory filenames to avoid long filenames with the INCLUDE, IMPORT, RESTART or GDFILE. keywords. To use the alias with the aforementioned keywords PATHS should be prefixed with the \$ symbol.

No.	Name	Description	Default
1	NPROCS	A character string enclosed in quotes defining the alias.	None
2	RTYPE	A character string enclosed in quotes defining the directory filename.	None
Notes: <ol style="list-style-type: none"> Multiple entries must be on separate lines (see the example). The keyword is terminated by a “/”. 			

Table 5.31: PATHS Keyword Description

Examples

```
--
--      PATH      PATH
--      ALIAS     DIRECTORY FILENAME
PATHS
      'GRID'      '/DISK1/NORNE/2017/GRID-INCLUDES'
      'SCHD'      '/DISK1/NORNE/2017/SCHD-INCLUDES'
/
```

The above example defines “GRID” and “SCHD” aliases in the RUNSPEC section than can be used in the GRID and SCHEDULE sections of the input deck. The next example shows how to use the “GRID” alias with the INCLUDE keyword in the GRID section.

```
--
--      LOAD INCLUDE FILES
--
INCLUDE      '$GRID/PORO.INC'
/

INCLUDE      '$GRID/PERMX.INC'
/

INCLUDE      '$GRID/NTG.INC'
/
```

Here the porosity, permeability and net-to-gross arrays are loaded in the GRID section using the directory filename aliases declared in the RUNSPEC section.

5.3.103 PEDIMS – DEFINE PETRO-ELASTIC MODEL REGIONS AND TABLE DIMENSIONS

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

The PEDIMS keyword defines the number of petro-elastic regions to be used with the PENUM keyword in the REGIONS section and the number of rows in the PEGTAB0 to PEGTAB7 keywords, as well as the number of rows in the PEKTAB0 to PEKTAB7 keywords in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>	<i>G</i>	<i>H</i>	<i>I</i>	<i>J</i>	<i>K</i>	<i>L</i>	<i>M</i>	<i>N</i>	<i>O</i>	<i>P</i>	<i>Q</i>	<i>R</i>	<i>S</i>	<i>T</i>	<i>U</i>	<i>V</i>	<i>W</i>	<i>X</i>	<i>Y</i>	<i>Z</i>
----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------

5.3.104 PETOPTS – DEFINE PETREL AND GENERIC SIMULATION FILE OPTIONS

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

The PETOPTS keyword defines various Petrel and Generic Simulation (*.GSG) file options.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.105 PIMTDIMS – DEFINE WELL PRODUCTIVITY SCALING TABLE DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PIMTDIMS keyword defines the maximum number of PIMULTAB tables and the maximum number of entries (or rows) per PIMULTAB table. The PIMULTAB keyword is used to define a well's productivity index factor as a function of a well's producing water cut, and the PIMULTAB keyword defined in the SCHEDULE section of the input deck.

No.	Name	Description	Default
1	NTPIMT	A positive integer value that defines the maximum number of PIMULTAB keywords defined in the input deck.	0
2	NRPIMT	A positive integer value defining the maximum number of entries (rows) in the PIMULTAB keyword.	0
Notes: 1) The keyword is terminated by a "/".			

Table 5.32: PIMTDIMS Keyword Description

Example

```
--
--      MAX      MAX
--      TABLES  ENTRIES
PIMTDIMS
      1          51
```

The above example defines that there is one PIMULTAB table with a maximum number of 51 rows.

5.3.106 POLYMER – ACTIVATE THE POLYMER PHASE IN THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword indicates that the polymer phase is present in the model and to activate the polymer flooding model. The keyword will also invoke data input file checking to ensure that all the required polymer phase input parameters are defined in the input deck.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE THE POLYMER PHASE IN THE MODEL
--
POLYMER
```

The above example declares that the polymer phase is active in the model.

5.3.107 PRECSALT – ACTIVATE THE OPM FLOW SALT PRECIPITATION MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the OPM Flow Salt Precipitation model that accounts for salt precipitating out of the water phase when the water is being vaporized into the gas phase and the dissolved salt reaches the solubility limit as the pressure in the reservoir is being depleted (see the VAPWAT keyword in the RUNSPEC section). This facility is an extension to the standard Brine model, and as such the BRINE keyword in the RUNSPEC must also be present in the input deck. In general, if the PRECSALT keyword has been activated in the input deck then the VAPWAT keyword should also be activated. The keyword should only be used if both water and gas phases are active in the model.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note

This is an OPM Flow specific keyword for the simulator's Salt Precipitation model, note that this is an extension to the commercial simulator's Brine model.

If the keyword is present in the input deck then the SALT SOL keyword in the PROPS section also needs to be present in the input deck to define the salt solubility. In addition, SALTPVD keyword in the SOLUTION section should be used to define the initial salt precipitated concentration versus depth tables.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

```
--
--      ACTIVATE THE GAS PHASE IN THE MODEL
--
GAS
--
--      VAPORIZED WATER IN DRY/WET GAS IS PRESENT IN THE RUN (OPM FLOW KEYWORD)
--
VAPWAT
--
--      WATER PHASE IS PRESENT IN THE RUN
--
WATER
--
--      ACTIVATE STANDARD BRINE MODEL IN THE RUN
--
BRINE
--
--      ACTIVATE THE OPM FLOW SALT PRECIPITATION MODEL (OPM FLOW KEYWORD)
--
PRECSALT
```

The above example declares that the gas, vaporized water and water phases are present in the model, and activates the Brine and Salt Precipitation models.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.108 PSTEADY – ACTIVATE PSEUDO STEADY STATE FLOW CALCULATION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PSTEADY keyword activates Pseudo Steady State Flow Calculation option by advancing the simulator until it reaches a pseudo steady state flow and then sets the date to the date defined on this keyword, that is written to the RESTART file. Keyword also includes parameters defining the conditions for pseudo steady flow state.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

5.3.109 RADIAL – RADIAL GRID ACTIVATION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

RADIAL⁴⁰ activates the radial grid geometry option for the model, if this keyword and the SPIDER keyword are omitted then Cartesian geometry is assumed by OPM Flow.

See also the SPIDER keyword in the RUNSPEC section ([SPIDER – Spider Grid Activation Option](#)). This is an OPM Flow specific keyword for the simulator's Spider Grid option, that emulates a Radial Grid via corner-point geometry. Both Spider and Radial grids will be displayed the same in OPM ResInsight, as they both use Irregular Corner-Point Grid geometry. The difference is that the radial model's pore volumes are adjusted to match the radial geometry pore volumes, whereas, the Spider grid volumes are not adjusted. See the examples in the section on Radial Grids ([Radial Grids](#)) and Spider Grids ([Spider Grids](#)) for further information.

Example

```
--
--      DEFINE RADIAL GRID GEOMETRY
--
RADIAL
```

The example activates the radial grid geometry option.

⁴⁰ Radial grids are not currently implemented in this version of OPM Flow but are expected to be incorporated in a future release.

5.3.110 REGDIMS – DEFINE THE MAXIMUM NUMBER OF REGIONS FOR A REGION ARRAY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The REGDIMS keyword defines the maximum number of regions for various region arrays used in the model. Note that the maximum number of FIPNUM regions can be defined both on this keyword and the TABDIMS keyword, if it set in both locations the maximum value is used. The reason for this type of inconsistency is due to the commercial simulator evolving with time as new features were added, but at the same time having to maintain backward input deck compatibility.

No.	Name	Description	Default
1	NTFIP	A positive integer defining the maximum number of regions in the FIPNUM region array. Note that this parameter may also be set on the TABDIMS keyword as well. If NTFIP is set in both places then the maximum value is used.	1
2	NMFIPR	A positive integer defining the total maximum number of regions. The FIPNUM regions are defined by (1). if additional sets of fluid in-place regions are required, as per the FIPxxx series of fluid in-place region keywords, then these are to be defined here by adding to the value in (1). So for example, if NTFIP equals five and the number of distinct FIPxx regions is three, then the value to enter for NMFIPR is eight.	1
3	NRFREG	A positive integer defining the maximum number of independent reservoir regions in the ISOLNUM region array.	0
4	MXNFLX	A positive integer defining the maximum number of flux regions in the FLUXNUM region array. MXNFLN can also be defined on the TABDIMS keywords as well. If MXNFLX is defined both here and on the TABDIMS keyword then the maximum value of the two is used.	0
5	NUSREG	A positive integer defining the maximum user defined regions in a commercial simulator's compositional model. This parameter is included for compatibility and should be defaulted as it is not used in OPM Flow.	0
6	NTCREG	A positive integer defining the maximum number of regions in the COALNUM region array. This parameter is included for compatibility and should be defaulted as it is not used in OPM Flow.	1
7	NOPREG	A positive integer defining the maximum number of regions in the OPERNUM region array.	0
8	NWKDREG	A positive integer defining the maximum maximum of real double-precision work arrays for use with the OPERATE and OPERATER keywords. This parameter is included for compatibility and should be defaulted as it is not used in OPM Flow.	0
9	NWKIREG	A positive integer defining the maximum number of integer work arrays for use with the OPERATE and OPERATER keywords. This parameter is included for compatibility and should be defaulted as it is not used in OPM Flow.	0
10	NPLMIX	A positive integer defining the maximum number of regions in the PLMIXNUM region array.	1
Notes: 1) The keyword is terminated by a "/".			

Table 5.33: REGDIMS Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

--											
--	MAX	TOTAL	INDEP	FLUX	TRACK	CBM	OPERN	WORK	WORK	POLY	
--	FIPNUM	REGNS	REGNS	REGNS	REGNS	REGNS	REGNS	REAL	INTG	REGNS	
REGDIMS	9	12	1*	1*	1*	1*	1*	1*	1*	1*	/

The above example defines the number of FIPNUM regions to be nine and the number of FIPxxx type of regions to be three (12 – 9), the rest of the region sizes are set to the default values.

5.3.111 RIVRDIMS – DEFINE THE RIVER DIMENSIONS AND ASSOCIATED DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

RIVRDIMS defines the river system array dimensions used with the REACHES keyword and other river keywords in the SOLUTION and SCHEDULE sections. The keyword also enables the River option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.112 ROCKCOMP – ACTIVATE ROCK COMPACTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ROCKCOMP keyword activates rock compaction and defines various rock compaction options for the run. By default OPM Flow models rock compaction via pore volume compressibility as entered on the ROCK keyword in the PROPS section. This keyword enables pressure dependent pore volume and transmissibility multipliers for rock compaction that are entered in the PROPS section using the ROCKTAB keyword. Currently OPM Flow only supports the default options for rock compaction.

No.	Name	Description	Default
1	ROCKOPT	<p>A character string that defines the rock compaction option based on one of the following character strings:</p> <ol style="list-style-type: none"> 1) REVERS: Rock compaction is reversible with increasing pressure. The rock compaction multipliers should be entered via the ROCKTAB keyword in the PROPS section. Note that this is the default value and is the only option currently supported by OPM Flow. 2) IRREVERS: Rock compaction is irreversible, that is the rock expansion does not occur when the pressure subsequently decreases. 3) HYSTER: Invokes the hysteresis rock compaction option. 4) BOBERG: Rock compaction hysteresis is modeled using the Boberg formulation⁴¹. 5) REVLIMIT: Activates the reversible hysteresis rock compaction option that limits the pore volume subject to reversibility based on the minimum pressure in a grid block and the initial water saturation. This option is only intended to be used with the water induced compaction model, neither of which are currently supported by OPM Flow.. 6) PALM-MAN: Rock compaction hysteresis is modeled using the Palmer-Mansoori⁴² and ⁴³ formulation for coal bed methane reservoirs, neither of which are supported by OPM Flow. 7) NONE: Deactivates rock compaction, unless the water induced compaction model has been invoked. <p>Only the default option is supported by OPM Flow.</p>	REVERS
2	NTROCC	A positive integer that defines the number of rock compaction tables, that is the number of ROCKTAB tables to be used by OPM Flow.	1
3	WATINOPT	<p>A character string that states if the water induced rock compaction option should be used (YES) or not (NO). If set to YES then the either the ROCKTABW or the ROCK2D and ROCKWNOD keywords should be entered in the PROPS section</p> <p>Only the YES option is currently supported by OPM Flow.</p>	NO

⁴¹ Beattie, C.I., Boberg, T.C., and McNab, G.S. "Reservoir Simulation of Cyclic Steam Stimulation in the Cold Lake Oil Sands," paper SPE 18752, Society of Petroleum Engineers Journal, (1991) 6, No. 2, 200-206.

⁴² Palmer, I. and Mansoori, J. "How Permeability Depends on Stress and Pore Pressure in Coalbeds: A New Model," paper SPE 52607, SPE Reservoir Evaluation & Engineering (1998) 1, No. 6, 539-544.

⁴³ Clarkson, C.R., Pan, Z., Palmer, I. and Harpalani, S. "Predicting Sorption-Induced Strain and Permeability Increase With Depletion for Coalbed-Methane Reservoirs", SPE 114778-PA, SPE Journal (2010) 15, No. 1, 152–159.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
4	PORTXROP	<p>A character string that specifies the model to be used for when transmissibility is dependent on porosity, and should be set to either:</p> <ol style="list-style-type: none"> 1) EXP: An exponential porosity-transmissibility relationship should be used. 2) CZ: The Carmen-Kozeny⁴⁴, ⁴⁵ and ⁴⁶ porosity-transmissibility relationship should be used. <p>This option is used in the commercial compositional simulator and is therefore ignored by OPM Flow.</p>	1*
5	CARKZEXP	<p>The exponent constant in the Carmen-Kozeny porosity-transmissibility equation for when PORTXROP has been set to CZ.</p> <p>This option is used in the commercial compositional simulator and is therefore ignored by OPM Flow.</p>	0.0
Notes: <ol style="list-style-type: none"> 1) The keyword is terminated by a "/". 			

Table 5.34: ROCKCOMP Keyword Description

Example

```
--
--      ROCK   NUMBER   WAT   POR-TRAN
--      OPTN   TABLES  INDUCE  OPTION
ROCKCOMP
      REVERS 5          NO      1*          /
```

The above example defines the default values for the ROCKCOMP keyword with five rock compaction tables.

⁴⁴ J. Kozeny, "Ueber kapillare Leitung des Wassers im Boden." *Sitzungsber Akad. Wiss., Wien*, 136(2a): 271-306, 1927.

⁴⁵ P.C. Carman, "Fluid flow through granular beds." *Transactions, Institution of Chemical Engineers, London*, 15: 150-166, 1937.

⁴⁶ P.C. Carman, "Flow of gases through porous media." *Butterworths, London*, 1956

5.3.113 RPTCPL – ACTIVATE COUPLE SIMULATION REPORTING

FRUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the couple simulation reporting, that results in the simulator writing out various initialization data and simulation data in order for external “controlling programs” to interactively manage the simulation. There is no data required for this keyword but the keyword should be terminated by a “/”.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

Example

```
--
--      ACTIVATE COUPLE SIMULATION REPORTING
--
RPTCPL
/
```

The above example switches on couple simulation reporting; however, this has no effect in OPM Flow input decks.

5.3.114 RPTHMD - DEFINE WELL HISTORY MATCH GRADIENT REPORTING OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, RPTHMD, defines the options and level of history match output that should be written to history match file (*.HMD), for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.115 RPTRUNSP – ACTIVATE RUNSPEC REPORTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates reporting of all the RUNSPEC options utilized in the run. There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

Example

```
--
--      ACTIVATE RUNSPEC SECTION REPORTING
--
RPTRUNSP
```

The above example switches on RUNSPEC reporting; however, this has no effect in OPM Flow input decks.

5.3.116 RSSPEC – ACTIVATE OUTPUT OF THE RESTART INDEX FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

The RSSPEC keyword activates the writing out of the RESTART index file (*.RSSPEC). The restart data (pressure, saturations etc. through time for each active cell) are written out to two files one file contains the data, *.UNRST for example, and the second file contains an index of the data (*.RSSPEC) stored in the *.UNRST file. This keyword is somewhat redundant as the RESTART index file is written out by default. See the NORSSPEC keyword in the RUNSPEC section that deactivates the writing out of the file.

Hence, OPM Flow ignores this keyword. It is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE OUTPUT OF THE RESTART INDEX FILE *.RSSPEC
--
RSSPEC
```

The above example switches on the writing of the restart index file (*.RSSPEC); however, this has no effect in OPM Flow input decks.

5.3.117 RUNSPEC - DEFINE THE START OF THE RUNSPEC SECTION OF KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The RUNSPEC activation keyword marks the start of the RUNSPEC section that defines the key parameters for the simulator including the dimensions of the model, phases present in the model (oil, gas and water for example), number of tables for a given property and the maximum number of rows for each table, the maximum number of groups, wells and well completions, as well as various options to be invoked by OPM Flow.

Apart from COMMENTS entered by "--" in columns one and two, this keyword should be the first keyword in the input deck.

There is no data required for this keyword and there is no keyword terminating "/"

Example

```
-- =====
--
--  RUNSPEC SECTION
--
-- =====
RUNSPEC
```

The above example marks the start of the RUNSPEC section in the OPM Flow data input file.

5.3.118 SAMG – ACTIVATE ALGEBRAIC MULTI-GRID LINEAR SOLVER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the algebraic multi-grid linear solve; note this solver is not available to the general public in the commercial simulator.

This keyword is ignored by OPM Flow and has no effect on the simulation.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.119 SATOPTS – ACTIVATE RELATIVE PERMEABILITY ASSIGNMENT OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SATOPTS keyword activates OPM Flow's relative permeability assignment options. The relative permeability functions are defined using the either the:

- 1) SWOF, SGOF, SLGOF series of saturation functions, or the
- 2) SWFN, SGFN, SGWFN, SOF2, SOF3, SOF32D series of functions.

The allocation of the relative permeability tables to the grid cells is dependent on the options selected on this keyword (SATOPTS).

If the DIRECT option as been activated and the IRREVERS **has not been invoked** on the SATOPTS keyword, then **different relative permeability functions are used for each x, y, and z directions**. Here the KRNUMX, KRNUMY and KRNUMZ keywords are used for Cartesian grids to allocate the relative permeability tables to the cells. For Radial grids the KRNUMR, KRNUMT and KRNUMZ keywords should be used. This results in the same relative permeability curves being used in both the x_i to x_{i-1} and the x_i to x_{i+1} flow directions. Similarly for the y direction the same curves are used for the y_i to y_{i-1} and the y_i to y_{i+1} flow directions. And again for the z direction, the same relative permeability function is used for flow in the z_i to z_{i-1} and the z_i to z_{i+1} flow directions.

If the DIRECT option as been activated and the IRREVERS **has been invoked** on the SATOPTS keyword, then KRNUMX, KRNUMY and KRNUMZ keywords are used for Cartesian grids to allocate the relative permeability tables in the x_i to x_{i+1} , y_i to y_{i+1} , z_i to z_{i+1} , flow directions, respectively. For Radial grids the KRNUMR, KRNUMT and KRNUMZ keywords should be used. For flow in the x_i to x_{i-1} flow directions, etc., the KRNUMX-, KRNUMY- and KRNUMZ- keywords are used for Cartesian grids and the KRNUMR-, KRNUMT- and KRNUMZ- are used for radial grids.

The HYSTER option activates the relative permeability hysteresis option of the non-wetting phases (liquid and vapour) may show hysteretic behavior in that their values depend on whether the non-wetting phase saturation is increasing or decreasing. For this option the user specifies two sets of saturation functions, one for a drainage process (decreasing wetting phase saturation) and one for an imbibition process (increasing wetting phase saturation). For a process starting at the maximum wetting phase saturation, on the drainage curve, with the wetting phase saturation decreasing, the drainage curve is followed. Similarly for a process starting at the minimum wetting phase saturation with the wetting phase saturation increasing, the imbibition curve is followed. If the drainage or imbibition process is reversed at some point, then the data does not necessarily run back over its previous values. In OPM Flow the Carlson⁴⁷ is used to describe relative permeability hysteresis and the Killough⁴⁸ model is used for capillary pressure.

If the DIRECT option as been activated and the IRREVERS **has not been invoked** on the SATOPTS keyword, then the same set are keywords as for the DIRECT only option are used to assign the drainage relative permeability curves, that is: KRNUMX, KRNUMY, etc., plus the IMBNUMX, IMBNUMY, and IMBNUMZ, keywords for the imbibition curves. If the DIRECT option as been activated and the IRREVERS **has been invoked** on the SATOPTS keyword, then the same set are keywords as for the DIRECT and IRREVERS option are used to assign the drainage relative permeability curves, that is: KRNUMX, KRNUMX-, etc., plus the IMBNUMX, IMBNUMY, MBNUMZ, IMBNUMX-, IMBNUMY-, IMBNUMZ- keywords for the imbibition curves. See Table 5.36 for the various relative permeability table allocation keywords for the various combination of DIRECT, IRREVERS and HYSTER command options.

The keyword should be followed by one or more of the following keyword options.

⁴⁷ Carlson, F.M. (1981) SPE 10157, presented at the 56th Annual SPE Fall Meeting, San Antonio, 1981

⁴⁸ Killough, J. E. "Reservoir Simulation with History-dependent Saturation Functions," paper SPE 5106, Society of Petroleum Engineers Journal (1976) 16, No. 1, 37-48.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
1	DIRECT	<p>A character string that activates the directional relative permeability assignment option.</p> <p>If the DIRECT command is stated then directional relative permeability assignment is activated and different relative permeability function are assigned to the x, y and z directions. In this case the KRNUMX, KRNUMY and KRNUMZ keywords are used for Cartesian grids to allocate the relative permeability tables. For Radial grids the KRNUMR, KRNUMT and KRNUMZ keywords should be used.</p> <p>Only the default option is supported by OPM Flow, that is directional relative permeability is <u>not</u> supported.</p>	None
2	IRREVERS	<p>A character string the activates reversible directional relative permeability assignment option.</p> <p>If IRREVERS is stated then the relative permeability assignment is set to non-reversible and results in different sets of relative permeability tables being applied for flow from the x_i to x_{i+1} direction and the x_i to the x_{i-1} direction, for all directions (x, y, z).</p> <p>in this case the KRNUMX, KRNUMY and KRNUMZ keywords are used for Cartesian grids to allocate the relative permeability tables in the x_i to x_{i+1} flow directions etc. For Radial grids the KRNUMR, KRNUMT and KRNUMZ keywords should be used. For flow in the x_i to x_{i-1} flow directions, etc., the KRNUMX-, KRNUMY- and KRNUMZ- keywords are used for Cartesian grids and the KRNUMR-, KRNUMT- and KRNUMZ- are used for radial grids.</p> <p>Only the default option is supported by OPM Flow, that is non-reversible permeability tables are <u>not</u> supported.</p>	None
3	HYSTER	<p>A character string that activates the hysteresis option.</p> <p>If the HYSTER and DIRECT options have activated and the IRREVERS has not been invoked on the SATOPTS keyword, then <u>different relative permeability functions are used for each x, y, and z directions and for the drainage and imbibition processes.</u> Here the drainage relative permeability curves are allocated via the KRNUMX, KRNUMX and KRNUMZ keywords for Cartesian grids and the KRNUMR, KRNUMT and KRNUMZ keywords for radial grids. The imbibition relative permeability curves are allocated via the IMBNUMX, IMBNUMY and IMBNUMZ keywords for Cartesian grids and the IMBNUMR, IMBNUMT and IMBNUMZ keywords for radial grids.</p> <p>If the HYSTER, DIRECT and IRREVERS options have activated, then <u>different relative permeability functions are used for each x, y, and z directions, flow direction and for the drainage and imbibition processes.</u> Then in addition to aforementioned relative permeability curves allocation keywords for the x_i to x_{i+1} flow direction etc., the x_i to x_{i-1} flow directions keywords, KRNUMX-, KRNUMY- and KRNUMZ- are used for Cartesian grids and the KRNUMR-, KRNUMT- and KRNUMZ- are used for radial grids. The imbibition relative permeability curves are allocated via the IMBNUMX-, IMBNUMY- and IMBNUMZ keywords for Cartesian grids and the IMBNUMR, IMBNUMT and IMBNUMZ keywords for radial grids.</p> <p>Only the HYSTER option is supported by OPM Flow.</p>	None

No.	Name	Description	Default
4	SURFTENS	A character string that activates the capillary pressure surface tension pressure dependency option. Only the default option is supported by OPM Flow, that is capillary pressure surface tension pressure dependency option is <u>not</u> supported.	None
Notes: <ol style="list-style-type: none"> 1) Note that the IRREVERS command can only been activated if the DIRECT command is activated at the same time. See Table 5.36 for the various relative permeability table allocation keywords. 2) The keyword is terminated by a “/”. 			

Table 5.35: SATOPTS Keyword Description

For clarity the following table outlines the keywords that should be used in allocating the relative permeability tables for the various SATOPTS options.

Option	Cartesian		Radial	
DIRECT Flow in all directions	KRNUMX KRNUMY KRNUMZ		KRNUMR KRNUMT KRNUMZ	
DIRECT and IRREVERS Flow in the i to i +1 directions.	KRNUMX, KRNUMY KRNUMZ		KRNUMR KRNUMT KRNUMZ	
Flow in the i to i -1 directions.	KRNUMX- KRNUMY- KRNUMZ-		KRNUMR- KRNUMT- KRNUMZ-	
DIRECT and HYSTER Flow in all directions.	<u>Drainage</u> KRNUMX KRNUMY KRNUMZ	<u>Imbibition</u> IMBNUMX IMBNUMY IMBNUMZ	<u>Drainage</u> KRNUMR KRNUMT KRNUMZ	<u>Imbibition</u> IMBNUMR IMBNUMT IMBNUMZ
DIRECT, IRREVERS and HYSTER Flow in the i to i +1 directions.	<u>Drainage</u> KRNUMX KRNUMY KRNUMZ	<u>Imbibition</u> IMBNUMX IMBNUMY IMBNUMZ	<u>Drainage</u> KRNUMR KRNUMT KRNUMZ	<u>Imbibition</u> IMBNUMR IMBNUMT IMBNUMZ
Flow in the i to i -1 directions.	KRNUMX- KRNUMY- KRNUMZ-	IMBNUMX- IMBNUMY- IMBNUMZ-	KRNUMR- KRNUMT- KRNUMZ-	IMBNUMR- IMBNUMT- IMBNUMZ-
Notes: <ol style="list-style-type: none"> 1) Note the drainage and imbibition classification is related to the wetting phase, that may be either oil or water; however, water is normally assumed in most cases but there are exceptions to this, especially for heavy oils. 				

Table 5.36: SATOPTS Relative Permeability Function Allocation Keywords.

Examples

The first example activates the directional relative permeability assignment option only and hence the following keywords are used to allocate the relative permeability arrays for Cartesian grids: KRNUMX, KRNUMY, and KRNUMZ.

```
--
--      ACTIVATE RELATIVE PERMEABILITY ASSIGNMENT HYSTERESIS OPTIONS
--      DIRECTIONAL(DIRECT) IRREVERSIBLE(IRREVERS) HYSTERESIS(HYSTER)
SATOPTS      'DIRECT' /
```

The next example activates the directional irreversible relative permeability assignment options, and hence the following keywords are used to allocate the relative permeability arrays for Cartesian grids: KRNUMX, KRNUMY, KRNUMZ, KRNUMX-, KRNUMY- and KRNUMZ-.

```
--
--      ACTIVATE RELATIVE PERMEABILITY ASSIGNMENT HYSTERESIS OPTIONS
--      DIRECTIONAL(DIRECT) IRREVERSIBLE(IRREVERS) HYSTERESIS(HYSTER)
SATOPTS      'DIRECT' 'IRREVERS' /
```

Finally, the last option invokes all three assignment options.

```
--
--      ACTIVATE RELATIVE PERMEABILITY ASSIGNMENT HYSTERESIS OPTIONS
--      DIRECTIONAL(DIRECT) IRREVERSIBLE(IRREVERS) HYSTERESIS(HYSTER)
SATOPTS      'DIRECT' 'IRREVERS' 'HYSTER' /
```

In this case the drainage relative permeability curves are allocated by the KRNUMX, KRNUMY, KRNUMZ, KRNUMX-, KRNUMY-, KRNUMZ- keywords, and the imbibition relative permeability curves are allocated by the IMBNUMX, IMBNUMY, IMBNUMZ, IMBNUMX-, IMBNUMY-, IMBNUMZ- keywords.

Note

This keyword activates how relative permeability curves are assigned in the model. The ENDSKALE keyword allows the end-point scaling also to vary with direction, flow direction and hysteresis process, resulting in a great deal of flexibility.

Whether or not all these features should be used though is another question.

5.3.120 SAVE – ACTIVATE OUTPUT OF A SAVE FILE FOR FAST RESTARTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates output of a SAVE file for fast restarts which are read in by the LOAD keyword in the RUNSPEC section. No data is required for this keyword.

OPM Flow does not support the SAVE file format for fast restarts like the commercial simulator, but instead writes a standard RESTART file at the requested time step in the SCHEDULE section, which can then be used to restart the simulation at a given point in time via the RESTART keyword in the RUNSPEC section.

Example

The first example requests that a SAVE file be written out in the RUNSPEC section; however, OPM Flow will not write a RESTART record if the SAVE keyword is encountered in the RUNSPEC section.

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      WRITE OUT SAVE FILE FOR FAST RESTARTS
--
SAVE
```

The second example shows how the keyword is used in the SCHEDULE section.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE

-- -----
-- SCHEDULE SECTION - 2020-01-01
-- -----
RPTSCHED      'WELLS=2'      'WELSPECS'      'CPU=2'      FIP=2'      /

DATES
      1  APR   2021  /
/
--
--      WRITE OUT SAVE FILE FOR FAST RESTARTS
--
SAVE

DATES
      1  JULY  2021  /
      1  OCT   2021  /
/
```

Here OPM Flow will write out a RESTART file instead of a SAVE file at July 1st, 2021.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.121 SCDPDIMS – DEFINE SCALE DEPOSITION AND DAMAGE TABLE DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SCDPDIMS keyword defines the number of tables used in the Scale Deposition option and the maximum number of entries for the various tables.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	NTSCDP	NTSCDP is a positive integer that defines the number of SCDPTAB scale deposition tables used in the Scale Deposition option.	0
2	NPSCDP	NPSCDP is a positive integer that defines the maximum number of entries (or rows) in any one SCDPTAB scale deposition table defined in the input deck.	0
3	NTSCDA	NTSCDA is a positive integer that defines the number of SCDATAB scale damage tables used in the Scale Deposition option.	0
4	NPSCDA	NPSCDA is a positive integer that defines the maximum number of entries (or rows) in any one SCDATAB scale damage table defined in the input deck.	0
5	Not Used		1*
6	Not Used		1*
7	NTSCDE	NTSCDE is a positive integer that defines the number of SCDETAB karst aquifer dissolution tables used in the Scale Deposition option.	0
Notes: 1) The keyword is terminated by a "/".			

Table 5.37: SCDPDIMS Keyword Description

Example

```
--
--      NO.      MAX      NO.      MAX      NOT      NOT      NO.
--      NTSCDP  NPSCDP  NTSCDA  NPSCDA  USED    USED    NTSCDE
SCDPDIMS      5       10       4       10       1*     1*     3
                                                    /
```

The above example defines the number of SCDPTAB scale deposition tables to be five with a maximum number of rows for each table set to 10, the maximum number of SCDATAB scale damage tables to be four with a maximum number of 10 rows per table, and the maximum number of SCDETAB karst aquifer dissolution tables to be three.

5.3.122 SKIP – ACTIVATE SKIPPING OF ALL KEYWORDS AND INPUT DATA

The SKIP keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered. All keywords and between the SKIP and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP – Activate Skipping of All Keywords and Input Data](#) in the GLOBAL section for a full description.

5.3.123 SKIP100 – ACTIVATE SKIPPING OF BLACK-OIL KEYWORDS AND INPUT DATA

This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered. All black-oil keywords between the SKIP100 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data](#) in the GLOBAL section for a full description.

5.3.124 SKIP300 – ACTIVATE SKIPPING OF “COMPOSITIONAL” KEYWORDS AND INPUT DATA

Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered. All “compositional” keywords between the SKIP300 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.125 SMRYDIMS – DEFINE MAXIMUM NUMBER OF SUMMARY VECTORS TO BE WRITTEN

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SMRYDIMS keyword defines the maximum number of summary vectors to be written out to the SUMMARY file (*.SUMMARY).

OPM Flow uses dynamic memory allocation and therefore the keyword has no effect and is ignored by the simulator, but is documented here for completeness.

No.	Name	Description	Default
I	NSUMMX	A positive integer that defines the maximum number of summary vectors to be written out to the SUMMARY file (*.SUMMARY).	10000
Notes: I) The keyword is terminated by a "/".			

Table 5.38: SMRYDIMS Keyword Description

Example

```
--
--      SET THE MAXIMUM NUMBER OF SUMMARY VECTORS THAT CAN BE WRITTEN OUT
--
SMRYDIMS
      10000
      /
```

The above example sets maximum number of summary vectors that can be written out to the SUMMARY file to the default value of 10,000; however, this has no effect in OPM Flow input decks.

5.3.126 SOLVDIMS – DEFINE PEBI GRID NESTED FACTORIZATION SOLVER DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SOLVDIMS defines the unstructured Perpendicular Bisector (“PEBI”)⁴⁹ and ⁵⁰ grid nested factorization solver dimensions. This keyword is generated by an external pre-processing program for generating simulation grids.

This keyword is ignored by OPM Flow and has no effect on the simulation.

⁴⁹ Heinemann, Z.E. and Brand, C.W. 1988. Gridding Techniques in Reservoir Simulation. Proc., First Intl. Forum on Reservoir Simulation, Alpbach, Austria, 339.

⁵⁰ Heinemann, Z.E., Brand, C.W., Munka, M. et al. 1991. Modeling Reservoir Geometry With Irregular Grids. SPE Res Eng 6 (2): 225–232. SPE-18412-PA. <http://dx.doi.org/10.2118/18412-PA>

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.127 SOLVENT – ACTIVATE THE SOLVENT PHASE IN THE MODEL

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword indicates that the solvent phase is present in the model and to activate the four component solvent model for this run. In addition to this keyword, the oil, water and gases phases should also be declared for the run using the OIL, WATER and GAS keywords. The keyword will also invoke data input file checking to ensure that all the required Solvent phase input parameters are defined in the input deck.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      SOLVENT PHASE IS PRESENT IN THE RUN
--
SOLVENT
```

The above example declares that the solvent phase is active in the model.

5.3.128 SPIDER – SPIDER GRID ACTIVATION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SPIDER activates the OPM Flow spider grid geometry option for the model, if this keyword and the RADIAL keyword are omitted then Cartesian geometry is assumed by OPM Flow. Note that is an OPM Flow specific keyword and option.

Spider Grids basically take the standard radial geometry keywords in the grid section and transform the grid specification to an Irregular Corner-Point Grid which can then be viewed in OPM ResInsight in a more intuitive form. The only difference is that in the RUNSPEC section the SPIDER keyword is used instead of the RADIAL keyword. One drawback of the approach that only “cake-slides” can be used for Spider Grids; that is theta must be less than 360 degrees and the dimension must be one, not the full radial geometry.

See also the RADIAL keyword in the RUNSPEC section ([RADIAL – Radial Grid Activation Option](#)). Both Spider and Radial grids will be displayed the same in OPM ResInsight, as they both use Irregular Corner-Point Grid geometry. The difference is that the radial model's pore volumes are adjusted to match the radial geometry pore volumes, whereas, the Spider grid volumes are not adjusted. See the examples in the section on Radial Grids ([Radial Grids](#)) and Spider Grids ([Spider Grids](#)) for further information

Example

```
--
--      DEFINE SPIDER GRID GEOMETRY (OPM FLOW RADIAL GRID KEYWORD)
--
SPIDER
```

The above example activates OPM Flow's spider grid geometry option.

5.3.129 START – SIMULATION START DATE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword sets the start date for the simulation switches. If the DATES keyword is to be used during the simulation, then a start date should be entered.

No.	Name	Description	Default
1	DAY	A positive integer that defines the day of the month, the value should be greater than or equal to one and less than or equal to 31.	None
2	MONTH	Character string for the month and should be one of the following 'JAN', 'FEB', 'MAR', 'APR', 'MAY', 'JUN', 'JUL' (or 'JLY'), 'AUG', 'SEP', 'OCT', 'NOV', or 'DEC'	None
3	YEAR	A positive four digit integer value of the start year, which must be specified fully by four digits, that is 1986.	None
Notes: 1) The keyword is terminated by a "/".			

Table 5.39: START Keyword Description

Example

```
--
--      DEFINE THE START DATE FOR THE RUN
--
START      01 'JAN' 2014      /
```

The above example sets the start date for the run to be January 1, 2014.

Note

Whenever possible it is a good idea to always set the start date to be at the beginning of the year as per the example. As like most simulators, OPM Flow reports are always stated at the number of days from the start date (and sometimes at a given date). If the start date is at the beginning of the year, then calculating the actual date is relatively straight forward and simple.

5.3.130 SURFACT – ACTIVATE THE SURFACTANT PHASE IN THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicates that the surfactant phase is present in the model and to activate the surfactant flooding model. The keyword will also invoke data input file checking to ensure that all the required surfactant phase input parameters are defined in the input deck. See also the SURFACTW keyword in the RUNSPEC section that activates the surfactant phase, but with the changes to the wettability option activated as well.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

Example

```
--
--      ACTIVATE THE SURFACTANT PHASE IN THE MODEL
--
SURFACT
```

The above example declares that the surfactant phase is active in the model.

5.3.131 SURFACTW – ACTIVATE THE SURFACTANT PHASE WITH WETTABILITY CHANGES IN THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicates that the surfactant phase is present in the model and to activate the surfactant flooding mode with Changes to Wettability option activated as well. The keyword will also invoke data input file checking to ensure that all the required surfactant phase input parameters are defined in the input deck. See also the SURFACT keyword in the RUNSPEC section that activates the surfactant phase only, that is without the Changes to the Wettability option.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

Example

```
--
--      ACTIVATE THE SURFACTANT PHASE WITH WETTABILITY CHANGES IN THE MODEL
--
SURFACTW
```

The above example declares that the surfactant phase is active in the model together with the wettability changes.

5.3.132 TABDIMS – DEFINE THE NUMBER OF TABLES AND THE TABLE DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TABDIMS keyword defines the maximum number of tables for a given table type dataset and the maximum number of entries for the various tables. The commercial simulator combines both the black-oil and compositional simulator variables on this keyword; however, although all the parameters are explained below only the black-oil parameters are used by OPM Flow.

No.	Name	Description	Default
1	NTSFUN	A positive integer that defines the maximum number of relative permeability table sets defined in the input deck. The tables are allocated to different parts of the grid by the SATNUM keyword.	1
2	NTPVT	A positive integer that defines the maximum number of fluid property table sets defined in the input deck. The tables are allocated to different parts of the grid by the PVTNUM keyword.	1
3	NSSFUN	A positive integer that defines the maximum number of saturation entries in the relative permeability tables defined in the input deck.	20
4	NPPVT	A positive integer that defines the maximum number of pressure entries in the PVT tables.	20
5	NTFIP	A positive integer defining the maximum number of regions in the FIPNUM region array. Note that this parameter may also be set on the REGDIMS keyword as well. If NTFIP is set in both places then the maximum value is used.	1
6	NRPVT	A positive integer that defines the maximum number of Rs and Rv entries in the PVT tables. If the DISGAS and VAPOIL options have not been activated then this parameter is ignored.	20
7	NRVPVT	A positive integer that defines the maximum number of Rv entries in the PVT tables for the commercial compositional simulator.	20
8	NTENDP	A positive integer that defines the maximum number of saturation end-point depth tables. The end-point depth tables are used to re-scale the saturation tables as a function of depth as oppose to being a grid block property. NTENDP may also be specified on the ENDSCALE keyword, and if specified on both here and on the ENDSCALE keyword the maximum value of the two is used.	1
9	NMEOSR	A positive integer that defines the maximum number of reservoir equations of states for the commercial compositional simulator.	1
10	NMEOSS	A positive integer that defines the maximum number of separator or surface equations of states for the commercial compositional simulator.	1
11	MXNFLN	A positive integer defining the maximum number flux regions in the FLUXNUM region array. MXNFLN can also be defined on the REGDIMS keywords as well. If MXNFLX is defined both here and on the REGDIMS keyword then the maximum value of the two is used.	10
12	MXNTHR	A positive integer that defines the maximum number of thermal regions for the commercial compositional simulator.	1

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
13	NTROCC	A positive integer that defines the maximum number of rock compressibility entries enter by the ROCK keyword defined in the input deck. The tables are allocated to different parts of the grid by the PVTNUM keyword.	1*
14	MXNPMR	A positive integer that defines the maximum number of pressure maintenance regions for the commercial compositional simulator.	0
15	NTABKT	A positive integer that defines the maximum number of temperature dependent K-value tables for the when the thermal option is activated in the commercial compositional simulator.	0
16	NTALPHA	A positive integer that defines the maximum number of transport coefficient tables for the commercial compositional simulator.	0
17	NASPKA	A positive integer that defines the maximum number of maximum number of entries in the ASPKDAM keyword tables for the commercial compositional simulator.	10
18	MXRAWG	A positive integer that defines the maximum number of maximum number of entries in the ASPREWG keyword tables for the commercial compositional simulator.	10
19	MXRASO	A positive integer that defines the maximum number of pressure maintenance regions for the commercial compositional simulator.	10
20		Not Used	1*
21	MCASPP	A positive integer that defines the maximum number of column entries in the ASPPW2D keyword tables for the commercial compositional simulator.	5
22	MRASPP	A positive integer that defines the maximum number of row entries in the ASPPW2D keyword tables for the commercial compositional simulator.	5
23	MXRATF	A positive integer that defines the maximum number of entries in the ASPWETF table for the commercial compositional simulator.	5
24	MXNKVT	A positive integer that defines the maximum number of composition dependent K-value tables for the commercial compositional simulator.	0
25	RESVED	Not Used	1*
Notes: <ol style="list-style-type: none"> 1) Table sets are groups of keywords that need to be defined to complete a table set. For example if NTPVT is set to three, then there must be three PVTO tables and three PVTG tables to complete the three PVT data set. 2) The keyword is terminated by a “/”. 			

Table 5.40: TABDIMS Keyword Description

Example

```
--
--      MAX      MAX      MAX      MAX      MAX      MAX      E300
--      NTSFUN   NTPVT   NSSFUN  NPPVT   NTFIP   NRPVT   BLANK  NTEND
TABDIMS 15      9      40      30      1*     1*     1*     1      /
```

The above example defines maximum number of relative permeability tables to be 15 with a maximum number of rows for each table set to 40, and the maximum number of PVT tables to be nine with a maximum number of 30 rows per table.

5.3.133 TEMP – ACTIVATE THE TEMPERATURE MODELING OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the temperature modeling option. There is no data required for this keyword.

The temperature option (TEMP keyword) and the thermal option (THERMAL keyword) are two separate modeling facilities in the commercial simulator, although some keywords can be used by both options, for example the RTEMP keyword. OPM Flow's thermal implementation is based on solving the energy equation fully coupled with the black-oil equations so the results are not directly equivalent to the commercial simulator's black-oil TEMP or compositional THERMAL formulations. To activate OPM Flow's thermal implementation use the THERMAL keyword in the RUNSPEC section.

The reservoir temperature can be set to a constant or to be varying with depth utilizing the keywords in the following table:

Input Section	Constant Temperature	Temperature Variation With Depth
PROPS	RTEMP and RTEMPA	
SOLUTION	RTEMP and RTEMPA	RTEMPVD and TEMPVD
Notes: 1) The TEMP option is not implemented in OPM Flow; however, some of the above keywords can be used with OPM Flow's THERMAL option.		

Table 5.41: Reservoir Temperature Keywords

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness. See the THERMAL keyword in the RUNSPEC section to activate OPM Flow's THERMAL option instead.

Example

```
--
--      ACTIVATE THE TEMPERATURE MODELING OPTION (NOT SUPPORTED BY OPM FLOW)
--
TEMP
```

The above example activates the temperature modeling option, although the keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.134 THERMAL– ACTIVATE THE THERMAL MODELING OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword activates the thermal modeling option. There is no data required for this keyword. The energy black-oil implementation in OPM Flow is a mixture of the commercial simulators black-oil and the commercial simulators “compositional thermal” keywords, as well as some OPM Flow specific keywords.

The temperature option (TEMP keyword) and the thermal option (THERMAL keyword) are two separate modeling facilities in the commercial simulator, although some keywords can be used by both options, for example the RTEMP keyword. OPM Flow’s thermal implementation is based on solving the energy equation fully coupled with the black-oil equations so the results are not directly equivalent to the commercial simulator’s black-oil TEMP or compositional THERMAL formulations.

Keywords specifically associated with both OPM Flow’s THERMAL and the commercial simulators TEMP and THERMAL options are listed in Table 5.42 for easy of reference.

Section	Keyword	Function	OPM Flow	Commercial	
			THERMAL MODEL	TEMP MODEL	THERMAL MODEL
RUNSPEC	ROCKDIMS	Thermal Rock Dimensions of Over and Underburden Rock Types			
	TEMP	Activate the Temperature Modeling Option			
	THERMAL	Activate the Thermal Modeling Option			
GRID	ROCKCON	Thermal Rock Over and Underburden Connection Data			
	ROCKPROP	Thermal Rock Over and Underburden Property Data			
	HEATCR	Rock Heat Capacity.			
	HEATCRT	Rock Heat Capacity Temperature.			
	THCGAS	Gas Phase Thermal Conductivity.			
	THCOIL	Oil Phase Thermal Conductivity.			
	THCONR	Thermal Conductivity of liquids and reservoir rock.			
	THCONSF	Thermal Conductivity of liquids and reservoir rock scaling factor applied to THCONR to account for gas saturation.			
	THCROCK	Rock Thermal Conductivity.			
	THCSOLID	Solid Phase Thermal Conductivity.			
	THCWATER	Water Thermal Conductivity.			
PROPS	HEATVAP	Thermal Oil Component Heat of Vaporization			
	GASDENT	Gas Density Temperature Coefficients (OPM Flow keyword).			
	GASVISCT	Gas Viscosity versus Temperature Functions (OPM Flow black-oil keyword).			
	OILDENT	Oil Density Temperature Coefficients (OPM Flow keyword).			

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Section	Keyword	Function	OPM Flow	Commercial	
			THERMAL MODEL	TEMP MODEL	THERMAL MODEL
	OILVISCT	Oil Viscosity versus Temperature Functions (OPM Flow black-oil keyword).			
	RTEMP	Constant Initial Reservoir Temperature.			
	RTEMPA	Constant Initial Reservoir Temperature.			
	RTEMPVD	Initial Reservoir Temperature versus Depth.			
	SPECHA	Thermal Specific Heat of Oil Component			
	SPECHEAT	Specific Heat of Oil, Water and Gas			
	SPECROCK	Specific Heat of the Reservoir Rock			
	TEMPVD	Initial Reservoir Temperature versus Depth.			
	THANALB	Activate Thermal Analytic Water Density Option			
	THERMEXI	Liquid Components Thermal Expansion Coefficient			
	WATDENT	Oil Density Temperature Coefficients.			
	WATVISCT	Oil Viscosity versus Temperature Function.			
REGION	THERMNUM	Thermal Region Numbers.			
SOLUTION	RTEMP	Constant Initial Reservoir Temperature.			
	RTEMPA	Constant Initial Reservoir Temperature.			
	TEMPI	Initial Reservoir Temperature for All Cells.			
SCHEDULE	WTEMP	Set An Injection Well's Fluid Temperature			
	WINJTEMP	Define Injection Fluid Thermal Properties			

Notes:

- 1) Cells colored green implies the keyword can be used with this model formulation.
- 2) Cells colored orange means the keyword is recognized by OPM Flow's parser but is ignored and not used by OPM Flow.
- 3) Cells colored red should not be used with this model formulation.
- 4) The list is focused on the OPM Flow implementation of the energy and black-oil formulation and therefore does not necessary include all the commercial simulator's compositional keywords.

Table 5.42: OPM Flow's THERMAL Option Associated Keywords

In thermal runs a producing well's bottom-hole temperature is calculated based on a weighted average of the temperature in the grid cell connections open to flow in the producing well, that is the reported bottom-hole temperature, T_{BHT} , is calculated as:

$$T_{BHT} = \frac{\sum_{i=1}^M W_i T_i}{\sum_{i=1}^M W_i} \quad (5.1)$$

with

$$W_i = \sum_p^N (\rho_{pi}^r) (q_{pi}^r) C_p \quad (5.2)$$

The term $(\rho_{pi}^r) (q_{pi}^r) C_p$ is the energy rate density (J/(K s)) of phase p,

where:

- N = number of phases,
- M = number of open connections in the well,
- i = the open connection index,
- p = the phase index, oil, water and gas.
- r = indicating that the parameter is evaluated at reservoir conditions,
- T = temperature (K),
- q = connection flow rate (m³/s),
- ρ = fluid density (kg/m³), and
- C = specific heat capacity (J/(K kg))
(see the SPECHEAT keyword in the PROPS section).

The current implementation makes use of the internal energy:

$$E_{pi} = C_p \cdot T_i \quad (5.3)$$

derived from the enthalpy, H_{pi}

$$E_{pi} = H_{pi} + \frac{P_{pi}}{\rho_{pi}^r} \quad (5.4)$$

where P_{pi} is connection grid block pressure of phase p.

The phase rates at surface conditions (q_{p1}^s) are converted to reservoir in situ rates (q_{pi}^r) using the phase formation volume factor, B_{pi} , via:

$$q_{pi}^r = \frac{q_{pi}^s}{B_{pi}^{-1}} \quad (5.5)$$

And thus equation (5.2) can be simplified to:

$$W_i = \sum_p^N (\rho_{pi}^r) \left(\frac{q_{pi}^s E_{pi}}{B_{pi}^{-1} \cdot T_i} \right) \quad (5.6)$$

Example

```
--
--      ACTIVATE THE THERMAL MODELING OPTION (OPM FLOW THERMAL OPTION ONLY)
--
THERMAL
```

The above example activates the thermal modeling option.

5.3.135 TITLE – DEFINE THE TITLE FOR THE INPUT DECK

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TITLE keyword defines the title for the input deck. The title text will be printed on all reports so as to act as a reference for the run.

No.	Name	Description	Default
I	TITLE	A character string that defines the TITLE for the input deck	None

Notes:

- 1) All the characters on the line are processed as a string and therefore there is no need to enclose the TITLE in quotes.
- 2) There is no terminator “/” for the keyword.

Table 5.43: TITLE Keyword Description

Note

It is good practice to include the name of the input file in the title (without the extension) for when cross checking results from multiple cases.

Example

```
--
--      DEFINE THE TITLE FOR THE RUN
TITLE
SPE01-THEM01-OPM1810-R01 - OPM THERMAL OPTION RUN
```

The above example defines the title for the run to be “SPE01-THEM01-OPM1810-R01 - OPM THERMAL OPTION RUN”.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.136 TRACERS – ACTIVATE TRACER OPTIONS AND SET TRACER ARRAY DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TRACER keyword defines the number of tracers in the model and the various passive tracer tracking options.

No.	Name	Description	Default
1	MXOILTR	A positive integer defining the maximum number of passive oil tracers defined using the TRACER keyword.	0
2	MXWATTR	A positive integer defining the maximum number of passive water tracers defined using the TRACER keyword.	0
3	MXGASTR	A positive integer defining the maximum number of passive gas tracers defined using the TRACER keyword.	0
4	MXENVTR	A positive integer defining the maximum number of passive environmental tracers defined using the TRACER keyword. Environmental tracers are used with the Environment Tracer model that takes into account tracer adsorption and decay. Only the default value of zero is currently supported.	0
5	DIFFOPT	A character string defining the numerical diffusion option for tracer tracking runs that should be set to: 1) DIFF activates the numerical diffusion control options. 2) NODIFF deactivates the numerical diffusion control options. Only the default value of NODIFF is supported	NODIFF
6	MXITRTR	A positive integer defining the maximum number of non-linear iterations to be used when the tracer option is activated.	12
7	MNITRTR	A positive integer defining the minimum number of non-linear iterations to be used when the tracer option is activated.	1
8	NONLIN	A character string stating if passive tracers as should be linear (NO) or non-linear (YES). Only the default value of NO is supported.	No
9	LNCONFAC	A real value defining the initial linear convergence factor. The default value of 1* means the parameter will not be utilized.	1*
10	NLCONFAC	A real value defining the initial non-linear convergence factor. The default value of 1* means the parameter will not be utilized.	1*
11	CONFAC	A real value defining the LNCONFAC and NLCONFAC convergence factors to be used after the initial convergence factor has been applied.	1.0
12	NUMCONF	A positive integer defining the maximum number of times CONFAC can be used.	0
Notes: 1) The keyword is terminated by a "/".			

Table 5.44: TRACERS Keyword Description

See also the TRACER keyword in the PROPS section that defines the individual tracers.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--  
--      NO OIL  NO WAT  NO GAS  NO ENV  DIFF    MAX    MIN    TRACER  
--      TRACERS TRACERS TRACERS TRACERS CONTL  NONLIN NONLIN NONLIN  
TRACERS  
      0        7        1        0      'NODIFF' 1*      1*      1*      /
```

The above example defines seven tracers in the water phase and one tracer in the gas phase.

5.3.137 TRPLPORO – ACTIVATE THE TRIPLE POROSITY MODEL OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TRPLPORO keyword activates the Triple Porosity Model option that models matrix, fractures and vuggy porosity for carbonate reservoirs, and specifies the number of matrix porosity systems

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description	Default
I	TRPLPORO	A positive integer value that specifies the number of matrix porosity systems in the model. TRPLPORO should be set to either: 1) TRPLPORO set equal to 2, if the vugs are only connected to the fractures, so that the porosity system is matrix and connected vugs, or, 2) TRPLPORO set equal to 3, if the vugs are connected to the fractures and the matrix, so that the porosity system is matrix, connected vugs, and isolated vugs.	I
Notes: 1) The keyword is terminated by a "/".			

Table 5.45: TRPLPORO Keyword Description

Note the keyword cannot be used in conjunction with the NMATRIX keyword, which is also in the RUNSPEC section.

Example

```
--
--      TRPLPORO
--      OPTION
TRPLPORO 3 /
```

The above example activates the Triple Porosity Model option and specifies the porosity system is matrix, connected vugs, and isolated vugs.

5.3.138 UDADIMS – DEFINE THE DIMENSIONS OF THE USER DEFINED ARGUMENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the dimensions of the User Defined Arguments (“UDA”) used by OPM Flow that can be applied to various connection, group, and well keywords in the SCHEDULE section. UDAs are defined by the UDQ keyword that is used to specify values to be constants, SUMMARY variables, as defined in SUMMARY section, or a formula using various mathematical functions together with constants and SUMMARY variables.

Although this keyword is read by OPM Flow and the ACTION and UDQ computational logic and calculations have been implemented, one should used caution using this facility as it may result in OPM Flow aborting.

No.	Name	Description	Default
1	NMUDA	NMUDA is a positive integer that defines the number of arguments in a SCHEDULE section keyword, that are replaced by numeric UDQ values.	0
2	IGNORED	Not used and should be defaulted.	1*
3	MXUDA	<p>MXUDA is a positive integer that defines the maximum number of <u>unique arguments</u> in a keyword that are replaced by numeric UDQ values.</p> <p>Note that MXUDA differs from NMUDA, for example:</p> <ol style="list-style-type: none"> 1) If only the oil rate argument of, say the WCONPROD keyword is specified by a UDQ, then both NMUDA and NMUDA equal one. 2) However, if a second WCONPROD uses a different UDQ, then NMUDA equals two, but MXUDA would can still be one. 3) Finally, if the same UDQ is used separately in two lines of WCONPROD data, then both NMUDA and MXUDA must be set to two. <p>As MXUDA’s default value is 100 then this only needs to be increased where the same UDQ is used as a UDA more than 100 times.</p>	100
Notes: 1) The keyword is terminated by a “/”.			

Table 5.46: UDADIMS Keyword Description

Note that OPM Flow has a more restricted UDQ feature set than the commercial simulator, so not all options and functions are currently available.

Example

```
--
--      USER DEFINED ARGUMENT DIMENSIONS
--      NO.      NOT      TOTAL
--      ARGS    USED    UDQ
UDADIMS
      10        1*      10
```

In the above example both NMUDA and MXUDA are set equal to ten.

5.3.139 UDQDIMS – DEFINE THE DIMENSIONS OF THE USER DEFINED UDQ FEATURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the dimensions associated with the UDQ keyword used in OPM Flow to calculate various user defined values in the SCHEDULE section. The UDQ keyword defined variables can be constants, SUMMARY variables, as defined in the SUMMARY section, or a formula using various mathematical functions together with constants and SUMMARY variables.

Although this keyword is read by OPM Flow and the ACTION and UDQ computational logic and calculations have been implemented, one should used caution using this facility as it may result in OPM Flow aborting.

No.	Name	Description	Default
1	MXFUNS	A positive integer that defines the maximum number of functions that can be included when defining a UDQ definition. This should also include any brackets that will be used in the UDQ definition.	16
2	MXITEMS	MXITEMS is a positive integer that defines the maximum number of ITEMS allowed in an UDQ definition.	16
3	MXUDC	MXUDC is a positive integer that defines the maximum number of user defined CONNECTION quantities allowed in an UDQ definition.	0
4	MXUDF	MXUDF is a positive integer that defines the maximum number of user defined FIELD quantities allowed in an UDQ definition.	0
5	MXUDG	MXUDG is a positive integer that defines the maximum number of user defined GROUP quantities allowed in an UDQ definition.	0
6	MXUDR	MXUDR is a positive integer that defines the maximum number of user defined REGION quantities allowed in an UDQ definition.	0
7	MXUDS	MXUDS is a positive integer that defines the maximum number of user defined SEGMENT quantities allowed in an UDQ definition.	0
8	MXUDW	MXUDW is a positive integer that defines the maximum number of user defined WELL quantities allowed in an UDQ definition.	0
9	MXUDA	MXUDA is a positive integer that defines the maximum number of user defined AQUIFER quantities allowed in an UDQ definition.	0
10	MXUDB	MXUDB is a positive integer that defines the maximum number of user defined BLOCK quantities allowed in an UDQ definition.	0
11	RSEED	RSEED is a character string that determines if a new random number seed should be generated for restart runs for use in the UDQ functions RANDN, RANDU, RRNDN and RRNDU. If RSEED is set to Y then a new seed will be generated and if set to the default value of N or I* then the same seed of the “base” simulation will be employed. See also the RSEED integer variable on the UDQPARAM keyword in the RUNSPEC section to set the random number seed for the current run. This feature is not supported by OPM Flow.	N
Notes: 1) The keyword is terminated by a “/”.			

Table 5.47: UDQDIMS Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Note that OPM Flow has a more restricted UDQ feature set than the commercial simulator, so not all options and functions are available.

Example

```
--
--      USER DEFINED ARGUMENT DIMENSIONS FACILITY
--      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX      MAX
--      FUNCS    ITEMS    CONNS   FIELD    GROUP    REGS    SEGM   WELL    AQUF    BLCKS   RAND
UDQDIMS
50      25      0      50      50      0      0      0      0      0      0      N /
```

In this case the maximum number of functions that can be included when defining a UDQ definition is set to 50, maximum number of items allowed in an UDQ definition is 25, the maximum number of user defined field quantities allowed in an UDQ definition is 50, and the maximum number of user defined group quantities allowed in an UDQ definition is also 50. All other parameters are defaulted including the RSEED variable (the same seed of the “base” simulation will be employed).

5.3.140 UDQPARAM – DEFINE PARAMETERS FOR THE USER DEFINED QUANTITY FEATURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the dimensions of the User Defined Arguments (“UDA”) used by OPM Flow that can be applied to various connection, group, and well keywords in the SCHEDULE section. UDAs are defined by the UDQ keyword that is used to specify values to be constants, SUMMARY variables, as defined in SUMMARY section, or a formula using various mathematical functions together with constants and SUMMARY variables.

Although this keyword is read by OPM Flow and the ACTION and UDQ computational logic and calculations have been implemented, one should used caution using this facility as it may result in OPM Flow aborting.

No.	Name	Description	Default
1	RSEED	RSEED is a positive integer greater than zero that sets a new random number seed for use in the UDQ functions RANDN, RANDU RRNDN and RRNDU. See also the RSEED character variable on the UDQDIMS keyword in the RUNSPEC section to default the random number seed for a restart run. This feature is not supported by OPM Flow.	1
2	RANGE	RANGE is a real positive value greater than or equal to one and less than or equal to 1.0×10^{20} , that sets the absolute range for the user defined quantities. The default value of 1×10^{20} sets the range from -1×10^{20} to $+1 \times 10^{20}$.	1×10^{20}
3	DEFAULT	DEFAULT is real value that is the default numerical value given to undefined UDQ variables and should be in the same range as RANGE.	0.0
4	TOLUDQ	TOLUDQ a real positive number greater than zero and less than one that defines the tolerance used to determine if two real values are equal. Floating-point numbers (as implemented in computers) are never exact, one cannot compare floating point numbers for exact equality. Thus, TOLUDQ defines a tolerance. For example, the default value of 1×10^{-4} means that if the difference between two real values is less than 1×10^{-4} then the values are considered equal.	1×10^{-4}

Notes:

- 1) The keyword is terminated by a “/”.

Table 5.48: UDQPARAM Keyword Description

Note that OPM Flow has a more restricted UDQ feature set than the commercial simulator, so not all options and functions are available.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      USER DEFINED DEFAULT VALUES
--      SEED      RANGE      UNDEFINED      COMPARISON
--      INTG      -AND+      VALUE          TOLERANCE
UDQPARAM
      1          1.0E20      0.0          1.0E-4          /
```

The example explicitly sets the default values for all four variables on the UDAPARAM keyword, namely the random seed to one, the range to 1×10^{20} , the undefined UDQ variables to zero, and the comparison tolerance to 1.0×10^{-4} .

5.3.141 UDTDIMS – DEFINE THE DIMENSIONS OF THE USER DEFINED TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the dimensions of the User Defined Tables (“UDT”) used by OPM Flow that can be applied to various connection, group, and well keywords in the SCHEDULE section. UDAs are defined by the UDAQ keyword that is used to specify values to be constants, SUMMARY variables, as defined in SUMMARY section, or a formula using various mathematical functions together with constants and SUMMARY variables.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	MXUDT	MXUDA is a positive integer that defines the maximum number of User Defined Tables	0
2	NUDT	NUDT is a positive integer that defines the maximum number of rows in any given User Defined Table.	0
3	MXINTP	MXINTP is a positive integer that defines the maximum number of interpolation points allowed in any given dimension.	0
4	MXDIMS	MXDIMS is a positive integer that defines the maximum number of dimensions in any given User Defined Table.	0
Notes: 1) The keyword is terminated by a “/”.			

Table 5.49: UDTDIMS Keyword Description

Example

```
--
--      USER DEFINED TABLE DIMENSIONS
--
--      MAX      MAX      MAX      MAX
--      TABLES  ROWS    INTPOL  DIMS
UDTDIMS
      3          20      3         2                               /
```

In the above example the maximum number of UDT tables is set to three and the maximum number of rows for each table is 20, the maximum number of interpolation points in any given dimension is set to three and the maximum number of dimensions is defined as two.

5.3.142 UNCODHMD – ACTIVATE HISTORY MATCH GRADIENT UNENCODED OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

UNCODHMD activates the history match gradient unencoded output for the history match gradient output file. Unencoded files allows external programs to read this file type.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE HISTORY MATCH GRADIENT UNENCODED OUTPUT
--
UNCODHMD
```

The above example switches on the unified output file option.

5.3.143 UNIFIN – ACTIVATE THE UNIFIED INPUT FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword switches on the Unified Input Files option for all input files. Similar to the commercial simulator, OPM Flow has various options for reading various input files and writing the resulting OPM Flow output files as described in Table 5.50.

Process	Keyword	Description	Files
Input	FMTIN	A character string that defines the input files to be formatted as ASCII i.e. text files, as oppose to binary files. The input deck file is always of this type. The option relates to the OPM Flow derived files that used as input, for for example when restarting from another case. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTIN	A character string that defines the input files to be non-unified multiple files, as opposed to unified files. In this case, one file is read in per reporting time step, as opposed to all time steps reports being read from one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I
	UNIFIN	A character string that defines the input files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. For this option a single summary file and a single restart file will be read. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Output	FMTOUT	A character string that sets all output files to be formatted as ASCII i.e. text files, as opposed to binary files. The *.PRT, *.LOG and *.DEBUG files are always of this type. The option relates to the OPM Flow output files only. In this case the files will be portable across operating systems, but will also be very large in terms of hard disk space. For this reason it is recommend that the default option is used so that binary files are outputted. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTOUT	A character string that defines the output files to be non-unified multiple files, as opposed to unified files. In this case, one file is written for each reporting time step, as opposed to all time steps reports being written in one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I

Process	Keyword	Description	Files
	UNIFOUT	<p>A character string that defines the output files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single summary file and a single restart file will be generated, as opposed to one file per report time step.</p> <p><u>If the keyword is omitted then the default is for one file per reporting time step.</u></p>	<p>*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY</p>
<p>Notes:</p> <ol style="list-style-type: none"> 1) A binary file is computer-readable but not human-readable. All executable programs are stored in binary files, as are most numeric data files. In contrast, text files are stored in a form (usually ASCII) that is human-readable. 2) For unified files if the run terminates unexpectedly, or there is sufficient disk space, then the last report output is not stored. Their main advantage is that if a number of simulations reside in one directory, their output is organized. There is no limit on the number of reporting steps that a unified file can store. 			

Table 5.50: UNIFIN Keyword Description

There is no data required for this keyword and there is no terminating “/” for this keyword.

See also [OPM FLOW OUTPUT FILE FORMATS](#) for a more detailed description of the various file types (ASCII or binary) and file structure formats (unified or non-unified formats).

Example

```
--
--      SWITCH ON THE UNIFIED INPUT FILES OPTION
--
UNIFIN
```

The above example switches on the unified input file option.

5.3.144 UNIFOUT – ACTIVATE THE UNIFIED OUTPUT FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword switches on the Unified Output Files option for all output files. Similar to the commercial simulator, OPM Flow has various options for reading various input files and writing the resulting OPM Flow output files as described in Table 5.51.

Process	Keyword	Description	Files
Input	FMTIN	A character string that defines the input files to be formatted as ASCII i.e. text files, as oppose to binary files. The input deck file is always of this type. The option relates to the OPM Flow derived files that used as input, for for example when restarting from another case. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTIN	A character string that defines the input files to be non-unified multiple files, as opposed to unified files. In this case, one file is read in per reporting time step, as opposed to all time steps reports being read from one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I
	UNIFIN	A character string that defines the input files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. For this option a single summary file and a single restart file will be read. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Output	FMTOUT	A character string that sets all output files to be formatted as ASCII i.e. text files, as opposed to binary files. The *.PRT, *.LOG and *.DEBUG files are always of this type. The option relates to the OPM Flow output files only. In this case the files will be portable across operating systems, but will also be very large in terms of hard disk space. For this reason it is recommend that the default option is used so that binary files are outputted. If the keyword is omitted then the default is for binary file input.	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTOUT	A character string that defines the output files to be non-unified multiple files, as opposed to unified files. In this case, one file is written for each reporting time step, as opposed to all time steps reports being written in one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X000I *.SMSPEC *.S000I

Process	Keyword	Description	Files
	UNIFOUT	<p>A character string that defines the output files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single summary file and a single restart file will be generated, as opposed to one file per report time step.</p> <p><u>If the keyword is omitted then the default is for one file per reporting time step.</u></p>	<p>*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY</p>
<p>Notes:</p> <ol style="list-style-type: none"> 1) A binary file is computer-readable but not human-readable. All executable programs are stored in binary files, as are most numeric data files. In contrast, text files are stored in a form (usually ASCII) that is human-readable. 2) For unified files if the run terminates unexpectedly, or there is sufficient disk space, then the last report output is not stored. Their main advantage is that if a number of simulations reside in one directory, their output is organized. There is no limit on the number of reporting steps that a unified file can store. 			

Table 5.51: UNIFOUT Keyword Description

There is no data required for this keyword and there is no terminating “/” for this keyword.

See also [OPM FLOW OUTPUT FILE FORMATS](#) for a more detailed description of the various file types (ASCII or binary) and file structure formats (unified or non-unified formats).

Example

```
--
--      SWITCH ON THE UNIFIED OUTPUT FILES OPTION
--
UNIFOUT
```

The above example switches on the unified output file option.

5.3.145 UNIFOUTS – ACTIVATE THE UNIFIED OUTPUT SUMMARY FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The UNIFOUTS keyword causes the SUMMARY file output files to be a unified file, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single SUMMARY file will be generated, as opposed to one file per report time step. See also the MULTOUT keyword in the RUNSPEC section that sets both the SUMMARY and RESTART files to be non-unified multiple files, as opposed to unified files. Note also that UNIFOUTS keyword has precedence over the MULTOUT keyword for SUMMARY files.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE THE UNIFIED OUTPUT SUMMARY FILE OPTION
--
UNIFOUTS
```

The above example switches on the unified SUMMARY output files.

5.3.146 UNIFSAVE – ACTIVATE THE UNIFIED OUTPUT SAVE FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
----------------	------	------	-------	---------	----------	---------	----------

Description

The UNIFSAVE keyword causes the SAVE file output file to be a unified file, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single SAVE file will be generated, as opposed to one file per report time step. See also the MULTOUT keyword in the RUNSPEC section that sets both the SUMMARY and RESTART files to be non-unified multiple files, as opposed to unified files.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE THE UNIFIED OUTPUT SAVE FILE OPTION
--
UNIFSAVE
```

The above example switches on the unified SUMMARY output files.

5.3.147 VAPOIL – ACTIVATE THE VAPORIZE OIL IN WET GAS PHASE IN THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicates that vaporized oil (more commonly referred to as condensate) is present in wet⁵¹ gas in the model and the keyword should only be used if there is both oil and gas phases in the model. The keyword may be used for gas-water and oil-water-gas input decks that contain the oil and gas phases. The keyword will also invoke data input file checking to ensure that all the required oil and gas phase input parameters are defined in the input deck.

If the gas has a constant and uniform vaporized oil concentration, Condensate-Gas Ratio (“CGR”), and if the reservoir pressure never drops below the saturation pressure (dew point pressure), then the model can be run more efficiently by omitting the OIL and VAPOIL keywords from the RUNSPEC section, treating the gas as a dry gas⁵², and defining a constant Rv (CGR) value with keyword RVCONST or RVCONSTT in the PROPS section. This results in the model being run with as a dry gas problem with no active oil (condensate) phase. However, OPM Flow takes into account the constant Rv in the calculations and reporting.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--          VAPORIZED OIL IN WET GAS IS PRESENT IN THE RUN
--
VAPOIL
```

The above example declares that the vaporized oil, i.e. condensate, in the gas phase is active in the model.

⁵¹ Natural gas that contains significant heavy hydrocarbons such as propane, butane and other liquid hydrocarbons is known as wet gas or rich gas. The general rule of thumb is if the gas contains less methane (typically less than 85% methane) and more ethane, and other more complex hydrocarbons, it is labeled as wet gas. Wet gas normally has GOR's less than 100,000 scf/stb or 18,000 Sm³/m³, with the condensate having a gravity greater than 50 °API.

⁵² Natural gas that occurs in the absence of condensate or liquid hydrocarbons, or gas that had condensable hydrocarbons removed, is called dry gas. It is primarily methane with some intermediates. The hydrocarbon mixture is solely gas in the reservoir and there is no liquid (condensate surface liquid) formed either in the reservoir or at surface. The term dry indicates that the gas does not contain heavier hydrocarbons to form liquids at the surface conditions. Dry gas typically has GOR's greater than 100,000 scf/stb or 18,000 Sm³/m³.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.148 VAPWAT – ACTIVATE VAPORIZE WATER IN THE DRY AND WET GAS PHASES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicates that vaporized water is present in the gas phase and the keyword should only be used if both water and gas phases are present in the model. VAPWAT should also be used in conjunction with the PRECSALT keyword in the RUNSPEC section in order to activate OPM Flow's Salt Precipitation model. VAPWAT may be used for gas-water and oil-water-gas input decks that contain the oil, gas and water phases.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note

This is an OPM Flow specific keyword for the simulator's Water Vaporization Model that is activated by declaring that vaporized water is present in the run.

Note that if the VAPWAT keyword is in the input deck then either the PVTGW or PVTGWO keywords in PROPS section should be used to defined the gas and water PVT properties.

Secondly, if both the VAPWAT keyword and the PRECSALT keyword (used to activate the OPM Flow's Salt Precipitation model) are present in the input deck, then the RWGSALT keyword in the PROPS section also needs to be present.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

```
--
--      VAPORIZED WATER IN DRY/WET GAS IS PRESENT IN THE RUN (OPM FLOW KEYWORD)
--
VAPWAT
```

The above example declares that the vaporized water is present in the gas phase and is active in the model.

5.3.149 VE – ACTIVATE VERTICAL EQUILIBRIUM MODEL (GLOBAL)

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

This keyword activates the Vertical Equilibrium (“VE”) model for the global grid and optionally specifies the type of VE model. The VE model type can either be compressed for merging columns of grid blocks into a single grid block, or uncompressed for the standard VE model.

This keyword is ignored by OPM Flow and has no effect on the simulation.

5.3.150 VFIDIMS – INJECTION VERTICAL FLOW PERFORMANCE TABLE DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

VFIDIMS keyword defines the maximum dimensions of the injection well Vertical Lift Performance (“VFP”) tables defined by VFPINJ keyword. The VFP tables for the producing wells are defined by the VFPPDIMS keyword.

No.	Name	Description	Default
1	MXMFLO	A positive integer that defines the maximum number of injection rate entries for the VFPINJ keyword.	0
2	MXMTHP	A positive integer that defines the maximum number of THP entries for the VFPINJ keyword.	0
3	MXVFPTAB	A positive integer that defines the maximum number of VFPINJ tables entered through the VFPINJ keyword.	0
Notes: 1) The keyword is terminated by a “/”.			

Table 5.52:VFIDIMS Keyword Description

Example

```
--      INJECTING VFP TABLES
--      VFP      VFP      VFP
--      MXMFLO  MXMTHP  NMMVFT
VFIDIMS
      10      10      12
```

/

The above example defines that the maximum number of injection rates and THP entries on the VFPINJ keyword is 10, and the maximum number of BHP entries is 12.

5.3.151 VFPPDIMS – PRODUCTION VERTICAL FLOW PERFORMANCE TABLE DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

VFPPDIMS keyword defines the maximum dimensions of the production well Vertical Lift Performance ("VFP") tables defined by VFPPROD keyword. The VFP tables for the injection wells are defined by the VFPIDIMS keyword.

No.	Name	Description	Default
1	MXMFLO	A positive integer that defines the maximum number of production flow rate entries for the VFPPROD keyword.	0
2	MXMTHP	A positive integer that defines the maximum number of THP entries for the VFPPROD keyword.	0
3	MXMWFR	A positive integer that defines the maximum number of water fraction entries (WOR, WCUT, GWR etc.) entries for the VFPPROD keyword.	0
4	MXMGFR	A positive integer that defines the maximum number of gas fraction entries (GOR, GLR, OGR etc.) entries for the VFPPROD keyword.	0
5	MXMALQ	A positive integer that defines the maximum number of artificial lift quantity entries for the VFPPROD keyword.	0
6	MXVFPTAB	A positive integer that defines the maximum number of VFPPROD tables entered through the VFPPROD keyword.	0
Notes: 1) The keyword is terminated by a "/".			

Table 5.53:VFPPDIMS Keyword Description

Example

```
--      PRODUCING VFP TABLES
--      VFP      VFP      VFP      VFP      VFP      VFP
--      MXMFLO  MXMTHP  MXMWFR  MXMGFR  MXMALQ  NMMVFT
VFPPDIMS
      20      10      10      10      6      9      /
```

Here the example shows that there are a maximum of 20 flow rates, 10 THP entries, 10 water and gas fraction entries, and six artificial lift entries for the nine VFPPROD VFP production tables.

5.3.152 VISAGE - ACTIVATE EXTERNAL RESERVOIR GEO-MECHANICS VISAGE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The VISAGE keyword activates the External Reservoir Geo-Mechanics VISAGE option. The keyword should not be used in input decks as the associated data is generated by an external program.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.153 VISCD – ACTIVATE DUAL POROSITY VISCOUS DISPLACEMENT OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The VISCD keyword activates the Dual Porosity Viscous Displacement option for dual porosity and dual permeability models, and therefore requires either the DUALPORO or DUALPERM keyword to be entered in the RUNSPEC section to activate either one of these options. The VISCD option is used to model the viscous displacement of fluids from the matrix by the fracture pressure gradient, for when the fracture system has a more moderate permeability, and flow to and from the matrix caused by the fracture pressure gradient acts as an additional production mechanism⁵³. Normally this mechanism is ignored as the pressure gradient in the fracture system is small due to the very high permeability of the fracture system. See the LX, Ly and LZ keywords in the GRID section that define representative matrix grid block sizes.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE DUAL POROSITY VISCOUS DISPLACEMENT OPTION
--
VISCD
```

The above example activates the dual porosity viscous displacement option.

⁵³ Gilman, J. R. and Kazemi, H. “Improved Calculation for Viscous and Gravity Displacement in Matrix Blocks in Dual-Porosity Simulators,” paper SPE 16010 (includes a number of associated papers), Journal of Petroleum Technology (1988) 40, No. 1, 60-70.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.154 WARN – ACTIVATE WARNING MESSAGES

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

See [WARN – Activate Warning Messages](#) in the GLOBAL section for a full description.

5.3.155 WATER – ACTIVATE THE WATER PHASE IN THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword indicate that the water phase is present in the model and must be used for gas-water, oil-gas, oil-water, oil-water-gas input decks that contain the water phase. The keyword will also invoke data input file checking to ensure that all the required water phase input parameters are defined in the input deck.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      WATER PHASE IS PRESENT IN THE RUN
--
WATER
```

The above example declares that the oil phase is active in the model.

5.3.156 WELLDIMS – DEFINE THE WELLS AND GROUP DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WELLDIMS defines various well and group dimensions for the run. The commercial simulator combines both the black-oil and compositional simulator variables on this keyword; however, although all the parameters are explained below only the black-oil parameters are used by OPM Flow.

No.	Name	Description	Default
1	MXWELS	A positive integer defining the maximum number of wells for this model.	0
2	MXCONS	A positive integer defining the maximum number of grid block connections per well for this model.	0
3	MXGRPS	A positive integer defining the maximum number of groups for this model.	0
4	MXGRPW	A positive integer defining the maximum number of wells that can belong to a group in the model and the maximum number of child groups in a group. Note that MXGRPW sets both the maximum number of wells in a group and the maximum number of child groups in a group. The former applies to groups that contain wells and the latter applies to groups that contain other groups. See also the GRUPTREE keyword in the SCHEDULE section to define group hierarchy.	0
5	MXSTAGE	A positive integer defining the maximum number of stages per separator for this model. This option is ignored by OPM Flow.	5
6	MXSTRMS	A positive integer defining the maximum number of well streams for this model. This option is ignored by OPM Flow.	10
7	MXMIXS	A positive integer defining the maximum number of mixtures for this model. This option is ignored by OPM Flow.	5
8	MXSEPS	A positive integer defining the maximum number of separators for this model. This option is ignored by OPM Flow.	4
9	MXCOMPS	A positive integer defining the maximum number of mixture components in a mixture for the model. This option is ignored by OPM Flow.	3
10	MXDOCOMP	A positive integer defining the maximum number of well completions that can cross a parallel run domain boundary when the PARALLEL option has been activated. This option is ignored by OPM Flow.	0
11	MXWSLIST	A positive integer defining the maximum number of well lists that a well may be concurrent belong to at one time for this model. This option is ignored by OPM Flow.	1

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description	Default
12	MXWLISTS	A positive integer defining the maximum number of dynamic well lists for this model. This option is ignored by OPM Flow.	1
13	MXWSECD	A positive integer defining the maximum number of secondary wells for this model. This option is ignored by OPM Flow.	10
14	MXNGPP	A positive integer defining the maximum number of row entries per completion in the generalized pseudo-pressure tables used for to calculate the blocking factor associated with condensate drop-out in gas condensate reservoirs. If the generalized pseudo-pressure option has not been activated then this is ignored. This option is ignored by OPM Flow.	201
Notes: 1) Only parameters (1) to (4) are used by OPM Flow. 2) The keyword is terminated by a "/".			

Table 5.54: WELLDIMS Keyword Description

Example

```
--
--      WELL      WELL      GRUPS   GRUPS
--      MXWELS    MXCONS    MXGRPS   MXGRPW
WELLDIMS
      60         110        18        40
```

The above example defines the maximum number of wells to be 60 with 110 completions per well, and maximum number of groups to be 18 with maximum number of wells per group of 40. All other parameters are defaulted.

5.3.157 WPOTCALC – WELL POTENTIAL CALCULATION OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

WPOTCALC defines how shut-in and stopped wells should have their well potentials calculated. Well potentials for wells under these conditions need to have their potentials calculated if they are in a Priority Drilling Queue via the WDRILPRI keyword in the SCHEDULE section, or the Prioritization option has been enabled by the PRIORITY keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

5.3.158 WSEGDIMS – DEFINE MULTI-SEGMENT WELL DIMENSIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WSEGDIMS keyword defines the multi-segment well dimensions for the multi-segment well model and the keyword is obligatory if multi-segment wells are being employed in the model.

No.	Name	Description	Default
1	MXWELS	A positive integer defining the maximum number of multi-segment wells for this model.	0
2	MXSEGS	A positive integer defining the maximum number of segments per well for this model.	1
3	MXBRAN	A positive integer defining the maximum number of branches per multi-segment well, including the main branch groups for this model.	1
4	MXLINKS	A positive integer defining the maximum number of segment links per multi-segment well.	0
Notes: 1) The keyword is terminated by a "/".			

Table 5.55: WSEGDIMS Keyword Description

Example

```
--
--      WELL      WELL      BRANCH  SEGMENT
--      MXWELS    MXSEGS    MXBRAN  MXLINKS
WSEGDIMS      5          100      10      10
```

The above example defines the maximum number of multi-segment wells to be five with up to 100 segments per multi-segment well, a maximum number of 10 branches per multi-segment well, and up to 10 segment links per multi-segment well.

CHAPTER 6: GRID SECTION

6.1 INTRODUCTION

The GRID section defines the basic grid properties, including structure, faults and various static rock properties (porosity, permeability etc.). The information in this section will be used by the software to calculate the pore volume (PORV) for each cell, the cell mid-point depths, and the regular transmissibilities (TRANX, TRANY and TRANX) between all the cells, as well as across faults. The OPM Flow calculated parameters can then be edited in the EDIT section.

All models can be classified by the number of dimensions as show in Figure 6.1 (after Mattax⁵⁴). The zero and one dimension models are employed in analytical modeling, while the higher dimensions are used in numerical modeling. The term 4D modeling refers to a 3D model with the fourth dimension being the time domain derived from time-lapse seismic, that is the comparison of 3D seismic surveys at two or more points in time.

OPM Flow enables the user to define 1D, 2D and 3D models using three types of grids: Cartesian Regular Grid, Radial Grid⁵⁵, and Irregular Corner-Point Grids. The first two type of grids are rather limited in their ability to describe the structural complexity of oil and gas reservoirs; however, this simplicity allows the engineer to quickly build simple models to investigate reservoir performance. Indeed in the early days of numerical modeling back in the late 1970's two-dimensional cross-section and radial models were the main models used to predict reservoir performance due to limited computer resources at the time. That is not to say that full field models were not developed, but that these full field models were very coarse in comparison to what is designed and built today using static earth modeling software.

A brief introduction to the three types of grids and the data requirements to fully defined the structural element of the grid together with the rock properties necessary to complete the GRID section data requirements is outlined in the following section. This is then followed by the keyword definitions applicable to this section.

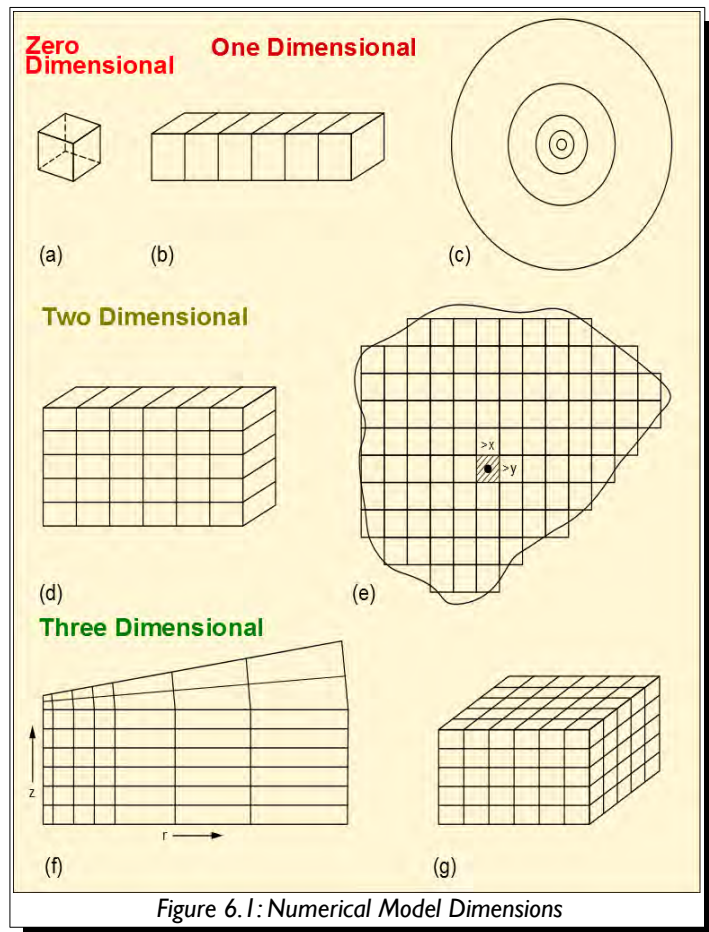


Figure 6.1: Numerical Model Dimensions


⁵⁴ Mattax, C.C. and Dalton R.L. 1990. *Reservoir Simulation*. Society of Petroleum Engineers, Henry L. Doherty Series, Monograph Vol. 13

⁵⁵ Radial grids are not currently implemented in this version of OPM Flow, but is expected to be incorporated in a future release.

6.2 DATA REQUIREMENTS

6.2.1 CARTESIAN REGULAR GRIDS

This type of grid defines a regular orthogonal grid based on defining the x, y and z dimensions of all the cells and is normally employed when a complex structural model is not required. Figure 6.2 shows the SPE Comparative Solution Project Number 1 (“SPE-CSP01”) as documented by Odeh⁵⁶.

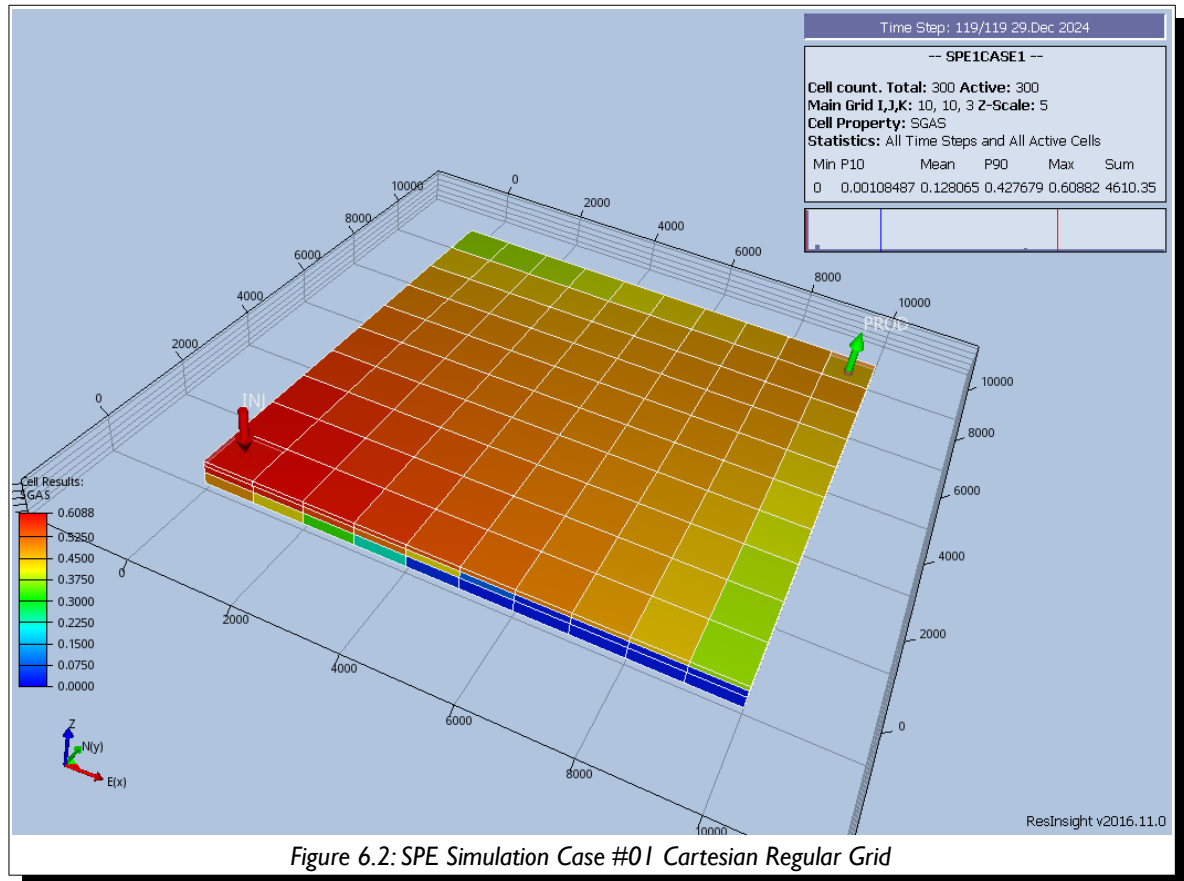

The model consists of a simple 10 x 10 x 3 (NX, NY, NZ) grid and is defined using the following GRID section keywords to define the grid geometry:

```

-- =====
--
-- GRID SECTION
--
-- =====
GRID
--
--      DEFINE GRID BLOCK SIZES IN THE X DIRECTION BASED ON NX x NY x NZ = 300)
--      (There Are In Total 300 Cells With Length 1000ft In X-Direction)
DX
      300*1000
  
```

⁵⁶ Odeh, A. "Comparison of Solutions to a Three Dimensional Black-Oil Reservoir Simulation Problem." JPT 33 (1981):13-25.

```
--
--      DEFINE GRID BLOCK SIZES IN THE Y DIRECTION (BASED ON NX x NY x NZ = 300)
--      (There Are In Total 300 Cells With Length 1000ft In Y-Direction)
DY
      300*1000
--
--      DEFINE GRID BLOCK SIZES IN THE Z DIRECTION (BASED ON NX x NY x NZ = 300)
--
DZ
      100*20.0   100*30.0   100*50.0
--
--      DEFINE GRID BLOCK TOPS FOR THE TOP LAYER (BASED ON NX = 100, NY = 100)
--      (Layer 2 and 3 TOPS Calculated by Simulator)
TOPS
      25*3100  25*3105  25*3110
```

The rock property data required to complete the GRID section is as follows:

```
--
--      DEFINE POROSITY DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PORO
      300*0.300
--
--      DEFINE PERMY DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PERMX
      100*500.0   100%50.0   100*200.0
--
--      DEFINE PERMY DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PERMY
      100*500.0   100%50.0   100*200.0
--
--      DEFINE PERMZ DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--      (Not Defined in Original Paper So Assume That PERMX = PERMY = PERMZ)
PERMZ
      100*500.0   100%50.0   100*200.0
```

The above keywords define all the properties required for the GRID section for this type of grid geometry.

6.2.2 IRREGULAR CORNER-POINT GRIDS

This type of grid is an industry standard grid used to formulate the structure of complex reservoirs⁵⁷. Here static modeling software is used to build the model which is then exported and imported into a numerical model. Figure 6.3 illustrates the skeleton grid for the Norne Field which has dimensions of 46 x 112 x 22 in the x, y and z dimensions respectively. This results in a total number of cells of 113,344 although not all of these cells will be active in the model.

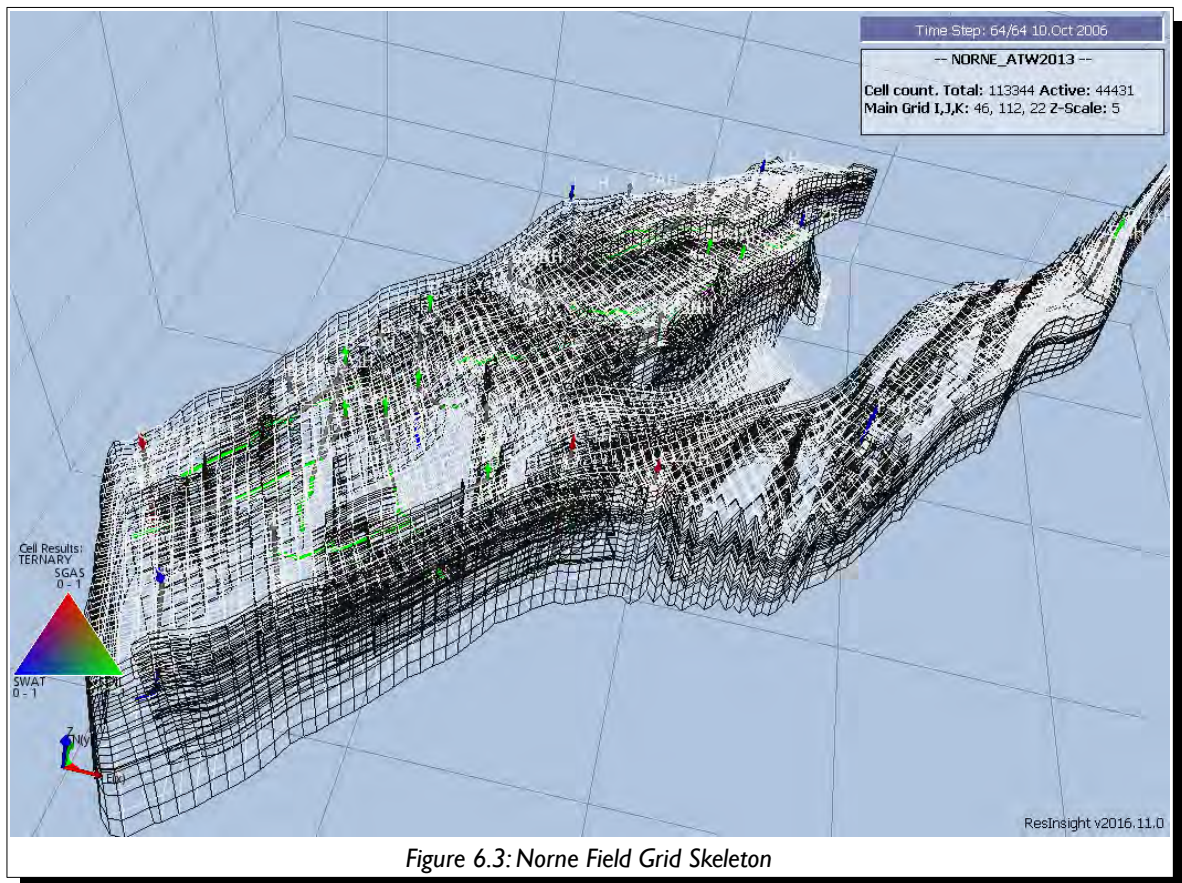


Figure 6.3: Norne Field Grid Skeleton

Similar to Cartesian Regular Grid the grid geometry must be defined for each cell and the properties for each cell defined. The formulation of the grid geometry is based on *corner-point geometry*, basically coordinate lines or pillars are given, then top and bottom surfaces for the cell are given by specifying the depth (z-coordinates) of the cell's corner points along each of the four adjacent pillars. The cell then forms an irregular hexahedron as depicted in Figure 6.4. Note that the figure shows a corner-point cell which is more or less orthogonal, which is ideally is what we want to minimize grid orientation effects.

The data required to define this type of grid consists of the SPECGRID to define the dimensions of the grid, that is:

```
--      MAX      MAX      MAX      MAX      GRID
--      NDIVIX   NDIVIY   NDIVIZ  NUMRES  TYPE
SPECGRID
      46      112      22      1      F
```

A portion of the coordinate line data defined by the COORD keyword from the Norne model is shown on the next page.

⁵⁷ K. Ponting, D. Corner Point Geometry in Reservoir Simulation, Conference Proceedings, ECMOR I - 1st European Conference on the Mathematics of Oil Recovery, Jul 1989, cp-234-00003 dDOI= "<https://doi.org/10.3997/2214-4609.201411305>", European Association of Geoscientists & Engineers,

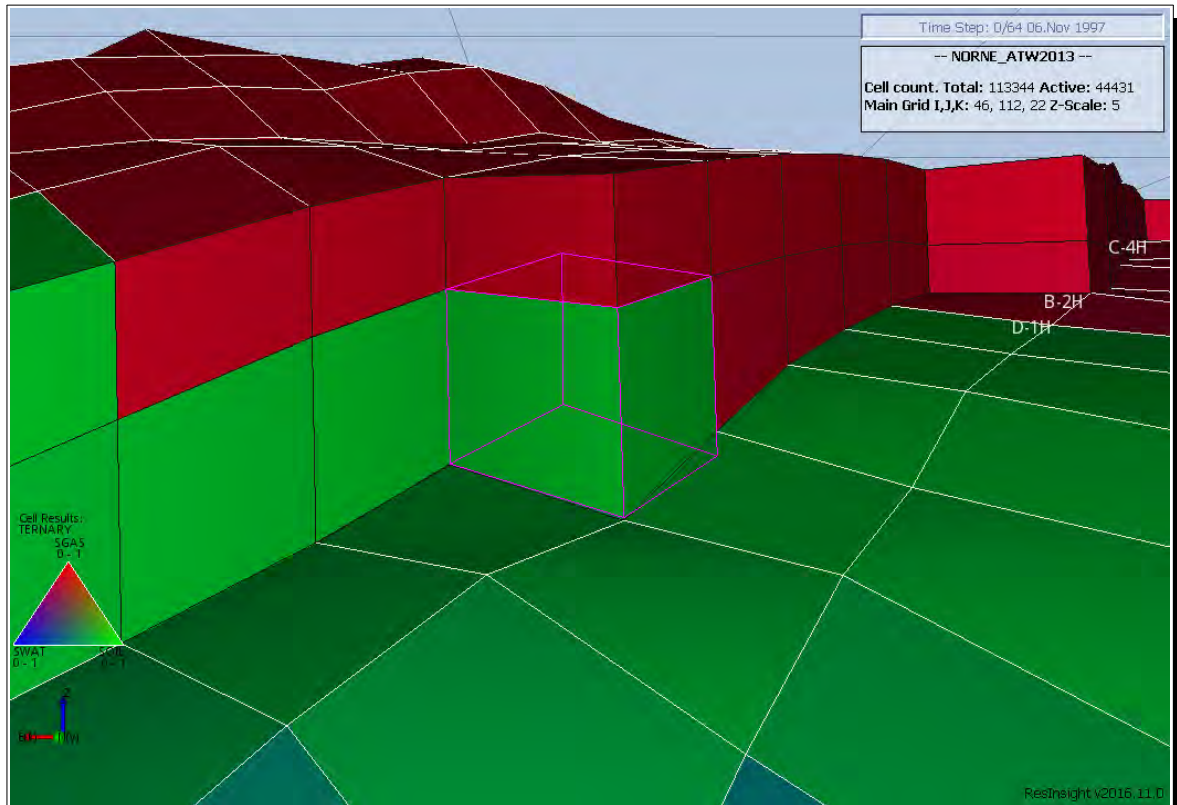


Figure 6.4: Norne Field Corner-Point Geometry Example

COORD					
-- X1	Y1	Z1	X2	Y2	Z2
----	----	----	----	----	----
453114.000	7319921.000	3037.473	453114.000	7319921.000	3132.831
453155.031	7319840.000	2983.933	453142.750	7319864.000	3173.572
453196.094	7319759.000	3005.969	453171.500	7319807.500	3215.836
453237.156	7319678.000	3000.265	453200.250	7319751.000	3217.250
453278.188	7319597.000	2989.348	453229.031	7319694.000	3213.951
453319.250	7319516.500	2995.680	453257.781	7319637.500	3215.323
453356.250	7319443.500	3000.855	453308.750	7319537.000	3220.549
453393.250	7319370.500	3005.252	453359.688	7319436.500	3210.393
453423.969	7319310.000	3030.862	453394.219	7319368.500	3203.438
453454.688	7319249.500	3036.870	453428.719	7319300.500	3190.770
453485.406	7319189.000	3038.017	453463.219	7319232.500	3190.660
453516.125	7319128.000	3045.027	453497.750	7319164.500	3188.813
453546.844	7319067.500	3055.410	453532.250	7319096.500	3185.966
453577.562	7319007.000	3066.541	453566.750	7319028.500	3184.325
453608.281	7318946.500	3076.624	453601.250	7318960.500	3183.584
453639.000	7318886.000	3086.938	453635.781	7318892.500	3184.057
453669.719	7318825.500	3096.153	453670.281	7318824.500	3185.988
453700.438	7318765.000	3104.703	453704.781	7318756.500	3188.598
453731.156	7318704.500	3097.016	453739.281	7318688.500	3180.484
453761.875	7318644.000	3088.539	453773.812	7318620.500	3177.091
453780.000	7318608.000	3098.118	453796.562	7318575.500	3176.401
453798.125	7318572.500	3096.691	453819.344	7318530.500	3172.299

/

The final keyword to define an Irregular Corner-Point geometry grid is the ZCORN keyword that defines the depths of the cell corners. A portion of the ZCORN data from the Norne model is shown below.

ZCORN

3037.473	2983.933	2983.933	3005.969	3005.969	3000.265
3000.265	2989.348	2989.348	2995.680	2995.680	3000.855
3000.855	3005.252	3005.252	3030.862	3030.862	3036.870
3036.870	3038.017	3038.017	3045.027	3045.027	3055.410
3055.410	3066.541	3066.541	3076.624	3076.624	3086.938
3086.938	3096.153	3096.153	3104.703	3104.703	3097.016
3097.016	3088.539	3088.539	3098.118	3098.118	3096.691
3096.691	3093.886	3093.886	3085.393	3085.393	3081.957
3081.957	3080.645	3080.645	3115.021	3115.021	3130.474
3130.474	3204.674	3204.674	3193.187	3193.187	3169.512
3169.512	3101.928	3101.928	3044.277	3044.277	3023.930
3023.930	2964.244	2964.244	2900.178	2900.178	2875.715
2875.715	2864.913	2864.913	2855.256	2855.256	2841.119
2841.119	2826.261	2826.261	2806.556	2806.556	2781.052
2781.052	2791.720	2791.720	2817.940	2817.940	2813.308
2813.308	2788.492				

/

The rock property data required to complete the GRID section is the same as for a Cartesian Regular grid, as defined in section [6.2.1 Cartesian Regular Grids](#) and the data is defined using the same keywords. The resulting Norne model showing the ternary solution variable is displayed in Figure 6.5.

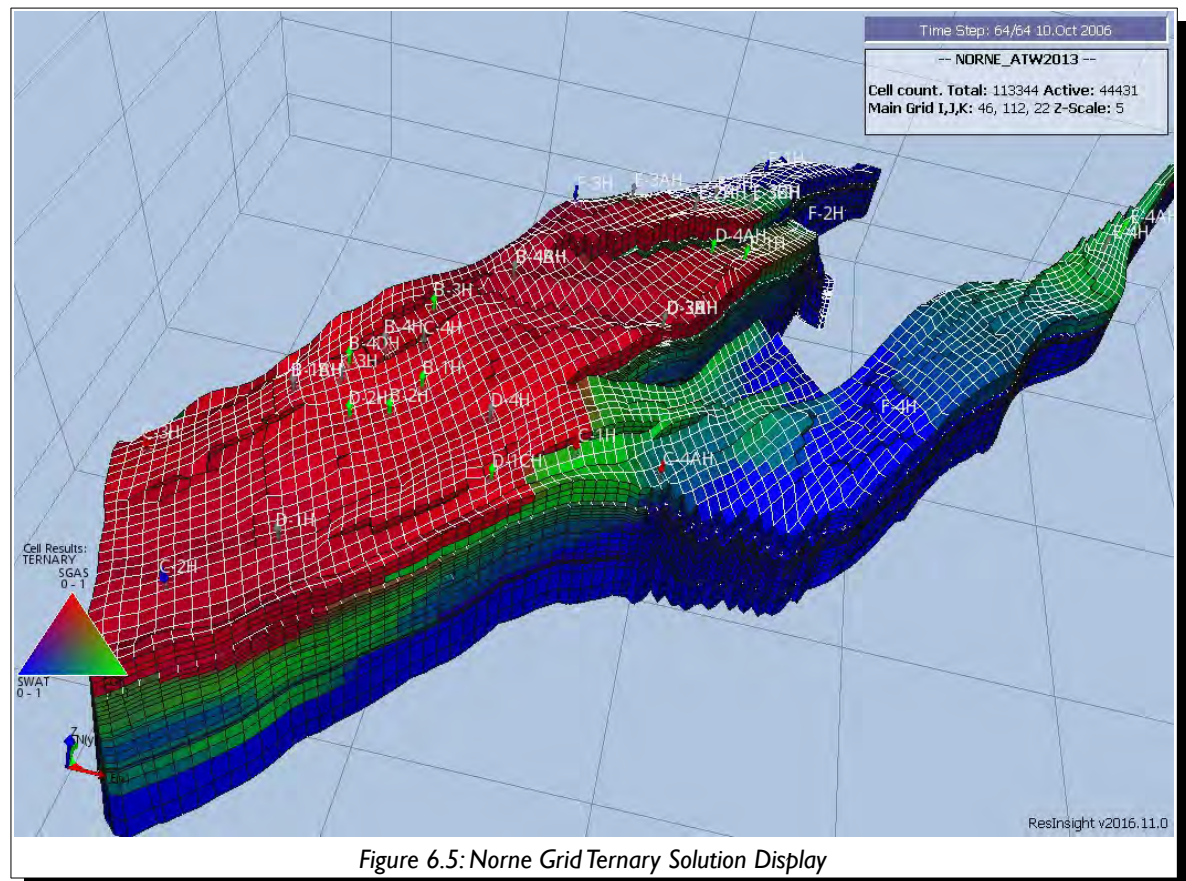


Figure 6.5: Norne Grid Ternary Solution Display



6.2.3 RADIAL GRIDS

Radial flow exists near the wellbore and linear or Cartesian flow occurs within the reservoir away from the wellbore. For field-wide studies the growth or decay of reservoir volumes activated by unsteady-state flow is small and hence linear flow is modeled via a linear grid, using either a Cartesian Regular Grid or an Irregular Corner-Point Grid, in these type of studies. On the other hand, for converging flow near wells the growth or decay of reservoir volumes activated by unsteady-state flow is large and radial flow should be modeled. Thus, radial flow is important in only very localized areas around the wells and linear flow is modeled in most reservoir studies, for example in full field or sector models. Consequently for investigating near well bore effects, radial models are used to investigate the behavior around the wellbore, for example in gas cusping and water coning studies, as one can see from Figure 6.6.

In both Cartesian Regular and Irregular Corner-Point grids the dimension nomenclature is (x, y, z) for the x, y, and z planes. The corresponding nomenclature for Radial Grids is (r, theta and z) for r or radius plane, theta for the angular plane measured in degrees, and z for the z plane.

In Figure 6.6 the radial grid has been labeled as a 2-D Cylindrical grid because there is no flow in the theta direction only in the r and z planes, whereas the 3-D Reservoir grid in the figure has flow in both the x and y planes as well as the z plane. Figure 6.7 shows a typical 3-D radial grid with dimensions (10, 10, 3) in the (r, theta, z) dimensions taken from Odeh⁵⁸.

Radial grids normally have a fine grid near the wellbore which then expands logarithmically away from the wellbore. This is illustrated in Figure 6.7 where one can clearly see the four most outer rings, but not the inner six. This type of grid makes solving the flow equations more challenging than conventional Cartesian and Irregular Corner-Point grids, where the cell pore volume distribution is relatively similar for neighboring cells, compared with Radial grids. For comparison, a typical conventional grid will have grid blocks size of 300, 300, 3 feet (or approximately 100m x 100m x 1m) spacing in the (x, y, z) plane; whereas a radial grid will utilize an inner most radius of between 0.25 to 1.0 foot in the R direction, and then logarithmically expand from the inner radius. The Odeh⁵⁸ example employs 0.25 ft. for the inner radius, and 1.75, 2.32, 5.01, 10.84, 23.39, 50.55, 109.21, 235.92, 509.68, and 1101.08 ft. for the outer radii.

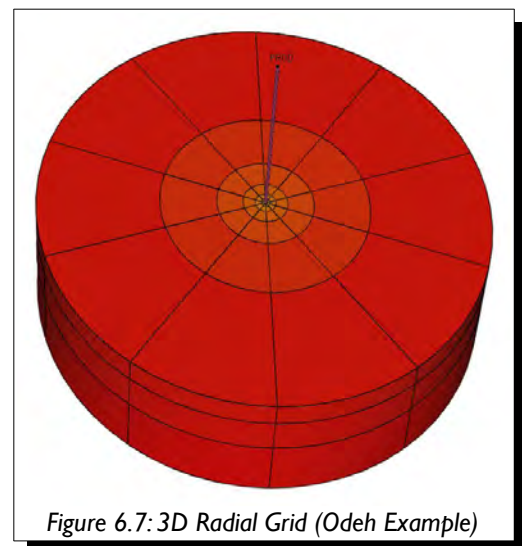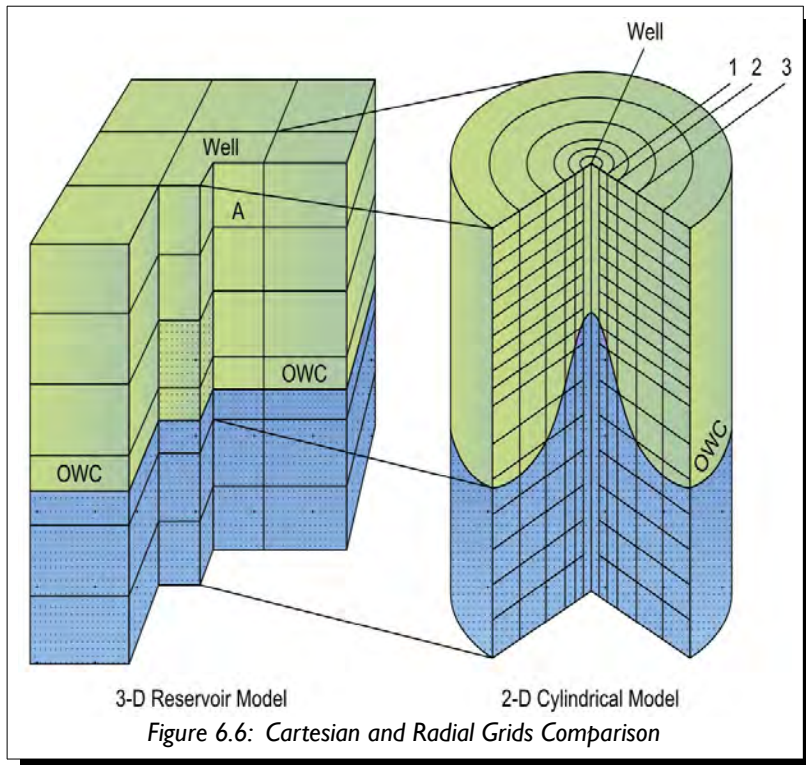

⁵⁸ Comparison of Solutions to a Three-Dimensional Black-Oil Reservoir Simulation Problem by Aziz S. Odeh,-- Journal of Petroleum Technology, January 1981.

Figure 6.7 is based on a 10 x 10 x 3 grid, where NX is the R dimensions, NY the THETA dimensions and NZ the z dimensions on the DIMENS keyword in the RUNSPEC section. Thus, in order to fully define this radial grid the following RUNSPEC and GRID section keywords are required:

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--          MAX      MAX      MAX
--          NDIVIX   NDIVIY   NDIVIZ
DIMENS
--          10      10      3
--
--          DEFINE RADIAL GRID GEOMETRY
--
RADIAL
-- =====
--
-- GRID SECTION
--
-- =====
GRID
--
--          INNER RADIUS OF FIRST GRID BLOCK IN THE RADIAL DIRECTION
--
INRAD
--          0.25
--
--          DEFINE GRID BLOCK SIZES IN THE R DIRECTION
--
DRV
--          1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.08 /
--
--          DEFINE GRID BLOCK SIZES IN THE THETA DIRECTION (BASED ON NY = 10)
--
DTHETAV
--          10*36
--
--          DEFINE GRID BLOCK Z DIRECTION CELL SIZE (BASED ON NX x NY x NZ = 300)
--
DZ
--          100*20.0  100*30.0  100*50.0
--
--          DEFINE GRID BLOCK TOPS FOR THE TOP LAYER (NX=10,NY=10,and NZ=3)
--
TOPS
--          100*8325
```

The rock property data required to complete the GRID section is as follows:

```
--
--          DEFINE POROSITY DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PORO
--          300*0.300
--
--          DEFINE GRID BLOCK PERMR DATA FOR ALL CELLS (BASED ON NR x NY x NZ = 300)
--
PERMR
--          100*500.0  100*50.0  100*200.0
```

```
--
--      DEFINE GRID BLOCK PERMTHT DATA FOR ALL CELLS (NX x NY x NZ = 300)
--
PERMTHT
100*500.0    100*50.0    100*200.0    /
--
--      DEFINE GRID BLOCK Z DIRECTION CELL SIZE (BASED ON NX x NY x NZ = 300)
--
DZ
100*500.0    100*50.0    100*200.0    /
```

The above keywords define all the properties required for the RUNSPEC and GRID sections for this type of grid geometry.

Note

Radial grids are currently not fully implemented in OPM Flow as the completion of the circle in the THETA direction is not supported. For reference only, this feature is activated via the COMPLETE parameter on the COORDSYS keyword in the GRID section.

OPM ResInsight is the 3D visualization software that is used to view the grid block property data and OPM Flow results (grid block pressures, fluid saturations etc.); unfortunately, the software does not render radial grids correctly, and currently there is no plan to implement this feature. Figure 6.8 shows how the Odeh⁵⁹ radial model is rendered in OPM ResInsight and this should be compared to Figure 6.7 which displays the correct rendering of the grid.

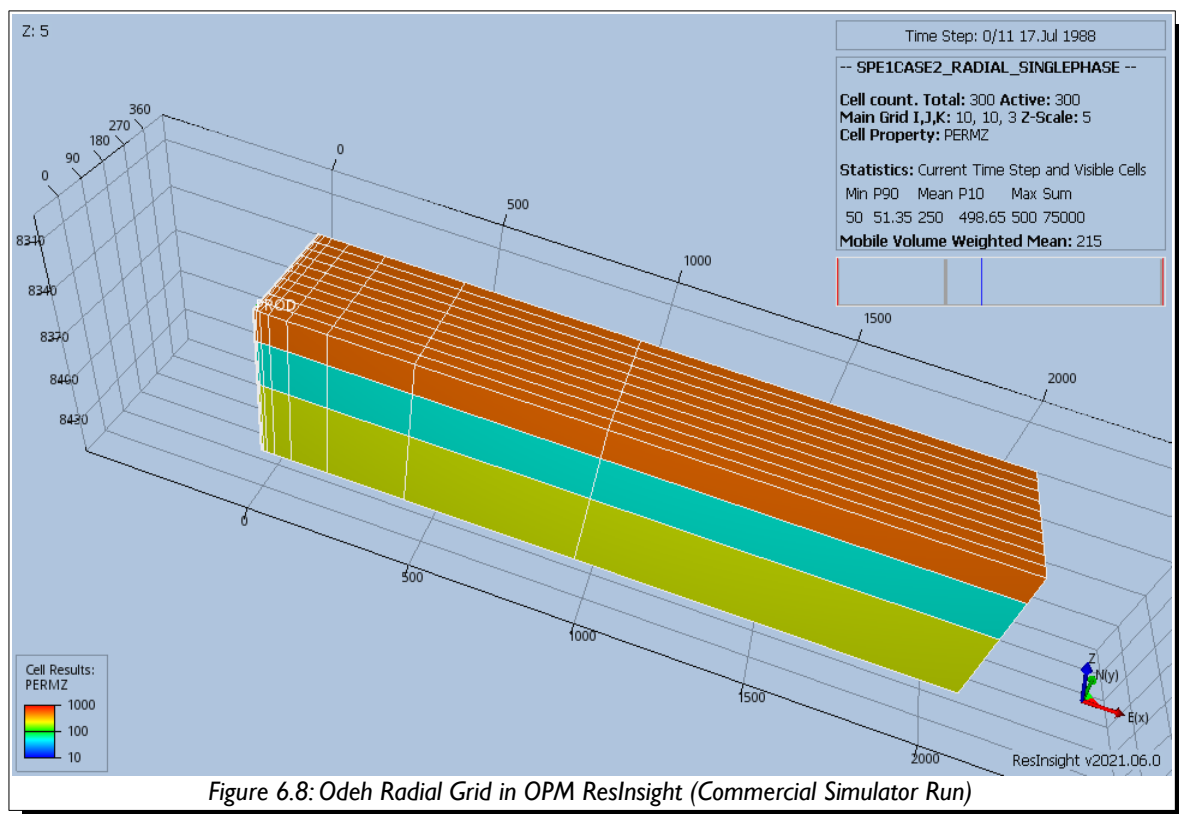


Figure 6.8: Odeh Radial Grid in OPM ResInsight (Commercial Simulator Run)

⁵⁹ Comparison of Solutions to a Three-Dimensional Black-Oil Reservoir Simulation Problem by Aziz S. Odeh,-- Journal of Petroleum Technology, January 1981.

The previous figure (Figure 6.8) shows how the model would be displayed if the commercial simulator run was loaded into OPM ResInsight. Previously, an OPM Flow run would also be displayed in the same manner.

To overcome this OPM ResInsight display limitation, OPM Flow now converts radial grids to Irregular Corner-Point Grids (Cartesian coordinates) and adjusts the model to reflect radial coordinates. Thus, the OPM Flow radial model has the same pore volumes as the commercial simulator radial model.

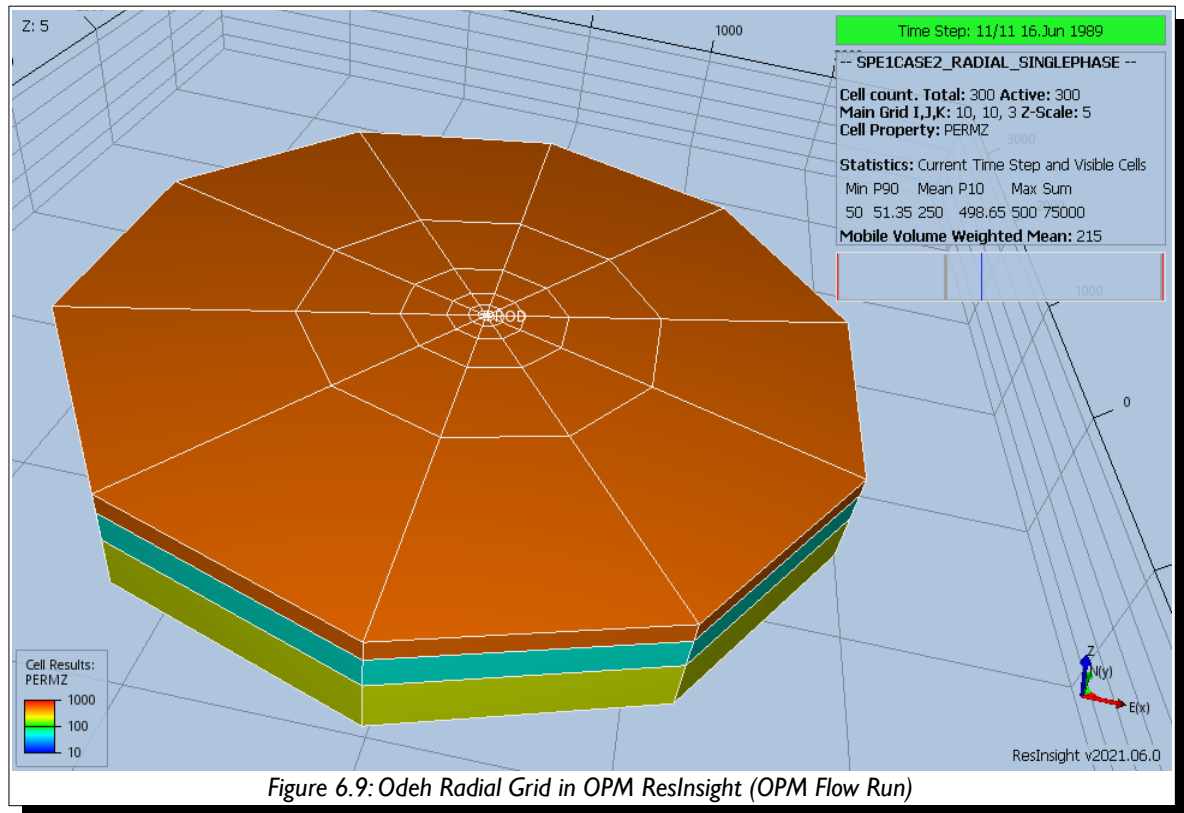


Figure 6.9: Odeh Radial Grid in OPM ResInsight (OPM Flow Run)

Figure 6.9 shows how the OPM Flow run is now displayed in OPM ResInsight. As will be shown in section 6.2.4 Spider Grids, both Spider and Radial grids will be displayed the same, as they both use Irregular Corner-Point Grid geometry. The difference is that the radial model's pore volumes are adjusted to match the radial geometry pore volumes, whereas, the Spider grid volumes are not adjusted.

6.2.4 SPIDER GRIDS

As mentioned in the previous section, OPM ResInsight does not render radial grids correctly and currently there is no plan to implement this feature. In order to overcome this limitation Spider Grids have been implemented that basically take the standard radial geometry keywords in the grid section and transform the grid specification to an Irregular Corner-Point Grid, which can then be viewed in OPM ResInsight in a more intuitive form. The only difference is that in the RUNSPEC section the SPIDER keyword is used instead of the RADIAL keyword.

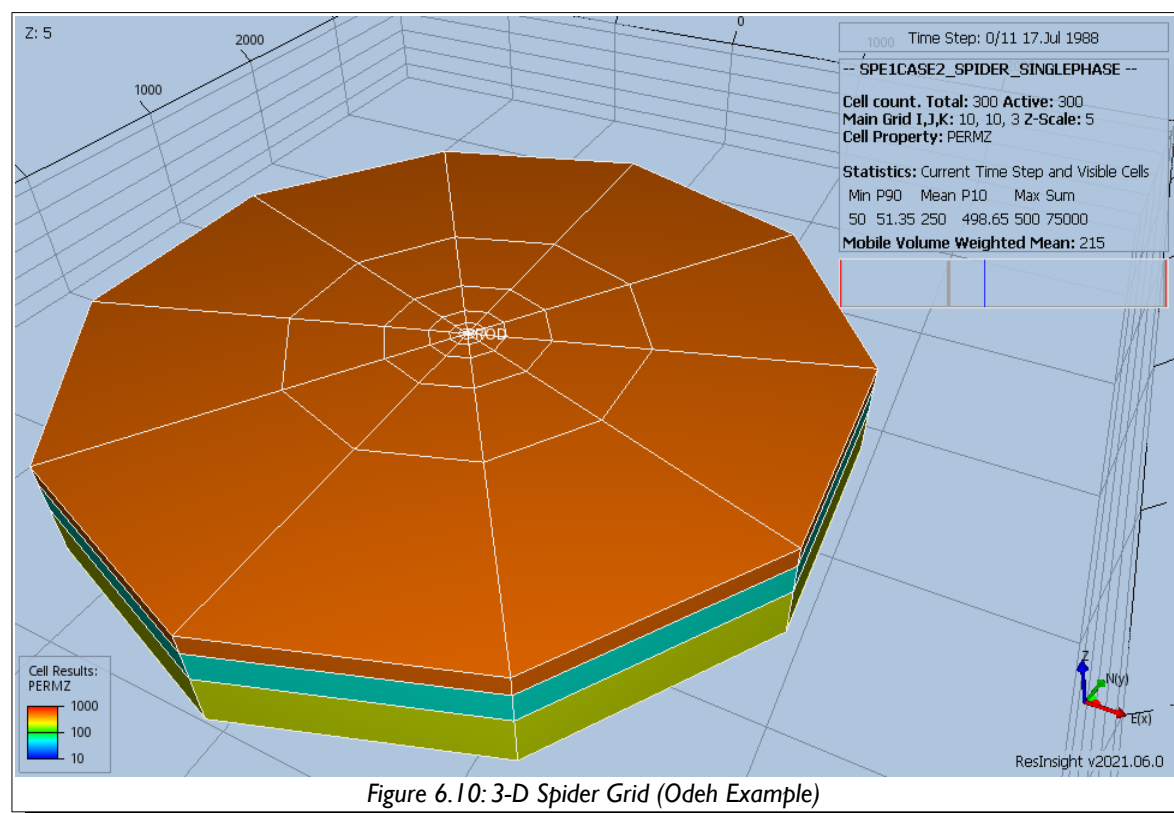


Figure 6.10: 3-D Spider Grid (Odeh Example)

Figure 6.10 illustrates the spider grid for the Odeh⁵⁹ example, which is not dissimilar to the conventional radial model shown in Figure 6.7 and is identical to OPM Flow's radial model implementation shown in Figure 6.9. Note that Figure 6.7 was not generated by OPM ResInsight,

Naturally, there will be differences in the results between radial and spider grid formulations, but the user should use their own judgement if the differences are relevant.

Again, Figure 6.10 is based on a $10 \times 10 \times 3$ grid, where NX is the R dimensions, NY the THETA dimensions and NZ the z dimensions on the DIMENS keyword in the RUNSPEC section. The only difference between this example and the previous example for radial grids is that the RADIAL keyword has been replaced by the SPIDER keyword in the RUNSPEC section, all the other keywords are exactly the same.


```

-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      MAX      MAX      MAX
--      NDIVIX   NDIVIY   NDIVIZ
DIMENS
--      10       1       3
--
--      DEFINE SPIDER GRID GEOMETRY (OPM FLOW RADIAL GRID KEYWORD)
--
SPIDER
-- =====
--
-- GRID SECTION
--
-- =====
GRID
--
--      INNER RADIUS OF FIRST GRID BLOCK IN THE RADIAL DIRECTION
--
INRAD
--      0.25
--
--
--      DEFINE GRID BLOCK SIZES IN THE R DIRECTION
--
DRV
--      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.08 /
--
--      DEFINE GRID BLOCK SIZES IN THE THETA DIRECTION (BASED ON NY = 10)
--
DTHETAV
--      1*45
--
--      DEFINE GRID BLOCK Z DIRECTION CELL SIZE (BASED ON NX x NY x NZ = 30)
--
DZ
--      10*20.0  10*30.0  10*50.0
--
--      DEFINE GRID BLOCK TOPS FOR THE TOP LAYER (NX=10,NY=1,and NZ=3)
--
TOPS
--      10*8325
--

```

The rock property data required to complete the GRID section is as follows:

```

--
--      DEFINE POROSITY DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 30)
--
PORO
--      30*0.300
--
--      DEFINE GRID BLOCK PERMR DATA FOR ALL CELLS (BASED ON NR x NY x NZ = 30)
--
PERMR
--      10*500.0  10*50.0  10*200.0
--
--      DEFINE GRID BLOCK PERMTHT DATA FOR ALL CELLS (NX x NY x NZ = 30)
--
PERMTHT

```

```
10*500.0  10*50.0  10*200.0  /  
--  
--      DEFINE GRID BLOCK Z DIRECTION CELL SIZE (BASED ON NX x NY x NZ = 300)  
--  
DZ  
10*500.0  10*50.0  10*200.0  /
```

The above keywords define all the properties required for the GRID section for this type of grid geometry.

6.2.5 ROCK PROPERTIES

Irrespective of the grid type used to define the structural component of the model various static properties need to be defined in order for the model to have a complete grid definition, these properties include the identification of active and inactive grid blocks, porosity, permeability, and the reservoir quality via the net-to-gross fraction ("NTG"). These parameters must be set for each cell in the model

Property	Description	Cartesian And Irregular Corner-Point Grids Keywords	Radial Grid Keywords
Active and Inactive cells	Defines if a cell in the model is active by setting the ACTNUM property for a cell to either one or inactive by setting the value to zero. Cells that are inactive in the model are ignored computationally and can act as barriers to flow. Thus, a shale in a conventional reservoir is normally treated as non-reservoir and is made inactive either by setting the ACTNUM, PORO, or NTG to zero for the cells representing the shale.	ACTNUM	
Porosity	Porosity is a measure of the space in a reservoir rock. It is defined as the fraction of the total bulk volume of the rock not occupied by solids, that is it is the fraction of the cell that is porous and contains the reservoir fluids.	PORO	
Reservoir Quality	Reservoir quality of the cell in terms of the gross volume derived from the structural grid and the net volume available for fluid flow in the model expressed as a fraction from zero to one. A zero values means the cell does contribute to flow and therefore is made inactive. A value of one means the gross and net volumes are identical for the cell	NTG	
Permeability	Permeability is a measure of the ease with which a fluid will flow through a porous medium. In numerical models permeability is dependent on the direction of flow, that is x, y and z directions in Cartesian and Irregular Corner-Point Grids, and the radial, theta and z directions in radial grids. There are various formulations for permeability, absolute permeability, effective permeability, gas permeability, liquid permeability etc., and the values are saturation dependent. Thus, values entered should be consistent with the relative permeability entered in the PROPS section. Normally Kair (Sg=1.0) should be entered for the cell permeability and the values may or not be corrected for overburden or humidity drying effects. Correcting for liquid flow and saturation end points etc., is accomplished by the relative permeability curves. For example, if Kair (Sg=1.0) has been entered for the cell permeability when Krg (Sg=1-Swc) should be less than one.	PERMX PERMY PERMZ	PERMR PERMTH PERMZ

Table 6.1: Key Static Grid Properties

Note

Static grid properties are frequently generated from a static earth model using petrophysical evaluation of the well logs and propagated through the model based on a variety of geostatistical techniques.

Petrophysical evaluations are conducted in either in the “Total” or the “Effective” porosity domain, and is important that all the rock property data is entered into the model is of the same basis. It is not important which porosity domain is used, as long as all the data is in the same domain.

Pore volume and transmissibility are common terms in the reservoir simulation vernacular. Pore volume is self-explanatory, that is, given the grid property data the pore volume for each cell is calculated using:

$$PV = \text{Cell Gross Volume} \times \text{PORO} \times \text{NTG} \times \text{ACTNUM} \quad (6.1)$$

Where

PV	= the pore volume of a cell,
Cell Gross Volume	= the gross volume (or bulk volume) calculated from the structural parameters of the cell,
PORO	= cell porosity,
NTG	= cell net-to-gross ratio, and
ACTNUM	= active and inactive cell indicator.

Any cell with a pore volume equal to zero is made inactive automatically in the model. However, there may be some cells that have small pore volumes than may negatively impact computational performance of the model. If this is the case then the MINPV keyword in the GRID section can be used to make these cells inactive.

There has been a trend in the industry in recent years to not apply petrophysical cut-offs to determine net volumes in static models. This results in large models with numerous cells with very low porosity values (less than 0.01 for example) and corresponding very low permeabilities. The theory behind this approach is that the numerical model will determine the effective (or net) reservoir. However, the approach is questionable as by not applying net pay cut-offs, the in-place and recoverable volumes may not satisfy Reserve reporting requirements and guidelines to various agencies. Secondly, although this may be appropriate in unconventional reservoirs, as all the cells in the model will have similar values of porosity and permeability, but in conventional reservoirs this methodology will lead to severe computational issues when attempting to run the model, due to very tight cells being next to relative high permeability cells. Again, the MINPV keyword can be used to resolve this issue.

Transmissibility on the other hand is more complex as it relates the flow from one cell face to another cell face and is a function of the area open to flow, the direction of flow, the permeability, saturation and viscosity of the phases flowing between the cells. For a single phase flow in a Cartesian grid the x-direction transmissibility is of the form:

$$T_{x_{i+1/2}, j} = \left[\frac{k_x h (\Delta y)}{\mu (\Delta x)} \right]_{i+1/2, j} \quad (6.2)$$

As transmissibility is a property of the flow between two cell faces, not a block centered grid cell property like porosity or permeability, then the nomenclature for transmissibility is different. In OPM Flow, the transmissible of cell face $T_{x(i, j, k)}$ is the transmissibility between cells (i, j, k) and $(i+1, j, k)$. In some simulators it would be between (i, j, k) and $(i-1, j, k)$. This is important to note if manual modifications to cell connections are to be made in the model.

Note that modifications to grid property data can only be done in the GRID section, thereafter only the calculated pore volumes and transmissibilities are available for adjustment.

6.3 KEYWORD DEFINITIONS

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.1 ACTNUM – SET THE STATUS OF A GRID BLOCK TO ACTIVE OR INACTIVE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ACTNUM specifies which grid blocks are active or inactive. A value of 1 indicates the block is active and a value of 0 indicates the block is inactive. A grid block is inactive if its pore volume is less than the value entered using keyword MINPV. This keyword can be used to make blocks with a pore volume greater than MINPV inactive. Note that a value must be entered for each grid block in the model. Grid blocks are ordered with the I index cycling fastest, followed by the J and K indices. As for all array data repeat counts may be used, for example 100*I; however the full array must be specified.

Note that a cells activity can also be set using the EQUALS keyword by selection only those cells that are required to be made inactive.

No.	Name	Description	Default
I	ACTNUM	An array of integers that define the activity of a cell by setting it to 1 for being active or 0 for inactive, for each grid block in the model.	1*
Notes: <ol style="list-style-type: none"> 1) A total of NX x NY x NZ integer values, as defined by the DIMENS in the RUNSPEC section, must be specified for the array. 2) The keyword is terminated by a "/". 			

Table 6.2: ACTNUM Keyword Description

Examples

The example below sets several cells to be inactive for a 4 x 5 x 2 model.

ACTNUM

```
0 0 1 1 # layer 1
0 0 1 1
1 1 1 1
1 1 1 1
1 1 1 1
```

```
1 1 1 1 # layer 2
1 1 1 1
1 1 1 1
1 1 1 1
0 0 0 0
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--      -- ARRAY      CONSTANT --      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS      'ACTNUM'      1.0000      1*  1*   1*  1*   1*  1* / SET ACTIVE CELLS
            'ACTNUM'      0.0000      1   2    1   2    1   1 / SET INACTIVE CELLS
            'ACTNUM'      0.0000      1   4    4   4    2   2 / SET INACTIVE CELLS
/
```

6.3.2 ADD – ADD A CONSTANT TO A SPECIFIED ARRAY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ADD keyword adds a constant to a specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the ADD keyword is being applied.

No.	Name	Description	Default
1	ARRAY	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	CONSTANT	An integer or real value to be added to the ARRAY in the same units as the ARRAY property.	0
3	I1	A positive integer that defines the lower bound of the array in the I-direction to be modified must be greater than or equal 1 and less than or equal to I2 and NX.	1
4	I2	A positive integer that defines the upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
5	J1	A positive integer that defines the lower bound of the array in the J-direction to be modified must be greater than or equal 1 and less than or equal to J2 and NY.	1
6	J2	A positive integer that defines the upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
7	K1	A positive integer that defines the lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	1
8	K2	A positive integer that defines the upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ
Notes: 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.3:ADD Keyword Description

The applicable arrays for each section are defined in Table 6.4 on the following page.

ADD Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFHT			SOLVFRAC		
PERMHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFHT						

Table 6.4:ADD Keyword Applicable Arrays by Section

Example

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
ADD
      PERMX      20.000      1*  1*   1*  1*   1*  1* / ADD 20 mD TO PERMX
/
```

The above example ADDS 20 units to the PERMX array in the GRID section to all grid blocks in the model.

6.3.3 ADDREG – ADD A CONSTANT TO AN ARRAY BASED ON A REGION NUMBER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ADDREG keyword adds a constant to a specified array or part of an array based on cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the ADDREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the ADDREG keyword is being used.

No.	Name	Description	Default
1	ARRAY	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	CONSTANT	An integer or real value to be added to the ARRAY in the same units as the ARRAY property for a given REGION	0
3	REGION NUMBER	REGION NUMBER is a positive integer representing the region for which the CONSTANT in (2) should be applied	None
4	REGION ARRAY	The REGION ARRAY to use for applying the CONSTANT in (2) based on the REGION NUMBER in (3). REGION ARRAY can have the following values: 1) F for the FLUXNUM array 2) M for the MULTNUM array 3) O for the OPERNUM array	M
Notes: 1) Where the REGION NUMBER should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.5: ADDREG Keyword Description

The applicable arrays for each section are defined in Table 6.6 on the following page.

ADDREG Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFHT			SOLVFRAC		

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

ADDREG Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
PERMTHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFTHT						

Table 6.6:ADDREG Keyword Applicable Arrays by Section

Example

```
--
-- FIRST DEFINE THE PROPERTY ARRAYS AND MULTNUM ARRAYS FOR 10 X 10 X 20 MODEL
--
-- ARRAY      CONSTANT -- ----- BOX -----
--                                I1  I2  J1  J2  K1  K2
EQUALS
  PORO        0.2000      1*  1*  1*  1*  1*  1*  / PORO TO 0.20 IN MODEL
  PERMX       100.00      1*  1*  1*  1*  1*  1*  / PERMX TO 0.10 IN MODEL
  MULTNUM      1         1*  1*  1*  1*  1*  1*  / MULTNUM IN MODEL
  MULTNUM      2         1*  5   1   5   6   6   / MULTNUM IN MODEL
  MULTNUM      3         1*  1*  1*  1*  10  10  / MULTNUM IN MODEL
/
--
-- NOW RESET PORO AND PERMX BASED ON THE MULTNUM REGION NUMBER
--
-- ADD A CONSTANT TO AN ARRAY BASED ON A REGION NUMBER
--
-- ARRAY      CONSTANT  REGION  REGION ARRAY
--                                VALUE  NUMBER  M / F / O
ADDREG
  'PORO        0.050      1         M                /
  PORO         0.100      2         M                /
  PORO        -0.050      3         M                /
  PERMX        25.00      1         M                /
  PERMX        100.0      2         M                /
  PERMX        -50.00     3         M                /
/
```

The example first defines the PORO and PERMX property arrays for the model and then sets the MULTNUM array to 1 for all cells in the model, after which selected areas of model are assigned various MULTNUM integer values. The ADDREG can then be invoked to add or subtract constant values from the PORO and PERMX arrays for the various MULTNUM regions.

6.3.4 ADDZCORN – ADD A CONSTANT TO THE ZCORN DEPTH ARRAY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ADDZCORN keyword adds a constant to the ZCORN array or part of the array based on cells defined in the specified input box. The constant can be real or integer and can be negative or positive.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.5 AMALGAM – DEFINE LGR AMALGAMATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AMALGAM keyword defines a Cartesian Local Grid Refinements (“LGR”) amalgamations, that is merging several LGRs into one amalgamated LGR.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.6 AQUANCON – DEFINE ANALYTICAL CONNECTIONS TO THE GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The AQUANCON keyword defines how analytical aquifers are connected to the simulation grid, this includes the Carter-Tracy and Fetkovich analytical aquifers, both of which are implemented in OPM Flow. Carter-Tracy analytical aquifers are characterized by the AQUCT keyword in the GRID section and Fetkovich analytical aquifers are defined by either the AQUFET or AQUFETP keywords in the SOLUTION section

Note that numerical aquifers are connected to the grid using the AQUCON keyword in the GRID section and that both aquifer types dimensions are declared by the AQUDIMS keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	AQUID	AQUID is a positive integer greater than or equal to one and less than the maximum number of analytical aquifers as defined by the NANAQU variable on the AQUDIMS keyword in the RUNSPEC section, that defines the aquifer to be connected to the grid.			None
2	I1	A positive integer that defines the lower bound of the cells in the I-direction to be connected to the aquifer and must be greater than or equal to one and less than or equal to I2 and NX.			I
3	I2	A positive integer that defines the upper bound of the of the cells in the I-direction to be connected to the aquifer and must be greater than or equal to I1 and less than or equal to NX			NX
4	J1	A positive integer that defines the lower bound of the cells in the J-direction to be connected to the aquifer and must be greater than or equal to one and less than or equal to J2 and NY.			I
5	J2	A positive integer that defines the upper bound of the cells in the J-direction to be connected to the aquifer and must be greater than or equal to J1 and less than or equal to NY.			NY
6	K1	A positive integer that defines the lower bound of the cells in the K-direction to be to be connected to the aquifer and must be greater than or equal to one and less than or equal to K2 and NZ.			I
7	K2	A positive integer that defines the upper bound of the cells in the K-direction to be connected to the aquifer and must be greater than or equal to K1 and less than or equal to NZ.			NZ
8	AQUFACE	AQUFACE is a character string that sets the connection “face” of the cells declared by this record and should be set to one of the following: 1) X+, Y+, or Z+ for the positive direction, or X-, Y- or Z- for the negative direction transmissibilities. 2) I+, J+, or K+ for the positive direction, or I-, J- or K- for the negative direction transmissibilities.			None
9	AQUFLUX	AQUFLUX is a positive real value that sets the fraction of the total influx between the aquifer and the defined cells declared on this keyword. If defaulted the cell face for each cell is applied and if a values is declared then this values is applied to all cells declared by this record.			I*
		ft ²	m ²	cm ²	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
10	AQUCOEF	AQUCOEF is a real positive values that scales the calculated connection between the aquifer and the cells declared on this record.			1.0
		dimensionless	dimensionless	dimensionless	
11	AQUOPT	AQUOPT is a character string that sets the cell face connection and should be set to one of the following: <div><div>1) YES: Aquifer connections <u>can adjoin</u> to active cells allowing for connections inside the reservoir grid. It is not recommended to use this option without thoroughly checking the connections in the model.</div><div>2) NO: Aquifer connections <u>cannot adjoin</u> to active cells preventing connections inside the reservoir grid. This is the recommended and the default value.</div></div>			NO

Notes:

1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section.

2) Each record must be terminated by a “/” and the keyword is terminated by a “/”.

Table 6.7: AQUANCON Keyword Description

Note

If the AQUANCON keyword has been utilized in the run deck then OPM Flow will write the AQUIFERA array to the *.INIT file in order to visualize the aquifer connections in OPM ResInsight. This is accomplished by setting the AQUIFERA value to $2^{(AQUID-1)}$ for cells connected to aquifer AQUID. If a cell is connected to multiple analytical aquifers then AQUIFERA is summed for all aquifers connected to a cell. Note that connecting cells to multiple aquifers is best avoided.

Example

The following example defines aquifer number one connected to the I+ face of various cells in the model.

```
--
--                               ANALYTIC AQUIFER CONNECTION
--
--      ID      ----- BOX -----  CONNECT  AQF  AQF  ADJOIN
--      NUMBER  I1  I2   J1  J2   K1  K2  FACE   INFLX  MULTI  CELLS
AQUANCON
1      57  57   28  36   46  58   'I+'   1*   1*   'NO'   /
1      111 111   38  41   22  31   'I+'   1*   1*   'NO'   /
1      96  96   44  49   22  31   'I+'   1*   1*   'NO'   /
1      43  43   28  35   54  58   'I+'   1*   1*   'NO'   /
1      98  98   38  42   32  40   'I+'   1*   1*   'NO'   /
1      79  79   41  67    5  11   'I+'   1*   1*   'NO'   /
1      61  61   48  72   12  17   'I+'   1*   1*   'NO'   /
/
```

See the AQUCT keyword in the GRID section for a complete example on defining and connecting a Carter-Tracy aquifer to a simulation grid.

6.3.7 AQUICON – DEFINE NUMERICAL AQUIFER CONNECTIONS TO THE GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

AQUICON keyword defines how numerical aquifers are connected to the simulation grid and these type of aquifers are characterized by the AQUNUM keyword in the GRID section. Analytical aquifers are connected to the simulation grid by the AQUANCON keyword in the GRID section, this includes the Carter-Tracy and Fetkovich analytical aquifers, both of which are implemented in OPM Flow. Both aquifer types dimensions are declared by the AQUDIMS keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	AQUID	AQUID is a positive integer greater than or equal to one and less than or equal to the maximum number of numerical aquifers as defined by the MXNAQN variable on the AQUDIMS keyword in the RUNSPEC section, that defines the aquifer to be connected to the grid.			None
2	I1	A positive integer that defines the lower bound of the cells in the I-direction to be connected to the aquifer and must be greater than or equal to one and less than or equal to I2 and NX.			I
3	I2	A positive integer that defines the upper bound of the of the cells in the I-direction to be connected to the aquifer and must be greater than or equal to I1 and less than or equal to NX			NX
4	J1	A positive integer that defines the lower bound of the cells in the J-direction to be connected to the aquifer and must be greater than or equal to one and less than or equal to J2 and NY.			I
5	J2	A positive integer that defines the upper bound of the cells in the J-direction to be connected to the aquifer and must be greater than or equal to J1 and less than or equal to NY.			NY
6	K1	A positive integer that defines the lower bound of the cells in the K-direction to be to be connected to the aquifer and must be greater than or equal to one and less than or equal to K2 and NZ.			I
7	K2	A positive integer that defines the upper bound of the cells in the K-direction to be connected to the aquifer and must be greater than or equal to K1 and less than or equal to NZ.			NZ
8	AQUFACE	AQUFACE is a character string that sets the connection “face” of the cells declared by this record and should be set to one of the following: 1) X+, Y+, or Z+ for the positive direction, or X-, Y- or Z- for the negative direction transmissibilities. 2) I+, J+, or K+ for the positive direction, or I-, J- or K- for the negative direction transmissibilities.			None
9	AQUMULT	AQUMULT is a positive real number greater than or equal to zero that scales the OPM Flow calculated transmissibility between the AQUID aquifer and the grid cell connections defined by this record. The default value of one sets the transmissibility between the aquifer and grid cells to the OPM Flow calculated value.			1.0
		dimensionless	dimensionless	dimensionless	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
10	AQUOPT1	AQUOPT1 is a defined integer value set to either zero or one, that defines the area to be used in calculating the connection transmissibility between the aquifer and the grid cells: 1) A value of zero means the cross-sectional defined on the AQUNUM keyword will be used, whereas, 2) A value of one means the cross-sectional defined by the grid cell connections defined by this record will be used. dimensionlessdimensionlessdimensionless			0
11	AQUOPT2	AQUOPT2 is a character string that sets the cell face connection and should be set to one of the following: 1) YES: Aquifer connections <u>can adjoin</u> to active cells allowing for connections inside the reservoir grid. It is not recommended to use this option without thoroughly checking the connections in the model. 2) NO: Aquifer connections <u>cannot adjoin</u> to active cells preventing connections inside the reservoir grid. This is the recommended and the default value.			NO
12	VEOPT1	Vertical Equilibrium Option Number 1– Not Used			1
13	VEOPT2	Vertical Equilibrium Option Number 2– Not Used			1

Notes:

1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section.

2) Each record must be terminated by a “/” and the keyword is terminated by a “/”.

Table 6.8: AQUICON Keyword Description

Note

If the AQUICON keyword has been utilized in the run deck then OPM Flow will write the AQUIFERN array to the *.INIT file in order to visualize the aquifer connections in OPM ResInsight.

This is accomplished by setting the AQUIFERN value to $2^{(AQUID-1)}$ for cells connected to aquifer AQUID. If a cell is connected to multiple numerical aquifers then AQUIFERN is summed for all aquifers connected to a cell. Note that connecting cells to multiple aquifers is best avoided.

Finally, for cells representing the numerical aquifers themselves, AQUIFERN is set to minus AQUID.

Example

The following example defines numerical aquifer number one connected to the I+ face of various cells in the model.

```
--
--          NUMERICAL AQUIFER CONNECTIONS
--
--          ID      ----- BOX -----  CONNECT  TRANS  TRANS  ADJOIN
--          NUMBER I1  I2      J1  J2      K1  K2  FACE    MULT  OPTN  CELLS
AQUCON
1         57  57    28  36    46  58    'I+'    1*    1*    'NO'    /
1        111 111    38  41    22  31    'I+'    1*    1*    'NO'    /
1         96  96    44  49    22  31    'I+'    1*    1*    'NO'    /
1         43  43    28  35    54  58    'I+'    1*    1*    'NO'    /
1         98  98    38  42    32  40    'I+'    1*    1*    'NO'    /
1         79  79    41  67     5  11    'I+'    1*    1*    'NO'    /
1         61  61    48  72    12  17    'I+'    1*    1*    'NO'    /
/
```

See the AQUNUM keyword in the GRID section for a complete example on defining and connecting a numerical aquifer to a simulation grid.

6.3.8 AQUCT – DEFINE CARTER-TRACY ANALYTICAL AQUIFERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The AQUCT keyword defines Carter-Tracy⁶⁰ analytical aquifers, the properties of the aquifer, including the Carter-Tracy aquifer influence function associated with the aquifer, defined by the AQUCTAB keyword in the PROPS section.

Each row entry in the AQUCT keyword defines one Carter-Tracy aquifer.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	AQUID	A positive integer greater than or equal to one and less than or equal to NANAQU on the AQUIDIMS keyword in the RUNSPEC section, that defines the Carter-Tracy aquifer number.			I
2	DATUM	DATUM is a single positive value that defines the Carter-Tracy reference datum depth for PRESS.			None
		feet	m	cm	
3	PRESS	PRESS is a single positive value that defines the aquifer pressure at DATUM. If PRESS is defaulted then the simulator will set the aquifer's initial reservoir pressure to be in equilibrium with the cells the aquifer is contacted to.			I*
		psia	barsa	atma	
4	PERM	PERM is a real positive number that assigns the permeability to the aquifer.			None
		mD	mD	mD	
5	PORO	PORO is a real positive number greater than zero and less than or equal to one that assigns the porosity to the aquifer.			None
		dimensionless	dimensionless	dimensionless	
6	RCOMP	RCOMP is a real number defining the total (rock and water) compressibility (Ct) at the DATUM pressure.			None
		l/psia	l/barsa	l/atma	
7	RE	RE is a real positive number that defines the Carter-Tracy aquifer external radius.			None
		feet	m	cm	
8	DZ	DZ is a real positive number that defines the Carter-Tracy aquifer average net thickness.			None
		feet	m	cm	
9	ANGLE	ANGLE is a real positive number that defines the angle of influence, that is the angular connection between the aquifer and the hydrocarbon reservoir. A value of 360° degrees, the default value, indicates that the aquifer complete surrounds the hydrocarbon reservoir.			360.0

⁶⁰ Carter, R. D. and Tracy, G. W. "An Improved Method for Calculating Water Influx," Transactions of AIME (1960) 219, 215-417.

No.	Name	Description			Default
		Field	Metric	Laboratory	
		degrees	degrees	degrees	
10	PVTNUM	PVTNUM is positive integer greater than zero and less than the NTPVT variable on the TABDIMS keyword in the RUNSPEC section, that defines the PVTW table allocated to the Carter-Tracy aquifer.			1
11	AQUTAB	AQUTAB is positive integer greater than zero and less than the NIFTBL variable as declared on the AQUDIMS keyword in the RUNSPEC section, that defines the AQUTAB table allocated to this Carter-Tracy aquifer. The default value of one sets the internal infinite acting Carter-Tracy aquifer influence table not the first table in the AQUTAB keyword in the PROPS section The first table in the AQUTAB keyword is considered to be table number two.			1
12	SALTCON	SALTCON is a real positive number that defines the initial salt concentration in the aquifer. This variable is ignored by OPM Flow.			0.0
		lb/stb	kg/sm ³	gm/scc	
13	TEMP	TEMP is a real positive number that defines the initial temperature of the aquifer at DATUM.			1*
		°F	°C	°C	
Notes: 1) The keyword is followed by up to NANAQU records as defined on the AQUDIMS keyword in the RUNSPEC section 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.					

Table 6.9: AQUIT Keyword Description

Note

OPM Flow includes the infinite acting Carter-Tracy aquifer influence table as a default for table number one; thus data entered on AQUTAB keyword starts from table number two.

In order to full define a Carter-Tracy aquifer one has to define the aquifer properties via the AQUIT keyword, the Carter-Tracy influence functions via the AQUTAB keyword in the PROPS section, if the default infinite acting table is not being employed, and how the aquifer is connected to the reservoir using the AQUANCON keyword in the GRID or SOLUTION sections.

Example

Given the following grid and aquifer dimensions in the RUNSPEC section:

```
--
--      MAX      MAX      MAX
--      NDIVIX  NDIVY  NDIVZ
DIMENS
      20      1      5
/

--      AQF      AQF      AQF      AQF      AQF      AQF      AQF      AQF
--      MXAQN  MXNAQC  NIFTBL  NRIFTB  NANAQU  NCAMAX  MXNALI  MXAAQL
AQUDIMS
      1*      1*      5      100      1      1*      1*      1*
/
```

And AQUTAB in the PROPS section

```
--
--      CARTER-TRACY AQUIFER INFLUENCE TABLES
--      (STARTS FROM TABLE NO. 2, AS DEFAULT IS TABLE NO. 1)
--
AQUTAB
--      DIMLESS      DIMLESS
--      TIME          PRESSURE
--      -----
--      0.01          0.112
--      0.05          0.229
--      0.10          0.315
--      0.15          0.376
--      0.20          0.424
--      0.22          0.443
--      0.24          0.459
--      0.26          0.476
--      0.28          0.492
--      0.30          0.507
--      0.32          0.522
--      0.34          0.536
--      0.36          0.551
--      0.38          0.565
--      0.40          0.579
--      0.42          0.593
--      0.44          0.607
--      0.46          0.621
--      0.48          0.634
--      0.50          0.648
--      0.60          0.715
--      0.70          0.782
--      0.80          0.849
--      0.90          0.915
--      1.00          0.982
--      2.00          1.649
--      3.00          2.316
--      5.00          3.649
--      10.00         6.982
--      20.00         13.649
--      30.00         20.316
--      50.00         33.649
--      100.00        66.982
--      200.00        133.649
--      300.00        200.316
--      500.00        333.649
--      1000.00       666.982 /
```

The Carter-Tracy aquifer is defined in the GRID or SOLUTION sections as:

```
-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION  --
--
--              CARTER-TRACY AQUIFER DESCRIPTION
--
--      ID   DATUM   AQF   AQF   AQF   AQF   AQF   AQF   AQF   INFL   PVT   AQU
--      NUM  DEPTH  PRESS  PERM  PORO  RCOMP  RE    DZ    ANGLE  NUM   TAB
--
--      AQUCT
--      1    2000.0  269    100.0  0.30   3.0e-5  330   10.0  360.0   1    2   /
/
```

And the connection of the aquifer is set in the GRID or SOLUTION sections as:

```
--
--
--              ANALYTIC AQUIFER CONNECTION
--
--      ID   ----- BOX -----  CONNECT  AQF   AQF   ADJOIN
--      NUMBER I1  I2  J1  J2  K1  K2  FACE   INFLX  MULTI  CELLS
--
--      AQUANCON
--      1      1   1   1   1   1   1   J-    1.0   1.0   'NO'
/
```

Here one Carter-Tracy aquifer is connected to a single cell (I, I, I) at the J- face (or X- face) of the cell.

6.3.9 AQUNNC – DEFINE NUMERICAL AQUIFER NON-NEIGHBOR CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AQUNNC keyword defines Numerical Aquifer Non-Neighbor Connections.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.10 AQUNUM – DEFINE NUMERICAL AQUIFER PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AQUNUM keyword defines the properties of numerical aquifers, including which grid blocks in the model should be utilized as part of the numerical aquifer. Each row entry in the AQUNUM keyword defines one numerical aquifer. Note that a numerical aquifer may consists of more than one grid cell, in order to better describe the water influx from the aquifer to the grid.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	AQUID	AQUID is a positive integer greater than or equal to one and less than or equal to the maximum number of numerical aquifers as defined by the MXNAQN variable on the AQUIDMS keyword in the RUNSPEC section, that defines the aquifer to be connected to the grid.			None
2	I	A positive integer that defines the cell in the I-direction that represents the AQUID aquifer, and which must be greater than or equal to one and less than or equal to NX.			None
3	J	A positive integer that defines the cell in the J-direction that represents the AQUID aquifer, and which must be greater than or equal to one and less than or equal to NY.			None
4	K	A positive integer that defines the cell in the K-direction that represents the AQUID aquifer, and which must be greater than or equal to one and less than or equal to NZ.			None
5	AREA	<p>AREA is a real positive value that defines the cross-sectional area of the aquifer used in calculating the aquifer connection transmissibility.</p> <p>The actual transmissibility between the numerical aquifer and the connected grid cell is the harmonic average of the aquifer connection transmissibility and the calculated connected cell transmissibility.</p> <p>The value entered for AREA does not effect the visualization of the cell in OPM ResInsight, as it is only used in calculating the transmissibility.</p> <p>Note that the AQUOPT1 variable on the AQUICON keyword in the GRID section allows one to use the value entered for AREA or to use the grid cell cross-sectional area instead for the transmissibility calculation.</p>			None
		ft ²	m ²	cm ²	
6	LENGTH	<p>LENGTH is a real positive value that defines the length of the numerical aquifer. Similar to the AREA variable, LENGTH is not constrained by the original host cell size and the value entered does not effect the visualization of the cell in OPM ResInsight.</p>			None
		feet	m	cm	
7	PORO	<p>PORO is a real positive number greater than zero and less than or equal to one that assigns the porosity to the numerical aquifer.</p>			None
		dimensionless	dimensionless	dimensionless	
8	PERM	<p>PERM is a real positive number that assigns the permeability to the numerical aquifer.</p>			None
		mD	mD	mD	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
9	DATUM	DATUM is a real positive number that sets the reference datum depth of the numerical aquifer. Similar to the AREA variable, DEPTH is not constrained by the original host cell depth and the value entered does not effect the visualization of the cell in OPM ResInsight. If defaulted then the depth of cell (I, J, K) will be used			Cell Depth
		feet	m	cm	
10	PRESS	PRESS is a single positive value that defines the numerical aquifer pressure at DATUM. If PRESS is defaulted then the simulator will set the aquifer's initial reservoir pressure to be in equilibrium with the cells the aquifer is contacted to. This is the preferred manner to initialize the numerical aquifer.			I*
		psia	barsa	atma	
11	PVTNUM	PVTNUM is positive integer greater than zero and less than the NTPVT variable on the TABDIMS keyword in the RUNSPEC section, that defines the PVTW table allocated to the numerical aquifer. If defaulted then the PVT tables allocated to cell (I, J, K) will be used.			Cell PVTNUM
12	SATNUM	SATNUM is positive integer greater than zero and less than the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section, that defines the saturation tables allocated to the numerical aquifer. If defaulted then the saturation tables allocated to cell (I, J, K) will be used.			Cell SATNUM
Notes: 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section. 2) The keyword is followed by up to MXNAQN records as defined on the AQUDIMS keyword in the RUNSPEC section 3) Each record is terminated by a “/” and the keyword should be terminated by a “/”.					

Table 6.10: AQUNUM Keyword Description

The values entered on the AQUNUM keyword are used to calculate the aquifers pore volume and the transmissibility between the aquifer and the connected cell faces defined on the AQUCON keyword. Note that:

- The aquifer's pore volume is always calculated from the data entered on the AQUNUM keyword using $Pore\ Volume = AREA \times LENGTH \times PORO$ and any modifications to the host cell values performed in either the GRID or EDIT sections are always ignored for cells declared as numerical aquifers.
- For the transmissibility calculation either the cross-sectional area (AREA) defined on the AQUNUM keyword may be used or the connecting cell cross-sectional area by setting the AQUOPT1 variable on the AQUCON keyword.

In order to full define a numerical aquifer one has to define the aquifer properties via the AQUNUM keyword, and how the aquifer is connected to the reservoir using the AQUCON keyword in the GRID or SOLUTION sections.

Note

If the AQUCON keyword has been utilized in the run deck then OPM Flow will write the AQUIFERN array to the *.INIT file in order to visualize the aquifer connections in OPM ResInsight.

This is accomplished by setting the AQUIFERN value to 2^(AQUID-1) for cells connected to aquifer AQUID. If a cell is connected to multiple numerical aquifers then AQUIFERN is summed for all aquifers connected to a cell. Note that connecting cells to multiple aquifers is best avoided.

Finally for cells representing the numerical aquifers themselves, AQUIFERN is set to minus AQUID.

See also the AQUDIMS keyword in the RUNSPEC section that defines the numerical aquifer dimensions.

Example

Given the following grid and aquifer dimensions in the RUNSPEC section:

```
--
--      MAX      MAX      MAX
--      NDIVIX  NDIVY  NDIVZ
DIMENS
      96      58      28
--
--      AQF      AQF      AQF      AQF      AQF      AQF      AQF      AQF
--      MXAQN  MXNAQC NIFTBL NRIFTB NANAQU NCAMAX MXNALI MXAAQL
AQUDIMS
      3        3        1*       1*       1*       1*       1*       1*
/
```

The following numerical aquifer definition:

```
--
--      NUMERICAL AQUIFER DESCRIPTION
--
--      ID      - LOCATION - AQF      AQF      AQF      AQF      AQF      AQF      PVT SATNUM
--      NUMBER  I1  J1  K1  AREA      LENGTH  PORO    PERM  DEPTH  PRES  TAB  TAB
--
--      AQUNUM
--      1        1   3  28  5.20E10  200.0    0.05   0.3  1*      1*   1*  1*
--      1        1   2  28  5.20E10  200.0    0.05   0.3  1*      1*   1*  1*
--      1        1   1  28  5.20E10  200.0    0.05   0.3  1*      1*   1*  1*
/
```

defines one numerical aquifer consisting of three cells. The connection to the grid cells would take the form of:

```
--
--      NUMERICAL AQUIFER CONNECTIONS
--
--      ID      ----- BOX -----  CONNECT  TRANS  TRANS  ADJOIN
--      NUMBER  I1  I2   J1  J2   K1  K2   FACE    MULT  OPTN  CELLS
--
--      AQUCON
--      1        1  96   4  58   28  28   'K+'    1.3   1*    1*
--      1        2  96   1  58   28  28   'K+'    1.3   1*    1*
/
```

that creates a basal aquifer⁶¹.

⁶¹ Basal Aquifer: An aquifer located at the bottom of a geologic unit.

6.3.11 AUTOCOAR - DEFINE AUTO REFINEMENT GRID COARSEN AREA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AUTOCOAR keyword defines an area in the global grid that should be coarsen for when the AUTOREF keyword has been declared in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.12 BOUNDARY – DEFINE A BOUNDARY BOX FOR PRINTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The BOUNDARY keyword defines a rectangular grid for printing various arrays to the output print file (*.PRT); thus, avoiding printing all the elements in the selected array.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.13 BOX - DEFINE A RANGE OF GRID BLOCKS TO ENTER PROPERTY DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

BOX defines a range of grid blocks for which subsequent data is assigned for all the cells in the defined BOX. Note that the BOX grid is reset by the keyword ENDBOX by resetting the current defined BOX to be the whole grid. The keyword can be used for any array and for all grid types.

No.	Name	Description	Default
1	I1	A positive integer that defines the lower bound of the array in the I-direction to be modified must be greater than or equal 1 and less than or equal to I2 and NX.	1
2	I2	A positive integer that defines the upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
3	J1	A positive integer that defines the lower bound of the array in the J-direction to be modified must be greater than or equal 1 and less than or equal to J2 and NY.	1
4	J2	A positive integer that defines the upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
5	K1	A positive integer that defines the lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	1
6	K2	A positive integer that defines the upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ

Notes:

- 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section.
- 2) The keyword is terminated by a "/".

Table 6.11: BOX Keyword Description

See also the ADD, COPY, ENDBOX, EQUALS, and MULTIPLY keywords can also be used to enter data in a subset of the model.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Examples

```
--
--      DEFINE A BOX GRID FOR THE BOTTOM LAYER OF A 100 X 100 X 20 MODEL
--
--      ----- BOX -----
--      I1  I2   J1  J2    K1  K2
BOX
      1*   1*    1*   1*    20   20 / SELECT THE BOTTOM LAYER
--
--      DEFINE THE POROSITY AND OTHER PROPERTIES ON THE BOX GRID
--
--      PORO
--      10000*0.300
--
--      /
--      PERMX
--      5000*100.0    5000*75.0
--
--      /
--      NTG
--      10000*0.500
--
--      /
--
--      RESET THE INPUT BOX TO BE THE FULL MODEL
--
--      ENDBOX
```

The above example set the BOX grid to be the last layer in the model which means that 100 x 100, that is 10,000 values need to be entered for each property.

Alternatively, one could use the EQUALS keyword to accomplish the same thing.

```
-- -- ARRAY      CONSTANT -- ----- BOX -----
--                                     I1  I2   J1  J2    K1  K2
EQUALS
'PORO'           0.3000      1*   1*    1*   1*    20   20 / PORO TO 0.30 IN LAYER 20
'PERMX'          0.1000      1    50    1*   1*    20   20 / PERMX TO 100. IN LAYER 20
'PERMX'          0.1000      50  100    1*   1*    20   20 / PERMX TO 75.0 IN LAYER 20
'NTG'            0.0500      1*   1*    1*   1*    20   20 / NRT TO 0.50 IN LAYER 20
/
```

Note

It is good practice to always use the ENDBOX keyword to reset the input back to the full grid when all the modifications for a sub-grid have been completed.

6.3.14 BTOBALFA – DUAL POROSITY MATRIX TO FRACTURE MULTIPLIER (ALL CELLS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The BTOBALFA keyword defines a dual porosity matrix to fracture multiplier that is applied to all cells, for when the Dual Porosity model has been activated by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section.

See also the BTOBALFVV keyword in the GRID section that applies a multipliers to individual cells.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.15 BTOBALFV – DUAL POROSITY MATRIX TO FRACTURE MULTIPLIER (INDIVIDUAL CELLS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The BTOBALFV keyword defines a dual porosity matrix to fracture multiplier that is applied to individual cells, for when the Dual Porosity model has been invoked by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section.

See also the BTOBALFAV keyword in the GRID section that applies a constant multiplier to all cells.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.16 CARFIN – DEFINE A CARTESIAN LOCAL GRID REFINEMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

CARFIN defines a Cartesian Local Grid Refinement (“LGR”) in a cell or a group of cells in the host grid, for when LGRs have been activated for the input deck using the LGR keyword in the RUNSPEC section. The keyword marks the start of an LGR description section and all subsequent keywords between the CARFIN and ENDFIN keywords are deemed to be associated with the current LGR and not the host grid.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which the LGR is being defined.	None
2	I1	A positive integer that defines the lower index of the global or host grid in the I-direction to be refined; must be greater than or equal 1 and less than or equal to I2 and NX on the DIMENS keyword in the RUNSPEC section.	None
3	I2	A positive integer that defines the upper index of the global or host grid in the I-direction to be refined; must be greater than or equal 1 and I1, and less than or equal to NX on the DIMENS keyword in the RUNSPEC section.	None
4	J1	A positive integer that defines the lower index of the global or host grid in the J-direction to be refined; must be greater than or equal 1 and less than or equal to J2 and NY on the DIMENS keyword in the RUNSPEC section.	None
5	J2	A positive integer that defines the upper index of the global or host grid in the J-direction to be refined; must be greater than or equal 1 and J1, and less than or equal to NY on the DIMENS keyword in the RUNSPEC section.	None
6	K1	A positive integer that defines the lower index of the global or host grid in the K-direction to be refined; must be greater than or equal 1 and less than or equal to K2 and NZ on the DIMENS keyword in the RUNSPEC section.	None
7	K2	A positive integer that defines the upper index of the global or host grid in the K-direction to be refined; must be greater than or equal 1 and K1, and less than or equal to NZ on the DIMENS keyword in the RUNSPEC section.	None
8	NX	A positive integer value that defines the number of LGR grid blocks in the x direction for Cartesian grids or the number of grid blocks in the r direction for radial grids	None
9	NY	A positive integer value that defines the number of LGR grid blocks in the y direction for Cartesian grids or the number of grid blocks in the theta direction for radial grids.	None
10	NZ	A positive integer value that defines the number of LGR grid blocks in the z direction for both Cartesian and radial grids.	None
11	MXWELS	A positive integer defining the maximum number of wells contained in this LGR.	None

No.	Name	Description	Default
12	HOSTNAME	<p>A character string of up to eight characters in length that defines the host grid name for nested refinements. The default value of "GLOBAL" sets the host name to the global grid, that is for a conventional LGR.</p> <p>A nested refinement is when the HOSTNAME is a previously declared LGR for which the current LGR is specifying a further LGR refinement.</p>	GLOBAL
Notes: 1) The keyword is terminated by a "/".			

Table 6.12: CARFIN Keyword Description

Note that if the Dual Porosity option has been activated by either the DUALPORO or DUALPERM keywords in the RUNSPEC section, then the host grid definition (I1-I2, J1-J2, K1-K2) applies only to the matrix cells; however, the LGR NZ parameter in this case must include the fracture blocks, similar to the NZ parameter on the DIMENS keyword. This means that all property data should be entered for both the matrix and fracture cells in the LGR description.

Example

The example below defines an LGR in the global grid, named LGR-OP01 with a maximum of one well allowed in the LGR.

```
--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- HOST GRID -----  -- CARFIN GRID --  MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS      NAME
CARFIN
      LGR-OP01    24  24  87  87   1  50        3      3      50        1      GLOBAL /

ENDFIN
```

Here the one global cell in the areal plane (24, 87) is divided into three LGR cells in the x-direction and three cells in the y-direction. Since no other property data is given, then the LGR cells take their properties from the host grid, that is the global grid.

6.3.17 COALNUM – DEFINE THE COAL REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COALNUM keyword defines the coal region numbers for each grid block used with the Coal Bed Methane option ("CBM"). OPM Flow does not have a CBM option; however, the keyword is documented here for completeness.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description	Default
I	COALNUM	COALNUM defines an array of positive integers assigning a grid cell to a particular coal region. The maximum number of COALNUM regions is set by the NTCREG variable on REGDIMS keywords in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) A total of NX x NY x NZ integer values, as defined by the DIMENS in the RUNSPEC section, must be specified for the array. 2) If a cell is not assigned a COALNUM region then the default value of I will be used. 3) COALNUM value of 0 sets the cell be a non-coal region. 4) The keyword is terminated by a "/". 			

Table 6.13: COALNUM Keyword Description

Example

The example below sets three COALNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE COALNUM REGIONS FOR ALL CELLS
--
COALNUM
  2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
  3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

The above will no effect in an OPM Flow input deck.

6.3.18 COARSEN – DEFINE GRID COARSENING CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COARSEN keyword defines how a set of cells should be coarsened for when the Local Grid Refinement (“LGR”) option has been activated by LGR keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.19 COLLAPSE – DEFINE COMPRESSED VERTICAL EQUILIBRIUM CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COLLAPSE keyword defines the which cells can be collapsed in a collapsed Vertical Equilibrium (“VE”) run when the VE option has been invoked via the VE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.20 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

See [COLUMNS – Define Input File Column Margins](#) in the GLOBAL section for a full description.

6.3.21 COORD – DEFINE A SET OF COORDINATES LINES FOR A RESERVOIR GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	-------------	------	-------	---------	----------	---------	----------

Description

COORD defines a set of coordinate lines or pillars for a reservoir grid via an array. A total of $6 \times (NX+1) \times (NY+1)$ lines must be specified for each coordinate data set (or reservoir). For multiple reservoirs, where NUMRES is greater than one, there must be $6 \times (NX+1) \times (NY+1) \times \text{NUMRES}$ values. In OPM Flow NUMRES can only be set to one.

For Cartesian geometry, each line is defined by the (x, y, z) coordinates of two distinct points on the line. The lines are entered with I cycling fastest then J. For radial geometry, each line is defined by the (r, theta) coordinates of two distinct points on the line. The lines are entered with R cycling fastest then THETA.

The keyword can only be used with Irregular Corner-Point Grids.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	X1-Column	Top X coordinate			
2	Y1-Column	Top Y coordinate			
3	Z1-Column	Top Z coordinate			
4	X2-Column	Base X coordinate			
5	Y2-Column	Base Y coordinate			
6	Z2-Column	Base Z coordinate			
		feet	metres	cm	None
Notes: 1) THETA values are in degrees for all units. 2) Regular Cartesian and Radial grid keywords cannot be used with this keyword, that is: DR, DRV, DTHETA, DTHETA, DX, DXV, DY, DYV, DZ, INRAD, and TOPS. 3) The keyword is terminated by a “/”.					

Table 6.14: COORD Keyword Description

See also the SPECGRID, COORDSYS and ZCORN keywords to fully define an Irregular Corner-Point Grid.

Example

```
--
-- SPECIFY VERTICAL COORDINATE LINES FOR A REGULAR 3 x 2 GRID
-- (DX = 100 and DY = 200)
--
-- X1      Y1      Z1      X2      Y2      Z2
-- ---      ---      ---      ---      ---      ---
COORD
      0      0      1000      0      0      5000
    100      0      1000     100      0      5000
    200      0      1000     200      0      5000
    300      0      1000     300      0      5000
      0     200      1000      0     200      5000
    100     200      1000     100     200      5000
    200     200      1000     200     200      5000
    300     200      1000     300     200      5000
      0     400      1000      0     400      5000
    100     400      1000     100     400      5000
    200     400      1000     200     400      5000
    300     400      1000     300     400      5000
/
```

The above example defines vertical coordinate lines for a regular 3 by 2 grid with DX equal to 100 and DY equal to 200.

6.3.22 COORDSYS – DEFINE COORDINATE GRID OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword sets various options for when multiple grid systems are being used, as declared by the NUMRES keyword in the RUNSPEC section. OPM Flow does not support multiple grid systems. The keyword is also used to stipulate for radial grids if the completion of the circle in the THETA direction should be implemented using non-neighbor connections.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description	Default
1	K1	A positive integer that defines the lower bound of the array in the K-direction for the given grid system.	None
2	K2	A positive integer that defines the upper bound of the array in the K-direction for the given grid system.	None
3	COMPLETE	COMPLETE is a defined character string that determines for radial grids if the circle should be completed in THETA direction, and should be set to COMP to complete the circle, or INCOMP for not completing the circle.	INCOMP
4	CONNECT	A defined character string that declares how the reservoir below should be connected to the given reservoir, and should be set to JOIN to connect the two reservoirs by calculating the inter-reservoir transmissibilities, or SEPARATE to isolate the reservoirs.	SEPARATE
5	R1	R1 is a positive integer defining the lower reservoir unit that is connected to the given reservoir unit.	Current Reservoir Record
6	R2	R2 is a positive integer defining the upper reservoir unit that is connected to the given reservoir unit.	
Notes: 1) The DIMENS keyword defines the dimensions of the model (NX, NY and NZ) and the NUMRES keyword the number of multiple grid systems (reservoirs), both keywords are in the RUNSPEC section. 2) Each record must be terminated by a “/” and there must be exactly NUMRES records entered for the keyword. 3) There is no “/” terminator for this keyword.			

Table 6.15: COORDSYS Keyword Description

Example

```
--
--      DEFINE COORDINATE GRID OPTIONS
--
--      K1      K2      COMP      CONNECT  LOWER  UPPER
--      Layer   Layer   CIRCLE   RES      RES    RES
COORDSYS
--      1      1      COMP                      /
/
```

The above example connects the circle in the THETA direction for the RADIAL model, for when the number of grids have been set to one via the NUMRES keyword in the SCHEDULE section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.23 COPY – COPY ARRAY DATA TO ANOTHER ARRAY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COPY keyword copies an array (or part of an array) to another array or part of an array. The arrays can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the COPY keyword is being used.

No.	Name	Description	Default
1	ARRAY-1	The name of the array to be copied from. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	ARRAY-2	The name of the array to be copied to. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
3	I1	A positive integer that defines the lower bound of the array in the I-direction to be modified must be greater than or equal 1 and less than or equal to I2 and NX.	1
4	I2	A positive integer that defines the upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
5	J1	A positive integer that defines the lower bound of the array in the J-direction to be modified must be greater than or equal 1 and less than or equal to J2 and NY.	1
6	J2	A positive integer that defines the upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
7	K1	A positive integer that defines the lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	1
8	K2	A positive integer that defines the upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ

Notes:

- 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section.
- 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".

Table 6.16: COPY Keyword Description

The applicable arrays for each section are defined in Table 6.17 on the following page.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

COPY Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFTHT			SOLVFRAC		
PERMTHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFTHT						

Table 6.17: COPY Keyword Applicable Arrays by Section

Example

```
--
--      SOURCE      DESTIN.      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
COPY
      PERMX      PERMY      1*  1*   1*  1*   1*  1* / CREATE PERMY
      PERMX      PERMZ      1*  1*   1*  1*   1*  1* / CREATE PERMZ
/

--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
MULTIPLY
      PERMZ      0.50000      1*  1*   1*  1*   1*  1* / PERMZ * 0.5
/
```

The above example copies PERMX array to the PERMY and PERMZ arrays in the GRID section for all grid blocks in the model. The PERMZ array is then multiplied by 0.5 for all grid blocks in the model.

6.3.24 COPYBOX – COPY ARRAY DATA DEFINED BY A BOX

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COPYBOX keyword copies an array (or part of an array) to another part of the same array. The array can be real or integer depending on the array type; however, the array that can be operated on is dependent on which section the COPYBOX keyword is being used.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	ARRAY-I	The name of the array to be copied This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	I1	A positive integer that defines the SOURCE lower bound of the array in the I-direction to be modified must be greater than or equal I and less than or equal to I2 and NX.	I
3	I2	A positive integer that defines the SOURCE upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
4	J1	A positive integer that defines the SOURCE lower bound of the array in the J-direction to be modified must be greater than or equal I and less than or equal to J2 and NY.	I
5	J2	A positive integer that defines the SOURCE upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
6	K1	A positive integer that defines the SOURCE lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	I
7	K2	A positive integer that defines the SOURCE upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ
8	I3	A positive integer that defines the DESTINATION lower bound of the array in the I-direction to be modified must be greater than or equal I and less than or equal to I2 and NX.	I
9	I4	A positive integer that defines the DESTINATION upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
10	J3	A positive integer that defines the DESTINATION lower bound of the array in the J-direction to be modified must be greater than or equal I and less than or equal to J2 and NY.	I
11	J4	A positive integer that defines the DESTINATION upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
12	K3	A positive integer that defines the DESTINATION lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	I

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
13	K4	A positive integer that defines the DESTINATION upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ
Notes: <ol style="list-style-type: none"> 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/". 			

Table 6.18: COPYBOX Keyword Description

Note that the SOURCE and DESTINATION arrays must be of the same size in all dimensions and the applicable arrays for each section are defined in Table 6.19.

COPYBOX Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX		SWL	ENDNUM			
DY		SWCR	EQLNUM			
DZ		SWU	FIPNUM			
PERMX		SGL	IMBNUM			
PERMY		SGCR	MISCNUM			
PERMZ		SGU	PVTNUM			
MULTX		KRW	ROCKNUM			
MULTY		KRO	SATNUM			
MULTZ		KRG	WH2NUM			
DR		PCG				
THETA		PCW				
PERMR						
PERMTHT						
DZNET						
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFTHT						

Table 6.19: COPYBOX Keyword Applicable Arrays by Section

Example

```
--
--      SOURCE      ----- SOURCE BOX -----      ----- DESTINATION BOX -----
--      ARRAY      I1  I2   J1  J2   K1  K2   I1  I2   J1  J2   K1  K2
COPYBOX
      PORO      1*  1*   1*  1*   12  14   1*  1*   1*  1*   15  17 / PORO
      PERMX     1*  1*   1*  1*   12  14   1*  1*   1*  1*   15  17 / PERMX
/
```

The above example copies all the PORO and PERMX values in layers 12 to 14 to layers 15 and 17.

6.3.25 COPYREG – COPY AN ARRAY TO ANOTHER ARRAY BASED ON A REGION NUMBER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COPYREG keyword copies a specified array or part of an array based on cells with a specific region number to another array. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the COPYREG keyword is read by the simulator. The property arrays can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the COPYREG keyword is being used.

No.	Name	Description	Default
1	ARRAY-1	The name of the array to be copied from. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	ARRAY-2	The name of the array to be copied to. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
3	REGION NUMBER	Integer REGION NUMBER is the region for which the array data in (1) should be copied to array data in (2).	None
4	REGION ARRAY	The REGION ARRAY to use for selecting the REGION NUMBER in (3) for selecting the data to be copied. REGION ARRAY can have the following values: 1) F for the FLUXNUM array 2) M for the MULTNUM array 3) O for the OPERNUM array	M
Notes: 1) Where the REGION NUMBER should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.20: COPYREG Keyword Description

The applicable arrays for each section are defined in Table 6.21 on the following page.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

COPYREG Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFTHT			SOLVFRAC		
PERMTHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFTHT						

Table 6.21: COPYREG Keyword Applicable Arrays by Section

Example

```
--
--      COPY AN ARRAY TO ANOTHER ARRAY BASED ON A REGION NUMBER
--
--      ARRAY      ARRAY      REGION      REGION ARRAY
--      FROM       TO        NUMBER      M / F / O
COPYREG
    PERMX      PERMY      1          M          / COPY PERMX TO PERMY
    PERMX      PERMZ      1          M          / COPY PERMX TO PERMZ
/
--
--      NOW RESET PERMZ BASED ON THE MULTNUM REGION NUMBER
--
--      MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER
--
--      ARRAY      CONSTANT  REGION      REGION ARRAY
--      VALUE      NUMBER    M / F / O
MULTIREG
    PERMX      0.95      1          M          /
/
```

The above example first copies the PERMX property array for region number one to the PERMY and PERMZ property arrays for region one using the MULTNUM array to define the region numbers. After which PERMZ property array for region one is multiplied by 0.5 using the MULTIREG keyword.

6.3.26 CRITPERM – DEFINE MINIMUM PERMEABILITY FOR VERTICAL EQUILIBRIUM GRID CELL COMPRESSION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The CRITPERM keyword is used to define the minimum permeability for Vertical Equilibrium(“VE”) grid cell compression, for when the Vertical Equilibrium formulation has been activated by the VE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.27 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See [DEBUG – Define the Debug Data to be Printed to File](#) in the GLOBAL section for a full description.

6.3.28 DIFFMR – DEFINE GRID BLOCK RADIAL DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMR keyword defines the radial direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.29 DIFFMR- – DEFINE GRID BLOCK NEGATIVE RADIAL DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMR- keyword defines the negative radial direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.30 DIFFMTHT – DEFINE GRID BLOCK THETA DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMTHT keyword defines the theta direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.31

DIFFMTH-

–

DEFINE

GRID

BLOCK

NEGATIVE

THETA

DIRECTION

DIFFUSIVITY

MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMR- keyword defines the negative theta direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.32 DIFFMX – DEFINE GRID BLOCK X-DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMX keyword defines the x-direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.33 DIFFMX- – DEFINE GRID BLOCK NEGATIVE X-DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMX- keyword defines the negative x-direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.34 DIFFMY – DEFINE GRID BLOCK Y-DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMY keyword defines the y-direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.35 DIFFMY- – DEFINE GRID BLOCK NEGATIVE Y-DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMY- keyword defines the negative y-direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.36 DIFFMZ – DEFINE GRID BLOCK Z-DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMZ keyword defines the z-direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.37 DIFFMZ- – DEFINE GRID BLOCK NEGATIVE Z-DIRECTION DIFFUSIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFMZ- keyword defines the negative z-direction diffusivity multipliers for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.38 DOMAINS – DEFINE THE PARALLEL DOMAIN PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DOMAINS keyword defines the parallel domain properties for when parallel processing has been invoked by the PARALLEL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to run OPM Flow in parallel mode.

6.3.39 DPGRID – ACTIVATE THE MATRIX CELL TO FRACTURE CELL OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DPGRID keyword activates the matrix cell to fracture cell option for dual porosity runs for when a Dual Porosity model has been activated by either the DUALPORO or DUALPERM keywords in the RUNSPEC section. The keyword allows for only the matrix grid data to be entered and the missing fracture cells are set to the inputted matrix cells.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.40 DPNUM – DEFINE DUAL AND SINGLE POROSITY GRID BLOCK ARRAY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

In dual porosity runs only, that is not dual permeability runs, the DPNUM keyword defines which wells should be treated as single porosity cells and which cells should be treated as dual porosity cells, for when the Dual Porosity model has been activated by the DUALPORO keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.41 DR - DEFINE THE SIZE OF GRID BLOCKS IN THE R DIRECTION FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DR defines the size of all grid blocks in the R direction via an array for each cell in the model. The RADIAL or SPIDER keyword in the RUNSPEC section should be activated to indicate that radial or spider geometry is being used.

Currently this keyword is ignored by OPM Flow and has no effect on the simulation; however one can use the vector form of the keyword, DRV, to enter the data instead.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DR	DR is an array of real numbers describing the cell size in the R direction for each cell in the model in a radial grid. Repeat counts may be used,for example 10*100.0.			None
		feet	m	cm	

Notes:

1)

The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section,unless the BOX keyword defines a sub area of the grid,in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2)

The keyword is terminated by a “/”.

Table 6.22: DR Keyword Description

Note that the SPIDER keyword activates OPM Flow's radial grid geometry option for the model. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID section. A spider grid can be viewed in 3D in OPM ResInsight unlike radial grids that cannot be viewed in the software. To overcome this, the simulator now converts radial grids to Irregular Corner-Point Grids and adjusts the model's pore volume to reflect radial coordinates; thus, overcoming the display limitation.

See also the DRV, DTHETAV, DZ and TOPS keywords in the GRID section to fully define a radial or spider grid model.

Example

Given the dimensions of the grid in the RUNSPEC section to be 10, 1, 8 for NX, NY and NZ respectively, we first define the inner radius of the radial model,

```
--
--      INNER RADIUS OF FIRST GRID BLOCK IN THE RADIAL DIRECTION
--
INRAD      0.25
/
```

and then DR should be defined as:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

```
--
--      DEFINE GRID BLOCK R DIRECTION CELL SIZE
--
DR
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.0
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.0
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.0
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.0
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.0
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.0
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.0
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.0
/
```

The above example defines the size of the cells in the R direction based on 80 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

6.3.42 DRV - DEFINE THE SIZE OF GRID BLOCKS IN THE R DIRECTION VIA A VECTOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DRV defines the size of grid blocks in the R direction via a vector as opposed to defining the property for each cell for a Radial or Spider Grid. The RADIAL or SPIDER keyword in the RUNSPEC section should be activated to indicate that radial or spider geometry is being used.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DRV	DRV is a vector of real numbers describing the cell size for the grid blocks in the R direction in a radial grid. Repeat counts may be used, for example 10*100.0.			None
		feet	m	cm	
Notes: 1) The number of entries should correspond to the NX parameter on the DIMENS keyword in the RUNSPEC section 2) The keyword is terminated by a “/”.					

Table 6.23: DRV Keyword Description

Note that the SPIDER keyword activates OPM Flow's radial grid geometry option for the model. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID the section. A spider grid can be viewed in 3D in OPM ResInsight unlike radial grids that cannot be viewed in the software. To overcome this, the simulator now converts radial grids to Irregular Corner-Point Grids and adjusts the model's pore volume to reflect radial coordinates; thus, overcoming the display limitation.

See also the DR, DTHETAV, DZ and TOPS keywords in the GRID section to fully define a radial or spider grid model.

Example

```
--
--      INNER RADIUS OF FIRST GRID BLOCK IN THE RADIAL DIRECTION
--
INRAD
      0.25
/
--
--      DEFINE GRID BLOCK SIZES IN THE R DIRECTION
--
DRV
      1.75  2.32  5.01  10.84  23.39  50.55  109.21  235.92  509.68  1101.08 /
```

The above example defines the size of the cells in the R direction based on NX equals 10 on the DIMENS keyword in the RUNSPEC section. Note the INRAD keyword to define the inner radius of the radial grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.43 DTHETA - DEFINE THE SIZE OF GRID BLOCKS IN THE THETA DIRECTION FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DTHETA defines the size of all grid blocks in the Theta direction via an array for each cell in model. The RADIAL or SPIDER keyword in the RUNSPEC section should be activated to indicate that radial or spider geometry is being used.

Currently this keyword is ignored by OPM Flow and has no effect on the simulation; however one can use the vector form of the keyword, DTHETAV, to enter the data instead.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DTHETA	DTHETA is an array of real numbers describing the cell size in the THETA direction in radial grids for each cell in the model. Repeat counts may be used, for example 10*25.0			None
		degrees	degrees	degrees	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.24: DTHETA Keyword Description

Note that the SPIDER keyword activates OPM Flow's radial grid geometry option for the model. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID section. A spider grid can be viewed in 3D in OPM ResInsight unlike radial grids that cannot be viewed in the software. To overcome this, the simulator now converts radial grids to Irregular Corner-Point Grids and adjusts the model's pore volume to reflect radial coordinates; thus, overcoming the display limitation. See also the DRV, DTHETAV, DZ and TOPS keywords in the GRID section to fully define a radial or spider grid model.

Example

Given the dimensions of the grid in the RUNSPEC section to be 10, 6, 1 for NX, NY and NZ respectively, then DTHETA should be defined as:

```
--
--      DEFINE GRID BLOCK SIZES IN THE THETA DIRECTION
--
DTHETA
    10*60.0
    10*60.0
    10*60.0
    10*60.0
    10*60.0
    10*60.0
/
```

The above example defines the size of the cells in the R direction based on 60 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.44 DTHETAV - SETS THE SIZE OF GRID BLOCKS IN THETA DIRECTION VIA A VECTOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DTHETAV defines the size of grid blocks in the THETA direction via a vector as opposed to defining the property for each cell for a Radial Grid. The RADIAL or SPIDER keyword in the RUNSPEC should be activated to indicate that radial geometry is being used.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DTHETAV	DTHETAV is a vector of real numbers describing the cell size for the grid blocks in the THETA direction in a radial grid. Repeat counts may be used,for example 10*100.0.			None
		degrees	degrees	degrees	

Notes:

1)

The number of entries should correspond to the NY parameter of the DIMENS keyword in the RUNSPEC section.

2)

The keyword is terminated by a “/”.

Table 6.25: DTHETA Keyword Description

Note that the SPIDER keyword activates OPM Flow's radial grid geometry option for the model. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID the section. A spider grid can be viewed in 3D in OPM ResInsight unlike radial grids that cannot be viewed in the software. To overcome this, the simulator now converts radial grids to Irregular Corner-Point Grids and adjusts the model's pore volume to reflect radial coordinates; thus, overcoming the display limitation.

See also the DRV, DZV and TOPS keywords to fully define a radial or spider grid model.

Example

```
--
--      DEFINE GRID BLOCK SIZES IN THE THETA DIRECTION (BASED ON NY = 6)
--
DTHETAV      60.0  60.0  60.0  60.0  60.0  60.0      /
```

The above example defines the size of the cells in the THETA direction based on NY equals six in the DIMENS keyword in the RUNSPEC section.

6.3.45 DUMPFLUX – ACTIVATE WRITING OUT OF A FLUX FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword activates the writing out of a full field (the full grid) FLUX file for later processing in a Flux Boundary run. The Flux Boundary feature allows for the segmentation of the full grid into flux boundary areas which allow for a sub-area of the grid to be run and at the same time model the flux across the boundary derived from the main grid. The object of this feature is to be able to investigate the performance of various areas of the model without having to run the full field, thus improving computational efficiency and run times, but still obtain “reasonable” results due to the incorporation of the fluxes across the boundary.

This feature is not available in OPM Flow; however it is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE WRITING OUT OF A FLUX FILE
--
DUMPFLUX /
```

The above example switches on the writing of the FLUX output file; the keyword has no effect and is ignored by the simulator.

6.3.46 DX - DEFINE THE SIZE OF GRID BLOCKS IN THE X DIRECTION FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DX defines the size of all grid blocks in the X direction via an array for each cell in a Cartesian Regular Grid model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DX	DX is an array of real numbers describing the cell size in the X direction for each cell in the model. Repeat counts may be used, for example 10*100.0.			None
		feet	m	cm	

Notes:

1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2) The keyword is terminated by a “/”.

Table 6.26: DX Keyword Description

See also the DY, DZ and TOPS keywords to fully define a Cartesian Regular Grid.

Example

```
--
--      DEFINE GRID BLOCK X DIRECTION CELL SIZE (BASED ON NX x NY x NZ = 300)
--
DX
      300*1000 /
```

The above example defines the size of the cells in the X direction based on 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

6.3.47 DXV - DEFINE THE SIZE OF GRID BLOCKS IN THE X DIRECTION VIA A VECTOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

DXV defines the size of grid blocks in the X direction via a vector as opposed to defining the X direction cell size for each cell for a Cartesian Regular Grid.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DXV	DXV is a vector of real numbers describing the cell size for the grid blocks in the X direction. Repeat counts may be used, for example 10*100.0.			None
		feet	m	cm	

Notes:

1)

The number of entries should correspond to the NX parameter on the DIMENS keyword in the RUNSPEC section.

2)

The keyword is terminated by a “/”.

Table 6.27: DXV Keyword Description

See also the DYV, DZV and TOPS keywords to fully define a Cartesian Regular Grid.

Example

```
--
--      DEFINE GRID BLOCK X DIRECTION CELL SIZE (BASED ON NX = 5)
--
DXV      5*100      /
```

The above example defines the size of the cells in the X direction based on NX equals 5 on the DIMENS keyword in the RUNSPEC section.

6.3.48 DY - DEFINE THE SIZE OF GRID BLOCKS IN THE Y DIRECTION FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DY defines the size of all grid blocks in the Y direction via an array for each cell in a Cartesian Regular Grid model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DY	DY is an array of real numbers describing the cell size in the Y direction for each cell in the model. Repeat counts may be used, for example 10*100.0.			None
		feet	m	cm	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.28: DY Keyword Description

See also the DX, DZ and TOPS keywords to fully define a Cartesian Regular Grid.

Example

```
--
--      DEFINE GRID BLOCK Y DIRECTION CELL SIZE (BASED ON NX x NY x NZ = 300)
--
DY
      300*1000 /
```

The above example defines the size of the cells in the Y direction based on 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.49 DYV - DEFINE THE SIZE OF GRID BLOCKS IN THE Y DIRECTION VIA A VECTOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

DYV defines the size of grid blocks in the Y direction via a vector as opposed to defining the Y direction cell size for each cell for a Cartesian Regular Grid.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DYV	DYV is a vector of real numbers describing the cell size for the grid blocks in the Y direction. Repeat counts may be used, for example 10*100.0.			None
		feet	m	cm	

Notes:

1)

The number of entries should correspond to the NY parameter on the DIMENS keyword in the RUNSPEC section.

2)

The keyword is terminated by a “/”.

Table 6.29: DYV Keyword Description

See also the DXV, DZV and TOPS keywords to fully define a Cartesian Regular Grid.

Example

```
--
--      DEFINE GRID BLOCK Y DIRECTION CELL SIZE (BASED ON NY = 5)
--
DYV
      5*100
/
```

The above example defines the size of the cells in the Y direction based on NY equals 5 on the DIMENS keyword in the RUNSPEC section.

6.3.50 DZ - DEFINE THE SIZE OF GRID BLOCKS IN THE Z DIRECTION FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

DZ defines the size of all grid blocks in the Z direction via an array for each cell in a Cartesian Regular Grid model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DZ	DZ is an array of real numbers describing the cell size in the Z direction for each cell in the model. Repeat counts may be used, for example 10*100.0.			None
		feet	m	cm	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.30: DZ Keyword Description

See also the DX, DY and TOPS keywords to fully define a Cartesian Regular Grid.

Example

```
--
--      DEFINE GRID BLOCK Z DIRECTION CELL SIZE (BASED ON NX x NY x NZ = 300)
--
DZ
      100*20.0   100*30.0   100*50.0      /
```

The above example defines the size of the cells in the Z direction based on 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

6.3.51 DZMATRIX - MATRIX BLOCK HEIGHT FOR GRAVITY DRAINAGE MODEL FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DZMATRIX keyword defines the matrix block height for the gravity drainage model by grid block for when the Dual Permeability or Dual Porosity models are activated by the DUALPERM and DUALPORO keywords and the Gravity Drainage option is invoked via the GRAVDR and GRAVDRM keywords. All keywords are in the RUNSPEC section.

The keyword is identical to the DZMTRXV keyword in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.52 DZMTRX - MATRIX BLOCK HEIGHT FOR GRAVITY DRAINAGE MODEL FOR THE GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DZMTRX keyword defines a constant matrix block height for the gravity drainage model for the entire grid for when the Dual Permeability or Dual Porosity models are activated by the DUALPERM and DUALPORO keywords and the Gravity Drainage option is invoked via the GRAVDR and GRAVDRM keywords. All keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.53 DZMTRXV - MATRIX BLOCK HEIGHT FOR GRAVITY DRAINAGE MODEL FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DZMATRIX keyword defines the matrix block height for the gravity drainage model by grid block for when the Dual Permeability or Dual Porosity models are activated by the DUALPERM and DUALPORO keywords and the Gravity Drainage option is invoked via the GRAVDR and GRAVDRM keywords. All keywords are in the RUNSPEC section.

The keyword is identical to the DZMATRIX keyword in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.54 DZNET – DEFINE GRID BLOCK NET THICKNESS FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DZNET defines the net thickness of all grid blocks in the Z direction via an array for each cell in a Cartesian Regular Grid model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DZNET	DZNET is an array of real numbers describing the net thickness in the Z direction for each cell in the model. Repeat counts may be used, for example 10*100.0. If the value for a grid block is not defined then the grid block size (DZ) is assigned to the missing values.			DZ
		feet	m	cm	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.31: DZNET Keyword Description

See also the DX, DY, DZ, NTG and TOPS keywords to fully define a Cartesian Regular Grid.

Example

```
--
--      DEFINE GRID BLOCK Z DIRECTION NET THICKNESS(BASED ON NX x NY x NZ = 300)
--
DZNET      100*15.0    100*25.0    00*45.0      /
```

The above example defines the net thickness of the cells in the Z direction based on 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

6.3.55 DZV - DEFINE THE SIZE OF GRID BLOCKS IN THE Z DIRECTION VIA A VECTOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DZV defines the size of grid blocks in the Z direction via a vector as opposed to defining the thickness property for each cell. The keyword is used for both Cartesian Regular Grids and Radial Grids.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DZV	DZV is a vector of real numbers describing the cell size for the grid blocks in the Z direction. Repeat counts may be used, for example 10*20.0.			None
		feet	m	cm	
Notes: 1) The number of entries should correspond to the NZ parameter on the DIMENS keyword in the RUNSPEC section.. 2) The keyword is terminated by a “/”.					

Table 6.32: DZV Keyword Description

See also the DXV, DXY and TOPS keywords for a Cartesian Regular Grid and DRV, DTHETAV and TOPS keywords to fully define a Radial Grid model.

Example

```
--
--      DEFINE GRID BLOCK SIZES IN THE Z DIRECTION (BASED ON NZ = 20)
--
DZV      3.0   5.0   3.0   2.0   5.0  15*3.0      /
```

The above example defines the size of the cells in the Z direction based on NZ equals 20 on the DIMENS keyword in the RUNSPEC section.

6.3.56 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

See [ECHO – Activate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

6.3.57 END – DEFINE THE END OF THE INPUT FILE

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

See [END – Define the End of the Input File](#) in the GLOBAL section for a full description.

6.3.58 ENDBOX – DEFINE THE END OF THE BOX DEFINED GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword marks the end of a previously defined BOX sub-grid as defined by a previously entered BOX keyword. The keyword resets the input grid to be the full grid as defined by the NX, NY, and NZ variables on the DIMENS keyword in the RUNSPEC section.

There is no data required for this keyword.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   1                / DEFINE BOX AREA
--
--
--      DEFINE GRID BLOCK PERMZ DATA FOR THE INPUT BOX
--
PERMZ      6*0.01                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a subset of the grid and sets the cells PERMZ values to 0.01 for that area. After which the ENDBOX keyword resets the input to be the full grid.

Note

It is good practice to always use the ENDBOX keyword to reset the input back to the full grid when all the modifications for a sub-grid have been completed.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.59 ENDFIN – END THE DEFINITION OF A LOCAL GRID REFINEMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ENDFIN keyword defines the end of a Cartesian or radial local grid refinement (“LGR”) definition and a LGR property definition data set. In the GRID section the CARFIN, RADFIN, and RADFIN4 keywords defines the start of an LGR description section, whereas the REFINE keyword in the EDIT, PROPS, REGIONS, SOLUTION and SCHEDULE section defines the start. The REFINE keyword can also be used in the GRID section provided the LGR has been previously specified by the CARFIN, RADFIN, or RADFIN4 keywords.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

The example below is based on using the CARFIN keyword in the GRID section to define an LGR in the global grid, named LGR-OP01 with a maximum of one well allowed in the LGR.

```
--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- FINE GRID -----      -- CARFIN GRID --      MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS      NAME
CARFIN
      LGR-OP01    24  24  87  87   1  50      3      3      50      1      GLOBAL /

ENDFIN
```

Here the one global cell in the areal plane (24, 87) is divided into three LGR cells in the x-direction and three cells in the y-direction. Since no other property data is given, then the LGR cells take their properties from the host grid, that is the global grid.

6.3.60 ENDINC – DEFINE THE END OF AN INCLUDE FILE

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

See [ENDINC – Define the End of an Include File](#) in the GLOBAL section for a full description.

6.3.61 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

See [ENDSKIP – DeActivate Skipping of Keywords and Input Data](#) in the GLOBAL section for a full description.

6.3.62 EQLZCORN - MODIFY THE DEPTH OF THE CORNER-POINT DEPTH ARRAY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The EQLZCORN keyword modifies the depth of a corner point of a grid block on the pillars defining the reservoir grid. The keyword can be only used be used with Irregular Corner-Point Grids.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.63 EQUALREG – SETS AN ARRAY TO A CONSTANT BY REGION NUMBER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The EQUALREG keyword sets a specified array to a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the EQUALREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the EQUALREG keyword is being used.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	ARRAY	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	CONSTANT	An integer or real value to be assigned to the ARRAY in the same units as the ARRAY property for a given REGION	0
3	REGION NUMBER	REGION NUMBER is a positive integer representing the region for which the CONSTANT in (2) should be applied	None
4	REGION ARRAY	The REGION ARRAY to use for applying the CONSTANT in (2) based on the REGION NUMBER in (3). REGION ARRAY can have the following values: 1) F for the FLUXNUM array 2) M for the MULTNUM array 3) O for the OPERNUM array	M
Notes: 1) Where the REGION NUMBER should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.33: EQUALREG Keyword Description

The applicable arrays for each section are defined in Table 6.34 on the following page.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

EQUALREG Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFHT			SOLVFRAC		
PERMHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFHT						

Table 6.34: EQUALREG Keyword Applicable Arrays by Section

Example

```
-- FIRST DEFINE MULTNUM ARRAYS FOR 10 X 10 X 20 MODEL
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      MULTNUM      1           1*  1*   1*  1*   1*  1*   / MULTNUM IN MODEL
      MULTNUM      2           1*  1*   1*  1*   6   6   / MULTNUM IN MODEL
      MULTNUM      3           1*  1*   1*  1*  10  10   / MULTNUM IN MODEL
/
--      NOW SET PORO AND PERMX BASED ON THE MULTNUM REGION NUMBER
--
--      SETS A CONSTANT TO AN ARRAY BASED ON A REGION NUMBER
--
--      ARRAY      CONSTANT  REGION  REGION ARRAY
--      VALUE      NUMBER    M / F / O
EQUALREG
      PORO      0.200      1         M
      PORO      0.150      2         M
      PORO      0.120      3         M
      PERMX     100.00      1         M
      PERMX     75.00      2         M
      PERMX     50.00      3         M
/
```

The example first defines the MULTNUM array to 1 for all cells in the model, after which selected areas of model are assigned various MULTNUM integer values. The EQUALREG can then be invoked to set a constant values for the PORO and PERMX arrays for the various MULTNUM regions.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.64 EQUALS – SETS A SPECIFIED ARRAY TO A CONSTANT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The EQUALS keyword sets a specified array or part of an array to a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the EQUALS keyword is being used.

No.	Name	Description	Default
1	ARRAY	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	CONSTANT	An integer or real value that the ARRAY will be set to in the same units as the ARRAY property.	None
3	I1	A positive integer that defines the lower bound of the array in the I-direction to be modified must be greater than or equal to one and less than or equal to I2 and NX.	1
4	I2	A positive integer that defines the upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
5	J1	A positive integer that defines the lower bound of the array in the J-direction to be modified must be greater than or equal to one and less than or equal to J2 and NY.	1
6	J2	A positive integer that defines the upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
7	K1	A positive integer that defines the lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	1
8	K2	A positive integer that defines the upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ
Notes: <ol style="list-style-type: none"> Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section. Each record must be terminated by a “/” and the keyword is terminated by a “/”. 			

Table 6.35: EQUALS Keyword Description

The applicable arrays for each section are defined in Table 6.36 on the following page.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

EQUALS Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFHT			SOLVFRAC		
PERMHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFHT						

Table 6.36: EQUALS Keyword Applicable Arrays by Section

Note

Unlike the commercial simulator, using the EQUALS keyword to setup the structure of the grid using the DX, DY, DZ and TOPS keywords should be avoided as it may cause OPM Flow to prematurely fail during the initialization.

See the second example on the correct way to setup this type of grid.

Examples

The first example resets the PERMX, PERMY and PERMZ, arrays to 0.10, 0.10, and 0.01 for all cells in layer five, respectively.

```
--
--  ARRAY      CONSTANT      ----- BOX -----
--  I1  I2    J1  J2    K1  K2
EQUALS
  PERMX      0.1000      1*  1*    1*  1*    5   5  / PERMX TO 0.10 IN LAYER 5
  PERMY      0.1000      1*  1*    1*  1*    5   5  / PERMY TO 0.10 IN LAYER 5
  PERMZ      0.0100      1*  1*    1*  1*    5   5  / PERMZ TO 0.01 IN LAYER 5
/
```


The second example illustrates how to correctly setup a Cartesian Regular Grid in OPM Flow, given the DIMENS keyword in the RUNSPEC section is set to:

```
--
--      MAX      MAX      MAX
--      NDIVIX  NDIVY  NDIVZ
DIMENS
      10        10        3
```

and the following keywords in the GRID section:

```
--
--      ACTIVATE IRREGULAR CORNER-POINT GRID TRANSMISSIBILITIES
--
OLDTRAN
--
--      DEFINE GRID BLOCK X DIRECTION CELL SIZE (BASED ON NX = 5)
--
DX
      300*1000
--
--      DEFINE GRID BLOCK Y DIRECTION CELL SIZE (BASED ON NY = 5)
--
DY
      300*1000
--
--      DEFINE GRID BLOCK SIZES IN THE Z DIRECTION
--
DZ
      100*20  100*30  100*50
--
--      DEFINE GRID BLOCK TOPS FOR THE TOP LAYER
--
TOPS
      100*8325
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2  J1  J2  K1  K2
EQUALS
      PERMX      500.000      1*  1*  1*  1*  1  1 / Layer #01 Properties
      PERMY      500.000
      PERMZ      20.000
      PORO        0.300
      NTG         1.000
      PERMX      50.000      1*  1*  1*  1*  2  2 / Layer #02 Properties
      PERMY      50.000
      PERMZ      50.000
      PORO        0.300
      NTG         1.000
      PERMX      200.000      1*  1*  1*  1*  3  3 / Layer #03 Properties
      PERMY      200.000
      PERMZ      200.000
      PORO        0.300
      NTG         1.000
```

Notice that the DX, DY, DZ and TOPS keywords are defined separately, that is they are not included in the EQUALS keyword.

6.3.65 EXTFIN - DEFINE AN EXTERNAL UNSTRUCTURED LOCAL GRID REFINEMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The EXTFIN keyword defines an external Unstructured Local Grid Refinement (“LGR”) in a cell or a group of cells in the global grid, and for when LGRs have been activated for the model using the LGR keyword in the RUNSPEC section. Note the global grid can be either structured, see the EXTREPL keyword in the GRID section for global structure grids, or unstructured, see the EXTHOST keyword in the GRID section for unstructured global grids.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.66 EXTHOST - DEFINE HOST CELLS FOR EXTERNAL LGRs

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The EXTHOST keyword defines the host global grid blocks for an external Local Grid Refinement (“LGR”) for when LGRs have been activated for the model using the LGR keyword in the RUNSPEC section, and the global grid is an unstructured grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.67 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

See [EXTRAPMS – Activate Extrapolation Warning Messages](#) in the GLOBAL section for a full description.

6.3.68 EXTREPGL - DEFINE HOST CELLS FOR EXTERNAL UNSTRUCTURED LGRs

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The EXTREPGL keyword defines the host global grid blocks for an external Unstructured Local Grid Refinement (“LGR”) for when LGRs have been activated for the model using the LGR keyword in the RUNSPEC section, and the global grid is a structured grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.69 FAULTS – DEFINE FAULTS IN THE GRID GEOMETRY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FAULTS keyword defines the faults in the grid geometry and the keyword is normally exported with the grid geometry COORD and ZCORN data sets from static earth modeling software. Note that the FAULT keyword is not required to describe the structural geometry as this is already accounted for in the COORD and ZCORN data sets, but instead lists the fault traces with respect to the grid. Once the fault traces have been defined with the FAULTS keyword then the fault transmissibilities can be modified by the MULTFLT keyword. Note that without the FAULTS keyword one would still get proper cross-fault transmissibilities but they would not be modifiable using MULTFLT keyword.

No.	Name	Description	Default
1	FLTNAME	FLTNAME is a character string enclosed in quotes with a maximum length of eight characters, that defines the name of the fault.	None
2	I1	The lower bound of the fault's I-direction range must be greater than or equal to one and less than or equal to I2 and NX.	None
3	I2	The upper bound of the fault's I-direction range must be greater than or equal to I1 and less than or equal to NX.	None
4	J1	The lower bound of the fault's J-direction range must be greater than or equal to one and less than or equal to J2 and NY.	None
5	J2	The upper bound of the fault's J-direction range must be greater than or equal to J1 and less than or equal to NY.	None
6	K1	The lower bound of the fault's K-direction range must be greater than or equal to one and less than or equal to K2 and NZ.	None
7	K2	The upper bound of the fault's K-direction range must be greater than or equal to K1 and less than or equal to NZ.	None
8	FLTFACE	FLTFACE is a character string enclosed in quotes with a maximum length of two characters, that classifies the fault face. 1) If TRANMULT on the GRIDOPTS keyword in the RUNSPEC section is set to NO then FLTFACE can have values of X,Y, or Z. 2) Alternatively, if TRANMULT on the GRIDOPTS keyword in the RUNSPEC section is set to YES then FLTFACE can have values of X,Y, or Z for the positive direction, or X-,Y- or Z- for the negative direction transmissibilities.	None

Notes:

- 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section.
- 2) The FAULTDIM keyword in the RUNSPEC defines the maximum number of records (or segments) that can be entered with the FAULTS keyword.
- 3) Each record must be terminated by a "/" and the keyword is terminated by a "/".

Table 6.37: FAULTS Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

The example below defines two fault traces, the first being the 'M_WEST' fault and the second the 'BC' fault trace.

```
--
--      DEFINE FAULTS IN THE GRID GEOMETRY
--
--      FAULT          ----- FAULT TRACE -----
--      NAME           I1   I2   J1   J2   K1   K2   FACE
FAULTS
    'M_WEST'          5     5     3     3     1    22    'X' /
    'M_WEST'          5     5     4     4     1    22    'X' /
    'M_WEST'          5     5     5     5     1    22    'X' /
    'M_WEST'          5     5     6     6     1    22    'X' /
    'M_WEST'          5     5     7     7     1    22    'X' /
    'M_WEST'          5     5     8     8     1    22    'X' /
    'M_WEST'          5     5     9     9     1    22    'X' /
    'M_WEST'          5     5    10    10     1    22    'X' /
    'M_WEST'          5     5    11    11     1    22    'X' /
.....
    'BC'              43    43     8     8     1    22    'Y' /
    'BC'              42    42     9     9     1    22    'X' /
    'BC'              44    44     8     8     1    22    'Y' /
    'BC'              45    45     8     8     1    22    'Y' /
    'BC'              46    46     8     8     1    22    'Y' /
    'BC'              31    31     9     9     1    22    'Y' /
    'BC'              30    30    10    10     1    22    'X' /
    'BC'              32    32     9     9     1    22    'Y' /
    'BC'              33    33     9     9     1    22    'Y' /
    'BC'              34    34     9     9     1    22    'Y' /
    'BC'              35    35     9     9     1    22    'Y' /
    'BC'              36    36     9     9     1    22    'Y' /
    'BC'              37    37     9     9     1    22    'Y' /
    'BC'              38    38     9     9     1    22    'Y' /
    'BC'              39    39     9     9     1    22    'Y' /
    'BC'              40    40     9     9     1    22    'Y' /
.....
/
```

6.3.70 FILEUNIT – ACTIVATE UNIT CONSISTENCY CHECKING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FILEUNIT keyword defines the units of the of the data set, and is used to verify that the units in the input deck and any associated include files are consistent grid data. The keyword does not provide for the conversion between different sets of units.

No.	Name	Description	Default
I	FILEUNIT	A character string that defines the units of the coordinates stated on the MAPAXES keyword, and should be set to: 1) FIELD for field units, 2) METRIC for metric units, or 3) LAB for laboratory units	None
Notes: 1) No unit conversion is performed. 2) The keyword is terminated by a "/".			

Table 6.38: FILEUNIT Keyword Description

OPM Flow's behavior is controllable through the "UNIT_SYSTEM_MISMATCH" environment variable. The default behavior if the check fails (i.e., if one of the INCLUDE files has a unit system different from the main run specification) is to terminate the simulation with an error.

Example

```
--
--      ACTIVATE UNIT CONSISTENCY CHECKING
--
FILEUNIT
      FIELD
      /
```

The above example defines the data set units to be FIELD units.

6.3.71 FLUXNUM – DEFINE THE FLUX REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FLUXNUM keyword defines the flux region numbers for each grid block, as such there must be one entry for each cell in the model. The array is used with the Flux Boundary option to define the various flux regions; however, the Flux Boundary option has not been implemented in OPM Flow. In addition, the array can be used with the EQUALREG, ADDREG, COPYREG, MULTIREG, MULTREGP and MULTREGT keywords in calculating various grid properties in the GRID section. This facility has been implemented in OPM Flow.

No.	Name	Description	Default
I	FLUXNUM	FLUXNUM defines an array of positive integers assigning a grid cell to a particular flux region. The maximum number of flux regions is set by the MXNFLX variable on the REGDIMS keyword in the RUNSPEC section.	I
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/".			

Table 6.39: FLUXNUM Keyword Description

Examples

The example below sets three FLUXNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE FLUXNUM REGIONS FOR ALL CELLS
--
FLUXNUM
    2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
    3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
    FLUXNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
    FLUXNUM      2          1  2    1  2    1  1  / SET REGION 2
    FLUXNUM      3          1  2    1  2    2  2  / SET REGION 3
/
```

6.3.72 FLUXREG – DEFINE ACTIVE FLUX REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FLUXREG is used in conjunction with the USEFLUX keyword in runs with have multiple flux regions, to reduce the number of flux regions, that is the keyword specifies which flux regions are active and which are not in the current run.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.73 FLUXTYPE – DEFINES THE FLUX BOUNDARY TYPE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FLUXTYPE keyword defines the type of flux boundary to be used in the run.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

6.3.74 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be placed at the very top of the input file.

See [FORMFEED – Defined the Print File Form-Feed Character](#) in the GLOBAL section for a full description.

6.3.75 GDFILE – LOAD A GRID FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GDFILE keyword loads a GRID file that contains the structural data for the grid as a set of topological cuboidal cells, and EGRID files that contain structural and property data. Note OPM Flow only supports reading in EGRID files at this time.

No.	Name	Description	Default
1	GRIDFILE	A character string enclosed in quotes that defines the GRID or EGRID file to be read in and be processed by OPM Flow. Again, OPM Flow only supports reading in EGRID files.	None
2	FMTOPT	A defined character string that defines the format of the GRID or EGRID file to be read and should be set to one of the following: 1) FORMATTED: If the file is formatted as ASCII i.e. a text file, as oppose to a binary file. The option can be abbreviated to just the letter F. 2) UNFORMATTED: If the file is in binary format, note this option can be abbreviated to just the letter U. This type of file is operating system dependent, that is a Microsoft Windows generated binary file cannot be read in by a Linux based system unlike formatted files. If the variable FMTOPT is omitted then the default is for binary file input for the commercial simulator; whereas, OPM Flow derives FMTOPT from the file extension (*.EGRID or *.FEGRID), making FMTOPT superfluous.	U
Notes: 1) The keyword is terminated by a “/”.			

Table 6.40: GDFILE Keyword Description

See also the GRIDFILE keyword in the GRID section for exporting the GRID and EGRID files from the current simulation run.

Examples

The first example shown below loads the NOR-OPM-A00-GRID.EGRID file in binary format from the same directory as the data file.

```
--
--      LOAD A GRID FILE
--
GDFILE      'NOR-OPM-A00-GRID.EGRID'      /
```

The next example loads the same EGRID file one directory above from where the data file is located.

```
--
--      LOAD a GRID FILE
--
GDFILE      ' ../NOR-OPM-A00-GRID.EGRID'  /
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.76 GDORIENT - DEFINE GRID ORIENTATION PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the grid orientation parameters for post-processing applications.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.77 GETDATA – LOAD AND ASSIGN DATA ARRAY FROM INIT OR RESTART FILES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GETDATA keyword loads a data array from a previously generated INIT or RESTART file and assigns the loaded array to either same array in the run or another property array.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.78 GRID - DEFINE THE START OF THE GRID SECTION OF KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GRID activation keyword marks the end of the RUNSPEC section and the start of the GRID section that defines the key grid property data for the simulator including the grid structure, porosity, permeability and other relevant grid property data.

There is no data required for this keyword.

Example

```
-- =====
--
-- GRID SECTION
--
-- =====
GRID
```

The above example marks the end of the RUNSPEC section and the start of the GRID section in the OPM Flow data input file.

6.3.79 GRIDFILE – SET THE GRID FILE OUTPUT OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword controls the output of a standard GRID or extended GRID file, as well as the extensible EGRID file for post-processing applications. The extended and extensible GRID formats are comparable; however, the extensible GRID format is more compact and is the only format supported by OPM Flow.

No.	Name	Description	Default
1	NGRID	A positive integer that controls the output of the of the GRID geometry file: 0) - for no GRID file to be written out. 1) - for the standard GRID file to be written out. 2) - for the extended GRID file to be written out. Only the default value of zero is supported.	0
2	NEGRID	A positive integer that controls the output of the of the EGRID geometry file: 0) - for no extensible GRID file to be written out. 1) - for the extensible GRID file to be written out. Only the default value of one is supported.	1
Notes: 1) The keyword is terminated by a "/".			

Table 6.41: GRIDFILE Keyword Description

Example

```
--
--      GRID FILE OUTPUT OPTIONS
--      GRID      EGRID
--      OPTN      OPTN
GRIDFILE
      0          1
```

The above example defines that no GRID file will be written out and that the extensible GRID (that is the EGRID geometry format) file will be produced. This is the only configuration that OPM Flow supports

6.3.80 GRIDUNIT – DEFINE THE GRID UNITS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GRIDUNIT keyword defines the units of the grid data. It is usually output by pre-processing software when exporting the grid geometry. The data is not used by OPM Flow intrinsically, but is merely written to the output EGRID file, as specified by the GRIDFILE keyword, for the use of post-processing software like OPM ResInsight.

No.	Name	Description	Default
1	GRIDUNIT	A character string that defines the units of the coordinates stated on the MAPAXES keyword, and should be set to: 1) FIELD for field units, 2) METRES for metric units, or 3) CM for laboratory units.	METRES
2	MAPOPT	A character string that defines if the grid data are measured relative to the map, or relative to the origin as stated on the MAPAXES keyword. MAPOPT should either be left blank (the default) indicating the origin is relative to the origin on the MAPAXES keyword, or set equal to MAP measured relative to the map.	I*
Notes: 1) Note the alternative spelling METRES, that is METERS is not recognized. 2) The keyword is terminated by a "/".			

Table 6.42: GRIDUNIT Keyword Description

Example

```
--
--      SET THE GRID UNITS FOR THE GRID
--
GRIDUNIT
      METRES
/
```

The above example defines that the GRID units to be metric.

6.3.81 HALFTRAN – ACTIVATE HALF BLOCK TRANSMISSIBILITY CALCULATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HALFTRAN keyword activates the half block transmissibility calculation option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.82 HEATCR – DEFINE RESERVOIR ROCK HEAT CAPACITY FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The HEATCR keyword defines the reservoir rock volumetric heat capacity for all cells for when OPM Flow's thermal calculation is activated by the THERMAL keywords in the RUNSPEC section.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	HEATCR	HEATCR is an array of real positive numbers that define reservoir rock volumetric heat capacity of a grid block. Repeat counts may be used, for example 3000*25.0			None
		Btu/ft ³ /°R	kJ/m ³ /K	J/cm ³ /K	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.43: HEATCR Keyword Description

Note this keyword is incompatible with SPECROCK keyword in the PROPS section.

Example

```
--
--      DEFINE GRID BLOCK RESERVOIR ROCK HEAT CAPACITY
--      FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--      KEYWORD IS INCOMPATIBLE WITH THE SPECROCK KEYWORD
--      (OPM FLOW THERMAL OPTION ONLY)
--
HEATCR      300*32.0      /
```

The above example defines the reservoir rock volumetric heat capacity of 32.0 for each cell in the 300 grid block model.

6.3.83 HEATCRT – DEFINE RESERVOIR ROCK HEAT CAPACITY TEMPERATURE DEPENDENCE FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The HEATCRT keyword defines the reservoir rock volumetric heat capacity temperature dependence for all cells for when OPM Flow's thermal calculation is activated by the THERMAL keywords in the RUNSPEC section.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	HEATCRT	HEATCRT is an array of real positive numbers that define reservoir rock volumetric heat capacity temperature dependence of a grid block. Repeat counts may be used, for example 3000*0.05			None
		Btu/ft ³ /°R ²	kJ/m ³ /K ²	J/cm ³ /K ²	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a “/”.					

Table 6.44: HEATCRT Keyword Description

Note this keyword is incompatible with SPECROCK keyword in the PROPS section.

The data for this keyword and the HEATCR keyword are use to calculate the reservoir rock volumetric heat capacity temperature dependence using the following relationship:

$$\text{Heat Capacity of Rock} = \text{HEATCR} (Temp - Temp_{ref}) + \frac{\text{HEATCRT} (Temp - Temp_{ref})^2}{2} \quad (6.3)$$

Example

```
--
--      DEFINE RESERVOIR ROCK HEAT CAPACITY TEMPERATURE DEPENDENCE
--      FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--      KEYWORD IS INCOMPATIBLE WITH THE SPECROCK KEYWORD
--      (OPM FLOW THERMAL OPTION ONLY)
--
HEATCRT
      300*0.05
```

The above example defines the reservoir rock volumetric heat capacity temperature dependence of 0.05 for each cell in the 300 grid block model.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.84 HMAQUNUM - HISTORY MATCH NUMERICAL AQUIFER GRADIENT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMAQUNUM keyword defines the history match numerical aquifer gradient parameters for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section, and numerical aquifers have been specified in the model via the AQUNUM keyword and connected to the grid using AQUCON keyword. All keywords are in the GRID section.

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of aquifers that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.85 HMFAULTS – HISTORY MATCH FAULT GRADIENT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMFAULTS keyword defines the history match faults gradient parameters for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section, and for when the FAULTS keyword in the GRID section has been used to define faults in the model.

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of faults that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.86 HMMLAQUN – HISTORY MATCH NUMERICAL AQUIFER GRADIENT MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMMLAQUN keyword defines the history match numerical aquifer gradient multipliers for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section, and numerical aquifers have been specified in the model via the AQUNUM keyword and connected to the grid using the AQUCON keyword. All keywords are in the GRID section.

Multipliers can be declared for numerical aquifers' pore volume, permeability, and aquifer to grid connection factors.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.87 HMMLT – HISTORY MATCH GRID PERMEABILITY GRADIENT CUMULATIVE MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMMLT series of keywords defines the history match gradient cumulative permeability multipliers, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The keyword consists of the first five characters of “HMMLT” followed by a two or three character string shown in Table 6.45, that determines the permeability direction, for example, HMMLTPX.

This keyword is ignored by OPM Flow and has no effect on the simulation.

Mnemonic	Cartesian Grid		Radial Grid	
	Grid Keyword	HMMULT Keyword	Grid Keyword	HMMULT Keyword
PX/PR	PERMX	HMMLTPX	PERMR	HMMLTPR
PXY	PERMXY	HMMLTPXY		
PY/THT	PERMY	HMMLTPY	PERMTHT	HMMLTTH
PZ	PERMZ	HMMLTPZ	PERMZ	HMMLTPZ

Table 6.45: HMMLT Keyword List

See also the HMMULT keyword in the EDIT section

6.3.88 HMMMREGT - HISTORY MATCH REGION TRANSMISSIBILITY GRADIENT CUMULATIVE MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMMMREGT keyword multiplies the transmissibility between two regions by a constant, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The constant should be a real number. Unlike the MULTREGT keyword in the GRID section, the HMMMREGT keyword modifications are cumulative.

Note that the HMMMREGT keyword only declares the two regions and the multiplier between those regions, the transmissibility direction (DIR on the MULTREGT keyword), type of transmissibility multiplier (TYPE on the MULTREGT keyword), and the region number array to use (ARRAY on the MULTREGT keyword), are all taken from the MULTREGY keyword. For example, the region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGT keyword is read by the simulator, and before the HMMMREGT keyword is used.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.89 HMMULRGT – HISTORY MATCH REGION TRANSMISSIBILITY PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HMMULRGT defines the transmissibility between two regions gradient parameters, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of gradient regions that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.90 HMMULTFT – HISTORY MATCH FAULT TRANSMISSIBILITY GRADIENT CUMULATIVE MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HMMULTFT defines the history match fault transmissibility gradient cumulative multipliers to be applied to the fault transmissibilities for faults declared by the FAULT keyword in the GRID section, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The keyword allows for the re-scaling of the existing fault transmissibilities calculated by OPM Flow, or if the MULTFLT keyword has been entered, then HMMULTFT is applied to the existing MULTFLT multipliers.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.91 HMMULTSG – HISTORY MATCH DUAL POROSITY SIGMA GRADIENT CUMULATIVE MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HMMULTSG defines the history match dual porosity sigma parameter gradient cumulative multipliers applied to the dual porosity sigma value declared by the SIGMAV and SIGMAGDV keywords in the PROPS section, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. In addition to the HMDIMS keyword, either the DUALPERM keyword that activates the Dual Permeability option, or the DUALPORO keyword that activates the Dual Porosity option for the run, must be declared in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.92 HRFIN - DEFINE THE RATIO OF LGR GRID BLOCKS IN THE R-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

HRFIN⁶² defines the ratio of grid blocks for the DRV keyword in the r-direction via a vector within a Local Grid Refinement ("LGR") as opposed to defining the size for each cell for a Radial LGR Grid. The LGR keyword in the RUNSPEC section should be activated to indicate an LGR is being used, and the keyword HRFIN should be placed in between the RADIN (or RAFFIN4) and ENDFIN keywords in the GRID section. The DRV keyword in the GRID section defines the radial grid size in terms of the length, that is feet for field units, this keyword defines the length as the ratio of the previous cell size, starting with the inner radius (INRAD).

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	HRFIN	HRFIN is a vector of real numbers describing the ratio of cell size for the grid blocks in the r-direction in a radial LGR for the DRV keyword. Repeat counts may be used, for example 2*1.5.			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) The number of entries should correspond to the <u>NR parameter minus one</u> on the RADFIN or RADFIN4 keywords in the GRID section 2) The keyword is terminated by a “/”.					

Table 6.46: HRFIN Keyword Description

See also the DR, DRV, DTHETAV, and DZ keywords in the GRID section to fully define a radial LGR model.

Example

```
--
--      INNER RADIUS OF FIRST GRID BLOCK IN THE RADIAL DIRECTION
--
INRAD    0.25
--
--      DEFINE GRID BLOCK DRV RATIOS IN THE R DIRECTION
--
HRFIN
      1.50  2.00  3.00  5.00  7.00  10.00
--
```

The above example defines the size of the cells in the R direction based on NR equals 7, resulting in NR-I values on the RADFIN keyword in the GRID section. Note the INRAD keyword to define the inner radius of the radial grid.

⁶² Radial grids are not currently implemented in this version of OPM Flow, but is expected to be incorporated in a future release.

6.3.93 HXFIN - DEFINE THE RATIO OF LGR GRID BLOCKS IN THE X-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HXFIN defines the split ratio of grid blocks for the DXV keyword in the x-direction via a vector within a Local Grid Refinement ("LGR") as opposed to defining the size for each cell for a Cartesian LGR Grid. The LGR keyword in the RUNSPEC section should be activated to indicate an LGR is being used, and the keyword HXFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section. The DXV keyword in the GRID section defines the grid size in terms of the length, that is feet for field units, this keyword defines the length as the ratio of the coarse cells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	HXFIN	HXFIN is a vector of real numbers describing the ratio of cell size for the grid blocks in the x-direction in a Cartesian LGR grid. Repeat counts may be used, for example 2*2.0.			None
		dimensionless	dimensionless	dimensionless	

Notes:

1) The number of entries should correspond to the NX parameter on the CARFIN keyword in the GRID section.

2) The keyword is terminated by a “/”.

Table 6.47: HXFIN Keyword Description

See also the CARFIN, ENDFIN, HYFIN, and HZFIN keywords in the GRID section to fully define a Cartesian LGR grid model.

Example

```
--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- HOST GRID -----  -- CARFIN GRID --  MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS  NAME
CARFIN
      LGR-OP01    24  25  86  87   1  50        5       3      50       1     GLOBAL /
--
--      DEFINE LGR GRID BLOCK IN THE X-DIRECTION
NXFIN
      3  2                                              /
--
--      DEFINE GRID BLOCK LGR RATIOS IN THE X-DIRECTION
--
HXFIN
      1.00  2.00  3.00  2.00  1.00                                              /
ENDFIN
```

The above example defines the size of the cells in the x-direction based on NX equals five on the CARFIN keyword in the GRID section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.94 HYFIN - DEFINE THE RATIO OF LGR GRID BLOCKS IN THE Y-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

HYFIN defines the split ratio of grid blocks for the DYV keyword in the y-direction via a vector within a Local Grid Refinement ("LGR") as opposed to defining the size for each cell for a Cartesian LGR Grid. The LGR keyword in the RUNSPEC section should be activated to indicate an LGR is being used, and the keyword HYFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section. The DYV keyword in the GRID section defines the grid size in terms of the length, that is feet for field units, this keyword defines the length as the ratio of the coarse cells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	HYFIN	HYFIN is a vector of real numbers describing the ratio of cell size for the grid blocks in the y-direction in a Cartesian LGR grid. Repeat counts may be used, for example 2*2.0.			None
		dimensionless	dimensionless	dimensionless	

Notes:

1)

The number of entries should correspond to the NY parameter on the CARFIN keyword in the GRID section.

2)

The keyword is terminated by a “/”.

Table 6.48: HYFIN Keyword Description

See also the CARFIN, ENDFIN, HXFIN, and HZFIN keywords in the GRID section to fully define a Cartesian LGR grid model.

Example

```
--
-- CARFIN LGR GRID COMMANDS
--
-- LGR      ----- HOST GRID -----  -- CARFIN GRID --  MAX  HOST
-- NAME      I1  I2  J1  J2  K1  K2      NX   NY   NZ   WELLS  NAME
CARFIN
  LGR-OP01   24  25  86  87   1  50      3    5   50    1    GLOBAL /
--
-- DEFINE LGR GRID BLOCK IN THE Y-DIRECTION
NYFIN
  3  2                                           /
--
-- DEFINE GRID BLOCK LGR RATIOS IN THE Y-DIRECTION
--
HYFIN
  1.00  2.00  3.00  2.00  1.00                                           /
ENDFIN
```

The above example defines the size of the cells in the y-direction based on NY equals five on the CARFIN keyword in the GRID section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.95 HZFIN - DEFINE THE RATIO OF LGR GRID BLOCKS IN THE Z-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

HZFIN defines the split ratio of grid blocks for the DZV keyword in the z-direction via a vector within a Local Grid Refinement ("LGR") as opposed to defining the size for each cell for a Cartesian LGR Grid. The LGR keyword in the RUNSPEC section should be activated to indicate an LGR is being used, and the keyword HYFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section. The DZV keyword in the GRID section defines the grid size in terms of the length, that is feet for field units, this keyword defines the length as the ratio of the coarse cells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	HZIN	HZFIN is a vector of real numbers describing the ratio of cell size for the grid blocks in the z-direction in a Cartesian LGR grid. Repeat counts may be used, for example 2*2.0.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NZ parameter on the CARFIN keyword in the GRID section.
- 2) The keyword is terminated by a “/”.

Table 6.49: HZFIN Keyword Description

See also the CARFIN, ENDFIN, HXFIN, and HYFIN keywords in the GRID section to fully define a Cartesian LGR grid model.

Example

```
--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- HOST GRID -----  -- CARFIN GRID --  MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS  NAME
CARFIN
      LGR-OP01    24  25  86  87   1  50        5       3    100     1    GLOBAL /
--
--      DEFINE LGR GRID BLOCK IN THE Z-DIRECTION
NZFIN
      50*2
--
--      DEFINE GRID BLOCK LGR RATIOS IN THE Z-DIRECTION
--
HZFIN
      50*2.0
--
ENDFIN
```

The above example defines the size of the cells in the z-direction based on NZ equals 100 on the CARFIN keyword in the GRID section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.96 IHOST – ASSIGN LGRs TO PARALLEL PROCESS NUMBER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The IHOST keyword assigns Local Grid Refinements (“LGR”) to a parallel process number, for when the PARALLEL keyword has been invoked in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.97 IMPORT – IMPORT GRID FILE DATA AT THE CURRENT POSITION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The IMPORT keyword informs the simulator to import data from the specified IMPORT file. When the end of the IMPORT file is reached, input data is read from the next keyword in the current file. Normally IMPORT files are generated by grid pre-processing software and the keyword allows for both formatted and unformatted (binary) files to be loaded. The keyword can be used to import any valid grid arrays within a section, for example the EQLNUM array in the REGIONS section

No.	Name	Description	Default
1	FILENAME	A character string enclosed in quotes that defines a file to be imported and to be processed by OPM Flow.	None
2	FMTOPT	<p>A defined character string that defines the format of the file to be imported and should be set to one of the following:</p> <p>1 : FORMATTED: If the file is formatted as ASCII i.e. a text file, as oppose to a binary file. The option can be abbreviated to just the letter F.</p> <p>2 : UNFORMATTED: If the file is in binary format, note this option can be abbreviated to just the letter U. This type of file is operating system dependent, that is a Microsoft Windows generated binary file cannot be read in by a Linux based system unlike formatted files.</p> <p><u>If the variable FMTOPT is omitted then the default is for binary file input.</u></p>	U
Notes: 1) The keyword is terminated by a "/".			

Table 6.50: IMPORT Keyword Description

Examples

The first example shown below loads the grid file from the same directory as the data file.

```
--
--      LOAD A IMPORT FILE
--
IMPORT      'NOR-OPM-A00-GRID.EGRID'  /
```

The next example loads the same file one directory above from where the data file is located.

```
--
--      LOAD A IMPORT FILE
--
IMPORT      ' ../NOR-OPM-A00-GRID.EGRID'  /
```

The final example loads the same file from a separate include from where the data file is located.

```
--
--      LOAD A IMPORT FILE
--
IMPORT      ' ../INCLUDE/NOR-OPM-A00-GRID.EGRID'  /
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.98 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file.

See [INCLUDE – Load Another Data File at the Current Position](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.99 INIT – ACTIVATE THE INIT FILE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword switches on the writing of the INIT file that contains the static data specified in the GRID, PROPS and REGIONS sections. For example, the PORO, PERM and NTG arrays from the GRID section. The data is used in post-processing software, for example OPM ResInsight, to visualize the static grid properties.

The INIT file can either be written out in formatted form as ASCII i.e. text files, if the FMTOUT keyword has been activated, or binary format if the FMTOUT keyword has not been activated. Normally, this option is always activated by the user and when activated the binary form of the file is used.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE WRITING THE INIT FILE FOR POST-PROCESSING
INIT
```

The above example switches on the writing of the INIT file for post-processing in ResInsight.

6.3.100 INRAD – DEFINE THE INNER RADIUS OF A RADIAL GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

INRAD defines the inner radius of the reservoir model for a radial grid geometry. The RADIAL or SPIDER keyword in the RUNSPEC should be activated to indicate that radial geometry is being used.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	INRAD	A single real positive number defining the inner radius of a radial grid.			None
		feet	m	cm	
Notes: I) The keyword is terminated by a “/”.					

Table 6.51: INRAD Keyword Description

Note that the SPIDER keyword activates OPM Flow's radial grid geometry option for the model. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID the section. A spider grid can be viewed in 3D in OPM ResInsight unlike radial grids that cannot be viewed in the software. To overcome this, the simulator now converts radial grids to Irregular Corner-Point Grids and adjusts the model's pore volume to reflect radial coordinates; thus, overcoming the display limitation.

See also the DR, DRV, DTHETA, DTHETAV and TOPS keywords to fully define a radial or spider grid in the model.

Example

```
--
--      INNER RADIUS OF FIRST GRID BLOCK IN THE RADIAL DIRECTION
--
INRAD      0.25      /
```

The above example defines the inner radius of a radial grid to be 0.25 feet.

6.3.101 IONROCK – DEFINE THE ION EXCHANGE CAPACITY FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The IONROCK keyword defines the ion exchange capacity for all the cells in the model, for when the brine phase has been activated by the BRINE keyword and the Multi-Component Brine model, that allows for the water phase to have multiple water salinities, has been activated by the ECLMC keyword. Both keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.102 ISOLNUM – DEFINE THE INDEPENDENT RESERVOIR REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ISOLNUM keyword defines areas of the grid that consists of isolated reservoirs where the only form of communication between the reservoirs is via wellbore connections. This enables the reservoir flow equations to be solved independently for greater computational efficiency.

No.	Name	Description	Default
I	ISOLNUM	ISOLNUM defines an array of positive integers assigning a grid cell to a particular isolated reservoir region. The maximum number of ISOLNUM regions is set by the NRFREG variable on the REGDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) Setting ISOLNUM for a cell to zero makes the cell inactive. 3) The keyword is terminated by a "/". 			

Table 6.52: ISOLNUM Keyword Description

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

The example below defines three separate independent reservoirs; the first reservoir covers the whole grid and layers 1 to 50, reservoir two cover the whole grid and layers 52 to 150, and finally the third reservoir again covers the whole grid but with layers 152 to 300. The layers 51 and 151 are shale layers made inactive by setting ISOLNUM to zero.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      ISOLNUM      1              1*  1*   1*  1*   1  50 / DEFINED RESERVOIR 1
      ISOLNUM      0              1*  1*   1*  1*   51 51 / DEFINED A SHALE
      ISOLNUM      2              1*  1*   1*  1*   52 150 / DEFINED RESERVOIR 2
      ISOLNUM      0              1*  1*   1*  1*  151 151 / DEFINED A SHALE
      ISOLNUM      3              1*  1*   1*  1*  152 300 / DEFINED RESERVOIR 3
/
```

Note the above example has no effect as the keyword is ignored by the simulator.

6.3.103 JFUNC - ACTIVATE THE LEVERETT J-FUNCTION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

JFUNC keyword activates Leverett-J-Function⁶³ option which is a commonly used technique to normalize capillary pressure base on laboratory measured core plugs porosity and permeability values and the resulting capillary pressure data. The keyword performs the calculation based on the parameters on the this keyword combined with a cells porosity and permeability to perform the scaling globally.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	JFOPT	A character string that defines which capillary data sets the J-Function option should be applied to, based on the following options: 1) WATER: apply the J-Function option to the water-oil capillary pressure data only. 2) GAS: apply the J-Function option to the gas-oil capillary pressure data only. 3) BOTH: apply the J-Function option to the water-oil and the gas-oil capillary pressure data.			BOTH
2	OWSTEN	A positive real number that defines oil-water surface tension used to de-normalized J-Function data entered in the PROPS section.			None
		dynes/cm	dynes/cm	dynes/cm	
3	OGSTEN	A positive real number that defines oil-gas surface tension used to de-normalized J-Function data entered in the PROPS section.			None
		dynes/cm	dynes/cm	dynes/cm	
4	ALPHA	A positive real value that defines an alternative power value for the porosity term in the J-Function equation, that is instead of $\sqrt{\frac{k}{\phi}}$ use $\frac{k^{0.5}}{\phi^\alpha}$ instead in the transformation.			0.5
5	BETA	A positive real number that defines an alternative power value for the permeability term in the J-Function equation, that is instead of $\sqrt{\frac{k}{\phi}}$ use $\frac{k^\beta}{\phi^{0.5}}$ instead in the transformation.			0.5

⁶³ Leverett, M. C.; "Capillary Behaviour in Porous Solids", Trans. AIME (1941) 142, 152-168.

No.	Name	Description			Default
		Field	Metric	Laboratory	
6	PERM	PERM is a character string that sets the permeability array to be used in the transform, based on the following options: <div><div>1)</div>X: use the PERMX array. <div>2)</div>XY: use the average of the PERMX and PERMY arrays. <div>3)</div>Y: use the PERMY array. <div>4)</div>Z: use the PERMZ array. <div>5)</div>U: use the PERMJFUN array</div>			XY
Notes: <div><div>1)</div> The keyword is terminated by a “/”.</div>					

Table 6.53: JFUNC Keyword Description

Just like the relative permeability data capillary pressure data are measured on core plugs with varying quality and perhaps from different reservoirs. It is therefore necessary to determine averaged data, before employing the data in engineering calculations. This is commonly done by using the Leverett J-function⁶⁴, which is defined as:

$$J(S_w) = \frac{P_{c, res}(S_w) \sqrt{\frac{k}{\phi}}}{\sigma} \quad (6.4)$$

Where:

$J(S_w)$	= dimensionless function of water saturation
$P_c(S_w)$	= capillary pressure (kPa)
k	= permeability, (m ²)
ϕ	= porosity (fraction)
σ	= interfacial tension (mN/m)
Θ	= contact angle

Sometimes the equation is stated with the $\cos \Theta$ term included, that is:

$$J(S_w) = \frac{P_{c, res}(S_w) \sqrt{\frac{k}{\phi}}}{\sigma \cos \Theta} \quad (6.5)$$

Since the above function is just a normalizing function, then units are not important, as long as when we de-normalize the *average* curve we use the same unit set. Secondly, if all the capillary pressure data has been converted to reservoir conditions, we actually ignore the denominator as it is a constant, and we can therefore just use:

$$J(S_w) = P_{c, res}(S_w) \sqrt{\frac{k}{\phi}} \quad (6.6)$$

⁶⁴ Leverett, M. C.; "Capillary Behaviour in Porous Solids", Trans. AIME (1941) 142, 152-168.

However, in the simulator it is necessary to use the formal definition as outlined in equation (6.4). In addition to the standard the equation the keyword allows for de-normalizing the curve to use alternative power functions instead of the standard 0.5 used in equation (6.4), that is:

$$J(S_w) = \frac{P_{c, res}(S_w) \left(\frac{k^\beta}{\phi^\alpha} \right)}{\sigma} \quad (6.7)$$

Where:

$J(S_w)$	= dimensionless function of water saturation
$P_c(S_w)$	= capillary pressure (kPa)
k	= permeability, (m ²)
ϕ	= porosity (fraction)
σ	= interfacial tension (mN/m)
Θ	= contact angle
α	= porosity power value
β	= permeability value

The JFUNC keyword allows the data entered as capillary pressure in the saturation tables, for example, by using the SGFN and SWFN keywords in the PROPS section to be treated as J-functions instead, and to de-normalize these curves for each active cell in the model using the options and values defined with the JFUNC keyword combined with a cells porosity and permeability values.

Note

If either the JFUNC or JFUNCR keywords are used to activate J-Function scaling then the capillary pressure data entered on the SWFN, SGFN or the SWOF, SGOF, SLGOF keywords, should be replaced by dimensionless J-function values.

See also the JFUNCR keyword in the GRID section that performs similar calculations based on the saturation tables.

Example

```
--
--      DEFINE LEVERETT J-FUNCTION PARAMETERS
--      JFUN      OILWAT  GASOIL  PORO    PERM    PERM
--      OPTN      SDENS   SDEN    ALPHA   BETA    OPTN
JFUNC
      WATER      22.5     1*      0.5     0.5     XY      /
```

The above example results in the oil-water capillary pressure data entered on the SWFN keyword in the PROPS section being treated as J-Functions, and that the J-Function should be de-normalized using an oil-water surface density of 22.5 dynes/cm, using the default power values and the average of the PERMX and PERMY values for each grid block.

6.3.104 JFUNC - ACTIVATE THE LEVERETT J-FUNCTION SATURATION TABLE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

JFUNC keyword activates Leverett-J-Function⁶⁵ Saturation Table option which is a commonly used technique to normalize capillary pressure base on laboratory measured core plugs porosity and permeability values and the resulting capillary pressure data. This keyword is an extension of the JFUNC keyword in the GRID section that uses the parameters on the JFUNC keyword combined with a cells porosity and permeability to perform the scaling globally. In comparison, the JFUNC allows for the J-Function parameters to be declared per saturation table number, resulting in greater flexibility.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness. See the JFUNC keyword in the GRID section to activate J-Function scaling based on global parameters.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	JFOPT	A character string that defines which capillary data sets the J-Function option should be applied to, based on the following options: 1) WATER: apply the J-Function option to the water-oil capillary pressure data only. 2) GAS: apply the J-Function option to the gas-oil capillary pressure data only. 3) BOTH: apply the J-Function option to the water-oil and the gas-oil capillary pressure data.			BOTH
2	OWSTEN	A positive real number that defines oil-water surface tension used to de-normalized J-Function data entered in the PROPS section. dynes/cm dynes/cm dynes/cm			None
3	OGSTEN	A positive real number that defines oil-gas surface tension used to de-normalized J-Function data entered in the PROPS section. dynes/cm dynes/cm dynes/cm			None
4	ALPHA	A positive real value that defines an alternative power value for the porosity term in the J-Function equation, that is instead of $\sqrt{\frac{k}{\phi}}$ use $\frac{k^{0.5}}{\phi^\alpha}$ instead in the transformation.			0.5
5	BETA	A positive real number that defines an alternative power value for the permeability term in the J-Function equation, that is instead of $\sqrt{\frac{k}{\phi}}$ use $\frac{k^\beta}{\phi^{0.5}}$ instead in the transformation.			0.5

⁶⁵ Leverett, M. C.; "Capillary Behaviour in Porous Solids", Trans. AIME (1941) 142, 152-168.

No.	Name	Description			Default
		Field	Metric	Laboratory	
6	PERM	PERM is a character string that sets the permeability array to be used in the transform, based on the following options: 1) X: use the PERMX array. 2) XY: use the average of the PERMX and PERMY arrays. 3) Y: use the PERMY array. 4) Z: use the PERMZ array. 5) U: use the PERMJFUN array			XY

Notes:

- 1) The keyword is followed by exactly NTSFUN rows of data, as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each row is terminated by a “/” and there is no “/” terminator for the keyword.

Table 6.54: JFUNCR Keyword Description

Just like the relative permeability data capillary pressure data are measured on core plugs with varying quality and perhaps from different reservoirs. It is therefore necessary to determine averaged data, before employing the data in engineering calculations. This is commonly done by using the Leverett J-function⁶⁶, which is defined as:

$$J(S_w) = \frac{P_{c, res}(S_w) \sqrt{\frac{k}{\phi}}}{\sigma} \quad (6.8)$$

Where:

$J(S_w)$	= dimensionless function of water saturation
$P_c(S_w)$	= capillary pressure (kPa)
k	= permeability, (m ²)
ϕ	= porosity (fraction)
σ	= interfacial tension (mN/m)
Θ	= contact angle

Sometimes the equation is stated with the $\cos \theta$ term included, that is:

$$J(S_w) = \frac{P_{c, res}(S_w) \sqrt{\frac{k}{\phi}}}{\sigma \cos \Theta} \quad (6.9)$$

Since the above function is just a normalizing function, then units are not important, as long as when we de-normalize the *average* curve we use the same unit set. Secondly, if all the capillary pressure data has been converted to reservoir conditions, we actually ignore the denominator as it is a constant, and we can therefore just use:

$$J(S_w) = P_{c, res}(S_w) \sqrt{\frac{k}{\phi}} \quad (6.10)$$

⁶⁶ Leverett, M. C.; "Capillary Behaviour in Porous Solids", Trans. AIME (1941) 142, 152-168.

However, in the simulator it is necessary to use the formal definition as outlined in equation (6.8). In addition to the standard the equation the keyword allows for de-normalizing the curve to use alternative power functions instead of the standard 0.5 used in equation (6.8), that is:

$$J(S_w) = \frac{P_{c, res}(S_w) \left(\frac{k^\beta}{\phi^\alpha} \right)}{\sigma} \quad (6.11)$$

Where:

$J(S_w)$	=	dimensionless function of water saturation
$P_c(S_w)$	=	capillary pressure (kPa)
k	=	permeability, (m ²)
ϕ	=	porosity (fraction)
σ	=	interfacial tension (mN/m)
Θ	=	contact angle
α	=	porosity power value
β	=	permeability value

The JFUNC keyword allows the data entered as capillary pressure in the saturation tables, for example, by using the SGFN and SWFN keywords in the PROPS section to be treated as J-functions instead, and to de-normalize these curves for each active cell in the model using the options and values defined with the JFUNC keyword combined with a cells porosity and permeability values.

Note

If either the JFUNC or JFUNCRC keywords are used to activate J-Function scaling then the capillary pressure data entered on the SWFN, SGFN or the SWOF, SGOF, SLGOF keywords, should be replaced by dimensionless J-function values.

Example

The example below assumes NTSFUN is equal to five on the TABDIMS keyword in the RUNSPEC section.

```
--
--      DEFINE LEVERETT J-FUNCTION PARAMETERS BY SATURATION TABLES
--      JFUN      OILWAT  GASOIL  PORO    PERM    PERM
--      OPTN      SDENS   SDEN    ALPHA   BETA    OPTN
JFUNCRC
      WATER      22.5    1*      0.5     0.5     XY      /
      WATER      22.5    1*      0.5     0.5     XY      /
      WATER      22.5    1*      0.5     0.5     XY      /
      WATER      22.5    1*      0.5     0.5     XY      /
      WATER      22.5    1*      0.5     0.5     XY      /
```

Here the oil-water capillary pressure data entered on the SWFN keyword in the PROPS section are treated as J-Functions, and that the J-Function should be de-normalized using an oil-water surface density of 22.5 dynes/cm, using the default power values and the average of the PERMX and PERMY values for each grid block, for all five tables. Note that since all the JFUNCRC parameters are the same for all saturation tables then the JFUNC keyword could be used instead in this instance.

6.3.105 LGRCOPY – ACTIVATE LOCAL GRID REFINEMENT INHERITANCE

The LGRCOPY keyword activates Local Grid Refinement (“LGR”) Inheritance option that allows the LGR to inherit the properties of the global or host cell containing a LGR grid block at the start of the GRID section, as oppose to the normal process of applying this transform at the end of the GRID section. LGRCOPY can be used in the RUNSPEC, GRID and EDIT sections. If used in the RUNSPEC section then the option is applied to all LGRs defined in the input file, whereas if used in the GRID and EDIT sections the keyword must be placed inside a LGR definition section, that is between a CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) and the ENDFIN keyword. In the latter case inheritance is applied on an individual LGR basis.

See [LGRCOPY – Activate Local Grid Refinement Inheritance](#) in the RUNSPEC section for a full description.

6.3.106 LINKPERM - ASSIGN CELL PERMEABILITIES TO CELL FACES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LINKPERM keyword assigns the grid cell permeabilities entered via the PERMX, PERMY and PERMZ keywords to a cell face ($I\pm$, $J\pm$, or $K\pm$) and results in the simulator using these values directly in the calculating the transmissibility between grid blocks. This is different to the conventional way of entering permeability data that consists of entering the cell centered permeability and the simulator calculating a weighted average transmissibility based on the cell centered permeability of the up-stream and down-stream grid blocks.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.107 LTOSIGMA - DUAL POROSITY VISCOUS DISPLACEMENT SIGMA PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LTOSIGMA keyword defines parameters to calculate the sigma factor in conjunction with the data entered via the LX, LY and LZ keywords in the GRID section, for when the VISCD keyword has been used in the RUNSPEC section to activate the Dual Porosity Viscous Displacement option. In addition, either the DUALPORO or DUALPERM keyword should be entered in the RUNSPEC section to activate the dual porosity or dual permeability models.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.108 LX - DUAL POROSITY VISCOUS DISPLACEMENT X DIRECTION MATRIX SIZE FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LX keyword defines the size of “representative” matrix grid blocks in the X direction via an array in dual porosity and dual permeability runs, for when the VISCD keyword has been used in the RUNSPEC section to activate the dual porosity viscous displacement option. In addition, either the DUALPORO or DUALPERM keyword should be entered in the RUNSPEC section to activate the dual porosity or dual permeability models. The VISCD option is used to model the viscous displacement of fluids from the matrix by the fracture pressure gradient, for when the fracture system has a more moderate permeability, and flow to and from the matrix caused by the fracture pressure gradient acts as an additional production mechanism.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	LX	LX is an array of real numbers describing the “representative” cell size in the X direction for each cell in the model. Repeat counts may be used, for example 10*100.0.			0
		feet	m	cm	

Notes:

- 1) The number of entries should correspond to the NX x NY x (NZ/2) parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.55: LX Keyword Description

If the VISCD keyword has been used to activate the Dual Porosity Viscous Displacement option and LX has not been specified then LX is set to zero in the calculation of the viscous displacement term. See also the LY, LZ and LTOSIGMA keywords in the GRID section.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   1                      / DEFINE BOX AREA
--
--      DEFINE DUAL POROSITY VISCOUS DISPLACEMENT X DIRECTION MATRIX SIZE
--
LX      6*10.0                      /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a subset of the grid and the size of the “representative” matrix cells in the X direction to 10.0 ft.; after which the ENDBOX keyword resets the input to be the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.109 LXFIN – DEFINE LOGARITHMIC LGR GRID BLOCK SPACING IN THE X-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LXFIN keyword defines the parameters for automatically generating a Local Grid Refinement (“LGR”) grid in the X direction based on logarithmic block spacing, for when the LGR option has been activated by the LGR keyword in the RUNSPEC section. LXFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.110 LY - DUAL POROSITY VISCOUS DISPLACEMENT Y DIRECTION MATRIX SIZE FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LY keyword defines the size of “representative” matrix grid blocks in the Y direction via an array in dual porosity and dual permeability runs, for when the VISCD keyword has been used in the RUNSPEC section to activate the dual porosity viscous displacement option. In addition, either the DUALPORO or DUALPERM keyword should be entered in the RUNSPEC section to activate the dual porosity or dual permeability models. The VISCD option is used to model the viscous displacement of fluids from the matrix by the fracture pressure gradient, for when the fracture system has a more moderate permeability, and flow to and from the matrix caused by the fracture pressure gradient acts as an additional production mechanism.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	LY	LY is an array of real numbers describing the “representative” cell size in the Y direction for each cell in the model. Repeat counts may be used, for example 10*100.0.			0
		feet	m	cm	

Notes:

- 1) The number of entries should correspond to the NX x NY x (NZ/2) parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.56: LY Keyword Description

If the VISCD keyword has been used to activate the Dual Porosity Viscous Displacement option and LY has not been specified then LY is set to zero in the calculation of the viscous displacement term.

See also the LX, LZ and LTOSIGMA keywords in the GRID section.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX
--      10  10   1   6   1   1                                / DEFINE BOX AREA
--
--      DEFINE DUAL POROSITY VISCOUS DISPLACEMENT Y DIRECTION MATRIX SIZE
--
LY
--      6*15.0                                                    /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a subset of the grid and the size of the “representative” matrix cells in the Y direction to 15.0 ft.; after which the ENDBOX keyword resets the input to be the full grid.

6.3.111 LYFIN – DEFINE LOGARITHMIC LGR GRID BLOCK SPACING IN THE Y-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LYFIN keyword defines the parameters for automatically generating a Local Grid Refinement (“LGR”) grid in the Y direction based on logarithmic block spacing, for when the LGR option has been activated by the LGR keyword in the RUNSPEC section. LYFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.112 LZ - DUAL POROSITY VISCOUS DISPLACEMENT Z DIRECTION MATRIX SIZE FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LZ keyword defines the size of “representative” matrix grid blocks in the Z direction via an array in dual porosity and dual permeability runs, for when the VISCD keyword has been used in the RUNSPEC section to activate the dual porosity viscous displacement option. In addition, either the DUALPORO or DUALPERM keyword should be entered in the RUNSPEC section to activate the dual porosity or dual permeability models. The VISCD option is used to model the viscous displacement of fluids from the matrix by the fracture pressure gradient, for when the fracture system has a more moderate permeability, and flow to and from the matrix caused by the fracture pressure gradient acts as an additional production mechanism.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	LZ	LZ is an array of real numbers describing the “representative” cell size in the Z direction for each cell in the model. Repeat counts may be used, for example 10*100.0.			0
		feet	m	cm	

Notes:

- 1) The number of entries should correspond to the NX x NY x (NZ/2) parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.57: LZ Keyword Description

If the VISCD keyword has been used to activate the Dual Porosity Viscous Displacement option and LZ has not been specified then LZ is set to zero in the calculation of the viscous displacement term.

See also the LX, LY and LTOSIGMA keywords in the GRID section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   1                      / DEFINE BOX AREA
--
--      DEFINE DUAL POROSITY VISCOUS DISPLACEMENT Z DIRECTION MATRIX SIZE
--
LZ
      6*3.0                      /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The example defines a subset of the grid and the size of the “representative” matrix cells in the Y direction to 15.0 ft.; after which the ENDBOX keyword resets the input to be the full grid.

6.3.113 LZFIN – DEFINE LOGARITHMIC LGR GRID BLOCK SPACING IN THE Z-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LZFIN keyword defines the parameters for automatically generating a Local Grid Refinement (“LGR”) grid in the Z direction based on logarithmic block spacing, for when the LGR option has been activated by the LGR keyword in the RUNSPEC section. LZFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.114 MAPAXES - DEFINE THE MAP ORIGIN INPUT DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

MAPAXES specifies the origin of the map used to create the grid. It is usually output by pre-processing software when exporting the grid geometry. The data is not used by OPM Flow intrinsically, but is merely written to the output EGRID file, as specified by the GRIDFILE keyword, for the use of post-processing software like OPM ResInsight.

No.	Name	Description			Default
		Field (feet)	Metric (metres)	Laboratory (metres)	
1	X1	X1 is a real number that defines the x co-ordinate of a point on the y-axis.			None
2	Y1	Y1 is a real number that defines the y co-ordinate of a point on the y-axis.			None
3	X2	X2 is a real number that defines the x co-ordinate of the origin.			None
4	Y2	Y2 is a real number that defines the y co-ordinate of the origin.			None
5	X3	X3 is a real number that defines the x co-ordinate of a point on the x-axis.			None
6	Y3	Y3 is a real number that defines the y co-ordinate of a point on the x-axis.			None
Notes: 1) The keyword is terminated by a “/”.					

Table 6.58: MAPAXES Keyword Description

Example

```
--
--      ----- MAPAXES -----
--      X1      Y1      X2      Y2      X3      Y3
MAPAXES  0.0      100.0    0.0      0.0      100.0    0.0  /
```

The above example defines the map axes to be exported to the grid file for use by post-processing software.

6.3.115 MAPUNITS – DEFINE THE MAP AXES UNITS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The MAPUNITS keyword defines the units of the coordinates stated on the MAPAXES keyword. It is usually output by pre-processing software when exporting the grid geometry. The data is not used by OPM Flow intrinsically, but is merely written to the output EGRID file, as specified by the GRIDFILE keyword, for the use of post-processing software like OPM ResInsight.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	MAPUNITS	A character string that defines the units of the coordinates stated on the MAPAXES keyword, and should be set to: 1) FIELD for field units 2) METRES for metric units, or 3) LAB for laboratory units	METRES
Notes: 1) Note the alternative spelling of METRES, that is METERS is not recognized. 2) The keyword is terminated by a “/”.			

Table 6.59: MAPUNITS Keyword Description

Example

```
--
--      SET THE MAP UNITS FOR THE MAPAXES KEYWORD
MAPUNITS      METRES      /
```

The above example specifies the units on the MAPAXES to be the default METRES.

6.3.116 MAXVALUE – SETS A MAXIMUM VALUE FOR AN ARRAY ELEMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MAXVALUE keyword sets a maximum value for the specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the MAXVALUE keyword is being used.

No.	Name	Description	Default
1	ARRAY	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	CONSTANT	CONSTANT is a positive integer or positive real value that an ARRAY element will be reset to if an element in the defined input BOX, as defined by items (3) to (8), is greater than CONSTANT. CONSTANT has in the same units as the ARRAY property.	None
3	I1	The lower bound of the array in the I-direction to be modified must be greater than or equal to one and less than or equal to I2 and NX.	I
4	I2	The upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
5	J1	The lower bound of the array in the J-direction to be modified must be greater than or equal to one and less than or equal to J2 and NY.	I
6	J2	The upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
7	K1	The lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	I
8	K2	The upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ
Notes: 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.60: MAXVALUE Keyword Description

The applicable arrays for each section are defined in Table 6.61 on the following page.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

MAXVALUE Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL				
DY	PORV	SWCR				
DZ	TRANX	SWU				
PERMX	TRANX	SGL				
PERMY	TRANZ	SGCR				
PERMZ	DIFFX	SGU				
MULTX	DIFFY	KRW				
MULTY	DIFFZ	KRO				
MULTZ	TRANR	KRG				
DR	TRANHT	PCG				
THETA	DIFFR	PCW				
PERMR	DIFFHT					
PERMHT						
DZNET						
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFHT						

Table 6.61: MAXVALUE Keyword Applicable Arrays by Section

Example

```

--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2  J1  J2  K1  K2
MAXVALUE
      PERMX      1.0E2      1*  1*  1*  1*  1*  1* / MAX VALUE FOR PERMX
      PERMY      1.0E2      1*  1*  1*  1*  1*  1* / MAX VALUE FOR PERMY
      PERMZ      1.0E1      1*  1*  1*  1*  1*  1* / MAX VALUE FOR PERMZ
/

```

The above example resets the maximum values for the PERMX, PERMY and PERMZ, arrays to 100.0, 100.0 and 10.0, respectively, for all cells in layer five.

6.3.117 MESSAGE – OUTPUT USER MESSAGE

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGES keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

See [MESSAGE – Output User Message](#) in the GLOBAL section for a full description.

6.3.118 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

See [MESSAGES – Define Message Print Limits and Stop Limits](#) in the GLOBAL section for a full description.

6.3.119 MINNNCT – SET A MINIMUM NON-NEIGHBOR CONNECTION TRANSMISSIBILITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The MINNNCT keyword defines a minimum non-neighbor connection transmissibility below which the non-neighbor connection is deleted. The keyword allows for three minimum values, one for the transmissibility, one for the diffusivity and one for the thermal transmissibility. If the keyword is absent from the input deck then no minimum cut-off is applied.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.120 MINPORV – SET A MINIMUM GRID BLOCK PORE VOLUME THRESHOLD FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

MINPORV defines a minimum threshold pore volume that makes all grid blocks whose pore volume is below this value inactive in the model (inactive cells are not used in OPM Flow calculations). Note this keyword is different to the MINPVV keyword in the GRID section that sets a minimum threshold pore volume for individual cells in the model.

This keyword is ignored by OPM Flow and has no effect on the simulation, but see the MINPV keyword in the GRID section that provides the same functionality.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	MINPORV	MINPORV is a real positive number that defines the minimum pore volume for a cell to be active in the model.			Defined
		rb 1.0e-6	rm ³ 1.0e-6	rcc 1.0e-6	
Notes: I) The keyword is terminated by a “/”.					

Table 6.62: MINPORV Keyword Description

See also the PINCH keyword for the treatment of inactive grid cells and pinch-outs.

Example

```
--
--      MINIMUM PORE VOLUME FOR ACTIVE CELLS
--
MINPORV
      500.0 /
```

The above example defines 500 rb (or m³) as the minimum pore volume for a cell to be active in the model.

6.3.121 MINPV – SET A MINIMUM GRID BLOCK PORE VOLUME THRESHOLD FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

MINPV defines a minimum threshold pore volume that makes all grid blocks whose pore volume is below this value inactive in the model (inactive cells are not used in OPM Flow calculations). Note this keyword is different to the MINPVV keyword in the GRID section that sets a minimum threshold pore volume for individual cells in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	MINPV	MINPV is a real positive number that defines the minimum pore volume for a cell to be active in the model.			Defined
		rb 1.0e-6	rm ³ 1.0e-6	rcc 1.0e-6	
Notes: I) The keyword is terminated by a “/”.					

Table 6.63: MINPV Keyword Description

See also the PINCH keyword for the treatment of inactive grid cells and pinch-outs.

Example

```
--
--      MINIMUM PORE VOLUME FOR ACTIVE CELLS
--
MINPV      500.0      /
```

The above example defines 500 rb (or m³) as the minimum pore volume for a cell to be active in the model.

6.3.122 MINPVV – SET A MINIMUM GRID BLOCK PORE VOLUME THRESHOLD FOR INDIVIDUAL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MINPVV is an array that defines the minimum threshold pore volume for each cell, that makes grid blocks whose pore volume is below this value inactive in the model (inactive cells are not used in OPM Flow calculations).

Note this keyword is different to the MINPV keyword in the GRID section that sets a constant minimum threshold pore volume for all cells in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	MINPVV	MINPVV is an array of real positive numbers that defines the minimum pore volumes for each cell in the model in order for the cells to be active.			Defined
		rb 1.0e-6	rm ³ 1.0e-6	rcc 1.0e-6	

Notes:

1)

The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2)

The keyword is terminated by a “/”.

Table 6.64: MINPVV Keyword Description

See also the PINCH keyword for the treatment of inactive grid cells and pinch-outs.

Example

```
--
--      DEFINE A BOX GRID FOR THE BOTTOM TWO LAYERS OF A 100 X 100 X 20 MODEL
--
--      ----- BOX -----
--      I1 I2   J1 J2   K1 K2
BOX
1*  1*   1*  1*   19  20 / SELECT THE BOTTOM LAYER
--
--      MINIMUM PORE VOLUME FOR INDIVIDUAL CELLS TO BE ACTIVE
--
MINPVV
10000*500.0   10000*750.0
/
--
--      RESET THE INPUT BOX TO BE THE FULL MODEL
--
ENDBOX
```

The above example defines 500 rb (or m³) as the minimum pore volume for all cells in layer 19 to be active in the model, and 750 rb (or m³) as the minimum pore volume for all cells in layer 20.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.123 MINVALUE – SET A MINIMUM VALUE FOR AN ARRAY ELEMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MINVALUE keyword sets a minimum value for the specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the MINVALUE keyword is being used.

No.	Name	Description	Default
1	ARRAY	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	CONSTANT	CONSTANT is a positive integer or positive real value that an ARRAY element will be reset to if an element in the defined input BOX, as defined by items (3) to (8), is less than CONSTANT. CONSTANT has in the same units as the ARRAY property.	None
3	I1	A positive integer that defines the lower bound of the array in the I-direction to be modified must be greater than or equal to one and less than or equal to I2 and NX.	1
4	I2	A positive integer that defines the upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
5	J1	A positive integer that defines the lower bound of the array in the J-direction to be modified must be greater than or equal to one and less than or equal to J2 and NY.	1
6	J2	A positive integer that defines the upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
7	K1	A positive integer that defines the lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	1
8	K2	A positive integer that defines the upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ
Notes: 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.65: MINVALUE Keyword Description

The applicable arrays for each section are defined in Table 6.66 on the following page.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

EQUALS Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL				
DY	PORV	SWCR				
DZ	TRANX	SWU				
PERMX	TRANX	SGL				
PERMY	TRANZ	SGCR				
PERMZ	DIFFX	SGU				
MULTX	DIFFY	KRW				
MULTY	DIFFZ	KRO				
MULTZ	TRANR	KRG				
DR	TRANHT	PCG				
THETA	DIFFR	PCW				
PERMR	DIFFHT					
PERMHT						
DZNET						
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFHT						

Table 6.66: MINVALUE Keyword Applicable Arrays by Section

Example

```

--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
MINVALUE
      PERMX      1.0E1          1*  1*    1*  1*    1*  1* / MINIMUM PERMX
      PERMY      1.0E1          1*  1*    1*  1*    1*  1* / MINIMUM PERMY
      PERMZ      1.0E-1        1*  1*    1*  1*    1*  1* / MINIMUM PERMZ
/

```

The above example resets the minimum values for the PERMX, PERMY and PERMZ, arrays to 1.0, 1.0 and 0.1, respectively, for all cells in layer five.

6.3.124 MPFANUM – DEFINE MULTI-POINT FLUX DISCRETIZATION REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The MPFANUM keyword defines regions in the model where the multi-point flux discretization should be applied.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.125 MPFNNC – DEFINE MULTI-POINT FLUX NON-NEIGHBOR CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The MPFNNC keyword defines multi-point flux non-neighbor connections explicitly.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.126 MULTFLT – MULTIPLY THE TRANSMISSIBILITY OF A DEFINED FAULT BY A CONSTANT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTFLT enables the transmissibilities across defined faults, as declared by the FAULTS keyword, to be modified. The keyword allows for the re-scaling of the existing fault transmissibilities calculated by OPM Flow, for example setting a fault to be completely sealing by setting the multiplier to zero.

No.	Name	Description	Default
1	FLTNAME	FLTNAME is a character string enclosed in quotes with a maximum length of eight characters, that defines the name of the fault that FLTMULT will be applied to. FLTNAME must have previously been defined using the FAULTS keyword in GRID section	None
2	FLT-TRS	A positive real number that sets the transmissible multiplier to be applied to the FLTNAME transmissibilities	1.0
3	FLT-DIF	A positive real number that sets the diffusivity multiplier to be applied to the FLTNAME diffusivities. This option should only be used if the Diffusion option has been made activate by the DIFFUSE keyword in the RUNSPEC section. OPM Flow does not support this Diffusion option.	1.0
Notes: 1) Repeated entries of the same FLTNAME will result in all but the last entry being overwritten. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.67: MULTFLT Keyword Description

Example

```
--
--      MODIFY THE TRANSMISSIBILITES ACROSS DEFINED FAULTS
--
--      FAULT      TRANS      DIFUSS
--      NAME      MULTIPLIER  MULTIPLIER
MULTFLT
      'FAULT01'    0.0                / FAULT MULTIPLIERS
      'FAULT02'    0.0                / FAULT MULTIPLIERS
      'FAULT03'    0.0                / FAULT MULTIPLIERS
/
```

The above example sets the fault transmissibility multiplier for defined faults named FAULT01, FAULT02, and FAULT03 to zero making the faults sealing in the model.

6.3.127 MULTIPLY – MULTIPLY A SPECIFIED ARRAY BY A CONSTANT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MULTIPLY keyword multiplies a specified array or part of an array by a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

No.	Name	Description	Default
1	ARRAY	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	CONSTANT	An integer or real value to multiply the ARRAY by in the same units as the ARRAY property.	None
3	I1	A positive integer that defines the lower bound of the array in the I-direction to be modified must be greater than or equal to one and less than or equal to I2 and NX.	1
4	I2	A positive integer that defines the upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX
5	J1	A positive integer that defines the lower bound of the array in the J-direction to be modified must be greater than or equal to one and less than or equal to J2 and NY.	1
6	J2	A positive integer that defines the upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY
7	K1	A positive integer that defines the lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	1
8	K2	A positive integer that defines the upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ
Notes: 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.68: MULTIPLY Keyword Description

The applicable arrays for each section are defined in Table 6.69 as shown on the next page.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

MULTIPLY Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFHT			SOLVFRAC		
PERMHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFHT						

Table 6.69: MULTIPLY Keyword Applicable Arrays by Section

Example

```

--
--      ARRAY      CONSTANT      ----- BOX -----
--                               I1  I2   J1  J2   K1  K2
MULTIPLY
      PERMZ      0.50000      1*  1*   1*  1*   1*  1* / PERMZ * 0.5
/

```

The above example multiplies the PERMZ property array by 0.5 throughout the model.

6.3.128 MULTIREG – MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MULTIREG keyword multiplies an array or part of an array by a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTIREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the MULTIREG keyword is being used.

No.	Name	Description	Default
1	ARRAY	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and enclosed in quotes.	None
2	CONSTANT	An integer or real value to multiply the ARRAY by in the same units as the ARRAY property for a given REGION.	0
3	REGION	REGION is a positive integer representing the region for which the CONSTANT in (2) should be applied	None
4	ARRAY	The ARRAY to use for applying the CONSTANT in (2) based on the REGION in (3). ARRAY can have the following values: 1) F for the FLUXNUM array 2) M for the MULTNUM array 3) O for the OPERNUM array	M

Notes:

- Where the REGION should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section.
- Each record must be terminated by a "/" and the keyword is terminated by a "/".

Table 6.70: MULTIREG Keyword Description

The applicable arrays for each section are defined in Table 6.71 as shown on the following page.

MULTIREG Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFHT			SOLVFRAC		

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

MULTREG Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
PERMTHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFTHT						

Table 6.71: MULTIREG Keyword Applicable Arrays by Section

Example

```
--
-- FIRST DEFINE THE PROPERTY ARRAYS AND MULTNUM ARRAYS FOR 10 X 10 X 20 MODEL
--
-- ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
  PORO        0.2000        1*  1*   1*  1*   1*  1*  / PORO TO 0.20 IN MODEL
  PERMX       100.00        1*  1*   1*  1*   1*  1*  / PERMX TO 0.10 IN MODEL
  MULTNUM     1            1*  1*   1*  1*   1*  1*  / MULTNUM IN MODEL
  MULTNUM     2            1*  5    1   5    6   6   / MULTNUM IN MODEL
  MULTNUM     3            1*  1*   1*  1*   10  10  / MULTNUM IN MODEL
/
--
-- NOW RESET PORO AND PERMX BASED ON THE MULTNUM REGION NUMBER
--
-- MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER
--
-- ARRAY      CONSTANT  REGION  REGION ARRAY
--                                     M / F / O
MULTIREG
  PORO        1.050     1        M
  PORO        1.100     2        M
  PORO        0.950     3        M
  PERMX       1.25      1        M
  PERMX       1.30      2        M
  PERMX       0.90      3        M
/
```

The example first defines the PORO and PERMX property arrays for the model and then sets the MULTNUM array to 1 for all cells in the model, after which selected areas of model are assigned various MULTNUM integer values. The MULTIREG can then be invoked to multiple the PORO and PERMX arrays by a constant for the various MULTNUM regions.

6.3.129 MULTNUM – DEFINE THE MULTIPLE TRANSMISSIBILITY REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MULTNUM keyword defines the inter-region transmissibility region numbers for each grid block, as such there must be one entry for each cell in the model. The array can be used with the EQUALREG, ADDREG, COPYREG, MULTIREG, MULTREGP and MULTREGT keywords in calculating various grid properties in the GRID section.

No.	Name	Description	Default
I	MULTNUM	MULTNUM defines an array of positive integers assigning a grid cell to a particular inter-region transmissibility region. The maximum number of MULTNUM regions is set by the NRMULT variable on the GRIDOPTS keyword in the RUNSPEC section.	I
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/".			

Table 6.72: MULTNUM Keyword Description

Examples

The example below sets three MULTNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE MULTNUM REGIONS FOR ALL CELLS
--
MULTNUM
    2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
    3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
    MULTNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
    MULTNUM      2          1   2    1   2    1   1 / SET REGION 2
    MULTNUM      3          1   2    1   2    2   2 / SET REGION 3
/
```

One can then increase PERMX by 25% in region three only.

```
--
--      MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER
--
--      ARRAY      CONSTANT  REGION  REGION ARRAY
--      VALUE      NUMBER    M / F / O
MULTIREG
    PERMX      1.25      3          M
/
```

6.3.130 MULTPV – MULTIPLY CELL PORE VOLUMES BY A CONSTANT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTPV multiplies the pore volumes of a cell by a real positive constant for all the cells in the model via an array. An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTPV keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description	Default
I	MULTPV	MULTPV is an array of real positive numbers assigning the pore volume multipliers for each cell in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a “/”. 			

Table 6.73: MULTPV Keyword Description

See also the MULTREGP for scaling the cell pore volumes by region numbers.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET MULTX+ TRANSMISSIBILITY MULTIPLIERS
--
MULTPV   18*0.0500                               /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.05 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

6.3.131 MULTR - MULTIPLY CELL TRANSMISSIBILITY IN THE +R DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTR multiplies the transmissibility between two cell faces in the +R direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I+1, J, K). An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTR keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword should only be used with radial and spider grids, as declared by the RADIAL or SPIDER keywords in the RUNSPEC section.

No.	Name	Description	Default
I	MULTR+	MULTR+ is an array of real positive numbers assigning the transmissibility multipliers in the +R direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.74: MULTR Keyword Description

See also the MULTR-, MULTTHT, MULTTHT-, MULTZ and MULTZ- keywords for scaling transmissible between between grid cells in the R direction.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET MULTR+ TRANSMISSIBILITY MULTIPLIERS
--
MULTR    18*0.300                               /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.3 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.132 MULTR- - MULTIPLY CELL TRANSMISSIBILITY IN THE -R DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTR- multiplies the transmissibility between two cell faces in the -R direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I-1, J, K) and (I, J, K). An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTR- keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword should only be used with radial and spider grids, as declared by the RADIAL or SPIDER keywords in the RUNSPEC section.

No.	Name	Description	Default
I	MULTR-	MULTR- is an array of real positive numbers assigning the transmissibility multipliers in the -R direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.75: MULTR- Keyword Description

See also the MULTR, MULTTHT, MULTTHT-, MULTZ and MULTZ- keywords for scaling transmissible between cells in the R direction.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   1                / DEFINE BOX AREA
--
--      SET MULTX TRANSMISSIBILITY MULTIPLIERS CELLS
--
MULTR-   6*0.500                                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.5 scaling multiplier for the six cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.133 MULTREGD – MULTIPLY DIFFUSIVITIES BETWEEN REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MULTREGT keyword multiplies the diffusivity between two regions by a constant. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGT keyword is read by the simulator. The constant should be a real number.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	REGION1	A positive integer value that defines the from REGION number for which the CONSTANT in (2) should be applied.	None
2	REGION2	A positive integer value that defines the to REGION number for which the CONSTANT in (2) should be applied.	None
3	CONSTANT	A real value to multiply the diffusivity between REGION1 and REGION2.	1
4	DIR	A character string that defines the direction to apply the diffusivity multiplier between the two regions, should be set to one of the following X,Y,Z, XY,YX, XZ, or XYZ.	XYZ
5	TYPE	A character string that defines the type of connections the diffusivity multiplier should be applied to, should be one of the following: 1) NNC – Only apply the diffusivity multiplier between REGION1 and REGION2 to non-neighbor connections. 2) NONNC – Do not apply the diffusivity multiplier between REGION1 and REGION2 to non-neighbor connections. 3) ALL - Apply the diffusivity multiplier between REGION1 and REGION2 to all connections.	ALL
6	ARRAY	The ARRAY to use for applying the CONSTANT in (2) based on the ARRAY in (1). ARRAY can have the following values: 1) F for the FLUXNUM array 2) M for the MULTNUM array 3) O for the OPERNUM array	M

Notes:

- Where REGION1 and REGION2 should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section.
- Each record must be terminated by a “/” and the keyword is terminated by a “/”.

Table 6.76: MULTREGD Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      MULTIPLY DIFFUSIVITIES BETWEEN RESERVOIRS
--
--      REGION      REGION      DIFFS      DIREC      NNC      REGION ARRAY
--      FROM        TO          MULT        OPT        OPTS     M / F / O
MULTREGD
      1*           1*           1.05        1*         'ALL '    M           / ALL REGIONS
/
```

The above example multiplies the thermal conductivities between all the MULTNUM regions by 1.05 in all directions and for all connections types.

6.3.134 MULTREGH – MULTIPLY THERMAL CONDUCTIVITIES BETWEEN REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MULTREGH keyword multiplies the thermal conductivity between two regions by a constant. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGT keyword is read by the simulator. The constant should be a real number.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	REGION1	A positive integer value that defines the from REGION number for which the CONSTANT in (2) should be applied.	None
2	REGION2	A positive integer value that defines the to REGION number for which the CONSTANT in (2) should be applied.	None
3	CONSTANT	A real value to multiply the thermal conductivity between REGION1 and REGION2.	1
4	DIR	A character string that defines the direction to apply the thermal conductivity multiplier between the two regions, should be set to one of the following X,Y,Z, XY,YX, XZ, or XYZ.	XYZ
5	TYPE	A character string that defines the type of connections the thermal conductivity multiplier should be applied to, should be one of the following: 4) NNC – Only apply the thermal conductivity multiplier between REGION1 and REGION2 to non-neighbor connections. 5) NONNC – Do not apply the thermal conductivity multiplier between REGION1 and REGION2 to non-neighbor connections. 6) ALL - Apply the thermal conductivity multiplier between REGION1 and REGION2 to all connections.	ALL
6	ARRAY	The ARRAY to use for applying the CONSTANT in (2) based on the ARRAY in (1). ARRAY can have the following values: 1) F for the FLUXNUM array 2) M for the MULTNUM array 3) O for the OPERNUM array	M

Notes:

- Where REGION1 and REGION2 should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section.
- Each record must be terminated by a “/” and the keyword is terminated by a “/”.

Table 6.77: MULTREGH Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--  
--      MULTIPLY THERMAL CONDUCTIVITIES BETWEEN RESERVOIRS  
--  
--      REGION  REGION  CONDS  DIREC  NNC  REGION ARRAY  
--      FROM    TO      MULT   OPT    OPTS  M / F / O  
MULTREGH  
      1*        1*        1.05   1*     'ALL'  M          / ALL REGIONS  
/
```

The above example multiplies the diffusivities between all the MULTNUM regions by 1.05 in all directions and for all connections types.

6.3.135 MULTREGP – MULTIPLY PORE VOLUMES BASED ON REGION NUMBER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MULTREGP keyword multiplies the pore volume of a cell by a constant for all cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGP keyword is read by the simulator. The constant should be a real number.

No.	Name	Description	Default
1	REGION	REGION is a positive integer representing the region for which the CONSTANT in (2) should be applied.	None
2	CONSTANT	A real value to multiply the pore volume by for a given REGION.	1
3	ARRAY	The ARRAY to use for applying the CONSTANT in (2) based on the REGION in (1). ARRAY can have the following values: 1) F for the FLUXNUM array 2) M for the MULTNUM array 3) O for the OPERNUM array	M
Notes: 1) Where the REGION should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".			

Table 6.78: MULTREGP Keyword Description

Example

```
--
-- RESET PORE VOLUME FOR DIFFERENT REGIONS
--
--      REGION      PORV      REGION ARRAY
--      NUMBER      MULT      M / F / O
MULTREGP
      1      1.0456573      M      / Fault Block 1
      2      0      M      / Fault Block 2
      3      0.9756715      M      / Fault Block 3
      4      0      M      / Inactive Blocks
/
```

The above example re-scales the pore volumes for MULTNUM regions one and three and makes regions two and four inactive by setting their pore volumes to zero.

6.3.136 MULTREGT – MULTIPLY TRANSMISSIBILITIES BETWEEN REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MULTREGT keyword multiplies the transmissibility between two regions by a constant. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGT keyword is read by the simulator. The constant should be a real number.

No.	Name	Description	Default
1	REGION1	A positive integer value that defines the from REGION number for which the CONSTANT in (2) should be applied.	None
2	REGION2	A positive integer value that defines the to REGION number for which the CONSTANT in (2) should be applied.	None
3	CONSTANT	A real positive value to multiply the transmissibility between REGION1 and REGION2.	1
4	DIR	A character string that defines the direction to apply the transmissibility multiplier between the two regions, should be set to one of the following X,Y,Z,XY,YX,XZ, or XYZ.	XYZ
5	TYPE	A character string that defines the type of connections the transmissibility multiplier should be applied to, should be one of the following: 1) NNC – Only apply the transmissibility multiplier between REGION1 and REGION2 to non-neighbor connections. 2) NONNC – Do not apply the transmissibility multiplier between REGION1 and REGION2 to non-neighbor connections. 3) ALL - Apply the transmissibility multiplier between REGION1 and REGION2 to all connections.	ALL
6	ARRAY	The ARRAY to use for applying the CONSTANT in (2) based on the ARRAY in (1). ARRAY can have the following values: 1) F for the FLUXNUM array 2) M for the MULTNUM array 3) O for the OPERNUM array	M

Notes:

- 1) Where REGION1 and REGION2 should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section.
- 2) Each record must be terminated by a “/” and the keyword is terminated by a “/”.

Table 6.79: MULTREGT Keyword Description

Note

Note if the MULTREGT keyword is used in the EDIT section, OPM Flow will always apply the changes irrespective, of if the TRANX, TRANY and TRANZ transmissibility arrays have been entered or not in the EDIT section.

This behavior is different to the commercial simulator that only applies the keyword if the transmissibility arrays have been entered in the EDIT section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      SET TRANSMISSIBILITES ACROSS DIFFERENT RESERVOIRS TO ZERO
--
--      REGION      REGION      TRANS      DIREC      NNC      REGION ARRAY
--      FROM        TO          MULT        OPT        OPTS     M / F / O
MULTREGT
      1*           1*           0.0         1*         'ALL '   M           / ALL REGIONS SEALED
/
```

The above example isolates all regions from one another by setting the transmissibility for the MULTNUM regions to zero in all directions and for all connections types.

6.3.137 MULTTHT - MULTIPLY CELL TRANSMISSIBILITY IN THE +THETA DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTTHT multiplies the transmissibility between two cell faces in the +Theta direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J+1, K). An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTTHT keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword should only be used with radial and spider grids, as declared by the RADIAL or SPIDER keywords in the RUNSPEC section.

No.	Name	Description	Default
I	MULTTHT+	MULTTHT+ is an array of real positive numbers assigning the transmissibility multipliers in the +Theta direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.80: MULTTHT Keyword Description

See also the MULTTHT-, MULTR, MULTR-, MULTZ and MULTZ- keywords for scaling transmissible between I grid cells in the Theta direction.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET MULTTHT+ TRANSMISSIBILITY MULTIPLIERS
--
MULTTHT      18*0.300                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.3 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.138 MULTTHT- - MULTIPLY CELL TRANSMISSIBILITY IN THE -THETA DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTTHT- multiplies the transmissibility between two cell faces in the -Theta direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J-I, K) and (I, J, K). An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTTHT- keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword should only be used with radial and spider grids, as declared by the RADIAL or SPIDER keywords in the RUNSPEC section.

No.	Name	Description	Default
I	MULTTHT-	MULTTHT- is an array of real positive numbers assigning the transmissibility multipliers in the -Theta direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.81: MULTTHT- Keyword Description

See also the MULTTHT, MULTR, MULTR-, MULTZ and MULTZ- keywords for scaling transmissible between I grid cells in the Theta direction.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   1                / DEFINE BOX AREA
--
--      SET MULTX TRANSMISSIBILITY MULTIPLIERS CELLS
--
MULTTHT-      6*0.500                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.5 scaling multiplier for the six cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.139 MULTX - MULTIPLY CELL TRANSMISSIBILITY IN THE +X DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTX multiplies the transmissibility between two cell faces in the +X direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I+1, J, K).

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTX keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description	Default
I	MULTX+	MULTX+ is an array of real positive numbers assigning the transmissibility multipliers in the +X direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.82: MULTX Keyword Description

See also the MULTX-, MULTY, MULTY-, MULTZ and MULTZ- keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET MULTX+ TRANSMISSIBILITY MULTIPLIERS
--
MULTX    18*0.300                               /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.3 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.140 MULTX- - MULTIPLY CELL TRANSMISSIBILITY IN THE -X DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTX- multiplies the transmissibility between two cell faces in the -X direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I-1, J, K) and (I, J, K).

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTX- keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description	Default
I	MULTX-	MULTX- is an array of real positive numbers assigning the transmissibility multipliers in the -X direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.83: MULTX- Keyword Description

See also the MULTX, MULTY, MULTY-, MULTZ and MULTZ- keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   1                / DEFINE BOX AREA
--
--      SET MULTX TRANSMISSIBILITY MULTIPLIERS CELLS
--
MULTX-   6*0.500                                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.5 scaling multiplier for the six cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

6.3.141 MULTY - MULTIPLY CELL TRANSMISSIBILITY IN THE +Y DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTY multiplies the transmissibility between two cell faces in the +Y direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J+1, K).

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTY keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description	Default
I	MULTY+	MULTY+ is an array of real positive numbers assigning the transmissibility multipliers in the +Y direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.84: MULTY Keyword Description

See also the MULTY-, MULTX, MULTX-, MULTZ and MULTZ- keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET MULTX+ TRANSMISSIBILITY MULTIPLIERS
--
MULTY      18*0.300                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.3 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.142 MULTY- - MULTIPLY CELL TRANSMISSIBILITY IN THE -Y DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTY- multiplies the transmissibility between two cell faces in the -Y direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J-1, K) and (I, J, K).

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTY- keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description	Default
I	MULTY-	MULTY- is an array of real positive numbers assigning the transmissibility multipliers in the -Y direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.85: MULTY- Keyword Description

See also the MULTY, MULTX, MULTX-, MULTZ and MULTZ- keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   1                / DEFINE BOX AREA
--
--      SET MULTX TRANSMISSIBILITY MULTIPLIERS CELLS
--
MULTY-   6*0.500                                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.5 scaling multiplier for the six cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.143 MULTZ - MULTIPLY CELL TRANSMISSIBILITY IN THE +Z DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTZ multiplies the transmissibility between two cell faces in the +Z direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J, K+1).

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTZ keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description	Default
I	MULTZ+	MULTZ+ is an array of real positive numbers assigning the transmissibility multipliers in the +Z direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.86: MULTZ Keyword Description

See also the MULTZ-, MULTX, MULTX-, MULTY and MULTY- keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   18   1   1                /  DEFINE BOX AREA
--
--      SET MULTX+ TRANSMISSIBILITY MULTIPLIERS
--
MULTZ
      18*0.300                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.3 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.144 MULTZ- - MULTIPLY CELL TRANSMISSIBILITY IN THE -Z DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

MULTZ- multiplies the transmissibility between two cell faces in the -Z direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K-I) and (I, J, K).

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTZ- keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description	Default
I	MULTZ-	MULTZ- is an array of real positive numbers assigning the transmissibility multipliers in the -X direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.87: MULTZ- Keyword Description

See also the MULTZ, MULTX, MULTX-, MULTY and MULTY- keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   1                / DEFINE BOX AREA
--
--      SET MULTX TRANSMISSIBILITY MULTIPLIERS CELLS
--
MULTZ-   6*0.500                                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.5 scaling multiplier for the six cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.145 NEWTRAN – ACTIVATE IRREGULAR CORNER-POINT GRID TRANSMISSIBILITIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword switches on Irregular Corner-Point Grid geometry transmissibility calculation, which is the default option for this type of grid. Grids defined with the COORD and ZCORN keywords will always invoke this option by default.

For Cartesian Regular Grids defined by the DX, DY, and DZ series of keywords the block center geometry transmissibility calculations should be activated via the OLDTRAN keyword. Again this is automatically invoked if this type of grid is being employed.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE IRREGULAR CORNER-POINT GRID TRANSMISSIBILITIES
--
NEWTRAN
```

The above example manually activates Irregular Corner-Point Grid transmissibility calculations.

6.3.146 NINENUM – DEFINE THE NINE-POINT DISCRETIZATION REGION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NINENUM keyword defines areas in the grid that should use the Nine-Point Discretization formulation by setting a grid block's NINENUM value to one, or zero for the conventional standard five-point discretization formulation, for when the Nine-Point Discretization formulation has been activated by the NINEPOIN keyword in the RUNSPEC section. There should be a NINENUM value for each grid block in the model. Note that if the NINEPOIN keyword in the RUNSPEC section has been invoked and the NINENUM keyword has not been used in the input deck, then all the grid will use the nine-point scheme.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	NINENUM	<p>NINENUM defines an integer array of zeros and ones assigning a grid cell to a particular discretization region, a value of zero for five-point or a value of one for nine-point discretization.</p> <p>Note that the default value of one implies a cell is included in the Nine-Point Discretization region; thus, if a cell is to use the conventional standard five-point finite difference discretization formulation, then NINENUM must be explicitly set to zero.</p>	I
<p>Notes:</p> <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.88: NINENUM Keyword Description

The NINENUM keyword cannot be used in models with Local Grid Refinements ("LGR") to set different discretization regions within the model, that is if LGRs are present in the model either all the grid uses nine-point discretization, if NINEPOIN is present in the RUNSPEC section, or five-point if NINEPOIN is absent.

Example

The example below sets a portion of the model to use the Nine-Point Discretization formulation.

```
--
--      DEFINE NINE-POINT DISCRETIZATION REGION FOR ALL CELLS
--
--      ARRAY          CONSTANT          ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      NINENUM'        0                1*  1*   1*  1*   1*  1* / FIVE-POINT
      NINENUM'        1                1*  1*   1*  1*   1   5 / NINE-POINT
/
```

Here the first line sets all the grid to use the five-point discretization formulation, all values set to zero, and then the second line sets all the cells in the layers one to five to use the nine-point discretization formulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.147 NMATOPTS – DEFINE THE DISCRETIZED MATRIX DUAL POROSITY PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The NMATOPTS keyword defines the Discretized Matrix Dual Porosity parameters for when the Discretized Matrix Dual Porosity option has been activated by NMATRIX keyword in the RUNSPEC section. The option allows the matrix grid blocks to be subdivided into smaller cells for more accurate flow calculations, in particular the modeling of transient flow within the matrix grid blocks.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.148 NNC – DEFINE NON-NEIGHBOR CONNECTIONS BETWEEN CELLS MANUALLY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

NNC enables Non-Neighbor Connections (“NNC”) to be manually defined. This keyword is normally generated by static modeling software as opposed to be manually entered in the OPM Flow input deck due to the verbosity and complexity of calculating the required parameters for this keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	I1	A positive integer that defines the first grid block in the I-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NX on the DIMENS keyword in the RUNSPEC section.			None
2	J1	A positive integer that defines the first grid block in the J-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NY on the DIMENS keyword in the RUNSPEC section.			None
3	K1	A positive integer that defines the first grid block in the K-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NZ on the DIMENS keyword in the RUNSPEC section.			None
4	I2	A positive integer that defines the second grid block in the I-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NX on the DIMENS keyword in the RUNSPEC section.			None
5	J2	A positive integer that defines the second grid block in the J-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NY on the DIMENS keyword in the RUNSPEC section.			None
6	K2	A positive integer that defines the second grid block in the K-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NZ on the DIMENS keyword in the RUNSPEC section.			None
7	TRANSNNC	TRANSNNC is a positive real number greater than or equal to zero that defines the transmissibility between the first grid block (I1, J1, K1) and the second grid block (I2, J2, K2). The default value of zero sets the transmissibility between the two cells to zero.			0.0
		cPrb/day/psia	cPrm ³ /day/bars	cPrcc/hr/atm	
8	ISATNUM1	ISATNUM1 is a positive integer defining which saturation table number (relative permeability table) to be used for flow from the first grid block to the second grid block. The default value of zero means the existing saturation table allocated to the upstream cell (I1, J1, K1).			0

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
9	ISATNUM2	ISATNUM2 is a positive integer defining which saturation table number (relative permeability table) to be used for flow from the second grid block to the first grid block. The default value of zero means the existing saturation table allocated to the downstream cell (I2,J2,K2).			0
10	IPRSNUM1	IPRSNUM1 is a positive integer defining which pressure table number (PVT table) to be used for flow from the first grid block to the second grid block. The default value of zero means the existing PVT table allocated to the upstream cell (I1,J1,K1).			0
11	IPRSNUM2	IPRSNUM2 is a positive integer defining which pressure table number (PVT table) to be used for flow from the second grid block to the first grid block. The default value of zero means the existing PVT table allocated to the downstream cell (I2,J2,K2).			0
12	FACE1	FACE1 is a character string that defines the face associated with flow from the first grid block to the second grid block, where FACE1 can have values of: X+, X-,Y+,Y-, Z+, or Z-.			None
13	FACE2	FACE2 is a character string that defines the face associated with flow from the second grid block to the first grid block, where FACE2 can have vaules of: X+, X-,Y+,Y-, Z+, or Z-.			None
14	DIFFNNC	DIFFNNC is a positive real number that defines the diffusivity between the first grid block (I1, J1, K1) and the second grid block (I2, J2, K2).			0.0
		feet	meters	cm	
15	DISPNNC	DISPNNC s a positive real number that defines the dispersion coefficient $\frac{1}{(Area \times Porosity)}$ between the first grid block (I1, J1, K1) and the second grid block (I2, J2, K2), used with the DISPERSE option.			0.0
		ft ⁻²	m ⁻²	cm ⁻²	
16	AREANNC	AREANNC is a positive real number that defines the area associated with the connection between the first grid block (I1, J1, K1) and the second grid block (I2, J2, K2).			None
		ft ²	m ²	cm ²	
17	PERMNNC	AREANNC is a positive real number that defines the permeability associated with the connection between the first grid block (I1,J1, K1) and the second grid block (I2, J2, K2).This used by the non-Darcy option.			None
		mD	mD	mD	
Notes: 1) Only functionality defined by items (1) to (7) are activated in OPM Flow. 2) Each record must be terminated by a "/" and the keyword is terminated by a "/".					

Table 6.89: NNC Keyword Description

Note that although items (8) to (17) for this keyword are not available in OPM Flow, even if they were, it is strongly recommended that these items are defaulted if the data is being entered manually, as opposed to being generated by a pre-processing software.

Care should be taken that cells in different PVTNUM regions (see the PVTNUM keyword in the REGIONS section) are not connected, since the fluid properties are associated with a cell. If for example, a rbb1 or a rm3 of oil flows from PVTNUM region 1 to PVTNUM region 2, then the oil properties of that oil will change from the PVT 1 data set to the PVT data set 2. This will result in material balance errors, that may or may not cause numerical issues.

If the transmissibility across a fault needs to be modified see the FAULTS and MULTFLT keywords in the GRID section for an alternative and less complicated method to modifying fault transmissibilities. Transmissibility between reservoir regions can be modified by using MULTREGT keyword, provided MULTNUM has been used to define the inter-region transmissibility region numbers for each grid block. Finally, the MULTX, MULTY and MULTZ series of keywords can be used to modify transmissibility between various cells. All the aforementioned keywords are described in the GRID section.

Example

```
--
--      MANUALLY DEFINE NON-NEIGHBOR CONNECTIONS
--
--      ----- BOX ----- -- TRANSNCC --
--      I1   J1   K1   I2   J2   K2
NCC
      1     1     1     1     1     2      0.2500 / SET NNC FOR FAULT
      1     1     2     1     1     3      0.2500 / SET NNC FOR FAULT
      1     1     3     1     1     4      0.2500 / SET NNC FOR FAULT
/
```

The above example defines the transmissibility between cells (1, 1, 1) and (1, 1, 2), (1, 1, 2) and (1, 1, 3) and finally between (1, 1, 3) and (1, 1, 4) to be 0.2500.

6.3.149 NODPPM – DEACTIVATE FRACTURE POROSITY-PERMEABILITY CALCULATION

The NODPPM keyword deactivates the default behavior of multiplying the fracture porosity by the fracture permeability to calculate the effective fracture permeability in dual porosity and dual permeability runs. Either the DUALPORO or DUALPERM keywords in the RUNSPEC section must be declared in the input file in order to use this keyword. If the default calculation is switched off by this keyword, then the effective fracture permeability is taken to be those entered for the fracture using the PERMX, PERMY and PERMZ keywords in the GRID section. If the keyword is absent from the input deck, then the entered PERMX, PERMY and PERMZ arrays for the fractures are multiplied by fracture PORO array values in order to obtain the effective fracture permeability.

See [NODPPM – Deactivate Fracture Porosity-Permeability Calculation](#) in the RUNSPEC section for a full description.

6.3.150 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active, but can subsequently be switched off by the NOECHO activation keyword.

See [NOECHO – Deactivate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

6.3.151 NOGGF – DEACTIVATE OUTPUT OF GRID GEOMETRY FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword deactivates the output of a standard GRID or extended GRID file, as well as the extensible EGRID file for post-processing applications.

This keyword is ignored by OPM Flow and has no effect on the simulation.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      DEACTIVATE GRID GEOMETRY OUTPUT
--
NOGGF
```

The above example switches off the default behavior of writing out the grid geometry files.

6.3.152 NOWARN – DEACTIVATE WARNING MESSAGES

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

See [NOWARN – Deactivate Warning Messages](#) in the GLOBAL section for a full description.

6.3.153 NTG – DEFINE THE NET-TO-GROSS RATIO FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

NTG defines the Net-to-Gross Ratio (“NTG”) for all the cells in the model via an array. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	NTG	NTG is an array of real numbers greater than or equal to zero and less than or equal to one, that are assigned the net-to-gross ratio values for each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 200*0.850.			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) Setting a cells NTG value to zero will make the cell inactive, similar to setting the cells ACTNUM property to zero. 2) The keyword is terminated by a “/”.					

Table 6.90: NTG Keyword Description

See also the PORO, PERMX, PERMY and PERMZ keywords to fully define a grid's properties.

Example

```
--
--      DEFINE GRID BLOCK NTG DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
NTG      100*1.000    100*0.850    100*0.500      /
```

The above example defines a constant NTG of 1.00 for the first 100 cells, then 0.85 for the second 100 hundred cells, and finally 0.500 for the last 100 cell, for the 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

6.3.154 NXFIN – DEFINE THE NUMBER OF LGR GRID BLOCKS IN THE X-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

NXFIN defines the number of Local Grid Refinement (“LGR”) cells within a global or host cell in the x-direction via a vector, as opposed to defining the size for each cell for a Cartesian LGR Grid. The LGR keyword in the RUNSPEC section should be activated to indicate an LGR is being used, and the keyword NXFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	NXFIN	NXFIN is a vector of integer numbers describing the number of LGR cells within each defined global or host grid block in the x-direction in a Cartesian LGR grid. Repeat counts may be used, for example 2*2.0.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX parameter on the CARFIN keyword in the GRID section.
- 2) The keyword is terminated by a “/”.

Table 6.91: NXFIN Keyword Description

See also the CARFIN, ENDFIN, NYFIN, and NZFIN keywords in the GRID section to fully define a Cartesian LGR grid model.

Example

```
--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- HOST GRID -----  -- CARFIN GRID --  MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS      NAME
CARFIN
      LGR-OP01    24  25  87  87   1  50        8      1      50        1      GLOBAL /
--
--      DEFINE LGR GRID BLOCK IN THE X-DIRECTION
--
NXFIN
      4   4
/

ENDFIN
```

The above example splits the global cells (24-25,87, 1-50) into four and four LGR grid blocks in the x-direction, and since the HXFIN keyword has not been supplied, then the host cells will split into equal proportions.

6.3.155 NYFIN – DEFINE THE NUMBER OF LGR GRID BLOCKS IN THE Y-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

NYFIN defines the number of Local Grid Refinement (“LGR”) cells within a global or host cell in the x-direction via a vector, as opposed to defining the size for each cell for a Cartesian LGR Grid. The LGR keyword in the RUNSPEC section should be activated to indicate an LGR is being used, and the keyword NYFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	NYFIN	NYFIN is a vector of integer numbers describing the number of LGR cells within each defined global or host grid block in the y-direction in a Cartesian LGR grid. Repeat counts may be used, for example 2*2.0.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NY parameter on the CARFIN keyword in the GRID section.
- 2) The keyword is terminated by a “/”.

Table 6.92: NYFIN Keyword Description

See also the CARFIN, ENDFIN, NXFIN, and NZFIN keywords in the GRID section to fully define a Cartesian LGR grid model.

Example

```
--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- HOST GRID -----  -- CARFIN GRID --  MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS  NAME
CARFIN
      LGR-OP01    24  24  86  87   1  50      1      8      50      1      GLOBAL /
--
--      DEFINE LGR GRID BLOCK IN THE Y-DIRECTION
--
NYFIN
      4   4
/

ENDFIN
```

The above example splits the global cells (24, 86-87,1-50) into four and four LGR grid blocks in the y-direction and since the HYFIN keyword has not been supplied, then the host cells will split into equal proportions.

6.3.156 NZFIN – DEFINE THE NUMBER OF LGR GRID BLOCKS IN THE Z-DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

NZFIN defines the number of Local Grid Refinement (“LGR”) cells within a global or host cell in the z-direction via a vector, as opposed to defining the size for each cell for a Cartesian LGR Grid. The LGR keyword in the RUNSPEC section should be activated to indicate an LGR is being used, and the keyword NXFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	NZFIN	NZFIN is a vector of integer numbers describing the number of LGR cells within each defined global or host grid block in the x-direction in a Cartesian LGR grid. Repeat counts may be used, for example 2*2.0.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX parameter on the CARFIN keyword in the GRID section.
- 2) The keyword is terminated by a “/”.

Table 6.93: NZFIN Keyword Description

See also the CARFIN, ENDFIN, NXFIN, and NYFIN keywords in the GRID section to fully define a Cartesian LGR grid model.

Example

```
--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- HOST GRID -----  -- CARFIN GRID --  MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS      NAME
CARFIN
      LGR-OP01    24  24  86  86   1  50      8      1     100     1      GLOBAL /
--
--      DEFINE LGR GRID BLOCK IN THE Z-DIRECTION
--
NZFIN
      50*2
/

ENDFIN
```

The above example splits the global cells (24, 86, 1-50) into two LGR grid blocks per host cell in the z-direction, and since the HZFIN keyword has not been supplied, then the host cells will split into equal proportions.

6.3.157 OLDTRAN – ACTIVATE CARTESIAN REGULAR GRID TRANSMISSIBILITIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword switches on Cartesian Regular Grids geometry transmissibility calculation (or block centered transmissibility calculations), which is the default option for this type of grid. Grids defined by the DX, DY, and DZ series of keywords will always invoke this option by default.

For Irregular Corner-Point Grids defined by the COORD and ZCORN keywords Irregular Corner-Point Grid geometry transmissibility calculations should be activated via the NEWTRAN keyword. Again this is automatically invoked if this type of grid is being employed.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE CARTESIAN REGULAR GRID TRANSMISSIBILITIES
--
OLDTRAN
```

The above example manually activates Cartesian Regular Grid transmissibility calculations.

6.3.158 OLDTRANR – ACTIVATE RADIAL REGULAR GRID TRANSMISSIBILITIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword switches on Radial Regular Grids geometry transmissibility calculation (or block centered transmissibility calculations), which is the default option for this type of grid. Grids defined by the DR, DTHETA, and DZ series of keywords will always invoke this option by default.

For Irregular Corner-Point Grids defined by the COORD and ZCORN keywords Irregular Corner-Point Grid geometry transmissibility calculations should be activated via the NEWTRAN keyword. Again this is automatically invoked if this type of grid is being employed.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE RADIAL REGULAR GRID TRANSMISSIBILITIES
--
OLDTRANR
```

The above example manually activates Radial Regular Grid transmissibility calculations.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.159 OPERATE – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, OPERATE, defines mathematical operations on property arrays (NTG, PORO etc.) and optionally using another property array as input to the function. The keyword allows for various mathematical functions and their associated variables to be defined and applied to the selected array data. Input constants can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

No.	Name	Description	Default														
1	Y	The name of the array to be modified.This is the keyword name identifying the property and is up to eight characters in length and optionally enclosed in quotes.	None														
2	I1	A positive integer that defines the lower bound of the array in the I-direction to be modified must be greater than or equal to one and less than or equal to I2 and NX.	1														
3	I2	A positive integer that defines the upper bound of the array in the I-direction to be modified must be greater than or equal to I1 and less than or equal to NX	NX														
4	J1	A positive integer that defines the lower bound of the array in the J-direction to be modified must be greater than or equal to one and less than or equal to J2 and NY.	1														
5	J2	A positive integer that defines the upper bound of the array in the J-direction to be modified must be greater than or equal to J1 and less than or equal to NY.	NY														
6	K1	A positive integer that defines the lower bound of the array in the K-direction to be modified must be greater than or equal to one and less than or equal to K2 and NZ.	1														
7	K2	A positive integer that defines the upper bound of the array in the K-direction to be modified must be greater than or equal to K1 and less than or equal to NZ.	NZ														
8	EQUATION	<p>A defined character string enclosed in quotes that selects the mathematical function to be applied, using the X array and the ALPHA and BETA constants declared on this keyword. EQUATION should be set to one of the following character strings:</p> <table><tr><td>‘MULTA’ - $Y = \alpha X + \beta$</td><td>‘ADDX’ - $Y = \alpha + X$</td></tr><tr><td>‘POLY’ - $Y = Y + \alpha X^\beta$</td><td>‘COPY’ - $Y = X$</td></tr><tr><td>‘SLOG’ - $Y = 10^{\alpha X + \beta}$</td><td>‘MAXLIM’ - $Y = \max(\alpha, X)$</td></tr><tr><td>‘LOG10’ - $Y = \log(X)$</td><td>‘MINLIM’ - $Y = \min(\alpha, X)$</td></tr><tr><td>‘LOGE’ - $Y = \ln(X)$</td><td>‘MULTP’ - $Y = \alpha X^\beta$</td></tr><tr><td>‘INV’ - $Y = \frac{1}{X}$</td><td>‘ABS’ - $Y = X$</td></tr><tr><td>‘MULTX’ - $Y = \alpha X$</td><td>‘MULTIPLY’ - $Y = XY$</td></tr></table>	‘MULTA’ - $Y = \alpha X + \beta$	‘ADDX’ - $Y = \alpha + X$	‘POLY’ - $Y = Y + \alpha X^\beta$	‘COPY’ - $Y = X$	‘SLOG’ - $Y = 10^{\alpha X + \beta}$	‘MAXLIM’ - $Y = \max(\alpha, X)$	‘LOG10’ - $Y = \log(X)$	‘MINLIM’ - $Y = \min(\alpha, X)$	‘LOGE’ - $Y = \ln(X)$	‘MULTP’ - $Y = \alpha X^\beta$	‘INV’ - $Y = \frac{1}{X}$	‘ABS’ - $Y = X $	‘MULTX’ - $Y = \alpha X$	‘MULTIPLY’ - $Y = XY$	None
‘MULTA’ - $Y = \alpha X + \beta$	‘ADDX’ - $Y = \alpha + X$																
‘POLY’ - $Y = Y + \alpha X^\beta$	‘COPY’ - $Y = X$																
‘SLOG’ - $Y = 10^{\alpha X + \beta}$	‘MAXLIM’ - $Y = \max(\alpha, X)$																
‘LOG10’ - $Y = \log(X)$	‘MINLIM’ - $Y = \min(\alpha, X)$																
‘LOGE’ - $Y = \ln(X)$	‘MULTP’ - $Y = \alpha X^\beta$																
‘INV’ - $Y = \frac{1}{X}$	‘ABS’ - $Y = X $																
‘MULTX’ - $Y = \alpha X$	‘MULTIPLY’ - $Y = XY$																

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
9	X	The name of the array to be used as an input parameter. This is the keyword name identifying the property and is up to eight characters in length and optionally enclosed in quotes.	None
10	ALPHA	An integer or real value that is the α variable in the EQUATION function.	None
11	BETA	An integer or real value that is the β variable in the EQUATION function.	None

Notes:

- Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section.
- Each record must be terminated by a "/" and the keyword is terminated by a "/".

Table 6.94: OPERATE Keyword Description

The applicable arrays for each section are defined in Table 6.95 as shown below.

OPERATE Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFHT			SOLVFRAC		
PERMHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFHT						

Table 6.95: OPERATE Keyword Applicable Arrays by Section

Note that care should be exercised when performing operations on integer array data as all transforms are performed using floating point arithmetic operations. In addition, operations on any of the transmissibility arrays (TRANX, TRANX-, TRANX, TRANX-, TRANZ, and TRANZ-) may result in unintended consequences as these arrays have zero values on the boundary of the grid. In this use OPM ResInsight to verify and visually inspect the results.

Example

The first example uses the MULTP function combined with the Net-to-Gross (NTG) array to re-scale the MULTX, MULTY and MULTZ arrays to reduce the transmissibility in three separation reservoirs based on the reservoir quality (NTG).

```
--
--      MATHEMATICAL OPERATIONS ON ARRAYS BY CELL
--
--      OUTPUT  ----- BOX ----- OPERATION  INPUT  ALPHA  BETA
--      ARRAY   I1  I2   J1  J2   K1  K2  -----  ARRAY   -----
OPERATE
MULTX  1*  1*   1*  1*    1  32  'MULTP'   NTG    1.00   0.75 / RES1
MULTY  1*  1*   1*  1*    1  32  'MULTP'   NTG    1.00   0.75 / RES1
MULTZ  1*  1*   1*  1*    1  32  'MULTP'   NTG    1.00   0.75 / RES1

MULTX  1*  1*   1*  1*   34  64  'MULTP'   NTG    1.00   0.85 / RES2
MULTY  1*  1*   1*  1*   34  64  'MULTP'   NTG    1.00   0.85 / RES2
MULTZ  1*  1*   1*  1*   34  64  'MULTP'   NTG    1.00   0.85 / RES2

MULTX  1*  1*   1*  1*   67  96  'MULTP'   NTG    1.00   0.50 / RES3
MULTY  1*  1*   1*  1*   67  96  'MULTP'   NTG    1.00   0.50 / RES3
MULTZ  1*  1*   1*  1*   67  96  'MULTP'   NTG    1.00   0.50 / RES3
/
```

The next example shows how to set the maximum gas saturation (SGU) based on the minimum (lowest) water saturation (SWL) when using the End-Point Scaling option.

```
--
--      MATHEMATICAL OPERATIONS ON ARRAYS
--
--      OUTPUT  ----- BOX ----- OPERATION  INPUT  ALPHA  BETA
--      ARRAY   I1  I2   J1  J2   K1  K2  -----  ARRAY   -----
OPERATE
SGU      1*  1*   1*  1*   1*  1*  'MULTA'   SWL    -1.0   1.0    /
/
```

The above example set the maximum gas saturation to be one minus the minimum water saturation.

6.3.160 OPERATER – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS BY REGION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The OPERATER keyword is similar to the OPERATE keyword in the GRID section, except it applies the mathematical operation on specific regions, whereas, OPERATE applies the operations on a cell by cell basis. Here the OPERATER keyword defines mathematical operations on property arrays (NTG, PORO etc.) and optionally using another property array as input to the function. The keyword allows for various mathematical functions and their associated variables to be defined and applied to the selected region data. Input constants can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

No.	Name	Description	Default
1	Y	The name of the array to be modified. This is the keyword name identifying the property and is up to eight characters in length and optionally enclosed in quotes.	None
2	REGION	REGION is a positive integer representing the region for which the EQUATION should be applied. The default is to use the region number from the OPERNUM keyword; however this can be reset to another region array via the ARRAY item on this keyword, provided the array exists at the time the keyword is declared in the input deck. Note also the OPERNUM keyword must precede the use of the OPERATER keyword.	0
3	EQUATION	A defined character string enclosed in quotes that selects the mathematical function to be applied, using the X array and the ALPHA and BETA constants declared on this keyword. EQUATION should be set to one of the following character strings: <div style="display: flex; justify-content: space-between;"> <div> <p>'MULTA' - $Y = \alpha X + \beta$</p> <p>'POLY' - $Y = Y + \alpha X^\beta$</p> <p>'SLOG' - $Y = 10^{\alpha X + \beta}$</p> <p>'LOG10' - $Y = \log(X)$</p> <p>'LOGE' - $Y = \ln(X)$</p> <p>'INV' - $Y = \frac{1}{X}$</p> <p>'MULTX' - $Y = \alpha X$</p> </div> <div> <p>'ADDX' - $Y = \alpha + X$</p> <p>'COPY' - $Y = X$</p> <p>'MAXLIM' - $Y = \max(\alpha, X)$</p> <p>'MINLIM' - $Y = \min(\alpha, X)$</p> <p>'MULTP' - $Y = \alpha X^\beta$</p> <p>'ABS' - $Y = X$</p> <p>'MULTIPLY' - $Y = XY$</p> </div> </div>	None
4	X	The name of the array to be used as an input parameter. This is the keyword name identifying the property and is up to eight characters in length and optionally enclosed in quotes.	None
5	ALPHA	An integer or real value that is the α variable in the EQUATION function.	None
6	BETA	An integer or real value that is the β variable in the EQUATION function.	None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
7	ARRAY	The name of the array for which the REGION variable references. This can be any standard region array as declared in the REGION section (FIPNUM, PVTNUM, etc.), provided the array exists at the time the OPERATER keyword is invoked. In addition, the MULTNUM, FLUXNUM and OPERNUM may be used. Only the default value of OPERNUM is supported by OPM Flow.	OPERNUM
Notes: <ol style="list-style-type: none"> Where the REGION should be less than or equal to the maximum number of regions as defined on the REGDIMS keyword for the FIPNUM and OPERNUM arrays or the GRIDOPTS keyword for the MULTNUM array in the RUNSPEC section.. Each record must be terminated by a "/" and the keyword is terminated by a "/". 			

Table 6.96: OPERATE Keyword Description

The applicable arrays for each section are defined in Table 6.97 as shown below.

OPERATE Keyword And Variable Options By Section						
GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
DX	DEPTH	SWL	ENDNUM	PRESSURE		
DY	PORV	SWCR	EQLNUM	SWAT		
DZ	TRANX	SWU	FIPNUM	SGAS		
PERMX	TRANX	SGL	IMBNUM	RV		
PERMY	TRANZ	SGCR	MISCNUM	RS		
PERMZ	DIFFX	SGU	PVTNUM	TBLK		
MULTX	DIFFY	KRW	ROCKNUM	GI		
MULTY	DIFFZ	KRO	SATNUM	OILAPI		
MULTZ	TRANR	KRG	WH2NUM	SALT		
DR	TRANHT	PCG		GASCONC		
THETA	DIFFR	PCW		SOLVCONC		
PERMR	DIFFHT			SOLVFRAC		
PERMHT				SFOAM		
DZNET				SPOLY		
PORO						
NTG						
FLUXNUM						
MULTNUM						
MPANUM						
DIFFX						
DIFFY						
DIFFZ						
DIFFR						
DIFFHT						

Table 6.97: OPERATE Keyword Applicable Arrays by Section

Note that care should be exercised when performing operations on integer array data as all transforms are performed using floating point arithmetic operations. In addition, operations on any of the transmissibility arrays (TRANX, TRANX-, TRANX, TRANX-, TRANZ, and TRANZ-) may result in unintended consequences as these arrays have zero values on the boundary of the grid. In this use OPM ResInsight to verify and visually inspect the results.

Note

The OPERATER and OPERATE keywords allow for great flexibility in generating or modifying the simulator's input arrays. In addition, OPM Flow also has a Python facility to manipulate and calculate data that offers even greater flexibility, but note that this feature is not compatible with the commercial simulator.

Finally, OPM ResInsight, the post-processing plotting software, has both Octave and Python scripting facilities that enable both data generation and visual inspection of the results. The resulting calculated arrays can then be exported from OPM ResInsight and "included" back into OPM Flow, thus maintaining compatibility with the commercial simulator.

Example

The first example uses the MULTP function combined with the Net-to-Gross (NTG) array to re-scale the MULTX, MULTY and MULTZ arrays to reduce the transmissibility in three separate reservoirs based on the reservoir quality (NTG). This keyword sequence should be in the GRID section.

```
--
--      MATHEMATICAL OPERATIONS ON ARRAYS BY REGION
--
--      OUTPUT  REGN  OPERATION  SOURCE  ALPHA  BETA  REGN
--      ARRAY   NUM   TYPE        ARRAY   CONST  CONST  ARRAY
OPERATER
MULTX  1      'MULTP'   NTG     1.00   0.75   / RES1
MULTY  1      'MULTP'   NTG     1.00   0.75   / RES1
MULTZ  1      'MULTP'   NTG     1.00   0.75   / RES1

MULTX  2      'MULTP'   NTG     1.00   0.85   / RES2
MULTY  2      'MULTP'   NTG     1.00   0.85   / RES2
MULTZ  2      'MULTP'   NTG     1.00   0.85   / RES2

MULTX  3      'MULTP'   NTG     1.00   0.50   / RES3
MULTY  3      'MULTP'   NTG     1.00   0.50   / RES3
MULTZ  3      'MULTP'   NTG     1.00   0.50   / RES3
/
```

Notice that the ARRAY variable has been defaulted, resulting in OPERNUM being the regional array for the REGION variable.

The next example shows how to set the maximum gas saturation (SGU) based on the minimum (lowest) water saturation (SWL) when using the End-Point Scaling option, in the PROPS section.

```
--
--      MATHEMATICAL OPERATIONS ON ARRAYS
--
--      OUTPUT  REGN  OPERATION  SOURCE  ALPHA  BETA  REGN
--      ARRAY   NUM   TYPE        ARRAY   CONST  CONST  ARRAY
OPERATER
SGU  1      'MULTA'   SWL     -1.0   1.0    /
SGU  2      'MULTA'   SWL     -1.0   1.0    /
SGU  3      'MULTA'   SWL     -1.0   1.0    /
/
```

The above example set the maximum gas saturation to be one minus the minimum water saturation for regions one to three.

The final example shows how to reset the FIPNUM array when the exported array from the earth model does not correspond to the simulator's desired numbering scheme.

```
--
--      MATHEMATICAL OPERATIONS ON ARRAYS BY REGION
--
--      RESET FIPNUM BASED ON MULTNUM AND OPERNUM
--
--      DESTIN   REGN   OPERATION   SOURCE   ALPHA   BETA   INPUT   SEGNUM   EQUIL
--      ARRAY    NUM    TYPE          ARRAY    CONST  CONST  ARRAY   NUMBER   NUMBER
OPERATER
FIPNUM    26      'MULTA'    'MULTNUM' 0.00     1       /    26      1
FIPNUM    44      'MULTA'    'MULTNUM' 0.00     2       /    44      2
FIPNUM    62      'MULTA'    'MULTNUM' 0.00     3       /    62      3
FIPNUM    98      'MULTA'    'MULTNUM' 0.00     4       /    98      4
FIPNUM   116      'MULTA'    'MULTNUM' 0.00     5       /   116     5
FIPNUM   134      'MULTA'    'MULTNUM' 0.00     6       /   134     6
FIPNUM    46      'MULTA'    'MULTNUM' 0.00     7       /    46     7
FIPNUM    64      'MULTA'    'MULTNUM' 0.00     8       /    64     8
FIPNUM    82      'MULTA'    'MULTNUM' 0.00     9       /    82     9
FIPNUM   226      'MULTA'    'MULTNUM' 0.00    10      /   226    10
FIPNUM   262      'MULTA'    'MULTNUM' 0.00    11      /   262    11
FIPNUM   280      'MULTA'    'MULTNUM' 0.00    12      /   280    12
FIPNUM   298      'MULTA'    'MULTNUM' 0.00    13      /   298    13
FIPNUM    33      'MULTA'    'MULTNUM' 0.00    14      /    33    14
FIPNUM    51      'MULTA'    'MULTNUM' 0.00    15      /    51    15
FIPNUM   105      'MULTA'    'MULTNUM' 0.00    16      /   105    16
FIPNUM   159      'MULTA'    'MULTNUM' 0.00    17      /   159    17
FIPNUM   195      'MULTA'    'MULTNUM' 0.00    18      /   195    18
FIPNUM   267      'MULTA'    'MULTNUM' 0.00    19      /   267    19
FIPNUM   303      'MULTA'    'MULTNUM' 0.00    20      /   303    20
FIPNUM   321      'MULTA'    'MULTNUM' 0.00    21      /   321    21
FIPNUM   339      'MULTA'    'MULTNUM' 0.00    22      /   339    22
FIPNUM    54      'MULTA'    'MULTNUM' 0.00    23      /    54    23
FIPNUM    72      'MULTA'    'MULTNUM' 0.00    24      /    72    24
FIPNUM   108      'MULTA'    'MULTNUM' 0.00    25      /   108    25
FIPNUM   144      'MULTA'    'MULTNUM' 0.00    26      /   144    26
FIPNUM   270      'MULTA'    'MULTNUM' 0.00    27      /   270    27
/
```

Note that operation can only be done in the REGION section as FIPNUM is only available for use in this section and that the ARRAY variable has been defaulted, resulting in OPERNUM being the regional array for the REGION variable.

6.3.161 OPERNUM – DEFINE REGIONS FOR MATHEMATICAL OPERATIONS ON ARRAYS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the OPERATER region numbers for each grid block. The OPERNUM keyword defines the region numbers for each grid block, as such there must be one entry for each cell in the model. The array can also be used with the EQUALREG, ADDREG, COPYREG, MULTIREG, MULTREGP and MULTREGT keywords, as well as the OPERATER keyword in calculating various grid properties in the GRID and REGION section.

No.	Name	Description	Default
I	OPERNUM	<p>OPERNUM defines an array of positive integers greater than or equal to one that assigns a grid cell to a particular OPERNUM region.</p> <p>The maximum number of OPERNUM regions is set by the NOPREG variable on the REGDIMS keyword in the RUNSPEC section.</p> <p>Note that the default value of zero implies that the calculations requested by the OPERATER keyword will not be performed.</p>	0
<p>Notes:</p> <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.98: OPERNUM Keyword Description

Examples

The example below sets three OPERNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE OPERNUM REGIONS FOR ALL CELLS
--
OPERNUM
      2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
      3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      OPERNUM      1              1*  1*   1*  1*   1*  1* / SET REGION 1
      OPERNUM      2              1   2    1   2    1   1 / SET REGION 2
      OPERNUM      3              1   2    1   2    2   2 / SET REGION 3
/
```

One can then increase PERMX by 25% in region three only.

```
--
--      MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER
--
--      ARRAY      CONSTANT  REGION  REGION ARRAY
--      VALUE      NUMBER    M / F / O
MULTIREG
      PERMX      1.25      3        0
/
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.162 OUTRAD - DEFINE THE OUTER RADIUS OF A RADIAL GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

OUTRAD defines the OUTER radius of the reservoir model for a radial or spider grid geometry. The RADIAL or SPIDER keyword in the RUNSPEC should be activated to indicate that radial or spider geometry is being used.

Currently this keyword is ignored by OPM Flow and has no effect on the simulation; however one can use the vector form of the keyword, DRV, to enter the data instead.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	OUTRAD	A single real positive number greater than INRAD defining the outer radius of a radial grid.			None
		feet	m	cm	
Notes: I) The keyword is terminated by a “/”.					

Table 6.99: OUTRAD Keyword Description

Note that the SPIDER keyword activates OPM Flow’s radial grid geometry option for the model. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID section. A spider grid can be viewed in 3D in OPM ResInsight unlike radial grids that cannot be viewed in the software. To overcome this, the simulator now converts radial grids to Irregular Corner-Point Grids and adjusts the model’s pore volume to reflect radial coordinates; thus, overcoming the display limitation.

The keyword allows for an alternative method of entering the size of the R direction grid cells instead of entering the data using the DR or DRV keywords in the GRID section. Given the internal radius set by the INRAD keyword, the external radius set by the OUTRAD keyword and the number of grid cells in the R direction set by the NX variable on the DIMENS keyword in the RUNSPEC section, the R direction cells sizes are computed automatically on a geometric spacing, as defined by:

$$\frac{R_i}{R_{i-1}} = \left(\frac{OUTRAD}{R_{i-1}} \right)^{\frac{1}{(NX - i_j + 1)}} \quad (6.12)$$

or

$$R_i = \left(R_{i-1} \right)^{\frac{(i - i_j + 1)}{(NX - i_j + 1)}} \left(\frac{OUTRAD}{R_{i-1}} \right)^{\frac{1}{(NX - i_j + 1)}} \quad (6.13)$$

and the DR value for the i^{th} cell, that is the value that can also be manually entered on the DR keyword in the GRID section, is given by:

$$DR_i = R_i - R_{i-1} \quad (6.14)$$

Where:

- DR_i = DR value for the i^{th} cell
- R_i = current total radius for the i radii.
- R_{i-1} = total radius for the $i - 1$ radii.
- NX (NR) = number of radial grid cells excluding the inner radius
- OUTRAD = the outer radius of the radial grid, the value includes the inner radius.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

For example, given an inner radius set to 0.25, an outer radius of 2,050 and the number of cells in the R direction set to ten, then Table 6.100 shows the grid size calculations.

OUTRAD Radial Grid Example			
INRAD	0.25		
OUTRAD	2050.0		
NX	10		
NX	Ri	DR	Ratio
0	0.250	0.250	
1	0.616	0.366	1.463
2	1.516	0.900	2.463
3	3.733	2.217	2.463
4	9.193	5.460	2.463
5	22.638	13.445	2.463
6	55.748	33.109	2.463
7	137.281	81.533	2.463
8	338.058	200.777	2.463
9	832.477	494.420	2.463
10	2050.000	1217.523	2.463
Total		2050.000	

Table 6.100: OUTRAD Radial Grid Example

See also the DR, DRV, DTHETA, DTHETAV and TOPS keywords to fully define a Radial or Spider Grid.

Example

```
--
--      INNER RADIUS OF FIRST GRID BLOCK IN THE RADIAL DIRECTION
--
INRAD      0.25
--
--      OUTER RADIUS OF FIRST GRID BLOCK IN THE RADIAL DIRECTION
--
OUTRAD     2050.0
```

The above example defines the inner radius to be 0.25 and the outer radius to be 2,050 feet. Note that the outer radius includes the inner radius.

6.3.163 PARAOPTS – DEFINE PARALLEL RUN OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PARAOPTS keyword defines various options for parallel runs, for when the Parallel option has been invoked by the PARALLEL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to run OPM Flow in parallel mode.

6.3.164 PEBI – ACTIVATE AND DEFINED PEBI GRID OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PEBI activates the unstructured Perpendicular Bisector (“PEBI”)⁶⁷ and ⁶⁸ loading of grid data generated by an external pre-processing program for generating simulation grids.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
1	OPTION1	A defined character string that activates or deactivates the checking of negative transmissibility values. OPTION1 should be set to YES to check for negative values, or NO switches off this option.	NO
2	OPTION2	A defined character string that activates or deactivates the calculation of pore volumes and transmissibilities. OPTION2 should be set to YES if the pore volumes and transmissibilities are provided, or NO for the values to calculated by the simulator.	NO

Table 6.101: PEBI Keyword Description

Example

```
--
--      OPTION1  OPTION2
--      CHECK    CALCULATE
PEBI
      NO        YES
```

The above example switches off the negative transmissibility check and requests that the simulator calculates pore volumes and transmissibilities as they are not provided by the input data.

⁶⁷ Heinemann, Z.E. and Brand, C.W. 1988. Gridding Techniques in Reservoir Simulation. Proc., First Intl. Forum on Reservoir Simulation, Alpbach, Austria, 339.

⁶⁸ Heinemann, Z.E., Brand, C.W., Munka, M. et al. 1991. Modeling Reservoir Geometry With Irregular Grids. SPE Res Eng 6 (2): 225–232. SPE-18412-PA. <http://dx.doi.org/10.2118/18412-PA>

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.165 PERMAVE – DEFINE AVERAGE TRANSMISSIBILITY COEFFICIENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PERMAVE keyword defines the three directional exponent coefficients used to average the grid block permeabilities between two neighboring cells when calculating the transmissibility between the two blocks. The keyword can be used to change from the default weighted harmonic averaging (coefficient set equal to -1), to geometric (coefficient equal to zero), or to arithmetic averaging (coefficient equal to 1). The three coefficients represent the averaging in the x-, y- and z-directions.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.166 PERMJFUN – DEFINE LEVERETT J-FUNCTION PERMEABILITY FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PERMJFUN defines the permeability to be used in de-normalizing the Leverett J-Functions⁶⁹ for when the PERM variable on the JFUNC or the JFUNC keyword in the GRID section has been set to “U”, as oppose to using PERMX, PERMY, PERMZ arrays etc.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PERMJFUN	PERMJFUN is an array of real positive numbers assigning the permeability to be used in de-normalizing the Leverett J-Function to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		mD	mD	mD	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.102: PERMJFUN Keyword Description

For grid blocks that have not been assigned a PERMJFUN value the default directional permeability will be used, that is the average of PERMX and PERMY.

See also the PERMX, PERMY and PERMZ keywords to fully define the permeability for the model.

Example

```
--
--      DEFINE GRID BLOCK PERMJFUN FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PERMJFUN      100*500.0    100*50.0    100*200.0      /
```

The above example defines the PERMJFUN to be 500.0, 50.0, and 200.0 for the first, second and third layers in the model for all 300 cells, as defined by the DIMENS keyword in the RUNSPEC section.

⁶⁹ Leverett, M. C.; “Capillary Behaviour in Porous Solids”, Trans. AIME (1941) 142, 152-168.

6.3.167 PERMR – DEFINE THE PERMEABILITY FOR EACH CELL IN THE R DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PERMR sets the permeability for each cell in the R direction in a radial geometry grid. The RADIAL or SPIDER keywords in the RUNSPEC should be activated to indicate that radial or spider geometry is being used.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PERMR	PERMR is an array of real positive numbers assigning the permeability in the R direction to each cell in the model.This equivalent to PERMX in a Cartesian grid. Repeat counts may be used,for example 20*100.0.			None
		mD	mD	mD	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section,unless the BOX keyword defines a sub area of the grid,in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a “/”.					

Table 6.103: PERMR Keyword Description

Note that the SPIDER keyword activates OPM Flow's radial grid geometry option for the model. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID the section. A spider grid can be viewed in 3D in OPM ResInsight unlike radial grids that cannot be viewed in the software. To overcome this, the simulator now converts radial grids to Irregular Corner-Point Grids and adjusts the model's pore volume to reflect radial coordinates; thus, overcoming the display limitation.

See also the PERMTH and PERMZ keywords to fully define the permeability for a radial or spider grid model.

Example

```
--
--      DEFINE GRID BLOCK PERMR DATA FOR ALL CELLS (BASED ON NR x NY x NZ = 300)
--
PERMR      100*500.0   100*50.0   100*200.0      /
```

The above example defines the PERMR to be 500.0, 50.0, and 200.0 for the first, second and third layers in the model for all 300 cells, as defined by the DIMENS keyword (10, 10, 3) in the RUNSPEC section.

6.3.168 PERMTHT – DEFINE THE PERMEABILITY FOR EACH CELL IN THE THETA DIRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PERMTHT sets the permeability for each cell in the THETA direction in a radial geometry grid. The RADIAL or SPIDER keyword in the RUNSPEC should be activated to indicate that radial or spider geometry is being used.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PERMTHT	PERMTHT is an array of real positive numbers assigning the permeability in the THETA direction to each cell in the model. This equivalent to PERMY in a Cartesian grid. Repeat counts may be used, for example 20*100.0.			None
		mD	mD	mD	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.104: PERMTHT Keyword Description

Note that the SPIDER keyword activates OPM Flow's radial grid geometry option for the model. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID the section. A spider grid can be viewed in 3D in OPM ResInsight unlike radial grids that cannot be viewed in the software. To overcome this, the simulator now converts radial grids to Irregular Corner-Point Grids and adjusts the model's pore volume to reflect radial coordinates; thus, overcoming the display limitation.

See also the PERMR and PERMZ keywords to fully define the permeability for a radial or spider grid model.

Example

```
--
--      DEFINE GRID BLOCK PERMTHT DATA FOR ALL CELLS (NX x NY x NZ = 300)
--
PERMTHT      100*500.0    100*50.0    100*200.0      /
```

The above example defines the PERMTHT to be 500.0, 50.0, and 200.0 for the first, second and third layers in the model for all 300 cells, as defined by the DIMENS keyword (10, 10, 3) in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.169 PERMX - DEFINE THE PERMEABILITY IN THE X DIRECTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PERMX defines the permeability in the X direction for all the cells in the model via an array. The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PERMX	PERMX is an array of real positive numbers assigning the permeability in the X direction to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		mD	mD	mD	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.105: PERMX Keyword Description

See also the PERMY and PERMZ keywords to fully define the permeability for the model.

Example

```
--
--      DEFINE GRID BLOCK PERMX DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PERMX      100*500.0    100*50.0    100*200.0      /
```

The above example defines the PERMX to be 500.0, 50.0, and 200.0 for the first, second and third layers in the model for all 300 cells, as defined by the DIMENS keyword in the RUNSPEC section.

6.3.170 PERMY - DEFINE THE PERMEABILITY IN THE Y DIRECTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PERMY defines the permeability in the Y direction for all the cells in the model via an array. The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PERMY	PERMY is an array of real positive numbers assigning the permeability in the Y direction to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		mD	mD	mD	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.106: PERMY Keyword Description

See also the PERMX and PERMZ keywords to fully define the permeability for the model.

Example

```
--
--      DEFINE GRID BLOCK PERMY DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PERMY      100*500.0    100*50.0    100*200.0      /
```

The above example defines the PERMY to be 500.0, 50.0, and 200.0 for the first, second and third layers in the model for all 300 cells, as defined by the DIMENS keyword in the RUNSPEC section.

6.3.171 PERMZ - DEFINE THE PERMEABILITY IN THE Z DIRECTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PERMZ defines the permeability in the Z direction for all the cells in the model via an array. The keyword can be used for all grid types, except for the Radial Grid geometry.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PERMZ	PERMZ is an array of real positive numbers assigning the permeability in the Z direction to each cell in the model. Repeat counts may be used, for example 200*50.0.			None
		mD	mD	mD	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.107: PERMZ Keyword Description

Note

Although PERMX and PERMY are commonly set to be equal, PERMZ is typically not equal to either PERMX or PERMY. Normally PERMZ is set as a fraction of PERMX with typical values ranging from 0.1 to 0.5 times PERMX.

See also the PERMX and PERMY keywords to fully define the permeability for the model.

Example

The example below defines the PERMZ to be 50.0, 5.0, and 20.0 for the first, second and third layers in the model for all 300 cells, as defined by the DIMENS keyword in the RUNSPEC section.

```
--
--      DEFINE GRID BLOCK PERMZ DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PERMZ      100*50.0      100*5.0      100*20.0      /
```

The next example sets PERMX to be 500.0, 50.0, and 200.0 for the first, second and third layers in the model for all 300 cells, as defined by the DIMENS keyword in the RUNSPEC section. It then copies the PERMX values to the PERMY and PERMZ arrays, and finally multiplies PERMZ by 0.1 times to get the final values for PERMZ.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---


```
--
--      DEFINE GRID BLOCK PERMX DATA FOR ALL CELLS
--
PERMX      100*500.0    100*50.0    100*200.0
--
--      SOURCE      DESTIN.      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
COPY
      PERMX      PERMY      1*  1*   1*  1*   1*  1* / CREATE PERMY
      PERMX      PERMZ      1*  1*   1*  1*   1*  1* / CREATE PERMZ
/
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
MULTIPLY
      PERMZ      0.10000      1*  1*   1*  1*   1*  1* / PERMZ * 0.1
/
```

The above sequence of keywords is quite common in input decks, that is copying the PERMX data to the PERMY and PERMZ arrays and then adjusting the PERMY and PERMZ arrays as required using the MULTIPLY keyword.

6.3.172 PETGRID – LOAD A GENERIC SIMULATION GRID FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PETGRID keyword instructs the simulator to load a Generic Simulation Grid (*.GSG) file that contains grid geometry data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.173 PINCH – DEFINE PINCH-OUT LAYER OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PINCH keyword defines the parameters used to control the generation of Non-Neighbor Connections (“NNCs”) in the vertical (K) direction due to layers pinching out. This keyword is applied to all layers in the model as opposed to the PINCHREG keyword that offers more flexibility by applying the pinch-out controls to various regions in the model defined by the PINCHNUM keyword.

OPM Flow will automatically generate connections between non neighbor cells in the vertical direction based on the parameters on this keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PINCHTHK	A real number defining the pinch-out threshold thickness for any cell. NNCs are generated across inactive cells having a vertical thickness less than PINCHTHK.			Defined
		ft. 0.001	m 0.001	cm 0.001	
2	PINCHOPT	A character string controlling the generation of pinch-outs when the MINPV keyword has been used to deactivate cells with small pore volumes. PINCHOPT can either be set to: 1) GAP to allow the generation of NNCs across cells that have been made inactive with the MINPV keyword when the thickness is greater than PINCHTHK threshold. 2) NOGAP to enforce the strict adherence to the PINCHTHK threshold whether or not cells have been made inactive due to the MINPV keyword.			GAP
3	PINCHGAP	A real number defining the maximum “empty” thickness allowed between grid blocks in adjacent grid layers for a non-zero transmissibility to exist between them.			Defined
		ft. 1.0E20	m 1.0E20	cm 1.0E20	
4	PINCHCAL	A character string controlling the calculation of the pinch-out transmissibilities. PINCHCAL can either be set to: 1) TOPBOT results in the pinch-out transmissibility being calculated from the half-cell Z-direction transmissibilities of the active cells on either side of the pinched-out layers. 2) ALL results in the pinch-out transmissibility being calculated from the Z-direction transmissibilities harmonic average of all the cells between the active cells on either side of the pinched-out layers.			TOPBOT

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	PINCHMUL	<p>A character string controlling the calculation of the pinch-out transmissibilities when adjustments have been made by the MULTZ keyword. PINCHMUL can either be set to:</p> <ul style="list-style-type: none">1) TOP results in the pinch-out transmissibility being calculated from the active cell at the top of the pinch-out.2) ALL results in the pinch-out transmissibility being calculated from the minimum value of the MULTZ of the active cell at the top of the pinch-out and all the inactive cells in the pinch-out vertical column. <p>Note if PINCHCAL has been set equal to ALL then PINCHMUL is reset to TOP, irrespective of the entered value for PINCHMUL.</p>			TOP
<p>Notes:</p> <ul style="list-style-type: none">1) The keyword is terminated by a “/”.					

Table 6.108: PINCH Keyword Description

Examples

The first example below will create NNCs between the cells above and below any cell having vertical thickness less than 0.01 in either feet or metres.

```
--
--      SET PINCH-OUT PARAMETERS FOR CALCULATING PINCH-OUT PROPERTIES
--
PINCH
--      THRESHOLD   GAP      EMPTY   TRANS
--      THICKNESS   NO GAP   GAP      CALC
--      0.01        1*       1*       1*                               /
```

For the second example, the MINPV keyword is used to set the minimum pore volume to 500 m³ (metric units) and then the PINCH keyword is invoked with PINCHGAP set equal to GAP, as follows:

```
--
--      MINIMUM PORE VOLUME FOR ACTIVE CELLS
--
MINPV
--      1000.0                               /
--
--      SET PINCH-OUT CRITERIA FOR THE MODEL
--
PINCH
--      THRESHOLD   GAP      EMPTY   TRANS
--      THICKNESS   NO GAP   GAP      CALC
--      0.1         GAP      1*       1*                               /
```

In the above example the MINPV keyword will deactivate all cells with pore volumes less than 500 m³. These deactivated cells are inactive in the model and therefore are not included in the flow calculations; however, by default they will result in no-flow barriers but may not be thin enough for PINCH to create NNCs across them. By setting PINCHGAP equal to GAP on the PINCH keyword (the default setting), then OPM Flow generates NNCs across the cells that have been deactivated by the MINPV keyword. However, in this case there may be grid blocks in the model with a pore volume greater than MINPV but a thickness less than the pinch-out threshold. These cells will not be deactivated by the PINCH keyword.

6.3.174 PINCHNUM – DEFINE PINCH-OUT REGIONS FOR THE PINCHREG KEYWORD

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PINCHNUM keyword defines the pinch-out region numbers for each grid block, as such there must be one entry for each cell in the model. The array is used with the PINCHREG keyword to set the pinch-out options and threshold thickness for each region.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	PINCHNUM	PINCHNUM defines an array of positive integers assigning a grid cell to a particular PINCHNUM region. The maximum number of PINCHNUM regions is set by the NRPINC variable on the GRIDOPTS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.109: PINCHNUM Keyword Description

Example

The example below sets defines three PINCHNUM regions for various layers in a model based on the model's layering.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
EQUALS
      MULTNUM      1           1*  1*   1*  1*   1*  1* / SET REGION 1
      MULTNUM      2           1   2    1   2    10  50 / SET REGION 2
      MULTNUM      3           1   2    1   2    51 100 / SET REGION 3
/
```

One can then set the pinch-out criteria for each region.

```
--
--      SET PINCH-OUT CRITERIA VIA THE PINCHNUM REGION
--
PINCHREG
--      THRESHOLD  GAP      EMPTY  TRANS
--      THICKNESS  NO GAP   GAP     CALC
--      0.1         1*      1*      1*           / PINCHNUM 01
--      1.0         1*      10      1*           / PINCHNUM 02
--      1.0         NOGAP   20      1*           / PINCHNUM 03
```

The above example sets the default pinch-out criteria for grid blocks defined as region one via the PINCHNUM array and different criteria for regions two and three.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.175 PINCHOUT - DEFINE PINCH-OUT LAYERS OPTION (FIXED)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PINCHOUT keyword activates the generation of Non-Neighbor Connections (“NNCs”) in the vertical (K) direction due to layers pinching out, using a constant threshold thickness of 0.001 for all unit systems. See also the PINCH keyword in the GRID section that allows for specifying the threshold thickness and other parameters on a layer basis, and the PINCHREG keyword that applies the pinch-out controls to various regions in the model defined by the PINCHNUM keyword.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

The example will create NNCs between the cells above and below any cell having vertical thickness less than 0.001 in either feet or metres.

```
--
--      SET PINCH-OUT CRITERIA WITH CONSTANT THRESHOLD THICKNESS OF 0.001
--
PINCHOUT
```

6.3.176 PINCHREG - DEFINE PINCH-OUT REGION OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PINCHREG keyword defines the parameters used to control the generation of Non-Neighbor Connections (“NNCs”) in the vertical (K) direction due to layers pinching out in combination with the PINCHNUM keyword. This allows different regions in the model to use different criteria in controlling the how pinch-outs are generated. The keyword should contain NRPINC records defining the criteria for each pinch-out region defined with the PINCHNUM keyword. NRPINC is the maximum number of PINCHNUM regions defined via the GRIDOPTS keyword in the RUNSPEC section.

An alternative method to set the pinch-out criteria is to use the PINCH keyword, that applies the criteria to the whole model.

OPM Flow will automatically generate connections between non neighbor cells in the vertical direction based on the parameters on this keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PINCHTHK	A real number defining the pinch-out threshold thickness for any cell. NNCs are generated across inactive cells having a vertical thickness less than PINCHTHK.			Defined
		ft. 0.001	m 0.001	cm 0.001	
2	PINCHOPT	A character string controlling the generation of pinch-outs when the MINPV keyword has been used to deactivate cells with small pore volumes. PINCHOPT can either be set to: 1) GAP to allow the generation of NNCs across cells that have been made inactive with the MINPV keyword when the thickness is greater than PINCHTHK threshold. 2) NOGAP to enforce the strict adherence to the PINCHTHK threshold whether or not cells have been made inactive due to the MINPV keyword.			GAP
3	PINCHGAP	A real number defining the maximum “empty” thickness allowed between grid blocks in adjacent grid layers for a non-zero transmissibility to exist between them.			Defined
		ft. 1.0E20	m 1.0E20	cm 1.0E20	
4	PINCHCAL	A character string controlling the calculation of the pinch-out transmissibilities. PINCHCAL can either be set to: 1) TOPBOT results in the pinch-out transmissibility being calculated from the half-cell Z-direction transmissibilities of the active cells on either side of the pinched-out layers. 2) ALL results in the pinch-out transmissibility being calculated from the Z-direction transmissibilities harmonic average of all the cells between the active cells on either side of the pinched-out layers.			TOPBOT

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	PINCHMUL	<p>A character string controlling the calculation of the pinch-out transmissibilities when adjustments have been made by the MULTZ keyword. PINCHMUL can either be set to:</p> <ul style="list-style-type: none">1) TOP results in the pinch-out transmissibility being calculated from the active cell at the top of the pinch-out.2) ALL results in the pinch-out transmissibility being calculated from the minimum value of the MULTZ of the active cell at the top of the pinch-out and all the inactive cells in the pinch-out vertical column. <p>Note if PINCHCAL has been set equal to ALL then PINCHMUL is reset to TOP, irrespective of the entered value for PINCHMUL.</p>			TOP

Notes:

- 1) The keyword should contain NRPINC records defining the criteria for each pinch-out region defined with the PINCHNUM keyword. NRPINC is the maximum number of PINCHNUM regions defined via the GRIDOPTS keyword in the RUNSPEC section.
- 2) Each record must be terminated by a “/” there is no keyword terminating “/”.

Table 6.110: PINCHREG Keyword Description

Example

```
--
--      SET PINCH-OUT CRITERIA VIA THE PINCHNUM REGION
--
PINCHREG
--      THRESHOLD   GAP      EMPTY   TRANS
--      THICKNESS   NO GAP   GAP      CALC
--      0.1          1*      1*      1*      / PINCHNUM 01
--      1.0          1*      10      1*      / PINCHNUM 02
--      1.0          NOGAP   20      1*      / PINCHNUM 03
```

The above example sets the default pinch-out criteria for grid blocks defined as region one via the PINCHNUM array and different values for regions two and three.

6.3.177 PINCHXY – DEFINE PINCH-OUT AREAL OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PINCHXY keyword defines the x-direction and y-direction threshold thickness used to control the generation of Non-Neighbor Connections (“NNCs”) in the x- and y- directions for missing cells in the areal plane.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PINCHTHX	A real number defining the pinch-out threshold width for any cell in the x-direction. NNCs are generated across inactive cells having a width less than PINCHTHX in the x-direction.			Defined
		ft. 0.001	m 0.001	cm 0.001	
2	PINCHTHY	A real number defining the pinch-out threshold width for any cell in the y-direction. NNCs are generated across inactive cells having a width less than PINCHTHY in the y-direction.			Defined
		ft. 0.001	m 0.001	cm 0.001	
Notes: 1) The keyword is terminated by a “/”.					

Table 6.111: PINCHXY Keyword Description

Example

The example below will create NNCs between the cells in the areal plane having cell widths less than 0.01 in either feet or metres in both the x- and y-directions.

```
--
--      SET PINCH-OUT PARAMETERS FOR AREAL PLANE
--
PINCHXY
--      X-DIRC      Y-DIRC
--      THRESHOLD   THRESHOLD
--
--      0.01        0.01
```

6.3.178 PORO - DEFINE THE POROSITY VALUES FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PORO defines the porosity for all the cells in the model via an array. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PORO	PORO is an array of real positive numbers that are greater than or equal to zero and less than or equal to one that are the porosity values for each cell in the model. Repeat counts may be used, for example 3000*0.15			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.112: PORO Keyword Description

See also the NTG, PERMX, PERMY and PERMZ keywords to fully define a grid's properties

Example

```
--
--   DEFINE GRID BLOCK POROSITY DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PORO
    300*0.300 /
```

The above example defines a constant porosity of 0.300 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

6.3.179 PYEND – END THE DEFINITION OF A PYINPUT SECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PYINPUT and PYEND keywords are a part of OPM Flow's Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords.

PYINPUT declares the start of a PYINPUT Definition Section on a single separate line, which is then followed by various standard Python commands, with one command per line. A PYINPUT Definition Section is terminated by a PYEND keyword (this keyword) on a separate single line.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Although this keyword is read by OPM Flow and the script processing has been implemented, one should use caution when using this facility as it may result in OPM Flow aborting. This is because the PYINPUT facility allows the user to implement complex functionality and the implementation is new for the 2020-04 release. Users should therefore use caution when using this facility.

Note

This is an OPM Flow specific keyword for the simulator's scripting facility using the standard Python interpreter, as such it gives more flexibility than the commercial simulator's data editing keywords (ADD, EQUAL, MULTIPLY, etc.), although OPM Flow also supports these keywords as well.

The PYINPUT facility should be considered experimental as details of the OPM Flow - Python interface might change for future releases. In particular, the current implementation is quite minimal; however, future releases are expected to add more entry points in the simulator's deck class which can be used to manipulate the input deck as the data is loaded. As a user you are encouraged to come with wishes in this regard.

The PYINPUT facility is very powerful and allows for any piece of Python code to be included and run, including potentially malicious code. The important point is to scrutinize the Python code in between PYINPUT and PYEND in a deck you receive from other parties.

See also the PYACTION keyword in the SCHEDULE section which is also part of OPM Flow's Python scripting facility, that loads a standard Python script file that can be used to define a series of conditions and actions as the simulation proceeds through time.

Example

The example shows how to construct the DX variable in the GRID section and to add the resulting DX array as part of the input deck.

```
--
--      START OF PYINPUT SECTION
--
PYINPUT
#
# Import Numpy Model
#
import numpy as np
#
# Define DX and Get the Input Decks Unit Systems
#
dx = np.array([100.0, 100.0, 100.0, 100.0])
active_unit_system = context.deck.active_unit_system()
default_unit_system = context.deck.default_unit_system()
#
# Set DX in the Input Deck
#
kw = context.DeckKeyword( context.parser['DX'], dx, active_unit_system,
default_unit_system )
context.deck.add(kw)

PYEND
```

The active Parser objects are accessible as context.parser and the active Deck object is available as context.deck.

6.3.180 PYINPUT – DEFINE THE START OF A PYINPUT SECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PYINPUT and PYEND keywords are a part of OPM Flow's Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords used by the simulator.

PYINPUT declares the start of a PYINPUT Definition Section on a single separate line, which is then followed by various standard Python commands, with one command per line. A PYINPUT Definition Section is terminated by a PYEND keyword on a separate single line.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Although this keyword is read by OPM Flow and the script processing has been implemented, one should use caution when using this facility as it may result in OPM Flow aborting. This is because the PYINPUT facility allows the user to implement complex functionality and the implementation is new for the 2020-04 release. Users should therefore use caution when using this facility.

Note

This is an OPM Flow specific keyword for the simulator's scripting facility using the standard Python interpreter, as such it gives more flexibility than the commercial simulator's data editing keywords (ADD, EQUAL, MULTIPLY, etc.), although OPM Flow also supports these keywords as well.

The PYINPUT facility should be considered experimental as details of the OPM Flow - Python interface might change for future releases. In particular, the current implementation is quite minimal; however, future releases are expected to add more entry points in the simulator's deck class which can be used to manipulate the input deck as the data is loaded. As a user you are encouraged to come with wishes in this regard.

The PYINPUT facility is very powerful and allows for any piece of Python code to be included and run, including potentially malicious code. The important point is to scrutinize the Python code in between PYINPUT and PYEND in a deck you receive from other parties.

No.	Name	Description	Default
PYINPUT		PYINPUT declares the start of a PYINPUT Definition Section. This is then followed by any number Python commands.	Not Applicable
I-I	PYTHON	A series of standard Python commands with one line per command. The active Parser objects are accessible as context.parser and the active Deck object is available as context.deck.	
PYEND		PYEND declares the end of a PYINPUT Definition Section. The Python code between PYINPUT and PYEND is read and executed, and the simulator then returns to reading the normal simulation input deck.	
Notes: 1) There is no terminating “/” for this keyword, instead the PYEND keyword terminates the keyword.			

Table 6.113: PYINPUT Keyword Description

The PYINPUT/PYEND set of keywords is a result of combining two programming languages, the interactive Python interpreter and OPM Flow's source code language C++. When combining two languages one extends

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

and embeds one into the other. When extending Python with C++ the functionality implemented in C++ is made available to Python applications, when embedding Python in C++ one can call Python functions from within C++. The PYINPUT/PYEND set of keywords is based on embedding a Python interpreter in the C++ OPM Flow simulator, but the Python code actually runs as part of the PYINPUT keyword is based on wrapping C++ objects in Python, that is extending Python.

The Python code in between the PYINPUT and PYEND keywords are imported during processing of the input deck and as such this implies that basic Python syntax checking is performed during reading the Python script.

See also the PYACTION keyword in the SCHEDULE section which is also part of OPM Flow's Python scripting facility, that loads a standard Python script file that can be used to define a series of conditions and actions as the simulation proceeds through time.

Example

The example shows how to construct the DX variable in the GRID section and to add the resulting DX array as part of the input deck.

```
--
--      START OF PYINPUT SECTION
--
PYINPUT
#
# Import Numpy Model
#
import numpy as np
#
# Define DX and Get the Input Decks Unit Systems
#
dx = np.array([100.0, 100.0, 100.0, 100.0])
active_unit_system = context.deck.active_unit_system()
default_unit_system = context.deck.default_unit_system()
#
# Set DX in the Input Deck
#
kw = context.DeckKeyword( context.parser['DX'], dx, active_unit_system,
default_unit_system )
context.deck.add(kw)

PYEND
```

The active Parser objects is accessible as context.parser and the active Deck object is available as context.deck.

6.3.181 QMOBIL ACTIVATE OR DEACTIVATE LGR END-POINT MOBILITY CORRECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The QMOBIL keyword activates or deactivates the end-point mobility correction for Local Grid Refinements ("LGR"), for when LGRs have been activated for the input deck using the LGR keyword in the RUNSPEC section. QMOBIL should be placed in between the LGR definition keywords CARFIN, or RADIN (or RAFDIN4) and the ENDFIN keyword in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.182 RADFIN – DEFINE A RADIAL LOCAL GRID REFINEMENT WITH ONE COLUMN

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines a radial local grid refinement using one columns Local grid refinement is currently not supported by OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.183 RADFIN4 – DEFINE A RADIAL LOCAL GRID REFINEMENT WITH FOUR COLUMNS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines a radial local grid refinement using four columns. Local grid refinement is currently not supported by OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.184 REFINE – START THE DEFINITION OF A LOCAL GRID REFINEMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The REFINE keyword defines the start of a Cartesian or radial Local Grid Refinement (“LGR”) definition that sets the properties of the selected LGR. The keyword is then followed by the property keywords associated with the section where the keyword is being invoked. For example, if the REFINE keyword is used in the GRID section then most of the keywords in that section can be used to set the grid properties for the LGR.

The ENDFIN keyword is used to terminate the LGR definition.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.185 RESVNUM – DEFINE RESERVOIR COORDINATE DATA SET

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RESVNUM keyword is used to define the start of a reservoir coordinate data set and stipulates the reservoir number for the data set. The keyword is used in conjunction with the COORD keyword in the GRID section, that specifies a set of coordinate lines or pillars for a reservoir grid via an array. Note that the COORD keyword should immediately follow the RESVNUM keyword.

Although the keyword is processed by OPM Flow, the keyword is effectively ignored as only the default value of one is supported.

No.	Name	Description	Default
I	RESVNUM	<p>A positive integer values that defines the reservoir coordinate data set, or the independent reservoir, for which the subsequent COORD data is to be associated with.</p> <p>RESVNUM should be less than or equal to NUMRES on the NUMRES keyword in the RUNSPEC section.</p> <p>OPM Flow currently only accepts a single data set, that is the default value of one.</p>	I
Notes: <p>I) The keyword is terminated by a “/”.</p>			

Table 6.114: RESVNUM Keyword Description

See the NUMRES keyword in the RUNSPEC section that defines the number of reservoir grids (COORD data sets) that the simulator should process.

The facility is useful to combine two separate reservoir grids into one model in the simulator.

Example

```
--
--      NUMRES
--      NUMBER
RESVNUM
    1
/

--
-- SPECIFY VERTICAL COORDINATE LINES FOR A REGULAR 3 x 2 GRID
--(DX = 100 and DY = 200)
--
-- X1      Y1      Z1      X2      Y2      Z2
-- ----      ---      ----      ---      ---      ----
COORD
    0      0      1000      0      0      5000
    100     0      1000      100     0      5000
    200     0      1000      200     0      5000
    300     0      1000      300     0      5000
    0      200     1000      0      200     5000
    100     200     1000      100     200     5000
    200     200     1000      200     200     5000
    300     200     1000      300     200     5000
    0      400     1000      0      400     5000
    100     400     1000      100     400     5000
    200     400     1000      200     400     5000
    300     400     1000      300     400     5000
/

--
--      NUMRES
--      NUMBER
RESVNUM
    2
/

--
-- SPECIFY VERTICAL COORDINATE LINES FOR A REGULAR 3 x 2 GRID
--(DX = 100 and DY = 200)
--
-- X1      Y1      Z1      X2      Y2      Z2
-- ----      ---      ----      ---      ---      ----
COORD
    0      0      1000      0      0      5000
    100     0      1000      100     0      5000
    200     0      1000      200     0      5000
    300     0      1000      300     0      5000
    0      200     1000      0      200     5000
    100     200     1000      100     200     5000
    200     200     1000      200     200     5000
    300     200     1000      300     200     5000
    0      400     1000      0      400     5000
    100     400     1000      100     400     5000
    200     400     1000      200     400     5000
    300     400     1000      300     400     5000
/
```

6.3.186 ROCKFRAC - DEFINE THE ROCK VOLUME TO BULK VOLUME FRACTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ROCKFRAC defines the rock volume to bulk volume fraction for all the cells. The keyword can be used with all grid types. Rock volume of a grid block is calculated by multiply a cell's bulk volume by it's ROCKFRAC volume. A cell's rock volume is used in the Coal option to calculate the adsorbed gas in the rock (coal), as well as the Thermal and Temp options to calculate the energy is stored in the rock.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ROCKFRAC	ROCKFRAC is an array of real numbers greater than or equal to zero and less than or equal to one, that are assigned the rock volume to bulk volume fraction values for each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 200*0.850.			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) Setting a cells ROCKFRAC value to zero will make the cell inactive, similar to setting the cells ACTNUM property to zero. 2) The keyword is terminated by a “/”.					

Table 6.115: NTG Keyword Description

See also the PORO, PERMX, PERMY, PERMZ and NTG keywords to fully define a grid's properties.

Example

```
--
--      DEFINE GRID ROCKFRAC DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
ROCKFRAC
      100*1.000    100*0.850    100*0.500    /
```

The above example defines a constant ROCKFRAC of 1.00 for the first 100 cells, then 0.85 for the second 100 hundred cells, and finally 0.500 for the last 100 cell, for the 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

6.3.187 RPTGRID – DEFINE GRID SECTION REPORTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the data in the GRID section that is to be printed to the output print file in human readable format. The keyword has two distinct forms, the first of which consists of the keyword followed by a series of integers on the next line indicating the data to be printed (see the first example). This is the original format in the commercial simulator and was subsequently superseded by the second format. The second format consists of the keyword followed by a series of character strings that indicate the data to be printed. In most cases the character string is the keyword used to load the data in the OPM Flow input deck, for example PORO for the porosity array. It is anticipated that OPM Flow will eventually support the functionality of the second format only, the first format although recognized will be completely ignored.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
1	ALLNCC	Print all the non-neighbor connections.	N/A
2	COORD	Print the coordinate lines.	N/A
3	COORDYS	Print the coordinate systems.	N/A
4	DEPTH	Print grid cells center depths.	N/A
....		N/A
Notes: 1) The keyword is terminated by a “/”.			

Table 6.116: RPTGRID Keyword Description

Note

This keyword has the potential to produce very large print files that some text editors may have difficulty loading, coupled with the fact that reviewing the data in this format is very cumbersome.

A more efficient solution is to load the *.INIT file into OPM ResInsight to view the data graphically, this also has the benefit of being able to filter the grid based on I, J, K ranges and grid properties.

Examples

The first example shows the original format of this keyword; although the keyword and format are recognized by OPM Flow, the format is ignored and is unlikely to be implemented in the simulator.

```
--  
--      DEFINE GRID SECTION REPORT OPTION (ORIGINAL FORMAT)  
--  
RPTGRID      1      2*0      1      3*1      /
```

The next example shows the second format of the keyword which may be supported in a future release of OPM Flow.

```
--      DEFINE GRID SECTION REPORT OPTIONS  
--  
RPTGRID      DX      DY      DZ      DEPTH      PORO      PERMX      /
```

6.3.188 RPTGRIDL – DEFINE GRID SECTION REPORTING FOR LGRs

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the data in the GRID section that is to be printed to the output print file in human readable format for Local Grid Refinements (“LGRs”), for when LGRs have been activated for the input deck using the LGR keyword in the RUNSPEC section.

The keyword has two distinct forms, the first of which consists of the keyword followed by a series of integers on the next line indicating the data to be printed (see the first example). This is the original format in the commercial simulator and was subsequently superseded by the second format. The second format consists of the keyword followed by a series of character strings that indicate the data to be printed. In most cases the character string is the keyword used to load the data in the OPM Flow input deck, for example PORO for the porosity array. It is anticipated that OPM Flow will eventually support the functionality of the second format only, the first format although recognized will be completely ignored.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
1	ALLNCC	Print all the non-neighbor connections.	N/A
2	COORD	Print the coordinate lines.	N/A
3	COORDYS	Print the coordinate systems.	N/A
4	DEPTH	Print grid cells center depths.	N/A
....		N/A
24	ALLNNC	ALLNNC is a defined positive integer that specifies the type of Non-Neighbor Connections (“NNC”) to be printed, and should be set to one of the follow: 1) To print the NNCs within the LGRs, and the connections between the local and host cells to the print file (*.PRT). 2) To print the NNCs within the LGRs, and the connections between the local and host cells to the print (*.PRT) and debug files (*.DBG). 3) Same as (2) but the data in the debug file (*.DBG) is written out in an alternative format.	N/A
....		N/A
57	EXTHOST	EXTHOSTS outputs host cells for Perpendicular Bisector (“PEBI”) ⁷⁰ and ⁷¹ LGRs.	
....		N/A
Notes: 1) The keyword is terminated by a “/”.			

Table 6.117: RPTGRIDL Keyword Description

⁷⁰ Heinemann, Z.E. and Brand, C.W. 1988. Gridding Techniques in Reservoir Simulation. Proc., First Intl. Forum on Reservoir Simulation, Alpbach, Austria, 339.

⁷¹ Heinemann, Z.E., Brand, C.W., Munka, M. et al. 1991. Modeling Reservoir Geometry With Irregular Grids. SPE Res Eng 6 (2): 225–232. SPE-18412-PA. <http://dx.doi.org/10.2118/18412-PA>

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Note

This keyword has the potential to produce very large print files that some text editors may have difficulty loading, coupled with the fact that reviewing the data in this format is very cumbersome.

A more efficient solution is to load the *.INIT file into OPM ResInsight to view the data graphically, this also has the benefit of being able to filter the grid based on I, J, K ranges and grid properties.

Examples

The first example shows the original format of this keyword; although the keyword and format are recognized by OPM Flow, the format is ignored and is unlikely to be implemented in the simulator.

```
--
--      DEFINE LGR GRID SECTION REPORT OPTION (ORIGINAL FORMAT)
--
RPTGRIDL
      1          2*0      1          3*1          /
```

The next example shows the second format of the keyword which may be supported in a future release of OPM Flow.

```
--      DEFINE LGR GRID SECTION REPORT OPTIONS
--
RPTGRIDL
      DX          DY          DZ          DEPTH      PORO      PERMX          /
```

6.3.189 RPTINIT – DEFINE OUTPUT TO THE INIT FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the data in the GRID and EDIT sections that is to be written out to the INIT file (*.INIT or *.FINIT). The format consists of the keyword followed by a series of character strings that indicate the data to be written. In most cases the character string is the keyword used to load the data into the OPM Flow input deck, for example PORO for the porosity array in the GRID section. In addition, values either read or calculated by the simulator in the EDIT section can also be written to the INIT file. Again the keyword or property name is used as the mnemonic for the character string, for example the PORV,TRANX keywords etc. If the RPTINIT keyword is not used in the input deck then a default set of data array are written to the file, in this case the actual data written is dependent on the model's configuration and the options being used.

This keyword is ignored by OPM Flow and has no effect on the simulation.

6.3.190 RPTISOL – ACTIVATE ISOLATED RESERVOIR NUMBER REPORTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The RPTISOL keyword activates the isolated reservoir report that generates an array of isolated region numbers that is printed in the debug file (*.DBG). The main purpose of this facility is to use the generated array as input to the ISOLNUM keyword in the GRID section in conjunction with the Independent Reservoir Regions option. If the model can be divided into isolated reservoirs then the individual reservoirs may be solved independently, resulting in increased computational efficient, compared with solving the model as a whole.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      ACTIVATE ISOLATED RESERVOIR NUMBER REPORTING
--
RPTISOL
```

The above example activates the isolated reservoir report that generates an array of isolated region numbers to the debug file (*.DBG).

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.191 SIGMA – DUAL POROSITY MATRIX TO FRACTURE SIGMA (ALL CELLS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SIGMA keyword defines the dual porosity matrix to fracture transmissibility multiplier, sigma, that is applied to all cells, for when the Dual Porosity model has been activated by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section. Sigma (σ) takes into account the matrix-fracture interface area per unit volume and was defined by Kazemi et al⁷² to be:

$$\sigma = 4 \left(\frac{1}{l_x^2} + \frac{1}{l_y^2} + \frac{1}{l_z^2} \right) \quad (6.15)$$

Where l_x , l_y and l_z are not the grid block dimensions in the model in the respective directions, but the dimensions of the blocks of the matrix material. In practice, σ is used as a tuning parameter in dual porosity runs to match reservoir and well performance.

See also the SIGMAV keyword in the GRID section that supplies the sigma values on an individual cells basis.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

⁷² Kazemi, H., Merrill JR., L. S., Porterfield, K. L., and Zeman, P. R. "Numerical Simulation of Water-Oil Flow in Naturally Fractured Reservoirs," paper SPE 5719, Society of Petroleum Engineers Journal (1976) 16, No. 6, 317-326.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.192 SIGMAGD – DUAL POROSITY MATRIX TO FRACTURE SIGMA FOR GRAVITY DRAINAGE (ALL CELLS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SIGMAGD keyword defines the dual porosity matrix to fracture transmissibility multiplier, sigma, that is applied to all cells, for when the Dual Porosity model has been activated by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section. In addition, the GRAVDR keyword in the RUNSPEC section should be used to enable the Gravity Drainage model for the run. Sigma (σ) takes into account the matrix-fracture interface area per unit volume and was defined by Kazemi et al⁷³ to be:

$$\sigma = 4 \left(\frac{1}{l_x^2} + \frac{1}{l_y^2} + \frac{1}{l_z^2} \right) \quad (6.16)$$

Where l_x , l_y and l_z are not the grid block dimensions in the model in the respective directions, but the dimensions of the blocks of the matrix material. In practice, σ is used as a tuning parameter in dual porosity runs to match reservoir and well performance.

Note that SIGMAGD keyword data is used for areas being swept by gas and the SIGMA keyword data is used when the area is being invaded by water. See also the SIGMAGDV keyword in the GRID section that supplies the sigma values on an individual cells basis

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

⁷³ Kazemi, H., Merrill JR., L. S., Porterfield, K. L., and Zeman, P. R. "Numerical Simulation of Water-Oil Flow in Naturally Fractured Reservoirs," paper SPE 5719, Society of Petroleum Engineers Journal (1976) 16, No. 6, 317-326.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.193 SIGMAGDV – DUAL POROSITY MATRIX TO FRACTURE SIGMA GRAVITY DRAINAGE (INDIVIDUAL CELLS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SIGMAGD keyword defines the dual porosity matrix to fracture transmissibility multiplier, sigma, that is applied to individual cells, for when the Dual Porosity model has been activated by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section. In addition, the GRAVDR keyword in the RUNSPEC section should be used to enable the Gravity Drainage model for the run. Sigma (σ) takes into account the matrix-fracture interface area per unit volume and was defined by Kazemi et al⁷⁴ to be:

$$\sigma = 4 \left(\frac{1}{l_x^2} + \frac{1}{l_y^2} + \frac{1}{l_z^2} \right) \quad (6.17)$$

Where l_x , l_y and l_z are not the grid block dimensions in the model in the respective directions, but the dimensions of the blocks of the matrix material. In practice, σ is used as a tuning parameter in dual porosity runs to match reservoir and well performance.

Note that SIGMAGDV keyword data is used for areas being swept by gas and the SIGMA keyword data is used when the area is being invaded by water. See also the SIGMAGD keyword in the GRID section that supplies a constant sigma value for all cells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

⁷⁴ Kazemi, H., Merrill JR., L. S., Porterfield, K. L., and Zeman, P. R. "Numerical Simulation of Water-Oil Flow in Naturally Fractured Reservoirs," paper SPE 5719, Society of Petroleum Engineers Journal (1976) 16, No. 6, 317-326.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.194 SIGMAV – DUAL POROSITY MATRIX TO FRACTURE SIGMA (INDIVIDUAL CELLS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SIGMAV keyword defines a dual porosity matrix to fracture multiplier, sigma, that is applied to individual cells, for when the Dual Porosity model has been invoked by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section. Sigma (σ) takes into account the matrix-fracture interface area per unit volume and was defined by Kazemi et al⁷⁵ to be:

$$\sigma = 4 \left(\frac{1}{l_x^2} + \frac{1}{l_y^2} + \frac{1}{l_z^2} \right) \quad (6.18)$$

Where l_x , l_y and l_z are not the grid block dimensions in the model in the respective directions, but the dimensions of the blocks of the matrix material. In practice, σ is used as a tuning parameter in dual porosity runs to match reservoir and well performance.

See also the SIGMA keyword in the GRID section that supplies a constant sigma to all cells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

⁷⁵ Kazemi, H., Merrill JR., L. S., Porterfield, K. L., and Zeman, P. R. "Numerical Simulation of Water-Oil Flow in Naturally Fractured Reservoirs," paper SPE 5719, Society of Petroleum Engineers Journal (1976) 16, No. 6, 317-326.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.195 SKIP – ACTIVATE SKIPPING OF ALL KEYWORDS AND INPUT DATA

The SKIP keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered. All keywords and between the SKIP and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP – Activate Skipping of All Keywords and Input Data](#) in the GLOBAL section for a full description.

6.3.196 SKIP100 – ACTIVATE SKIPPING OF BLACK-OIL KEYWORDS AND INPUT DATA

This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered. All black-oil keywords between the SKIP100 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data](#) in the GLOBAL section for a full description.

6.3.197 SKIP300 – ACTIVATE SKIPPING OF “COMPOSITIONAL” KEYWORDS AND INPUT DATA

Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered. All “compositional” keywords between the SKIP300 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data](#) in the GLOBAL section for a full description.

6.3.198 SMULTX - MULTIPLY CELL TRANSMISSIBILITY IN THE +X DIRECTION (AUTO-REFINEMENT)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SMULTX multiplies the transmissibility between two cell faces in the +X direction between cells in a host base grid and the connecting auto-refined grid cells, via an array, that is the keyword sets the transmissibility multiplier of block ($I_{\text{host}}, J_{\text{host}}, K_{\text{host}}$) in the host base grid, multiplies the transmissibility all the cells ($I_{\text{auto}}, J_{\text{auto}}, K_{\text{auto}}$) and ($I+I_{\text{auto}}, J_{\text{auto}}, K_{\text{auto}}$) in the auto-refinement grid. The Auto Refinement option must be enabled to use this keyword via the AUTOREF keyword in the RUNSPEC section.

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the SMULTX keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	SMULTX+	SMULTX+ is an array of real positive numbers assigning the transmissibility multipliers in the +X direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.118: SMULTX Keyword Description

See also the MULTX, MULTY and MULTZ keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET SMULTX+ TRANSMISSIBILITY MULTIPLIERS
--
SMULTX      18*0.300                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.3 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.199 SMULTY - MULTIPLY CELL TRANSMISSIBILITY IN THE +Y DIRECTION (AUTO-REFINEMENT)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SMULTY multiplies the transmissibility between two cell faces in the +Y direction between cells in a host base grid and the connecting auto-refined grid cells, via an array, that is the keyword sets the transmissibility multiplier of block ($I_{host}, J_{host}, K_{host}$) in the host base grid, multiplies the transmissibility all the cells ($I_{auto}, J_{auto}, K_{auto}$) and ($I_{auto}, J+I_{auto}, K_{auto}$) in the auto-refinement grid. The Auto Refinement option must be enabled to use this keyword via the AUTOREF keyword in the RUNSPEC section.

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the SMULTY keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	SMULTY+	SMULTY+ is an array of real positive numbers assigning the transmissibility multipliers in the +X direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.119: SMULTY Keyword Description

See also the MULTX, MULTY and MULTZ keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET SMULTY+ TRANSMISSIBILITY MULTIPLIERS
--
SMULTY      18*0.300                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.3 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.200 SMULTZ - MULTIPLY CELL TRANSMISSIBILITY IN THE +Z DIRECTION (AUTO-REFINEMENT)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SMULTZ multiplies the transmissibility between two cell faces in the +Z direction between cells in a host base grid and the connecting auto-refined grid cells, via an array, that is the keyword sets the transmissibility multiplier of block ($I_{host}, J_{host}, K_{host}$) in the host base grid, multiplies the transmissibility all the cells ($I_{auto}, J_{auto}, K_{auto}$) and ($I_{auto}, J_{auto}, K+I_{auto}$) in the auto-refinement grid. The Auto Refinement option must be enabled to use this keyword via the AUTOREF keyword in the RUNSPEC section.

An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the SMULTZ keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	SMULTZ+	SMULTZ+ is an array of real positive numbers assigning the transmissibility multipliers in the +X direction to each cell face in the model. Repeat counts may be used, for example 20*100.0.	1.0
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 			

Table 6.120: SMULTX Keyword Description

See also the MULTX, MULTY and MULTZ keywords for scaling transmissible between grid cells.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET SMULTZ+ TRANSMISSIBILITY MULTIPLIERS
--
SMULTZ      18*0.300                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The above example defines a 0.3 scaling multiplier for the 18 cells defined by the preceding BOX statement. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.201 SOLVDIRS – DEFINE LINEAR SOLVER PRINCIPAL DIRECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SOLVDIRS keyword defines the linear solver principal directions, which should be set to XY, XZ, YX, YX, ZX, or ZY. The default direction is based on the direction of the highest transmissibility and SOLVDIRS allows for over writing the default direction for when linear convergence of the equations are problematic.

This keyword is ignored by OPM Flow and has no effect on the simulation.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.202 SOLVNUM – DEFINE PEBI GRID CORRESPONDENCE TO SOLVER ORDER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SOLVNUM defines the unstructured Perpendicular Bisector (“PEBI”)⁷⁶ and ⁷⁷ grid correspondence to the nested factorization solver order, for when the grid has been entered as a PEBI list. This keyword is generated by an external pre-processing program for generating simulation grids.

This keyword is ignored by OPM Flow and has no effect on the simulation.

⁷⁶ Heinemann, Z.E. and Brand, C.W. 1988. Gridding Techniques in Reservoir Simulation. Proc., First Intl. Forum on Reservoir Simulation, Alpbach, Austria, 339.

⁷⁷ Heinemann, Z.E., Brand, C.W., Munka, M. et al. 1991. Modeling Reservoir Geometry With Irregular Grids. SPE Res Eng 6 (2): 225–232. SPE-18412-PA. <http://dx.doi.org/10.2118/18412-PA>

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.203 SPECGRID- DEFINE THE DIMENSIONS OF A CORNER-POINT GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SPECGRID defines the dimensions of a corner-point and radial grids in the x, y, and z planes as well as the number of reservoirs, where each reservoir has its own set of corner-point geometry data.

The keyword can only be used with Irregular Corner-Point Grids and Radial Grids.

No.	Name	Description	Default
1	NDIVIX	A positive integer value that defines the number of cells in the X or R direction	I
2	NDIVIY	A positive integer value that defines the number of cells in the Y or THETA direction	I
3	NDIVZ	A positive integer value that defines the number of cells in the Z direction	I
4	NUMRES	A positive integer values that defines number of coordinate data sets, or independent reservoirs in the model. OPM Flow currently only accepts a single data set, that is the default value of one.	I
5	TYPE	A character string set to either T or F that defines the type of grid to be defined by subsequent keywords: 1) T = Radial grid with radial coordinates 2) F = Cartesian grid Only the default option F is supported by OPM Flow.	F
Notes: 1) The keyword is terminated by a "/". 2) The dimensions are also entered on the DIMENS section in the RUNSPEC section and the two sets of numbers should be consistent.			

Table 6.121: SPECGRID Keyword Description

See also the COORD, COORDSYS and ZCORN keywords to fully define an Irregular Corner-Point Grid.

Example

```
--
--      MAX      MAX      MAX      MAX      GRID
--      NDIVIX  NDIVIY  NDIVIZ  NUMRES  TYPE
SPECGRID
      46      112      22      1      F
```

The above example defines a 46 x 112 x 22 grid with one set of irregular corner-point data.

6.3.204 THCGAS – DEFINE GAS PHASE THERMAL CONDUCTIVITY FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The THCGAS keyword defines the gas phase thermal conductivity for when the thermal calculation is activated by the THERMAL keyword in the RUNSPEC section, and should be used in conjunction with THCROCK keyword in the GRID section.

This keyword can only be used if the thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	THCGAS	THCGAS is an array of real positive numbers that define the thermal conductivity of the gas phase in each grid block. Repeat counts may be used, for example 3000*20.0			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.122: THCGAS Keyword Description

The THCGAS data is used in conjunction with the other thermal conductivity arrays to calculate the porosity weighted thermal conductivity of a grid block using:

$$\text{Average Thermal Conductivity} = \frac{PORO \times (THCOIL + THCGAS + THCWATER + THCSOLID)}{\text{NUMBER OF PHASES IN THE MODEL}} \times (1 - PORO) \times THCROCK \quad (6.19)$$

See also the THCOIL, THCWATER, THROCK and THCSOLID keywords in the GRID section

Example

```
--
--      DEFINE GRID BLOCK GAS PHASE THERMAL CONDUCTIVITY
--      FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
THCGAS
      300*20.0
```

The above example defines the gas phase thermal conductivity of 20.0 for each cell in the 300 grid block model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.205 THCOIL – DEFINE OIL PHASE THERMAL CONDUCTIVITY FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The THCOIL keyword defines the oil phase thermal conductivity for when the thermal calculation is activated by the THERMAL keyword in the RUNSPEC section, and should be used in conjunction with THCROCK keyword in the GRID section.

This keyword can only be used if the thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	THCOIL	THCOIL is an array of real positive numbers that define the thermal conductivity of the oil phase in each grid block. Repeat counts may be used, for example 3000*20.0			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.123: THCOIL Keyword Description

The THCOIL data is used in conjunction with the other thermal conductivity arrays to calculate the porosity weighted thermal conductivity of a grid block using:

$$\text{Average Thermal Conductivity} = \frac{\text{PORO} \times (\text{THCOIL} + \text{THCGAS} + \text{THCWATER} + \text{THCSOLID})}{\text{NUMBER OF PHASES IN THE MODEL}} \times (1 - \text{PORO}) \times \text{THCROCK} \quad (6.20)$$

See also the THCGAS, THCWATER, THCROCK and THCSOLID keywords in the GRID section

Example

```
--
--      DEFINE GRID BLOCK OIL PHASE THERMAL CONDUCTIVITY
--      FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
THCOIL
      300*20.0
```

The above example defines the oil phase thermal conductivity of 20.0 for each cell in the 300 grid block model, as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.206 THCONR – DEFINE ROCK AND FLUID THERMAL CONDUCTIVITY FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The THCONR keyword defines the reservoir rock plus fluid thermal conductivity for all cells for when the thermal calculation is activated by the THERMAL keywords in the RUNSPEC section.

Note that the THCROCK and THCONR keywords are mutually exclusive.

This keyword can only be used if the thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	THCONR	THCONR is an array of real positive numbers that define the combined rock and fluid conductivity of a grid block. Repeat counts may be used, for example 3000*25.0			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.124: THCONR Keyword Description

Example

```
--
--      DEFINE GRID BLOCK ROCK-FLUID THERMAL CONDUCTIVITY
--      FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
THCONR
      300*25.0
/
```

The above example defines the combined rock and fluid thermal conductivity of 25.0 for each cell in the 300 grid block model, as defined by the DIMENS keyword in the RUNSPEC section.

6.3.207 THCONSF – DEFINE GAS SATURATION DEPENDENT THERMAL CONDUCTIVITY SCALING FACTOR FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The THCONSF keyword defines a gas saturation dependent scaling factor to the fluid and reservoir rock thermal conductivities entered via the THCONR keyword in the GRID section, for when the thermal calculation is activated by the THERMAL keyword in the RUNSPEC.

Note that the THCROCK and THCONR keywords are mutually exclusive.

This keyword can only be used if the thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	THCONSF	THCONSF is an array of real positive numbers, greater than zero and less than or equal to one, that define the gas saturation dependent scaling factor that is applied to the THCONR data, entered via the THCONR keyword, to adjust the thermal conductivity of the reservoir cells in each grid block. Repeat counts may be used, for example 3000*0.15			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.125:THCROCK Keyword Description

The THCONSF keyword defines a scaling factor which is a function of the gas saturation that scales a cells total thermal conductivity (reservoir fluids plus reservoir rock) entered via the THCONR keyword in the GRID section. This combination of keywords, THCONSF and THCONR implies that the oil and water phase thermal conductivities are saturation independent with respect to the liquid phase, and that only the gas saturation influences a cell's thermal conductivity as entered via the THCONR keyword. Thus, THCONSF scales the THCONR values via a multiplier Ω , by:

$$\Omega_{i,j,k} = (1 - \text{THCONSF} \times \text{Gas Saturation})_{i,j,k} \quad (6.21)$$

See also the THCGAS, THCOIL, THCWATER and THCSOLID keywords in the GRID section, for an alternative way to enter the thermal conductivity properties. However, the THCONSF keyword cannot be used with the THCGAS, THCOIL, THCWATER and THCSOLID keywords. Secondly, the solid phase is not supported by OPM Flow and therefore neither is the THCSOLID keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      DEFINE GRID SGAS DEPENDENT SCALING FACTOR FOR THE THCONR ARRAY
--      FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--      (OPM FLOW THERMAL OPTION ONLY)
--
THCONSF      300*0.12      /
```

The above example defines the gas saturation thermal conductivity scaling factor to be applied to the THCONR to be 0.12 for all 300 cells in the model, as defined by the DIMENS keyword in the RUNSPEC section.

6.3.208 THCROCK – DEFINE RESERVOIR ROCK THERMAL CONDUCTIVITY FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The THCROCK keyword defines the reservoir rock thermal conductivity for when the thermal calculation is activated by the THERMAL keyword in the RUNSPEC section.

Note that the THCROCK and THCONR keywords are mutually exclusive.

This keyword can only be used if the thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	THCROCK	THCROCK is an array of real positive numbers that define the thermal conductivity of the reservoir rock in each grid block. Repeat counts may be used, for example 3000*20.0			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.126: THCROCK Keyword Description

The THCROCK data is used in conjunction with the other thermal conductivity arrays to calculate the porosity weighted thermal conductivity of a grid block using:

$$\text{Average Thermal Conductivity} = \frac{\text{PORO} \times (\text{THCOIL} + \text{THCGAS} + \text{THCWATER} + \text{THCSOLID})}{\text{NUMBER OF PHASES IN THE MODEL}} \times (1 - \text{PORO}) \times \text{THCROCK} \quad (6.22)$$

See also the THCGAS, THCOIL, THCWATER and THCSOLID keywords in the GRID section

Example

```
--
--      DEFINE GRID BLOCK RESERVOIR ROCK THERMAL CONDUCTIVITY
--      FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
THCROCK
      300*20.0
```

The above example defines the reservoir rock thermal conductivity of 20.0 for each cell in the 300 grid block model, as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.209 THCWATER – DEFINE WATER PHASE THERMAL CONDUCTIVITY FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The THCWATER keyword defines the water phase thermal conductivity for when the thermal calculation is activated by the THERMAL keyword in the RUNSPEC section, and should be used in conjunction with THCROCK keyword in the GRID section.

This keyword can only be used if the thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	THCWATER	THCWATER is an array of real positive numbers that define the thermal conductivity of the water phase in each grid block. Repeat counts may be used, for example 3000*20.0			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 6.127:THCWATER Keyword Description

The THCWATER data is used in conjunction with the other thermal conductivity arrays to calculate the porosity weighted thermal conductivity of a grid block using:

$$\text{Average Thermal Conductivity} = \frac{PORO \times (THCOIL + THCGAS + THCWATER + THCSOLID)}{\text{NUMBER OF PHASES IN THE MODEL}} \times (1 - PORO) \times THCROCK \quad (6.23)$$

See also the THCGAS, THCOIL, THROCK and THCSOLID keywords in the GRID section

Example

```
--
--      DEFINE GRID BLOCK WATER PHASE THERMAL CONDUCTIVITY
--      FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
THCWATER
      300*20.0
```

The above example defines the water phase thermal conductivity of 20.0 for each cell in the 300 grid block model, as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

6.3.210 THPRESFT - DEFINE FAULT THRESHOLD PRESSURES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The THPRESFT keyword defines a fault threshold pressures that prevents fluid flow from occurring across the fault plane until the threshold pressure is exceeded, for when the threshold pressure option has been activated via the THRPRES variable on the EQLOPTS keyword in the RUNSPEC section.

Each row entry in the THPRESFT keyword defines a fault threshold pressure.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	FLTNAME	FLTNAME is a character string enclosed in quotes with a maximum length of eight characters, that defines the name of the fault. FLTNAME must have been previously defined using the FAULTS keyword in the GROD section, otherwise an error will occur.			None
2	PRESS	PRESS is a single positive real value that defines the threshold pressure for the fault (FLTNAME). If PRESS is defaulted then the simulator will set the threshold pressure to zero, that is the fault is open to flow along the fault plane.			0
		psia	barsa	atma	
Notes: 1) If there are multiple entries for FLTNAME only the last entry is applied. 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.					

Table 6.128:THPRESFT Keyword Description

See also the FAULTS keyword in the GRID section that is used to create named faults. Normally this fault data is automatically generated by pre-processing software that generates static model.

Example

The example below defines two fault traces, 'M_WEST' and 'BC' fault having threshold pressures of 1000.0 and 2000 psis respectively.

```
--
--      DEFINE FAULTS IN THE GRID GEOMETRY
--
--      FAULT          ----- FAULT TRACE -----
--      NAME           I1   I2   J1   J2   K1   K2   FACE
FAULTS
      'M_WEST'         5     5     3     3     1    22   'X'   /
      'M_WEST'         5     5     4     4     1    22   'X'   /
      'M_WEST'         5     5     5     5     1    22   'X'   /
.....
      'BC'             43    43     8     8     1    22   'Y'   /
      'BC'             42    42     9     9     1    22   'X'   /
      'BC'             44    44     8     8     1    22   'Y'   /
.....
/
--
--      DEFINE FAULT THRESHOLD PRESSURES
--
--      FAULT          THRESHOLD
--      NAME           PRESSURE
THPRESFT
      'M_WEST'         1000.0
      'BC'             1200.0
/
```

6.3.211 TOPS - DEFINE THE DEPTH AT THE CENTER OF THE TOP FACE FOR EACH CELL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

TOPS defines the depth of the top face of each cell in the model.

It can only be used with the Cartesian Regular Grid or Radial Grid models.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TOPS	<p>TOPS is an array of real numbers defining the depth at the top face of each cell in the model. One can either just enter the TOPS for the first layer only based on NX x NY entries and OPM Flow will calculate the remaining TOPS based on either DZ or DZV. Alternatively NX x NY x NZ TOPS may be entered for each cell in the model.</p> <p>See the DIMENS keyword in the RUNSPEC section for the definition of NX, NY and NZ.</p> <p>Repeat counts may be used, for example 10*5201.0.</p>			None
		feet	m	cm	
Notes:					
I) The keyword is terminated by a “/”.					

Table 6.129: TOPS Keyword Description

See also the DEPTH keyword to define the structural depth for the cells.

Examples

The example below defines the TOPS of the cells for each cell for NX = 5, NY = 5 and NZ = 3 model, as well as the X and Y direction cells sizes.

```
--
--      DEFINE GRID BLOCK TOPS FOR THE TOP LAYER (NX=5, NY=5, and NZ=)
--
TOPS
      25*3100  25*3105  25*3110
--
--      DEFINE GRID BLOCK X DIRECTION CELL SIZE (BASED ON NX = 5)
--
DXV
      5*100
--
--      DEFINE GRID BLOCK X DIRECTION CELL SIZE (BASED ON NY = 5)
--
DYV
      5*100
```

A second example is shown on the following page.

This example defines the same grid as before but with the TOPS keyword only defining the top layer and DZV keyword defining the cells thickness.

```
--  
--      DEFINE GRID BLOCK TOPS FOR THE TOP LAYER (NX = 5, NY = 5, NZ = 3)  
--  
TOPS  
      25*3100 /  
--  
--      DEFINE GRID BLOCK X DIRECTION CELL SIZE (BASED ON NX = 5)  
--  
DZV  
      3*5.0 /  
--  
--      DEFINE GRID BLOCK X DIRECTION CELL SIZE (BASED ON NX = 5)  
--  
DXV  
      5*100 /  
--  
--      DEFINE GRID BLOCK X DIRECTION CELL SIZE (BASED ON NY = 5)  
--  
DYV  
      5*100 /
```

6.3.212 TRANGL – DEFINE NON-NEIGHBOR CONNECTIONS BETWEEN GLOBAL AND LGR CELLS MANUALLY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

TRANGL enables Non-Neighbor Connections (“NNC”) between the global cells and the Local Grid Refinement (“LGR”) cells to be manually specified, as oppose to the simulator calculating the transmissibilities. The LGR keyword in the RUNSPEC section should be utilized to define the presence of LGRs in the model and to define various LGR dimension parameters.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	I1	A positive integer that defines the LGR grid block in the I-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NX on the CARFIN keyword in the GRID section.			None
2	J1	A positive integer that defines the LGR grid block in the J-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NY on the CARFIN keyword in the GRID section.			None
3	K1	A positive integer that defines the LGR grid block in the K-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NZ on the CARFIN keyword in the GRID section.			None
4	I2	A positive integer that defines the GLOBAL grid block in the I-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NX on the DIMENS keyword in the RUNSPEC section.			None
5	J2	A positive integer that defines the GLOBAL grid block in the J-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NY on the DIMENS keyword in the RUNSPEC section.			None
6	K2	A positive integer that defines the GLOBAL grid block in the K-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NZ on the DIMENS keyword in the RUNSPEC section.			None
7	TRANSNNC	TRANSNNC is a positive real number greater than or equal to zero that defines the transmissibility between the GLOBAL grid block (I1, J1, K1) and the LGR grid block (I2, J2, K2). The default value of zero sets the transmissibility between the two cells to zero.			0.0
		cP.rb/day/psia	cP.rm ³ /day/bars	cP.rcc/hr/atm	
Notes: 1) Each record must be terminated by a “/” and the keyword is terminated by a “/”.					

Table 6.130: TRANGL Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      MANUALLY DEFINE LGR-GLOBAL GRID NON-NEIGHBOR CONNECTIONS
--
--      -----LGR-----   ---GLOBAL---   -- TRANSNCC --
--      I1   J1   K1       I2   J2   K2
TANGL
      1     1     1       1     1     2           0.2500   /
      1     1     2       1     1     3           0.2500   /
      1     1     3       1     1     4           0.2500   /
/
```

The above example defines the transmissibility between LGR cell (1, 1, 1) and global cell (1, 1, 2), LGR cell (1, 1, 2) and global cell (1, 1, 3) and finally between LGR cell (1, 1, 3) and global cell (1, 1, 4) to be 0.2500.

6.3.213 USEFLUX – ACTIVATE FLUX BOUNDARY MODEL AND DEFINE FLUX FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The USEFLUX keyword activates the Flux Boundary model and defines the name of the FLUX file. Only grid blocks that have been declared by the FLUXREG keyword in the GRID section to be in an active flux region, are active for the run.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.214 USENOFLO – ACTIVATE FLUX BOUNDARY MODEL WITHOUT A FLUX FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The USENOFLUX keyword activates the Flux Boundary model without a FLUX file. The USEFLUX keyword should still be in the input deck, but in this case the FLUX filename is ignored. The option is useful when the no-flow boundary condition is a reasonable assumption and avoids the pre-cursor run used to generate the FLUX file via the DUMPFLUX keyword in the GRID section. Only grid blocks that have been declared by the FLUXREG keyword in the GRID section to be in an active flux region, are active for the run.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE FLUX BOUNDARY MODEL WITHOUT A FLUX FILE
--
USEFLUX
/

USENOFLO
```

The above example activates the Flux Boundary model without a FLUX file.

6.3.215 VEDEBUG – VERTICAL EQUILIBRIUM DEBUG DATA OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the debug Vertical Equilibrium (“VE”) data to be written to the debug file (*.DBG), for when the VE model has been activated by the VE keyword in the RUNSPEC section.

The keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.216 VEFIN – ACTIVATE VERTICAL EQUILIBRIUM MODEL (LGR)

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

If the VE keyword in the RUNSPEC section has been used to activate the Vertical Equilibrium (“VE”) model for the global grid, then the VEFIN keyword may used to set various options for the Local Grid Refinements (“LGR”). The LGR keyword in the RUNSPEC section should be activated to indicate the presence of LGRs and the keyword VEFIN should be placed in between the CARFIN and ENDFIN keywords in the GRID section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

6.3.217 WARN – ACTIVATE WARNING MESSAGES

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

See [WARN – Activate Warning Messages](#) in the GLOBAL section for a full description.

6.3.218 ZCORN – DEFINE THE DEPTH OF EACH CORNER-POINT OF A GRID BLOCK

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ZCORN defines the depth of each corner point of a grid block on the pillars defining the reservoir grid. A total of $8 \times NX \times NY \times NZ$ values are needed to fully define all the depths in the model. The depths specifying the top of the first layer are entered first with one point for each pillar for each grid block. The points are entered with the X axis cycling fastest. Next come the depths of the bottom of the first layer. The top of layer two follows etc.

The keyword can be only used be used with Irregular Corner-Point Grids.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ZCORN	An array of depths with 8 depths for each cell, for a total of 8 x Nx x NY x NZ entries			None
		feet	metres	cm	

Notes:

- 1) Regular Cartesian and Radial grid keywords cannot be used with this keyword, that is: DR, DRV, DTHETA, DTHETA, DX, DXV, DY, DYV, DZ, INRAD, and TOPS.
- 2) The keyword is terminated by a “/”.

Table 6.131: ZCORN Keyword Description

See also the SPECGRID, COORD and COORDSYS keywords to fully define an Irregular Corner-Point Grid.

Example

```
--
-- SPECIFY CORNER-POINT DEPTHS FOR A 3 x 2 x 2 GRID,
-- WITH CONSTANT SLOPE IN THE X AND Y DIRECTIONS
-- SUCH THAT ALL CORNER POINTS OF NEIGHBOURING BLOCKS ALIGN
ZCORN
--
-- top of layer 1
--
1450 1500 1500 1550 1550 1600
1500 1550 1550 1600 1600 1650
1500 1550 1550 1600 1600 1650
1550 1600 1600 1650 1650 1700
--
-- bottom of layer 1
--
1460 1510 1510 1560 1560 1610
1510 1560 1560 1610 1610 1660
1510 1560 1560 1610 1610 1660
1560 1610 1610 1660 1660 1710
--
-- top of layer 2
--
1460 1510 1510 1560 1560 1610
1510 1560 1560 1610 1610 1660
1510 1560 1560 1610 1610 1660
1560 1610 1610 1660 1660 1710
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

```
--
--                               bottom of layer 2
--
      1470    1520    1520    1570    1570    1620
      1520    1570    1570    1620    1620    1670
      1520    1570    1570    1620    1620    1670
      1570    1620    1620    1670    1670    1720
/
```

The above example defines depths of the vertical coordinate lines for a regular 3 by 2 by 2 grid with a constant slope in the x and y directions such that all the corner points of neighboring blocks are aligned.

CHAPTER 7: EDIT SECTION

7.1 INTRODUCTION

This section enables user defined changes to be applied after OPM Flow has processed the data in the GRID section, that is the resulting pore volume (PORV) and transmissibility arrays (TRANX, TRANY and TRANZ). The entered primary static arrays (PORO, PERMX etc.) in the GRID section are no longer available and all modifications are applied to the pore volume and transmissibility arrays.

Historically the intention of this section was allow for the editing of the processed data; however, the features available in this section have, through time, migrated to the GRID section. For example the array operator keywords like ADD, COPY, MULTIPLY, etc. are available in the GRID section and thus enabling editing of the primary static arrays (PORO, PERMX etc.). This increased in capability in the GRID section has therefore made the EDIT section some what redundant.

Nevertheless the section is sometimes used by users to incorporate history matching parameter changes and by static earth modeling software packages to import directly the pore volumes and transmissibilities calculated in the static model directly into the numerical model via the EDIT section. Although the latter work flow is not very common.



7.2 DATA REQUIREMENTS

As the primary purpose of this section is to modify the simulator's calculated pore volumes and transmissibilities, then the properties used to define these arrays must have been fully defined in the GRID section. The arrays available for modification in the EDIT section are listed in Table 7.1 together with the associated GRID arrays used to generate the EDIT property array.

Cartesian And Irregular Corner-Point Grids		Radial Grid Keywords	
Keywords			
GRID	EDIT	GRID	EDIT
TOPS	DEPTH	TOPS	DEPTH
DX	PORV	DR	PORV
DY		THETA	
DZ		DZ	
DZNET		DZNET	
PORO		PORO	
NTG		NTG	
PERMX	TRANX	PERMR	TRANR
MULTX		MULTR	
PERMY	TRANY	PERMTHT	TRANHT
MULTY		MULTTHT	
PERMZ	TRANZ	PERMZ	TRANZ
MULTZ		MULTZ	
Notes:			
1) Currently Radial Grids have not been implemented in OPM Flow.			
2) The GRID property association to the EDIT property is only indicative as several variables, DZNET and NTG for example, are also used in the transmissibility calculations.			

Table 7.1: EDIT Section Arrays Available for Modification

An example pore volume array (PORV property) from the Volve⁷⁸ field is shown in Figure 7.1 and Figure 7.2 illustrates the model's transmissibility in the x-direction (TRANX).

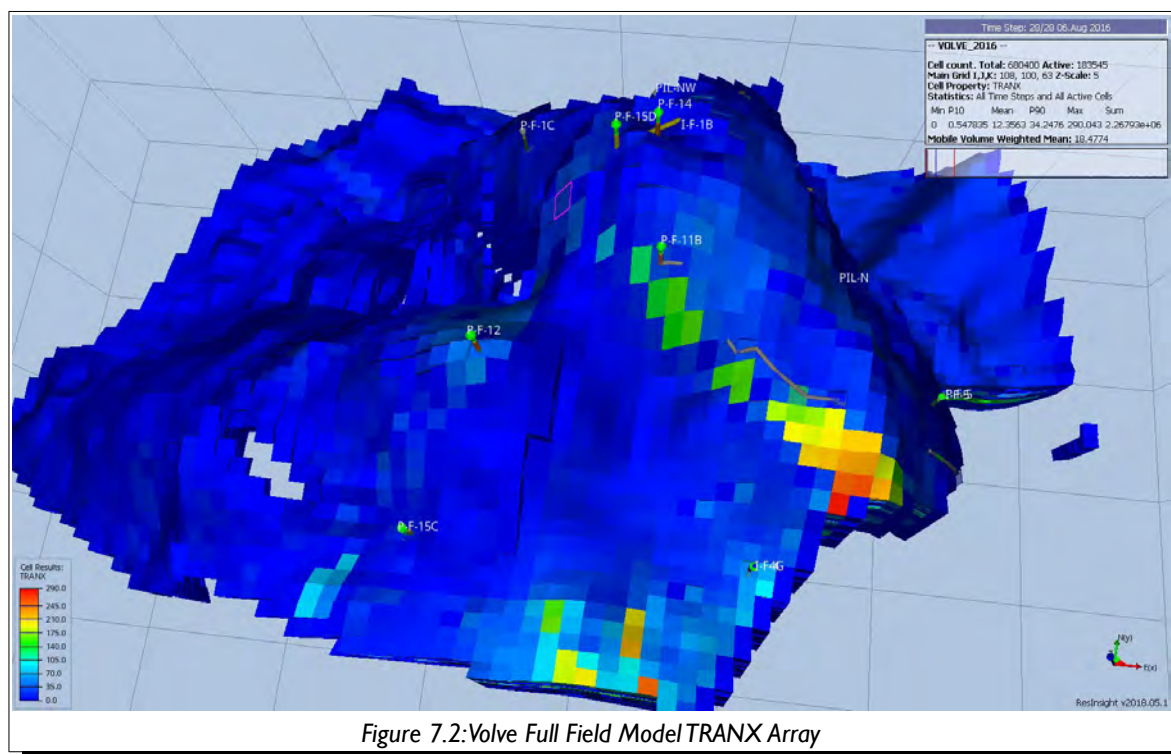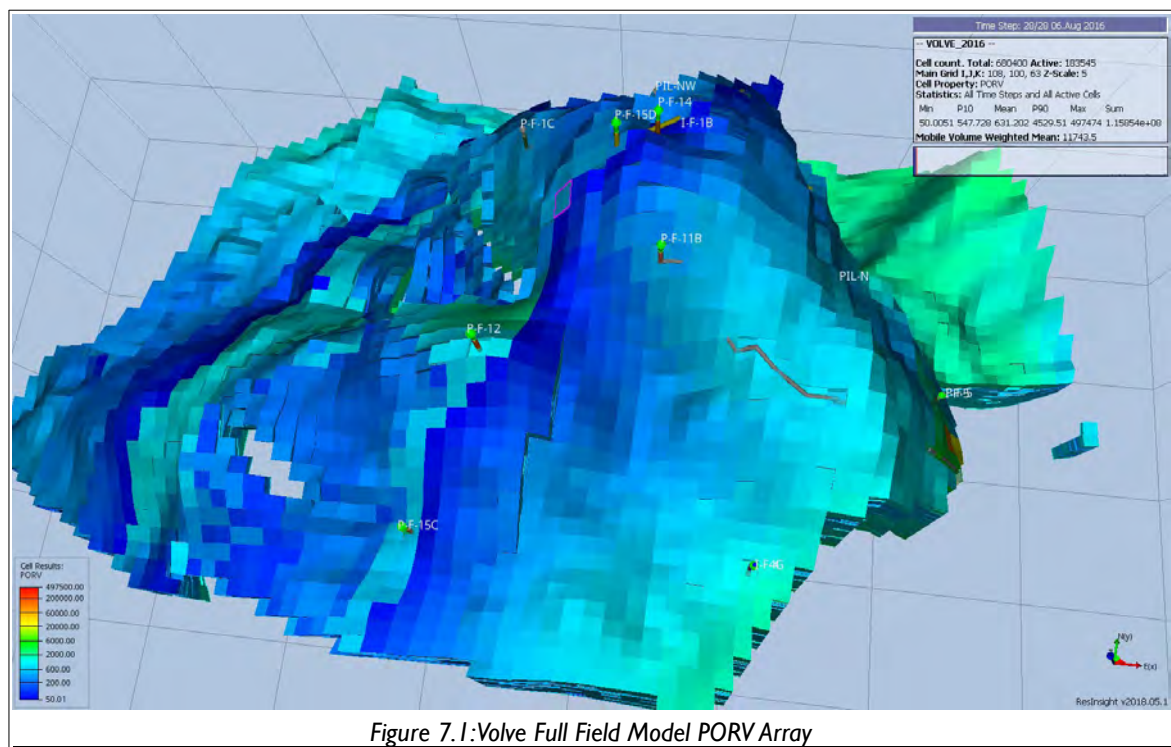

⁷⁸ The Volve Data was approved for data sharing in 2018 by the initiative of the last Operating company, Equinor and approved by the license partners ExxonMobil E&P Norway AS and Bayerngas Norge AS in the end of 2017.

7.3 KEYWORD DEFINITIONS

7.3.1 ADD – ADD A CONSTANT TO A SPECIFIED ARRAY

The ADD keyword adds a constant to a specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the ADD keyword is being applied.

See [ADD – Add a Constant to a Specified Array](#) in the GRID section for a full description.

7.3.2 ADDREG – ADD A CONSTANT TO AN ARRAY BASED ON A REGION NUMBER

The ADDREG keyword adds a constant to a specified array or part of an array based on cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the ADDREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the ADDREG keyword is being used.

See [ADDREG – Add a Constant to an Array based on a Region Number](#) in the GRID section for a full description.

7.3.3 BOUNDARY – DEFINE A BOUNDARY BOX FOR PRINTING

The BOUNDARY keyword defines a rectangular grid for printing various arrays to the output print file (*.PRT); thus, avoiding printing all the elements in the selected array.

See [BOUNDARY – Define a Boundary Box for Printing](#) in the GRID section for a full description.

7.3.4 BOX - DEFINE A RANGE OF GRID BLOCKS TO ENTER PROPERTY DATA

BOX defines a range of grid blocks for which subsequent data is assigned for all the cells in the defined BOX. Note that the BOX grid is reset by the keyword ENDBOX by resetting the current defined BOX to be the whole grid. The keyword can be used for any array and for all grid types.

See [BOX - Define a Range of Grid Blocks to Enter Property Data](#) in the GRID section for a full description.

7.3.5 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

See [COLUMNS – Define Input File Column Margins](#) in the GLOBAL section for a full description.

7.3.6 COPY – COPY ARRAY DATA TO ANOTHER ARRAY

The COPY keyword copies an array (or part of an array) to another array or part of an array. The arrays can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the COPY keyword is being used.

See [COPY – Copy Array Data to Another Array](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.7 COPYREG – COPY AN ARRAY TO ANOTHER ARRAY BASED ON A REGION NUMBER

The COPYREG keyword copies a specified array or part of an array based on cells with a specific region number to another array. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the COPYREG keyword is read by the simulator. The property arrays can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the COPYREG keyword is being used.

See [COPYREG – Copy an Array to Another Array based on a Region Number](#) in the GRID section for a full description.

7.3.8 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See [DEBUG – Define the Debug Data to be Printed to File](#) in the GLOBAL section for a full description.

7.3.9 DEPTH - EDITS THE DEPTH AT THE CENTER OF EACH CELL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DEPTH keywords modifies the depth at the center of selected cells in the model. The cells DEPTH are calculated by OPM Flow at the end of the GRID section and this keyword allows the user to adjust the calculated depths in the EDIT section. The area to be modified can be defined via the various grid selection keywords, ADD, BOX, EQUALS, etc., and areas that are not selected remain unchanged.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DEPTH	DEPTH is an array of real numbers defining the depth at the center of each cell in the model. Only the values in the currently defined input BOX needed be entered. Repeat counts may be used, for example 30*5201.0.			None
		feet	m	cm	
Notes: I) The keyword is terminated by a “/”.					

Table 7.2: Depth Keyword Description

See also the TOPS keyword to define the top structural depth for the cells.

Examples

The example below defines the DEPTH of the cells for each cell for NX = 5, NY = 5 and NZ = 3 model, as well as the X and Y direction cells sizes.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
--      1  10   11  11   20  20 / SET BOX AREA TO BE MODIFIED
--
--
--      SET GRID BLOCK CENTER DEPTH FOR THE GRID BLOCKS
--
DEPTH    10*3500.0
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

Alternatively the EQUALS keyword can be used to perform the same edit.

```
--
--      ARRAY          CONSTANT          ----- BOX -----
--
--      I1  I2   J1  J2   K1  K2
EQUALS
--      DEPTH          3500.0           1  10   11  11   20  20 / RESET DEPTH
--
```


7.3.10 DIFFR – DEFINE GRID BLOCK RADIAL DIRECTION DIFFUSIVITY VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFR keyword defines the radial direction diffusivity values for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

7.3.11 DIFFTHT – DEFINE GRID BLOCK THETA DIRECTION DIFFUSIVITY VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFTHT keyword defines the theta direction diffusivity values for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

7.3.12 DIFFX – DEFINE GRID BLOCK X-DIRECTION DIFFUSIVITY VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFX keyword defines the x-direction diffusivity values for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

7.3.13 DIFFY – DEFINE GRID BLOCK Y-DIRECTION DIFFUSIVITY VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFY keyword defines the y-direction diffusivity values for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

7.3.14 DIFFZ – DEFINE GRID BLOCK Z-DIRECTION DIFFUSIVITY VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFFZ keyword defines the z-direction diffusivity values for cells in the current input box for when the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

7.3.15 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

See [ECHO – Activate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

7.3.16 EDIT - DEFINE THE START OF THE EDIT SECTION OF KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The EDIT activation keyword marks the end of the GRID section and the start of the EDIT section that enables modifications to the OPM Flow calculated properties derived from the data entered in the GRID section, for example grid block pore volumes via the PORV array and the transmissibilities via the TRANX, TRANY and TRANZ family of keywords.

There is no data required for this keyword.

Example

```
-- =====
--
-- EDIT SECTION
--
-- =====
EDIT
```

The above example marks the end of the GRID section and the start of the EDIT section in the OPM Flow data input file.

7.3.17 EDITNNC – SCALE NON-NEIGHBOR CONNECTIONS BETWEEN CELLS MANUALLY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

EDITNNC enables Non-Neighbor Connections (“NNC”), entered via the NNC keyword or calculated by the simulator, to be multiplied (re-scaled) by a constant. For example, if the existing transmissibility between non-neighbor connections is T_{old} and the multiplier is C , then the resulting transmissibility, T_{new} , will be $T_{new} = C \times T_{old}$. Only previously defined NNC's entered via the NNC keyword or calculated by the simulator can be edited, otherwise an error will occur.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	I1	A positive integer that defines the first grid block in the I-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NX on the DIMENS in the RUNSPEC section.			None
2	J1	A positive integer that defines the first grid block in the J-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NY on the DIMENS in the RUNSPEC section.			None
3	K1	A positive integer that defines the first grid block in the K-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NZ on the DIMENS in the RUNSPEC section.			None
4	I2	A positive integer that defines the second grid block in the I-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NX on the DIMENS in the RUNSPEC section.			None
5	J2	A positive integer that defines the second grid block in the J-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NY on the DIMENS in the RUNSPEC section.			None
6	K2	A positive integer that defines the second grid block in the K-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NZ on the DIMENS in the RUNSPEC section.			None
7	TRANSMUL	TRANSMUL is a positive real number greater than or equal to zero that defines a constant that scales the transmissibility between the first grid block (I1,J1,K1) and the second grid block (I2,J2,K2). The default value of one means no scaling will be applied.			1
		dimensionless	dimensionless	dimensionless	
8	ISATNUM1	The default value of zero means the existing saturation table allocated to the upstream cell (I1,J1,K1).			0
9	ISATNUM2	ISATNUM2 is a positive integer defining which saturation table number (relative permeability table) to be used for flow from the second grid block to the first grid block. The default value of zero means the existing saturation table allocated to the downstream cell (I2,J2,K2).			0

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
10	IPRSNUM1	IPRSNUM1 is a positive integer defining which pressure table number (PVT table) to be used for flow from the first grid block to the second grid block. The default value of zero means the existing PVT table allocated to the upstream cell (I1,J1,K1).			0
11	IPRSNUM2	IPRSNUM2 is a positive integer defining which pressure table number (PVT table) to be used for flow from the second grid block to the first grid block. The default value of zero means the existing PVT table allocated to the downstream cell (I2,J2,K2).			0
12	FACE1	FACE1 is a character string that defines the face associated with flow from the first grid block to the second grid block, where FACE1 can have values of: X+, X-,Y+,Y-, Z+, or Z-. FACE1 is used with the commercial simulator's Vertical Equilibrium option which is not supported by OPM Flow.			None
13	FACE2	FACE2 is a character string that defines the face associated with flow from the second grid block to the first grid block, where FACE2 can have values of: X+, X-,Y+,Y-, Z+, or Z-. FACE2 is used with the commercial simulator's Vertical Equilibrium option which is not supported by OPM Flow.			None
14	DIFFNNC	DIFFNNC is a positive real number greater than or equal to zero that scales the diffusivity between the first grid block (I1, J1, K1) and the second grid block (I2, J2, K2).			0.0
		dimensionless	dimensionless	dimensionless	
Notes: 1) Each record must be terminated by a "/" and the keyword is terminated by a "/".					

Table 7.3: EDITNNC Keyword Description

Note that although items (8) to (14) for this keyword are not available in OPM Flow, even if they were, it is strongly recommended that these items are defaulted if the data is being entered manually, as opposed to being generated by pre-processing software.

Care should be taken that cells in different PVTNUM regions (see the PVTNUM keyword in the REGIONS section) are not connected, since the fluid properties are associated with a cell. If for example, a rbb1 or a rm3 of oil flows from PVTNUM region 1 to PVTNUM region 2, then the oil properties of that oil will change from the PVT 1 data set to the PVT data set 2. This will result in material balance errors, that may or may not cause numerical issues.

If the transmissibility across a fault needs to be modified see the FAULTS and MULTFLT keywords in the GRID section for an alternative and less complicated method to modifying fault transmissibilities. Transmissibility between reservoir regions can be modified by using MULTREGT keyword, provided MULTNUM has been used to define the inter-region transmissibility region numbers for each grid block. Finally, the MULTX, MULTY and MULTZ series of keywords can be used to modify transmissibility between various cells. All the aforementioned keywords are described in the GRID section.

See also the EDITNNCR keyword in the EDIT section that resets an existing NNC to a user defined value.

Example

```
--
--      MANUALLY RESCALE NON-NEIGHBOR CONNECTIONS
--
--      ----- BOX -----      -- TRANSMUL --
--      I1   J1   K1   I2   J2   K2
EDITNCC
      1     1     1     1     1     2      0.2000    / SET NNC FOR FAULT
      1     1     2     1     1     3      0.2000    / SET NNC FOR FAULT
      1     1     3     1     1     4      0.2000    / SET NNC FOR FAULT
/
```

The above example multiplies the transmissibility between cells (1, 1, 1) and (1, 1, 2), (1, 1, 2) and (1, 1, 3) and finally between (1, 1, 3) and (1, 1, 4) by 0.200.

7.3.18 EDITNNCR – RESET NON-NEIGHBOR CONNECTIONS BETWEEN CELLS MANUALLY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

EDITNNCR enables Non-Neighbor Connections (“NNC”), entered via the NNC keyword or calculated by the simulator, to be reset to a user defined value. Only previously defined NNC’s entered via the NNC keyword or calculated by the simulator can be edited, otherwise an error will occur. See also the EDITNNC keyword in the EDIT section that scales an existing NNC.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	I1	A positive integer that defines the first grid block in the I-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NX on the DIMENS in the RUNSPEC section.			None
2	J1	A positive integer that defines the first grid block in the J-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NY on the DIMENS in the RUNSPEC section.			None
3	K1	A positive integer that defines the first grid block in the K-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NZ on the DIMENS in the RUNSPEC section.			None
4	I2	A positive integer that defines the second grid block in the I-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NX on the DIMENS in the RUNSPEC section.			None
5	J2	A positive integer that defines the second grid block in the J-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NY on the DIMENS in the RUNSPEC section.			None
6	K2	A positive integer that defines the second grid block in the K-direction to be joined in a non-neighbor connection, must be greater than or equal to one and less than or equal to NZ on the DIMENS in the RUNSPEC section.			None
7	TRANSNNC	TRANSNNC is a positive real number greater than or equal to zero that defines the transmissibility between the first grid block (I1, J1, K1) and the second grid block (I2, J2, K2). This value cannot be defaulted and must be defined.			None
		cPrb/day/psia	cPrm ³ /day/bars	cPrcc/hr/atm	
8	ISATNUM1	ISATNUM1 is a positive integer defining which saturation table number (relative permeability table) to be used for flow from the first grid block to the second grid block. The default value of zero means the existing saturation table allocated to the upstream cell (I1, J1, K1).			0

No.	Name	Description			Default
		Field	Metric	Laboratory	
9	ISATNUM2	ISATNUM2 is a positive integer defining which saturation table number (relative permeability table) to be used for flow from the second grid block to the first grid block. The default value of zero means the existing saturation table allocated to the downstream cell (I2,J2,K2).			0
10	IPRSNUM1	IPRSNUM1 is a positive integer defining which pressure table number (PVT table) to be used for flow from the first grid block to the second grid block. The default value of zero means the existing PVT table allocated to the upstream cell (I1,J1,K1).			0
11	IPRSNUM2	IPRSNUM2 is a positive integer defining which pressure table number (PVT table) to be used for flow from the second grid block to the first grid block. The default value of zero means the existing PVT table allocated to the downstream cell (I2,J2,K2).			0
12	FACE1	FACE1 is a character string that defines the face associated with flow from the first grid block to the second grid block, where FACE1 can have vales of: X+, X-,Y+,Y-, Z+, or Z-.			None
13	FACE2	FACE2 is a character string that defines the face associated with flow from the second grid block to the first grid block, where FACE2 can have vales of: X+, X-,Y+,Y-, Z+, or Z-.			None
14	DIFFNNC	DIFFNNC is a positive real number greater than or equal to zero that scales the diffusivity between the first grid block (I1, J1, K1) and the second grid block (I2, J2, K2). The default value is the value calculated in the GRID section.			I*
		feet	meters	cm	
Notes: 1) Each record must be terminated by a “/” and the keyword is terminated by a “/”.					

Table 7.4: EDITNNCR Keyword Description

Note that although items (8) to (14) for this keyword are not available in OPM Flow, even if they were, it is strongly recommended that these items are defaulted if the data is being entered manually, as opposed to being generated by pre-processing software.

If the transmissibility across a fault needs to be modified see the FAULTS and MULTFLT keywords in the GRID section for an alternative and less complicated method to modifying fault transmissibilities. Transmissibility between reservoir regions can be modified by using MULTREGT keyword, provided MULTNUM has been used to define the inter-region transmissibility region numbers for each grid block. Finally, the MULTX, MULTY and MULTZ series of keywords can be used to modify transmissibility between various cells. All the aforementioned keywords are described in the GRID section.

Example

```
--
--      MANUALLY RESET NON-NEIGHBOR CONNECTIONS
--
--      ----- BOX ----- -- TRANSNNC --
--      I1   J1   K1   I2   J2   K2
EDITNCCR
      1     1     1     1     1     2      0.2500 / SET NNC FOR FAULT
      1     1     2     1     1     3      0.2500 / SET NNC FOR FAULT
      1     1     3     1     1     4      0.2500 / SET NNC FOR FAULT
/
```

The above example res-sets the transmissibility between cells (1, 1, 1) and (1, 1, 2), (1, 1, 2) and (1, 1, 3) and (1, 1, 3) and (1, 1, 4) to be 0.2500.

7.3.19 END – DEFINE THE END OF THE INPUT FILE

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

See [END – Define the End of the Input File](#) in the GLOBAL section for a full description.

7.3.20 ENDBOX – DEFINE THE END OF THE BOX DEFINED GRID

This keyword marks the end of a previously defined BOX sub-grid as defined by a previously entered BOX keyword. The keyword resets the input grid to be the full grid as defined by the NX, NY, and NZ variables on the DIMENS keyword in the RUNSPEC section.

See [ENDBOX – Define the End of the BOX Defined Grid](#) in the GRID section for a full description.

7.3.21 ENDFIN – END THE DEFINITION OF A LOCAL GRID REFINEMENT

NDFIN defines the end of a Cartesian or radial local grid refinement (“LGR”) definition and a LGR property definition data set.

See [ENDFIN – End the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

7.3.22 ENDINC – DEFINE THE END OF AN INCLUDE FILE

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

See [ENDINC – Define the End of an Include File](#) in the GLOBAL section for a full description.

7.3.23 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

See [ENDSKIP – DeActivate Skipping of Keywords and Input Data](#) in the GLOBAL section for a full description.

7.3.24 EQUALREG – SETS AN ARRAY TO A CONSTANT BY REGION NUMBER

The EQUALREG keyword sets a specified array to a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the EQUALREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the EQUALREG keyword is being used.

See [EQUALREG – Sets an Array to a Constant by Region Number](#) in the GRID section for a full description.

7.3.25 EQUALS – SETS A SPECIFIED ARRAY TO A CONSTANT

The EQUALS keyword sets a specified array or part of an array to a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the EQUALS keyword is being used.

See [EQUALS – Sets a Specified Array to a Constant](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.26 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

See [EXTRAPMS – Activate Extrapolation Warning Messages](#) in the GLOBAL section for a full description.

7.3.27 FILEUNIT – ACTIVATE UNIT CONSISTENCY VERIFICATION

The FILEUNIT keyword defines the units of the of the data set, and is used to verify that the units in the input deck and any associated include files are consistent grid data. The keyword does not provide for the conversion between different sets of units.

See [FILEUNIT – Activate Unit Consistency Checking](#) in the GRID section for a full description.

7.3.28 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be place at the very top of the input file.

See [FORMFEED – Defined the Print File Form-Feed Character](#) in the GLOBAL section for a dull description.

7.3.29 GETDATA – LOAD AND ASSIGN DATA ARRAY FROM INIT OR RESTART FILE

The GETDATA keyword loads a data array from a previously generated INIT or RESTART file and assigns the loaded array to either same array in the run or another array name.

See [GETDATA – Load and Assign Data Array from INIT or RESTART Files](#) in the GRID section for a full description

7.3.30 HMMULT – HISTORY MATCH GRID TRANSMISSIBILITY & PORE VOLUME GRADIENT CUMULATIVE MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMULT series of keywords defines the history match gradient cumulative permeability multipliers, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The keyword consists of the first five characters of “HMMULT” followed by a one or two character string shown in Table 7.5, that determines the transmissibility direction, for example, HMMULTX.

This keyword is ignored by OPM Flow and has no effect on the simulation.

Mnemonic	Cartesian Grid		Radial Grid	
	Grid Keyword	HMMULT Keyword	Grid Keyword	HMMULT Keyword
X/R	MULTX	HMMULTX	MULTR	HMMULTR
XY	MULTXY	HMMULTXY		
Y/HT	MULTY	HMMULTY	MULTTHT	HMMULTTH
Z	MULTZ	HMMULTZ	MULTZ	HMUMLTZ
PV	MULTPV	HMULTPV	MULTPV	HMULTPV

Table 7.5: HMMULT Keyword List

See also the HMMULT keyword in the GRID section.

7.3.31 IMPORT – IMPORT GRID FILE DATA AT THE CURRENT POSITION

The IMPORT keyword informs the simulator to continue reading input data from the specified IMPORT file. When the end of the IMPORT file is reached, input data is read from the next keyword in the current file. Normally IMPORT files are generated by grid pre-processing software and the keyword allows for both formatted and unformatted (binary) files to be loaded.

See [IMPORT – Import Grid File Data at the Current Position](#) in the GRID section for a full description.

7.3.32 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file.

See [INCLUDE – Load Another Data File at the Current Position](#) in the GLOBAL section for a full description.

7.3.33 LGRCOPY – ACTIVATE LOCAL GRID REFINEMENT INHERITANCE

The LGRCOPY keyword activates Local Grid Refinement (“LGR”) Inheritance option that allows the LGR to inherit the properties of the global or host cell containing a LGR grid block at the start of the GRID section, as oppose to the normal process of applying this transform at the end of the GRID section. LGRCOPY can be used in the RUNSPEC, GRID and EDIT sections. If used in the RUNSPEC section then the option is applied to all LGRs defined in the input file, whereas if used in the GRID and EDIT sections the keyword must be placed inside a LGR definition section, that is between a CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) and the ENDFIN keyword. In the latter case inheritance is applied on an individual LGR basis.

See [LGRCOPY – Activate Local Grid Refinement Inheritance](#) in the RUNSPEC section for a full description.

7.3.34 MAXVALUE – SETS A MAXIMUM VALUE FOR AN ARRAY ELEMENT

The MAXVALUE keyword sets a maximum value for the specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the MAXVALUE keyword is being used.

See [MAXVALUE – Sets a Maximum Value for an Array Element](#) in the GRID section for a full description.

7.3.35 MESSAGE – OUTPUT USER MESSAGE

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGE\$ keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

See [MESSAGE – Output User Message](#) in the GLOBAL section for a full description.

7.3.36 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

See [MESSAGES – Define Message Print Limits and Stop Limits](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.37 MINVALUE – SET A MINIMUM VALUE FOR AN ARRAY ELEMENT

The MINVALUE keyword sets a minimum value for the specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the MINVALUE keyword is being used.

See [MINVALUE – Set a Minimum Value for an Array Element](#) in the GRID section for a full description.

7.3.38 MULTFLT – MULTIPLY THE TRANSMISSIBILITY OF A DEFINED FAULT BY A CONSTANT

MULTFLT enables the transmissibilities across defined faults, as declared by the FAULTS keyword, to be modified. The keyword allows for the re-scaling of the existing fault transmissibilities calculated by OPM Flow, for example setting a fault to be completely sealing by setting the multiplier to zero..

See [MULTFLT – Multiply the Transmissibility of a Defined Fault by a Constant](#) in the GRID section for a full description.

7.3.39 MULTIPLY – MULTIPLY A SPECIFIED ARRAY BY A CONSTANT

The MULTIPLY keyword multiplies a specified array or part of an array by a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

See [MULTIPLY – Multiply a Specified Array by a Constant](#) in the GRID section for a full description.

7.3.40 MULTIREG – MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER

The MULTIREG keyword multiplies an array or part of an array by a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTIREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the MULTIREG keyword is being used.

See [MULTIREG – Multiply an Array by a Constant based on a Region Number](#) in the GRID section for a full description.

7.3.41 MULTPV – MULTIPLY CELL PORE VOLUMES BY A CONSTANT

MULTPV multiplies the pore volumes of a cell by a real positive constant for all the cells in the model via an array. An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTPV keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

See [MULTPV – Multiply Cell Pore Volumes by a Constant](#) in the GRID section for a full description.

7.3.42 MULTR - MULTIPLY CELL TRANSMISSIBILITY IN THE +R DIRECTION

MULTR multiplies the transmissibility between two cell faces in the +R direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I+1, J, K). The keyword should only be used with radial grids, as declared by the RADIAL keyword in the RUNSPEC section.

See [MULTR - Multiply Cell Transmissibility in the +R Direction](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.43 MULTR- - MULTIPLY CELL TRANSMISSIBILITY IN THE -R DIRECTION

MULTX- multiplies the transmissibility between two cell faces in the -X direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I-I, J, K) and (I, J, K). The keyword should only be used with radial grids, as declared by the RADIAL keyword in the RUNSPEC section.

See [MULTR- - Multiply Cell Transmissibility in the -R Direction](#) in the GRID section for a full description.

7.3.44 MULTREGD – MULTIPLY DIFFUSIVITIES BETWEEN REGIONS

The MULTREGT keyword multiplies the diffusivity between two regions by a constant. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGT keyword is read by the simulator. The constant should be a real number.

See [MULTREGD – Multiply Diffusivities Between Regions](#) in the GRID section for a full description.

7.3.45 MULTREGH – MULTIPLY THERMAL CONDUCTIVITIES BETWEEN REGIONS

The MULTREGH keyword multiplies the thermal conductivity between two regions by a constant. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGT keyword is read by the simulator. The constant should be a real number.

See [MULTREGH – Multiply Thermal Conductivities Between Regions](#) in the GRID section for a full description.

7.3.46 MULTREGP– MULTIPLY PORE VOLUMES BASED ON REGION NUMBER

The MULTREGP keyword multiplies the pore volume of a cell by a constant for all cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGP keyword is read by the simulator. The constant should be a real number.

See [MULTREGP – Multiply Pore Volumes Based On Region Number](#) in the GRID section for a full description.

7.3.47 MULTREGT– MULTIPLY TRANSMISSIBILITIES BETWEEN REGIONS

The MULTREGT keyword multiplies the transmissibility between two regions by a constant. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGT keyword is read by the simulator. The constant should be a real number.

See [MULTREGT – Multiply Transmissibilities Between Regions](#) in the GRID section for a full description.

7.3.48 MULTTHT - MULTIPLY CELL TRANSMISSIBILITY IN THE +THETA DIRECTION

MULTTHT multiplies the transmissibility between two cell faces in the +Theta direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J+I, K). The keyword should only be used with radial grids, as declared by the RADIAL keyword in the RUNSPEC section.

See [MULTTHT - Multiply Cell Transmissibility in the +Theta Direction](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.49 MULTTHT- - MULTIPLY CELL TRANSMISSIBILITY IN THE -THETA DIRECTION

MULTTHT- multiplies the transmissibility between two cell faces in the -Theta direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J-I, K) and (I, J, K). The keyword should only be used with radial grids, as declared by the RADIAL keyword in the RUNSPEC section.

See [MULTTHT- - Multiply Cell Transmissibility in the -Theta Direction](#) in the GRID section for a full description.

7.3.50 MULTX - MULTIPLY CELL TRANSMISSIBILITY IN THE +X DIRECTION

MULTX multiplies the transmissibility between two cell faces in the +X direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I+I, J, K).

See [MULTX - Multiply Cell Transmissibility in the +X Direction](#) in the GRID section for a full description.

7.3.51 MULTX- - MULTIPLY CELL TRANSMISSIBILITY IN THE -X DIRECTION

MULTX- multiplies the transmissibility between two cell faces in the -X direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I-I, J, K) and (I, J, K).

See [MULTX- - Multiply Cell Transmissibility in the -X Direction](#) in the GRID section for a full description.

7.3.52 MULTY - MULTIPLY CELL TRANSMISSIBILITY IN THE +Y DIRECTION

MULTY multiplies the transmissibility between two cell faces in the +Y direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J+I, K).

See [MULTY - Multiply Cell Transmissibility in the +Y Direction](#) in the GRID section for a full description.

7.3.53 MULTY- - MULTIPLY CELL TRANSMISSIBILITY IN THE -Y DIRECTION

MULTY- multiplies the transmissibility between two cell faces in the -Y direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J-I, K) and (I, J, K).

See [MULTY- - Multiply Cell Transmissibility in the -Y Direction](#) in the GRID section for a full description.

7.3.54 MULTZ - MULTIPLY CELL TRANSMISSIBILITY IN THE +Z DIRECTION

MULTZ multiplies the transmissibility between two cell faces in the +Z direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J, K+I).

See [MULTZ - Multiply Cell Transmissibility in the +Z Direction](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.55 MULTZ- - MULTIPLY CELL TRANSMISSIBILITY IN THE -Z DIRECTION

MULTZ- multiplies the transmissibility between two cell faces in the -Z direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K-I) and (I, J, K).

See [MULTZ- - Multiply Cell Transmissibility in the -Z Direction](#) in the GRID section for a full description.

7.3.56 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active. but can subsequently be switched off by the NOECHO activation keyword.

See [NOECHO – Deactivate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

7.3.57 NOWARN – DEACTIVATE WARNING MESSAGES

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

See [NOWARN – Deactivate Warning Messages](#) in the GLOBAL section for a full description.

7.3.58 OPERATE – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS

This keyword, OPERATE, defines mathematical operations on property arrays (NTG, PORO etc.) and optionally using another property array as input to the function. The keyword allows for various mathematical functions and their associated variables to be defined and applied to the selected array data. Input constants can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

See [OPERATE – Define Mathematical Operations on Arrays](#) in the GRID section for a full description.

7.3.59 OPERATER – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS BY REGION

This keyword defines the mathematical operations on arrays for specific regions in the commercial simulator and is currently not supported by OPM Flow. However, similar functionality is provided by the ADD and MULTIPLY keywords.

See [OPERATER – Define Mathematical Operations on Arrays by Region](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

7.3.60 PORV - DEFINE THE PORE VOLUMES FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PORV defines the pore volumes for all the cells in the model via an array. The keyword can be used for all grid types, except for the Radial Grid geometry. The keyword effectively overwrites previously entered and calculated data. The area to be modified can be defined via the various grid selection keywords, ADD, BOX, EQUALS, etc., and areas that are not selected remain unchanged.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PORV	PORV is an array of real positive numbers assigning a pore volume to each cell in the model. Only the values in the currently defined input BOX needed be entered. Repeat counts may be used, for example 20*100.0.			None
		rb	rm ³	rcc	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) Values not reset by this keyword remain unaltered. 3) The keyword is terminated by a “/”.					

Table 7.6: PORV Keyword Description

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2  J1  J2  K1  K2
BOX
--      1* 100  1* 100  20  20                                / DEFINE BOX AREA
--
--      SET PORV FOR THE GRID BLOCKS
--
--      PORV
--      1000*0.00                                              /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
--      ENDBOX
```

Here the BOX statement is used to define the input grid for the PORV keyword, which overwrites the pore volume previously calculated with pore volume values of zero, resulting in a no-flow boundary in that part of the field between layers 19 and 21, since layer 20 is deactivated. The ENDBOX keyword resets the input box to the full grid.

7.3.61 PYEND – END THE DEFINITION OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow’s Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords. A PYINPUT Definition Section is terminated by a PYEND keyword on a separate single line.

See [PYEND – End the Definition of a PYINPUT Section](#) in the GRID section for a full description.

7.3.62 PYINPUT – DEFINE THE START OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow’s Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords used by the simulator. PYINPUT declares the start of a PYINPUT Definition Section on a single separate line, which is then followed by various standard Python commands, with one command per line.

See [PYINPUT – Define the Start of a PYINPUT Section](#) in the GRID section for a full description.

7.3.63 REFINE – START THE DEFINITION OF A LOCAL GRID REFINEMENT

The REFINE keyword defines the start of a Cartesian or radial local grid refinement (“LGR”) definition that sets the properties of the selected LGR. The keyword is then followed by the property keywords associated with the section where the keyword is being invoked. For example, if the REFINE keyword is used in the GRID section then most of the keywords in that section can be used to set the grid properties for the LGR.

See [REFINE – Start the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

7.3.64 SKIP – ACTIVATE SKIPPING OF ALL KEYWORDS AND INPUT DATA

The SKIP keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered. All keywords and between the SKIP and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP – Activate Skipping of All Keywords and Input Data](#) in the GLOBAL section for a full description.

7.3.65 SKIP100 – ACTIVATE SKIPPING OF BLACK-OIL KEYWORDS AND INPUT DATA

This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered. All black-oil keywords between the SKIP100 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data](#) in the GLOBAL section for a full description.

7.3.66 SKIP300 – ACTIVATE SKIPPING OF “COMPOSITIONAL” KEYWORDS AND INPUT DATA

Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered. All “compositional” keywords between the SKIP300 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.67 TRANR - DEFINE THE TRANSMISSIBILITY IN THE +R DIRECTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

TRANR defines the transmissibility in the +R direction for all the cells in the model via an array. The keyword can only be used with Radial Grid geometry grids. The keyword effectively overwrites previously entered and calculated data. The transmissibility overwritten is the +R face transmissibility of each grid block, that is for cell (I, J, K) the transmissibility between cells (I, J, K) and (I+1, J, K).

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TRANR	TRANR is an array of real positive numbers assigning the transmissibility in the R direction to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		cP.rb/day/psia	cP.rm ³ /day/bars	cP.rcc/hr/atm	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) Values not reset by this keyword remain unaltered. 3) The keyword is terminated by a “/”.					

Table 7.7: TRANR Keyword Description

See also the TRANRHT and TRANRZ keywords to modify the transmissibilities in the other directions.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      1   1   10  10   1  120
--
--      SET TRANR+ TRANSMISSIBILITY
--
TRANR    120*0.00
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

Here the BOX statement is used to define the input grid for the TRANR keyword, which overwrites the transmissibility previously calculated with transmissibility values of zero, resulting in a no-flow boundary in that part of the grid. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.68 TRANTHT - DEFINE THE TRANSMISSIBILITY IN THE +THETA DIRECTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

TRANTHT defines the transmissibility in the +Theta direction for all the cells in the model via an array. The keyword can only be used with Radial Grid geometry grids. The keyword effectively overwrites previously entered and calculated data. The transmissibility overwritten is the +Theta face transmissibility of each grid block, that is for cell (I, J, K) the transmissibility between cells (I, J, K) and (I, J+1, K).

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TRANHT	TRANHT is an array of real positive numbers assigning the transmissibility in the +Theta direction to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		cP.rb/day/psia	cP.rm ³ /day/bars	cP.rcc/hr/atm	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) Values not reset by this keyword remain unaltered. 3) The keyword is terminated by a “/”.					

Table 7.8:TRANR Keyword Description

See also the TRANR and TRANYZ keywords to modify the transmissibilities in the other directions.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      10  10   1   6   1   3                / DEFINE BOX AREA
--
--      SET TRANHT TRANSMISSIBILITY
--
TRANHT   18*0.00                                /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

Here the BOX statement is used to define the input grid for the TRANHT keyword, which overwrites the transmissibility previously calculated with transmissibility values of zero, resulting in a no-flow boundary in that part of the grid. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.69 TRANX - DEFINE THE TRANSMISSIBILITY IN THE X DIRECTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

TRANX defines the transmissibility in the X direction for all the cells in the model via an array. The keyword can be used for all grid types, except for the Radial Grid geometry. The keyword effectively overwrites previously entered and calculated data. The transmissibility overwritten is the +X face transmissibility of each grid block, that is for cell (I, J, K) the transmissibility between cells (I, J, K) and (I+1, J, K).

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TRANX	TRANX is an array of real positive numbers assigning the transmissibility in the X direction to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		cP.rb/day/psia	cP.rm ³ /day/bars	cP.rcc/hr/atm	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) Values not reset by this keyword remain unaltered. 3) The keyword is terminated by a “/”.					

Table 7.9: TRANX Keyword Description

See also the TRANY and TRANYZ keywords to modify the transmissibilities in the other directions.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      1   1    10  10   1  120                      / DEFINE BOX AREA
--
--      SET TRANX+ TRANSMISSIBILITY
--
TRANX      120*0.00                      /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

Here the BOX statement is used to define the input grid for the TRANX keyword, which overwrites the transmissibility previously calculated with transmissibility values of zero, resulting in a no-flow boundary in that part of the field. The ENDBOX keyword resets the input box to the full grid.

7.3.70 TRANY - DEFINE THE TRANSMISSIBILITY IN THE Y DIRECTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

TRANY defines the transmissibility in the Y direction for all the cells in the model via an array. The keyword can be used for all grid types, except for the Radial Grid geometry. The keyword effectively overwrites previously entered and calculated data. The transmissibility overwritten is the +Y face transmissibility of each grid block, that is for cell (I, J, K) the transmissibility between cells (I, J, K) and (I, J+1, K).

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TRANY	TRANY is an array of real positive numbers assigning the transmissibility in the Y direction to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		cP.rb/day/psia	cP.rm ³ /day/bars	cP.rcc/hr/atm	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) Values not reset by this keyword remain unaltered.
- 3) The keyword is terminated by a “/”.

Table 7.10: TRANY Keyword Description

See also the TRANX and TRANZ keywords to modify the transmissibilities in the other directions.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      1   1   10  10   1  120                      / DEFINE BOX AREA
--
--      SET TRANY+ TRANSMISSIBILITY
--
TRANY    120*0.00                      /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

Here the BOX statement is used to define the input grid for the TRANY keyword, which overwrites the transmissibility previously calculated with transmissibility values of zero, resulting in a no-flow boundary in that part of the field. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.71 TRANZ - DEFINE THE TRANSMISSIBILITY IN THE Z DIRECTION FOR ALL THE CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

TRANZ defines the transmissibility in the z direction for all the cells in the model via an array. The keyword can be used for all grid types, except for the Radial Grid geometry. The keyword effectively overwrites previously entered and calculated data. The transmissibility overwritten is the +Z face transmissibility of each grid block, that is for cell (I, J, K) the transmissibility between cells (I, J, K) and (I, J, K+1).

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TRANZ	TRANZ is an array of real positive numbers assigning the transmissibility in the Z direction to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		cP.rb/day/psia	cP.rm ³ /day/bars	cP.rcc/hr/atm	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) Values not reset by this keyword remain unaltered.
- 3) The keyword is terminated by a “/”.

Table 7.11: TRANZ Keyword Description

See also the TRANX and TRANY keywords to modify the transmissibilities in the other directions.

Example

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX
--      1* 100   1* 100   20  20                               / DEFINE BOX AREA
--
--      SET TRANZ+ TRANSMISSIBILITY
--
TRANZ
--      1000*0.00                                               /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

Here the BOX statement is used to define the input grid for the TRANZ keyword, which overwrites the transmissibility previously calculated with transmissibility values of zero, resulting in a no-flow boundary in that part of the field between layers 20 and 21. The ENDBOX keyword resets the input box to the full grid.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

7.3.72 WARN – ACTIVATE WARNING MESSAGES

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

See [WARN – Activate Warning Messages](#) in the GLOBAL section for a full description.

CHAPTER 8: PROPS SECTION

8.1 INTRODUCTION

The PROPS section is the section that contains the fluid property keywords used to define the PVT behavior of the fluids in the model and therefore the data is fluid type dependent. For example, if the oil phase has been activated in the RUNSPEC section via the OIL keyword then one of the oil PVT keywords needs to be defined in this section. The other main type of data required for the PROPS section is the saturation tables that govern how the various fluids flow in the model relative to the other phases. Again, the saturation tables are fluid type dependent.

Various other fluid and rock property data are also entered in this section including rock compressibility via the ROCK keyword for the standard rock compressibility model, and rather unusually, the Carter-Tracy influence function entered via the AQUTAB keyword.

8.2 DATA REQUIREMENTS

For all phases activated in the model a complete description of the PVT behavior (PVT tables) and fluid flow behavior (saturation tables) is required. As the data is fluid type dependent, the next two sections attempt to define the appropriate keywords for the various activated fluid types. The first section outlines the fluid PVT property requirements and the second section summarizes the keywords associated with fluid flow property data, namely the relative permeability and capillary pressure data.

8.2.1 FLUID PROPERTY TABLES

Table 8.1 outlines the oil, gas and water fluid types that can be active in the model, together with the related RUNSPEC section keywords that activate the phases, versus the PVT keywords that can be used to define the PVT behavior. The table also includes several water types, the standard water phase used in most simulations models, the Brine water phase used in the Brine Tracking model to track the flow of brine through the simulation grid and the effect of brine on reservoir performance, and finally OPM Flow's Vaporized Water phase that is used in the simulator's Salt Precipitation model. The latter water phase is not available in the commercial simulator.

Fluid Property Keywords Versus Oil, Gas & Water Fluid Types								
Item	Oil		Gas				Water	
Fluid Type	Dead Oil	Live Oil	Dry Gas	Wet Gas	Dry / Wet Gas with Vaporized Water	CO ₂ (EOR)	Water	Brine
RUNSPEC Keywords	OIL	OIL	GAS	GAS	GAS	GAS	WATER	WATER
		DISGAS		VAPOL	None/ VAPOL			
					VAPWAT			
					WATER			
					BRINE			BRINE
Pressure Dependent PVT	PVCO	PVCO	PVDG	PVTG	PVTWSALT	PVTSOL	PVTW	PVTWSALT
	PVDO	PVTO	PVZG		PVTGW	PVTDS		
					PVTGWO			
Miscellaneous	RSCONST		RVCONST		RWGSALT			
	RSCONSTT		RVCONSTT					
Surface Density	DENSITY				BDENSITY		DENSITY	BDENSITY
	GRAVITY						GRAVITY	

Notes:

- 1) Cells colored in gray with no mnemonic indicate that there is no keyword for this combination.
- 2) Cells colored orange show keywords that have not been implemented in OPM Flow.
- 3) When two or more keywords are stated for the RUNSPEC keyword for a given fluid type, then all are required to define the given phase.
- 4) When two keywords are stated for the Pressure Dependent PVT and Miscellaneous data for a given fluid type, then either one can be used to define the PVT behavior for the given phase.

Table 8.1: Fluid Property Keywords versus Oil, Gas and Water Fluid Type

For the Dead Oil phases the RSCONST and RSCONSTT keywords are used to set a constant gas-oil ratio (R_s). In this case the R_s is independent of the reservoir pressure and R_s is also negligible, as in for example heavy oil type fluids.

Similarly for the Dry Gas phase, where the RVCONST and RVCONSTT keywords are used to set a condensate-gas ratio (R_v) which is independent of the reservoir pressure and is also negligible, as in for example dry gas type fluids.

For the Vaporized Water phase and model, both dry and wet gas can be incorporated. Note that the PVTGW, PVTGWO, and RWGSALT keywords are OPM Flow specific keywords,

In addition for the Brine phase, then either the SALT or SALTVD keywords in the SOLUTION section should be used to define the initial equilibration salt concentration for the model.

CO₂ can either be used as Enhanced Oil Recovery (“EOR”) fluid by injecting the CO₂ into an oil reservoir, or for modeling CO₂ storage. For the former, CO₂ is declared via the GAS keyword in the RUNSPEC and the PVT data is entered via the standard gas fluid properties for the hydrocarbon gas and either the PVTDS or the PVT SOL keywords are used to describe the interaction of the in situ oil and the injected CO₂.

In addition to the above the ROCK keyword should be used to define the rock compressibility.

Similarly, Table 8.2 outlines the fluid property data keywords for the CO₂ storage, foam, polymer and solvent phases. Note that for these phases multiple keywords can be used to define the desired property behavior.

Fluid Property Keywords Versus CO ₂ (Storage), Foam, Polymer & Solvent Fluid Types					
Fluid Type	CO ₂ (Storage)	Foam	Polymer	Solvent	MICP ⁶
RUNSPEC Keywords	CO2STORE	FOAM	POLYMER	SOLVENT	MICP
	GAS				WATER
	WATER				
Pressure Dependent PVT	Not required, calculated via correlations			PVDS	PVTW
				PVT SOL ⁵	
Surface Density				SDENSITY	DENSITY
Miscellaneous	SALINITY ⁴	FOAMADS	PLMIXPAR		MICPPARA
		FOAMDCYO	PLYADS		
		FOAMDCYW	PLYADSS		
		FOAMFCN	PLYATEMP		
		FOAMFRM	PLYCAMAX		
		FOAMFSC	PLYDHFLF		
		FOAMFSO	PLYESAL		

Fluid Property Keywords Versus CO ₂ (Storage), Foam, Polymer & Solvent Fluid Types					
Fluid Type	CO ₂ (Storage)	Foam	Polymer	Solvent	MICP ⁶
		FOAMFST	PLYKRRF		
		FOAMFSW	PLYMAX		
		FOAMMOB	PLYRMDEN		
		FOAMMOBP	PLYROCK		
		FOAMMOBS	PLYSHEAR		
		FOAMOPTS	PLYSHLOG		
		FOAMROCK	PLYTRRF		
			PLYTRRFA		
			PLYVISC		
			PLYVISCS		
			PLYVISCT		
			PLYVSCST		

Notes:

- 1) Cells colored in gray with no mnemonic indicate that there is no keyword for this combination.
- 2) Cells colored orange show keywords that have not been implemented in OPM Flow.
- 3) When two or more keywords are stated for the RUNSPEC keyword for a given fluid type, then all are required to define the given phase.
- 4) When multiple keywords are stated for the Miscellaneous data for a given fluid type, then several keywords can be used to defined the fluid property behavior.
- 5) SALINITY is OPM Flow specific keywords
- 6) PVT SOL is used to model CO₂ interaction with in situ oil only and is an OPM Flow specific keyword.
- 7) OPM Flow's implementation of the Microbial Induced Calcite Precipitation ("MICP") model used to investigate CO₂ leakage remediation. All the keywords are specific to OPM Flow. This model also requires the ROCK keyword to define the rock compressibility.


Table 8.2: Fluid Property Keywords versus CO₂ (Storage), Foam, Polymer and Solvent Fluid Types


As mentioned previously, CO₂ can either be used as an EOR fluid by injecting the gas into an oil reservoir, or for modeling CO₂ storage. For the latter, CO₂ is declared via the GAS and CO2STORE keywords in the RUNSPEC section, and, except for the SALINITY keyword, all the remaining PVT data is calculated automatically via correlations by the simulator. A full description of the underlying PVT models is described by Sandve et al.⁷⁹

Typical live oil and dry gas PVT data is from the Volve⁸⁰ field is shown in Figure 8.1 and Figure 8.2, respectively.

⁷⁹ Tor Harald Sandve I, Sarah E. Gasda, Atgeirr Rasmussen, and Alf Birger Rustad. Convective dissolution in field scale CO₂ storage simulation using the OPM Flow simulator. Submitted to TCCS 11 – Trondheim Conference on CO₂ Capture, Transport and Storage Trondheim, Norway – June 21-23, 2021.

⁸⁰ The Volve Data was approved for data sharing in 2018 by the initiative of the last Operating company, Equinor and approved by the license partners ExxonMobil E&P Norway AS and Bayerngas Norge AS in the end of 2017.

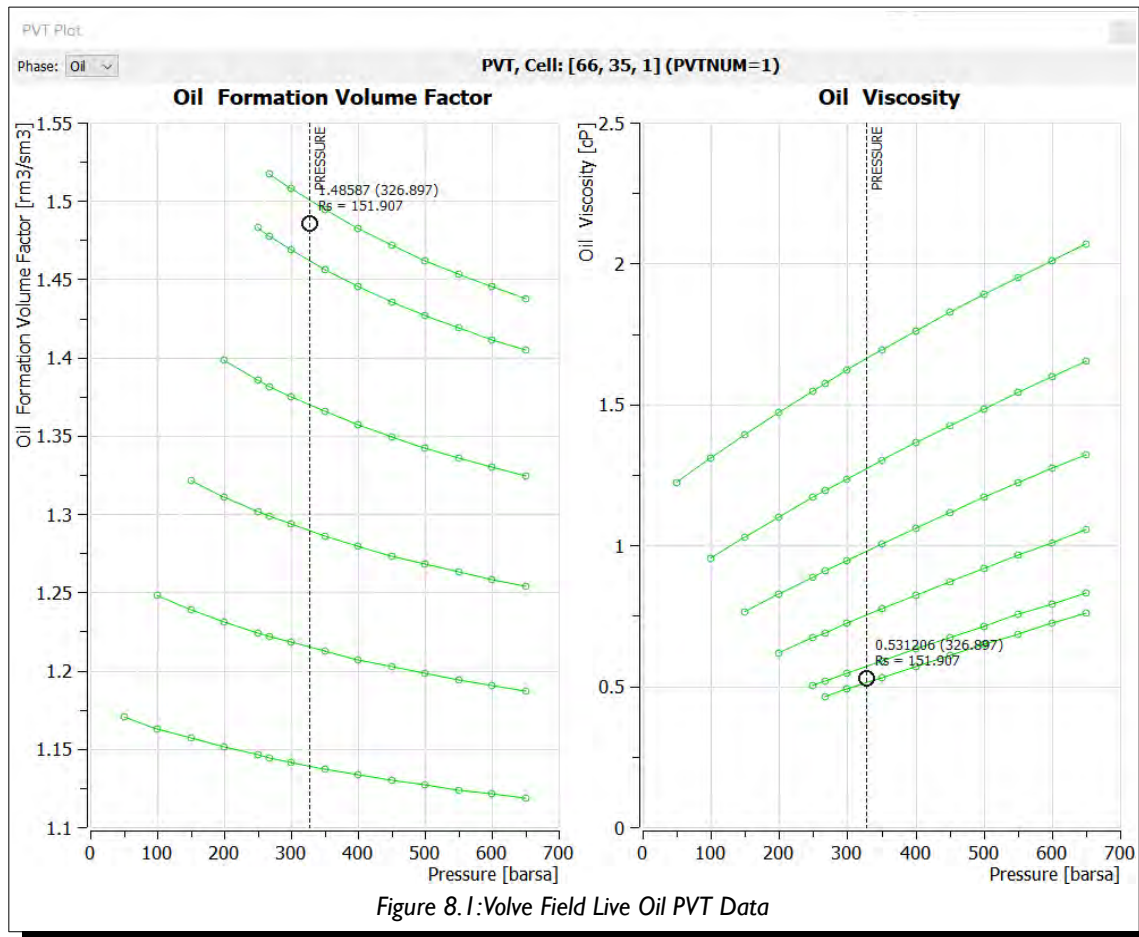


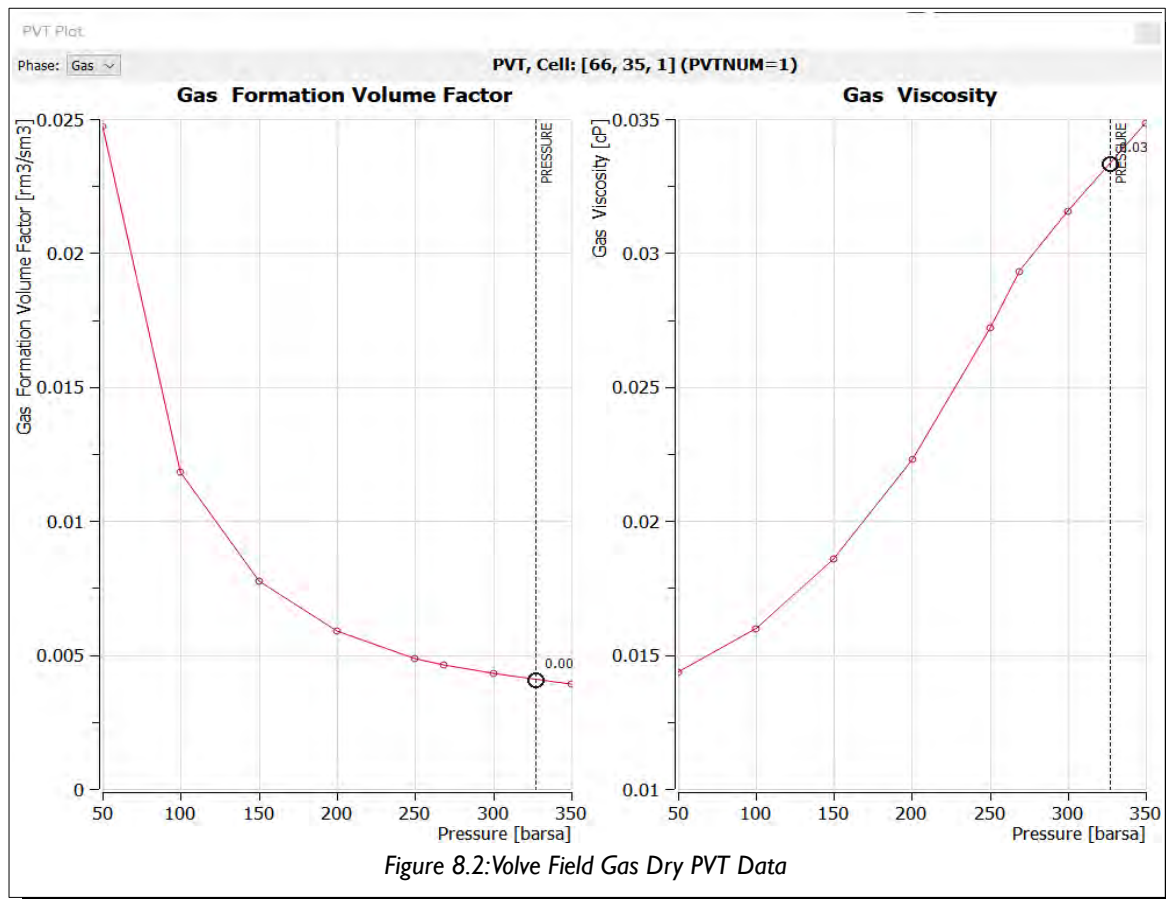

8.2.2 SATURATION TABLES (RELATIVE PERMEABILITY AND CAPILLARY PRESSURE TABLES)

Saturation tables contain the relative permeability and capillary pressure data as a function of fluid saturation and are used to both initialize the model and to describe multi-phase flow in the reservoir. Multiple saturation tables can be entered and allocated to various areas in the model, based on rock typing. Alternatively, a limited number of saturation tables may be entered and allocated by region and combined with end-point scaling option to enable a more robust reservoir rock characterization.

A typical oil-water relative permeability set of curves is shown in Figure 8.3 indicating the oil end-point data (K_{RO} , K_{RORW} and $(1 - S_{OWCR})$) and the water end-point data (K_{RW} , K_{RW} , SWL and $SWCR$).

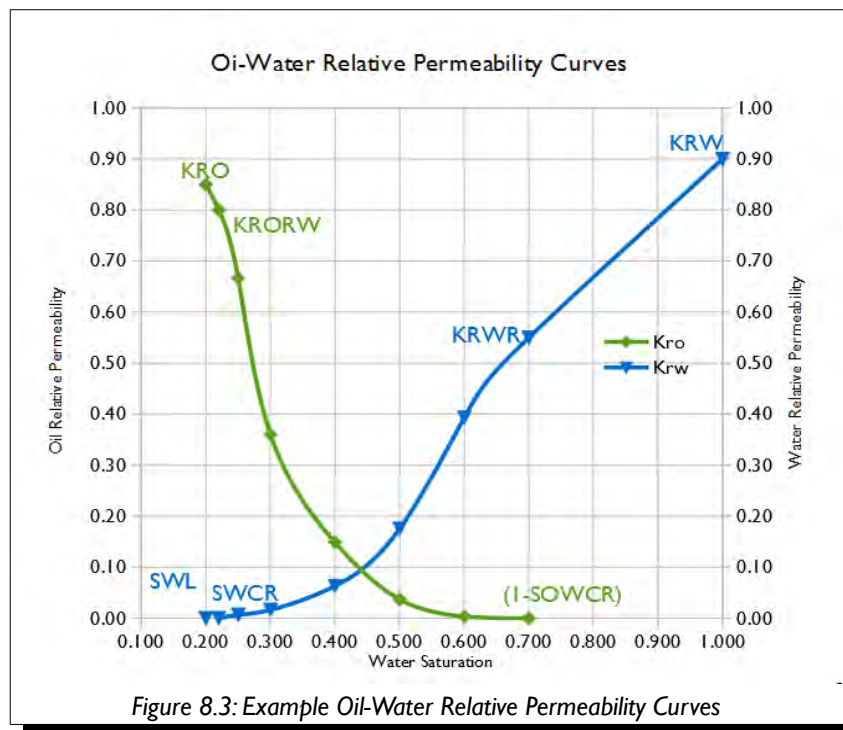


The associated oil-water end-point definitions are outlined in the following table:

Type	End-Point Keyword	Oil-Water End-Point Definitions
Saturation	SWL	Connate water saturation, that is the smallest water saturation in a water saturation function table.
	SWCR	Critical water saturation, that is the largest water saturation for which the water relative permeability is zero.
	SOWCR	Critical oil-in-water saturation, that is the largest oil saturation for which the oil relative permeability is zero in an oil-water system.
Relative Permeability	KRW	Relative permeability of water at the maximum water saturation (normally the maximum water saturation is one).
	KRO	Relative permeability of oil at the maximum oil saturation.
	KRWR	Relative permeability of water at the residual oil saturation or the residual gas saturation in a gas-water run.
	KRORW	Relative permeability of oil at the critical water saturation
Capillary Pressure	SWLPC	Capillary pressure connate water saturation, that is the smallest water saturation in a water saturation function table.

Table 8.3: Oil-Water Relative Permeability End-Point Data Definitions

Similarly for gas-oil systems, Figure 8.4 illustrates a typical gas-oil relative permeability set of curves indicating the oil end-point data (KRORG and $(1 - \text{SOGCR})$) and the gas end-point data (KRGR, KRG and SGCR).

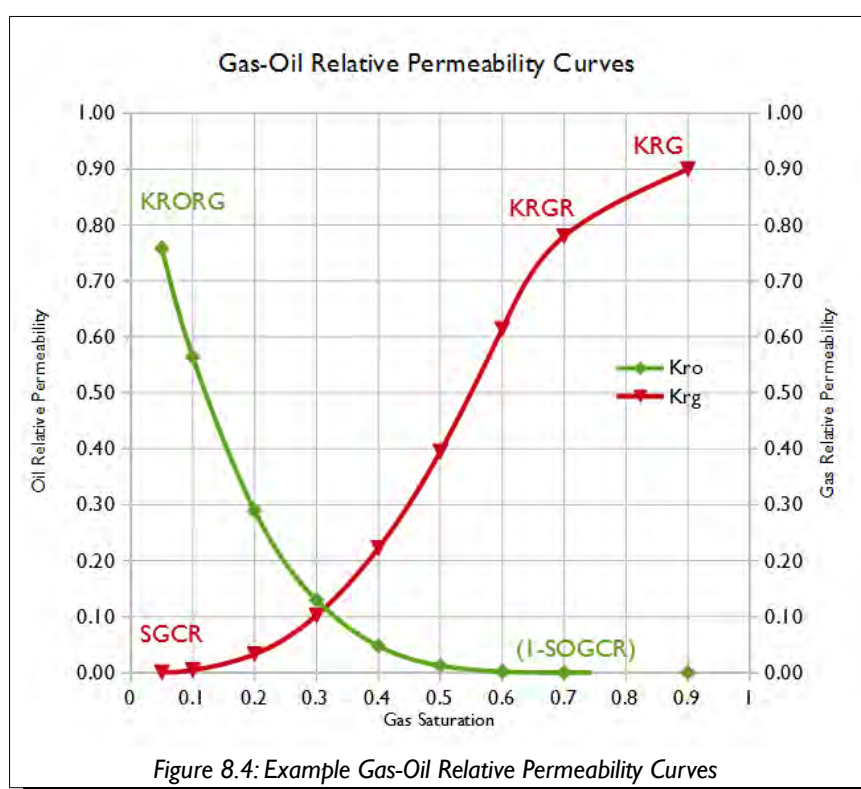

The gas-oil end-point definitions are outlined in the following table:

Type	End-Point Keyword	Gas-Oil End-Point Definitions
Saturation	SGL	Connate gas saturation, that is the smallest gas saturation in a gas saturation function table.
	SGCR	Critical gas saturation, that is the largest gas saturation for which the gas relative permeability is zero.
	SOGCR	Critical oil-in-gas saturation, that is the largest oil saturation for which the oil relative permeability is zero in an oil-gas-connate water system.
Relative Permeability	KRG	Relative permeability of gas at the maximum gas saturation.
	KRGR	Relative permeability of gas at the residual oil saturation or the critical water saturation in a gas-water run.
	KRORG	Relative permeability of oil at the critical gas saturation.
Capillary Pressure	SGLPC	Capillary pressure connate gas saturation, that is the smallest gas saturation in a gas saturation function table.

Table 8.4: Gas-Oil Relative Permeability End-Point Data Definitions

End-point scaling is activated in the RUNSPEC section with the ENDSCALE keyword and the data used to apply end-point scaling is entered in the PROPS section using the end-point keywords defined in Table 8.3 and Table 8.4 to define each grid block's end-point data. There is also direction dependent versions of the keywords for when directional end-point scaling has been activated. For example for critical water saturation, SWCR is used with non-direction end-point scaling and the SWCRX \pm , SWCRX \pm and SWCRX \pm series of keyword is used for when directional end-point scaling has been activated. In addition, there is also the facility to incorporate end-point scaling based on the drainage and / or imbibition process which again can be either non-directional or directional.

Saturation functions can be entered via several keywords consisting of two format types as depicted in the following table:

Format Type One				Format Type Two			
Keyword	Oil	Gas	Water	Keyword	Oil	Gas	Water
SGOF	Pcog			SGFN ³		Pcog	
SLGOF	Pcog			SGWFN		Pcgw	
SWOF	Pcwo		Pcwo	SOF2 ⁴	No P _c		
				SOF3 ⁵	No P _c		
				SOF32D	No P _c		
				SWFN			Pcwo

Notes:

- 1) Cells colored in gray with no mnemonic indicate that there is no keyword for this combination.
- 2) Cells colored orange show keywords that have not been implemented in OPM Flow.
- 3) In gas-water systems, the gas-water Pcgw data should be entered on the SWFN keyword and the Pcog on the SGFN keyword should be set to zero.
- 4) The SOF2 defines the relative permeability in oil-gas and oil-water runs only, and the miscible hydrocarbon in SOVENT runs. This keyword should not be used to define the oil relative permeability when oil, gas and water are present.
- 5) Defines oil in relative with respect to water and oil relative permeability with respect gas.

Table 8.5: Saturation Table Formats and Phases

Note that only format type can be used in a run, that is one must either use format type one relative permeability keywords to define the required saturation functions, or format two. One cannot combine the keywords from the different format types in the same input deck.

8.3 KEYWORD DEFINITIONS

8.3.1 ADD – ADD A CONSTANT TO A SPECIFIED ARRAY

The ADD keyword adds a constant to a specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the ADD keyword is being applied.

See [ADD – Add a Constant to a Specified Array](#) in the GRID section for a full description.

8.3.2 ADDREG – ADD A CONSTANT TO AN ARRAY BASED ON A REGION NUMBER

The ADDREG keyword adds a constant to a specified array or part of an array based on cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the ADDREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the ADDREG keyword is being used.

See [ADDREG – Add a Constant to an Array based on a Region Number](#) in the GRID section for a full description.

8.3.3 ADSALNOD – SALT CONCENTRATION BASED ON SATNUM ARRAY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	--------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

ADSALNOD defines the salt concentration value based on a cells SATNUM number. The ADSALNOD property is used in the calculation of a polymer viscosity when the polymer and the salt options has been activated by the POLYMER and BRINE keywords in the RUNSPEC section. In the RUNSPEC section the number of SATNUM functions is declared by the NTSFUN variable on the TABDIMS keyword and allocated to individual cells by the SATNUM property array in the REGIONS section. NSSFUN on the TABDIMS keyword in the RUNSPEC section defines the maximum number of rows (or saturation values) in the relative permeability saturation tables and also sets the maximum number of entries for each ADSALNOD data set. The number of values for each data set must correspond to the number of polymer solution adsorption entries on the PLYADSS keyword. For example, if there are three sets of relative permeability tables and four values on the PLYADSS keyword, then three ADSALNOD data sets with four values of salt concentrations need to be entered.

The salt concentrations within each data set should be positive and monotonically increasing and each ADSALNOD data set is delimited by “/” including the last data set.

No.	Name	Description			Default
I	SALTCON	Field	Metric	Laboratory	None
		A real positive columnar vector that sets the salt concentrations for the given relative permeability saturation tables.			
		lb/stb	kg/sm ³	gm/scc	

Notes:

I) Each data set must be terminated by a “/” including the last data set.

Table 8.6: ADSALNOD Keyword Description

An alternative manner of entering the salt concentrations is by utilizing the PVTNUM region array by using the SALTNODE keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

Given three sets of relative permeability tables and four values on the PLYADSS keyword, then the data salt concentration should be entered as follows:

```
--
--   SETS SALT CONCENTRATION FOR POLYMER SOLUTION ADSORPTION
--   VIA SATNUM ARRAY ALLOCATION
--
--   SALT
--
ADSALNOD
  1.0
  5.0
 10.5
 25.0      / SATNUM TABLE NO. 01
  1.0
  3.0
  7.5
 15.0      / SATNUM TABLE NO. 02
  1.0
  7.5
 20.5
 35.0      / SATNUM TABLE NO. 03
```

See also the SALTNODE keyword.

8.3.4 ADSORP – DEFINE GENERALIZED LANGMUIR ADSORPTION FUNCTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ADSORP keyword defines the parameters for the generalized Langmuir Adsorption⁸¹ function for when the polymer, surfact, alkaline, foam and tracers phases have been activated in the RUNSPEC section by the POLYMER, SURFACT, ALKALINE, FOAM and TRACER keywords.

This keyword is ignored by OPM Flow and has no effect on the simulation.

⁸¹ Langmuir, Irving (June 1918). "The Adsorption of Gases on Plane Surface of Glass, Mica and Platinum". *The Research Laboratory of the General Electric Company*. 40 (9): 1361–1402. doi:10.1021/ja02242a004

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.5 ALKADS – DEFINE ALKALINE ADSORPTION FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

ALKADS defines the alkaline adsorption functions for when the alkaline model has been activated via the ALKALINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

8.3.6 ALKROCK – DEFINE ROCK ALKALINE PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ALKROCK keyword defines the rock alkaline properties for when the alkaline model has been activated via the ALKALINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

8.3.7 ALPOLADS – POLYMER ADSORPTION VERSUS ALKALINE CONCENTRATION MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

ALPOLDS defines the polymer adsorption versus alkaline concentration multipliers for when the alkaline model has been activated via the ALKALINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

8.3.8

ALSURFAD – SURFACTANT ADSORPTION VERSUS ALKALINE CONCENTRATION MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ALSURAD defines the surfactant adsorption versus alkaline concentration multipliers for when the alkaline model has been activated via the ALKALINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.9 ALSURFST – WATER-OIL SURFACE TENSION VERSUS ALKALINE CONCENTRATION MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ALSURFST keyword defines the water-oil surface tension versus alkaline concentration multipliers for when the alkaline model has been activated via the ALKALINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.10 APIGROUP – DEFINE API TRACKING NUMBER OF GROUPED OIL PVT TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

The APIGROUP keyword defines the maximum number of groups of oil PVT tables when the API tracking option has been activated via the API keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation

8.3.11 AQUCT – DEFINE CARTER-TRACY ANALYTICAL AQUIFERS

The AQUCT keyword defines a Carter Tracy aquifer, the properties of the aquifer, including the Carter-Tracy aquifer influence function associated with the aquifer, defined by the AQTAB keyword in the PROPS section.

See [AQUCT – Define Carter-Tracy Analytical Aquifers](#) in the GRID section for a full description

8.3.12 AQUTAB – DEFINE CARTER-TRACY AQUIFER INFLUENCE FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The AQUTAB keyword defines additional Carter-Tracy⁸² aquifer functions to be used in the model. Carter-Tracy representation of the aquifer influx is via a q_w term in the nonlinear aquifer influence function $Q(t)$. It allows the water influx from the aquifer to be represented in the simulator by assuming that there is a constant water influx rate over finite time periods. It is derived from the superposition methods of van Everdingen and Hurst⁸³, whose superposition methods are not suitable for implementation in reservoir simulation software, although they are very useful in interpreting aquifer response. The storage requirements and calculation complexity of handling the resulting superposition formulas can be largely eliminated by use of the Carter-Tracy approximate water influx method.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TD	Dimensionless Time			None
		dimensionless	dimensionless	dimensionless	
2	PD	Dimensionless Pressure			None
		dimensionless	dimensionless	dimensionless	

Notes:

1)

The keyword is followed by NIFTBL tables as declared on the AQUDIMS keyword in the RUNSPEC section.

2)

Each table must contain at least two complete rows with a maximum of NRIFTB rows as declared on the AQUDIMS keyword in the RUNSPEC section. Note that NRIFTB must not be less than 36 in order to accommodate the default infinite acting Carter-Tracy aquifer influence function.

3)

Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.7: AQUTAB Keyword Description

Note

OPM Flow includes the infinite acting Carter-Tracy aquifer influence table as a default for table number one; thus data entered on this keyword starts from table number two.

Table 8.8 to Table 8.11 outline the standard finite tables derived by van Everdingen and Hurst that are used for the Carter-Tracy analytical aquifers and are taken from Bradley⁸⁴ table 38-6 on page 38-12. In the tables

r_D is defined as the ratio of the aquifer external radius divided by hydrocarbon radius, that is: $r_D = \frac{r_e}{r_o}$.

⁸² Carter, R. D., and Tracy, G.W. "An Improved Method for Calculating Water Influx." *Transactions of AIME*, Vol. 219 (1960), pp 415-417.

⁸³ Van Everdingen, A. F., and Hurst, W. "The Application of the Laplace Transform to Flow Problems in Reservoirs." *Transactions of AIME*, Vol. 186 (1949), pp. 305-324.

⁸⁴ Bradley Howard B., et. al., *Petroleum Engineering Handbook*, Society of Petroleum Engineers (June 1989), ISBN:9781555630102.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Carter-Tracy Aquifer Influence Functions								
No.	$r_D = 1.5$		$r_D = 2.0$		$r_D = 2.5$		$r_D = 3.0$	
	Dimensionless		Dimensionless		Dimensionless		Dimensionless	
	t_D	p_D	t_D	p_D	t_D	p_D	t_D	p_D
1	0.0600	0.2510	0.2200	0.4430	0.4000	0.5650	0.5200	0.6270
2	0.0800	0.2880	0.2400	0.4590	0.4200	0.5760	0.5400	0.6360
3	0.1000	0.3220	0.2600	0.4760	0.4400	0.5870	0.5600	0.6450
4	0.1200	0.3550	0.2800	0.4920	0.4600	0.5980	0.6000	0.6620
5	0.1400	0.3870	0.3000	0.5070	0.4800	0.6080	0.6500	0.6830
6	0.1600	0.4200	0.3200	0.5220	0.5000	0.6180	0.7000	0.7030
7	0.1800	0.4520	0.3400	0.5360	0.5200	0.6280	0.7500	0.7210
8	0.2000	0.4840	0.3600	0.5510	0.5400	0.6380	0.8000	0.7400
9	0.2200	0.5160	0.3800	0.5650	0.5600	0.6470	0.8500	0.7580
10	0.2400	0.5480	0.4000	0.5790	0.5800	0.6570	0.9000	0.7760
11	0.2600	0.5800	0.4200	0.5930	0.6000	0.6660	0.9500	0.7910
12	0.2800	0.6120	0.4400	0.6070	0.6500	0.6880	1.0000	0.8060
13	0.3000	0.6440	0.4600	0.6210	0.7000	0.7100	1.2000	0.8650
14	0.3500	0.7240	0.4800	0.6340	0.7500	0.7310	1.4000	0.9200
15	0.4000	0.8040	0.5000	0.6480	0.8000	0.7520	1.6000	0.9730
16	0.4500	0.8840	0.6000	0.7150	0.8500	0.7720	2.0000	1.0760
17	0.5000	0.9640	0.7000	0.7820	0.9000	0.7920	3.0000	1.3280
18	0.5500	1.0440	0.8000	0.8490	0.9500	0.8120	4.0000	1.5780
19	0.6000	1.1240	0.9000	0.9150	1.0000	0.8320	5.0000	1.8280
20			1.0000	0.9820	2.0000	1.2150		
21			2.0000	1.6490	3.0000	1.5960		
22			3.0000	2.3160	4.0000	1.9770		
23			5.0000	3.6490	5.0000	2.3580		

Table 8.8: Carter-Tracy Aquifer Influence Functions ($R_D = 1.5, 2.0, 2.5$ and 3.0)

Carter-Tracy Aquifer Influence Functions								
No.	$r_D = 3.5$		$r_D = 4.0$		$r_D = 4.5$		$r_D = 5.0$	
	Dimensionless		Dimensionless		Dimensionless		Dimensionless	
	t_D	p_D	t_D	p_D	t_D	p_D	t_D	p_D
1	1.0000	0.8020	1.5000	0.9270	2.0000	1.0230	3.0000	1.1670
2	1.1000	0.8300	1.6000	0.9480	2.1000	1.0400	3.1000	1.1800
3	1.2000	0.8570	1.7000	0.9680	2.2000	1.0560	3.2000	1.1920
4	1.3000	0.8820	1.8000	0.9880	2.3000	1.0720	3.3000	1.2040
5	1.4000	0.9060	1.9000	1.0070	2.4000	1.0870	3.4000	1.2150
6	1.5000	0.9290	2.0000	1.0250	2.5000	1.1020	3.5000	1.2270
7	1.6000	0.9510	2.2000	1.0590	2.6000	1.1160	3.6000	1.2380
8	1.7000	0.9730	2.4000	1.0920	2.7000	1.1300	3.7000	1.2490
9	1.8000	0.9940	2.6000	1.1230	2.8000	1.1440	3.8000	1.2590
10	1.9000	1.0140	2.8000	1.1540	2.9000	1.1580	3.9000	1.2700
11	2.0000	1.0340	3.0000	1.1840	3.0000	1.1710	4.0000	1.2810
12	2.2500	1.0830	3.5000	1.2550	3.2000	1.1970	4.2000	1.3010
13	2.5000	1.1300	4.0000	1.3240	3.4000	1.2220	4.4000	1.3210
14	2.7500	1.1760	4.5000	1.3920	3.6000	1.2460	4.6000	1.3400
15	3.0000	1.2210	5.0000	1.4600	3.8000	1.2690	4.8000	1.3600
16	4.0000	1.4010	5.5000	1.5270	4.0000	1.2920	5.0000	1.3780
17	5.0000	1.5790	6.0000	1.5940	4.5000	1.3490	5.5000	1.4240
18	6.0000	1.7570	6.5000	1.6600	5.0000	1.4030	6.0000	1.4690
19			7.0000	1.7270	5.5000	1.4570	6.5000	1.5130
20			8.0000	1.8610	6.0000	1.5100	7.0000	1.5560
21			9.0000	1.9940	7.0000	1.6150	7.5000	1.5980
22			10.0000	2.1270	8.0000	1.7190	8.0000	1.6410
23					9.0000	1.8230	9.0000	1.7250
24					10.0000	1.9270	10.0000	1.8080
25					11.0000	2.0310	11.0000	1.8920
26					12.0000	2.1350	12.0000	1.9750
27					13.0000	2.2390	13.0000	2.0590
28					14.0000	2.3430	14.0000	2.1420
29					15.0000	2.4470	15.0000	2.2250

Table 8.9: Carter-Tracy Aquifer Influence Functions ($R_D = 3.5, 4.0, 4.5$ and 5.0)

Carter-Tracy Aquifer Influence Functions								
No.	$r_D = 6.0$		$r_D = 7.0$		$r_D = 8.0$		$r_D = 9.0$	
	Dimensionless		Dimensionless		Dimensionless		Dimensionless	
	t_D	p_D	t_D	p_D	t_D	p_D	t_D	p_D
1	4.0000	1.2750	6.0000	1.4360	8.0000	1.5560	10.0000	1.6510
2	4.5000	1.3220	6.5000	1.4700	8.5000	1.5820	10.5000	1.6730
3	5.0000	1.3640	7.0000	1.5010	9.0000	1.6070	11.0000	1.6930
4	5.5000	1.4040	7.5000	1.5310	9.5000	1.6310	11.5000	1.7130
5	6.0000	1.4410	8.0000	1.5590	10.0000	1.6530	12.0000	1.7320
6	6.5000	1.4770	8.5000	1.5860	10.5000	1.6750	12.5000	1.7500
7	7.0000	1.5110	9.0000	1.6130	11.0000	1.6970	13.0000	1.7680
8	7.5000	1.5440	9.5000	1.6380	11.5000	1.7170	13.5000	1.7860
9	8.0000	1.5760	10.0000	1.6630	12.0000	1.7370	14.0000	1.8030
10	8.5000	1.6070	11.0000	1.7110	12.5000	1.7570	14.5000	1.8190
11	9.0000	1.6380	12.0000	1.7570	13.0000	1.7760	15.0000	1.8350
12	9.5000	1.6680	13.0000	1.8010	13.5000	1.7950	15.5000	1.8510
13	10.0000	1.6980	14.0000	1.8450	14.0000	1.8130	16.0000	1.8670
14	11.0000	1.7570	15.0000	1.8880	14.5000	1.8310	17.0000	1.8970
15	12.0000	1.8150	16.0000	1.9310	15.0000	1.8490	18.0000	1.9260
16	13.0000	1.8730	17.0000	1.9740	17.0000	1.9190	19.0000	1.9550
17	14.0000	1.9310	18.0000	2.0160	19.0000	1.9860	20.0000	1.9830
18	15.0000	1.9880	19.0000	2.0580	21.0000	2.0510	22.0000	2.0370
19	16.0000	2.0450	20.0000	2.1000	23.0000	2.1160	24.0000	2.0900
20	17.0000	2.1030	22.0000	2.1840	25.0000	2.1800	26.0000	2.1420
21	18.0000	2.1600	24.0000	2.2670	30.0000	2.3400	28.0000	2.1930
22	19.0000	2.2170	26.0000	2.3510	35.0000	2.4990	30.0000	2.2440
23	20.0000	2.2740	28.0000	2.4340	40.0000	2.6580	34.0000	2.3450
24	25.0000	2.5600	30.0000	2.5170	45.0000	2.8170	38.0000	2.4460
25	30.0000	2.8460					40.0000	2.4960
26							45.0000	2.6210
27							50.0000	2.7460

Table 8.10: Carter-Tracy Aquifer Influence Functions ($R_D = 6.0, 7.0, 8.0$ and 9.0)

Carter-Tracy Aquifer Influence Functions				
No.	$r_D = 10.0$ Dimensionless		Finite Linear Dimensionless	
	t_D	p_D	t_D	p_D
1	12.0000	1.7320	0.0050	0.0798
2	12.5000	1.7500	0.0100	0.1130
3	13.0000	1.7680	0.0200	0.1596
4	13.5000	1.7840	0.0600	0.2764
5	14.0000	1.8010	0.0800	0.3192
6	14.5000	1.8170	0.1000	0.3568
7	15.0000	1.8320	0.1200	0.3909
8	15.5000	1.8470	0.1600	0.4515
9	16.0000	1.8620	0.2000	0.5052
10	17.0000	1.8900	0.2400	0.5544
11	18.0000	1.9170	0.3000	0.6228
12	19.0000	1.9430	0.4000	0.7294
13	20.0000	1.9680	0.6000	0.9328
14	22.0000	2.0170	0.8000	1.1333
15	24.0000	2.0630	1.0000	1.3333
16	26.0000	2.1080		
17	28.0000	2.1510		
18	30.0000	2.1940		
19	32.0000	2.2360		
20	34.0000	2.2780		
21	36.0000	2.3190		
22	38.0000	2.3600		
23	40.0000	2.4010		
24	50.0000	2.6040		
25	60.0000	2.8060		
26	70.0000	3.0080		

Table 8.11: Carter-Tracy Aquifer Influence Functions ($R_D = 10$ and Finite Linear)

For the finite linear Carter-Tracy influence function in Table 8.11 set the inner radius of the aquifer to the length of linear aquifer and the angle of influence to $= \frac{360 \times \text{Width}}{(2 \times \pi \times \text{Length})}$ on the AQUCT keyword in the grid section.

For reference Table 8.12 outlines the content terminal rate case for an infinite aquifer derived by van Everdingen and Hurst that is the default table number one used for the Carter-Tracy analytical aquifers and is taken from Bradely⁸⁵ table 38-3 on page 38-6.

Carter-Tracy Infinite Radial Aquifer Influence Function (Default)					
No.	Infinite Dimensionless		No.	Infinite Dimensionless	
	t_D	p_D		t_D	p_D
1	1.0×10^{-2}	0.112	19	4.0	1.275
2	5.0×10^{-2}	0.229	20	5.0	1.362
3	1.0×10^{-1}	0.315	21	6.0	1.436
4	1.5×10^{-1}	0.376	22	7.0	1.500
5	2.0×10^{-1}	0.424	23	8.0	1.556
6	2.5×10^{-1}	0.469	24	9.0	1.604
7	3.0×10^{-1}	0.503	25	10.0	1.651
8	4.0×10^{-1}	0.564	26	15.0	1.829
9	5.0×10^{-1}	0.616	27	20.0	1.960
10	6.0×10^{-1}	0.659	28	25.0	2.067
11	7.0×10^{-1}	0.702	29	30.0	2.147
12	8.0×10^{-1}	0.735	30	40.0	2.282
13	9.0×10^{-1}	0.772	31	50.0	2.388
14	1.0	0.802	32	60.0	2.476
15	1.5	0.927	33	70.0	2.550
16	2.0	1.020	34	80.0	2.615
17	2.5	1.101	35	90.0	2.672
18	3.0	1.169	36	100.0	2.723

Table 8.12: Carter-Tracy Infinite Radial Aquifer Influence Function (Default)

For an overview of analytical aquifers see Dake⁸⁶.

⁸⁵ Bradley Howard B., et. al., *Petroleum Engineering Handbook*, Society of Petroleum Engineers (June 1989), ISBN:9781555630102.

⁸⁶ Dake, L.P. *Fundamentals of Reservoir Engineering*, Amsterdam, The Netherlands, Elsevier Science BV (1978) Chapter 9.

Example

```
--
--      CARTER-TRACY AQUIFER INFLUENCE TABLES
--      (STARTS FROM TABLE NO. 2, AS DEFAULT IS TABLE NO. 1)
--
AQTAB
--
--      TD      PD
--      -----
--      0.06      0.251
--      0.08      0.288
--      0.10      0.322
--      0.12      0.355
--      0.14      0.387
--      0.16      0.420
--      0.18      0.452
--      0.20      0.484
--      0.22      0.516
--      0.24      0.548
--      0.26      0.580
--      0.28      0.612
--      0.30      0.644
--      0.35      0.724
--      0.40      0.804
--      0.45      0.884
--      0.50      0.964
--      0.55      1.044
--      0.60      1.124
--
--
--      TD      PD
--      -----
--      0.22      0.443
--      0.24      0.459
--      0.26      0.476
--      0.28      0.492
--      0.30      0.507
--      0.32      0.522
--      0.34      0.536
--      0.36      0.551
--      0.38      0.565
--      0.40      0.579
--      0.42      0.593
--      0.44      0.607
--      0.46      0.621
--      0.48      0.634
--      0.50      0.648
--      0.6      0.715
--      0.7      0.782
--      0.8      0.849
--      0.9      0.915
--      1.0      0.982
--      2.0      1.649
--      3.0      2.316
--      5.0      3.649
--
--      / RD=1.5 TABLE NO. 02
--
--      / RD=2.0 TABLE NO. 03
```

The above example defines tables two and three Carter-Tracy aquifer influence tables.

8.3.13 BDENSITY – DEFINE THE SURFACE BRINE DENSITY FOR THE FLUID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

BDENSITY defines the brine surface density for when the brine phase has been activated in the model by the BRINE keyword in the RUNSPEC section. The number of BDENSITY vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section. Each record consists of a maximum of NPPVT values, as declared on the TABDIMS keyword in the RUNSPEC section, with each value representing a brine surface density.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

The keyword is used in conjunction with the PVTWSALT keyword in the PROPS section, with each brine density value matching with the salt concentration values in column I of each table in the PVTWSALT keyword. Note that the BDENSITY keyword is optional, and if absent from the input file, then the brine surface densities will be set to the water density values declared via the DENSITY keyword in the PROPS section. In this case there is no variation in brine surface density with respect to salt concentration.

No.	Name	Description			Default
I	WATDEN	Field	Metric	Laboratory	None
		WATDEN is a real monotonically increasing positive row vector that defines the brine density at surface conditions for the given salt concentrations on the corresponding PVTWSALT keyword in the PROPS section. There should be one row element for each salt concentration columnar element (SALTCON) on the PVTWSALT keyword.			
		lb/ft ³	kg/m	gm/cc	
Notes: I) Each row vector data set must be terminated by a “/” including the last data set.					

Table 8.13: BDENSITY Keyword Description

Note

In OPM Flow the tracer equations are solved decoupled from the reservoir equations at the end of a time step. For each tracer an implicit system is solved, however, the tracer equations are linear, resulting in converge in two iterations. However, the Brine phase is solved fully implicitly and is fully coupled with the other flow equations.

This is different to the commercial simulator, where the tracer equations are solved explicitly after the flow equations have converged at the end of a time step. This can lead to numerical instabilities if there are large variations in brine densities.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

The following shows the BDENSITY and PVTWSALT keywords for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set equal to two and NPPVT is set to greater than four on the TABDIMS keyword.

```
--
--      BRINE WATER DENSITY DATA FOR PVTWSALT KEYWORD
--
--      SALTCON  SALTCON  SALTCON  SALTCON  SALTCON
--      DENSITY  DENSITY  DENSITY  DENSITY  DENSITY
--      -----  -----  -----  -----  -----
BDENSITY
      62.20      63.50      64.75      65.90
      64.00      65.50      67.00
                                     / FOR PVTWSALT TABLE 1
                                     / FOR PVTWSALT TABLE 2
--
--      WATER SALT PVT TABLE
--
PVTWSALT
--      REF PRES  REF SALT
--      PSIA      LB/STB
--      -----  -----
      4500.0      0.000
                                     / TABLE NO. REF. DATA
--
--      SALTCONC  BW      CW      VISC      VISC
--      LB/STB    RB/STB  1/PSIA  CPOISE  GRAD
--      -----  -----  -----  -----  -----
              0.0      1.020      2.7E-6      0.370      0.0
              2.0      1.010      2.7E-6      0.370      0.0
              4.0      1.000      2.7E-6      0.370      0.0
              10.0     0.950      2.7E-6      0.370      0.0
                                     / TABLE NO. 01 SALT DATA
--
--      REF PRES  REF SALT
--      PSIA      LB/STB
--      -----  -----
      4000.0      0.000
                                     / TABLE NO. 02 REF. DATA
--
--      SALTCONC  BW      CW      VISC      VISC
--      LB/STB    RB/STB  1/PSIA  CPOISE  GRAD
--      -----  -----  -----  -----  -----
              0.0      1.005      2.5E-6      0.320      0.0
              6.0      0.985      2.5E-6      0.320      0.0
              12.0     0.930      2.5E-6      0.320      0.0
                                     / TABLE NO. 02 SALT DATA
```

8.3.14 BGGI - DEFINE GI GAS FORMATION VOLUME FACTOR PRESSURE TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The BGGI keyword defines Gi gas formation volume factor as a function of Gi and pressure for when the Gi option has been invoked via the GIMODEL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

The accuracy of gas condensate and volatile oil modeling using a black-oil reservoir simulator is now firmly accepted in the industry; both depletion and gas cycling above the saturation point can be modeled and yield an acceptable match compared with compositional simulators. The main deficiency with the existing black-oil formulation is the treatment of gas injection below the saturation point, where the compositional effect of the stripping of liquid components is inversely proportional to their molecular weights, is not considered. This is because the black-oil model assumes that the saturated hydrocarbon fluid properties are only functions of pressure. Thus, when dry gas is injected into a condensate reservoir below the saturation pressure the injected gas continues to re-vaporize liquid at a rate governed only by the cell pressures. Compositional modeling indicate that this not the case.

The GI option attempts to overcome the limitation of the standard black-oil approach by extending the black-oil model using the method of Cook et al.⁸⁷ to take into account the fluid property changes occurring during gas injection. This is done by extending the fluid property treatment so that the saturated fluid properties depend on pressure (as per the standard black-oil formulation) and also on an additional parameter which characterizes the compositional changes in the reservoir liquid and vapor phases at constant pressure.

See also the PVTG and GINODE keywords in the PROPS section.

⁸⁷ Cook, R. E., Jacoby, R. H., and Ramesh, A. B. "A Beta-type Reservoir Simulator for Approximating Compositional Effects During Gas Injection" paper SPE 4272, Society of Petroleum Engineers Journal (1974) 14, No. 5, 471-481.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.15 BOGI - DEFINE GI OIL FORMATION VOLUME FACTOR PRESSURE TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The BOGI keyword defines Gi oil formation volume factor as a function of Gi and pressure for when the Gi option has been invoked via the GIMODEL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

The accuracy of gas condensate and volatile oil modeling using a black-oil reservoir simulator is now firmly accepted in the industry; both depletion and gas cycling above the saturation point can be modeled and yield an acceptable match compared with compositional simulators. The main deficiency with the existing black-oil formulation is the treatment of gas injection below the saturation point, where the compositional effect of the stripping of liquid components is inversely proportional to their molecular weights, is not considered. This is because the black-oil model assumes that the saturated hydrocarbon fluid properties are only functions of pressure. Thus, when dry gas is injected into a condensate reservoir below the saturation pressure the injected gas continues to re-vaporize liquid at a rate governed only by the cell pressures. Compositional modeling indicate that this not the case.

The GI option attempts to overcome the limitation of the standard black-oil approach by extending the black-oil model using the method of Cook et al.⁸⁸ to take into account the fluid property changes occurring during gas injection. This is done by extending the fluid property treatment so that the saturated fluid properties depend on pressure (as per the standard black-oil formulation) and also on an additional parameter which characterizes the compositional changes in the reservoir liquid and vapor phases at constant pressure.

See also the PVTG and GINODE keywords in the PROPS section.

⁸⁸ Cook, R. E., Jacoby, R. H., and Ramesh, A. B. "A Beta-type Reservoir Simulator for Approximating Compositional Effects During Gas Injection" paper SPE 4272, Society of Petroleum Engineers Journal (1974) 14, No. 5, 471-481.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.16 BOX - DEFINE A RANGE OF GRID BLOCKS TO ENTER PROPERTY DATA

BOX defines a range of grid blocks for which subsequent data is assigned for all the cells in the defined BOX. Note that the BOX grid is reset by the keyword ENDBOX by resetting the current defined BOX to be the whole grid. The keyword can be used for any array and for all grid types.

See [BOX - Define a Range of Grid Blocks to Enter Property Data](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.17 COALADS – DEFINE GAS AND SOLVENT RELATIVE ADSORPTION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COALADS keyword defines the gas and solvent relative adsorption tables for when the coal phase has been activated via the COAL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation

8.3.18 COALPP – DEFINE GAS AND SOLVENT PARTIAL PRESSURE ADSORPTION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COALPP keyword defines the gas and solvent partial pressure adsorption tables for when the coal phase has been activated via the COAL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.19 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

See [COLUMNS – Define Input File Column Margins](#) in the GLOBAL section for a full description.

8.3.20 COPY – COPY ARRAY DATA TO ANOTHER ARRAY

The COPY keyword copies an array (or part of an array) to another array or part of an array. The arrays can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the COPY keyword is being used.

See [COPY – Copy Array Data to Another Array](#) in the GRID section for a full description.

8.3.21 COPYBOX – COPY ARRAY DATA DEFINED BY A BOX

The COPYBOX keyword copies an array (or part of an array) to part of the same array. The array can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the COPYBOX keyword is being used.

See [COPYBOX – Copy Array Data Defined by a Box](#) in the GRID section for a full description.

8.3.22 COPYREG – COPY AN ARRAY TO ANOTHER ARRAY BASED ON A REGION NUMBER

The COPYREG keyword copies a specified array or part of an array based on cells with a specific region number to another array. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the COPYREG keyword is read by the simulator. The property arrays can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the COPYREG keyword is being used.

See [COPYREG – Copy an Array to Another Array based on a Region Number](#) in the GRID section for a full description.

8.3.23 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See [DEBUG – Define the Debug Data to be Printed to File](#) in the GLOBAL section for a full description.

8.3.24 DENSITY – DEFINE THE SURFACE OIL, WATER GAS DENSITIES FOR THE FLUIDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DENSITY defines the oil, water and gas surface densities for the fluids for various regions in the model. The number of DENSITY vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the DENSITY data sets to different grid blocks in the model is done via the PVTNUM keyword in the REGION section. One data set consists of one record or line which is terminated by a “/”. This surface density or gravity must be entered using either the DENSITY or GRAVITY keywords irrespective of which phases are active in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	OILDEN	OILDEN is a real number defining the density of oil at surface conditions.			Defined
		lb/ft ³ 600	kg/m ³ 600	gm/cc 600	
2	WATDEN	WATDEN is a real number defining the density of water at surface conditions.			Defined
		lb/ft ³ 999.014	kg/m ³ 999.014	gm/cc 999.014	
3	GASDEN	GASDEN is a real number defining the density of gas at surface conditions.			Defined
		lb/ft ³ 1.000	kg/m ³ 1.000	gm/cc 1.000	
Notes: 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.14: DENSITY Keyword Description

According to the SPE SI standard⁸⁹, **Relative Density** (γ) replaces **Specific Gravity** as the term used to define the ratio of the density of a known material to the density of reference material, at standard conditions of pressure and temperature. Standard conditions vary throughout the world, but for oil field units one normally uses 14.7 psia and 60 °F, whereas for SI units some areas use 101.325 kPa and 15 °C.

See also the GRAVITY keyword in the PROPS section.

⁸⁹ The SI Metric System of Units and SPE Metric Standard, Adopted for Use as a Voluntary Standard by the SPE Board of Directors, June 1983, Society of Petroleum Engineers.

Examples

The following shows the DENSITY keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to one.

```
--
--      OIL      WAT      GAS
--      DENSITY  DENSITY  DENSITY
--      -----  -----  -----
DENSITY 39.0      62.37      0.04520      / PVT DATA REGION 1
```

The next example shows the DENSITY keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to three.

```
--
--      OIL      WAT      GAS
--      DENSITY  DENSITY  DENSITY
--      -----  -----  -----
DENSITY 38.0      62.30      0.04500      / PVT DATA REGION 1
          39.0      62.37      0.04520      / PVT DATA REGION 2
          40.0      62.40      0.04800      / PVT DATA REGION 3
```

There is no terminating “/” for this keyword.

8.3.25 DEPTHTAB – RIVER TIME AND DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, DEPTHTAB, defines the river time and depth tables, for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.26 DIAGDISP – ACTIVATE ALTERNATE FORM OF TRACER DISPERSION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, DIAGDISP, activates the alternate form of tracer dispersion matrix for when the Tracer facility has been activated by the TRACERS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.27 DIFFC – DEFINE PVT REGION MOLECULAR DIFFUSION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DIFFC keyword defines the molecular weight of the fluids and diffusion coefficients between phases for each PVT region, for when the Molecular Diffusion option has been activated by the DIFFUSE keyword in the RUNSPEC section. This keyword is optional as OPM Flow will automatically calculate the coefficients, as described by Sandve et al.⁹⁰, if the DIFFC keyword is absent from the input deck. The keyword thus allows one to overwrite the automatically calculated values.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	OILMW	OILMW is a real positive number that specifies the molecular weight of the oil in the given PVT region.			None
		lb/lb-M	kg/kg-M	gm/gm-M	
2	GASMW	GASMW is a real positive number that defines the molecular weight of the gas in the given PVT region.			None
		lb/lb-M	kg/kg-M	gm/gm-M	
3	GASGASDF	A real positive number that defines the gas in gas diffusion coefficient in the given PVT region.			None
		ft ² /day	m ² /day	cm ² /hour	
4	OILGASDF	A real positive number that declares the oil in gas diffusion coefficient in the given PVT region.			None
		ft ² /day	m ² /day	cm ² /hour	
5	GASOILDF	A real positive number that specifies the gas in oil diffusion coefficient in the given PVT region.			None
		ft ² /day	m ² /day	cm ² /hour	
6	OILOILDF	A real positive number that defines the oil in oil diffusion coefficient in the given PVT region.			None
		ft ² /day	m ² /day	cm ² /hour	
7	GASOILCD	A real positive number that defines the gas in oil cross phase diffusion coefficient in the given PVT region. This parameter is ignored by OPM Flow and should be defaulted or set equal to zero.			0.0
		ft ² /day	m ² /day	cm ² /hour	
8	OILOILCD	A real positive number that defines the gas in oil cross phase diffusion coefficient in the given PVT region. This parameter is ignored by OPM Flow and should be defaulted or set equal to zero.			0.0
		ft ² /day	m ² /day	cm ² /hour	

⁹⁰ Tor Harald Sandve I, Sarah E. Gasda, Atgeirr Rasmussen, and Alf Birger Rustad. Convective dissolution in field scale CO₂ storage simulation using the OPM Flow simulator. Submitted to TCCS 11 – Trondheim Conference on CO₂ Capture, Transport and Storage Trondheim, Norway – June 21-23, 2021.

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each record is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.15: DIFFC Keyword Description

Note

The option has been tested in combination with the CO2STORE keyword, but not for the general case at this point.

See also the **DIFFUSE** keyword in the **RUNSPEC** section to activate the Molecular Diffusion option.

Example

The example below is based on field units, with NTPVT equal to three on the TABDIMS keyword.

PVT REGION MOLECULAR DIFFUSION TABLES								
DIFFC	OIL MW	GAS MW	GAS IN GAS DF	OIL IN GAS DF	GAS IN OIL DF	OIL IN OIL DF	GAS IN OIL CD	OIL IN OIL CD
-----	-----	-----	-----	-----	-----	-----	-----	-----
	103.20	1.120	1.35E-6	1.05E-7	4.50E-7	1.05E-8		/TAB-1
	102.00	1.130	1.25E-6	1.25E-7	4.80E-7	1.05E-8		/TAB-2
	100.00	1.250	1.22E-6					/TAB-3

Here the third PVT region has no values for the various oil related diffusion coefficients.

8.3.28 DIFFCOAL – DEFINE COAL BED METHANE GAS DIFFUSION DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DIFF keyword defines the coal bed methane diffusion data for when the Coal Bed Methane option has been activated via the COAL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.29 DIFFDP – ACTIVATE DUAL POROSITY MOLECULAR DIFFUSION FOR MATRIX-FRACTURE FLOW ONLY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, DIFFDP, activates the dual porosity molecular diffusion for matrix-fracture flow only option for when the Dual Porosity option has be activated by either the DUALPORO or DUALPERM keywords, and the Diffusivity option has been activated by the DIFFUSE keywords; three keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.30 DIFFMMF – DEFINE DIFFUSIVITY MULTIPLIERS FOR MATRIX-FRACTURES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, DIFFMMF, defines the diffusivity multipliers for matrix-fractures for when the Dual Porosity option has been activated by either the DUALPORO or DUALPERM keywords, or the Coal Bed Methane option is selected by the COAL keyword, and the Diffusivity option has been activated by the DIFFUSE keywords; all four keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.31 DISPERSE– DEFINE DISPERSION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, DISPERSE, defines the dispersion tables for when the Dispersion option has been activated via declaring the dimensions of the DISPERSE tables using the DISPDIMS keyword and activating the Tracer option via the TRACERS keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.32 DPKRMOD – MODIFY MATRIX OIL RELATIVE PERMEABILITY DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DPKRMOD keyword can be used to modify the matrix oil relative permeability data (oil-water, oil-gas) and the scaling of the fracture to matrix relative permeabilities, for dual porosity runs for when a Dual Porosity model has been activated by either the DUALPORO or DUALPERM keywords in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.33 DSPDEINT – ACTIVATE BRINE TRACER DISPERSION INTERPOLATION BY WATER DENSITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, DSPDEINT, activates the brine tracer dispersion interpolation by water density option for when the Brine phase is activated in the model by the BRINE keyword in the RUNSPEC section and the DISPERSE keyword in the PROPS section is in the input file. They keyword cause the lookup and interpolation of the DISPERSE tracer concentration to water density, that is the tracer concentration data on the DISPERSE keyword has been replaced by the water density data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.34 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

See [ECHO – Activate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

8.3.35 EHISTR – DEFINE HYSTERESIS MODEL AND PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The EHISTR keyword defines the hysteresis model and associated parameters when the hysteresis option has been activated by the HYSTER variable on the SATOPTS keyword in the RUNSPEC section. Both the Carlson⁹¹ and Killough⁹² models are available.

No.	Name	Description	Default																																				
1	HYSTRCP	<p>HYSTRCP is a positive real value that defines the Killough curvature parameter for capillary pressure hysteresis model.</p> <p>The value should range from 0.05 to 0.10.</p> <p>This option is ignored by OPM Flow.</p>	0.1																																				
2	HYSTMOD	<p>An integer value that determines the relative permeability hysteresis model to be used depending on the phase and the wettability of the system. HYSTMOD should be set to one of the following values:</p> <table><tr><th colspan="3">Water Wet Hysteresis Models</th></tr><tr><th>HYSMOD</th><th>Non-Wetting Phases</th><th>Wetting Phase</th></tr><tr><td>-1</td><td colspan="2">Equilibration option for equilibrating the model with the SATNUM (drainage curves) and running the model with imbibition curves (IMBNUM). This option implies no hysteresis.</td></tr><tr><td>0</td><td>Carlson Hysteresis Model</td><td>SATNUM</td></tr><tr><td>1</td><td>Carlson Hysteresis Model</td><td>IMBNUM</td></tr><tr><td>2</td><td>Killough Hysteresis Model</td><td>SATNUM</td></tr><tr><td>3</td><td>Killough Hysteresis Model</td><td>IMBNUM</td></tr><tr><td>4</td><td>Killough Hysteresis Model</td><td>Killough Hysteresis Model</td></tr><tr><th colspan="3">Oil Wet to Water Wet Water Wet</th></tr><tr><td>5</td><td>Carlson Non- Wetting Modeling for Gas and Water</td><td>SATNUM</td></tr><tr><td>6</td><td>Killough Non- Wetting Modeling for Gas and Water</td><td>SATNUM</td></tr><tr><td>7</td><td>Killough Non- Wetting Modeling for Gas and Water</td><td>Killough Non- Wetting Modeling for the Wetting Oil Phase</td></tr></table> <p>Only the Carlson Hysteresis Model is supported, HYSTMOD equal to zero or one by OPM Flow.</p>	Water Wet Hysteresis Models			HYSMOD	Non-Wetting Phases	Wetting Phase	-1	Equilibration option for equilibrating the model with the SATNUM (drainage curves) and running the model with imbibition curves (IMBNUM). This option implies no hysteresis.		0	Carlson Hysteresis Model	SATNUM	1	Carlson Hysteresis Model	IMBNUM	2	Killough Hysteresis Model	SATNUM	3	Killough Hysteresis Model	IMBNUM	4	Killough Hysteresis Model	Killough Hysteresis Model	Oil Wet to Water Wet Water Wet			5	Carlson Non- Wetting Modeling for Gas and Water	SATNUM	6	Killough Non- Wetting Modeling for Gas and Water	SATNUM	7	Killough Non- Wetting Modeling for Gas and Water	Killough Non- Wetting Modeling for the Wetting Oil Phase	0
Water Wet Hysteresis Models																																							
HYSMOD	Non-Wetting Phases	Wetting Phase																																					
-1	Equilibration option for equilibrating the model with the SATNUM (drainage curves) and running the model with imbibition curves (IMBNUM). This option implies no hysteresis.																																						
0	Carlson Hysteresis Model	SATNUM																																					
1	Carlson Hysteresis Model	IMBNUM																																					
2	Killough Hysteresis Model	SATNUM																																					
3	Killough Hysteresis Model	IMBNUM																																					
4	Killough Hysteresis Model	Killough Hysteresis Model																																					
Oil Wet to Water Wet Water Wet																																							
5	Carlson Non- Wetting Modeling for Gas and Water	SATNUM																																					
6	Killough Non- Wetting Modeling for Gas and Water	SATNUM																																					
7	Killough Non- Wetting Modeling for Gas and Water	Killough Non- Wetting Modeling for the Wetting Oil Phase																																					

⁹¹ Carlson, F. M. "Simulation of Relative Permeability Hysteresis to the Non-Wetting Phase," paper SPE 10157, presented at the SPE Annual Technical Conference & Exhibition, San Antonio, Texas, USA (October 5-7, 1981).

⁹² Killough, J. E. "Reservoir Simulation with History-dependent Saturation Functions," paper SPE 5106, Society of Petroleum Engineers Journal (1976) 16, No. 1, 37-48.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
3	HYSTREL	HYSTREL is a positive real number that defines the Killough's wetting phase relative permeability curvature parameter. This parameter is only applicable if HYSMOD is set to either 4 or 7. This option is ignored by OPM Flow.	1.0
4	HYSTSGR	HYSTSGR is a positive real number that sets a scaling parameter for the trapped non-wetting phase saturation in the Killough model. This option is ignored by OPM Flow.	0.1
5	HYSTOPT	A character string that determines if the hysteresis model should be activated for relative permeability, capillary pressure curves, or both, and should be set to one of the following: <ol style="list-style-type: none"> 1) BOTH: apply hysteresis modeling to both relative permeability, and capillary pressure curves. 2) PC: apply hysteresis modeling to capillary pressure curves only. 3) KR: apply hysteresis modeling to relative permeability curves only. For all cases HYSTMOD defines the model to be used for relative permeability hysteresis modeling (if applicable). Capillary pressure hysteresis always uses the Killough capillary pressure model. Note only the default value of BOTH is supported by OPM Flow.	BOTH
6	HYSTSCAN	A character string that determines the shape of Killough capillary pressure scanning curves when secondary reversal curves, that is for a drainage, imbibition, drainage cycle. <ol style="list-style-type: none"> 1) RETR: Secondary drainage curves re-traverses the same scanning curve. 2) NEW: Secondary drainage curves follows a new scanning curve and further reversals also generate a new scanning curve. This option is ignored by OPM Flow.	RETR
7	HYSTMOB	A character string that determines how to apply the mobility control correction invoked by the MOBILE variable on the EQLOPTS keyword in the RUNSPEC section. HYSTMOB should be set to one of the following: <ol style="list-style-type: none"> 1) DRAIN: Only the drainage curve end-points are modified. 2) BOTH: Both the drainage and imbibition curve end-points are modified. The Mobility Control option is not supported in OPM Flow so this parameter has no effect.	DRAIN
8	HYSTWET	A character string that sets the wetting phase in three phase systems to either oil or gas and should be set to one of the following: <ol style="list-style-type: none"> 1) OIL: Oil is set as the <u>wetting phase</u> and the oil-gas relative permeability curves are determined by HYSTMOD for the wetting phase. 2) GAS: Oil is set as the <u>non-wetting phase</u> and the oil-gas relative permeability curves are determined by HYSTMOD for the non-wetting phase. Note for all the above cases the gas relative permeability curves are always treated as a non-wetting phase. This option is ignored by OPM Flow.	None

No.	Name	Description	Default
9	HYBAKOIL	Baker model one or model two relative permeability oil phase hysteresis option used in the commercial compositional simulator. Not used and should be defaulted with 1*.	NO
10	HYBAKGAS	Baker model one or model two relative permeability gas phase hysteresis option used in the commercial compositional simulator. Not used and should be defaulted with 1*.	NO
11	HYBAKWAT	Baker model one or model two relative permeability water phase hysteresis option used in the commercial compositional simulator. Not used and should be defaulted with 1*.	NO
12	HYTHRESH	Killough's hysteresis threshold saturation value used in the commercial compositional simulator. Not used and should be defaulted with 1*.	0.0
13	HYSWETRP	Killough's hysteresis wetting phase modification used in the commercial black-oil simulator. Not used and should be defaulted with 1*.	0
Notes: 1) The keyword is terminated by a "/".			

Table 8.16: EHYSTR Keyword Description

Example

```
--
--      HYSTERESIS MODEL AND PARAMETERS
--
--      PC-CUR  MODEL  RELPERM TRAPPED OPTION  SHAPE  MOBILIT  WET
--      HYSTRCP HYSTMOD HYSTREL HYSTSGR HYSTOPT HYSTSCAN HYSTMOB  HYSTWET
EHYSTR
      0.1      0      0.1      1*      KR      1*      1*      1*      /
```

The above example defines the hysteresis model and parameters used in the Norne model. Here the default value is used for the Killough curvature parameter for capillary pressure hysteresis mode, the Carlson hysteresis model is used for the non-wetting phase and SATNUM for the wetting phase, 0.1 is used for Killough's wetting phase relative permeability curvature parameter (this parameter is ignored because the Carlson model has been selected), the default values for the trapped non-wetting phase saturation in the Killough mode (again, this parameter is ignored because the Carlson model has been selected, and the hysteresis modeling is only applied to relative permeability curves.

8.3.36 EHYSTRR – DEFINE HYSTERESIS MODEL AND PARAMETERS VIA SATNUM

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The EHYSTRR keyword defines the hysteresis model and associated parameters via the drainage SATNUM allocation region array, for when the hysteresis option has been activated by the HYSTER variable on the SATOPTS keyword in the RUNSPEC section. Only the Killough⁹³ model is available for this keyword and the keyword is optional.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness. See also the EHYSTR keyword in the RUNSPEC for an alternative keyword to enter the hysteresis model and associated parameters that is supported by OPM Flow

No.	Name	Description	Default
1	HYSTRCP	HYSTRCP is a positive real value that defines the Killough curvature parameter for capillary pressure hysteresis model. The value should range from 0.05 to 0.10.	0.1
2	HYSTREL	HYSTREL is a positive real number that defines the Killough's wetting phase relative permeability curvature parameter. This parameter is ignored if HYSMOD on the EHYSTR keyword is not set to 4.	1.0
3	HYSTSGR	HYSTSGR is a positive real number that sets a scaling parameter for the trapped non-wetting phase saturation in the Killough model.	0.1
Notes: <ol style="list-style-type: none"> 1) The keyword is followed by NTSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section. 2) There is no “/” terminator for the keyword. 			

Table 8.17: EHYSTRR Keyword Description

Example

```
--
--      HYSTERESIS MODEL AND PARAMETERS VIA SATNUM
--
--      PC-CUR  RELPERM TRAPPED
--      HYSTRCP HYSTREL HYSTSGR
EHYSTRR
      0.04      1.0      1*          / SATNUM REGION 1
      0.06      1.0      1*          / SATNUM REGION 2
      0.08      1.0      1*          / SATNUM REGION 3
      0.10      1.0      1*          / SATNUM REGION 4
      0.10      1.0      1*          / SATNUM REGION 5
```

The above example defines the hysteresis model and parameters for when NTSFUN equals five on the TABDIMS keyword in the RUNSPEC section, that is for five SATNUM regions.

⁹³ Killough, J. E. “Reservoir Simulation with History-dependent Saturation Functions,” paper SPE 5106, Society of Petroleum Engineers Journal (1976) 16, No. 1, 37-48.

8.3.37 END – DEFINE THE END OF THE INPUT FILE

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

See [END – Define the End of the Input File](#) in the GLOBAL section for a full description.

8.3.38 ENDBOX – DEFINE THE END OF THE BOX DEFINED GRID

This keyword marks the end of a previously defined BOX sub-grid as defined by a previously entered BOX keyword. The keyword resets the input grid to be the full grid as defined by the NX, NY, and NZ variables on the DIMENS keyword in the RUNSPEC section.

See [ENDBOX – Define the End of the BOX Defined Grid](#) in the GRID section for a full description.

8.3.39 ENDFIN – END THE DEFINITION OF A LOCAL GRID REFINEMENT

ENDFIN defines the end of a Cartesian or radial local grid refinement (“LGR”) definition and a LGR property definition data set.

See [ENDFIN – End the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

8.3.40 ENDINC – DEFINE THE END OF AN INCLUDE FILE

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

See [ENDINC – Define the End of an Include File](#) in the GLOBAL section for a full description.

8.3.41 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

See [ENDSKIP – DeActivate Skipping of Keywords and Input Data](#) in the GLOBAL section for a full description.

8.3.42 ENKRVD – DEFINE RELATIVE PERMEABILITY END-POINTS VERSUS DEPTH FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the maximum oil, gas, and water relative permeability values versus depth for the three phases and for when the end-point scaling option has been invoked by the **ENDSCALE** keyword in the **RUNSPEC** section. This functionality is not supported in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.43 ENPCVD – DEFINE MAXIMUM CAPILLARY PRESSURE VERSUS DEPTH FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the maximum gas-oil and water-oil capillary pressure values versus depth for when the end-point scaling option has been invoked by the ENDSCALE keyword in the RUNSPEC section

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.44 ENPTVD – DEFINE RELATIVE PERMEABILITY SATURATION END-POINTS VERSUS DEPTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the variation of the relative permeability saturation end-points (SWL, SWCR, etc.) for all three phases versus depth for when the end-point scaling option has been invoked by the ENDSCALE keyword in the RUNSPEC section. This functionality is not supported in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.45 ENSPCVD – DEFINE CAPILLARY PRESSURE END-POINTS VERSUS DEPTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the variation of the capillary pressure saturation end-points, connate gas (SGL) and connate water (SWL), versus depth for when the end-point scaling option has been invoked by the ENDSCALE keyword in the RUNSPEC section. This functionality is not supported in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.46 EPSDBGS - WRITE END-POINT DEBUG DATA TO THE DEBUG FILE (MULTIPLE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, EPSDBGS, defines the end-point debug data for multiple grid blocks that should be written to the DEBUG file (*.DBG) for when the End-Point Scaling option has been activated by the ENDSCALE keyword in the RONSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.47 EPSDEBUG - WRITE END-POINT DEBUG DATA TO THE DEBUG FILE (INDIVIDUAL)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, EPSDEBUG, defines the end-point debug data for individual grid blocks that should be written to the DEBUG file (*.DBG) for when the End-Point Scaling option has been activated by the ENDSCALE keyword in the RONSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.48 EQUALREG – SETS AN ARRAY TO A CONSTANT BY REGION NUMBER

The EQUALREG keyword sets a specified array to a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the EQUALREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the EQUALREG keyword is being used.

See [EQUALREG – Sets an Array to a Constant by Region Number](#) in the GRID section for a full description.

8.3.49 EQUALS – SETS A SPECIFIED ARRAY TO A CONSTANT

The EQUALS keyword sets a specified array or part of an array to a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the EQUALS keyword is being used.

See [EQUALS – Sets a Specified Array to a Constant](#) in the GRID section for a full description.

8.3.50 ESSNODE – DEFINE SALT CONCENTRATION DATA FOR WATER-OIL SURFACE TENSION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, ESSNODE, defines the salt concentration data that is used in calculating the water-oil surface tension for when the Brine option has been activated by the BRINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.51 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

See [EXTRAPMS – Activate Extrapolation Warning Messages](#) in the GLOBAL section for a full description.

8.3.52 FHERCHBL – DEFINE HERSCHEL-BULKLEY DATA VERSUS POLYMER CONCENTRATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FHERCHBL keyword defines Herschel-Bulkley rheological property data for Non-Newtonian fluids versus polymer concentration, for when the Polymer option has been invoked via the POLYMER keyword in the RUNSPEC section and Non-Newtonian Fluid phase has been declared active by the NNEWTF keyword, also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.53 FILEUNIT – ACTIVATE UNIT CONSISTENCY VERIFICATION

The FILEUNIT keyword defines the units of the of the data set, and is used to verify that the units in the input deck and any associated include files are consistent grid data. The keyword does not provide for the conversion between different sets of units.

See [FILEUNIT – Activate Unit Consistency Checking](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.54 FILLEPS – ACTIVATE SATURATION END-POINT EXPORT TO THE INIT FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword switches on the export of the saturation end-point data (SWL, SWCR, SOWCR array etc.) to the *.INIT file so that the data can be viewed in post-processing software like OPM ResInsight.

There is no data required for this keyword.

Example

```
--
--      ACTIVATE SATURATION END-POINT EXPORT TO THE INIT FILE
--
FILLEPS
```

The above example switches on the export of the end-point saturation data to the *.INIT file.

8.3.55 FOAMADS - DEFINE FOAM ROCK ADSORPTION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	--------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMADS keyword defines the foam rock adsorption tables for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	FOAMCON	A columnar vector of real monotonically increasing down the column values that defines the foam concentration in the solution surrounding the rock. The first entry should be zero to define a no foam concentration data set. Units are dependent on the transport phase specified via the FOAMOPTI variable on the FOAMOPTS keyword in the PROPS section. FOAMOPTI should be set to either GAS or WATER.			None
		Gas: lb/Mscf Water: lb/stb	Gas: kg/sm ³ Water: kg/sm ³	Gas: gm/scv Water: gm/scv	
2	FOAMRATI	A columnar vector of real increasing down the column values that defines the mass of adsorbed foam per unit mass of rock of the saturated concentration of foam adsorbed by the rock for a given FOAMCON. The first table data set entry should be zero to define a no foam concentration data set. Each FOAMCON/FOAMRATI data set should be terminated by a “/”			None
		lb/lb	kg/kg	gm/gm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.18: FOAMADS Keyword Description

Example

```
--
--          FOAM ROCK ADSORPTION TABLE
--
FOAMADS
--          FOAM          FOAM
--          FOAMCON       FOAMRATI
--          -----
--              0.0          0.00000
--              2.0          0.00003
--              4.0          0.00005
--              6.0          0.00007
--              8.0          0.00009
--             10.0          0.00011
--             12.0          0.00012
--             14.0          0.00015
--                                     / TABLE NO. 01
--          FOAM          FOAM
--          FOAMCON       FOAMRATI
--          -----
--              0.0          0.00000
--              3.0          0.00004
--              5.0          0.00006
--              7.0          0.00008
--              8.0          0.00009
--             10.0          0.00011
--                                     / TABLE NO. 02
```

The above example defines two foam rock adsorption tables assuming NTSFUN equals two and NSSFUN is greater than or equal to eight on the TABDIMS keyword in the RUNSPEC section.

8.3.56 FOAMDCYO – DEFINE FOAM DECAY VERSUS OIL SATURATION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMDCYO keyword defines the foam decay half-life versus oil saturation for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.57 FOAMDCYW – DEFINE FOAM DECAY VERSUS WATER SATURATION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMDCYW keyword defines the foam decay half-life versus water saturation for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.58 FOAMFCN – DEFINE FOAM GAS MOBILITY REDUCTION VERSUS CAPILLARY NUMBER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMFCN keyword defines the reduction in gas mobility versus capillary number, for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section, and the FOAMOPT2 parameter on the FOAMOPTS keyword in the PROPS section has been set to the character string FUNC.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.59 FOAMFRM – DEFINE FOAM GAS MOBILITY REDUCTION VERSUS REFERENCE MOBILITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FOAMFRM keyword defines the reduction in gas mobility versus the reference mobility reduction factor, for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section, and the FOAMOPT2 parameter on the FOAMOPTS keyword in the PROPS section has been set to the character string FUNC.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.60 FOAMFSC – DEFINE FOAM GAS MOBILITY VERSUS SURFACTANT CONCENTRATION FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FOAMFSC keyword defines the reduction in gas mobility as a function of the foam surfactant concentration within a grid block. The Foam option must be activated by the FOAM keyword in the RUNSPEC section in order to use this keyword. In addition, the FOAMOPT2 parameter on the FOAMOPTS keyword in the PROPS section must be set to the character string FUNC, in order to activate the functional form of the gas mobility reduction calculations.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	FOAMCON	A real positive value that defines the foam surfactant concentration at which foam modeling becomes active in the model and a strong foam is formed. FOAMCON cannot be defaulted and must be specified for the first table. Subsequent tables can be defaulted and will in this case use the previous tables' entries as the default value.			None
		lb/stb	kg/sm ³	gm/scc	
2	FOAMEXP	A real positive value that defines an exponent that determines the gradient in the change of the reduction in gas mobility due to foam (e_s in equation (8.1)). Note if e_s is less than one then the slope of F_s in equation (8.1) will be infinite at C_s equal to zero. In this case, small surfactant concentrations have a significant effect on the mobility, especially if the reference concentration $C_{s,r}$ is also small. If this is the case use MINSURF one this keyword to set a minimum surfactant concentration to avoid small-scale numerical errors from affecting the simulation.			Defined
		dimensionless 1.0	dimensionless 1.0	dimensionless 1.0	
3	MINSURF	MINSURF is a real positive value that defines the minimum surfactant concentration for which the reduction in gas mobility will be calculated. The default value of 1×10^{-20} implies that there is no minimum			Defined
		lb/stb 1×10^{-20}	kg/sm ³ 1×10^{-20}	gm/scc 1×10^{-20}	
4	MINSWAT	MINSWAT is a real positive value less than 1.0 that sets the minimum water saturation for which foam has no effect. The default value of 1×10^{-6} implies that there is no minimum. <u>Note that this parameter is only used in the commercial simulator's compositional simulator and is therefore not used by OPM Flow or the commercial simulators black-oil simulator.</u>			Defined
		dimensionless 1×10^{-6}	dimensionless 1×10^{-6}	dimensionless 1×10^{-6}	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each table must contain just one row and one row only. 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.19: FOAMFSC Keyword Description

The gas mobility reduction as a function of surfactant concentration is of the form:

$$F_s = \left(\frac{C_s}{C_s^r} \right)^{e_s} \quad (8.1)$$

Where:

- F_s = the resulting gas mobility reduction factor as a function of surfactant concentration,
- C_s = surfactant concentration,
- C_s^r = reference surfactant concentration, that is $C_s < C_s^r$ defines a weak foam and $C_s > C_s^r$ defines a strong foam (FOAMCON), and
- e_s = exponent that determines the gradient in the change of the reduction in gas mobility due to foam (FAOAMEXP).

The functional form of the reduction in gas mobility factor (M_{rf}) is:

$$M_{rf} = \frac{1}{1 + (M_r \times F_s \times F_w \times F_o \times F_c)} \quad (8.2)$$

Where:

- M_{rf} = the reference mobility reduction factor, see the FOAMFRM keyword in the PROPS section,
- F_s = gas mobility reduction factor as a function of surfactant concentration, see the FOAMFSC keyword in the PROPS section,
- F_w = gas mobility reduction factor as a function of water saturation, see the FOAMFSW keyword in the PROPS section,
- F_o = gas mobility reduction factor as a function of oil saturation, see the FOAMFSO keyword in the PROPS section, and
- F_c = gas mobility reduction factor as a function of capillary number, see the FOAMFCN keyword in the PROPS section.

See also the FOAM keyword in the RUNSPEC section, the FOAMADS, FOAMMOB, FOAMOPTS and FOAMROCK keywords in the PROPS section.

Example

```
--
--          FOAM GAS MOBILITY VERSUS SURFACTANT CONCENTRATION FUNCTIONS
--
FOAMFSC
--          FOAM          FOAM          FOAM          FOAM
--          FOAMCON      FOAMEXP      MINSURF      MINSWAT
--          -----      -
--          0.001          1.010
--          0.002          1.000
--
--          0.001          0.850  1.0E-10
--          0.002          1.030
--          0.002          1.000
--
--          / TABLE NO. 01
--          / TABLE NO. 02
--          / TABLE NO. 03 (DEFAULTED)
--          / TABLE NO. 04
--          / TABLE NO. 05
--          / TABLE NO. 06
```

Here, NTSFUN equals six on the TABDIMS keyword in the RUNSPEC section and therefore six entries are required for the FOAMFSC keyword. Table number three is completed defaulted and will therefore use all the properties from the previous table, that is table number two.

8.3.61 FOAMFSO – DEFINE FOAM GAS MOBILITY REDUCTION VERSUS OIL SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMFSO keyword defines the reduction in gas mobility versus oil saturation, for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section, and the FOAMOPT2 parameter on the FOAMOPTS keyword in the PROPS section has been set to the character string FUNC.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.62 FOAMFST – DEFINE FOAM GAS-WATER SURFACE TENSION VERSUS SURFACTANT CONCENTRATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMFST keyword defines the gas-water surface tension versus the foam surfactant concentration, for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section, and the FOAMOPT2 parameter on the FOAMOPTS keyword in the PROPS section has been set to the character string FUNC.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.63 FOAMFSW – DEFINE FOAM GAS MOBILITY REDUCTION VERSUS WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMFRM keyword defines the reduction in gas mobility versus water saturation, for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section, and the FOAMOPT2 parameter on the FOAMOPTS keyword in the PROPS section has been set to the character string FUNC.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.64 FOAMMOB - DEFINE FOAM GAS MOBILITY VERSUS FOAM CONCENTRATION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FOAMMOB keyword defines the reduction in gas mobility as a function of the foam concentration within a grid block. The Foam option must be activated by the FOAM keyword in the RUNSPEC section in order to use this keyword. In addition, this keyword must be supplied if the foam model is activated.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	FOAMCON	A columnar vector of real monotonically increasing down the column values that defines the foam concentration for the corresponding gas mobility reduction factor (FOAMRATI). The first entry should be zero to define a no foam concentration data set. Units are dependent on the transport phase specified via the FOAMOPTI variable on the FOAMOPTS keyword in the PROPS section. FOAMOPTI should be set to either GAS or WATER.			None
		Gas: lb/Mscf Water: lb/stb	Gas: kg/sm ³ Water: kg/sm ³	Gas: gm/scc Water: gm/scc	
2	FOAMRATI	A columnar vector of real decreasing down the column values that defines the corresponding gas mobility reduction factor for a given FOAMCON. The first table data set entry should be one to define a no foam concentration data set. Each FOAMCON/FOAMRATI data set should be terminated by a “/”			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.20: FOAMMOB Keyword Description

See also the FOAM keyword in the RUNSPEC section, the FOAMADS, FOAMOPTS and FOAMROCK keywords in the PROPS section.

Example

```
--
--          FOAM GAS MOBILITY VERSUS FOAM CONCENTRATION TABLES
--
FOAMMOB
--          FOAM          FOAM
--          FOAMCON       FOAMRATI
--          -----
--          0.000         1.00000
--          0.005         0.50000
--          0.010         0.20000
--          0.015         0.10000
--          0.020         0.07500
--          0.025         0.07000
--          0.030         0.06500
--          0.035         0.06500
--
--          FOAM          FOAM
--          FOAMCON       FOAMRATI
--          -----
--          0.000         0.00000
--          0.010         0.50000
--          0.015         0.25000
--          0.020         0.07500
--          0.025         0.07000
--          0.030         0.07000
--
--          / TABLE NO. 01
--
--          / TABLE NO. 02
```

Given NTPVT equals two and NPPVT is greater and or equal to eight on the TABDIMS keyword in the RUNSPEC section, the example defines the foam gas mobility versus foam concentration tables for two tables.

There is no terminating “/” for this keyword.

8.3.65 FOAMMOBP – DEFINE FOAM MOBILITY REDUCTION VERSUS OIL PRESSURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMMOBP keyword defines the reduction in foam mobility reduction versus oil pressure, for when the Foam option has been activated by the FOAM keyword in the RUNSPEC.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.66 FOAMMOBS – DEFINE FOAM MOBILITY REDUCTION VERSUS SHEAR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMMOBS keyword defines the reduction in foam mobility reduction versus shear, for when the Foam option has been activated by the FOAM keyword in the RUNSPEC.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.67 FOAMOPTS - DEFINE FOAM MODEL OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FOAMOPTS keyword defines the transport phase for the foam (gas or water) and how gas mobility reduction should be calculated for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section.

The keyword is recognized by the input deck parser and simulator support is available in the experimental "ebos" simulator.

No.	Name	Description	Default
1	FOAMOPT1	A defined character that defines the transport phase for the foam, and should be set to one of the following character strings: 1) GAS: for the foam to be transport in the gas phase., or 2) WATER: for the foam to be transported in the water phase. Only the default value of GAS is currently supported by OPM Flow.	GAS
2	FOAMOPT2	A defined character that defines the method to be used to calculated the reduction in gas mobility, and should be set to one of the following character strings: 1) TAB: Sets the reduction in gas mobility to be calculated based on tables using the FOAMMOD keyword as a function of foam concentration, the FOAMMOBS as a function for shear, or as a function of pressure using the FOAMMOBP keyword. All keywords are in the PROPS section. 2) FUNC: Sets the reduction in gas mobility to be calculated based on a function defined via the FOAMFRM, FOAMFSC, FOAMFSW, FOAMFSO, FOAMFCN, or FOAMFST keywords in the PROPS section. Note this option is not supported by OPM Flow. Only the default value of TAB is currently supported by OPM Flow.	TAB
Notes: 1) The keyword is terminated by a "/".			

Table 8.21: FOAMOPTS Keyword Description

Example

```
--
--      FOAMOPT1  FOAMOPT2
--      PHASE      MOBILITY
--      -----
FOAMOPTS
      GAS          TAB                               / FOAM MODEL OPTIONS
```

The above example defines the transport phase to be gas and the gas mobility reduction to be use a table as defined by FOAMMOD keyword as a function of foam concentration, the FOAMMOBS as a function for shear, or as a function of pressure using the FOAMMOBP keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.68 FOAMROCK - DEFINE FOAM ROCK PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FOAMROCK keyword defines the foam rock properties for when the Foam option has been activated by the FOAM keyword in the RUNSPEC section.

The keyword is recognized by the input deck parser and simulator support is available in the experimental "ebos" simulator.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	ADINDEX	A positive integer of 1 or 2 that defines foam desorption option, as per: 1) then foam desorption may occur by retracing the foam adsorption isotherm when the local foam concentration in the solution decreases. 2) then no foam desorption may occur. Only the default value of 1 is supported by OPM Flow.			Defined
		dimensionless 1	dimensionless 1	dimensionless 1	
2	DENSITY	A real value that defines the rock in-situ density, that is at reservoir conditions.			None
		lb/rtb	kg/rm³	gm/rcc	
Notes: 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each table must contain just one row and one row only. 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.22: FOAMROCK Keyword Description

Note

In the commercial simulator if the POLYMER and SURFACT phases have been activated in conjunction with the FOAM phase then the mass density of rock will be set by the PLYROCK, SURFROCK, or the FOAMROCK keywords depending on the order entered in the run deck. This is not the case for OPM Flow.

OPM Flow's FOAM phase is a standalone implementation and cannot be used in conjunction with the either the POLYMER or SURFACT phases.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Example

```
--
--      FOAM-ROCK PROPERTIES
--
FOAMROCK
--      DESORP      INSITU
--      OPTN        DENSITY
--      -----
--      1            1800.0          / TABLE NO. 01
--      2            1980.0          / TABLE NO. 02
--      1            2005.0          / TABLE NO. 03
```

The above example defines three foam-rock tables, based on the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section being equal to three.

There is no terminating “/” for this keyword.

8.3.69 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be placed at the very top of the input file.

See [FORMFEED – Defined the Print File Form-Feed Character](#) in the GLOBAL section for a full description.

8.3.70 GASDENT – DEFINE GAS DENSITY TEMPERATURE COEFFICIENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

GASDENT defines the gas density as a function of temperature coefficients for when OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC. The reference pressure for this table is given by the VISCREF keyword in the PROPS section. Note this is an OPM Flow keyword used with OPM Flow's black-oil thermal model that is not available in the commercial simulator's black-oil thermal formulation.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TEMP	TEMP is a real positive value greater than zero that defines the absolute reference temperature used with TEXPI and TEXP2 to estimate the change in gas density with respect to temperature.			Defined
		°R 527.67	°K 293.15	°K 293.15	
2	TEXPI	TEXPI is a real positive value greater than zero that defines the gas thermal expansion coefficient of the first order.			Defined
		1/°R 1.67×10^{-4}	1/°K 3.0×10^{-4}	1/°K 3.0×10^{-4}	
3	TEXP2	TEXP2 is a real positive value greater than zero that defines the gas thermal expansion coefficient of the second order.			Defined
		1/°R ² 9.26×10^{-7}	1/°K ² 3.0×10^{-6}	1/°K ² 3.0×10^{-6}	
Notes: 1) The keyword is followed by NTPVT records as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each data set is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.23: GASDENT Keyword Description

Example

The following example shows the GASDENT keyword using the default values, for when the thermal option has been activated by the THERMAL keyword in the RUNSPEC section and for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to two.

```
--
--      GAS DENSITY TEMPERATURE COEFFICIENTS (OPM FLOW THERMAL KEYWORD)
--
--      GAS      DENSITY      DENSITY
--      TEMP      COEFF1      COEFF2
--      -----
GASDENT
      1*          1*          1*          / TABLE NO. 01
      1*          1*          1*          / TABLE NO. 02
```

There is no terminating “/” for this keyword.

8.3.71 GASVISCT – DEFINE GAS VISCOSITY VERSUS TEMPERATURE FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

GASVISCT defines the gas viscosity as a function of temperature for when OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC. The reference pressure for this table is given by the VISCREF keyword in the PROPS section. Note this is an OPM Flow keyword used with OPM Flow's black-oil thermal model that is not available in the commercial simulator's black-oil thermal formulation. However, the keyword and similar functionality is available in the commercial compositional simulator.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TEMP	A columnar vector of real monotonically increasing down the column values that defines the temperature values.			None
		°F	°C	°C	
2	VIS	A columnar vector of real increasing down the column values that defines the gas viscosity for the corresponding temperature values (TEMP). VIS should be given at the reference pressure defined by the PRESS variable on the VISCREF keyword.			None
		cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.24: GASVISCT Keyword Description

Example

The following example shows the GASVISCT keyword for when the thermal option has been activated by the THERMAL keyword in the RUNSPEC section and for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set equal to one.

```
--
--      GAS VISCOSITY VERSUS TEMPERATURE TABLES (OPM FLOW EXTENSION KEYWORD)
--
--      GAS      GAS
--      TEMP      VISC
--      -----
GASVISCT
      100.0      0.0500
      110.0      0.0550
      120.0      0.0580
      150.0      0.0620
      165.0      0.0625
                                                    / TABLE NO. 01
```

There is no terminating "/" for this keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.72 GETDATA – LOAD AND ASSIGN DATA ARRAY FROM INIT OR RESTART FILE

The GETDATA keyword loads a data array from a previously generated INIT or RESTART file and assigns the loaded array to either same array in the run or another array name.

See [GETDATA – Load and Assign Data Array from INIT or RESTART Files](#) in the GRID section for a full description.

8.3.73 GIALl – DEFINE GI VALUES AND PVT PROPERTIES VERSUS PRESSURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GIALl keyword defines the GI values and the associated RVGI, RSGI, BGGI and BOGI values as a function of pressure, for when the GI Pseudo Compositional option has been activated in the model via the GIMODEL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.74 GINODE – DEFINE GI NODE VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GINODE keyword defines the Gi node values used when the GIMODEL keyword in the RUNSPEC section has been used to activate the GI Pseudo Compositional option for the run. The keyword is used in conjunction with the RSGL, RVGL, BGGL and BOGL keywords in the PROPS section to describe the fluid properties for the GI Pseudo Compositional option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.75 GRAVCONS – RE-DEFINE GRAVITY CONSTANT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GRAVCONS keyword re-defines the gravity constant used in various calculations from the default value used by the simulator. Normally this keyword should not be used.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	GRAVCONS	GRAVCONS is a positive real number number that defines the gravity constant used in various calculations.			Defined
		ft²psi/lb 0.00694	m²bars/kg 0.0000981	cm²atm/gm 0.000968	
Notes: I) The keyword is terminated by a “/”.					

Table 8.25: GRAVCONS Keyword Description

Example

```
--
--      RE-DEFINE GRAVITY CONSTANT
--
GRAVITY      0.0000980665      /
```

The above example re-defines the gravity constant to be 0.0000980665 ft²psi/lb from the default value of 0.00694 ft²psi/lb.

8.3.76 GRAVITY– DEFINE THE SURFACE OIL, WATER GAS GRAVITIES FOR THE FLUIDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

GRAVITY defines the oil API gravity and water and gas surface specific gravities for the fluids for various regions in the model. The number of GRAVITY vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the GRAVITY data sets to different grid blocks in the model is done via the PVTNUM keyword in the REGION section. One data set consists of one record or line which is terminated by a “/”.

This surface density or gravity must be entered using either the DENSITY or GRAVITY keywords irrespective of which phases are active in the model.

This keyword is not supported by OPM Flow but is documented here for completeness; however, the density data can be entered using the DENSITY keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	OILAPI	OILAPI is a real number defining the density of oil at surface conditions. The American Petroleum Institute (“API”) classifies oils based on an API gravity (γ_{API}), or degrees API ($^{\circ}API$), the relationship between relative density (γ_o) of oil and API gravity (γ_{API}) is given by: $\gamma_{API} = \frac{141.5}{\gamma_o} - 131.5$			None
		$^{\circ}API$	$^{\circ}API$	$^{\circ}API$	
2	WATGRAV	WATGRAV is a real number defining the density of water at surface conditions.			Defined
		(water =1.0) 0.7773	(water =1.0) 0.7773	(water =1.0) 0.7773	
3	GRAVGAS	GRAVGAS is a real number defining the density of gas at surface conditions.			Defined
		(air =1.0) 1.000	(air =1.0) 1.000	(air =1.0) 1.000	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) The each data set terminated by terminated by a “/” at the end of the line, there is no “/” terminator for the keyword.

Table 8.26: GRAVITY Keyword Description

According to the SPE SI standard⁹⁴, **Relative Density** (γ) replaces **Specific Gravity** as the term used to define the ratio of the density of a known material to the density of reference material, at standard conditions of pressure and temperature. Standard conditions vary throughout the world, but for oil field units one normally uses 14.7 psia and 60 °F, while for SI units some areas use 101.325 kPa and 15 °C.

⁹⁴ The SI Metric System of Units and SPE Metric Standard, Adopted for Use as a Voluntary Standard by the SPE Board of Directors, June 1983, Society of Petroleum Engineers.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Examples

The following shows the GRAVITY keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to one.

```
--
--      OIL      WAT      GAS
--      GRAVITY  GRAVITY  GRAVITY
--      -----  -----  -----
GRAVITY      39.0      1.012      0.650      / GRAVITY PVT DATA REGION 1
```

The next example shows the DENSITY keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to three.

```
--
--      OIL      WAT      GAS
--      GRAVITY  GRAVITY  GRAVITY
--      -----  -----  -----
GRAVITY      37.0      1.012      0.650      / GRAVITY PVT DATA REGION 1
              38.0      1.012      0.646      / GRAVITY PVT DATA REGION 2
              39.0      1.012      0.640      / GRAVITY PVT DATA REGION 3
```

There is not terminating “/” for this keyword.

8.3.77 HA – HISTORY MATCH END-POINT GRADIENT ADDITIVE MODIFIER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The HA series of keywords defines the history match end-point gradient parameters used to set the additive cumulative end point data, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. In addition, the End-Point Scaling option must also be activated by the ENDSCALE keyword which is also in the RUNSPEC section. The keyword consists of the first two characters of “HA” followed by the end-point keyword shown in Table 8.27, for example, HASWL.

This keyword is ignored by OPM Flow and has no effect on the simulation.

Type	End-Point Keyword	Oil-Water End-Point Definitions
Saturation	SWL	Connate water saturation, that is the smallest water saturation in a water saturation function table.
	SWCR	Critical water saturation, that is the largest water saturation for which the water relative permeability is zero.
	SOWCR	Critical oil-in-water saturation, that is the largest oil saturation for which the oil relative permeability is zero in an oil-water system.
Relative Permeability	KRW	Relative permeability of water at the maximum water saturation (normally the maximum water saturation is one).
	KRO	Relative permeability of oil at the maximum oil saturation.
	KRWR	Relative permeability of water at the residual oil saturation or the residual gas saturation in a gas-water run.
	KRORW	Relative permeability of oil at the critical water saturation.
Capillary Pressure	SWLPC	Capillary pressure connate water saturation, that is the smallest water saturation in a water saturation function table.
Type	End-Point Keyword	Gas-Oil End-Point Definitions
Saturation	SGL	Connate gas saturation, that is the smallest gas saturation in a gas saturation function table.
	SGCR	Critical gas saturation, that is the largest gas saturation for which the gas relative permeability is zero.
	SOGCR	Critical oil-in-gas saturation, that is the largest oil saturation for which the oil relative permeability is zero in an oil-gas-connate water system.
Relative Permeability	KRG	Relative permeability of gas at the maximum gas saturation.
	KRGR	Relative permeability of gas at the residual oil saturation or the critical water saturation in a gas-water run.
	KRORG	Relative permeability of oil at the critical gas saturation.
Capillary Pressure	SGLPC	Capillary pressure connate gas saturation, that is the smallest gas saturation in a gas saturation function table.

Table 8.27: HA Keyword List

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

See also the HMPROPS keyword in the PROPS section that allows the use of the ADD, BOX, EQUALS, COPY, MINVALUE, and MAXVALUE keywords to be used with the HA and HM series of keywords.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.78 HDISP – DEFINE TRACER MECHANICAL DISPERSIVITY PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HDISP keyword is combined with three character tracer name, specified by the TRACER keyword in the PROPS section, to define the tracer's mechanical dispersivity parameters.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.79 HM – HISTORY MATCH END-POINT GRADIENT MULTIPLICATIVE MODIFIER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	--------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HM series of keywords defines the history match end-point gradient parameters used to set the multiplicative cumulative end point data, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. In addition, the End-Point Scaling option must also be activated by the ENDSCALE keyword which is also in the RUNSPEC section. The keyword consists of the first two characters of “HM” followed by the end-point keyword shown in Table 8.28, for example, HMSWL.

This keyword is ignored by OPM Flow and has no effect on the simulation.

Type	End-Point Keyword	Oil-Water End-Point Definitions
Saturation	SWL	Connate water saturation, that is the smallest water saturation in a water saturation function table.
	SWCR	Critical water saturation, that is the largest water saturation for which the water relative permeability is zero.
	SOWCR	Critical oil-in-water saturation, that is the largest oil saturation for which the oil relative permeability is zero in an oil-water system.
Relative Permeability	KRW	Relative permeability of water at the maximum water saturation (normally the maximum water saturation is one).
	KRO	Relative permeability of oil at the maximum oil saturation.
	KRWR	Relative permeability of water at the residual oil saturation or the residual gas saturation in a gas-water run.
	KRORW	Relative permeability of oil at the critical water saturation.
Capillary Pressure	SWLPC	Capillary pressure connate water saturation, that is the smallest water saturation in a water saturation function table.
Type	End-Point Keyword	Gas-Oil End-Point Definitions
Saturation	SGL	Connate gas saturation, that is the smallest gas saturation in a gas saturation function table.
	SGCR	Critical gas saturation, that is the largest gas saturation for which the gas relative permeability is zero.
	SOGCR	Critical oil-in-gas saturation, that is the largest oil saturation for which the oil relative permeability is zero in an oil-gas-connate water system.
Relative Permeability	KRG	Relative permeability of gas at the maximum gas saturation.
	KRGR	Relative permeability of gas at the residual oil saturation or the critical water saturation in a gas-water run.
	KRORG	Relative permeability of oil at the critical gas saturation.
Capillary Pressure	SGLPC	Capillary pressure connate gas saturation, that is the smallest gas saturation in a gas saturation function table.

Table 8.28: HM Keyword List

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

See also the HMPROPS keyword in the PROPS section that allows the use of the ADD, BOX, EQUALS, COPY, MINVALUE, and MAXVALUE keywords to be used with the HA and HM series of keywords.

8.3.80 HMMROCK – HISTORY MATCH ROCK COMPRESSIBILITY GRADIENT CUMULATIVE MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HMMROCK defines the rock compressibility gradient cumulative multipliers to be applied to the rock compressibility as defined by the ROCK keyword in the PROPS section, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The constant should be a real number.

The allocation of the ROCK tables to different grid blocks in the model is done via the PVTNUM or the SATNUM keywords in the REGION section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.81 HMMROCKT – HISTORY MATCH ROCK COMPACTION GRADIENT CUMULATIVE MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HMMROCKT defines the rock compaction gradient cumulative multipliers to be applied to the compaction data entered by the ROCTAB or ROCKTABH keywords in the PRROPS section, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section

The ROCKTAB keyword defines the rock compaction attributes to be applied for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section. ROCKTAB defines pore volume and transmissibility multipliers versus pressure that are used in the compaction calculations. If the RKTRMDIR has been activated in the PROPS section, then the transmissibility multiplier is directional dependent

This keyword should only be used if compaction option has been enabled.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.82 HMPROPS – HISTORY MATCH END-POINT SECTION START

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	--------------	----------------	--------------------------	-------------------------	--------------------------

Description

HMPROPS defines the start of a history match end-points section, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. In addition, the End-Point Scaling option must also be activated by the ENDSCALE keyword which is also in the RUNSPEC section. The keyword allows for the BOX, EQUALS, COPY, MINVALUE, MAXVALUE and ADD keywords to be used with the HA and HM series of keywords that reference the end-point scaling arrays, that is: HMKRG, HMKRGR, HMKRO, HMKRORG, HMKRORW, HMKRW, HMKRWVR, HMPCW, HMPCG, HMSGCR, HMSOWCR, HMSOGCR, HMSWCR, and HMSWL keywords.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.83 HMROCK – HISTORY MATCH ROCK COMPRESSIBILITY GRADIENT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMROCK keyword defines the history match rock compressibility gradient parameters for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of rock gradient parameters that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.84 HMROCKT – HISTORY MATCH ROCK COMPACTION GRADIENT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMROCKT keyword defines the history match rock compaction gradient parameters for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section, and the history match rock compaction data has been entered via the HMMROCKT, ROCKTAB and ROCKTABH keywords in the PROPS section.

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of rock gradient parameters that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.85 HMRREF – HISTORY MATCH ROCK TABLE REFERENCE PRESSURE VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMRREF keyword defines the history match rock compaction reference pressure gradient values to be used in conjunction with HMMROCKT, ROCKTAB and ROCKTABH keywords in the PROPS section, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The history match rock compaction data is entered via the HMMROCKT, ROCKTAB and ROCKTABH keywords in the PROPS section.

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of rock gradient parameters that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.86 HWKRO – END-POINT SCALING OF GRID CELL K_{ro}(SWL) (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWKRO defines the scaling parameter for the oil relative permeability value at the connate water saturation (SWL), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil relative permeability in the high salinity water wet oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.87 HWKRORG – END-POINT SCALING OF GRID CELL $K_{ro}(S_{GCR})$ (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWKRORG defines the scaling parameter for the relative permeability of oil at the critical gas saturation (S_{GCR}), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil relative permeability in the high salinity water wet oil relative permeability saturation tables. The **ENDSCALE** keyword in the **RUNSPEC** section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the **LOWSALT** keyword in the **RUNSPEC** section and the Surfactant Wettability option activated by the **SURFACT** or **SURFACTW** keywords, which are also in the **RUNSPEC** section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.8 HWKRORW – END-POINT SCALING OF GRID CELL K_{ro}(S_{wcr}) (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWKRORW defines the scaling parameter for the relative permeability of oil at the critical water saturation (S_{wcr}), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil relative permeability in the high salinity water wet oil relative permeability saturation tables. The ENDS_{SCALE} keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.89 HWKRW – END-POINT SCALING OF GRID CELL KRW($S_w = 1.0$) (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWKRW defines the scaling parameter at the maximum oil relative permeability value (S_{wU}), that is for $S_w = 1.0$, for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water relative permeability in the high salinity water wet water relative permeability saturation tables. The **ENDSCALE** keyword in the **RUNSPEC** section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the **LOWSALT** keyword in the **RUNSPEC** section and the Surfactant Wettability option activated by the **SURFACT** or **SURFACTW** keywords, which are also in the **RUNSPEC** section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.90 HWKRWR – END-POINT SCALING OF GRID CELL KRWR($S_w=1.0$) (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWKRWR defines the scaling parameter at the maximum oil relative permeability value (S_{wU}), that is for $S_w = 1.0$, for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water relative permeability in the high salinity water wet water relative permeability saturation tables. The **ENDSCALE** keyword in the **RUNSPEC** section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the **LOWSALT** keyword in the **RUNSPEC** section and the Surfactant Wettability option activated by the **SURFACT** or **SURFACTW** keywords, which are also in the **RUNSPEC** section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.91 HWPCW – END-POINT SCALING OF GRID CELL WATER CAPILLARY PRESSURE (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

HWPCW defines the maximum water-oil pressure values for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The ENDSALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section. The keyword re-scales the oil-water capillary pressure in the high salinity water wet capillary saturation tables from a cell's assigned saturation function by the grid block's HWPCW value.

The capillary pressure for a grid block is scaled by:

$$P_c = P_{c_{TABLE}} \left(\frac{HWPCW}{P_{c_{TABLE-MAX}}} \right) \quad (8.3)$$

Where:

- P_c = the resulting high salinity water wet water capillary pressure for a grid cell.
- HWPCW = the maximum capillary pressure from the HWPCW array for a given cell.
- $P_{c_{TABLE}}$ = the capillary pressure in the high salinity water wet water capillary pressure table allocated to the grid block.
- $P_{c_{TABLE-MAX}}$ = the maximum capillary pressure in the high salinity water wet water capillary pressure table allocated to the grid block (that is at the connate water saturation).

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.92 HWSOGCR – END-POINT SCALING GRID CELL SOGCR (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWSOGCR defines the critical oil saturation with respect to gas (“SOGCR”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil saturation in the high salinity water wet oil-gas relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.93 HWSOWCR – END-POINT SCALING GRID CELL SOWCR (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWSOWCR defines the critical oil saturation with respect to water (“SOWCR”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil saturation in the high salinity water wet water-oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.94 HWSWCR – END-POINT SCALING GRID CELL SWCR (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWSWCR defines the critical water saturation (“SWCR”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water saturation in the high salinity water wet water-oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.95 HWSWL – END-POINT SCALING GRID CELL SWL (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWSWL defines the connate water saturation (“SWL”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water saturation in the high salinity water wet water-oil relative permeability saturation tables, as well as the associated capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.96 HWSWLPC – END-POINT SCALING GRID CELL SWLPC (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWSWLPC defines the capillary pressure connate water saturation (“SWLPC”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water saturation in the high salinity water wet water-oil capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

Note the keyword only applies the scaling to the capillary pressures tables, unlike the HWSWL keyword that applies the scaling to both the capillary pressure and relative permeability tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.97 HWSWU – END-POINT SCALING GRID CELL SWU (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

HWSWU defines the maximum water saturation(“SWU”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water saturation in the high salinity water wet water-oil relative permeability saturation tables, as well as the associated capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.98 HYDRHEAD – DEFINE HYDRAULIC HEAD OUTPUT REFERENCE DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HYDRHEAD keyword defines the hydraulic head reference data for when the hydraulic head information is requested to be written out via one on the SUMMARY keywords (BHD, BHDF, etc.) in the SUMMARY section, or to the RESTART file via the HYDH or HYDHFV variables on the RESTART keyword

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.99 HYMOBGDR – ACTIVATE CARLSON AND KILLOUGH ALTERNATIVE DRAINAGE HYSTERESIS OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, HYMOBGDR, activates the Carlson and Killough alternative secondary drainage hysteresis option for when the hysteresis option has been activated by the HYSTER variable on the SATOPTS keyword in the RUNSPEC section, and either the Carlson⁹⁵ or Killough⁹⁶ models have been selected via the EHYSR keyword in the PROPS section. Due to numerical accuracy, the gas saturation may fall below the critical gas saturation (SGCR), that is the largest gas saturation for which the gas relative permeability is zero, and gas would therefore be immobile until the gas saturation increases above SGCR. This option overcomes this situation by letting the gas become mobile once it starts increasing, effectively setting the SGCR to the current gas saturation.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE CARLSON AND KILLOUGH ALTERNATIVE DRAINAGE HYSTERESIS OPTION
--
HYMOBGDR
```

⁹⁵ Carlson, F. M. “Simulation of Relative Permeability Hysteresis to the Non-Wetting Phase,” paper SPE 10157, presented at the SPE Annual Technical Conference & Exhibition, San Antonio, Texas, USA (October 5-7, 1981).

⁹⁶ Killough, J. E. “Reservoir Simulation with History-dependent Saturation Functions,” paper SPE 5106, Society of Petroleum Engineers Journal (1976) 16, No. 1, 37-48.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.100 HYSTCHCK - ACTIVATE HYSTERESIS INHIBITION AND DRAINAGE END-POINT VALIDATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HYSTCHCK keyword activate the hysteresis imbibition and drainage end-point check to validate that the two sets of end-points are consistent, for when the Hysteresis option has been activated by the HYSTER variable on the SATOPTS keyword in the RUNSPEC section, and the ENDSCALE keyword in the RUNSPEC section has been activated to enable end-point scaling.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.101 IKRG – END-POINT SCALING OF GRID CELL $K_{RG}(S_{GU})$ (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

IKRG defines the imbibition scaling parameter at the maximum gas relative permeability value (ISGU), normally ISGU is equal to $1.0 - S_{wc}$ for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the Hysteresis option. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	IKRG	IKRG is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling IKRG imbibition values for each cell in the model. Repeat counts may be used, for example 50*0.400. dimensionless			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the IKRGX±, IKRGY± and IKRGZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.29: IKRG Keyword Description

For the two point scaling option and for the IKRGR gas relative permeability array NOT present in the input deck the k_{rg} value for a grid block is scaled by:

$$k_{rg} = k_{rg\,TABLE} \left(\frac{IKRG}{k_{rg\,TABLE-MAX}} \right) \quad (8.4)$$

Where:

- k_{rg} = the resulting k_{rg} value for a grid cell.
- IKRG = the scaling gas relative permeability value from the IKRG array for a given cell.
- $k_{rg\,TABLE}$ = the gas relative permeability from a grid block's gas-oil table at the grid blocks gas saturation.
- $k_{rg\,TABLE-MAX}$ = the maximum gas relative permeability from a grid block's gas-oil table, that is at the connate water saturation (S_{wc}).

If the IKRGR keyword is present in the input deck then the scaling matches the imbibition relative permeability at the critical saturation of the displacing phase.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Phases Present	Critical Saturation
1	Gas-Oil	$S_{critical} = 1.0 - ISOGCR - ISWL$
2	Gas-Oil-Water	$S_{critical} = 1.0 - ISOGCR - ISWL$
3	Gas-Water	$S_{critical} = 1.0 - ISWCR$

Table 8.30: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWUX, ISWUY and ISWUZ instead of ISWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISWUX-, ISWUY-, ISWUZ- and ISWUZ-, instead of the ISWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the IKRG, IKRGR, IKRO, IKRORG, IKRORW, IKRW and IKRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is IKRGX, IKRGY and IKRGZ instead of IKRG. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IKRGX-, IKRGY-, IKRGZ- and IKRGZ-, instead of the IKRG keyword.

Example

The example below defines an input box for the whole grid and for layers one to three, for layer one IKRG is set equal to 0.550, for layer two IKRG equals 0.575, and for layer three IKRG equals 0.600.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2  J1  J2  K1  K2
BOX      1*  1*  1*  1*  1   3                / DEFINE BOX AREA
--
--      SET IKRG VALUES FOR THREE LAYERS IN THE MODEL
--
IKRG      1000*0.555  1000*0.575  1000.0.600      /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

8.3.102 IKRGR – END-POINT SCALING OF GRID CELL KRGR(1-SOGCR) (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

IKRGR defines the imbibition scaling parameter at the relative permeability of gas at residual oil saturation ($I - \text{ISOGCR}$), or critical water saturation in a gas-water run (S_{wc}), for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the Hysteresis option. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	IKRGR	IKRGR is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned imbibition scaling IKRGR values for each cell in the model. In addition, for a given grid block IKRGRGT should be less than IKRGR. Repeat counts may be used, for example 50*0.400.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the IKRGRX± , IKRGRY± and IKRGRZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.31: IKRGR Keyword Description

When the IKRGR keyword is present in the input deck then the scaling matches the imbibition relative permeability at the critical saturation of the displacing phase (oil or water).

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Phases Present	Critical Saturation
1	Gas-Oil	$S_{critical} = 1.0 - \text{ISOGCR} - \text{ISWL}$
2	Gas-Oil-Water	$S_{critical} = 1.0 - \text{ISOGCR} - \text{ISWL}$
3	Gas-Water	$S_{critical} = 1.0 - \text{ISWCR}$

Table 8.32: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWUX, ISWUY and ISWUZ instead of ISWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

versions of the aforementioned arrays should be used, that is ISWUX, ISWUX-, ISWUY, ISWUY-, ISWUZ and ISWUZ-, instead of the ISWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the IKRG, IKRGR, IKRO, IKRORG, IKRORW, IKRW and IKRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is IKRGX, IKRGY and IKRGZ instead of IKRG, There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IKRGX, IKRGX-, IKRGY, IKRGY-, IKRGZ and IKRGZ-, instead of the IKRG keyword.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one IKRRG is set equal to 0.500, for layer two IKRGR equals 0.570, and for layer three IKRGR equals 0.580.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
BOX
      1*  1*    1*  1*    1    3
--
--      SET IKRGR VALUES FOR THREE LAYERS IN THE MODEL
--
--      IKRGR
--      1000*0.500  1000*0.570  1000.0.580
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
--      ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY          CONSTANT          ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      IKRGR'          0.5500          1*  1*    1*  1*    1    1  / IKRGR FOR LAYER 1
      IKRGR'          0.5700          1*  1*    1*  1*    2    2  / IKRGR FOR LAYER 2
      IKRGR'          0.5800          1*  1*    1*  1*    3    3  / IKRGR FOR LAYER 3
/
```

8.3.103 IKRO – END-POINT SCALING OF GRID CELL $k_{ro}(S_{wl})$ (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

IKRO defines the scaling parameter for the imbibition oil relative permeability value at the connate water saturation (ISWL), for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the Hysteresis option. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	IKRO	IKRO is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned imbibition scaling IKRO values for each cell in the model. Repeat counts may be used, for example 50*0.500.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the IKROX±, IKROY± and IKROZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.33: IKRO Keyword Description

For the two point scaling option and for the IKRORW or IKRORG oil imbibition relative permeability arrays NOT being present in the input deck the k_{ro} value for a grid block is scaled by:

$$k_{ro} = k_{ro\text{ TABLE}} \left(\frac{IKRO}{k_{ro\text{ TABLE-MAX}}} \right) \quad (8.5)$$

Where:

- k_{ro} = the resulting k_{ro} value for a grid cell.
- IKRO = the scaling oil relative permeability value from the IKRO array for a given cell.
- $k_{ro\text{ TABLE}}$ = the oil relative permeability from a grid block's oil relative permeability table at the grid blocks oil saturation.
- $k_{ro\text{ TABLE-MAX}}$ = the maximum oil relative permeability from a grid block's oil relative table, that is at the critical water saturation (S_{wcr}).

If the IKRORW or IKRORG keywords are present in the input deck then the scaling matches the relative permeability at the critical saturation of the displacing phase.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Keywords Present	Critical Saturation
1	KRORW	$S_{critical} = 1.0 - SWCR - SGL$
2	KRORG	$S_{critical} = 1.0 - SGCR - SWL$

Table 8.34: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWUX, ISWUY and ISWUZ instead of ISWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISWUX, ISWUX-, ISWUY, ISWUY-, ISWUZ and ISWUZ-, instead of the ISWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the IKRG, IKRGR, IKRO, IKRORG, IKRORW, IKRW and IKRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is IKRGX, IKRGY and IKRGZ instead of IKRG. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IKRGX, IKRGX-, IKRGY, IKRGY-, IKRGZ and IKRGZ-, instead of the IKRG keyword.

Example

The example below defines an input box for the whole grid and for layers one to three, for layer one IKRO is set equal to 0.850, for layer two IKRO equals 0.875, and for layer three IKRO equals 0.900.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      IKRO          0.8550        1*  1*   1*  1*   1   1  / IKRO FOR LAYER 1
      IKOG          0.8750        1*  1*   1*  1*   2   2  / IKRO FOR LAYER 2
      IKRO          0.9000        1*  1*   1*  1*   3   3  / IKRO FOR LAYER 3
/
```

8.3.104 IKRORG – END-POINT SCALING OF GRID CELL $K_{ro}(S_{gcr})$ (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

IKRORG defines the scaling parameter for the imbibition relative permeability of oil at the critical gas saturation (IS_{gcr}), for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the Hysteresis option. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	IKRORG	IKRORG is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned imbibition scaling IKRORG values for each cell in the model. Repeat counts may be used, for example 50*0.850.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the IKRORGX±, IKRORGY± and IKRORGZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.35: IKRORG Keyword Description

When the IKRORG keyword is present in the input deck then the scaling matches the imbibition relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Keywords Present	Critical Saturation
1	IKRORW	$S_{critical} = 1.0 - ISWCR - ISGL$
2	IKRORG	$S_{critical} = 1.0 - ISGCR - SWL$

Table 8.36: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWUX, ISWUY and ISWUZ instead of ISWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISWUX-, ISWUX-, ISWUY, ISWUY-, ISWUZ and ISWUZ-, instead of the ISWU keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the IKRG, IKRGR, IKRO, IKRORG, IKRORW, IKRW and IKRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is IKRGX, IKRGY and IKRGZ instead of IKRG, There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IKRGX-, IKRGX-, IKRGY, IKRGY-, IKRGZ and IKRGZ-, instead of the IKRG keyword.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one IKRORG is set equal to 0.750, for layer two IKRORG equals 0.775, and for layer three IKRORG equals 0.800.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
BOX      1*  1*    1*  1*    1    3
--
--      SET IKRORG VALUES FOR THREE LAYERS IN THE MODEL
--
IKRORG    1000*0.755  1000*0.775  1000.0.800
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY          CONSTANT      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      IKRORG          0.7550        1*  1*    1*  1*    1    1  / IKRORG FOR LAYER 1
      IKRORG          0.7750        1*  1*    1*  1*    2    2  / IKRORG FOR LAYER 2
      IKRORG          0.8000        1*  1*    1*  1*    3    3  / IKRORG FOR LAYER 3
/
```

8.3.105 IKRORW – END-POINT SCALING OF GRID CELL $K_{ro}(S_{wcr})$ (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

IKRORW defines the scaling parameter for the imbibition relative permeability of oil at the critical water saturation (IS_{wcr}), for all the cells in the model via an array. The **ENDSCALE** keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the **HYSTER** option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the Hysteresis option. The **SCALECRS** keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	IKRORW	IKRORW is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned imbibition scaling IKRORW values for each cell in the model. Repeat counts may be used, for example 50*0.850			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the IKRORWX±, IKRORWY± and IKRORWZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.37: IKRORW Keyword Description

When the IKRORW keyword is present in the input deck then the scaling matches the imbibition relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Keywords Present	Critical Saturation
1	IKRORW	$S_{critical} = 1.0 - IS_{wcr} - IS_{GL}$
2	IKRORG	$S_{critical} = 1.0 - IS_{GCR} - IS_{WL}$

Table 8.38: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the IS_{WL} , IS_{wcr} , IS_{WU} , IS_{GL} , IS_{GCR} , IS_{GU} , IS_{OWCR} , and IS_{OGCR} saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is IS_{WUX} , IS_{WUY} and IS_{WUZ} instead of IS_{WU} . There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IS_{WUX-} , IS_{WUY-} , IS_{WUZ-} instead of the IS_{WU} keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the IKRG, IKRGR, IKRO, IKRORG, IKRORW, IKRW and IKRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is IKRGX, IKRGY and IKRGZ instead of IKRG, There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IKRGX-, IKRGY-, IKRGZ- and IKRGZ-, instead of the IKRG keyword.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one IKRORW is set equal to 0.750, for layer two IKRORW equals 0.775, and for layer three IKRORW equals 0.800.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
BOX
      1*  1*    1*  1*    1    3                      / DEFINE BOX AREA
--
--      SET IKRORW VALUES FOR THREE LAYERS IN THE MODEL
--
IKRORW
      1000*0.755  1000*0.775  1000.0.800                      /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      IKRORW      0.7550      1*  1*    1*  1*    1    1 / IKRORW FOR LAYER 1
      IKRORW      0.7750      1*  1*    1*  1*    2    2 / IKRORW FOR LAYER 2
      IKRORW      0.8000      1*  1*    1*  1*    3    3 / IKRORW FOR LAYER 3
/
```

8.3.106 IKRW – END-POINT SCALING OF GRID CELL K_{rw}(S_w =1.0) (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

IKRW defines the scaling parameter at the maximum imbibition oil relative permeability value (ISWU), that is for S_w = 1.0, for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the Hysteresis option. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	IKRW	IKRW is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned imbibition scaling IKRW values for each cell in the model. Repeat counts may be used, for example 50*1.000.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the IKRWX±, IKRWY± and IKRWZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.39: IKRW Keyword Description

For the two point scaling option and for the IKRWR water relative permeability array NOT present in the input deck the k_{rw} value for a grid block is scaled by:

$$k_{rw} = k_{rw\,TABLE} \left(\frac{IKRW}{k_{rw\,TABLE-MAX}} \right) \quad (8.6)$$

Where:

- k_{rw} = the resulting IKRW value for a grid cell.
- IKRW = the scaling water relative permeability value from the IKRW array for a given cell.
- k_{rw TABLE} = the water relative permeability from a grid block's oil relative permeability table at the grid blocks water saturation.
- k_{rw TABLE-MAX} = the maximum water relative permeability from a grid block's water relative table, that is at the maximum water saturation.

If the IKRWR keyword is present in the input deck then the scaling matches the imbibition relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No	Phases Present	Critical Saturation
1	Gas-Oil	$S_{critical} = 1.0 - ISOWCR - ISGL$
2	Gas-Oil-Water	$S_{critical} = 1.0 - ISOWCR - ISGL$
3	Gas-Water	$S_{critical} = 1.0 - ISGCR$

Table 8.40: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWUX, ISWUY and ISWUZ instead of ISWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISWUX-, ISWUY-, ISWUZ- and ISWUZ-, instead of the ISWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the IKRG, IKRGR, IKRO, IKRORG, IKRORW, IKRW and IKRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is IKRGX, IKRGY and IKRGZ instead of IKRG. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IKRGX-, IKRGY-, IKRGZ- and IKRGZ-, instead of the IKRG keyword.

Example

The example below defines an input box for the whole grid and for layers one to three, for layer one IKRW is set equal to 0.850, for layer two IKRW equals 0.875, and for layer three IKRW equals 0.900.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      1*  1*   1*  1*   1   3
--
--      SET IKRW VALUES FOR THREE LAYERS IN THE MODEL
--
IKRW      1000*0.855  1000*0.875  1000.0.900
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

8.3.107 IKRWR – END-POINT SCALING OF GRID CELL KRWR(SOWCR) (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

IKRWR defines the scaling parameter at the imbibition critical oil to water saturation value (SOWCR), for the imbibition water relative permeability curve, for all the cells in the model via an array. The ENDSALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the Hysteresis option. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	IKRWR	IKRWR is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned imbibition scaling IKRWR values for each cell in the model. Repeat counts may be used, for example 50*1.000.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the IKRWRX±, IKRWRY± and IKRWRZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.41: IKRWR Keyword Description

When the IKRWR keyword is present in the input deck then the scaling matches the imbibition relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Phases Present	Critical Saturation
1	Gas-Oil	$S_{critical} = 1.0 - ISOWCR - ISGL$
2	Gas-Oil-Water	$S_{critical} = 1.0 - ISOWCR - ISGL$
3	Gas-Water	$S_{critical} = 1.0 - ISGCR$

Table 8.42: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWUX, ISWUY and ISWUZ instead of ISWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

versions of the aforementioned arrays should be used, that is ISWUX, ISWUX-, ISWUY, ISWUY-, ISWUZ and ISWUZ-, instead of the ISWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the IKRG, IKRGR, IKRO, IKRORG, IKRORW, IKRW and IKRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is IKRGX, IKRGY and IKRGZ instead of IKRG, There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IKRGX, IKRGX-, IKRGY, IKRGY-, IKRGZ and IKRGZ-, instead of the IKRG keyword.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one IKRWR is set equal to 0.750, for layer two IKRWR equals 0.775, and for layer three IKRWR equals 0.800.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
BOX
      1*  1*    1*  1*    1    3
--
--      SET IKRWR VALUES FOR THREE LAYERS IN THE MODEL
--
--      IKRWR
--      1000*0.755  1000*0.775  1000.0.800
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
--      ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY          CONSTANT          ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      IKRWR          0.7550          1*  1*    1*  1*    1    1  / IKRWR FOR LAYER 1
      IKRWR          0.7750          1*  1*    1*  1*    2    2  / IKRWR FOR LAYER 2
      IKRWR          0.8000          1*  1*    1*  1*    3    3  / IKRWR FOR LAYER 3
/
```

8.3.108 IMKRVD – IMBIBITION RELATIVE PERMEABILITY END-POINTS VERSUS DEPTH FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the maximum imbibition oil, gas, and water relative permeability versus depth for the three phases. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the Hysteresis option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.109 IMPCVD – IMBIBITION MAXIMUM CAPILLARY PRESSURE VERSUS DEPTH FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the maximum imbibition gas-oil and water-oil capillary pressure values versus depth for when the end-point scaling option has been invoked by the ENDSCALE keyword in the RUNSPEC section and the HYSTER option on the SATOPTS keyword in the RUNSPEC section has been activated to invoke the Hysteresis option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.110 IMPORT – IMPORT GRID FILE DATA AT THE CURRENT POSITION

The IMPORT keyword informs the simulator to continue reading input data from the specified IMPORT file. When the end of the IMPORT file is reached, input data is read from the next keyword in the current file. Normally IMPORT files are generated by grid pre-processing software and the keyword allows for both formatted and unformatted (binary) files to be loaded.

See [IMPORT – Import Grid File Data at the Current Position](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.111 IMPTVD – IMBIBITION RELATIVE PERMEABILITY SATURATION END-POINTS VERSUS DEPTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the variation of the imbibition relative permeability saturation end-points (SWL, SWCR, etc.) for all three phases versus depth., for when the end-point scaling option has been invoked by the ENDSCALE keyword in the RUNSPEC section, and the HYSTER option on the SATOPTS keyword in the RUNSPEC section has been activated to invoke the Hysteresis option. This functionality is not supported in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.112 IMSPCVD – IMBIBITION CAPILLARY PRESSURE CONNATE SATURATIONS VERSUS DEPTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the imbibition capillary pressure gas and water connate saturations values versus depth for when the end-point scaling option has been invoked by the ENDSCALE keyword in the RUNSPEC section, and the HYSTER option on the SATOPTS keyword in the RUNSPEC section has been activated to invoke the Hysteresis option. This functionality is not supported in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.113 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file.

See [INCLUDE – Load Another Data File at the Current Position](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.114 INTPC – ACTIVATE DUAL POROSITY INTEGRATED CAPILLARY PRESSURE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The INTPC keyword activates the integrated capillary pressure option for the oil, gas or both phases, for when a Dual Porosity model has been activated by either the DUALPORO or DUALPERM keywords in the RUNSPEC section. In addition, the keyword can only be used if the Gravity Drainage option has been specified by either the GRAVDR or GRAVDRM in the RUNSPEC section. Basically, activating this feature results in the simulator adjusting the capillary pressure curves by integrating the matrix capillary pressure curves over the matrix block height to calculate the average saturation.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.115 IONXROCK - DEFINE ION EXCHANGE CONSTANT BY SATURATION TABLE REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The IONXROCK keyword activates ion exchange and defines the ion exchange constant by saturation table regions, for when the brine phase has been activated by the BRINE keyword and the Multi-Component Brine model, that allows for the water phase to have multiple water salinities, has been activated by the ECLMC keyword. Both keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.116 IONXSURF - DEFINE SURFACTANT ION EXCHANGE CONSTANT BY SATURATION TABLE REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The IONXROCK keyword activates ion exchange on surfactant micellae⁹⁷ and defines the ion exchange constant by surfactant equivalent molecular weight for saturation table regions, for when the brine and surfactant phases has been activated by the BRINE and SURFACT keywords, and the Multi-Component Brine model, that allows for the water phase to have multiple water salinities, has been activated by the ECLMC keyword. All three keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

⁹⁷ Particle of colloidal dimensions that exists in equilibrium with the molecules or ions in solution from which it is formed. A micella or micelle (plural micellae or micelles, respectively) is an aggregate (or supramolecular assembly) of surfactant molecules dispersed in a liquid colloid. A typical micella in aqueous solution forms an aggregate with the hydrophilic "head" regions in contact with surrounding solvent, sequestering the hydrophobic single-tail regions in the micella centre (<https://en.wikipedia.org/wiki/Micelle>).

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.117 IPCG – END-POINT SCALING OF GRID CELL GAS CAPILLARY PRESSURE (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

IPCG defines the maximum imbibition gas-oil capillary pressure values for all the cells in the model via an array. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the hysteresis option. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	IPCG	IPCG is an array of positive real numbers assigning the maximum imbibition gas capillary pressure values for each cell in the model. Repeat counts may be used,for example 30*100.0.			None
		psia	bars	atm	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 8.43: IPCG Keyword Description

The capillary pressure for a grid block is scaled by:

$$P_c = P_{c_{TABLE}} \left(\frac{IPCG}{P_{c_{TABLE-MAX}}} \right) \quad (8.7)$$

Where:

- P_c = the resulting imbibition gas-oil capillary pressure for a grid cell.
- IPCG = the maximum capillary pressure from the IPCG array for a given cell.
- $P_{c_{TABLE}}$ = the capillary pressure in the inhibition capillary pressure table allocated to the grid block.
- $P_{c_{TABLE-MAX}}$ = the maximum capillary pressure in the inhibition capillary pressure table allocated to the grid block at $S_g = 1 - S_{wco}$.

See also the PCG keyword for the equivalent drainage functionality.

Example

```
--
--      DEFINE GRID BLOCK IPCG DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
IPCG
      100*50.0  100*75.0  100*125.0 /
```

The above example defines the IPCG for 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.118 IPCW – END-POINT SCALING OF GRID CELL WATER CAPILLARY PRESSURE (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

IPCW defines the maximum imbibition water-oil or water-gas capillary pressure values for all the cells in the model via an array. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the HYSSTER option on the SATOPTS keyword in the RUNSPEC section has to be activated to invoke the hysteresis option. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	IPCW	IPCW is an array of positive real numbers assigning the maximum imbibition water capillary pressure values for each cell in the model. Repeat counts may be used,for example 30*100.0.			None
		psia	bars	atm	

Notes:

1)

The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2)

The keyword is terminated by a “/”.

Table 8.44: IPCW Keyword Description

The capillary pressure for a grid block is scaled by:

$$P_c = P_{c_{TABLE}} \left(\frac{IPCW}{P_{c_{TABLE-MAX}}} \right) \quad (8.8)$$

Where:

- P_c = the resulting imbibition water capillary pressure for a grid cell.
- IPCW = the maximum capillary pressure from the IPCW array for a given cell.
- $P_{c_{TABLE}}$ = the capillary pressure in the inhibition capillary pressure table allocated to the grid block.
- $P_{c_{TABLE-MAX}}$ = the maximum capillary pressure in the inhibition capillary pressure table allocated to the grid block (that is at the connate water saturation).

See also the PCW keyword for the equivalent drainage functionality.

Example

```
--
--      DEFINE GRID BLOCK IPCW DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
IPCW      100*50.0  100*75.0  100*125.0  /
```

The above example defines the IPCW for 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.119 ISGCR – END-POINT SCALING OF GRID CELL CRITICAL GAS SATURATION (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISGCR defines the imbibition critical gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The critical gas saturation is defined as the maximum gas saturation for which the gas relative permeability is zero in a two-phase relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISGCR	ISGCR is an array of real numbers assigning the critical gas saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.03			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the critical gas saturation used with the end-point scaling option. If directional end-point scaling has been activated then the ISGCRX± , ISGCRX± and ISGCRX± series of keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.45: ISGCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISGCRX, ISGCRY and ISGCRZ instead of ISGCR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISGCRX-, ISGCRY-, ISGCRZ- and ISGCRZ-, instead of the ISGCR keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT ISGCR DATA FOR CELLS (NX x NY x NZ = 300)
ISGCR      300*0.050 /
```

The above example defines a constant critical gas saturation of 0.05 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.120 ISGL – END-POINT SCALING OF GRID CELL CONNATE GAS SATURATION (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISGL defines the imbibition connate gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The connate gas saturation is defined as the minimum gas saturation in a two-phase gas relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISGL	ISGL is an array of real numbers assigning the connate gas saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.03 dimensionless			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a “/”. 3) Note this the directional independent version of the connate gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the ISGLX±, ISGLY± and ISGZ± series of keywords should be used. <u>The directional form of the keyword is recognized, but is not supported by OPM Flow.</u>					

Table 8.46: ISGL Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISGLX, ISGLY and ISGLZ instead of ISGL. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISGLX-, ISGLY-, ISGLZ- and ISGLZ-, instead of the ISGL keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT ISGL DATA FOR ALL CELLS (NX x NY x NZ = 300)
ISGL
      300*0.030 /
```

The above example defines a constant connate gas saturation of 0.03 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.121 ISGLPC – END-POINT SCALING OF GRID CELL CAPILLARY PRESSURE CONNATE GAS SATURATION (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISGLPC defines the imbibition connate gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The connate gas saturation is defined as the minimum gas saturation in a two-phase gas relative permeability table. The keyword only applies the scaling to the imbibition capillary pressures tables, unlike the ISGL keyword that applies the scaling to both the capillary pressure and relative permeability tables. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISGLPC	IGLPC is an array of real numbers assigning the connate gas saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. If IGLPC is omitted from the input deck the values will be defaulted to those on the ISGL series of keywords. If the ISGL series of keywords are missing from the input deck then the values are taken from the cell allocated capillary pressure table. Repeat counts may be used, for example 30*0.03			Taken from SGL or from the cell allocated capillary pressure table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the connate gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the ISGLX± , ISGLY± and ISGZ± series of keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.47: ISGLPC Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISGLX, ISGLY and ISGLZ instead of ISGL or ISGLPC. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISGLX-, ISGLY-, ISGLZ and ISGLZ-, instead of the ISGL or ISGLPC keywords.

Missing Some Functionality - Use with Caution.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--  
--      DEFINE GRID BLOCK END-POINT ISGLPC DATA FOR ALL CELLS  
-      (NX x NY x NZ = 300)  
ISGLPC      300*0.030      /
```

The above example defines a constant connate gas saturation of 0.03 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.122 ISGU – END-POINT SCALING OF GRID CELL MAXIMUM GAS SATURATION (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISGU defines the imbibition maximum gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The maximum gas saturation is defined as the maximum gas saturation in a two-phase gas relative permeability table. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISGU	ISGU is an array of real numbers assigning the maximum gas saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.70			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the maximum gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the ISGUX± , ISGUY± and ISGUZ± series of keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.48: ISGU Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISGUX, ISGUY and ISGUZ instead of ISGU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISGUX-, ISGUY-, ISGUZ- and ISGUZ-, instead of the ISGU keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT ISGU DATA FOR ALL CELLS (NX x NY x NZ = 300)
ISGU
      300*0.700 /
```

The above example defines a constant connate gas saturation of 0.70 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.123 ISOGCR – END-POINT SCALING OF GRID CELL CRITICAL OIL SATURATION TO GAS (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISOGCR defines the imbibition critical oil saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The critical oil saturation with respect to gas is defined as the maximum oil saturation for which the oil relative permeability is zero in a two-phase gas-oil relative permeability table. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISOGCR	ISOGCR is an array of real numbers assigning the critical oil saturation with respect to gas values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.30			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the critical gas saturation used with the end-point scaling option. If directional end-point scaling has been activated then the ISOGCRX±, ISOGCRY± and ISOGCRZ± series of keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.49: ISOGCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISOGCRX, ISOGCRY and ISOGCRZ instead of ISOGCR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISOGCRX-, ISOGCRY-, ISOGCRZ- and ISOGCRZ-, instead of the ISOGCR keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--  
--      DEFINE GRID BLOCK END-POINT ISOGCR DATA FOR ALL CELLS  
--      (NX x NY x NZ = 300)  
--  
ISOGCR  
      300*0.200 /
```

The above example defines a constant critical gas saturation of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.124 ISOWCR – END-POINT SCALING OF GRID CELL CRITICAL OIL SATURATION TO WATER (IMBIB.)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISOWCR defines the imbibition critical oil saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The critical oil saturation with respect to water is defined as the maximum oil saturation for which the oil relative permeability is zero in a two-phase oil-water relative permeability table. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	ISOWCR	ISOWCR is an array of real numbers assigning the critical oil saturation with respect to water values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.30			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the critical gas saturation used with the end-point scaling option. If directional end-point scaling has been activated then the ISOWCRX±, ISOWCRY± and ISOWCRZ± series of keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.50: ISOWCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISOWCRX, ISOWCRY and ISOWCRZ instead of ISOWCR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISOWCRX-, ISOWCRY-, ISOWCRZ- and ISOWCRZ-, instead of the ISOWCR keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--  
--      DEFINE GRID BLOCK END-POINT ISOWCR DATA FOR ALL CELLS  
--      (NX x NY x NZ = 300)  
--  
ISOWCR  
      300*0.200 /
```

The above example defines a constant critical gas saturation of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section

8.3.125 ISWCR – END-POINT SCALING OF GRID CELL CRITICAL WATER SATURATION (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISWCR defines the imbibition critical water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The critical water saturation is defined as the maximum water saturation for which the water relative permeability is zero in a two-phase relative permeability table. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISWCR	ISWCR is an array of real numbers assigning the critical water saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.20			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the critical water saturation used with the end-point scaling option. If directional end-point scaling has been activated then the ISWCRX± , ISWCYR± and ISWZR± series of keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.51: ISWCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWCRX, ISWCRY and ISWCRZ instead of ISWCR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISWCRX-, ISWCRY-, ISWCRZ- and ISWCRZ-, instead of the ISWCR keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT ISWCR DATA FOR ALL CELLS
--      (NX x NY x NZ = 300)
--
ISWCR
  300*0.200 /
```

The above example defines a constant critical water saturation of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.126 ISWL – END-POINT SCALING OF GRID CELL CONNATE WATER SATURATION (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISWL defines the imbibition connate water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The connate water saturation is defined as the minimum water saturation in a two-phase water relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISWL	ISWL is an array of real numbers assigning the connate water saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.15			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: <div>1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.</div> <div>2) The keyword is terminated by a “/”.</div> <div>3) Note this the directional independent version of the connate gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the ISWLX± , ISWLY± and ISWZ± series of keywords should be used. <u>The directional form of the keyword is recognized, but is not supported by OPM Flow.</u></div>					

Table 8.52: ISWL Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWLX, ISWLY and ISWLZ instead of ISWL. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISWLX-, ISWLY-, ISWLZ and ISWLZ-, instead of the ISWL keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT ISWL DATA FOR ALL CELLS (NX x NY x NZ = 300)
--
ISWL
      300*0.150
/
```

The above example defines a constant connate water saturation of 0.15 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.127 ISWLPC – END-POINT SCALING GRID CELL CAPILLARY PRESSURE CONNATE WATER SATURATIONS (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISWLPC defines the imbibition connate water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE in the RUNSPEC section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The connate water saturation is defined as the minimum water saturation in a two-phase water relative permeability table. The keyword only applies the scaling to the imbibition capillary pressures tables, unlike the ISWL keyword that applies the scaling to both the capillary pressure and relative permeability tables. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISWLPC	<p>ISWLPC is an array of real numbers assigning the connate water saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword.</p> <p>If ISWLPC is omitted from the input deck the values will be defaulted to those on the ISGL series of keywords. If the ISWL series of keywords are missing from the input deck then the values are taken from the cell allocated capillary pressure table.</p> <p>Repeat counts may be used, for example 30*0.15</p>			Taken from SWL or from the cell allocated capillary pressure table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the connate gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the ISWLX± , ISWLY± and ISWZ± series of keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.53: ISWLPC Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWLX, ISWLY and ISWLZ instead of ISWL or ISWLPC. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISWLX-, ISWLX-, ISWLY, ISWLY-, ISWLZ and ISWLZ-, instead of the ISWL or ISWLPC keywords.

Missing Some Functionality - Use with Caution.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--  
--      DEFINE GRID BLOCK END-POINT ISWLPC DATA FOR ALL CELLS (  
--      NX x NY x NZ = 300)  
--  
ISWLPC      300*0.150      /
```

The above example defines a constant connate water saturation of 0.15 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.128 ISWU – END-POINT SCALING OF GRID CELL MAXIMUM WATER SATURATION (IMBIBITION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ISWU defines the imbibition maximum water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the **ENDSCALE** in the **RUNSPEC** section and the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section. The maximum water saturation is defined as the maximum water saturation in a two-phase water relative permeability table. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	ISWU	ISWU is an array of real numbers assigning the maximum water saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.70			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the maximum water saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the ISWUX± , ISWUY± and ISWUZ± series of keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.54: ISWU Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the ISWL, ISWCR, ISWU, ISGL, ISGCR, ISGU, ISOWCR, and ISOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is ISWUX, ISWUY and ISWUZ instead of ISWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is ISWUX-, ISWUY-, ISWUZ- and ISWUZ-, instead of the ISWU keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT ISWU DATA FOR ALL CELLS (NX x NY x NZ = 300)
--
ISWU      300*0.700 /
```

The above example defines a constant connate gas saturation of 0.70 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.129 KRG – END-POINT SCALING OF GRID CELL KRG(SGU) (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

KRG defines the scaling parameter at the maximum drainage gas relative permeability value (SGU), normally SGU is equal to $1.0 - S_{wc}$, for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	KRG	KRG is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling KRG values for each cell in the model.			Taken from cell allocated relative permeability table.
		Repeat counts may be used, for example 50*0.400. dimensionless			
		dimensionless	dimensionless	dimensionless	
Notes: <div><div>1)</div><div>The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.</div></div> <div><div>2)</div><div>The keyword is terminated by a “/”.</div></div> <div><div>3)</div><div>Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the KRGX±, KRGY± and KRGZ± series of the keywords should be used. <u>The directional form of the keyword is recognized, but is not supported by OPM Flow.</u></div></div>					

Table 8.55: KRG Keyword Description

For the two point scaling option and for the KRGR gas relative permeability array NOT present in the input deck the k_{rg} value for a grid block is scaled by:

$$k_{rg} = k_{rg\,TABLE} \left(\frac{KRG}{k_{rg\,TABLE-MAX}} \right) \quad (8.9)$$

Where:

- k_{rg} = the resulting k_{rg} value for a grid cell.
- KRG = the scaling gas relative permeability value from the KRG array for a given cell.
- $k_{rg\,TABLE}$ = the gas relative permeability from a grid block's gas-oil table at the grid blocks gas saturation.
- $k_{rg\,TABLE-MAX}$ = the maximum gas relative permeability from a grid block's gas-oil table, that is at the connate water saturation (S_{wc}).

If the KRGR keyword is present in the input deck then the scaling matches the relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Phases Present	Critical Saturation
1	Gas-Oil	$S_{critical} = 1.0 - SOGCR - SWL$
2	Gas-Oil-Water	$S_{critical} = 1.0 - SOGCR - SWL$
3	Gas-Water	$S_{critical} = 1.0 - SWCR$

Table 8.56: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWUX, SWUY and SWUZ instead of SWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWUX-, SWUY-, SWUZ- and SWUZ-, instead of the SWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the KRG, KRGR, KRO, KRORG, KRORW, KRW and KRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is KRGX, KRGY and KRGZ instead of KRG. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is KRGX-, KRGY-, KRGZ- and KRGZ-, instead of the KRG keyword.

If the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section, then the equivalent imbibition arrays suffixed with the letter I, for example IKRG, can be used to define the KRG for the relative permeability imbibition tables.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one KRG is set equal to 0.550, for layer two KRG equals 0.575, and for layer three KRG equals 0.600.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      1*  1*   1*  1*   1   3
--
--      SET KRG VALUES FOR THREE LAYERS IN THE MODEL
--
KRG      1000*0.555  1000*0.575  1000.0.600
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```


The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      KRG          0.5550        1*  1*   1*  1*   1   1  / KRG FOR LAYER 1
      KRG          0.5750        1*  1*   1*  1*   2   2  / KRG FOR LAYER 2
      KRG          0.6000        1*  1*   1*  1*   3   3  / KRG FOR LAYER 3
/
```

8.3.130 KRGR – END-POINT SCALING OF GRID CELL KRGR(1-SOGCR) (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

KRGR defines the scaling parameter at the relative permeability of gas at residual oil saturation (1 – SOGCR), or critical water saturation in a gas-water run (S_{wc}), for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	KRGR	KRGR is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling KRGR values for each cell in the model. In addition, for a given grid block KGRG should be less than KRG. Repeat counts may be used, for example 50*0.400.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the KRGRX± , KRGRY± and KRGRZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.57: KRGR Keyword Description

When the KRGR keyword is present in the input deck then the scaling matches the relative permeability at the critical saturation of the displacing phase (oil or water).

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Phases Present	Critical Saturation
1	Gas-Oil	$S_{critical} = 1.0 - SOGCR - SWL$
2	Gas-Oil-Water	$S_{critical} = 1.0 - SOGCR - SWL$
3	Gas-Water	$S_{critical} = 1.0 - SWCR$

Table 8.58: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWUX, SWUY and SWUZ instead of SWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

the aforementioned arrays should be used, that is SWUX, SWUX-, SWUY, SWUY-, SWUZ and SWUZ-, instead of the SWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the KRG, KRGR, KRO, KRORG, KRORW, KRW and KRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is KRGRX, KRGRY and KRGRZ instead of KRGR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is KRGRX-, KRGRY-, KRGRZ- and KRGRZ-, instead of the KRGR keyword.

If the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section, then the equivalent imbibition arrays suffixed with the letter I, for example IKRGR, can be used to define the KRG for the relative permeability imbibition tables.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one KRRG is set equal to 0.500, for layer two KRGR equals 0.570, and for layer three KRGR equals 0.580.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX
--      1*  1*   1*  1*   1   3
--                               / DEFINE BOX AREA
--
--      SET KRGR VALUES FOR THREE LAYERS IN THE MODEL
--
--      KRGR
--      1000*0.500  1000*0.570  1000.0.580
--                               /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
--      ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
EQUALS
--      KRGR      0.5500      1*  1*   1*  1*   1   1 / KRGR FOR LAYER 1
--      KRGR      0.5700      1*  1*   1*  1*   2   2 / KRGR FOR LAYER 2
--      KRGR      0.5800      1*  1*   1*  1*   3   3 / KRGR FOR LAYER 3
--
--      /
```

8.3.131 KRO – END-POINT SCALING OF GRID CELL KRO(SWL) (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

KRO defines the scaling parameter for the drainage oil relative permeability value at the connate water saturation (SWL), for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	KRO	KRO is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling KRO values for each cell in the model. Repeat counts may be used, for example 50*0.500.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the KROX±, KROY± and KROZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.59: KRO Keyword Description

For the two point scaling option and for the KRORW or KRORG oil relative permeability arrays NOT being present in the input deck the k_{ro} value for a grid block is scaled by:

$$k_{ro} = k_{ro\text{ TABLE}} \left(\frac{KRO}{k_{ro\text{ TABLE-MAX}}} \right) \quad (8.10)$$

Where:

- k_{ro} = the resulting k_{ro} value for a grid cell.
- KRO = the scaling oil relative permeability value from the KRO array for a given cell.
- $k_{ro\text{ TABLE}}$ = the oil relative permeability from a grid block's oil relative permeability table at the grid blocks oil saturation.
- $k_{ro\text{ TABLE-MAX}}$ = the maximum oil relative permeability from a grid block's oil relative table, that is at the critical water saturation (S_{wcr}).

If the KRORW or KRORG keywords are present in the input deck then the scaling matches the relative permeability at the critical saturation of the displacing phase.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Keywords Present	Critical Saturation
1	KRORW	$S_{critical} = 1.0 - SWCR - SGL$
2	KRORG	$S_{critical} = 1.0 - SGCR - SWL$

Table 8.60: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWUX, SWUY and SWUZ instead of SWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWUX-, SWUY-, SWUZ- and SWUZ-, instead of the SWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the KRG, KRGR, KRO, KRORG, KRORW, KRW and KRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is KROX, KROY and KROZ instead of KRO. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is KROX-, KROY-, KROZ- and KROZ-, instead of the KRO keyword.

If the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section, then the equivalent imbibition arrays suffixed with the letter I, for example IKRO, can be used to define the KRO for the relative permeability imbibition tables.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one KRO is set equal to 0.850, for layer two KRO equals 0.875, and for layer three KRO equals 0.900.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2  J1  J2  K1  K2
BOX
--      1*  1*  1*  1*  1   3
--                                     / DEFINE BOX AREA
--
--      SET KRO VALUES FOR THREE LAYERS IN THE MODEL
--
--      KRO
--      1000*0.855  1000*0.875  1000.0.900
--                                     /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
--      ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      KRO      0.8550      1*  1*  1*  1*    1  1  / KRO FOR LAYER 1
      KOG      0.8750      1*  1*  1*  1*    2  2  / KRO FOR LAYER 2
      KRO      0.9000      1*  1*  1*  1*    3  3  / KRO FOR LAYER 3
/
```

8.3.132 KRORG – END-POINT SCALING OF GRID CELL $K_{ro}(S_{GCR})$ (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

KRORG defines the scaling parameter for the drainage relative permeability of oil at the critical gas saturation (S_{GCR}), for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	KRORG	KRORG is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling KRORG values for each cell in the model. Repeat counts may be used, for example 50*0.850.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the $NX \times NY \times NZ$ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a "/".
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the $KRORGX_{\pm}$, $KRORGY_{\pm}$ and $KRORGZ_{\pm}$ series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.61: KRORG Keyword Description

When the KRORG keyword is present in the input deck then the scaling matches the relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Keywords Present	Critical Saturation
1	KRORW	$S_{critical} = 1.0 - SWCR - SGL$
2	KRORG	$S_{critical} = 1.0 - SGCR - SWL$

Table 8.62: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWUX, SWUY and SWUZ instead of SWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWUX-, SWUY-, SWUZ and SWUZ-, instead of the SWU keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the KRG, KRGR, KRORG, KRORGRG, KRORGRW, KRW and KRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is KRORGX, KRORGY and KRORGZ instead of KRORG, There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is KRORGX-, KRORGY-, KRORGZ- and KRORGZ-, instead of the KRORG keyword.

If the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section, then the equivalent imbibition arrays suffixed with the letter I, for example IKRORG, can be used to define the KRORG for the relative permeability imbibition tables.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one KRORG is set equal to 0.750, for layer two KRORG equals 0.775, and for layer three KRORG equals 0.800.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
BOX
      1*  1*    1*  1*    1    3
--
--      SET KRORG VALUES FOR THREE LAYERS IN THE MODEL
--
KRORG
      1000*0.755  1000*0.775  1000.0.800
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY          CONSTANT          ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      KRORG           0.7550           1*  1*    1*  1*    1    1  / KRORG FOR LAYER 1
      KRORG           0.7750           1*  1*    1*  1*    2    2  / KRORG FOR LAYER 2
      KRORG           0.8000           1*  1*    1*  1*    3    3  / KRORG FOR LAYER 3
/
```


8.3.133 KRORW – END-POINT SCALING OF GRID CELL $K_{ro}(S_{wcr})$ (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

KRORW defines the scaling parameter for the drainage relative permeability of oil at the critical water saturation (S_{wcr}), for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The SCALECRS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	KRORW	KRORW is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling KRORW values for each cell in the model. Repeat counts may be used, for example 50*0.850			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the KRORWX±, KRORWY± and KRORWZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.63: KRORW Keyword Description

When the KRORW keyword is present in the input deck then the scaling matches the relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Keywords Present	Critical Saturation
1	KRORW	$S_{critical} = 1.0 - S_{wcr} - S_{GL}$
2	KRORG	$S_{critical} = 1.0 - S_{GCR} - S_{WL}$

Table 8.64: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, S_{wcr} , S_{wu} , SGL, SGCR, SGU, S_{owcr} , and SOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is $SWUX$, $SWUY$ and $SWUZ$ instead of SWU . There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is $SWUX$, $SWUX-$, $SWUY$, $SWUY-$, $SWUZ$ and $SWUZ-$, instead of the SWU keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the KRG, KRGR, KRORW, KRORWRG, KRORWRW, KRW and KRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is KRORWX, KRORWY and KRORWZ instead of KRORW, There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is KRORWX-, KRORWY-, KRORWZ- and KRORWZ-, instead of the KRORW keyword.

If the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section, then the equivalent imbibition arrays suffixed with the letter I, for example IKRORW, can be used to define the KRORW for the relative permeability imbibition tables.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one KRORW is set equal to 0.750, for layer two KRORW equals 0.775, and for layer three KRORW equals 0.800.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      1*  1*   1*  1*   1   3
--
--      SET KRORW VALUES FOR THREE LAYERS IN THE MODEL
--
KRORW    1000*0.755  1000*0.775  1000.0.800
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY          CONSTANT          ----- BOX -----
--      I1  I2   J1  J2   K1  K2
EQUALS
KRORW    0.7550      1*  1*   1*  1*   1   1  / KRORW FOR LAYER 1
KRORW    0.7750      1*  1*   1*  1*   2   2  / KRORW FOR LAYER 2
KRORW    0.8000      1*  1*   1*  1*   3   3  / KRORW FOR LAYER 3
/
```

8.3.134 KRW – END-POINT SCALING OF GRID CELL KRW(S_w =1.0) (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

KRW defines the scaling parameter at the maximum drainage water relative permeability value (SWU), that is for $S_w = 1.0$, for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	KRW	KRW is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling KRW values for each cell in the model. Repeat counts may be used, for example 50*1.000.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the KRWX±, KRWY± and KRWZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.65: KRW Keyword Description

For the two point scaling option and for the KRWR water relative permeability array NOT present in the input deck the k_{rw} value for a grid block is scaled by:

$$k_{rw} = k_{rw\text{TABLE}} \left(\frac{KRW}{k_{rw\text{TABLE-MAX}}} \right) \quad (8.11)$$

Where:

- k_{rw} = the resulting KRW value for a grid cell.
- KRW = the scaling water relative permeability value from the KRW array for a given cell.
- $k_{rw\text{TABLE}}$ = the water relative permeability from a grid block's oil relative permeability table at the grid blocks water saturation.
- $k_{rw\text{TABLE-MAX}}$ = the maximum water relative permeability from a grid block's water relative table, that is at the maximum water saturation.

If the KRWR keyword is present in the input deck then the scaling matches the relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No	Phases Present	Critical Saturation
1	Gas-Oil	$S_{critical} = 1.0 - SOWCR - SGL$
2	Gas-Oil-Water	$S_{critical} = 1.0 - SOWCR - SGL$
3	Gas-Water	$S_{critical} = 1.0 - SGCR$

Table 8.66: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWUX, SWUY and SWUZ instead of SWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWUX-, SWUY-, SWUZ and SWUZ-, instead of the SWU keyword.

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the KRG, KRGR, KRW, KRORG, KRORW, KRW and KRWR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is KRWX, KRWY and KRWZ instead of KRW. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is KRWX-, KRWY-, KRWZ and KRWZ-, instead of the KRW keyword.

If the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section, then the equivalent imbibition arrays suffixed with the letter I, for example IKRW, can be used to define the KRW for the relative permeability imbibition tables.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one KRW is set equal to 0.850, for layer two KRW equals 0.875, and for layer three KRW equals 0.900.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      1*  1*   1*  1*   1   3
--
--      SET KRW VALUES FOR THREE LAYERS IN THE MODEL
--
--      KRW
--      1000*0.855  1000*0.875  1000.0.900
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
--      ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
EQUALS
--      KRW          0.8550      1*  1*   1*  1*   1   1 / KRW FOR LAYER 1
--      KRW          0.8750      1*  1*   1*  1*   2   2 / KRW FOR LAYER 2
--      KRW          0.9000      1*  1*   1*  1*   3   3 / KRW FOR LAYER 3
--
--      /
```

8.3.135 KRWR – END-POINT SCALING OF GRID CELL KRWR(SOWCR) (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

KRWR defines the scaling parameter at the drainage critical oil to water saturation value (SOWCR), for the drainage water relative permeability curve, for all the cells in the model via an array. The ENDSALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The SCALCERS keyword in the PROPS section defines the options used in the re-scaling process, the options are two point scaling and three point scaling.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	KRWR	KRWR is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling KRWR values for each cell in the model. Repeat counts may be used, for example 50*1.000.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.
- 3) Note this the directional independent version of the keyword used with the end-point scaling option. If directional end-point scaling has been activated then the KRWRX±, KRWRY± and KRWRZ± series of the keywords should be used. The directional form of the keyword is recognized, but is not supported by OPM Flow.

Table 8.67: KRWR Keyword Description

When the KRWR keyword is present in the input deck then the scaling matches the relative permeability at the critical saturation of the displacing phase.

If three point scaling option has been selected via the SCALECRS keyword in the PROPS section the critical displacing phase is defined as:

No	Phases Present	Critical Saturation
1	Gas-Oil	$S_{critical} = 1.0 - SOWCR - SGL$
2	Gas-Oil-Water	$S_{critical} = 1.0 - SOWCR - SGL$
3	Gas-Water	$S_{critical} = 1.0 - SGCR$

Table 8.68: Critical Displacement Relationships

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWUX, SWUY and SWUZ instead of SWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWUX-, SWUY-, SWUZ- and SWUZ-, instead of the SWU keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

End-point scaling also allows the entered relative permeability functions to be scale on the relative permeability values using the KRG, KRGR, KRWR, KRORG, KRORW, KRWR and KRWRR relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is KRWRX, KRWRY and KRWRZ instead of KRWR, There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is KRWRX-, KRWRY-, KRWRZ- and KRWRZ-, instead of the KRWR keyword.

If the hysteresis model option has been activated on the SATOPTS keyword in the RUNSPEC section, then the equivalent imbibition arrays suffixed with the letter I, for example IKRWR, can be used to define the KRWR for the relative permeability imbibition tables.

Examples

The first example defines an input box for the whole grid and for layers one to three, for layer one KRWR is set equal to 0.750, for layer two KRWR equals 0.775, and for layer three KRWR equals 0.800.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
BOX
      1*  1*    1*  1*    1    3
--
--      SET KRWR VALUES FOR THREE LAYERS IN THE MODEL
--
--      KRWR
--      1000*0.755  1000*0.775  1000.0.800
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
--      ENDBOX
```

The next example does exactly the same thing using the EQUALS keyword instead.

```
--
--      ARRAY          CONSTANT          ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      KRWR            0.7550          1*  1*    1*  1*    1    1  / KRWR FOR LAYER 1
      KRWR            0.7750          1*  1*    1*  1*    2    2  / KRWR FOR LAYER 2
      KRWR            0.8000          1*  1*    1*  1*    3    3  / KRWR FOR LAYER 3
/
```

8.3.136 LANGMPL – DEFINE LANGMUIR PRESSURE GRID CELL MULTIPLIER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, LANGMPL, defines the coal bed methane Langmuir Adsorption⁹⁸ pressure multiplier for each grid block, for when the Coal Bed Methane option has been activated via the COAL keyword in the RUNSPEC section. The keyword applies the multiplier to the pressure values in a cell's allocated Langmuir table when calculating a cell's adsorption capacity. See the LANGMUIR keyword in the PROPS section for specifying the Langmuir tables for the model.

Note that if the Dual Porosity model has been activated by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section, then LANGMPL applies to only the matrix grid block.

This keyword is ignored by OPM Flow and has no effect on the simulation.

⁹⁸ Langmuir, Irving (June 1918). "The Adsorption of Gases on Plane Surface of Glass, Mica and Platinum". *The Research Laboratory of the General Electric Company*. 40 (9): 1361–1402. doi:10.1021/ja02242a004

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.137 LANGMUIR – LANGMUIR ADSORPTION ISOTHERM TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LANGMUIR keyword defines the coal bed methane Langmuir Adsorption Isotherms⁹⁹ tables, for when the Coal Bed Methane option has been activated via the COAL keyword in the RUNSPEC section. See the COALNUM keyword in the GRID section for allocating the Langmuir tables to the grid blocks and also the LANGMPL keyword in the PROPS section for re-scaling the pressure values in the tables that are allocated to a cell.

This keyword is ignored by OPM Flow and has no effect on the simulation.

⁹⁹ Langmuir, Irving (June 1918). "The Adsorption of Gases on Plane Surface of Glass, Mica and Platinum". *The Research Laboratory of the General Electric Company*. 40 (9): 1361–1402. doi:10.1021/ja02242a004

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.138 LANGSOLV – LANGMUIR ADSORPTION ISOTHERM SOLVENT TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LANGMUIR keyword defines the coal bed methane Langmuir Adsorption Isotherms¹⁰⁰ Solvent tables, for when the Coal Bed Methane option has been activated via the COAL keyword and the Solvent phase has been declared by the SOLVENT keyword in the RUNSPEC section. See the COALNUM keyword in the GRID section for allocating the Langmuir solvent tables to the grid blocks, and also the LANGMUIR keyword in the PROPS section for defining the Langmuir Adsorption Isotherm tables. Keywords COALADS and COALPP, also in the PROPS section, are used to specify the relative adsorption data in runs containing the solvent phase.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁰⁰ Langmuir, Irving (June 1918). "The Adsorption of Gases on Plane Surface of Glass, Mica and Platinum". *The Research Laboratory of the General Electric Company*. 40 (9): 1361–1402. doi:10.1021/ja02242a004

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.139 LCUNIT – DEFINE LINEAR COMBINATION RATE AND VOLUME UNITS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LCUNIT keyword defines the units for the Linear Combination facility which allows for a linear combination of oil, gas and water rates and volumes to be used as combination targets and constraints in controlling group and well production and injection data. See also the LINCOM in the SCHEDULE section that defines the actual linear combination equation.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.140 LKRO – END-POINT SCALING OF GRID CELL $K_{ro}(S_{WL})$ (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LKRO defines the scaling parameter for the oil relative permeability value at the connate water saturation (S_{WL}), for all the cells in the model via an array, for when the Low Salt option and the End-point Scaling options has been activated by the LOWSALT and the ENDSALE keywords in the RUNSPEC section. The data is used to scale the oil relative permeability in the low salinity oil wet oil relative permeability saturation tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.141 LKRORG – END-POINT SCALING OF GRID CELL $K_{ro}(S_{GCR})$ (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LKRORG defines the scaling parameter for the relative permeability of oil at the critical gas saturation (S_{GCR}), for all the cells in the model via an array, for when the Low Salt option and the End-point Scaling options has been activated by the LOWSALT and the ENDSALE keywords in the RUNSPEC section. The data is used to scale the oil relative permeability in the low salinity oil wet oil relative permeability saturation tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.142 LKRORW – END-POINT SCALING OF GRID CELL $K_{ro}(S_{wcr})$ (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LKRORW defines the scaling parameter for the relative permeability of oil at the critical water saturation (S_{wcr}), for all the cells in the model via an array, for when the Low Salt option and the End-point Scaling options has been activated by the LOWSALT and the ENDSALE keywords in the RUNSPEC section. The data is used to scale the oil relative permeability in the low salinity oil wet oil relative permeability saturation tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.143 LKRW – END-POINT SCALING OF GRID CELL $K_{rw}(S_w = 1.0)$ (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LKRW defines the scaling parameter at the maximum oil relative permeability value (S_{wU}), that is for $S_w = 1.0$, for all the cells in the model via an array, for when the Low Salt option and the End-point Scaling options has been activated by the LOWSALT and the ENDSALE keywords in the RUNSPEC section. The data is used to scale the water relative permeability in the low salinity oil wet water relative permeability saturation tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.144 LKRWR – END-POINT SCALING OF GRID CELL KRWR(SOWCR) (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LKRWR defines the scaling parameter at the maximum oil relative permeability value (SWU), that is for $S_w = 1.0$, for all the cells in the model via an array, for when the Low Salt option and the End-point Scaling options has been activated by the LOWSALT and the ENDSALE keywords in the RUNSPEC section. The data is used to scale the water relative permeability in the low salinity oil wet water relative permeability saturation tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.145 LPCW – END-POINT SCALING OF GRID CELL WATER CAPILLARY PRESSURE (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LPCW defines the maximum oil-water pressure values for all the cells in the model via an array, for when the Low Salt option and the End-point Scaling options has been activated by the LOWSALT and the ENDSCALE keywords in the RUNSPEC section. The keyword re-scales the oil-water capillary pressure in the low salinity oil wet capillary saturation tables from a cell's assigned saturation function by the grid block's LPCW value.

The capillary pressure for a grid block is scaled by:

$$P_c = P_{c_{TABLE}} \left(\frac{LPCW}{P_{c_{TABLE-MAX}}} \right) \quad (8.12)$$

Where:

- P_c = the resulting low salt oil wet water capillary pressure for a grid cell.
- LPCW = the maximum capillary pressure from the LPCW array for a given cell.
- $P_{c_{TABLE}}$ = the capillary pressure in the low salt oil wet capillary pressure table allocated to the grid block.
- $P_{c_{TABLE-MAX}}$ = the maximum capillary pressure in the low salt oil capillary pressure table allocated to the grid block (that is at the connate water saturation).

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.146 LSALTFNC - DEFINE LOW SALT WEIGHTING FACTORS VERSUS SALT CONCENTRATION FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LSALTFNC keyword defines the low salt weighting factors versus salt concentration functions for when the Low Salt option has been activated by the LOWSALT keyword in the RUNSPEC section. The tables are used to modify the oil and water relative permeability saturation end-points, as well as the water-oil capillary pressure end-points, for different salt concentrations within a grid cell.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.147 LSOGCR – END-POINT SCALING GRID CELL SOGCR (Low SALINITY AND Oil WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LSOGCR defines the critical oil saturation with respect to gas (“SOGCR”), for all the cells in the model via an array, for when the Low Salt option has been selected. The data is used to scale the oil saturation in the low salinity oil wet oil-gas relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.148 LSOWCR – END-POINT SCALING GRID CELL SOWCR (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LSOWCR defines the critical oil saturation with respect to water (“SOWCR”), for all the cells in the model via an array, for when the Low Salt option has been selected. The data is used to scale the oil saturation in the low salinity oil wet water-oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.149 LSWCR – END-POINT SCALING GRID CELL SWCR (Low SALINITY AND Oil WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LSWCR defines the critical water saturation (“SWCR”), for all the cells in the model via an array, for when the Low Salt option has been selected. The data is used to scale the water saturation in the low salinity oil wet water-oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.150 LSWL – END-POINT SCALING GRID CELL SWL (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LSWL defines the connate water saturation (“SWL”), for all the cells in the model via an array, for when the Low Salt option has been selected. The data is used to scale the water saturation in the low salinity oil wet water-oil relative permeability saturation tables, as well as the associated capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.151 LSWLPC – END-POINT SCALING GRID CELL SWLPC (Low SALINITY AND Oil WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LSWLPC defines the capillary pressure connate water saturation (“SWLPC”), for all the cells in the model via an array, for when the Low Salt option has been selected. The data is used to scale the water saturation in the low salinity oil wet water-oil capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section.

Note the keyword only applies the scaling to the capillary pressures tables, unlike the LSWL keyword that applies the scaling to both the capillary pressure and relative permeability tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.152 LSWU – END-POINT SCALING GRID CELL SWU (LOW SALINITY AND OIL WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LSWU defines the maximum water saturation(“SWU”), for all the cells in the model via an array, for when the Low Salt option has been selected. The data is used to scale the water saturation in the low salinity oil wet water-oil relative permeability saturation tables, as well as the associated capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.153 LWKRO – END-POINT SCALING OF GRID CELL K_{RO}(SWL) (LOW SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWKRO defines the scaling parameter for the oil relative permeability value at the connate water saturation (SWL), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil relative permeability in the low salinity water wet oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.154 LWKRORG – END-POINT SCALING OF GRID CELL KRO(SGCR) (LOW SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWKRORG defines the scaling parameter for the relative permeability of oil at the critical gas saturation (SGCR), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil relative permeability in the low salinity water wet oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.155 LWKRORW – END-POINT SCALING OF GRID CELL K_{ro}(S_{wcr}) (Low SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWKRORW defines the scaling parameter for the relative permeability of oil at the critical water saturation (S_{wcr}), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil relative permeability in the low salinity water wet oil relative permeability saturation tables. The ENDS_{SCALE} keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.156 LWKRW – END-POINT SCALING OF GRID CELL $K_{RW}(S_w = 1.0)$ (Low SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWKRW defines the scaling parameter at the maximum water relative permeability value (S_{wU}), that is for $S_w = 1.0$, for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water relative permeability in the low salinity water wet water relative permeability saturation tables. The **ENDSCALE** keyword in the **RUNSPEC** section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the **LOWSALT** keyword in the **RUNSPEC** section and the Surfactant Wettability option activated by the **SURFACT** or **SURFACTW** keywords, which are also in the **RUNSPEC** section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.157 LWKRWR – END-POINT SCALING OF GRID CELL KRWR($S_w=1.0$) (Low SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWKRWR defines the scaling parameter at the critical oil to water saturation value (SOWCR), for the water relative permeability curve, for all the cells in the model via an array, and for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water relative permeability in the low salinity water wet water relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.158 LWPCW – END-POINT SCALING OF GRID CELL WATER CAPILLARY PRESSURE (LOW SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWPCW defines the maximum water-oil pressure values for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The ENDSALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section. The keyword re-scales the oil-water capillary pressure in the low salinity water wet capillary saturation tables from the cell's assigned saturation function by the grid block's LWPCW value.

The capillary pressure for a grid block is scaled by:

$$P_c = P_{c_{TABLE}} \left(\frac{HWPCW}{P_{c_{TABLE-MAX}}} \right) \quad (8.13)$$

Where:

- P_c = the resulting high salinity water wet water capillary pressure for a grid cell.
- LWPCW = the maximum capillary pressure from the HWPCW array for a given cell.
- $P_{c_{TABLE}}$ = the capillary pressure in the high salinity water wet water capillary pressure table allocated to the grid block.
- $P_{c_{TABLE-MAX}}$ = the maximum capillary pressure in the high salinity water wet water capillary pressure table allocated to the grid block (that is at the connate water saturation).

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.159 LWSOGCR – END-POINT SCALING GRID CELL SOGCR (Low SALINITY AND WATER Wet)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWSOGCR defines the critical oil saturation with respect to gas (“SOGCR”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil saturation in the low salinity water wet oil-gas relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.160 LWSOWCR – END-POINT SCALING GRID CELL SOWCR (LOW SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWSOWCR defines the critical oil saturation with respect to water (“SOWCR”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the oil saturation in the low salinity water wet water-oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.161 LWSWCR – END-POINT SCALING GRID CELL SWCR (LOW SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWSWCR defines the critical water saturation (“SWCR”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water saturation in the low salinity water wet water-oil relative permeability saturation tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.162 LWSWL – END-POINT SCALING GRID CELL SWL (Low SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWSWL defines the connate water saturation (“SWL”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water saturation in the low salinity water wet water-oil relative permeability saturation tables, as well as the associated capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.163 LWSWLPC – END-POINT SCALING GRID CELL SWLPC (Low SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWSWLPC defines the capillary pressure connate water saturation (“SWLPC”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water saturation in the low salinity water wet water-oil capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

Note the keyword only applies the scaling to the capillary pressures tables, unlike the LWSWL keyword that applies the scaling to both the capillary pressure and relative permeability tables.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.164 LWSWU – END-POINT SCALING GRID CELL SWU (LOW SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

LWSWU defines the maximum water saturation(“SWU”), for all the cells in the model via an array, for when the Low Salt and Surfactant Wettability options have been selected. The data is used to scale the water saturation in the low salinity water wet water-oil relative permeability saturation tables, as well as the associated capillary pressure tables. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Low Salt option should be activated by the LOWSALT keyword in the RUNSPEC section and the Surfactant Wettability option activated by the SURFACT or SURFACTW keywords, which are also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.165 MASSFLOW – DEFINE RIVER MASS FLOW VERSUS TIME TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The MASSFLOW keyword defines the upstream river mass flow versus time tables for rivers, for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.166 MAXVALUE – SETS A MAXIMUM VALUE FOR AN ARRAY ELEMENT

The MAXVALUE keyword sets a maximum value for the specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the MAXVALUE keyword is being used.

See [MAXVALUE – Sets a Maximum Value for an Array Element](#) in the GRID section for a full description.

8.3.167 MESSAGE – OUTPUT USER MESSAGE

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGES keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

See [MESSAGE – Output User Message](#) in the GLOBAL section for a full description.

8.3.168 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

See [MESSAGES – Define Message Print Limits and Stop Limits](#) in the GLOBAL section for a full description.

8.3.169 MINVALUE – SET A MINIMUM VALUE FOR AN ARRAY ELEMENT

The MINVALUE keyword sets a minimum value for the specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the MINVALUE keyword is being used.

See [MINVALUE – Set a Minimum Value for an Array Element](#) in the GRID section for a full description.

8.3.170 MICPPARA – DEFINE MICROBIALLY INDUCED CALCITE PRECIPITATION PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MICPPARA keyword defines the model parameters for when the MICP model has been activated via the MICP keyword in the RUNSPEC section. In addition to the MICP keyword the water phase should be made active via the WATER keyword in the RUNSPEC section. See Landa-Marbán et al¹⁰¹ and ¹⁰² for further information on the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DENBIO	A real positive value that defines the density of the biofilm.			Defined
		lb/rft ³ 2.18	kg/rm ³ 35.0	gm/rcc 0.035	
2	DENCAL	A real positive value that sets the calcite density.			Defined
		lb/rft ³ 169.18	kg/rm ³ 2710.0	gm/rcc 2.710	
3	DETRAT	DETRAT is a real positive value that stipulates the biofilm detachment rate.			Defined
		feet/cP 8.53 × 10 ⁻¹³	m/cP 2.6 × 10 ⁻¹³	cm/cP 2.6 × 10 ⁻¹¹	
4	CRIPOR	CRIPOR is a real positive value that defines the critical porosity, the value of porosity that equates to the minimum permeability MINPER.			0.10
		dimensionless	dimensionless	dimensionless	
5	FITFAC	A real positive value that declares the exponent in the porosity-permeability relationship.			3.0
		$K = k_o \left[\left(\frac{\phi - \phi_{crit}}{\phi_0 - \phi_{crit}} \right)^\alpha + k_{min} \right] \frac{k_o}{k_o + k_{min}}$			
		Where α is FITFAC in the above equation. See Landa-Marbán et al ^{101 and 102} for details.			
6	HVEOXY	HVEOXY is a real positive value that stipulates the half-velocity coefficient for oxygen.			Defined
		lb/rft ³ 1.25 × 10 ⁻⁶	kg/rm ³ 2.0 × 10 ⁻⁵	gm/rcc 2.0 × 10 ⁻⁸	

¹⁰¹ Landa-Marbán, D., Tveit, S., Kumar, K., Gasda, S.E., 2021. Practical approaches to study microbially induced calcite precipitation at the eld scale. *Int. J. Greenh. Gas Control* 106, 103256. <https://doi.org/10.1016/j.jggc.2021.103256>.

¹⁰² Landa-Marbán, D., Kumar, K., Tveit, S., Gasda, S.E., 2021. Numerical studies of CO₂ leakage remediation by micp-based plugging technology. In: Røkke, N.A. and Knuutila, H.K. (Eds) *Short Papers from the 11th International Trondheim CCS conference*, ISBN: 978-82-536-1714-5, 284-290.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
7	HVEURE	A real positive value that defines the half-velocity coefficient for urea.			Defined
		lb/rft ³ 1.33	kg/rm ³ 21.3	gm/rcc 0.213	
8	MGRRAT	MGRRAT is a real positive value that sets the maximum specific growth rate.			Defined
		l/days 3.6	l/days 3.6	l/hours 0.15	
9	MOXCON	A real positive value that stipulates the maximum injected oxygen concentration.			Defined
		lb/stb 2.5 × 10 ⁻³	kg/sm ³ 0.04	gm/scc 4.0 × 10 ⁻⁵	
10	MURCON	MURCON is a real positive value that defines the maximum injected urea concentration.			Defined
		lb/stb 3.75	kg/sm ³ 60.0	gm/scc 0.060	
11	MURUTI	A real positive value that sets the maximum rate of urea utilization.			Defined
		l/days 1391	l/days 1391	l/hours 57.96	
12	MIARAT	MIARAT is a real positive value that declares the microbial attachment rate.			Defined
		l/days 0.074	l/days 0.074	l/hours 0.003	
13	MIDRAT	A real value that defines the microbial death rate.			Defined
		l/days 0.028	l/days 0.0028	l/hours 0.001	
14	MINPER	MINPER is a real positive value that defines the minimum permeability.			1.013 × 10 ⁻⁵
		mD	mD	mD	
15	OXCFAC	A real value that stipulates the oxygen consumption factor.			0.5
		dimensionless	dimensionless	dimensionless	
16	TOLCLO	TOLCLO is a real positive value that defines the tolerance to be used in the calculation of the clogging termination criteria.			1.0 × 10 ⁻⁴
		dimensionless	dimensionless	dimensionless	
17	YGRCOE	A real value that sets the yield growth coefficient.			0.5
		dimensionless	dimensionless	dimensionless	
Notes: 1) The keyword is terminated by a “/”.					

Table 8.69: MICPPARA Keyword Description

Note

Unlike some of the other PROPS keywords that allocate fluid and rock properties to different regions of the model using the PVTNUM and SATNUM keywords in the REGIONS section, the MICPPARA keyword parameters are applied to all the cells in the model.

Example

```
--
--          DEFINE MICROBially INDUCED CALCITE PRECIPITATION PARAMETERS
--
-- DEN  DEN  DET  CRI  FIT  HVE  HVE  MGR  MOX  MUR  MUR  MIA  MID  MIN  OXC  TOL  YGR
-- BIOF CAL  RAT  POR  FAC  OXY  URE  RAT  CON  CON  UTI  RAT  RAT  PER  FAC  CLO  COE
-- -----
MICPPARA
  35.  2710.  2.6E-13  0.1  3.0  2E-5  21.3  3.6  0.04  60.  1391.  0.074  0.028  1.013E-5  0.5  1E-4  0.5/
```

The above example defines the 17 model parameters for the MICP model in the metric system.

8.3.171 MISC – DEFINE SOLVENT MISCIBILITY-IMMISCIBILITY TRANSFORM FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

MISC defines the transformation between the miscible and immiscible relative permeability models, for when the MISCIBLE and SOLVENT keywords in the RUNSPEC section has been activated. The keyword can only be used with the MISCIBLE option and for when the oil, water, gas and solvent phases are active in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SSOL	<p>A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the solvent fraction with respect to the solvent and gas saturation, and is defined by:</p> $\frac{S_s}{(S_g + S_s)}$ <p>Where S_g is the gas saturation and S_s is the solvent saturation.</p> <p>Note that the first entry in the columnar vector should be zero and the last entry should be one to fully define the solvent fraction range.</p>			None
		dimensionless	dimensionless	dimensionless	
2	MISC	<p>A columnar vector of real equal or increasing down the column values that are greater than or equal to zero and less than one, that define the corresponding miscibility for the corresponding solvent fraction SSOL.</p> <p>The first entry in the columnar vector should be zero and the last entry should be one to fully define the miscible-immiscible relationship.</p>			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTMISC tables as declared on the MISCIBLE keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSMISC rows as declared on the MISCIBLE keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.70: MISC Keyword Description

Example

```
-- SOLVENT MISCIBILITY-IMMISCIBILITY TRANSFORM TABLE
--
SGCWMIS
--      SSOL          MISC
--      FRAC          FRAC
--      -----
--      0.0000        0.0000
--      0.2000        0.2500
--      0.5000        0.7500
--      1.0000        1.0000
--
-- / TABLE NO. 01
--
--      SSOL          MISC
--      FRAC          FRAC
--      -----
--      0.0000        0.0000
--      0.3000        0.2500
--      0.6000        1.0000
--      1.0000        1.0000
--
-- / TABLE NO. 02
```

The above example defines two solvent miscible-immiscible transform tables assuming NTMISC equals two and NSMISC is greater than or equal to four on the MISCIBLE keyword in the RUNSPEC section.

8.3.172 MLANG – DEFINE LANGMUIR MAXIMUM GAS CONCENTRATION FOR ALL GRID CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, MLANG, defines the coal bed methane Langmuir Adsorption¹⁰³ maximum gas concentration for each grid cell used to scale the Langmuir isotherm table allocated to the cell, for when the Coal Bed Methane option has been activated via the COAL keyword in the RUNSPEC section. See the LANGMUIR keyword in the PROPS section for specifying the Langmuir tables for the model.

Note that if the Dual Porosity model has been activated by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section, then MLANG applies to only the matrix grid block.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁰³ Langmuir, Irving (June 1918). "The Adsorption of Gases on Plane Surface of Glass, Mica and Platinum". *The Research Laboratory of the General Electric Company*. 40 (9): 1361–1402. doi:10.1021/ja02242a004

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.173 MLANGSLV – DEFINE LANGMUIR MAXIMUM SOLVENT CONCENTRATION FOR ALL GRID CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, MLANGSLV, defines the coal bed methane Langmuir Adsorption¹⁰⁴ maximum solvent concentration for each grid cell used to scale the Langmuir isotherm solvent table allocated to the cell, for when the Coal Bed Methane option has been activated via the COAL keyword in the RUNSPEC section. In addition, the Solvent phase must have been declared by the SOLVENT keyword in the RUNSPEC section. See the COALNUM keyword in the GRID section for allocating the Langmuir solvent tables to the grid blocks, and also the LANGMUIR keyword in the PROPS section for defining the Langmuir Adsorption Isotherm tables. Keywords COALADS and COALPP, also in the PROPS section, are used to specify the relative adsorption data in runs containing the solvent phase.

Note that if the Dual Porosity model has been activated by either the DUALPORO or the DUALPERM keywords in the RUNSPEC section, then MLANGSLV applies to only the matrix grid block.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁰⁴ Langmuir, Irving (June 1918). "The Adsorption of Gases on Plane Surface of Glass, Mica and Platinum". *The Research Laboratory of the General Electric Company*. 40 (9): 1361–1402. doi:10.1021/ja02242a004

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.174 MSFN – MISCIBLE NORMALIZED RELATIVE PERMEABILITY TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The MSFN keyword defines the miscible normalized relative permeability tables for when the MISCIBLE and or SOLVENT options have been activated in the RUNSPEC section using the respective keyword. The MISCIBLE keyword invokes a three component formulation (oil, water and solvent gas or an oil, water and solvent oil). Whereas the SOLVENT keyword results in a four component model (oil, water and gas plus a solvent). This keyword should only be used if the MISCIBLE and or SOLVENT options have been activated.

No.	Name	Description	Default
1	SGAS	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the gas plus solvent saturation.	None
2	KRSG	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the gas plus solvent relative permeability multiplier.	None
3	KRO	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the oil relative permeability multiplier.	None

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by “/”

Table 8.71: MSFN Keyword Description

Example

```
--
--      MISCIBLE NORMALIZED RELATIVE PERMEABILITY TABLES
--
MSFN
--      SGAS      KRSG      KRO
--      FRAC
--      -----
--      0.0000    0.0000    1.0000
--      1.0000    1.0000    0.0000
--
--
--      SGAS      KRSG      KRO
--      FRAC
--      -----
--      0.0000    0.0000    1.0000
--      0.2000    0.2000    0.8000
--      0.4000    0.3000    0.7000
--      0.6000    0.4000    0.6000
--      0.8000    0.5000    0.4000
--      1.0000    1.0000    0.0000
--
--
--      / TABLE NO. 01
--
--
--      / TABLE NO. 02
```

The above example defines two MSN tables for use the MISCIBLE and SOLVENT options.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.175 MULTIPLY – MULTIPLY A SPECIFIED ARRAY BY A CONSTANT

The MULTIPLY keyword multiplies a specified array or part of an array by a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

See [MULTIPLY – Multiply a Specified Array by a Constant](#) in the GRID section for a full description.

8.3.176 MULTIREG – MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER

The MULTIREG keyword multiplies an array or part of an array by a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTIREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the MULTIREG keyword is being used.

See [MULTIREG – Multiply an Array by a Constant based on a Region Number](#) in the GRID section for a full description.

8.3.177 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active. but can subsequently be switched off by the NOECHO activation keyword.

See [NOECHO – Deactivate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

8.3.178 NOWARN – DEACTIVATE WARNING MESSAGES

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

See [NOWARN – Deactivate Warning Messages](#) in the GLOBAL section for a full description.

8.3.179 NOWARNEP – DEACTIVATE END-POINT SCALING WARNING MESSAGES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The NOWARNEP keyword deactivates the writing out of warning messages associated with checking the consistency of saturation table end-points; however error messages are still reported by the simulator.

Hence, OPM Flow ignores this keyword but it is documented here for completeness.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
--
--      DEACTIVATE END-POINT SCALING WARNING MESSAGES
--
NOWARNEP
```

The above example switches off the writing out of warning messages associated with checking the consistency of saturation table end-points;

8.3.180 OILDENT – DEFINE OIL DENSITY TEMPERATURE COEFFICIENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

OILDENT defines the oil density as a function of temperature coefficients for when OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC. The reference pressure for this table is given by the VISCREF keyword in the PROPS section. Note this is an OPM Flow keyword used with OPM Flow's black-oil thermal model that is not available in the commercial simulator's black-oil thermal formulation.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TEMP	TEMP is a real positive value greater than zero that defines the absolute reference temperature used with TEXPI and TEXP2 to estimate the change in oil density with respect to temperature.			Defined
		°R 527.67	°K 293.15	°K 293.15	
2	TEXPI	TEXPI is a real positive value greater than zero that defines the oil thermal expansion coefficient of the first order.			Defined
		1/°R 1.67×10^{-4}	1/°K 3.0×10^{-4}	1/°K 3.0×10^{-4}	
3	TEXP2	TEXP2 is a real positive value greater than zero that defines the oil thermal expansion coefficient of the second order.			Defined
		1/°R ² 9.26×10^{-7}	1/°K ² 3.0×10^{-6}	1/°K ² 3.0×10^{-6}	
Notes: 1) The keyword is followed by NTPVT records as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each data set is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.72: OILDENT Keyword Description

Example

The following example shows the OILDENT keyword using the default values, for when the thermal option has been activated by the THERMAL keyword in the RUNSPEC section and for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to two.

```
--
--      OIL DENSITY TEMPERATURE COEFFICIENTS (OPM FLOW THERMAL KEYWORD)
--
--      OIL      DENSITY  DENSITY
--      TEMP     COEFF1   COEFF2
--      -----
OILDENT
      1*         1*       1*           / TABLE NO. 01
      1*         1*       1*           / TABLE NO. 02
```

There is no terminating “/” for this keyword.

8.3.181 OILVISCT – DEFINE OIL VISCOSITY VERSUS TEMPERATURE FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

OILVISCT defines the oil viscosity as a function of temperature for when OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. The reference pressure and solution gas-oil ratio of the oil for this table is given by the VISCREF keyword in the PROPS section. Note this is an OPM Flow keyword used with OPM Flow's black-oil thermal model that is not available in the commercial simulator's black-oil thermal formulation.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TEMP	A columnar vector of real monotonically increasing down the column values that defines the temperature values.			None
		°F	°C	°C	
2	VIS	A columnar vector of real increasing down the column values that defines the oil viscosity for the corresponding temperature values (TEMP). VIS should be given at the reference pressure and solution gas-oil ratio as defined by PRESS and RS variables on the VISCREF keyword.			None
		cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.73: OILVISCT Keyword Description

There is no terminating "/" for this keyword.

Example

The following example shows the OILVISCT keyword for when the thermal option has been activated by the THERMAL keyword in the RUNSPEC section and for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set equal to one.

```
--  
--      OIL VISCOSITY VERSUS TEMPERATURE TABLES (OPM FLOW EXTENSION KEYWORD)  
--  
--      OIL      OIL  
--      TEMP     VISC  
--      -----  
OILVISCT  
      100.0      0.600  
      110.0      0.650  
      120.0      0.680  
      150.0      0.720  
      165.0      0.725  
  
/ TABLE NO. 01
```

8.3.182 OPERATE – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS

This keyword, OPERATE, defines mathematical operations on property arrays (NTG, PORO etc.) and optionally using another property array as input to the function. The keyword allows for various mathematical functions and their associated variables to be defined and applied to the selected array data. Input constants can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

See [OPERATE – Define Mathematical Operations on Arrays](#) in the GRID section for a full description.

8.3.183 OPERATER – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS BY REGION

This keyword defines the mathematical operations on arrays for specific regions in the commercial simulator and is currently not supported by OPM Flow. However, similar functionality is provided by the ADD and MULTIPLY keywords.

See [OPERATER – Define Mathematical Operations on Arrays by Region](#) in the GRID section for a full description.

8.3.184 OVERBURD – DEFINE ROCK OVERBURDEN PRESSURE VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The OVERBURD keyword defines the overburden pressures versus depth relationship to be applied for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section.

The rock compaction pore volume and transmissibility multipliers, entered via the ROCKTAB, ROCK2D and ROCK2DTR keywords, are applied to the pore pressure, unless the OVERBURD keyword is included in the input deck. When the OVERBURD keyword is present the multipliers are applied to the effective pore volume pressure, that is $P_{(effective)} = P_{(Pressure)} - P_{(overburden)}$. If the keyword is not present in the input deck then the overburden pressure is set to zero.

This keyword should only be used if compaction option has been enabled.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth for corresponding overburden pressure parameter PRESS.			None
		feet	m	cm	
2	PRESS	A columnar vector of real monotonically increasing down the column values that defines the corresponding overburden pressure for the given DEPTH.			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTROCC tables as declared on the ROCKCOMP keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.74: OVERBURD Keyword Description

See also the ROCKTAB, ROCK2D, ROCK2DTR, and ROCKWNOD keywords in the PROPS section.

Examples

The example below defines three overburden tables, assuming NTROCC is equal to three on the ROCKCOMP keyword and NPPVT is greater than or equal to four on the TABDIMS keyword.

```
--
--      OVERBURDEN PRESSURE VERSUS DEPTH TABLES
--
OVERBURD
--      DEPTH      OVERBURDEN
--      FEET       PRESSURE
--      -----
--      1000.0     300.000
--      2000.0     600.000
--      3000.0     900.000
--      4000.0     1200.000 / TABLE NO. 01
--      DEPTH      OVERBURDEN
--      FEET       PRESSURE
--      -----
--      1000.0     200.000
--      2000.0     400.000
--      3000.0     800.000
--      4000.0     1000.000 / TABLE NO. 02
--      DEPTH      OVERBURDEN
--      FEET       PRESSURE
--      -----
--      1000.0     400.000
--      2000.0     800.000
--      3000.0     1100.000
--      4000.0     1500.000 / TABLE NO. 03
```

Note that there must be exactly NTROCC tables entered for this keyword, otherwise an error will occur.

```
--
--      ROCK COMPACTION TABLES
--
ROCKTAB
--      PRESS      PORV      TX(YZ)
--      MULT       MULT
--      -----
--      1000.0     0.9600    0.9650
--      1500.0     0.9800    0.9850
--      3000.0     0.9900    0.9950
--      4500.0     1.0000    1.0000
--      4750.0     1.0100    1.0100 / TABLE NO. 01
--      PRESS      PORV      TX(YZ)
--      MULT       MULT
--      -----
--      1000.0     0.9600    0.9650
--      1500.0     0.9800    0.9850
--      3000.0     0.9900    0.9950
--      4500.0     1.0000    1.0000
--      4750.0     1.0100    1.0100 / TABLE NO. 02
--      PRESS      PORV      TX(YZ)
--      MULT       MULT
--      -----
--      1000.0     0.9600    0.9650
--      2000.0     0.9800    0.9850
--      3000.0     0.9900    0.9950
--      4000.0     1.0100    1.0100 / TABLE NO. 03
```

Here ROCKTAB tables one and two are identical.

8.3.185 PCG – END-POINT SCALING OF GRID CELL MAXIMUM GAS CAPILLARY PRESSURE (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PCG defines the maximum drainage gas-oil capillary pressure values for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The keyword can be used with all grid types.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness. See also the IPCG keyword for the equivalent imbibition functionality.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PCG	PCG is an array of positive real numbers assigning the maximum drainage gas-oil capillary pressure values for each cell in the model. Repeat counts may be used, for example 30*100.0.			None
		psia	bars	atm	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) If the HYSTER on the SATOPTS keyword in the RUNSPEC section has been activated to invoke hysteresis then PCG scales the drainage curve and IPCG scales the imbibition curve.
- 3) The keyword is terminated by a "/".

Table 8.75: PCG Keyword Description

The capillary pressure for a grid block is scaled by:

$$P_c = P_{c_{TABLE}} \left(\frac{PCG}{P_{c_{TABLE-MAX}}} \right) \quad (8.14)$$

Where:

- P_c = the resulting drainage gas-oil capillary pressure for a grid cell.
- PCG = the maximum capillary pressure from the PCG array for a given cell.
- $P_{c_{TABLE}}$ = the capillary pressure in the drainage capillary pressure table allocated to the grid block.
- $P_{c_{TABLE-MAX}}$ = the maximum capillary pressure in the drainage capillary pressure table allocated to the grid block at $S_g = 1 - S_{wco}$.

Example

```
--  
--      DEFINE GRID BLOCK PCG DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)  
--  
PCG      100*50.0  100*75.0  100*125.0      /
```

The above example defines the PCW for 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.186 PCG32D – GAS-OIL CAPILLARY PRESSURE VERSUS OIL AND WATER SATURATION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, PCG32D, enables the gas-oil capillary pressure data to be entered as a function of both oil and water saturations. The keyword should be used in conjunction with the SGF32D keyword in the PROPS section. See also the PCW32D keyword in the PROPS section that provides similar functionality for the water-oil capillary pressure data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.187 PCW – END-POINT SCALING OF GRID CELL WATER CAPILLARY PRESSURE (DRAINAGE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PCW defines the maximum drainage water-oil or water-gas capillary pressure values for all the cells in the model via an array. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. The keyword can be used with all grid types.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PCW	PCW is an array of positive real numbers assigning the maximum drainage water capillary pressure values for each cell in the model. Repeat counts may be used, for example 30*100.0.			None
		psia	bars	atm	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) If the HYSTER on the SATOPTS keyword in the RUNSPEC section has been activated to invoke hysteresis then PCW scales the drainage curve and IPCW scales the imbibition curve.
- 3) The keyword is terminated by a “/”.

Table 8.76: PCW Keyword Description

See also the IPCW keyword for the equivalent imbibition functionality.

The capillary pressure for a grid block is scaled by:

$$P_c = P_{c_{TABLE}} \left(\frac{PCW}{P_{c_{TABLE-MAX}}} \right) \quad (8.15)$$

Where:

- P_c = the resulting drainage water capillary pressure for a grid cell.
- PCW = the maximum capillary pressure from the PCW array for a given cell.
- $P_{c_{TABLE}}$ = the capillary pressure in the drainage capillary pressure table allocated to the grid block.
- $P_{c_{TABLE-MAX}}$ = the maximum capillary pressure in the drainage capillary pressure table allocated to the grid block (that is at the connate water saturation).

Example

```
--
--      DEFINE GRID BLOCK PCW DATA FOR ALL CELLS (BASED ON NX x NY x NZ = 300)
--
PCW      100*50.0  100*75.0  100*125.0      /
```

The above example defines the PCW for 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.188 PCW32D – WATER-OIL CAPILLARY PRESSURE VERSUS OIL AND GAS SATURATION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, PCW32D, enables the water-oil capillary pressure data to be entered as a function of both oil and gas saturations. The keyword should be used in conjunction with the SWF32D keyword in the PROPS section. See also the PCG32D keyword in the PROPS section that provides similar functionality for the gas-oil capillary pressure data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.189 PECOEFS – DEFINE PETRO-ELASTIC MODEL COEFFICIENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PECOEFS keyword defines the Petro-Elastic model coefficients.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.190 PEGTAB – PETRO-ELASTIC PRESSURE SHEAR MODULUS TABLE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PEGTAB series of keywords define a series of coefficients of a polynomial function used in the calculation of the shear modulus in the petro-elastic model. The series of keywords consist of: PEGTAB0 PEGTAB1, PEGTAB2, PEGTAB3, PEGTAB4, PEGTAB5, PEGTAB6, and PEGTAB7.

This series of keywords are ignored by OPM Flow and have no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.191 PEKTAB – PETRO-ELASTIC PRESSURE BULK MODULUS TABLE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PEKTAB series of keywords define a series of coefficients of a polynomial function used in the calculation of the bulk modulus in the petro-elastic model. The series of keywords consist of: PEKTAB0 PEKTAB1, PEKTAB2, PEKTAB3, PEKTAB4, PEKTAB5, PEKTAB6, and PEKTAB7.

This series of keywords are ignored by OPM Flow and have no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.192 PERMFAC– PERMEABILITY MULTIPLICATION FACTOR AS A FUNCTION OF POROSITY CHANGE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PERMFAC defines the permeability multiplication factor due to a change in porosity. Currently the keyword is used in conjunction with OPM Flow's Salt Precipitation model, in which the pore space is reduced due to salt precipitating in the pore space, causing a reduction in porosity and an associated reduction in permeability. OPM Flow's Salt Precipitation model is activated in the input deck via the BRINE and PRECSALT keywords, together with activating the simulator's vaporized water phase via the VAPWAT keyword. All three keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note

This is an OPM Flow specific keyword for the simulator's Salt Precipitation model that is activated by the BRINE and PRECSALT keywords and declaring that vaporized water is present in the run via the VAPWAT in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	POROFAC	A real monotonically increasing positive columnar vector that defines the porosity ($\frac{\phi}{\phi_0}$) factor for the corresponding PERMFAC vector. In the simulator's Salt Precipitation model, the maximum value of ϕ is ϕ_0 , implying maximum value of one.			None
		dimensionless	dimensionless	dimensionless	
2	PERMFAC	A real positive increasing columnar vector that defines the permeability (k) multiplier associated with POROFAC and used to scale a grid blocks permeability due to the reduction in pore volume caused by salt precipitation. Where: $PERMFAC = m(\phi)$ $\text{with } k = m(\phi)k_0$			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) There must be same number of entries for each column.
- 4) Each table is terminated by a single “/” and the keyword is terminated by a “/”.

Table 8.77: PERMFAC Keyword Description

The porosity reduction is a function of the volume fraction of salt (s_s) precipitated out of the vaporized water phase, that is:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

$$\phi = (1 - s_s)\phi_o \quad (8.16)$$

The porosity and associated permeability factor data can be calculated using a permeability-porosity relationship, for example:

$$\frac{k}{k_o} = \left(\frac{\phi - \phi_c}{\phi_o - \phi_c} \right)^\gamma \quad (8.17)$$

Where:

- k_o and ϕ_o = the initial permeability and porosity,
- k and ϕ = the actual permeability and porosity that changes due to precipitation or dissolution of the salt,
- ϕ_c = the residual porosity at which permeability is zero, and
- γ = a positive exponent.

See also Kozeny-Carment (extended)¹⁰⁵, ¹⁰⁶ and ¹⁰⁷ and Verma-Pruess¹⁰⁸ for additional functional forms that can be used to derive the tabulated data that can be entered via the PERMFACT keyword.

Example

The example below defines two PERMFACT tables assuming NTPVT equals two and NPPVT is greater five on the TABDIMS keyword in the RUNSPEC section.

```
--
-- PERMEABILITY FACTOR REDUCTION DUE TO SALT PRECIPITATION
-- (OPM FLOW KEYWORD)
--
PERMFACT
-- PORO      PERM
-- FACTOR    FACTOR
-- -----
-- 0.00      0.0000
-- 0.25      0.0625
-- 0.50      0.2500
-- 0.75      0.0625
-- 1.00      1.0000 / TABLE NO. 01
-- -----
-- 0.00      0.0000
-- 0.25      0.0625
-- 0.50      0.2500
-- 0.75      0.0625
-- 1.00      1.0000 / TABLE NO. 02
/
```

Both tables use equation (8.17) with ϕ_c equal to zero and γ equal to 2.0. Note that PERMFACT changes the permeability in all three dimensions, that is the PERMX, PERMY and PERMZ arrays are all modified.

Finally, notice that the terminating “/” for this keyword.

¹⁰⁵ J. Kozeny, "Ueber kapillare Leitung des Wassers im Boden." *Sitzungsber Akad. Wiss., Wien*, 136(2a): 271-306, 1927.

¹⁰⁶ P.C. Carman, "Fluid flow through granular beds." *Transactions, Institution of Chemical Engineers, London*, 15: 150-166, 1937.

¹⁰⁷ P.C. Carman, "Flow of gases through porous media." *Butterworths, London*, 1956.

¹⁰⁸ Verma, A., & Pruess, K. (1988). Thermohydrological conditions and silica redistribution near high-level nuclear wastes emplaced in saturated geological formations. *Journal of Geophysical Research*, 93, 1159-1173.

8.3.193 PLMIXPAR – DEFINE THE POLYMER TODD-LONGSTAFF MIXING PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PLMIXPAR keyword defines the Todd-Longstaff¹⁰⁹ mixing parameters for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section. This keyword must be present in the input deck if the POLYMER keyword has been activated.

Note that this keyword is used only for the polymer option, if the MISCIBLE keyword in the RUNSPEC section has been invoked then in addition the TLMIXPAR keyword is also required to define the Todd-Longstaff mixing parameters for the MISCIBLE option.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PLMVIS	A real positive value that is greater than or equal to zero and less than or equal to one, that defines the viscosity Todd-Longstaff mixing parameter for each polymer region.			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) The keyword is followed by NPLMIX tables as declared on the REGDIMS keyword in the RUNSPEC section, for each rock region. There should be only one row per table. 2) Each entry is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.78: PLMIXPAR Keyword Description

Example

```
--
--      POLYMER TODD-LONGSTAFF MIXING PARAMETERS
--
PLMIXPAR
--      PLM
--      VISCOS
--      -----
--      0.3500 / TABLE NO. 01
--      0.2500 / TABLE NO. 02
--      0.6500 / TABLE NO. 03
```

The above example defines three polymer Todd-Longstaff mixing parameter data sets, based on the NPLMIX variable on the REGDIMS keyword in the RUNSPEC section being equal to three.

¹⁰⁹ Todd, M. and Longstaff, W. "The Development, Testing and Application of a Numerical Simulator for Predicting Miscible Flood Performance," paper SPE 3484, Journal of Canadian Petroleum Technology (1972) 24, No. 7, 874-882.

8.3.194 PLYADS - DEFINE POLYMER ROCK ADSORPTION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PLYADS keyword defines the rock polymer adsorption tables for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section. Alternatively, the functions can be entered via the PLYADSS keyword in the PROPS section for when salt sensitivity is to be considered.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	POLCON	A columnar vector of real monotonically increasing down the column values that defines the polymer concentration in the solution surrounding the rock. The first entry should be zero to define a no polymer concentration.			None
		lb/stb	kg/sm ³	gm/scc	
2	POLRATIO	A columnar vector of real increasing down the column values that defines the mass of adsorbed polymer per unit mass of rock of the saturated concentration of polymer adsorbed by the rock. The first entry should be zero to define a zero ratio of polymer concentration.			None
		lb/lb	kg/kg	gm/gm	
Notes: 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section. 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.79: PLYADS Keyword Description

See also the PLYADSS keyword in the PROPS section to also define rock polymer adsorption tables when the polymer concentration is a function of salinity.

Example

```

--
--      POLYMER ROCK ADSORPTION TABLE
--
--
PLYADS
--      POLYMER      POLYMER
--      POLCON      POLRATIO
--      -----
--      0.0      0.00000
--      2.0      0.00003
--      4.0      0.00005
--      6.0      0.00007
--      8.0      0.00009
--      10.0     0.00011
--      12.0     0.00012
--      14.0     0.00015
--
--      POLYMER      POLYMER
--      POLCON      POLRATIO
--      -----
--      0.0      0.00000
--      3.0      0.00004
--      5.0      0.00006
--      7.0      0.00008
--      8.0      0.00009
--      10.0     0.00011
--

```

The above example defines two polymer rock adsorption tables assuming NTSFUN equals two and NSSFUN is greater than or equal to eight on the TABDIMS keyword in the RUNSPEC section.

There is no terminating “/” for this keyword.

8.3.195 PLYADSS - DEFINE POLYMER ROCK ADSORPTION WITH SALT DEPENDENCE TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PLYADSS keyword defines the rock polymer adsorption tables for when the polymer and the salt options has been activated by the POLYMER and BRINE keywords in the RUNSPEC section.

Note that the BRINE option is not currently supported by OPM Flow; however, the polymer rock adsorption functions without salt dependence may be entered via the PLYADS keyword in the PROPS section, for when salt sensitivity is not to be considered.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	POLCON	A columnar vector of real monotonically increasing down the column values that defines the polymer concentration in the solution surrounding the rock. The first entry should be zero to define a no polymer and no salt concentration data set. POLCON should only be given for the first entry of the POLCON/POLRATIO set and skipped until another POLCON/POLRATIO table is entered.			None
		lb/stb	kg/sm ³	gm/scc	
2	POLRATIO	A columnar vector of real increasing down the column values that defines the mass of adsorbed polymer per unit mass of rock of the saturated concentration of polymer adsorbed by the rock for a given POLCON and the salt concentration given by SALTCON on the ADSALNOD keyword in the PROPS section. The first table data set entry should be zero to define a no polymer and no salt concentration data set. Subsequent POLRATIO values define the POLCON/POLRATIO combinations for a given salt concentration as listed (and in the same order) by the SALTCON variable on the ADSALNOD keyword in the PROPS section. Each POLCON/POLRATIO/SALT data sets should be terminated by a “/”			None
		lb/lb	kg/kg	gm/gm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.80: PLYADSS Keyword Description

See also the PLYADS keyword in the PROPS section to also define rock polymer adsorption tables when the polymer concentration is not a function of salinity.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      SETS SALT CONCENTRATION FOR POLYMER SOLUTION ADSORPTION
--      VIA SATNUM ARRAY ALLOCATION
--
--      SALT
--
--      ADSALNOD
--          1.0
--          5.0
--          10.5
--          25.0      / SATNUM TABLE NO. 01
--
--      POLYMER ROCK ADSORPTION WITH SALT DEPENDANCY TABLE
--
--      PLYADSS
--      POLYMER      POLYMER
--      POLCON      POLRATIO
--      -----
--          0.0      0.00000
--                  0.00000
--                  0.00000
--                  0.00000      / TABLE NO. 01
--
--      POLYMER      POLYMER
--      POLCON      POLRATIO
--      -----
--          1.0      0.00002
--                  0.00003
--                  0.00004
--                  0.00005      / TABLE NO. 02
--
--      POLYMER      POLYMER
--      POLCON      POLRATIO
--      -----
--          2.0      0.00003
--                  0.00004
--                  0.00005
--                  0.00006      / TABLE NO. 03
--
--      POLYMER      POLYMER
--      POLCON      POLRATIO
--      -----
--          3.0      0.00004
--                  0.00005
--                  0.00006
--                  0.00007      / TABLE NO. 04
```

The above example defines four polymer rock adsorption tables for four salt concentration on the ADSALNOD keyword, assuming NTSFUN equals one and NSSFUN is greater than or equal to four on the TABDIMS keyword in the RUNSPEC section.

There is no terminating “/” for this keyword.

8.3.196 PLYATEMP – DEFINE POLYMER ADSORPTION TABLE TEMPERATURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	--------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the polymer adsorption temperature for subsequent polymer adsorption tables entered via the PLYADS and PLYADSS keywords in the PROPS section. The Polymer option must have been activated by the POLYMER keyword in the RUNSPEC section and the Thermal option invoked by the THERMAL keyword, also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PLYATEMP	Single real positive value that defines polymer adsorption temperature for subsequent polymer adsorption tables.			None
		°F	°C	°C	
Notes: I) The keyword is terminated by a “/”.					

Table 8.81: PLYATEMP Keyword Description

Example

The example shows how to enter the polymer adsorption data using the PLYADS keyword for two different temperatures.

```
--
--      RESERVOIR
--      TEMPERATURE
--      -----
PLYATEMP
--      60.0 / TEMPERATURE
--
--      POLYMER ROCK ADSORPTION TABLE
--
PLYADS
--      POLYMER      POLYMER
--      POLCON      POLRATIO
--      -----
--      0.0          0.00000
--      2.0          0.00003
--      4.0          0.00005
--      6.0          0.00007
--      8.0          0.00009
--      10.0         0.00011
--      12.0         0.00012
--      14.0         0.00015 / TABLE NO. 01
```


8.3.197 PLYCAMAX - DEFINE POLYMER-ROCK MAXIMUM ADSORPTION BY CELL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PLYCAMAX keyword defines the maximum polymer-rock adsorption value used in the calculation of the resistance factor for the water phase by individual grid block, for when the Polymer option has been activated by the POLYMER keyword in the RUNSPEC section. See the POLMAX parameter on the PLYROCK keyword in the PROPS section for setting the property for the whole grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.199 PLYESAL – DEFINE POLYMER EFFECTIVE SALINITY COEFFICIENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, PLYESAL, defines the polymer effective salinity coefficient as well as enabling the effective salinity calculation for polymer adsorption. The keyword should only be used if the BRINE keyword has been declared to activate the brine phase, the ECLMC keyword to enable the Multi-Component Brine model, and the POLYMER keyword has been used to activate the polymer phase. All three keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.200 PLYKRRF – DEFINE POLYMER ROCK PERMEABILITY REDUCTION BY CELL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PLYKRRF keyword defines the polymer rock permeability reduction factor to the water phase by individual cell, for when the Polymer option has been activated by the POLYMER keyword in the RUNSPEC section. PLYKRRF should consist of an array of real positive values that are greater than or equal to one. See the PERMFAC parameter on the PLYROCK keyword in the PROPS section for setting the property for the whole grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.201 PLYMAX - DEFINE POLYMER-SALT VISCOSITY MIXING CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PLYMAX keyword defines maximum polymer and salt concentrations that are to be used in the mixing parameter calculation of the fluid component viscosities, for when the Polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

Note that If the BRINE option has not be activated by the BRINE keyword in the RUNSPEC section, then the salt concentrations in the second column are ignored.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	POLCON	A real value that defines the polymer concentration in the solution which is used to calculate maximum polymer fluid component viscosity.			None
		lb/stb	kg/sm ³	gm/scc	
2	SALTCON	A real value that defines the salt concentration in the solution which is used to calculate maximum polymer fluid component viscosity. Note that If the BRINE option has not been activated by the BRINE keyword in the RUNSPEC section, then this variable is ignored; however, there should still be dummy entries in this case. This variable is ignored as the BRINE and POLYMER combination is not implemented in OPM Flow.			None
		lb/stb	kg/sm ³	gm/scc	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section, for each rock region. There should be only one row per table.
- 2) Each table is terminated by a "/" and there is no "/" terminator for the keyword.

Table 8.83: PLYMAX Keyword Description

Note

Currently, combining the BRINE and POLYMER models is not implemented in OPM Flow, and therefore SALTCON parameter on the PLYMAX keyword is ignored.

Example

```
--
--      POLYMER-SALT VISCOSITY MIXING CONCENTRATIONS
--
PLYMAX
--      POLYMER      SALT
--      POLCON      SALTCON
--      -----
--      0.0100      0.0500      / TABLE NO. 01
--      0.0075      0.0400      / TABLE NO. 02
--      0.0050      0.0300      / TABLE NO. 03
```

The above example defines three polymer-salt viscosity mixing concentrations, based on the NPLMIX variable on the REGDIMS keyword in the RUNSPEC section being equal to three.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.202 PLYRMDEN - DEFINE POLYMER MODEL IN SITU ROCK DENSITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PLYRMDEN keyword defines the in situ rock density at reservoir conditions by individual cell, for when the Polymer option has been activated by the POLYMER keyword in the RUNSPEC section. PLYRMDEN should consist of an array of real positive values. See the DENSITY parameter on the PLYROCK keyword in the PROPS section for setting the property for the whole grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.203 PLYROCK - DEFINE POLYMER-ROCK PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PLYROCK keyword defines rock properties for when the Polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PSPACE	A real positive value that is greater than or equal to zero and less than one, that defines available pore space for this rock type.			None
		dimensionless	dimensionless	dimensionless	
2	PERMFAC	A real positive value that is greater than or equal to one that defines decrease in the rock permeability to the water phase when the maximum amount of polymer has been adsorbed.			None
		dimensionless	dimensionless	dimensionless	
3	DENSITY	A real value that defines the rock in-situ density, that is at reservoir conditions.			None
		lb/rtb	kg/rm ³	gm/rcc	
4	ADINDEX	A positive integer of 1 or 2 that defines the polymer desorption option. <div>1) then polymer desorption may occur by retracing the polymer adsorption isotherm when the local polymer concentration in the solution decreases.</div> <div>2) then no polymer desorption may occur.</div>			Defined
		dimensionless 1	dimensionless 1	dimensionless 1	
5	POLMAX	A real positive non-zero value that defines the maximum polymer adsorption to be used in the calculation of the resistance factor for the water phase.			None
		lb/lb	kg/kg	gm/gm	
Notes: 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section, for each polymer flooding region. There should be only one row per table. 2) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.84: PLYROCK Keyword Description

Example

```
--
--      POLYMER-ROCK PROPERTIES
--
PLYROCK
--      PORE      PERM      INSITU      DESORP      MAX
--      SPACE      FACTOR     DENSITY     OPTN        POLY
--      -----
--      0.1200     1.7500     1800.0      1      0.00012      / TABLE NO. 01
--      0.1300     1.8500     1980.0      2      0.00015      / TABLE NO. 02
--      0.1500     1.9500     2005.0      1      0.00014      / TABLE NO. 03
```

The above example defines three polymer-rock tables, based on the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section being equal to three.

There is no terminating "/" for this keyword.

8.3.204 PLYSHEAR – ACTIVATE AND DEFINE POLYMER SHEARING PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PLYSHEAR keyword activates and the defines the polymer shear thinning-thickening option for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	VELOCITY	A columnar vector of real monotonically increasing down the column values that defines the water-polymer flow velocity. The VELOCITY value for the first row in the table should be zero.			None
		feet/day	m/day	cm/hour	
2	VISFAC	A columnar vector of real values that defines a factor that scales the effective water and polymer viscosities for when shear thinning-thickening of the polymer occurs. Normally VISFAC value for the first row in the table should be one.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.85: PLYSHEAR Keyword Description

Example

```
--
--      ACTIVATE AND DEFINE POLYMER SHEARING PARAMETERS
--
PLYSHEAR
--      WAT-POLY      VISCOSITY
--      VELOCITY      FACTOR
--      -----
--              0.0      1.000
--              1.0      0.900
--              3.0      0.800
--              6.0      0.700
--                                / TABLE NO. 01
--      WAT-POLY      VISCOSITY
--      VELOCITY      FACTOR
--      -----
--              0.0      1.000
--              1.0      0.900
--              2.0      0.800
--              4.0      0.750
--              6.0      0.700
--              8.0      0.650
--                                / TABLE NO. 02
```

The above example activates the polymer shear thinning-thickening option and defines two polymer shear thinning-thickening tables, based on the NTPVT variable on the TABDIMS keyword in the RUNSPEC section being equal to two and NPPVT variable on the same keyword being greater than or equal to six.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.205 PLYSHLOG - ACTIVATE AND DEFINE THE POLYMER SHEARING LOGARITHMIC PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates and defines the parameters for the logarithm-based polymer shear thinning/thickening option.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I-1	POLCON	A real positive value that defines the reference polymer concentration for the VELOCITY and VISFAC data for this keyword.			None
		lb/stb	kg/sm ³	gm/scc	
I-2	SALTCON	A real positive value that defines the reference salt concentration for the VELOCITY and VISFAC data for this keyword. Note that If the BRINE option has not been activated by the BRINE keyword in the RUNSPEC section, then this variable is ignored. This variable is ignored as the BRINE option is not implemented in OPM Flow.			None
		lb/stb	kg/sm ³	gm/scc	
I-3	TEMP	A real positive value defines the reference polymer temperature for the VELOCITY and VISFAC data for this keyword. Note that If the TEMP option has not been activated by the TEMP keyword in the RUNSPEC section, then this variable is ignored. This variable is ignored as the TEMP and POLYMER options combination is not implemented in OPM Flow.			None
		°F	°C	°C	
I-4	/	Record terminated by a "/"			Not Applicable
2-1	VELOCITY	A columnar vector of real monotonically increasing down the column values that defines the water-polymer flow velocity for the reference conditions of POLCON, SALTCON and TEMP. The VELOCITY value for the first row in the table should be a very small value that is greater than zero and less than 1×10^{-6} .			None
		feet/day	m/day	cm/hour	
2-2	VISFAC	A columnar vector of real positive values that define the dimensionless shear effect multiplier for the given VELOCITY entry for the reference conditions of POLCON, SALTCON and TEMP. Normally VISFAC value for the first row in the table should be one.			None
		dimensionless	dimensionless	dimensionless	
I-4	/	Record terminated by a "/"			Not Applicable

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Table 8.86: PLYSHLOG Keyword Description

Example

```
--
--      POLYMER SHEARING LOGARITHMIC PARAMETERS
--
PLYSHLOG
--      REF          REF          REF
--      POLCON       SALTCON      TEMP
--      -----      -
0.5
/
--
--      VELOCITY     VISFAC
--      -----
0.0000001         1.00
0.000001          1.10
0.0001            1.30
0.001             1.47
0.01              1.67
0.1               2.00
1.0               2.20
10.0              2.30
100.0             2.40
1000.0            2.40
--
--
--                                     / TABLE NO. 01
--      REF          REF          REF
--      POLCON       SALTCON      TEMP
--      -----      -
0.5
/
```

--		
--	VELOCITY	VISFAC
--	-----	-----
	0.0000001	1.00
	0.000001	1.10
	0.0001	1.35
	0.001	1.57
	0.01	1.87
	0.1	2.20
	1.0	2.40
	10.0	2.60
	100.0	2.65
	1000.0	2.65

/ TABLE NO. 02

The example activates the polymer logarithmic shear thinning-thickening option and defines two polymer shear thinning-thickening tables, based on the NTPVT variable on the TABDIMS keyword in the RUNSPEC section being equal to two and NPPVT variable on the same keyword being greater than or equal to ten.

8.3.206 PLYTRRF – DEFINE POLYMER ROCK PERMEABILITY REDUCTION VERSUS TEMPERATURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PLYTRRF keyword defines the polymer rock permeability reduction factor to the water phase as a function of temperature, for when the Polymer option has been activated by the POLYMER keyword in the RUNSPEC section. See the PLYTRRF keyword for the options on how this data is used in the polymer model and the PERMFAC parameter on the PLYROCK keyword for setting the property for the whole grid for a constant temperature. Both keywords are in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.207 PLYTRRFA – DEFINE POLYMER ROCK PERMEABILITY REDUCTION VERSUS TEMPERATURE OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PLYTRRFA keyword defines the how the polymer rock permeability reduction factor to the water phase as a function of temperature data, entered via the PLYTRRA keyword in the PROPS section, should be used. This keyword should only be used if the Polymer option has been activated by the POLYMER keyword in the RUNSPEC section. See the PERMFAC parameter on the PLYROCK keyword in the PROPS section for setting the property for the whole grid for a constant temperature.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.208 PLYVISC – DEFINE POLYMER VISCOSITY SCALING FACTORS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PLYVISC defines the polymer viscosity scaling factors used to determine the relationship of pure water viscosity with respect to increasing polymer concentration within a grid block. The polymer option must be activated by the POLYMER keyword in the RUNSPEC section in order to use this keyword.

The BRINE option in the RUNSPEC should be deactivated if this keyword is to be used.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	POLCON	A columnar vector of real monotonically increasing down the column values that defines the polymer concentration in the solution surrounding the rock. The first entry should be zero to define a no polymer concentration.			None
		lb/stb	kg/sm ³	gm/scc	
2	VISFAC	A columnar vector of real increasing or equal values that defines a factor that scales the effective viscosity of the solution for the given POLCON entry. Normally VISFAC value for the first row in the table should be one.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a "/" and there is no "/" terminator for the keyword.

Table 8.87: PLYVISC Keyword Description

Example

```
--
--      POLYMER VISCOSITY SCALING FACTOR TABLES
--
PLYVISC
--      POLYMER      VISCOSITY
--      POLCON      VISFAC
--      -----
--      0.0000      1.000
--      0.0002      10.000
--      0.0004      20.000
--      0.0008      40.000
--
-- / TABLE NO. 01
```

--	POLYMER	VISCOSITY
--	POLCON	VISFAC
--	-----	-----
	0.0000	1.000
	0.0003	10.000
	0.0005	20.000
	0.0007	40.000
	0.0009	45.000
	0.0011	55.000
		/ TABLE NO. 02

The example defines two polymer viscosity scaling factor tables, based on the NTPVT variable on the TABDIMS keyword in the RUNSPEC section being equal to two and NPPVT variable on the same keyword being greater than or equal to six.

8.3.209 PLYVISCS – DEFINE POLYMER-SALT VISCOSITY SCALING FACTORS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PLYSVISCS defines the polymer-salt viscosity scaling factor tables applied to pure water that are used to determine the viscosity of a polymer-salt mixture with respect to increasing polymer concentration within a grid block. The polymer option must be activated by the POLYMER keyword, as well as the brine phase declared by the BRINE keyword in the RUNSPEC section in order to use this keyword. However the ECLM keyword in the RUNSPEC must not be used with this keyword.

See also the PLYVSCST keyword in the PROPS section to enter polymer viscosity scaling factor data that is dependent on both salt and reservoir temperature.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.210 PLYVISCT – DEFINE POLYMER-TEMPERATURE VISCOSITY SCALING FACTORS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PLYVISCT defines the polymer-temperature viscosity scaling factor tables applied to pure water that are used to determine the viscosity of the polymer at a given temperature with respect to increasing polymer concentration within a grid block. Both the polymer option must be activated by the POLYMER keyword and the temperature option invoked by the TEMP keyword in the RUNSPEC section in order to use this keyword. However the BRINE keyword in the RUNSPEC must not be used with this keyword, that is the salt sensitivity options should be deactivated.

See also the PLYVSCST keyword in the PROPS section to enter polymer viscosity scaling factor data that is dependent on both salt and reservoir temperature.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.211 PLYVSCST – DEFINE POLYMER-SALT-TEMPERATURE VISCOSITY SCALING FACTORS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PLYVSCST defines the polymer-salt-temperature viscosity scaling factor tables applied to pure water that are used to determine the viscosity of the polymer at a given salt concentration and for a given temperature, with respect to increasing polymer concentration within a grid block. Both the polymer option must be activated by the POLYMER keyword and the temperature option invoked by the TEMP keyword in the RUNSPEC section in order to use this keyword. In addition, the BRINE keyword in the RUNSPEC must also be invoked. The keyword is used in conjunction with the SALTNODE keyword to define the various salt concentrations and the TEMPNODE keyword to define the various reservoir temperatures. Both keywords are in the PROPS section.

See also the PLYVISC keyword in the PROPS section to enter polymer viscosity scaling factor data that is dependent just salt concentration and the PLYVISCT keyword in the PROPS section to enter polymer viscosity scaling factor data that is dependent just on reservoir temperature.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.212 PMAX – MAXIMUM AND MINIMUM PRESSURE FOR TOTAL COMPRESSIBILITY CHECK

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PMAX keyword defines the maximum and minimum pressures expected to be encountered during the run. The data is used to perform the PVT total compressibility check that ensures that the total compressibility of a mixture of oil-gas, for when the gas-oil ratio is increasing for an oil, or the condensate gas ratio is increasing for a gas condensate, is positive respect to pressure. The total compressibility check is used to ensure that the entered oil and gas PVT data is consistent. If the check fails for given oil-gas mixture at a given pressure, resulting in a negative total compressibility, then this will result in numerical instabilities in the run causing this simulator difficulties in converging to a solution.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.213 PMISC – DEFINE MISCIBILITY VERSUS PRESSURE TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PMISC defines the transition between immiscible and miscible displacement as a function of oil pressure tables, for when the MISCIBLE keyword in the RUNSPEC section has been activated. If this keyword is absent from the input deck and MISCIBLE keyword in the RUNSPEC keyword has been activated, then miscibility is independent of the oil phase pressure.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	A columnar vector of real monotonically increasing down the column values that defines the oil phase pressure.			None
		psia	barsa	atma	
2	MISC	A columnar vector of real equal or increasing down the column values that defines the corresponding miscibility factor. MISC is a scaling that should lie between zero and one, where zero means no miscibility and one means full miscibility.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTMISC tables as declared on the MISCIBLE keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSMISC rows as declared on the MISCIBLE keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.88: PMISC Keyword Description

Example

```
--
--      MISCIBILITY VERSUS PRESSURE TABLES
--
PMISC
--      OIL      MISCIBLE
--      PRESS    FACTOR
--      -----
--      1000.0    0.000
--      2000.0    0.250
--      3000.0    1.000
--      4000.0    1.000
--
--      OIL      MISCIBLE
--      PRESS    FACTOR
--      -----
--      1500.0    0.000
--      2000.0    0.000
--      2500.0    0.250
--      3000.0    0.350
--      3500.0    1.000
--      4000.0    1.000
```

/ TABLE NO. 01

/ TABLE NO. 02

The above example defines two miscibility versus pressure tables assuming NTMISC equals two and NSMISC is greater than or equal to six on the MISCIBLE keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.214 PPCWMAX – DEFINE SWATINIT CALCULATED CAPILLARY PRESSURE CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PPCWMAX keyword defines the maximum capillary pressure allowed when scaling the capillary pressure tables to match the inputted SWATINIT array. This is primarily used for when the SWATINIT array has values of water saturation above the connate water saturation significantly outside than capillary pressure transition zone, that is high on the structure. In this case OPM Flow may generate large values for the capillary pressure which may result in numerical converge problems. This keyword sets the maximum allowable calculated capillary pressure and how the water saturation should be treated when the limit is exceeded.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PCWO	A columnar vector of real values that defines the maximum allowable capillary pressure for each SATNUM region.			Infinity
		The default value of infinity means there is no limit applied.			
		psia	barsa	atma	
2	OPTN	A columnar vector of character strings that should be set to: 1) NO: To ignore the SWATINIT value for the offending cell for when PCWO is exceeded. In this cases the capillary pressure for the block is set to the maximum (PCWO) and the water saturation is re-calculated based on PCWO. 2) YES: To set the SWATINIT value to the connate water saturation for the offending cell for when PCWO is exceeded. In this case the capillary pressure is set to the maximum value of the appropriate SATNUM table and the initial water saturation is calculated to be consistent with the tables maximum capillary pressure. This results in the capillary pressures not being re-scale for the offending cell.			No

Notes:

- 1) The keyword is followed by NTSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each row show contain two values representing PCWO and OPTN values.
- 3) Each row is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.89: PPCWMAX Keyword Description

Note

Using this keyword to limit the re-scaled grid block capillary pressure values will effect the fluids in-place when the simulator has to re-calculate values due to the capillary pressure limit being exceeded.

In addition, the high grid block capillary pressures may be indicative of an inconsistency between the tabular SATNUM capillary pressure values and the provided SWATINIT array water saturations. This inconsistency may be a result of the SWATINIT array being derived using a saturation height function, as is customary in static modeling software, and the numerical models tabulated capillary pressure. Rather than resetting the maximum calculated capillary pressure using the PPCWMAX keyword, it may be more appropriate to investigate the reason for the high capillary pressures values first, prior to applying the keyword.

Example

```
--
--      SET MAXIMUM PC FOR SWATINIT INITIALIZATION
--      MAX          MATCH
--      PC           SWATINIT
--      -----
PPCWMAX
      100.0      YES          / TABLE NO 01
      125.0      YES          / TABLE NO 02
      135.0      YES          / TABLE NO 03
```

The above example sets the maximum capillary pressure for three saturation regions to 100, 125 and 135 with SWATINIT reset to the connate water saturation for when the capillary pressure limit is exceeded.

8.3.215 PROPS - DEFINE THE START OF THE PROPS SECTION OF KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PROPS activation keyword marks the end of the EDIT section and the start of the PROPS section that defines the key fluid and rock property data property data for the simulator

There is no data required for this keyword.

Example

```
-- =====
--
-- PROPS SECTION
--
-- =====
PROPS
```

The above example marks the end of the EDIT section and the start of the PROPS section in the OPM Flow data input file.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.216 PVCDO - OIL PVT PROPERTIES FOR DEAD OIL (CONSTANT COMPRESSIBILITY)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PVCDO defines the oil PVT properties for dead oil¹¹⁰ with constant compressibility. If the oil has a constant and uniform dissolved gas concentration, Gas-Oil Ratio (“GOR”), and if the reservoir pressure never drops below the saturation pressure (bubble point pressure), then the model can be run more efficiently by omitting the GAS and DISGAS keywords from the RUNSPEC section, treating the oil as a dead oil, and defining a constant Rs (GOR) value with keyword RSCONST or RSCONSTT in the PROPS section. This results in the model being run as a dead oil problem with no active gas phase. However, OPM Flow takes into account the constant Rs in the calculations and reporting.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	PRESS is a real positive value defining the oil reference pressure for the other parameters for this data set.			None
		psia	barsa	atma	
2	OFVF	OFVF is a real positive value defining the oil formation volume factor (Bo) at the reference pressure.			None
		rb/stb	rm ³ /sm ³	rcc/scc	
3	OCOMP	OCOMP is a real positive value defining the oil compressibility (Co) at the oil reference pressure and is defined as: $C_o = -\frac{1}{B_o} \left(\frac{dB_o}{dP} \right)$			None
		l/psia	l/barsa	l/atma	
4	OVISC	OVISC is a real positive value defining the oil viscosity (μ _o) at the oil reference pressure.			None
		cP	cP	cP	
5	OVISCOMP	OVISCOMP is a real positive value defining the oil viiscosity (μ _{oc}) at the oil reference pressure, Uwc(Pref) and is defined as: $\mu_{oc} = -\frac{1}{\mu_o} \left(\frac{d\mu_o}{dP} \right)$			None
		l/psia	l/barsa	l/atma	

Notes:
1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
2) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.90: PVCDO Keyword Description

See also the RSCONST and RSCONSTT keywords to define the constant Rs for dead oil and PVDO as an alternative keyword to enter the dead oil properties.

¹¹⁰ “Dead” oil is oil that it contains no dissolved gas or a relatively thick oil or residue that has lost its volatile components.

Example

```
--
--      OIL PVT TABLE FOR DEAD WITH CONSTANT COMPRESSIBILITY
--
PVCDO
--      REF PRES      B0          C0          VISC          VISC
--      PSIA          RB/STB      1/PSIA      CPOISE      GRAD
--      -----
--      3840.0        1.080        1.5E-6      1.750        0.0        / TABLE NO. 01
--      3840.0        1.100        1.5E-6      1.050        0.0        / TABLE NO. 02
--      3840.0        1.120        1.6E-6      0.950        0.0        / TABLE NO. 03
--      3840.0        1.140        1.7E-6      0.850        0.0        / TABLE NO. 04
--      3840.0        1.160        1.7E-6      0.800        0.0        / TABLE NO. 05
```

The above example defines five dead oil PVT tables with constant compressibility and viscosity, and assumes that NTPVT equals five on the TABDIMS keyword in the RUNSPEC section.

There is no terminating “/” for this keyword.

8.3.217 PVCO - OIL PVT PROPERTIES FOR LIVE OIL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PVCO defines the oil PVT properties for live^{III} and the keyword should only be used if there is both oil and gas phases in the model. This keyword should be used when the DISGAS keyword has been declared in the RUNSPEC section indicating that dissolved gas (more commonly referred to as solution gas) is present in the oil. The keyword may be used for oil-water and oil-water-gas input decks. This is an alternative keyword to the PVTO keyword in the PROPS section that also enables entering live oil PVT data. Here, the PVCO keyword assumes that for the undersaturated oil with a given Gas-Oil Ratio ("GOR" or "Rs"), the oil compressibility is independent of the pressure. Hence, it is not necessary to enter the undersaturated oil formation volume factor versus pressure data. Similarly, the viscosity of the same type of oil is assumed to have a pressure independent "viscosity" derivative, and therefore it is not necessary to enter undersaturated viscosity versus pressure data.

This keyword is ignored by OPM Flow and has no effect on the simulation; however, the PVTO keyword in the PROPS section may be used to enter live oil PVT data instead.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	PRESS is a real columnar vector of real monotonically increasing down the column values that defines the oil phase saturation pressure (bubble-point pressure), that defines the RS, oil formation volume factor and the oil viscosity at PRESS.			None
		psia	barsa	atma	
2	RS	RS is a real monotonically increasing down the column values that defines the saturated gas-oil ratio (“GOR”) or Rs, for the given value of PRESS.			I*
		Mscf/stb	sm³/sm³	scc/scc	
3	OFVF	OFVF is a real positive value defining the oil saturated formation volume factor (Bo) at the saturation pressure PRESS.			None
		rb/stb	rm³/sm³	rcc/scc	
4	OVISC	OVISC is a real positive value defining the oil viscosity (μo) at the oil saturated reference pressure, PRESS.			I*
		cP	cP	cP	
5	OCOMP	OCOMP is a real positive value defining the oil compressibility (Co) at the saturated oil reference pressure and is defined as: $C_o = -\frac{1}{B_o} \left(\frac{dB_o}{dP} \right)$			I*
		l/psia	l/barsa	l/atma	

^{III} "Live" oil is oil that contains gas in solution, which is normally the case for most conventional oil reservoirs. However, for oil reservoirs classified as heavy oil reservoirs, the in situ dissolved gas may be negligible and oil would then be classified as gas-free oil which is commonly referred to as "dead" oil.

No.	Name	Description			Default
		Field	Metric	Laboratory	
6	OVISCOMP	OVISCOMP is a real positive value defining the oil viscosity (μ_{oc}) at the saturated oil reference pressure with the given RS, where (μ_{oc}) is defined as: $\mu_{oc} = -\frac{1}{\mu_o} \left(\frac{d\mu_o}{dP} \right)$			1*
		l/psia	l/barsa	l/atma	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Items (2) to (6) may be defaulted, in which case linear interpolation will be used to calculate the missing values. In addition, OVISCOMP, item (6), may be completely defaulted, which sets this data to zero.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.91: PVCO Keyword Description

Example

```
--
--      OIL PVT TABLE FOR LIVE OIL
--
PVCO
--      PSAT      RS      B0      VISC      OIL      OIL
--      PSIA      MSCF/STB  RB/STB  CPOISE  COMPRES  VISCOS
--      -----
--      14.7      0.0010  1.05340  1.7230  3.0E-5  1*
--      500.0      0.0890  1.08890  1.1670  1*      1*
--      1000.0     0.2060  1.13850  0.8570  1*      1*
--      1500.0     0.3360  1.19640  0.6840  1*      1*
--      2000.0     0.4750  1.26110  0.5750  1*      1*
--      2500.0     0.6220  1.33160  0.5000  1*      1*
--      3000.0     0.7750  1.40740  0.4450  1*      1*
--      3500.0     0.9330  1.48790  0.4020  1*      1*
--      4000.0     1.0960  1.57280  0.3680  1*      1*
--      4258.0     1.1800  1.61760  0.3530  1*      1*
--      4500.0     1.2630  1.66190  0.3400  1*      1*
--      5000.0     1.4340  1.75480  0.3170  1*      1*
--      5500.0     1.6060  1.85020  0.2980  1*      1*      / TABLE NO. 01
--
--      PSAT      RS      B0      VISC      OIL      OIL
--      PSIA      MSCF/STB  RB/STB  CPOISE  COMPRES  VISCOS
--      -----
--      14.7      0.0010  1.05340  1.7230  3.0E-5  1*
--      500.0      0.0890  1.08890  1.1670  1*      1*
--      1000.0     0.2060  1.13850  0.8570  1*      1*
--      1500.0     0.3360  1.19640  0.6840  1*      1*
--      2000.0     0.4750  1.26110  0.5750  1*      1*
--      2500.0     0.6220  1.33160  0.5000  1*      1*
--      3000.0     0.7750  1.40740  0.4450  1*      1*
--      3500.0     0.9330  1.48790  0.4020  1*      1*
--      4000.0     1.0960  1.57280  0.3680  1*      1*
--      4258.0     1.1800  1.61760  0.3530  1*      1*
--      4500.0     1.2630  1.66190  0.3400  1*      1*
--      5000.0     1.4340  1.75480  0.3170  1*      1*
--      5500.0     1.6060  1.85020  0.2980  1*      1*      / TABLE NO. 02
```

The above example defines two live oil PVT tables with constant compressibility above the saturation pressure, and assumes that NTPVT equals two on the TABDIMS keyword in the RUNSPEC section.

8.3.218 PVDG - GAS PVT PROPERTIES FOR DRY GAS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	------------------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PVDG defines the gas PVT properties for dry gas¹¹². If the gas has a constant and uniform vaporized oil concentration, Condensate-Gas Ratio (“CGR”), and if the reservoir pressure never drops below the saturation pressure (dew point pressure), then the model can be run more efficiently by omitting the OIL and VAPOIL keywords from the RUNSPEC section, treating the gas as a dry gas, and defining a constant Rv (CGR) value with keyword RVCONST or RVCONSTT in the PROPS section. This results in the model being run with as a dry gas problem with no active oil (condensate) phase. However, OPM Flow takes into account the constant Rv in the calculations and reporting.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	A columnar vector of real monotonically increasing down the column values that defines the gas phase pressure.			None
		psia	barsa	atma	
2	GFVF	A columnar vector of real decreasing down the column values that defines the corresponding gas phase formation volume factor.			None
		rb/Mscf	rm ³ /sm ³	rcc/scc	
3	GVISC	A columnar vector of real increasing down the column values that defines the corresponding gas phase viscosity.			None
		cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.92: PVDG Keyword Description

See also the RVCONST and RVCONSTT keywords to define the constant Rv for dry gas.

¹¹² Natural gas that occurs in the absence of condensate or liquid hydrocarbons, or gas that had condensable hydrocarbons removed, is called dry gas. It is primarily methane with some intermediates. The hydrocarbon mixture is solely gas in the reservoir and there is no liquid (condensate surface liquid) formed either in the reservoir or at surface. The term dry indicates that the gas does not contain heavier hydrocarbons to form liquids at the surface conditions. Dry gas typically has GOR's greater than 100,000 scf/stb or 18,000 Sm³/m³.

Example

```
--
--      GAS PVT TABLE FOR DRY GAS
--
PVDG
--      PRES      BG      VISC
--      PSIA      RB/MSCF  CPOISE
--      -----
--      14.7      197.8092  0.0129
--      50.0      65.9364  0.0130
--      100.0     31.6495  0.0130
--      230.0     13.8813  0.0131
--      460.0     6.8210  0.0132
--      690.0     4.4703  0.0135
--      920.0     3.2968  0.0138
--      1150.0    2.6113  0.0141
--      1380.0    2.1560  0.0145
--      1610.0    1.8316  0.0150
--      1840.0    1.5952  0.0155
--      2070.0    1.4129  0.0161
--      2300.0    1.2700  0.0167
--      2372.0    1.2305  0.0169
--      2530.0    1.1551  0.0174
--      2760.0    1.0621  0.0181
--      2990.0    0.9841  0.0189
--      3220.0    0.9190  0.0196
--      3450.0    0.8638  0.0204
--      4500.0    0.6910  0.0242
--      6000.0    0.5616  0.0293
--
--
--
--      PRES      BG      VISC
--      PSIA      RB/MSCF  CPOISE
--      -----
--      14.7      265.0126  0.0133
--      50.0      66.2531  0.0133
--      100.0     33.1266  0.0133
--      230.0     14.4552  0.0134
--      460.0     7.0357  0.0136
--      690.0     4.6493  0.0138
--      920.0     3.4417  0.0140
--      1150.0    2.7227  0.0144
--      1380.0    2.2522  0.0147
--      1610.0    1.9158  0.0151
--      1840.0    1.6702  0.0156
--      2070.0    1.4805  0.0162
--      2300.0    1.3317  0.0167
--      2372.0    1.2927  0.0169
--      2530.0    1.2119  0.0173
--      2760.0    1.1135  0.0180
--      2990.0    1.0325  0.0187
--      3220.0    0.9637  0.0194
--      3450.0    0.9055  0.0201
--      4500.0    0.7228  0.0236
--      6000.0    0.5837  0.0285
--
--
--
--      / TABLE N0. 01
--
--
--
--      / TABLE N0. 02
```

The above example defines two dry PVT tables assuming NTPVT equals two and NPPVT is greater than or equal to 22 on the TABDIMS keyword in the RUNSPEC section.

There is no terminating "/" for this keyword.

8.3.219 PVDO – OIL PVT PROPERTIES FOR DEAD OIL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	--------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PVDO defines the oil PVT properties for dead oil¹¹³. If the oil has a constant and uniform dissolved gas concentration, Gas-Oil Ratio (“GOR”), and if the reservoir pressure never drops below the saturation pressure (bubble point pressure), then the model can be run more efficiently by omitting the GAS and DISGAS keywords from the RUNSPEC section, treating the oil as a dead oil, and defining a constant Rs (GOR) value with keyword RSCONST or RSCONSTT in the PROPS section. This results in the model being run as a dead oil problem with no active gas phase. However, OPM Flow takes into account the constant Rs in the calculations and reporting.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	A columnar vector of real monotonically increasing down the column values that defines the oil phase pressure.			None
		psia	barsa	atma	
2	OFVF	A columnar vector of real decreasing down the column values that defines the corresponding oil phase formation volume factor.			None
		rb/stb	rm ³ /sm ³	rcc/scc	
3	OVISC	A columnar vector of real increasing down the column values that defines the corresponding oil phase viscosity.			None
		cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.93: PVDO Keyword Description

See also the RSCONST and RSCONSTT keywords to define the constant Rs for dead oil and PVCDO as an alternative keyword to enter the dead oil properties.

¹¹³ “Dead” oil is oil that it contains no dissolved gas or a relatively thick oil or residue that has lost its volatile components.

Example

--	OIL PVT TABLE FOR DEAD OIL			
--				
PVDO				
--	PSAT	BO	VISC	
--	PSIA	RB/STB	CPOISE	
--	-----	-----	-----	
	400	1.0102	1.16	
	1200	1.0040	1.164	
	2000	0.9960	1.167	
	2800	0.9880	1.172	
	3600	0.9802	1.177	
	4400	0.9724	1.181	
	5200	0.9646	1.185	
	5600	0.9607	1.19	/ TABLE NO. 01
--	-----	-----	-----	
	800	1.0255	1.14	
	1600	1.0172	1.14	
	2400	1.0091	1.14	
	3200	1.0011	1.14	
	4000	0.9931	1.14	
	4800	0.9852	1.14	
	5600	0.9774	1.14	/ TABLE NO. 02

The above example defines two dead oil PVT tables with variable viscosity and compressibility with respect to pressure, and assumes that NTPVT equals two and NPPVT is greater than or equal to eight on the TABDIMS keyword in the RUNSPEC section.

There is no terminating “/” for this keyword.

8.3.220 PVDS - SOLVENT PVT PROPERTIES FOR THE SOLVENT MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PVDS defines the solvent PVT properties for use with SOLVENT option. The solvent is treated as an additional dry gas phase within the model. This keyword should only be used if the SOLVENT model has been invoked in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	A columnar vector of real monotonically increasing down the column values that defines the solvent phase pressure.			None
		psia	barsa	atma	
2	GFVF	A columnar vector of real decreasing down the column values that defines the corresponding solvent phase formation volume factor.			None
		rb/Mscf	rm ³ /sm ³	rcc/scc	
3	GVISC	A columnar vector of real increasing down the column values that defines the corresponding solvent phase viscosity.			None
		cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.94: PVDS Keyword Description

Example

```
--
--      GAS SOLVENT PVT TABLE
--
PVDS
--      PRES      BG      VISC
--      PSIA      RB/MSCF  CPOISE
--      -----
--      700.0      4.4703   0.0135
--      920.0      3.2968   0.0138
--      1150.0     2.6113   0.0141
--      1380.0     2.1560   0.0145
--      1610.0     1.8316   0.0150
--      1840.0     1.5952   0.0155
--      2070.0     1.4129   0.0161
--      2300.0     1.2700   0.0167
--      2372.0     1.2305   0.0169
--      2530.0     1.1551   0.0174
--      2760.0     1.0621   0.0181
--      2990.0     0.9841   0.0189
--      3220.0     0.9190   0.0196
--      3450.0     0.8638   0.0204
--      4500.0     0.6910   0.0242
--      6000.0     0.5616   0.0293
--
--
--      PRES      BG      VISC
--      PSIA      RB/MSCF  CPOISE
--      -----
--      700.0      4.6493   0.0138
--      920.0      3.4417   0.0140
--      1150.0     2.7227   0.0144
--      1380.0     2.2522   0.0147
--      1610.0     1.9158   0.0151
--      1840.0     1.6702   0.0156
--      2070.0     1.4805   0.0162
--      2300.0     1.3317   0.0167
--      2372.0     1.2927   0.0169
--      2530.0     1.2119   0.0173
--      2760.0     1.1135   0.0180
--      2990.0     1.0325   0.0187
--      3220.0     0.9637   0.0194
--      3450.0     0.9055   0.0201
--      4500.0     0.7228   0.0236
--      6000.0     0.5837   0.0285
--
--
--      / TABLE N0. 01
--
--
--      / TABLE N0. 02
```

The above example defines two solvent PVT tables assuming NTPVT equals two and NPPVT is greater than or equal to 16 on the TABDIMS keyword in the RUNSPEC section.

There is no terminating "/" for this keyword.

8.3.221 PVTG - GAS PVT PROPERTIES FOR WET GAS WITH VAPORIZED OIL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PVTG defines the gas PVT properties for wet gas¹¹⁴. This keyword should be used when the VAPOIL keyword has been declared in the RUNSPEC section indicating that vaporized oil (more commonly referred to as condensate) is present in the wet gas phase. The keyword may be used for gas-water and oil-water-gas input decks that contain the oil and gas phases.

No.	Name		Description			Default
			Field	Metric	Laboratory	
1	PRESS		<p>A real monotonically increasing down the column vector that defines the gas phase pressure, associated with the saturated condensate-gas ratio ("CGR") or Rv, the gas formation volume factor and the gas viscosity for the corresponding pressure for the stated saturated RVS.</p> <p>For a given PRESS the variability of the gas formation volume factor and the gas viscosity with respect to the under-saturated Rv is optionally included as a sub table under RVU, FVFU and VISU columns, that is it is not necessary to repeat PRESS for each sub table entry. However, each sub table must be terminated by a "I".</p> <p>The under saturated Rv entries are optional, except for perhaps the last PRESS entry to define the PVT properties above the initial saturation pressure.</p>			None
			psia	barsa	atma	
2	RVS	RVU	<p>A columnar vector of real positive number for both the saturated (RVS) and under saturated (RVU) Rv sub table entries.</p> <p>The RVS entry on the main table is the saturated CGR at the pressure indicated by PRESS and may be increasing or decreasing in value as PRESS varies.</p> <p>Subsequent under-saturated Rv for a sub table at the given PRESS, as defined by RVU, are monotonically decreasing for entries in a given sub table.</p>			None
			stb/Mscf	sm ³ /sm ³	rcc/scc	
3	FVFS	FVFU	<p>A columnar vector of real decreasing down the column values that defines the corresponding gas phase formation volume factor for a given pressure (PRESS) and for a given Rv (either RVS or RVU).</p>			None
			rb/Mscf	rm ³ /sm ³	rcc/scc	
4	VISS	VISU	<p>VISS a columnar vector of real increasing down the column values that defines the corresponding gas phase viscosity for a given pressure (PRESS) and for a given RVS.</p> <p>VISU a columnar vector of real decreasing from VISS down the column values that defines the corresponding gas phase viscosity for a given pressure (PRESS) and for a given RVU.</p>			None
			cP	cP	cP	

¹¹⁴ Natural gas that contains significant heavy hydrocarbons such as propane, butane and other liquid hydrocarbons is known as wet gas or rich gas. The general rule of thumb is if the gas contains less methane (typically less than 85% methane) and more ethane, and other more complex hydrocarbons, it is labeled as wet gas. Wet gas normally has GOR's less than 100,000 scf/stb or 18,000 Sm³/m³, with the condensate having a gravity greater than 50 °API.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes:					
<div><div>1)</div><div>The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.</div></div>					
<div><div>2)</div><div>Each table must contain a minimum of two rows and a maximum of NPPVT rows and NRPVT Rv entries as declared on the TABDIMS keyword in the RUNSPEC section.</div></div>					
<div><div>3)</div><div>Apart from the PRES data there must be same number of entries for each column.</div></div>					
<div><div>4)</div><div>Each sub table defining the under saturated gas properties must be terminated by “/”.</div></div>					
<div><div>5)</div><div>Each main table is terminated by a single “/” on a separate line and there is no “/” terminator for the keyword.</div></div>					

Table 8.95: PVTG Keyword Description

Example

```
--
--      GAS PVT TABLE FOR WET GAS WITH VAPORIZED OIL
--
PVTG
--      PRES      RV      BG      VISC
--      PSIA      STB/MSCF  RB/MSCF  CPOISE
--      -----
--      300      0.000132  0.042340  0.01344
--              0          0.042310  0.01389  /
--      600      0.000124  0.020460  0.01420
--              0          0.020430  0.01450  /
--      900      0.000126  0.013280  0.01526
--              0          0.013250  0.01532  /
--      1200     0.000135  0.009770  0.01660
--              0          0.009730  0.01634  /
--      1500     0.000149  0.007730  0.01818
--              0          0.007690  0.01752  /
--      1800     0.000163  0.006426  0.01994
--              0          0.006405  0.01883  /
--      2100     0.000191  0.005541  0.02181
--              0          0.005553  0.02021  /
--      2400     0.000225  0.004919  0.02370
--              0          0.004952  0.02163  /
--                                     / TABLE NO. 1
--
--      PRES      RV      BG      VISC
--      PSIA      STB/MSCF  RB/MSCF  CPOISE
--      -----
--      300      0.000132  0.042340  0.01344
--      600      0.000124  0.020460  0.01420
--      900      0.000126  0.013280  0.01526
--      1200     0.000135  0.009770  0.01660
--      1500     0.000149  0.007730  0.01818
--      1800     0.000163  0.006426  0.01994
--      2100     0.000191  0.005541  0.02181
--      2400     0.000225  0.004919  0.02370
--              0          0.004952  0.02163  /
--                                     / TABLE NO. 2
```

The above example defines two wet PVT tables assuming NTPVT equals two, NPPVT is greater than or equal to eight, and NRPVT greater than or equal to two on the TABDIMS keyword in the RUNSPEC section.

Notice that there is no terminating “/” for this keyword only for a table and a sub table.

8.3.222 PVTGW - GAS PVT PROPERTIES FOR DRY GAS WITH VAPORIZED WATER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PVTGW defines the gas PVT properties for dry gas¹¹⁵ with vaporized water. This keyword should be used when the VAPWAT keyword has been declared in the RUNSPEC section indicating that that vaporized water is present in the dry gas phase. The keyword may be used for gas-water and oil-water-gas input decks that contain the dry gas and vaporized water phases.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note

This is an OPM Flow specific keyword for the simulator's Water Vaporization Model that is activated by declaring that vaporized water is present in the run.

No.	Name		Description			Default
			Field	Metric	Laboratory	
1	PRESS		<p>A real monotonically increasing down the column vector that defines the gas phase pressure, associated with the corresponding saturated water-gas ratio ("WGR") or R_w, the gas formation volume factor, and the gas viscosity for the stated saturated RWS.</p> <p>For a given PRESS the variability of the gas formation volume factor and the gas viscosity with respect to the under-saturated R_w is optionally included as a sub table under RWU, FVFU and VISU columns, that is it is not necessary to repeat PRESS for each sub table entry. However, each sub table must be terminated by a "/".</p> <p>The under saturated R_w entries are optional, except for perhaps the last PRESS entry to define the PVT properties above the initial saturation pressure.</p>			None
			psia	barsa	atma	
2	RWS	RWU	<p>A columnar vector of real positive numbers for both the saturated (RWS) and under saturated (RWU) R_w sub table entries.</p> <p>The RWS entry on the main table is the saturated WGR at the pressure indicated by PRESS and may be increasing or decreasing in value as PRESS varies.</p> <p>Subsequent under-saturated R_w for a sub table at the given PRESS, as defined by RWU, are monotonically decreasing for entries in a given sub table.</p>			None
			stb/Mscf	sm ³ /sm ³	rcc/scc	
3	FVFS	FVFU	<p>A columnar vector of real decreasing down the column values that defines the corresponding gas phase formation volume factor for a given pressure (PRESS) and for a given R_w (either RWS or RWU).</p>			None

¹¹⁵ Natural gas that occurs in the absence of condensate or liquid hydrocarbons, or gas that had condensable hydrocarbons removed, is called dry gas. It is primarily methane with some intermediates. The hydrocarbon mixture is solely gas in the reservoir and there is no liquid (condensate surface liquid) formed either in the reservoir or at surface. The term dry indicates that the gas does not contain heavier hydrocarbons to form liquids at the surface conditions. Dry gas typically has GOR's greater than 100,000 scf/stb or 18,000 Sm³/m³.

No.	Name		Description			Default
			Field	Metric	Laboratory	
			rb/Mscf	rm ³ /sm ³	rcc/scc	
4	VISS	VISU	VISS a columnar vector of real increasing down the column values that defines the corresponding gas phase viscosity for a given pressure (PRESS) and for a given RWS. VISU a columnar vector of real decreasing from VISS down the column values that defines the corresponding gas phase viscosity for a given pressure (PRESS) and for a given RWU.			None
			cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows and NRPVT Rw entries as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Apart from the PRES data there must be same number of entries for each column.
- 4) Each sub table defining the under saturated gas properties must be terminated by “/”.
- 5) Each main table is terminated by a single “/” on a separate line and there is no “/” terminator for the keyword.

Table 8.96: PVTGW Keyword Description

See also the PVTG keyword in the PROPS section that defines the wet gas PVT for when vaporized oil is present in the gas phase. Alternatively, the PVTGWO in the PROPS section may be utilized instead of PVTWO to fully define the wet gas PVT properties, for when both vaporized oil and water are present in the gas phase.

Example

```
--
--      GAS PVT TABLE FOR DRY GAS WITH VAPORIZED WATER (OPM FLOW KEYWORD)
--
PVTGW
--      PRES      RW      BG      VISC
--      PSIA      STB/MSCF  RB/MSCF  CPOISE
--      -----
--      300      0.000479    0.042340    0.01344
--              0            0.042310    0.01389      /
--      600      0.000469    0.020460    0.01420
--              0            0.020430    0.01450      /
--      900      0.000403    0.013280    0.01526
--              0            0.013250    0.01532      /
--      1200     0.000354    0.009770    0.01660
--              0            0.009730    0.01634      /
--      1500     0.000272    0.007730    0.01818
--              0            0.007690    0.01752      /
--      1800     0.000225    0.006426    0.01994
--              0            0.006405    0.01883      /
--      2100     0.000191    0.005541    0.02181
--              0            0.005553    0.02021      /
--      2400     0.000163    0.004919    0.02370
--              0            0.004952    0.02163      /
--                                     / TABLE NO. 1
```

--	PRES	RW	BG	VISC
--	PSIA	STB/MSCF	RB/MSCF	CP0ISE
--	-----	-----	-----	-----
	300	0.000479	0.042340	0.01344
	600	0.000469	0.020460	0.01420
	900	0.000403	0.013280	0.01526
	1200	0.000354	0.009770	0.01660
	1500	0.000272	0.007730	0.01818
	1800	0.000225	0.006426	0.01994
	2100	0.000191	0.005541	0.02181
	2400	0.000163	0.004919	0.02370

/
/ TABLE NO. 2

The above example defines two dry gas PVT tables assuming NTPVT equals two and NPPVT is greater than or equal to eight on the TABDIMS keyword in the RUNSPEC section.

Notice that there is no terminating “/” for this keyword only for a table and a sub table.

8.3.223 PVTGWO - GAS PVT PROPERTIES FOR WET GAS WITH VAPORIZED WATER AND OIL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PVTGWO defines the gas PVT properties for wet gas¹¹⁶ with vaporized water and oil. This keyword should be used when the VAPOIL and VAPWAT keywords have been declared in the RUNSPEC section indicating that that vaporized oil and water is present in the wet gas phase. The keyword may be used for oil-water-gas input decks that contain the wet gas with vaporized oil and water phases.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note

This is an OPM Flow specific keyword for the simulator's Water Vaporization Model that is activated by declaring that vaporized water is present in the run.

No.	Name		Description			Default
			Field	Metric	Laboratory	
1	PRESS		A real monotonically increasing down the column vector that defines the gas phase pressure, associated with the saturated water-gas ratio ("WGR") or R_w , the saturated condensate-gas ratio ("CGR") or R_v , the gas formation volume factor, and the gas viscosity for the corresponding pressure for the stated saturated RWS.			None
			For a given PRESS the variability of the gas formation volume factor and the gas viscosity with respect to the under-saturated R_w is optionally included as a sub table under RWU, FVFU and VISU columns, that is it is not necessary to repeat PRESS for each sub table entry. However, each sub table must be terminated by a "/".			
			The under saturated R_w entries are optional, except for perhaps the last PRESS entry to define the PVT properties above the initial saturation pressure.			
			psia	barsa	atma	
2	RWS	RWU	A columnar vector of real positive numbers for both the saturated (RWS) and under saturated (RWU) R_w sub table entries.			None
			The RWS entry on the main table is the saturated WGR at the pressure indicated by PRESS and may be increasing or decreasing in value as PRESS varies.			
			Subsequent under-saturated R_w for a sub table at the given PRESS, as defined by RWU, are monotonically decreasing for entries in a given sub table.			
			stb/Mscf	sm^3/sm^3	rcc/scc	

¹¹⁶ Natural gas that contains significant heavy hydrocarbons such as propane, butane and other liquid hydrocarbons is known as wet gas or rich gas. The general rule of thumb is if the gas contains less methane (typically less than 85% methane) and more ethane, and other more complex hydrocarbons, it is labeled as wet gas. Wet gas normally has GOR's less than 100,000 scf/stb or 18,000 Sm³/m³, with the condensate having a gravity greater than 50 °API.

No.	Name		Description			Default
			Field	Metric	Laboratory	
3	RVS	RVU	A columnar vector of real positive numbers for both the saturated (RVS) and under saturated (RVU) Rv sub table entries. The RVS entry on the main table is the saturated CGR at the pressure indicated by PRESS and may be increasing or decreasing in value as PRESS varies. Subsequent under-saturated Rv for a sub table at the given PRESS, as defined by RVU, are monotonically decreasing for entries in a given sub table.			None
			stb/Mscf	sm ³ /sm ³	rcc/scc	
4	FVFS	FVFU	A columnar vector of real decreasing down the column values that defines the corresponding gas phase formation volume factor for a given pressure (PRESS) and for a given Rw (either RWS or RWU).			None
			rb/Mscf	rm ³ /sm ³	rcc/scc	
5	VISS	VISU	VISS a columnar vector of real increasing down the column values that defines the corresponding gas phase viscosity for a given pressure (PRESS) and for a given RWS. VISU a columnar vector of real decreasing from VISS down the column values that defines the corresponding gas phase viscosity for a given pressure (PRESS) and for a given RWU.			None
			cP	cP	cP	
Notes: 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows and NRPVT Rw entries as declared on the TABDIMS keyword in the RUNSPEC section. 3) Apart from the PRES data there must be same number of entries for each column. 4) Each sub table defining the under saturated gas properties must be terminated by “/”. 5) Each main table is terminated by a single “/” on a separate line and there is no “/” terminator for the keyword.						

Table 8.97: PVTGW Keyword Description

See also the PVTG keyword in the PROPS section that defines the wet gas PVT for when only vaporized oil is present in the gas phase. Alternatively, the PVTGW in the PROPS section may be utilized instead of the PVTGWO keyword if only vaporized vaporized water is present in the gas phase.

Example

```
--
--      GAS PVT TABLE FOR WET GAS WITH VAPORIZED WATER & OIL (OPM FLOW KEYWORD)
--
PVTGW0
--      PRES      RW      RV      BG      VISC
--      PSIA      STB/MSCF  STB/MSCF  RB/MSCF  CPOISE
--      -----
--      300      0.000479  0.000132  0.042340  0.01344
--              0          0          0.042310  0.01389  /
--      600      0.000469  0.000124  0.020460  0.01420
--              0          0          0.020430  0.01450  /
--      900      0.000403  0.000126  0.013280  0.01526
--              0          0          0.013250  0.01532  /
--      1200     0.000354  0.000135  0.009770  0.01660
--              0          0          0.009730  0.01634  /
--      1500     0.000272  0.000149  0.007730  0.01818
--              0          0          0.007690  0.01752  /
--      1800     0.000225  0.000163  0.006426  0.01994
--              0          0          0.006405  0.01883  /
--      2100     0.000191  0.000191  0.005541  0.02181
--              0          0          0.005553  0.02021  /
--      2400     0.000163  0.000225  0.004919  0.02370
--              0          0          0.004952  0.02163  /
--                                     / TABLE NO. 1
--
--      PRES      RW      RV      BG      VISC
--      PSIA      STB/MSCF  STB/MSCF  RB/MSCF  CPOISE
--      -----
--      300      0.000479  0.000132  0.042340  0.01344
--      600      0.000469  0.000124  0.020460  0.01420
--      900      0.000403  0.000126  0.013280  0.01526
--      1200     0.000354  0.000135  0.009770  0.01660
--      1500     0.000272  0.000149  0.007730  0.01818
--      1800     0.000225  0.000163  0.006426  0.01994
--      2100     0.000191  0.000191  0.005541  0.02181
--      2400     0.000163  0.000225  0.004919  0.02370  /
--                                     / TABLE NO. 2
```

The above example defines two wet PVT tables assuming NTPVT equals two and NPPVT is greater than or equal to eight on the TABDIMS keyword in the RUNSPEC section.

Notice that there is no terminating “/” for this keyword only for a table and a sub table.

8.3.224 PVTO - OIL PVT PROPERTIES FOR LIVE OIL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PVTO defines the oil PVT properties for live oil¹¹⁷ and the keyword should only be used if there is both oil and gas phases in the model. This keyword should be used when the DISGAS keyword has been declared in the RUNSPEC section indicating that dissolved gas (more commonly referred to as solution gas) is present in the oil. The keyword may be used for oil-water and oil-water-gas input decks.

No.	Name		Description			Default
			Field	Metric	Laboratory	
1	RS		<p>A real monotonically increasing down the column values that defines the saturated gas-oil ratio ("GOR") or Rs, that defines the oil formation volume factor and the oil viscosity for the tabulated corresponding pressure for stated saturated RS.</p> <p>For a given RS the variability of the oil formation volume factor and the oil viscosity with respect to the saturated RS and pressure is optionally included as a sub table under PRSU, FVFU and VISU columns, that is it is not necessary to repeat RS for each sub table entry. However, each sub table must be terminated by a "/".</p> <p>The under-saturated PRSU entries are optional, except for perhaps the last RS entry to define the PVT properties above the initial saturation pressure.</p> <p>If there are no following under-saturated PRSU entries then the RS entry row should be terminated by a "/", if there are under-saturated PRSU entries then the last PRSU entry row should be terminated by a "/".</p>			None
			Mscf/stb	sm ³ /sm ³	scc/scc	
2	PRSS	PRSU	<p>PRSS is a real columnar vector of real monotonically increasing down the column values that defines the oil phase saturation pressure (bubble-point pressure), that defines the oil formation volume factor and the oil viscosity for the corresponding PRSS pressure for a given saturated RS.</p> <p>PRSU is a real columnar vector of real monotonically increasing down the column values that defines the oil phase under-saturated pressure that defines the oil formation volume factor and the oil viscosity for the corresponding PRSU pressure for a given saturated RS.</p> <p>Note that PRSU should be greater than PRSS.</p>			None
			psia	barsa	atma	
3	FVFS	FVFU	<p>FVFS is a columnar vector of real increasing down the column values that defines the corresponding oil phase saturated formation volume factor for a given pressure (PRSS) and for a given RS.</p> <p>FVFU is a columnar vector of real decreasing down the column values that defines the corresponding oil phase under-saturated formation volume factor for a given pressure (PRSU) and for a given RS.</p>			None
			rb/stb	rm ³ /sm ³	rcc/scc	

¹¹⁷ "Live" oil is oil that contains gas in solution, which is normally the case for most conventional oil reservoirs. However, for oil reservoirs classified as heavy oil reservoirs, the in situ dissolved gas may be negligible and oil would then be classified as gas-free oil which is commonly referred to as "dead" oil.

No.	Name		Description			Default
			Field	Metric	Laboratory	
4	VISS	VISU	VISS a columnar vector of real increasing down the column values that defines the corresponding oil phase saturated viscosity for a given pressure (PRSS) and for a given RS. If this is the only entry for a given RS and PRSS then the record should be terminate by a “/”.			None
			VISU a columnar vector of real decreasing from VISS down the column values that defines the corresponding oil phase under-saturated viscosity for a given pressure (PRSU) and for a given RS. If this is the only entry for a given RS and PRSU then the record should be terminate by a “/”.			
			cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows and NRPVT Rs entries as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Apart from the RS data there must be same number of entries for each column.
- 4) Each sub table defining the under saturated gas properties must be terminated by “/”.
- 5) Each main table is terminated by a single “/” on a separate line and there is no “/” terminator for the keyword.

Table 8.98: PVT0 Keyword Description

Example

The following example defines live oil PVT tables assuming NTPVT equals two, NPPVT is greater than or equal to eight, and NRPVT greater than or equal to two on the TABDIMS keyword in the RUNSPEC section.

```
--
--      OIL PVT TABLE FOR LIVE OIL
--
PVT0
--      RS          PSAT      BO          VISC
--      MSCF/STB    PSIA      RB/STB      CPOISE
--      -----
--      0.0010      14.7      1.05340     1.7230 /
--      0.0890      500.0     1.08890     1.1670 /
--      0.2060      1000.0    1.13850     0.8570 /
--      0.3360      1500.0    1.19640     0.6840 /
--      0.4050      1750.0    1.22800     0.6240 /
--      0.4750      2000.0    1.26110     0.5750 /
--      0.5480      2250.0    1.29570     0.5340 /
--      0.6220      2500.0    1.33160     0.5000 /
--      0.6980      2750.0    1.36890     0.4700 /
--      0.7750      3000.0    1.40740     0.4450 /
--      0.8530      3250.0    1.44710     0.4220 /
--      0.9330      3500.0    1.48790     0.4020 /
--      1.0140      3750.0    1.52980     0.3840 /
--      1.0960      4000.0    1.57280     0.3680 /
--      1.1800      4258.0    1.61760     0.3530 /
--      1.2630      4500.0    1.66190     0.3400 /
--      1.3480      4750.0    1.70780     0.3280 /
--      1.4340      5000.0    1.75480     0.3170 /
--      1.6060      5500.0    1.85020     0.2980 /
--      6242.0     1.83040     0.3186 /
--
-- / TABLE NO. 1
```

RS	PSAT	BO	VISC	
MSCF/STB	PSIA	RB/STB	CPOISE	
0.0010	14.7	1.05340	1.7230	/
0.0390	250.0	1.06830	1.4220	/
0.0890	500.0	1.08890	1.1670	/
0.1460	750.0	1.11250	0.9850	/
0.2060	1000.0	1.13850	0.8570	/
0.2700	1250.0	1.16660	0.7590	/
0.3360	1500.0	1.19640	0.6840	/
0.4050	1750.0	1.22800	0.6240	/
0.4750	2000.0	1.26110	0.5750	/
0.5480	2250.0	1.29570	0.5340	/
0.6220	2500.0	1.33160	0.5000	/
0.6980	2750.0	1.36890	0.4700	/
0.7750	3000.0	1.40740	0.4450	/
0.8530	3250.0	1.44710	0.4220	/
0.9330	3500.0	1.48790	0.4020	/
1.0140	3750.0	1.52980	0.3840	/
1.0960	4000.0	1.57280	0.3680	/
1.1800	4258.0	1.61760	0.3530	/
1.2630	4500.0	1.66190	0.3400	/
1.3480	4750.0	1.70780	0.3280	/
1.4340	5000.0	1.75480	0.3170	/
1.6060	5500.0	1.85020	0.2980	/
	6242.0	1.83040	0.3186	/
/ TABLE NO. 2				

Notice that there must be at least two entries for the last Rs value to enable the simulator to interpolate over the undersaturated pressure region. Secondly, there is no terminating "/" for this keyword only for a table and a sub table.

8.3.225 PVT SOL - OIL PVT PROPERTIES FOR LIVE OIL VERSUS CO₂ MASS FRACTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PVT SOL defines the live oil PVT properties as a function of CO₂ mass fraction. The keyword automatically invokes the simulator's CO₂ Dynamic EOR Model¹¹⁸, that uses a fourth component to model the injected CO₂, for use in evaluating CO₂ Enhanced Oil Recovery ("EOR") projects. Normally CO₂ EOR projects are evaluated via compositional simulators to account for the mass transfer of the various components and phases. Unfortunately, compositional models are computationally expensive compared to the black-oil approach, which for field studies is challenging, especially if an ensemble approach is being used to capture the uncertainties. Previous extended black-oil formulations often poorly represent the PVT properties of the oil-CO₂ mixtures, resulting in poor agreement with the compositional formulation.

To overcome the limitations of the standard four component black-oil formulation, OPM Flow uses an improved extended black-oil formulation, the CO₂ Dynamic EOR Model, with the black-oil properties dependent on the fraction of CO₂ in the cell, as described by the PVT SOL keyword. This approach models the oil-CO₂ mixture more accurately and thus give results closer to the compositional simulator. Data for the keyword should normally be derived from laboratory or numerical slim-tube experiments based on one-dimensional compositional Equation Of State ("EOS") simulations.

Note, if this keyword is absent from the input deck then the CO₂ Standard EOR Model is used instead.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	CO2	A real monotonically increasing down the column values that stipulates the CO ₂ mass fraction, that defines the oil and gas properties, formation volume factor, viscosity etc., for the tabulated corresponding pressure for the stated CO ₂ mass fraction. CO2 should be greater than or equal to zero and less than or equal to one. Note it is not necessary to repeat the value of CO2 for the pressure column. However, for a given CO2 mass fraction, the last pressure entry (PRESS) of the sub table should be terminated by a "/".			None
		dimensionless	dimensionless	dimensionless	
2	PRESS	PRESS is a real columnar vector of real monotonically increasing down the column values that defines the oil phase saturation pressure (bubble-point pressure), that defines the oil formation volume factor and the oil viscosity for the corresponding PRESS pressure for a given saturated value of CO ₂ .			None
		psia	barsa	atma	
3	OFVF	OFVF is a columnar vector of real increasing down the column values that defines the corresponding oil phase saturated formation volume factor for a given pressure (PRESS) and for a given saturated value of CO ₂ ..			None
		rb/stb	rm ³ /sm ³	rcc/scc	
4	GFVF	GFVF is a columnar vector of real decreasing down the column values that defines the corresponding gas phase saturated formation volume factor for a given pressure (PRESS) and for a given saturated value of CO ₂ .			None

¹¹⁸ T. H. Sandve, O. Sæviareid and I. Aavatsmark: "Improved Extended Blackoil Formulation – for CO₂ EOR Simulations." in ECMOR XVII – The 17th European Conference on the – Mathematics of Oil Recovery, September 2020.

No.	Name		Description			Default
			Field	Metric	Laboratory	
			rb/Mscf	rm ³ /sm ³	rcc/scc	
5		RS	RS is a real monotonically increasing down the column values that defines the saturated gas-oil ratio ("GOR") or Rs, for the given value of PRESS and for a given saturated value of CO2.			None
			Mscf/stb	sm ³ /sm ³	scc/scc	
6		RV	RV is a real monotonically increasing down the column values that defines the saturated condensate-gas ratio ("CGR") or Rv, for the given value of PRESS and for a given saturated value of CO2.			None
			stb/Mscf	sm ³ /sm ³	rcc/scc	
7		XVOL	XVOL is a real positive value greater than or equal to zero and less than or equal to one, that stipulates the volumetric fraction of CO2 in the oil phase, that is: $XVOL = \frac{Volume_{oil}(CO_2)}{Volume_{oil}(CO_2) + Volume_{oil}(Gas) + Volume_{oil}(Oil)}$ where: Volume _{oil} (CO ₂) is the surface volume of CO ₂ in the oil phase, Volume _{oil} (Gas) is the surface volume of gas in the oil phase, and Volume _{oil} (Oil) is the surface volume of oil in the oil phase.			None
			dimensionless	dimensionless	dimensionless	
8		YVOL	YVOL is a real positive value greater than or equal to zero and less than or equal to one, that defines the volumetric fraction of CO2 in the gas phase, that is: $YVOL = \frac{Volume_{gas}(CO_2)}{Volume_{gas}(CO_2) + Volume_{gas}(Gas) + Volume_{gas}(Oil)}$ where: Volume _{gas} (CO ₂) is the surface volume of CO ₂ in the gas phase, Volume _{gas} (Gas) is the surface volume of gas in the gas phase, and Volume _{gas} (Oil) is the surface volume of oil in the gas phase.			None
			dimensionless	dimensionless	dimensionless	
9		OVISC	OVISC is a columnar vector of real decreasing down the column values that defines the corresponding oil phase saturated viscosity for a given pressure (PRESS) and for a given saturated value of CO2.			None
			cP	cP	cP	
10		GVISC	GVISC is a columnar vector of real increasing down the column values that defines the corresponding gas phase saturated viscosity for a given pressure (PRESS) and for a given saturated value of CO2.			None
			cP	cP	cP	

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows and NRPVT Rs entries as declared on the TABDIMS keyword in the RUNSPEC section. 3) Except for the CO2 column, there must be same number of entries for each column. 4) Each sub table defining the properties for a given value of CO2 must be terminated by “/” and the keyword itself is terminated by “/”.					

Table 8.99: PVT SOL Keyword Description

See also the PVDS keyword in the PROPS section that can also be used to model CO₂ injection, using the SOLVENT model (CO₂ Standard EOR), this is the conventional approach, and does not take into account black-oil properties being dependent on the fraction of CO₂.

Note

In the CO₂ Dynamic EOR Model the oil properties within a cell are dependent on the CO₂ saturation in the cell. However, the model is not restricted to just CO₂ utilization, as long as the appropriate oil-injection-gas dependent properties are entered in the model via the PVT SOL keyword.

Thus, N₂ or other miscible gases may be used instead of CO₂, provided due care is taken in generating the required data for the PVT SOL keyword.

Another example would be a gas-condensate re-cycling project where the produced gas is stripped of the liquids and then re-injected back into the reservoir in order to maintain the reservoir pressure. Here, the CO₂ fraction in the PVT SOL keyword would be replaced by the lean injected gas fraction. Again the other properties would be derived from laboratory or numerical slim-tube experiments based on one-dimensional compositional EOS simulations.

As an aside, the scope and accuracy of gas condensate modeling using black-oil reservoir simulators is well established in the industry; both depletion and gas cycling above the dew point can be modeled and yield an adequate match with the results from multi-component compositional simulators. The main inadequacy is with the treatment of gas injection below the dew point where the primary compositional effect, the stripping of liquid components is inversely proportional to their molecular weights, is completely ignored. The standard black-oil model assumes that the saturated hydrocarbon fluid properties are functions of pressure only and disregards any compositional dependence in the saturated fluid PVT properties. Thus, when dry gas is injected into a condensate below its dew point the gas continues to re-vaporize liquid at a rate governed only by the ambient pressure. The vapor saturates over a zone whose thickness is of the order of one grid block; in particular all the liquid in the vicinity of the injectors evaporates rapidly. Results obtained with fully compositional simulation models suggest that liquid saturation profiles would vary more slowly with increasing distance from the gas injectors. This compositional effect can thus be modeled via the CO₂ Dynamic EOR Model, although there are no test cases at this stage.

Example

```
--
--      OIL PVT PROPERTIES FOR LIVE OIL VERSUS CO2 MASS FRACTION
--
PVT SOL
-- CO2
-- MFRAC
PSAT      BO      BG      RS      RV      XVOL      YVOL      OIL VISC      GAS VISC
PSIA      RB/STB  RB/MSCF  MSCF/STB  STB/MSCF
-----
0.000      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.0000    0.0000    2.0340e-01  1.3016e-02
725.18     1.0655    6.0855e+00  0.1302    1.4432e-04  0.0000    0.0000    2.0340e-01  1.3016e-02
870.22     1.0806    5.0340e+00  0.1591    1.9594e-04  0.0000    0.0000    1.9973e-01  1.3222e-02
1015.26    1.0961    4.2814e+00  0.1886    2.8389e-04  0.0000    0.0000    1.9609e-01  1.3452e-02
1160.30    1.1121    3.7174e+00  0.2189    4.1914e-04  0.0000    0.0000    1.9246e-01  1.3708e-02
1305.33    1.1285    3.2799e+00  0.2499    6.0779e-04  0.0000    0.0000    1.8886e-01  1.3994e-02
1450.37    1.1454    2.9314e+00  0.2819    8.5105e-04  0.0000    0.0000    1.8527e-01  1.4309e-02
1595.41    1.1629    2.6479e+00  0.3148    1.1490e-03  0.0000    0.0000    1.8171e-01  1.4657e-02
1740.45    1.1809    2.4133e+00  0.3487    1.5030e-03  0.0000    0.0000    1.7819e-01  1.5037e-02
1885.49    1.1996    2.2163e+00  0.3838    1.9155e-03  0.0000    0.0000    1.7469e-01  1.5450e-02
2030.52    1.2189    2.0490e+00  0.4200    2.3899e-03  0.0000    0.0000    1.7122e-01  1.5897e-02
2175.56    1.2389    1.9055e+00  0.4574    2.9302e-03  0.0000    0.0000    1.6779e-01  1.6377e-02
2320.60    1.2597    1.7812e+00  0.4962    3.5412e-03  0.0000    0.0000    1.6440e-01  1.6890e-02
2465.64    1.2812    1.6728e+00  0.5364    4.2273e-03  0.0000    0.0000    1.6104e-01  1.7435e-02
2610.67    1.3037    1.5775e+00  0.5782    4.9942e-03  0.0000    0.0000    1.5772e-01  1.8011e-02
2755.71    1.3270    1.4933e+00  0.6216    5.8471e-03  0.0000    0.0000    1.5443e-01  1.8617e-02
2900.75    1.3514    1.4185e+00  0.6668    6.7918e-03  0.0000    0.0000    1.5117e-01  1.9253e-02
3045.79    1.3768    1.3517e+00  0.7139    7.8347e-03  0.0000    0.0000    1.4795e-01  1.9917e-02
3137.32    1.3937    1.3132e+00  0.7450    8.5549e-03  0.0000    0.0000    1.4592e-01  2.0353e-02
4061.05    1.3705    1.3132e+00  0.7450    8.5549e-03  0.0000    0.0000    1.5939e-01  2.0353e-02 /
0.010      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.0464    0.0381    2.0301e-01  1.3203e-02
725.18     1.0670    6.0041e+00  0.1341    1.4845e-04  0.0464    0.0381    2.0301e-01  1.3203e-02
-----
3135.04    1.4082    1.2950e+00  0.7755    8.9113e-03  0.0298    0.0277    1.4422e-01  2.0743e-02
4061.05    1.3840    1.2950e+00  0.7755    8.9113e-03  0.0298    0.0277    1.5772e-01  2.0743e-02 /
0.100      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.3426    0.3023    1.9984e-01  1.4740e-02
725.18     1.0795    5.3329e+00  0.1666    1.8243e-04  0.3426    0.3023    1.9984e-01  1.4740e-02
-----
3116.25    1.5281    1.1444e+00  1.0268    1.1849e-02  0.2492    0.2431    1.3023e-01  2.3961e-02
4061.05    1.4955    1.1444e+00  1.0268    1.1849e-02  0.2492    0.2431    1.4400e-01  2.3961e-02 /
0.200      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.5303    0.4898    1.9699e-01  1.5838e-02
725.18     1.0909    4.8402e+00  0.1964    2.1919e-04  0.5303    0.4898    1.9699e-01  1.5838e-02
-----
4061.05    1.6501    1.0017e+00  1.3720    1.6728e-02  0.4220    0.4240    1.2963e-01  2.7757e-02 /
0.300      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.6486    0.6159    1.9471e-01  1.6588e-02
725.18     1.1003    4.4992e+00  0.2210    2.5440e-04  0.6486    0.6159    1.9471e-01  1.6588e-02
-----
4061.05    1.8529    8.8189e-01  1.8200    2.4541e-02  0.5491    0.5597    1.1636e-01  3.2195e-02 /
0.400      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.7303    0.7059    1.9292e-01  1.7131e-02
725.18     1.1079    4.2506e+00  0.2413    2.8832e-04  0.7303    0.7059    1.9292e-01  1.7131e-02
-----
4061.05    2.1298    7.8515e-01  2.4251    3.7664e-02  0.6468    0.6616    1.0441e-01  3.7755e-02 /
0.500      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.7905    0.7733    1.9156e-01  1.7543e-02
725.18     1.1140    4.0628e+00  0.2581    3.2217e-04  0.7905    0.7733    1.9156e-01  1.7543e-02
-----
4061.05    2.5282    7.1557e-01  3.2879    6.0741e-02  0.7245    0.7379    9.3885e-02  4.5038e-02 /
0.600      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.8372    0.8259    1.9061e-01  1.7868e-02
725.18     1.1188    3.9168e+00  0.2720    3.5813e-04  0.8372    0.8259    1.9061e-01  1.7868e-02
-----
4061.05    3.1455    6.8307e-01  4.6154    1.0176e-01  0.7880    0.7951    8.4761e-02  5.4583e-02 /
0.700      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.8755    0.8686    1.9018e-01  1.8132e-02
725.18     1.1223    3.8017e+00  0.2833    4.0084e-04  0.8755    0.8686    1.9018e-01  1.8132e-02
-----
4061.05    3.3568    6.6803e-01  5.4784    1.3282e-01  0.9106    0.9124    8.9321e-02  6.2163e-02 /
0.800      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.9520    0.9591    1.8807e-01  1.8720e-02
725.18     1.1335    3.5254e+00  0.3153    5.0228e-04  0.9520    0.9591    1.8807e-01  1.8720e-02
-----
4061.05    2.7406    5.5115e-01  3.5079    8.5588e-02  0.8828    0.8905    8.1404e-02  7.0425e-02 /
0.900      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  0.9846    0.9855    1.9003e-01  1.8852e-02
725.18     1.1293    3.5076e+00  0.3007    4.6299e-04  0.9846    0.9855    1.9003e-01  1.8852e-02
-----
4061.05    1.9854    5.0045e-01  2.0535    3.9219e-02  0.9400    0.9448    1.0088e-01  6.5831e-02 /
1.000      14.50    1.0000    1.7810e+02  0.0000    0.0000e+00  1.0000    1.0000    1.7716e-01  1.8887e-02
725.18     1.1418    3.5421e+00  0.2487    1.7810e-10  1.0000    1.0000    1.7716e-01  1.8887e-02
-----
4061.05    1.2145    4.3773e-01  0.6633    4.2745e-09  1.0000    1.0000    1.4288e-01  6.2211e-02 /
```

The above example defines one oil PVT Properties for Live Oil versus CO₂ Mass Fraction table, and assumes that NTPVT equals one the TABDIMS keyword in the RUNSPEC section.

8.3.226 PVTW - DEFINE WATER FLUID PROPERTIES FOR VARIOUS REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PVTW defines the water properties for various regions in the model. The number of PVTW vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the PVTW tables to different grid blocks in the model is done via the PVTNUM keyword in the REGION section. One data set consists of one record or line which is terminated by a “/”. If the water phase is active in the model, which is normally the case, then this keyword must be defined in the OPM Flow input deck.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRES	PRES is a real number defining the water reference pressure (P) for the other parameters for this data set.			None
		psia	barsa	atma	
2	WFVF	WFVF is a real number defining the water formation volume factor (Bw) at the water reference pressure.			Defined
		rb/stb 1.0	rm³/sm³ 1.0	rcc/scc 1.0	
3	WCOMP	WCOMP is a real number defining the water compressibility (Cw) at the water reference pressure and is defined as: $C_w = -\frac{1}{B_w}\left(\frac{dB_w}{dP}\right)$			Defined
		l/psia 0.00004	l/barsa 0.00004	l/atma 0.00004	
4	WVISC	WVISC is a real number defining the water viscosity (μw) at the water reference pressure.			Defined
		cP 0.50	cP 0.50	cP 0.50	
5	WVISCMP	WVISCMP is a real number defining the water viscosibility (μwc) at the water reference pressure, μwc(Pref) and is defined as: $\mu_{wc} = -\frac{1}{\mu_w}\left(\frac{d\mu_w}{dP}\right)$			Defined
		l/psia 0.0	l/barsa 0.0	l/atma 0.0	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.100: PVTW Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Examples

The following shows the PVTW keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to one.

```
--
--      WATER PVT TABLE
--
PVTW
--      REF PRES  BW      CW      VISC      VISC
--      PSIA      RB/STB   1/PSIA   CPOISE   GRAD
--      -----
--      4840.0    1.019    2.7E-6    0.370    1*          / TABLE NO. 01
```

The next example shows the PVTW keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to three.

```
--
--      WATER PVT TABLE
--
PVTW
--      REF PRES  BW      CW      VISC      VISC
--      PSIA      RB/STB   1/PSIA   CPOISE   GRAD
--      -----
--      4640.0    1.008    2.5E-6    0.350    1*          / TABLE NO. 01
--      4840.0    1.019    2.7E-6    0.370    1*          / TABLE NO. 02
--      4940.0    1.030    2.8E-6    0.390    1*          / TABLE NO. 03
```

The above example defines three water PVT tables and assumes that NTPVT equals three on the TABDIMS keyword in the RUNSPEC section.

There is no terminating “/” for this keyword.

8.3.227 PVTWSALT - DEFINE BRINE WATER FLUID PROPERTIES FOR VARIOUS REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

PVTWSALT defines the brine water properties for various regions in the model, for when the brine phase has been activated by the BRINE keyword in the RUNSPEC section. In this case PVTWSALT is used instead of PVTW in the input file. However, if the ECLMC keyword has been entered in the RUNSPEC section to invoke the Multi-Component Brine model, the PVTW keyword should be used instead of PVTWSALT, as with this combination the salinity effect on the density is ignored.

The number of PVTWSALT table data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the PVTWSALT tables to different grid blocks in the model is done via the PVTNUM keyword in the REGION section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-1	PRESS	Single real positive value that defines the reference pressure for the data in the following records (P_{ref}). PRESS should be approximately equal to the average reservoir pressures in the model. The simulator uses the previous time step values to forecast the current time step water properties by linear interpolation. If PRESS is not representative of the average reservoir pressures in the model then the linear interpolation might result in nonphysical values of the water saturation and water viscosity.			None
		psia	barsa	atma	
1-2	SALTSURF	A real value that defines the reference salt concentration in the solution in the surface stock tank water ($C_{s,ref}$). If defaulted SALTSURF is taken as the minimum salt concentration entered in the SALTCON columnar vector in the second record for this keyword. This should be in most cases be zero.			Defined
		lb/stb	kg/sm ³	gm/scc	
1-3	/	Record terminated by a "/"			Not Applicable
2-1	SALTCONC	A columnar vector of real monotonically increasing values that defines the salt concentration in the solution (C_s).			None
		lb/stb	kg/sm ³	gm/scc	
2-2	WFVF	WFVF is a real columnar vector defining the water formation volume factor (B_w) at the reference pressure PRESS, for the corresponding salt concentration SALTCON.			None
		rb/stb	rm ³ /sm ³	rcc/scc	
2-3	WCOMP	WCOMP is a real columnar vector defining the water compressibility (C_w) at the water reference pressure PRESS, for the corresponding salt concentration SALTCON. The water compressibility is defined as: $C_w = -\frac{1}{B_w} \left(\frac{dB_w}{dP} \right)$			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
		l/psia	l/bars	l/atma	
2.4	WVISC	WVISC is a real columnar vector defining the water viscosity (μ_w) at the water reference pressure PRESS, for the corresponding salt concentration SALTCON.			None
		cP	cP	cP	
2.5	WVISCOMP	WVISCOMP is a real columnar vector defining the water viscosibility (μ_{wc}) at the water reference pressure PRESS, for the corresponding salt concentration SALTCON. The water viscosibility is defined as: $\mu_{wc} = -\frac{1}{\mu_w} \left(\frac{d\mu_w}{dP} \right)$			None
		l/psia	l/barsa	l/atma	
2-6	/	Table and record terminated by a “/”			Not Applicable

Notes:

- 1) The keyword is followed by NTPVT data sets as declared on the TABDIMS keyword in the RUNSPEC section and each data set consists of two records, with items 1-1 to 1-3 representing record one items and 2-1 to 2-6 representing record number two items, etc., in the “No.” column in this table.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.101: PVTWSALT Keyword Description

As mentioned above, the simulator first calculates the water properties as functions of the salt concentration at the previous time step by linear interpolation in salt concentration for water compressibility (C_w), water viscosibility (μ_{wc}), $\frac{1}{B_w}$ and $\frac{1}{B_w \mu_w}$. It then calculates the values of B_w and $B_w \mu_w$ at the current time step using the current pressure P, using the following equations:

$$B_w(P, C_s) = \frac{B_w(P_{ref}, C_{s,ref})}{1 + C_w(P - P_{ref}) + \frac{(C_w(P - P_{ref}))^2}{2}} \quad (8.18)$$

and

$$B_w(P, C_s) \mu_w(P, C_s) = \frac{B_w(P_{ref}, C_{s,ref}) \mu_w(P_{ref}, C_{s,ref})}{1 + (C_w - \mu_{wc})(P - P_{ref}) + \frac{((C_w - \mu_{wc})(P - P_{ref}))^2}{2}} \quad (8.19)$$

See also the BDENSITY keyword in the PROPS section that defines the brine surface densities for the salt concentrations declared on the PVTsalt keyword. Note that if the BDENSITY keyword is absent from the input file then the brine surface densities will be set to the water density values declared via the DENSITY keyword in the PROPS section. In this case there is no variation in brine surface density with respect to salt concentration.

Example

The following shows the PVTWSALT keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set equal to two and NPPVT is set to greater than four on the TABDIMS keyword.

```
--
--      WATER SALT PVT TABLE
--
PVTWSALT
--      REF PRES   REF SALT
--      PSIA       LB/STB
--      -----
--      4500.0     0.000                                / TABLE NO. REF. DATA
--
--      SALTCONC   BW          CW          VISC          VISC
--      LB/STB     RB/STB      1/PSIA      CPOISE        GRAD
--      -----
--      0.0        1.020      2.7E-6      0.370         0.0
--      2.0        1.010      2.7E-6      0.370         0.0
--      4.0        1.000      2.7E-6      0.370         0.0
--      10.0       0.950      2.7E-6      0.370         0.0      / TABLE NO. 01 SALT DATA
--
--      REF PRES   REF SALT
--      PSIA       LB/STB
--      -----
--      4000.0     0.000                                / TABLE NO. 02 REF. DATA
--
--      SALTCONC   BW          CW          VISC          VISC
--      LB/STB     RB/STB      1/PSIA      CPOISE        GRAD
--      -----
--      0.0        1.005      2.5E-6      0.320         0.0
--      3.0        1.000      2.5E-6      0.320         0.0
--      6.0        0.985      2.5E-6      0.320         0.0
--      12.0       0.930      2.5E-6      0.320         0.0      / TABLE NO. 02 SALT DATA
```

Note that each table is terminated by a “/” and there is no “/” terminator for the keyword.

8.3.228 PYEND – END THE DEFINITION OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow’s Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords. A PYINPUT Definition Section is terminated by a PYEND keyword on a separate single line.

See [PYEND – End the Definition of a PYINPUT Section](#) in the GRID section for a full description.

8.3.229 PYINPUT – DEFINE THE START OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow’s Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords used by the simulator. PYINPUT declares the start of a PYINPUT Definition Section on a single separate line, which is then followed by various standard Python commands, with one command per line.

See [PYINPUT – Define the Start of a PYINPUT Section](#) in the GRID section for a full description.

8.3.230 PVZG - GAS PVT PROPERTIES FOR DRY GAS (Z-FACTOR)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PVZG defines the gas PVT properties for dry gas¹¹⁹ via the gas compressibility factor (z-factor), instead of the gas formation volume factor. If the gas has a constant and uniform vaporized oil concentration, Condensate-Gas Ratio (“CGR”), and if the reservoir pressure never drops below the saturation pressure (dew point pressure), then the model can be run more efficiently by omitting the OIL and VAPOIL keywords from the RUNSPEC section, treating the gas as a dry gas, and defining a constant Rv (CGR) value with keyword RVCONST or RVCONSTT in the PROPS section. This results in the model being run with as a dry gas problem with no active oil (condensate) phase. However, OPM Flow takes into account the constant Rv in the calculations and reporting.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-1	RTEMP	Single real positive value that defines the reservoir temperature for the data in the following records.			
		°F	°C	°C	
1-2	/	Record terminated by a “/”			Not Applicable
2-1	PRESS	A columnar vector of real monotonically increasing down the column values that defines the gas phase pressure.			None
		psia	barsa	atma	
2-2	GZFAC	A columnar vector of real values that defines the corresponding gas phase z-factor at the given pressure, PRESS.			None
		dimensionless	dimensionless	dimensionless	
2-3	GVISC	A columnar vector of real increasing down the column values that defines the corresponding gas phase viscosity.			None
		cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT data sets as declared on the TABDIMS keyword in the RUNSPEC section and each data set consists of two records, with items 1-1 to 1-2 representing record one items and 2-1 to 2-3 representing record number two items, etc., in the “No.” column in this table.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.102: PVZG Keyword Description

See also the RVCONST and RVCONSTT keywords to define the constant Rv for dry gas.

¹¹⁹ Natural gas that occurs in the absence of condensate or liquid hydrocarbons, or gas that had condensable hydrocarbons removed, is called dry gas. It is primarily methane with some intermediates. The hydrocarbon mixture is solely gas in the reservoir and there is no liquid (condensate surface liquid) formed either in the reservoir or at surface. The term dry indicates that the gas does not contain heavier hydrocarbons to form liquids at the surface conditions. Dry gas typically has GOR's greater than 100,000 scf/stb or 18,000 Sm³/m³.

The ideal gas law provides a relationship between the pressure, the temperature and the specific volume of an ideal gas (pure component). This relationship is modified by use of a compressibility factor, Z^{120} , to account for deviations, from ideal, to the behavior of real gases. The PVT relation for a real gas can be defined by:

$$PV = ZnRT \quad (8.20)$$

As the gas formation volume factor is used to relate the volume of gas, as measured at reservoir conditions, to the volume of gas as measured at standard conditions (60 °F and 14.7 psia, or 15 °C and 101.325 kPa). This gas property is then defined as the actual volume occupied by a certain amount of gas at a specified pressure and temperature, divided by the same amount of gas at standard conditions. Thus, using the above equation one can obtain the gas volumes at reservoir and standard conditions, i.e.

$$V_{sc} = \frac{Z_{sc} n R T_{sc}}{P_{sc}} \quad (8.21)$$

$$V_i = \frac{Z_i n R T_i}{P_i} \quad (8.22)$$

Thus the gas formation volume factor can be expressed as:

$$E = \frac{V_{sc}}{V_i} \quad (8.23)$$

And substituting equation (8.21) and (8.22) into (8.23) we obtain

$$E = \left(\frac{P_i}{P_{sc}} \right) \left(\frac{T_{sc}}{T_i} \right) \left(\frac{1}{Z_i} \right) \quad (8.24)$$

Incorporating standard pressure and temperature values gives in SI units:

$$E = \left(\frac{P_i}{101.325} \right) \left(\frac{273.15 + 15}{T_i} \right) \left(\frac{1}{Z_i} \right) = 2.84 \left(\frac{P_i}{Z_i T_i} \right) \quad (8.25)$$

or in field units:

$$E = \left(\frac{P_i}{14.7} \right) \left(\frac{460 + 60}{T_i} \right) \left(\frac{1}{Z_i} \right) = 35.37 \left(\frac{P_i}{Z_i T_i} \right) \quad (8.26)$$

Where,

E	= gas formation volume factor (scf /rcft or Sm ³ /m ³)
P	= pressure (psia or kPa)
P _{sc}	= pressure standard conditions (psia or kPa)
P _i	= initial reservoir pressure (psia or kPa)
V	= volume (ft ³ or m ³)
T	= absolute temperature (°R or K)
T _{sc}	= temperature at standard conditions (°R or K)
T _i	= initial reservoir temperature (°R or K)
R	= gas constant (10.73 or 8.314)

RTEMP on this keyword is the T_i in the above equations and P_i is PRESS columnar vector.

¹²⁰ Standing, M. B.: "Volumetric and Phase Behaviour of Oil Field Hydrocarbon Systems", Renihold Publishing Corp., New York City (1952).

Example

```

---
--      GAS PVT TABLE USING GAS Z-FACTOR
--
PVZG
--      RESERVOIR TEMPERATURE FOR Z TO BG CONVERSION
--
180.0 /
--
--      PRES      ZG      VISC
--      PSIA      DIMLESS  CPOISE
--      -----
14.7  0.998970  0.0130
250.0 0.976260  0.0131
500.0 0.954790  0.0134
750.0 0.932050  0.0137
1000.0 0.912990  0.0142
1250.0 0.896320  0.0147
1500.0 0.881610  0.0152
1750.0 0.870830  0.0159
2000.0 0.863130  0.0166
2250.0 0.858920  0.0173
2500.0 0.857800  0.0181
2750.0 0.860430  0.0189
3000.0 0.866440  0.0197
3250.0 0.874980  0.0206
3500.0 0.885470  0.0214
3750.0 0.898350  0.0223
4000.0 1.025120  0.0277 / TABLE NO 01
--
--      GAS PVT TABLE USING GAS Z-FACTOR
--
PVZG
--      RESERVOIR TEMPERATURE FOR Z TO BG CONVERSION
--
180.0 /
--
--      PRES      ZG      VISC
--      PSIA      DIMLESS  CPOISE
--      -----
14.7  0.998970  0.0130
250.0 0.976260  0.0131
500.0 0.954790  0.0134
750.0 0.932050  0.0137
1000.0 0.912990  0.0142
1250.0 0.896320  0.0147
1500.0 0.881610  0.0152
1750.0 0.870830  0.0159
2000.0 0.863130  0.0166
2250.0 0.858920  0.0173
2500.0 0.857800  0.0181
2750.0 0.860430  0.0189
3000.0 0.866440  0.0197
3250.0 0.874980  0.0206
3500.0 0.885470  0.0214
3750.0 0.898350  0.0223
4000.0 1.025120  0.0277 / TABLE NO 01

```

The above example defines two dry PVZG tables assuming NTPVT equals two and NPPVT is greater than or equal to 17 on the TABDIMS keyword in the RUNSPEC section. There is no terminating “/” for this keyword.

8.3.231 QHRATING – DEFINE RIVER MASS FLOW VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The QHRATING keyword defines a river's mass flow rate versus depth tables, for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.232 REFINE – START THE DEFINITION OF A LOCAL GRID REFINEMENT

The REFINE keyword defines the start of a Cartesian or radial local grid refinement (“LGR”) definition that sets the properties of the selected LGR. The keyword is then followed by the property keywords associated with the section where the keyword is being invoked. For example, if the REFINE keyword is used in the GRID section then most of the keywords in that section can be used to set the grid properties for the LGR.

See [REFINE – Start the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

8.3.233 RIVRXSEC – DEFINE RIVER CROSS-SECTION VERSUS DEPTH PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The RIVRXSEC keyword defines a river’s cross-sectional area and perimeter versus depth parameters. The River option must be activated via the RIVRDIMS keyword in the RUNSPEC section in order to use this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.234 RKTRMDIR - ACTIVATE ROCKTAB KEYWORD DIRECTIONAL TRANSMISSIBILITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword activates the directional transmissibility multipliers for the ROCKTAB keyword. This results in two additional columns being inputted on the ROCKTAB keyword. This feature is currently not supported in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.235 ROCK - DEFINE THE ROCK COMPRESSIBILITY FOR VARIOUS REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ROCK defines the rock compressibility for various regions in the model. The number of ROCK vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the ROCK tables to different grid blocks in the model is done via the PVTNUM keyword in the REGION section. One data set consists of one record or line which is terminated by a “/”.

This keyword must be defined in the OPM Flow input deck.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRES	PRES is a real number defining the rock reference pressure for the other parameters for this data set.			Default
		psia 1.032	barsa 1.032	atma 1.032	
2	RCOMP	RCOMP is a real number defining the rock compressibility (C_f) at the rock reference pressure and is defined as: $C_f = -\frac{1}{V} \left(\frac{dV}{dP} \right)$			Defined
		l/psia 0.0	l/barsa 0.0	l/atma 0.0	

Notes:

1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.

2) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.103: ROCK Keyword Description

Examples

The following shows the ROCK keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to one.

```
--
--      ROCK COMPRESSIBILITY
--
--      REFERENCE PRESSURE IS TAKEN FROM THE HCPV WEIGHTED RESERVOIR PRESSURE
--      AS THE PORV IS ALREADY AT RESERVOIR CONDITIONS (OPM FLOW USES THE
--      REFERENCE PRESSURE) TO CONVERT THE GIVEN PORV TO RESERVOIR CONDITIONS
--      USING THE DATA ON THE ROCK KEYWORD)
--
--      REF PRES  CF
--      PSIA      1/PSIA
--      -----
--
ROCK          3966.9      5.0E-06 / ROCK COMPRESSIBILITY
```

The next example shows the ROCK keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to three.

```
--
--      ROCK COMPRESSIBILITY
--
--      REFERENCE PRESSURE IS TAKEN FROM THE HCPV WEIGHTED RESERVOIR PRESSURE
--      AS THE PORV IS ALREADY AT RESERVOIR CONDITIONS (OPM FLOW USES THE
--      REFERENCE PRESSURE) TO CONVERT THE GIVEN PORV TO RESERVOIR CONDITIONS
--      USING THE DATA ON THE ROCK KEYWORD)
--
--      REF PRES  CF
--      PSIA      1/PSIA
--      -----
ROCK
      3566.9      5.0E-06      / ROCK COMPRESSIBILITY REGION 1
      3966.9      5.5E-06      / ROCK COMPRESSIBILITY REGION 2
      4566.9      6.0E-06      / ROCK COMPRESSIBILITY REGION 3
```

The above example defines three ROCK tables and assumes that NTPVT equals three on the TABDIMS keyword in the RUNSPEC section.

There is no terminating “/” for this keyword.

8.3.236 ROCK2D – PORE VOLUME COMPACTION VERSUS PRESSURE AND SW TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ROCK2D keyword defines rock compressibility pore volume multipliers as a function of pressure and water saturation (“Sw”) for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section. The pressure values are defined on this keyword and the water saturations are declared on the associated ROCKWNOD keyword in the PROPS section

The rock compaction pore volume and transmissibility multipliers, entered via the ROCKTAB, ROCK2D and ROCK2DTR keywords, are applied to the pore pressure, unless the OVERBURD keyword in PROPS section is included in the input deck. When the OVERBURD keyword is present the multipliers are applied to the effective pore volume pressure, that is $P_{(effective)} = P_{(Pressure)} - P_{(overburden)}$. If the keyword is not present in the input deck then the overburden pressure is set to zero.

This keyword should only be used if compaction option has been enabled.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	A columnar vector of real monotonically increasing down the column values that defines the corresponding overburden pressure for the subsequent MULT columnar vector.			None
		psia	bars	atm	
2	MULT	A columnar vector of real equal or decreasing down the column values that are less than or equal to one, that defines the rock compressibility pore volume multipliers corresponding to PRESS and for each water saturation entry in the ROCKWNOD keyword.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTROCC tables as declared on the ROCKCOMP keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.104: ROCK2D Keyword Description

See also the OVERBURD, ROCKTAB, ROCK2DTR, and ROCKWNOD keywords in the PROPS section.

Example

The following example defines two pore volume compaction tables, assuming NTROCC is equal to two on the ROCKCOMP keyword and NSSFUN is greater than or equal to four on the TABDIMS keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---


```
--
--      ROCK COMPACTION VERSUS PRESSURE AND SW TABLES
--
ROCK2D
--      PRESS      PORV      FIRST ROCK2D TABLE DATA
--      PSIA      MULTIPLIER
--      -----
--              0.0      0.850
--                      0.850
--                      0.850
--                      0.085
--
--                      / P-SW SET TABLE NO. 01
--
--      PRESS      PORV
--      PSIA      MULTIPLIER
--      -----
--      1000.0      0.900
--                      0.900
--                      0.900
--                      0.900
--
--                      / P-SW SET TABLE NO. 01
--
--      PRESS      PORV
--      PSIA      MULTIPLIER
--      -----
--      2500.0      0.950
--                      0.950
--                      0.950
--                      0.950
--
--                      / P-SW SET TABLE NO. 01
--
--      PRESS      PORV
--      PSIA      MULTIPLIER
--      -----
--      5000.0      1.000
--                      1.000
--                      1.000
--                      1.000
--
--                      / P-SW SET TABLE NO. 01
--
--      PRESS      PORV      SECOND ROCK2D TABLE DATA
--      PSIA      MULTIPLIER
--      -----
--              0.0      0.800
--                      0.800
--                      0.800
--                      0.800
--
--                      / P-SW SET TABLE NO. 02
--
--      PRESS      PORV
--      PSIA      MULTIPLIER
--      -----
--      1000.0      0.880
--                      0.880
--                      0.880
--                      0.880
--
--                      / P-SW SET TABLE NO. 02
--
--      PRESS      PORV
--      PSIA      MULTIPLIER
--      -----
--      2500.0      0.950
--                      0.950
--                      0.950
--                      0.950
--
--                      / P-SW SET TABLE NO. 02
--
--      PRESS      PORV
--      PSIA      MULTIPLIER
--      -----
--      5000.0      1.000
--                      1.000
--                      1.000
--                      1.000
--
--                      / P-SW SET TABLE NO. 02
```

Note that there must be exactly NTROCC tables entered for this keyword, otherwise an error will occur.

8.3.237 ROCK2DTR – TRANSMISSIBILITY COMPACTION VERSUS PRESSURE AND SW TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ROCK2DTR keyword defines rock compressibility transmissibility multipliers as a function of pressure and water saturation ("Sw") for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section. The pressure values are defined on this keyword and the water saturations are declared on the associated ROCKWNOD keyword in the PROPS section

The rock compaction pore volume and transmissibility multipliers, entered via the ROCKTAB, ROCK2D and ROCK2DTR keywords, are applied to the pore pressure, unless the OVERBURD keyword in PROPS section is included in the input deck. When the OVERBURD keyword is present the multipliers are applied to the effective pore volume pressure, that is $P_{(effective)} = P_{(Pressure)} - P_{(overburden)}$. If the keyword is not present in the input deck then the overburden pressure is set to zero.

This keyword should only be used if compaction option has been enabled.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	A columnar vector of real monotonically increasing down the column values that defines the corresponding overburden pressure for the subsequent MULT columnar vector.			None
		psia	bars	atm	
2	MULT	A columnar vector of real equal or decreasing down the column values that are less than or equal to one, that defines the rock compressibility transmissibility multipliers corresponding to PRESS and for each water saturation entry in the ROCKWNOD keyword.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTROCC tables as declared on the ROCKCOMP keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.105: ROCK2DTR Keyword Description

See also the OVERBURD, ROCKTAB, ROCK2D, and ROCKWNOD keywords in the PROPS section.

Example

The following example defines two rock compressibility transmissibility compaction tables, assuming NTROCC is equal to two on the ROCKCOMP keyword and NSSFUN is greater than or equal to four on the TABDIMS keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

```
--
--      TRANSMISSIBILITY COMPACTION VERSUS PRESSURE AND SW TABLES
--
ROCK2DTR
--      PRESS      TRAN      FIRST ROCK2DTR TABLE DATA
--      PSIA      MULTIPLIER
--      -----
--              0.0      0.850
--                      0.850
--                      0.850
--                      0.085
--                                  / P-SW SET TABLE NO. 01
--
--      PRESS      TRAN
--      PSIA      MULTIPLIER
--      -----
--      1000.0      0.900
--                      0.900
--                      0.900
--                      0.900
--                                  / P-SW SET TABLE NO. 01
--
--      PRESS      TRAN
--      PSIA      MULTIPLIER
--      -----
--      2500.0      0.950
--                      0.950
--                      0.950
--                      0.950
--                                  / P-SW SET TABLE NO. 01
--
--      PRESS      TRAN
--      PSIA      MULTIPLIER
--      -----
--      5000.0      1.000
--                      1.000
--                      1.000
--                      1.000
--                                  / P-SW SET TABLE NO. 01
--
--      PRESS      TRAN      SECOND ROCK2DTR TABLE DATA
--      PSIA      MULTIPLIER
--      -----
--              0.0      0.800
--                      0.800
--                      0.800
--                      0.800
--                                  / P-SW SET TABLE NO. 02
--
--      PRESS      TRAN
--      PSIA      MULTIPLIER
--      -----
--      1000.0      0.880
--                      0.880
--                      0.880
--                      0.880
--                                  / P-SW SET TABLE NO. 02
--
--      PRESS      TRAN
--      PSIA      MULTIPLIER
--      -----
--      2500.0      0.950
--                      0.950
--                      0.950
--                      0.950
--                                  / P-SW SET TABLE NO. 02
--
--      PRESS      TRAN
--      PSIA      MULTIPLIER
--      -----
--      5000.0      1.000
--                      1.000
--                      1.000
--                      1.000
--                                  / P-SW SET TABLE NO. 02
```

Note that there must be exactly NTROCC tables entered for this keyword, otherwise an error will occur.

8.3.238 ROCKOPTS – DEFINE ROCK COMPACTION AND COMPRESSIBILITY OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ROCKOPTS keyword defines various option with respect to rock compaction and rock compressibility.

No.	Name	Description	Default
1	ROCKOPT1	<p>ROCKOPT1 is a character string that defines the treatment of how the overburden pressures supplied by the OVERBURD keyword are applied to the tabulated pressures in the ROCKTAB keywords:</p> <ol style="list-style-type: none"> 1) STRESS: Use this option if the overburden pressures on the OVERBURD keyword are greater than the fluid pressure which results in the effective fluid pressure being negative. To avoid the rock compaction tables being entered with negative pressure values use this option. In this case the pore volume and transmissibility multipliers will be tabulated against the effective overburden pressure. 2) PRESSURE: In this case the pore volume and transmissibility multipliers should be effective pressure. This the default value. <p>ROCKOPT1 should be set to PRESSURE if the OVERBURD is not used in the input deck.</p>	PRESSURE
2	ROCKOPT2	<p>ROCKOPT2 is a character string that sets the reference pressure option:</p> <ol style="list-style-type: none"> 1) STORE: Copies the initial calculated grid block pressures into the overburden pressure array, resulting in the pore volumes being referenced at the initial pressures instead of the reference pressures as per the ROCKTAB keyword. 2) NOSTORE: This option results in the pore volumes being referenced as per the ROCKTAB keyword. This is the default value. <p>Note that STORE option should not be used with the OVERBURD keywords as the OVERBURD data will be overwritten.</p>	NOSTORE
3	ROCKOPT3	<p>ROCKOPT3 is a character string that defines which region array should be used to allocate the various ROCK and ROCKTAB property tables in the model:</p> <ol style="list-style-type: none"> 1) ROCKOPT3, should be set to ROCKNUM, SATNUM or PVTNUM. 2) If the parameter is defaulted or the ROCKOPT keyword is not present in the deck, then the PVTNUM array is used. 3) Secondly, if ROCKOPT3 is set to ROCKNUM but the NTROCC parameter on the TABDIMS keyword in the RUNSPEC section is defaulted, then again the PVTNUM array will be utilized. 	PVTNUM

No.	Name	Description	Default
4	ROCKOPT4	<p>ROCKOPT4 is a character string that sets the initial conditions for the HYSTER and BOBERG options:</p> <ol style="list-style-type: none"> 1) DEFLATION: This option defines the reservoir rock to be fully compacted and the deflation curve is used to calculate the initial pore volume and transmissibility multipliers. This is the default value. 2) ELASTIC: This option sets the pore volume and transmissibility multipliers to one, as the reservoir rock is set to lie on the elastic curve. 	DEFLATION
<p>Notes:</p> <ol style="list-style-type: none"> 1) The keyword is terminated by a "/". 			

Table 8.106: ROCKOPTS Keyword Description

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ROCKOPT1  ROCKOPT2  ROCKOPT3  ROCKOPT3
--      PRS/STRE  NO/STORE  ARRAY
--      -----  -----  -----  -----
ROCKOPTS
      PRESSURE  NOSTORE  PVTNUM  DEFLATION          / ROCK COMP OPTIONS
```

The above example defines the default values for the ROCKOPTS keyword.

8.3.239 ROCKPAMA – DEFINE COAL PALMER-MANSORRI ROCK MODEL PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

ROCKPAMA defines the Palmer-Mansoori¹²¹ and ¹²² parameters used for this rock model, for when the Coal Bed Methane option has been activated via the COAL keyword, and PALM-MAN has been declared for the ROCKOPT variable on the ROCKCOMP keyword; both keywords are in the RUNSPEC section. The Palmer-Mansoori rock model is used to calculate the impact on pore volume and permeability due to rock compaction.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹²¹ Palmer, I. and Mansoori, J. "How Permeability Depends on Stress and Pore Pressure in Coalbeds: A New Model," paper SPE 52607, SPE Reservoir Evaluation & Engineering (1998) 1, No. 6, 539-544.

¹²² Clarkson, C.R., Pan, Z., Palmer, I. and Harpalani, S. "Predicting Sorption-Induced Strain and Permeability Increase With Depletion for Coalbed-Methane Reservoirs", SPE 114778-PA, SPE Journal (2010) 15, No. 1, 152–159.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.240 ROCKTAB – Rock Compaction Tables

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ROCKTAB keyword defines the rock compaction attributes to be applied for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section. ROCKTAB defines pore volume and transmissibility multipliers versus pressure that are used in the compaction calculations. If the RKTRMDIR has been activated in the PROPS section, then the transmissibility multiplier is directional dependent and two additional columns are used to define the y and z direction transmissibility multipliers.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	If the ROCKOPTI variable has been set to PRESSURE on the ROCKOPTS keyword in the PROPS section, then PRESS should be a columnar vector of real monotonically <u>increasing</u> down the column values, that define the reference pressure for which the other parameters correspond to. If ROCKOPTI has been set to STRESS, then PRESS should be a columnar vector of real monotonically <u>decreasing</u> down the column values.			None
		psia	bars	atm	
2	PORV	A columnar vector of real positive values that are either equal or increasing down the column that define the rock pore volume multiplier for a given PRESS.			None
		dimensionless	dimensionless	dimensionless	
3	TRANS	If the RKTRMDIR is absent from the input deck, then TRANS is a columnar vector of real positive values that are either equal or increasing down the column that define the x, y, and z directional transmissibility multipliers for the corresponding PRESS. If the RKTRMDIR is present in the input deck, then TRANS is a columnar vector of real positive values that are either equal or increasing down the column that define only the x directional transmissibility multipliers for the corresponding PRESS.			None
		dimensionless	dimensionless	dimensionless	
4	TRANSY	If the RKTRMDIR is absent from the input deck, then TRANSY is ignored. If the RKTRMDIR is present in the input deck, then TRANSY is a columnar vector of real positive values that are either equal or increasing down the column that define only the y directional transmissibility multipliers for the corresponding PRESS.			None
		dimensionless	dimensionless	dimensionless	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	TRANSZ	If the RKTRMDIR is absent from the input deck, then TRANSZ is ignored. If the RKTRMDIR is present in the input deck, then TRANSZ is a columnar vector of real positive values that are either equal or increasing down the column that define only the z directional transmissibility multipliers for the corresponding PRESS.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTROCC tables as declared on the ROCKCOMP keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a "/" and there is no "/" terminator for the keyword.

Table 8.107: ROCKTAB Keyword Description

Examples

The example below defines two rock compaction tables, assuming NTROCC is equal to two on the ROCKCOMP keyword and NPPVT is greater than or equal to five on the TABDIMS keyword and that the RKTRMDIR keyword is present in the input deck.

```
--
--      ROCK COMPACTION TABLES
--
ROCKTAB
--      PRESS      PORV      TX(YZ)      TY      TZ
--              MULT      MULT      MULT      MULT
--      -----
--      1000.0      0.9600      0.9650      0.9650      0.9650
--      1500.0      0.9800      0.9850      0.9850      0.9500
--      3000.0      0.9900      0.9950      0.9950      0.9950
--      4500.0      1.0000      1.0000      1.0000      1.0000
--      4750.0      1.0100      1.0100      1.0100      1.0100      / TABLE NO. 01
--      PRESS      PORV      TX(YZ)      TY      TZ
--              MULT      MULT      MULT      MULT
--      -----
--      1000.0      0.9600      0.9650      0.9650      0.9650
--      1500.0      0.9800      0.9850      0.9850      0.9500
--      3000.0      0.9900      0.9950      0.9950      0.9950
--      4500.0      1.0000      1.0000      1.0000      1.0000
--      4750.0      1.0100      1.0100      1.0100      1.0100      / TABLE NO. 02
```

As the x, y and z directional transmissibility multipliers are identical in the above example, we could eliminate the RKTRMDIR keyword from the input deck and enter the data in the three column format, as shown on the next page.


```
--
--      ROCK COMPACTION TABLES
--
ROCKTAB
--      PRESS      PORV      TX(YZ)
--      MULT      MULT
--      -----
--      1000.0    0.9600    0.9650
--      1500.0    0.9800    0.9850
--      3000.0    0.9900    0.9950
--      4500.0    1.0000    1.0000
--      4750.0    1.0100    1.0100      / TABLE NO. 01
--      PRESS      PORV      TX(YZ)
--      MULT      MULT
--      -----
--      1000.0    0.9600    0.9650
--      1500.0    0.9800    0.9850
--      3000.0    0.9900    0.9950
--      4500.0    1.0000    1.0000
--      4750.0    1.0100    1.0100      / TABLE NO. 02
```

The net result of the two examples in this case is identical.

8.3.241 ROCKTABH – Rock Compaction Hysteresis Tables

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ROCKTABH keyword defines the rock compaction hysteresis attributes to be applied for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section. ROCKTABH defines pore volume and transmissibility multipliers versus pressure that are used in the compaction calculations. If the RKTRMDIR has been activated in the PROPS section, then the transmissibility multiplier is directional dependent and two additional columns are used to define the y and z direction transmissibility multipliers. The keyword should only be used if the Rock Compaction Hysteresis option has been activated by either setting the ROCKOPT parameter on the ROCKCOMP keyword to HYSTER or BOBERG.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	If the ROCKOPT I variable has been set to PRESSURE on the ROCKOPTS keyword in the PROPS section, then PRESS should be a columnar vector of real monotonically <u>increasing</u> down the column values, that define the reference pressure for which the other parameters correspond to. If ROCKOPT I has been set to STRESS, then PRESS should be a columnar vector of real monotonically <u>decreasing</u> down the column values.			None
		psia	bars	atm	
2	PORV	A columnar vector of real positive values that are either equal or increasing down the column that define the rock pore volume multiplier for a given PRESS.			None
		dimensionless	dimensionless	dimensionless	
3	TRANS	If the RKTRMDIR is absent from the input deck, then TRANS is a columnar vector of real positive values that are either equal or increasing down the column that define the x, y, and z directional transmissibility multipliers for the corresponding PRESS. If the RKTRMDIR is present in the input deck, then TRANS is a columnar vector of real positive values that are either equal or increasing down the column that define only the x directional transmissibility multipliers for the corresponding PRESS.			None
		dimensionless	dimensionless	dimensionless	
4	TRANSY	If the RKTRMDIR is absent from the input deck, then TRANSY is ignored. If the RKTRMDIR is present in the input deck, then TRANSY is a columnar vector of real positive values that are either equal or increasing down the column that define only the y directional transmissibility multipliers for the corresponding PRESS.			None
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	TRANSZ	If the RKTRMDIR is absent from the input deck, then TRANSZ is ignored. If the RKTRMDIR is present in the input deck, then TRANSZ is a columnar vector of real positive values that are either equal or increasing down the column that define only the z directional transmissibility multipliers for the corresponding PRESS.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTROCC tables as declared on the ROCKCOMP keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.108: ROCKTABH Keyword Description

Each data set consists of columnar vectors of pore volume and transmissibility multipliers versus pressure that specify the elastic contraction and expansion and of the reservoir rock. The deflation curve is derived from the first data elements on each elastic curve. If the ROCKOPT parameter on the ROCKCOMP keyword has been set to HYSTER, then the dilation curves are extrapolated to infinite pressure, that is the curves are unbounded. However, if ROCKCOMP is set to BOBERG the last points of each elastic curve are used as the dilation curves.

Example

The example below defines two rock compaction tables, assuming NTROCC is equal to two on the ROCKCOMP keyword and NPPVT is greater than or equal to four on the TABDIMS keyword and that the RKTRMDIR keyword is not present in the input deck.

```
--
--          ROCK COMPACTION HYSTERESIS TABLES
--
ROCKTABH
--          PRESS      PORV      TX(YZ)      TY      TZ
--          MULT      MULT      MULT      MULT      MULT
--          -----
--          1500.0      0.9600      0.9800
--          2500.0      0.9700      0.9850
--          3500.0      0.9800      0.9900
--          4500.0      0.9900      0.9950          / NPPVT = 1
--          2500.0      0.9900      0.9900
--          3500.0      0.9950      0.9950
--          4750.0      0.9980      0.9980          / NPPVT = 2
--          3500.0      1.0000      1.0000
--          5500.0      1.0100      1.0100          / NPPVT = 3
--          4500.0      1.0100      1.0100
--          5750.0      1.0200      1.0200          / NPPVT = 4
--
--          / TABLE NO. 01
--
--          PRESS      PORV      TX(YZ)      TY      TZ
--          MULT      MULT      MULT      MULT      MULT
--          -----
--          1500.0      0.9400      0.9700
--          2750.0      0.9400      0.9700          / NPPVT = 1
--          2250.0      0.9800      0.9900
--          3250.0      0.9800      0.9900          / NPPVT = 2
--          3000.0      1.0000      1.0000
--          4250.0      1.0000      1.0000          / NPPVT = 3
--          4550.0      1.0200      1.0100
--          5750.0      1.0200      1.0100          / NPPVT = 4
--          / TABLE NO. 02
```

Here the deflation curve is define for table number one is:

```
1500.0      0.9600      0.9800
2500.0      0.9900      0.9900
3500.0      1.0000      1.0000
4500.0      1.0100      1.0100
```

and for table number 2:

```
1500.0      0.9400      0.9700
2250.0      0.9800      0.9900
3250.0      1.0000      1.0000
4250.0      1.0200      1.0100
```

And the dilation curve is define for table number one is:

```
4500.0      0.9900      0.9950
4750.0      0.9980      0.9980
5500.0      1.0100      1.0100
5750.0      1.0200      1.0200
```

and for table number 2:

```
2250.0      0.9400      0.9700
3250.0      0.9800      0.9900
4250.0      1.0000      1.0000
5250.0      1.0200      1.0100
```

8.3.242 ROCKTABW – Rock Compaction Tables (Water Induced)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ROCKTABW keyword defines the rock compaction tables induced by increasing water saturation within a grid cell due to water invasion, for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section. ROCKTABW defines pore volume and transmissibility multipliers versus water saturation that are used in the compaction calculations. The keyword should be used together with the ROCK, ROCKTAB or ROCKTABH keywords that specify the pore volume and transmissibility multipliers as functions of pressure. Alternatively the ROCKWNOD, ROCK2D and ROCK2DTR keywords can be used to enter two dimensional tables of the data. All keywords are in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.243 ROCKTHSG – Rock Compaction Hysteresis Tables (Dual Porosity)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ROCKTHSG keyword defines the rock compaction hysteresis attributes to be applied for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section and the either the Dual Permeability or Dual Porosity models are activated by the DUALPERM and DUALPORO keywords in the RUNSPEC section. ROCKTHSG specifies sigma multipliers versus pressure that are used in the dual porosity rock compaction calculations. The keyword should only be used if the Rock Compaction Hysteresis option has been activated by either setting the ROCKOPT parameter on the ROCKCOMP keyword to one of the available options.

Each data set consists of columnar vectors of sigma multipliers versus pressure that specify the elastic contraction and expansion and of the reservoir rock. The deflation curve is derived from the first data elements on each elastic curve. If the ROCKOPT parameter on the ROCKCOMP keyword has been set to HYSTER, then the dilation curves are extrapolated to infinite pressure, that is the curves are unbounded. However, if ROCKCOMP is set to BOBERG the last points of each elastic curve are used as the dilation curves.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.244 ROCKTSIG – Rock Compaction Tables (Dual Porosity)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ROCKTSIG keyword defines the rock compaction attributes to be applied for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section, and the either the Dual Permeability or Dual Porosity models are activated by the DUALPERM and DUALPORO keywords in the RUNSPEC section. ROCKTSIG specifies sigma multipliers versus pressure that are used in the dual porosity rock compaction calculations. The keyword should only be used if the Rock Compaction Hysteresis option has been activated by either setting the ROCKOPT parameter on the ROCKCOMP keyword to one of the available options.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.245 ROCKWNODE – WATER SATURATION VALUES FOR COMPACTION PRESSURE-SW TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ROCK2D and the ROCK2DTR keywords in the PROPS section define rock compressibility pore volume and transmissibility multipliers as a function of pressure and water saturation (“Sw”), for when the rock compaction option has been invoked by the ROCKCOMP keyword in the RUNSPEC section. The pressure values are defined on ROCK2D and the ROCK2DTR keywords together with the multipliers. This keyword ROCKWNODE, defines the water saturations that are used in conjunction with the ROCK2D and the ROCK2DTR keywords.

This keyword should only be used if compaction option has been enabled.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SWAT	A columnar vector of real monotonically increasing down the column values that defines the water saturations to be associated with the data on the ROCK2D and the ROCKTR keywords.			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTROCC tables as declared on the ROCKCOMP keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.109: ROCKWNOD Keyword Description

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See also the OVERBURD, ROCKTAB, ROCK2D and ROCK2DTR keywords in the PROPS section.

Example

The following example defines two ROCKWNODE tables for the pore volume and transmissibility compaction tables, assuming NTROCC is equal to two on the ROCKCOMP keyword and NSSFUN is greater than or equal to four on the TABDIMS keyword.

```
--
--      WATER SATURATION VALUES FOR COMPACTION PRESSURE-SW TABLES
--
ROCKWNOD
--      COMPACT
--      SWAT
--      -----
--      0.000
--      0.200
--      0.400
--      1.000 / P-SW SET TABLE NO. 01
--      COMPACT
--      SWAT
--      -----
--      0.000
--      0.250
--      0.750
--      1.000 / P-SW SET TABLE NO. 02
```

Note that there must be exactly NTROCC tables entered for this keyword, otherwise an error will occur.

8.3.246 RPTPROPS – DEFINE PROPS SECTION REPORTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the data in the PROPS section that is to be printed to the output print file in human readable format. The keyword has two distinct forms, the first of which consists of the keyword followed by a series of integers on the next line indicating the data to be printed (see the first example). This is the original format in the commercial simulator and was subsequently superseded by the second format. The second format consists of the keyword followed by a series of character strings that indicate the data to be printed. In most cases the character string is the keyword used to load the data in the OPM Flow input deck, for example PVDG for the dry gas PVT tables. It is anticipated that OPM Flow will eventually support the functionality of the second format only, the first format although recognized will be completely ignored.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
1	PVTDG	Print dry gas PVT tables	N/A
2	PVTG	Print wet gas PVT tables	N/A
3	SGFN	Print gas relative permeability saturation function tables.	N/A
4	SGL	Print connate gas saturation array.	N/A
....		N/A
Notes: 1) The keyword is terminated by a "/".			

Table 8.110: RPTPROPS Keyword Description

Note

Except for tabular like data, PVTDG etc., this keyword has the potential to produce very large print files that some text editors may have difficulty loading. A more efficient solution for array type data is to load the *.INIT file into OPM ResInsight to view the data graphically, this also has the benefit of being able to filter the grid based on I, J, K ranges and grid properties.

Examples

The first example shows the original format of this keyword; although the keyword and format are recognized by OPM Flow, the format is ignored and is unlikely to be implemented in the simulator.

```
--
--      DEFINE PROPS SECTION REPORT OPTION (ORIGINAL FORMAT)
--
RPTPROPS
      1          2*0      1          3*1          /
```

The next example shows the second format of the keyword which may be supported in a future release of OPM Flow.

```
--
--      DEFINE PROPS SECTION REPORT OPTIONS
--
RPTPROPS
      PVD0      SOF2      SGFN      SWFN          /
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.247 RCONST – DEFINE CONSTANT GOR (Rs) FOR ALL DEAD OIL PVT FLUIDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

RCONST defines a constant Gas-Oil Ratio (“GOR”), for all dead oil¹²³ PVT fluids. If the oil has a constant and uniform dissolved gas concentration, GOR, and if the reservoir pressure never drops below the saturation pressure (bubble point pressure), then the model can be run more efficiently by omitting the GAS and DISGAS keywords from the RUNSPEC section, treating the oil as a dead oil, and defining a constant Rs (GOR) value with keywords RCONST or RCONSTT in the PROPS section. This results in the model being run as a dead oil problem with no active gas phase. However, OPM Flow takes into account the constant Rs in the calculations and reporting.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	RS	A real positive value that defines the dead oil GOR for all oil PVT tables in the model			None
		Mscf/stb	sm ³ /sm ³	scc/scc	
2	PRESS	A real positive value that defines that saturation pressure (bubble point pressure) for all the oil PVT tables in the model.			None
		psia	barsa	atma	
Notes: 1) The keyword is terminated by a “/”.					

Table 8.111: RCONST Keyword Description

See also the RCONSTT keyword to define a different constant Rs to the various dead oil PVT tables and the PVDO and PVCDO keywords to enter the dead oil properties. All of the aforementioned keywords are in the PROPS section.

Example

The example sets the dead oil GOR to 5 scf/stb and the bubble point pressure to 14.7 psia.

```
--
--      DEAD OIL PVT CONSTANT GOR AND SATURATION PRESSURE
--
RCONST
--      RS      PSAT
--      MSCF/STB PSIA
--      -----
--      0.0050   14.7
```

¹²³ “Dead” oil is oil that it contains no dissolved gas or a relatively thick oil or residue that has lost its volatile components.

8.3.248 RCONSTT – DEFINE CONSTANT GOR (Rs) FOR EACH DEAD OIL PVT FLUID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

RCONSTT defines a constant Gas-Oil Ratio (“GOR”), for each dead oil¹²⁴ PVT fluid in the model. If the oil has a constant and uniform dissolved gas concentration, GOR, and if the reservoir pressure never drops below the saturation pressure (bubble point pressure), then the model can be run more efficiently by omitting the GAS and DISGAS keywords from the RUNSPEC section, treating the oil as a dead oil, and defining a constant Rs (GOR) value with keywords RCONST or RCONSTT in the PROPS section. This results in the model being run as a dead oil problem with no active gas phase. However, OPM Flow takes into account the constant Rs in the calculations and reporting.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	RS	A real positive columnar vector that defines the dead oil GOR for each oil PVT table in the model			None
		Mscf/stb	sm ³ /sm ³	scc/scc	
2	PRESS	A real positive columnar vector that defines the saturation pressure (bubble point pressure) for each the oil PVT table in the model.			None
		psia	barsa	atma	

Notes:

- 1) The keyword is followed by NTPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each row must contain two values representing the RS and PRESS variables.
- 3) Each row is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.112: RCONSTT Keyword Description

See also the RCONST keyword to define a constant Rs to all the various dead oil PVT tables and the PVDO and PVCDO keywords to enter the dead oil properties. All of the aforementioned keywords are in the PROPS section.

Example

The example sets the dead oil GOR to 5, 6.5 and 8.0 scf/stb for PVT tables one, two and three, respectively and the bubble point pressure to 14.7 psia for all three tables.

```
--
--      DEAD OIL PVT CONSTANT GOR AND SATURATION PRESSURE
--
RCONSTT
--      RS      PSAT
--      MSCF/STB PSIA
--      -----
--      0.0050      14.7      / TABLE NO. 01
--      0.0065      14.7      / TABLE NO. 02
--      0.0080      14.7      / TABLE NO. 03
```

¹²⁴ “Dead” oil is oil that it contains no dissolved gas or a relatively thick oil or residue that has lost its volatile components.

8.3.249 RSGI – DEFINE GAS-OIL RATIO VERSUS PRESSURE AND GI TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RSGI keyword specifies the saturated oil Gas-Oil Ratio (“GOR”) factors used to specify the variation of the maximum possible GOR of oil with respect to pressure and G_i values, for when the GIMODEL keyword in the RUNSPEC section has been used to activate the GI Pseudo Compositional option for the run. See also the GINODE, RSGI, RVGI, BGGI and BOGI keywords in the PROPS section to describe the fluid properties for the GI Pseudo Compositional option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.250 RTEMP - DEFINE THE INITIAL RESERVOIR TEMPERATURE FOR THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the reservoir temperature for when OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. The RTEMPA keyword is alias for RTEMP; however the former is ignored by OPM Flow.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	RTEMP	Single real positive value that defines the reservoir temperature for the model.			None
		°F	°C	°C	
Notes: 2) The keyword is terminated by a “/”.					

Table 8.113: RTEMP Keyword Description

See also the RTEMPVD keyword in SOLUTION section to define the reservoir temperature as a function of depth.

Example

```
--
--      RESERVOIR
--      TEMPERATURE
--      -----
RTEMP      190.0 / RESERVOIR TEMPERATURE
```

The above example defines the reservoir temperature to be 190 °F.

8.3.251 RTEMPA - DEFINE THE INITIAL RESERVOIR TEMPERATURE FOR THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the reservoir temperature for when temperature or thermal options has been activated by the either the TEMP or THERMAL keywords in the RUNSPEC section in the commercial simulator.

The RTEMP keyword is alias for RTEMPA; however the latter is ignored by OPM Flow.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	RTEMPA	Single real positive value that define the reservoir temperature for the model.			None
		°F	°C	°C	
Notes: I) The keyword is terminated by a “/”.					

Table 8.114: RTEMPA Keyword Description

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness. Use the RTEMP keyword instead to set the reservoir temperature.

Example

```
--
--      RESERVOIR
--      TEMPERATURE
--      -----
RTEMPA      190.0 / RESERVOIR TEMPERATURE
```

The above example defines the reservoir temperature to be 190 °F.

8.3.252 RVCONST – DEFINE CONSTANT CGR (Rv) FOR ALL DRY GAS PVT FLUIDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

RVCONST defines a constant Condensate-Gas Ratio (“CGR” or Rv), for all dry gas¹²⁵ PVT fluids. If the gas has a constant and uniform dissolved condensate concentration, and if the reservoir pressure never drops below the saturation pressure (dew point pressure), then the model can be run more efficiently by omitting the OIL and VAPGAS keywords from the RUNSPEC section, treating the gas as a dry gas, and defining a constant Rv (CGR) value with keywords RVCONST or RVCONSTT in the PROPS section. This results in the model being run as a dry gas problem with no active oil phase. However, OPM Flow takes into account the constant Rv in the calculations and reporting.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	RV	A real positive value that defines the dry gas CGR for all dry gas PVT tables in the model			None
		stb/Mscf	sm³/sm³	scc/scc	
2	PRESS	A real positive value that defines that saturation pressure (dew point pressure) for all the dry gas PVT tables in the model.			0.0
		psia	barsa	atma	
Notes:					
1) The keyword is terminated by a “/”.					

Table 8.115: RVCONST Keyword Description

See also the RVCONSTT keyword to define a different constant Rv to the various dry gas PVT tables and the PVDG keyword to enter the dry gas properties. All of the aforementioned keywords are in the PROPS section.

Example

The example sets the dry gas CGR to 5 stb/MMscf and the bubble point pressure to 14.7 psia.

```
--
--      DRY GAS PVT CONSTANT GCR AND SATURATION PRESSURE
--
RVCONST
--      RV      PSAT
--      STB/MSCF PSIA
--      -----
--      0.0050   14.7      /
```

¹²⁵ Natural gas that occurs in the absence of condensate or liquid hydrocarbons, or gas that had condensable hydrocarbons removed, is called dry gas. It is primarily methane with some intermediates. The hydrocarbon mixture is solely gas in the reservoir and there is no liquid (condensate surface liquid) formed either in the reservoir or at surface. The term dry indicates that the gas does not contain heavier hydrocarbons to form liquids at the surface conditions. Dry gas typically has GOR's greater than 100,000 scf/stb or 18,000 Sm³/m³.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.253 RVCONSTT – DEFINE CONSTANT CGR (Rv) FOR EACH DRY GAS PVT FLUID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

RVCONSTT defines a constant Condensate-Gas Ratio (“CGR” or Rv), for each dry gas¹²⁶ PVT fluid. If the gas has a constant and uniform dissolved condensate concentration, and if the reservoir pressure never drops below the saturation pressure (dew point pressure), then the model can be run more efficiently by omitting the OIL and VAPGAS keywords from the RUNSPEC section, treating the gas as a dry gas, and defining a constant Rv (CGR) value with keywords RVCONST or RVCONSTT in the PROPS section. This results in the model being run as a dry gas problem with no active oil phase. However, OPM Flow takes into account the constant Rv in the calculations and reporting.

This keyword is ignored by OPM Flow but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	RS	A real positive value that defines the dry gas CGR for each dry gas PVT table in the model			None
		stb/Mscf	sm ³ /sm ³	scc/scc	
2	PRESS	A real positive value that defines that saturation pressure (dew point pressure) for each dry gas PVT table in the model.			0.0
		psia	barsa	atma	

Notes:

- 1) The keyword is followed by NTPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each row must contain two values representing the RV and PRESS variables.
- 3) Each row is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.116: RVCONSTT Keyword Description

See also the RVCONST keyword to define a constant Rv to all the various dry gas PVT tables and the PVDG keyword to enter the dry gas properties. All of the aforementioned keywords are in the PROPS section.

Example

The example sets the dry gas CGR to 5, 6.5 and 8.0 stb/MMscf for PVT tables one, two and three, respectively and the bubble point pressure to 14.7 psia for all three tables.

```
--
--          DRY GAS PVT CONSTANT GCR AND SATURATION PRESSURE
--
RVCONSTT
--          RV          PSAT
--          STB/MSCF    PSIA
--          -----
--          0.0050      14.7          / TABLE NO. 01
--          0.0065      14.7          / TABLE NO. 02
--          0.0080      14.7          / TABLE NO. 03
```

¹²⁶ Natural gas that occurs in the absence of condensate or liquid hydrocarbons, or gas that had condensable hydrocarbons removed, is called dry gas. It is primarily methane with some intermediates. The hydrocarbon mixture is solely gas in the reservoir and there is no liquid (condensate surface liquid) formed either in the reservoir or at surface. The term dry indicates that the gas does not contain heavier hydrocarbons to form liquids at the surface conditions. Dry gas typically has GOR's greater than 100,000 scf/stb or 18,000 Sm³/m³.

8.3.254 RVGI – DEFINE CONDENSATE-GAS RATIO VERSUS PRESSURE AND GI TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RVGI keyword specifies the saturated gas Condensate-Gas Ratio (“CGR”) factors used to specify the variation of the maximum possible CGR of gas with respect to pressure and Gi values, for when the GIMODEL keyword in the RUNSPEC section has been used to activate the GI Pseudo Compositional option for the run. See also the GINODE, RSGI, RVGI, BGGI and BOGI keywords in the PROPS section to describe the fluid properties for the GI Pseudo Compositional option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.255 RWGSALT – WATER VAPORIZATION VERSUS PRESSURE AND SALT CONCENTRATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

RWGSALT defines the relationship of water vaporization versus pressure and salt concentration. This keyword should be used when the VAPWAT keyword has been declared in the RUNSPEC section indicating that vaporized water is present in the gas phase. In addition, if the Salt Precipitation model has been activated via the BRINE and PRECSALT keywords, also in the RUNSPEC section, then this keyword must be present. The keyword may be used for gas-water and oil-water-gas input decks that contain the either dry or wet gas and vaporized water phases.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note

This is an OPM Flow specific keyword for the simulator's Water Vaporization and Salt Precipitation Models, note that these are extensions to the simulator's standard Brine model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRESS	A real monotonically increasing down the column values that define the gas phase pressure, that together with salt concentration, defines the vaporized water in gas ratio (“VWGR”) or R_w			None
		psia	barsa	atma	
2	SALTCONC	A real monotonically increasing positive columnar vector defining the salt concentration in water.			None
		lb/stb	kg/sm ³	gm/scc	
3	RW	A columnar vector of real positive number values defining the vaporized water in gas ratio (R_w) that for a given PRESS and SALTCON.			None
		stb/Mscf	sm ³ /sm ³	rcc/scc	
Notes: 1) Each table is terminated by a “/” including the last table; however, there is no “/” terminator for the keyword.					

Table 8.117: RWGSALT Keyword Description

Since the water component is in both the water and the gas phases, RWGSALT controls the amount of water component evaporated from the water phase into the gas phase, which is a function of both the water phase salinity and a grid cells pressure. The keyword should be used in conjunction with the dry gas PVTGW keyword or the wet gas PVTGWO keyword, both of which are in the PROPS section.

Example

The example defines two RWGSALT tables assuming NTPVT equals two and NPPVT is greater than or equal to eight on the TABDIMS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

--	WATER VAPORIZATION TABLE FOR BRINE (OPM FLOW KEYWORD)		
--			
--			
RWGSALT			
--	PRES	SALTCONC	RW
--	PSIA	LB/STB	STB/MSCF
--	-----	-----	-----
	300	0	0.000132
		0.5	0.000132
		1	0.000132
	600	0	0.000132
		0.5	0.000132
		1	0.000132
	900	0	0.000132
		0.5	0.000132
		1	0.000132
	1200	0	0.000132
		0.5	0.000132
		1	0.000132
	1500	0	0.000132
		0.5	0.000132
		1	0.000132
	1800	0	0.000132
		0.5	0.000132
		1	0.000132
	2100	0	0.000132
		0.5	0.000132
		1	0.000132
	2400	0	0.000132
		0.5	0.000132
		1	0.000132
			/
			/ Table NO. 1
--	PRES	SALTCONC	RW
--	PSIA	LB/STB	STB/MSCF
--	-----	-----	-----
	300	0	0.000132
		0.5	0.000132
		1	0.000132
	600	0	0.000132
		0.5	0.000132
		1	0.000132
	900	0	0.000132
		0.5	0.000132
		1	0.000132
	1200	0	0.000132
		0.5	0.000132
		1	0.000132
	1500	0	0.000132
		0.5	0.000132
		1	0.000132
	1800	0	0.000132
		0.5	0.000132
		1	0.000132
	2100	0	0.000132
		0.5	0.000132
		1	0.000132
	2400	0	0.000132
		0.5	0.000132
		1	0.000132
			/
			/ Table NO. 2

8.3.256 SALINITY – DEFINE THE RESERVOIR SALINITY FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SALINITY defines a grid blocks salinity for all cells. The keyword should only be used with OPM Flow's CO₂-Brine model which is activated via the CO2STORE keyword in the RUNSPEC section. This keyword is a compositional keyword in the commercial simulator but has been implemented in OPM Flow's black-oil CO₂-Brine model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SALINITY	A real positive value that defines the salinity for all grid blocks in the model for when the CO ₂ -Brine model has been activated. Note that the units for salinity are molality, that is gm-M/Kg, and therefore the units are defined as given below with the 10 ⁻³ prefix.			None
		10 ⁻³ x lb-M/lb	10 ⁻³ x kg-M/kg	10 ⁻³ x gm-M/gm	
Notes: I) The keyword is terminated by a “/”.					

Table 8.118: SALINITY Keyword Description

See also the CO2STORE keyword in the RUNSPEC section.

Example

The example set the maximum salt salinity for all cells in the model to 0.001 lb-M/lb.

```
--
--      SET SALINITY FOR ALL CELLS (OPM FLOW KEYWORD)
--
SALINITY
    1.0 /
```

Note that units for salinity are to the 10⁻³, that is a value of 0.001 lb-M/lb should be entered as 1.0 lb-M/lb, as per the example.

8.3.257 SALTNODE – SALT CONCENTRATION BASED PVTNUM ARRAY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SALTNODE defines the salt concentration value based on a cells PVTNUM number. The SALTNODE property is used in the calculation of a polymer viscosity when the polymer and the salt options has been activated by the POLYMER and BRINE keywords in the RUNSPEC section. In the RUNSPEC section the number of PVTNUM functions is declared by NTPVT variable on the TABDIMS keyword and allocated to individual cells by the PVTNUM property array in the REGIONS section. NPPVT on the TABDIMS keyword in the RUNSPEC section defines the maximum number of rows (or pressure values) in the PVT tables and also sets the maximum number of entries for each SALTNODE data set. The number of values for each data set must correspond to the number of polymer solution adsorption entries on the PLYADSS keyword. For example if there are three sets of PVT tables and four values on the PLYADSS keyword, then three SALTNODE data sets with four values of salt concentrations need to be entered.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SALTNODE	A real monotonically increasing positive columnar vector defining the salt concentration for a given PVTNUM table.			None
		lb/stb	kg/sm ³	gm/scc	
Notes: 1) Each table is terminated by a “/” including the last table; however, there is no “/” terminator for the keyword.					

Table 8.119: SALTNODE Keyword Description

An alternative manner of entering the salt concentrations is by utilizing the PVTNUM region array by using the ADSALNOD keyword in the PROPS section.

Example

Given three sets of relative permeability tables and four values on the PLYADSS keyword and two SALTNODE data sets with four values of salt concentrations then the data should be entered as follows:

```
--
--   SETS SALT CONCENTRATION FOR POLYMER SOLUTION ADSORPTION
--   VIA PVTNUM ARRAY ALLOCATION
--
--   SALT
--
SALTNODE
  1.0
  5.0
 10.5
 25.0      / PVTNUM TABLE NO. 01
  1.0
  3.0
  7.5
 15.0      / PVTNUM TABLE NO. 02
```

See also the ADSALNOD keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.258 SALTSOL – DEFINE THE SALT SOLUBILITY LIMIT FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SALTSOL defines a grid blocks maximum salt solubility for all cells. The keyword should only be used with OPM Flow's Salt Precipitation model which is activated via the PRECSALT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note

This is an OPM Flow specific keyword for the simulator's Salt Precipitation model that is activated by the PRECSALT keyword and declaring that vaporized water is present in the run via the VAPWAT in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SALTSOL	A real positive value that defines the maximum salt solubility for all grid blocks.			None
		lb/stb	kg/sm ³	gm/scc	
Notes: I) The keyword is terminated by a “/”.					

Table 8.120: SALTSOL Keyword Description

See also the PRECSALT and VAPWAT keywords in the RUNSPEC section and the PVTGW and PVTGWO keywords in the PROPS section.

Example

The example set the maximum salt solubility for all cells in the model to 134.6 lb/stb.

```
--
--      SET SALT SOLUBILITY LIMIT FOR ALL CELLS (OPM FLOW KEYWORD)
--
SALTNODE
      134.6 /
```

The 134.6 lb/stb, (380 kg/sm³ or 0.384 gm/scc for metric and laboratory units, respectively) is based on the solubility of NaCl at 212 °F (100 °C) and should be used with care.

8.3.259 SCALECRS – DEFINE END-POINT SCALING OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SCALECRS keyword sets the end-point scaling option to be either two-point or three-point scaling, for when the End-Point Scaling option has been invoked by the ENDSCALE keyword in the RUNSPEC section. This determines which end-points on the relative permeability curves are used for scaling based on the supplied end-point arrays (SGCR, SWCR, etc.).

No.	Name	Description	Default
I	SCALEOPT	SCALEOPT is a character string that sets the end-point scaling option and should be set to either NO or YES: 1) NO: Activates two-point end-point scaling. 2) YES: Activates three-point end-point	NO
Notes: 1) The keyword is terminated by a "/".			

Table 8.121: SCALECRS Keyword Description

The end-point scaled for each option and the arrays used in the end-point scaling are summarized in the following table:

Option	Phases	Relative Permeability End-Point	Minimum Saturation End-Point	Middle Saturation End-Point	Maximum Saturation End-Point
Two-Point	Water	KRW	SWCR		SWU
	Gas	KRG	SGCR		SGU
	Oil-Water	KRORW	SOWCR		(1.0 – SWL - SGL)
	Oil-Gas	KRORG	SOGCR		(1.0 – SWL - SGL)
Three-Point	Water	KRW	SWCR	(1.0 – SOWCR - SGL)	SWU
	Gas	KRG	SGCR	(1.0 - SOGCR-SWL)	SGU
	Oil-Water	KRORW	SOWCR	(1.0 – SWCR - SGL)	(1.0 – SWL - SGL)
	Oil-Gas	KRORG	SOGCR	(1.0 – SGCR - SGL)	(1.0 – SWL - SGL)
	Two Phase Gas-Water Simulations				
	Water	KRW	SWCR	(1.0 - SGCR)	SWU
	Gas	KRG	SGCR	(1.0 -SWCR)	SGU

Table 8.122: End-Point Arrays Used in the End-Point Scaling Options

See also the TZONE keyword in the PROPS section that sets the transition zone end-point scaling options for the oil, gas and water phases.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      TWO-POINT END-POINT SCALING IS NO THREE POINT IS YES
--
--      SCALEOPT
--      -----
SCALECRS      YES                               / SCALING OPTION
```

The above example activates three-point end-point scaling of the relative permeability curves.

8.3.260 SCALELIM – END-POINT SCALING VERSUS DEPTH MAXIMUM WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the maximum water saturation allowed in a cell for when the end-point versus depth tables are used in the End-Point Scaling option to calculate the water saturation for a grid block. The End-Point Scaling option must be invoked by the **ENDSCALE** keyword in the **RUNSPEC** section to use this keyword, and the keyword may only be used in two phase runs containing water, or if the Miscible Flood option has been activated by the **MISCIBLE** keyword in the **RUNSPEC** section. This keyword functionality is not supported in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.261 SDENSITY – DEFINE THE MISCIBLE OR SOLVENT SURFACE GAS DENSITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SDENSITY keyword defines density at surface conditions of either the miscible injection gas for when the MISCIBLE option has been invoked in the RUNSPEC section, or the solvent for when the SOLVENT option has been invoked in the RUNSPEC section. This keyword must be invoked if either the MISCIBLE or SOLVENT options have been activated in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SDENSITY	SDENSITY is a real positive number defining the density at surface conditions of either: 1) the miscible injection gas for when the MISCIBLE option has been invoked in the RUNSPEC section, or, 2) the solvent for when the SOLVENT option has been invoked in the RUNSPEC section.			None
		lb/ft ³	kg/m ³	gm/cc	
Notes: 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.123: SDENSITY Keyword Description

In addition to this keyword, the surface density or gravity of the in-place natural gas must be entered using either the DENSITY or GRAVITY keywords.

Examples

The following shows the SDENSITY keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to one.

```
--
--      MIS-SOL
--      DENSITY
--      -----
SDENSITY      0.04520      / MIS-SOL DENSITY
```

The next example shows the SDENSITY keyword for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to three.

```
--
--      MIS-SOL
--      DENSITY
--      -----
SDENSITY      0.04520      / MIS-SOL DENSITY 1
               0.05520      / MIS-SOL DENSITY 2
               0.06420      / MIS-SOL DENSITY 3
```

There is no terminating "/" for this keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.262 SGCR – END-POINT SCALING GRID CELL CRITICAL GAS SATURATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SGCR defines the critical gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section. The critical gas saturation is defined as the maximum gas saturation for which the gas relative permeability is zero in a two-phase relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SGCR	SGCR is an array of real numbers assigning the critical gas saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.03			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: 1) Note this the directional independent version of the critical gas saturation used with the end-point scaling option. If directional end-point scaling has been activated then the SGCRX± , SGCRX± and SGCRX± series of keyword should be used. 2) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table. 3) The keyword is terminated by a “/”.					

Table 8.124: SGCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SGCRX, SGCRY and SGCRZ instead of SGCR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SGCRX-, SGCRX-, SGCRY, SGCRY-, SGCRZ and SGCRZ-, instead of the SGCR keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SGCR DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SGCR      300*0.050 /
```

The above example defines a constant critical gas saturation of 0.05 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.263 SGCWMIS – MISCIBLE CRITICAL GAS VERSUS WATER SATURATION FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SGCWMIS defines the dependency between the miscible critical gas saturation and the water saturation, for when the MISCIBLE keyword in the RUNSPEC section has been activated. The keyword can only be used with the MISCIBLE option and for when the oil, water and gas phases are active in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SWAT	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the water saturation.			None
		dimensionless	dimensionless	dimensionless	
2	SGCMIS	A columnar vector of real equal or increasing down the column values that are greater than or equal to zero and less than one, that define the corresponding miscible gas critical gas saturation for the corresponding water saturation SWAT.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTMISC tables as declared on the MISCIBLE keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSMISC rows as declared on the MISCIBLE keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.125: SGCWMIS Keyword Description

Example

```
--
--      MISCIBLE CRITICAL GAS VERSUS WATER SATURATION TABLE
--
SGCWMIS
--      SWAT      SGCWMIS
--      FRAC      FRAC
--      -----
--      0.0000      0.0000
--      0.2000      0.0300
--      1.0000      0.0300 / TABLE NO. 01
--
--      SWAT      SGCWMIS
--      FRAC      FRAC
--      -----
--      0.0000      0.0000
--      0.3000      0.0500
--      1.0000      0.0500 / TABLE NO. 02
```

The above example defines two miscible critical gas saturation versus water saturation tables assuming NTMISC equals two and NSMISC is greater than or equal to three on the MISCIBLE keyword in the RUNSPEC section.

8.3.264 SGF32D – GAS SATURATION TABLES VERSUS OIL AND WATER SATURATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SGF32D keyword defines the gas relative permeability as a function of both oil and water saturations. This keyword should only be used if the gas is present in the run.

This keyword is ignored by OPM Flow and has no effect on the simulation

See also the SWOF, SGO, SLGO series of keywords and the SWFN, SGFN, SGWFN, SOF2, SOF3, SOF32D series of keywords to enter relative permeability data.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.265 SGFN – GAS SATURATION TABLES (FORMAT TYPE 2)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SGFN keyword defines the gas relative permeability and oil-gas capillary pressure data versus gas saturation tables for when gas is present in the input deck. This keyword should only be used if the gas is present in the run.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SGAS	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the gas saturation.			None
		dimensionless	dimensionless	dimensionless	
2	KRG	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the gas relative permeability.			None
		dimensionless	dimensionless	dimensionless	
3	PCOG	A columnar vector of real values that are either equal or increasing down the column that defines the oil-gas relative capillary pressure.			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.126: SGFN Keyword Description

Example

```
--
--      GAS RELATIVE PERMEABILITY TABLES (SGFN)
--
SGFN
--      SGAS      KRG      PCGO
--      FRAC      PSIA
--      -----
--          0.00      0.0000      1*
--          0.20      0.0002      1*
--          0.85      0.4450      1*
--                                     / TABLE NO. 01
--      -----
--          0.00      0.0000      1*
--          0.20      0.0002      1*
--      -----
--          0.60      0.1412      1*
--          0.70      0.2412      1*
--          0.85      0.4450      1*
--                                     / TABLE NO. 02
```

The example defines two SGFN tables for when gas is present in the input deck.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.266 SGL – END-POINT SCALING GRID CELL CONNATE GAS SATURATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SGL defines the connate gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section. The connate gas saturation is defined as the minimum gas saturation in a two-phase gas relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SGL	SGL is an array of real numbers assigning the connate gas saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used,for example 30*0.03			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: <div>1) Note this the directional independent version of the connate gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the SGLX± , SGLY± and SGZ± series of keyword should be used.</div> <div>2) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.</div> <div>3) The keyword is terminated by a “/”.</div>					

Table 8.127: SGL Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SGLX, SGLY and SGLZ instead of SGL. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SGLX-, SGLX-, SGLY-, SGLY-, SGLZ and SGLZ-, instead of the SGL keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SGL DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SGL
      300*0.030 /
```

The above example defines a constant connate gas saturation of 0.03 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.267 SGLPC – END-POINT SCALING GRID CELL CAPILLARY PRESSURE CONNATE GAS SATURATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SGLPC defines the connate gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section. The connate gas saturation is defined as the minimum gas saturation in a two-phase gas relative permeability table. The keyword only applies the scaling to the drainage capillary pressures tables, unlike the SGL keyword that applies the scaling to both the capillary pressure and relative permeability tables. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SGLPC	SGLPC is an array of real numbers assigning the connate gas saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. If SGLPC is omitted from the input deck the values will be defaulted to those on the SGL series of keywords. If the SGL series of keywords are missing from the input deck then the values are taken from the cell allocated capillary pressure table. Repeat counts may be used,for example 30*0.03			Taken from SGL or from the cell allocated capillary pressure table.
		dimensionless	dimensionless	dimensionless	
Notes: 1) Note this the directional independent version of the connate gas saturation array used with the end-point scaling option.If directional end-point scaling has been activated then the SGLX± , SGLY± and SGZ± series of keyword should be used. 2) The keyword is terminated by a “/”.					

Table 8.128: SGLPC Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SGLX, SGLY and SGLZ instead of SGL or SGLPC. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SGLX-, SGLY-, SGLZ- and SGLZ-, instead of the SGL or SGLPC keywords.

Missing Some Functionality - Use with Caution.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--  
--      DEFINE GRID BLOCK END-POINT SGLPC DATA FOR ALL CELLS  
--      (FOR NX x NY x NZ = 300)  
--  
SGLPC      300*0.030 /
```

The above example defines a constant connate gas saturation of 0.03 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.268 SGOF – GAS-OIL SATURATION TABLES VERSUS GAS (FORMAT TYPE 1)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SGOF keyword defines the oil and gas relative permeability and oil-gas capillary versus gas saturation tables for when oil and gas are present in the input deck. This keyword should only be used if the gas is present in the run.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SGAS	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the gas saturation.			None
		dimensionless	dimensionless	dimensionless	
2	KRG	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the gas relative permeability.			None
		dimensionless	dimensionless	dimensionless	
3	KRO	A columnar vector of real values that are either equal or decreasing down the column and that are greater than or equal to zero and less than or equal to one that defines the oil relative permeability with respect to gas and connate water saturation. When water is active in the run, the first entry the column, that is at $k_{rog}(S_g = 0)$, must be the same as the first entry in the corresponding SWOF table, that is at $k_{row}(S_o = 1 - S_{wco})$. The last value in the column should be zero.			None
		dimensionless	dimensionless	dimensionless	
4	PCOG	A columnar vector of real values that are either equal or increasing down the column that defines the oil-gas relative capillary pressure.			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a "/" and there is no "/" terminator for the keyword.

Table 8.129: SGOF Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Example

[illegible]

The example defines two SGOF tables for use when oil, gas and water are present in the run.

8.3.269 SGU – END-POINT SCALING GRID CELL GAS SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SGU defines the maximum gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSKALE keyword in the RUNSPEC section. The maximum gas saturation is defined as the maximum gas saturation in a two-phase gas relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SGU	SGU is an array of real numbers assigning the maximum gas saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used,for example 30*0.70			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) Note this the directional independent version of the maximum gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the SGUX± , SGUY± and SGUZ± series of keyword should be used.
- 2) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.
- 3) The keyword is terminated by a “/”.

Table 8.130: SGU Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SGUX, SGUY and SGUZ instead of SGU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SGUX-, SGUY-, SGUZ- and SGUZ-, instead of the SGU keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SGU DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SGU      300*0.700 /
```

The above example defines a constant connate gas saturation of 0.70 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.270 SGWFN – GAS-WATER SATURATION TABLES (FORMAT TYPE 2)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SGWFN keyword defines the gas and water relative permeability and gas-water capillary pressure data versus gas saturation tables for when gas and water are present in the input deck. This keyword should only be used if the gas and water are present in the run.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SGAS	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the gas saturation.			None
		dimensionless	dimensionless	dimensionless	
2	KRG	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the gas relative permeability. Note that the first entry in the column must be zero.			None
		dimensionless	dimensionless	dimensionless	
3	KRW	A columnar vector of real values that are either equal or decreasing down the column and that are greater than or equal to zero and less than or equal to one that defines the water relative permeability with respect to gas saturation. The last value in the column should be zero.			None
		dimensionless	dimensionless	dimensionless	
4	PCGW	A columnar vector of real values that are either equal or increasing down the column that defines the gas-water relative capillary pressure.			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.131: SGWFN Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      GAS-WATER RELATIVE PERMEABILITY TABLES (SGWFN)
SGWFN
--      SG          KRG          KRW          PCOW
--      FRAC          PSIA
--      -----
--      0.000000      0.0000      0.9000      0.000000
--      0.200000      0.0002      0.7664      0.000000
--      0.699099      0.4973      0.0000      0.000000
--      0.700000      1.0000      0.0000      0.000000      / TABLE NO. 01
--      -----
--      0.000000      0.0000      0.9000      0.000000
--      0.200000      0.0002      0.7664      0.000000
--      0.245309      0.0004      0.7443      0.000000
--      0.261989      0.0010      0.6907      0.000000
--      0.303091      0.0044      0.5671      0.000000
--      0.368269      0.0191      0.3962      0.000000
--      0.435026      0.0519      0.2528      0.000000
--      0.486387      0.0940      0.1643      0.000000
--      0.522283      0.1339      0.1137      0.000000
--      0.550683      0.1725      0.0803      0.000000
--      0.575342      0.2115      0.0559      0.000000
--      0.599076      0.2542      0.0367      0.000000
--      0.621294      0.2991      0.0223      0.000000
--      0.642171      0.3458      0.0120      0.000000
--      0.658984      0.3868      0.0061      0.000000
--      0.671123      0.4183      0.0030      0.000000
--      0.679268      0.4403      0.0015      0.000000
--      0.684963      0.4562      0.0008      0.000000
--      0.688893      0.4674      0.0004      0.000000
--      0.692025      0.4765      0.0002      0.000000
--      0.694641      0.4841      0.0001      0.000000
--      0.696976      0.4910      0.0000      0.000000
--      0.699099      0.4973      0.0000      0.000000
--      0.700000      1.0000      0.0000      0.000000      / TABLE NO. 02
```

The example defines two SGWFN tables for use when oil, gas and water are present in the run.

8.3.271 SHRATE - ACTIVATE AND DEFINE THE POLYMER SHEARING LOGARITHMIC PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the logarithm-based polymer shear thinning/thickening option and defines the shear rate constant. This keyword can only be used in conjunction with the PLYSHLOG in the PROPS section

This keyword is ignored by OPM Flow and has no effect on the simulation.

See the PLYSHEAR keyword for the alternative polymer shear thinning/thickening option that is implemented in OPM Flow.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.272 SKIP – ACTIVATE SKIPPING OF ALL KEYWORDS AND INPUT DATA

The SKIP keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered. All keywords and between the SKIP and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP – Activate Skipping of All Keywords and Input Data](#) in the GLOBAL section for a full description.

8.3.273 SKIP100 – ACTIVATE SKIPPING OF BLACK-OIL KEYWORDS AND INPUT DATA

This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered. All black-oil keywords between the SKIP100 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data](#) in the GLOBAL section for a full description.

8.3.274 SKIP300 – ACTIVATE SKIPPING OF “COMPOSITIONAL” KEYWORDS AND INPUT DATA

Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered. All “compositional” keywords between the SKIP300 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.275 SKRO – END-POINT SCALING OF GRID CELL K_{ro}(S_{wl}) (SURFACTANT)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SKRO defines the scaling parameter for the surfactant oil relative permeability value at the connate water saturation (SWL), for all the cells in the model via an array. The ENDSKALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Surfactant option must be enabled by either the SURFST or SURFSTES keywords in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SKRO	SKRO is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling SKRO values for each cell in the model. Repeat counts may be used, for example 50*0.500.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 8.132: SKRO Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be scale on the relative permeability values using the SKRO, SKRORG, SKRORV, SKRW and SKRWR surfactant relative permeability grid cell arrays for the relative permeability end-point data.

Example

The example defines an input box for the whole grid and for layers one to three, for layer one SKRO is set equal to 0.850, for layer two SKRO equals 0.875, and for layer three SKRO equals 0.900.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2  J1  J2  K1  K2
BOX      1*  1*  1*  1*  1   3
--                                     / DEFINE BOX AREA
--
--      SET SKRO VALUES FOR THREE LAYERS IN THE MODEL
--
SKRO
      1000*0.855  1000*0.875  1000.0.900
--                                     /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.276 SKRORG – END-POINT SCALING OF GRID CELL KRO(SGCR) (SURFACTANT)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SKRORG defines the scaling parameter for the surfactant relative permeability of oil at the critical gas saturation (SGCR), for all the cells in the model via an array. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Surfactant option must be enabled by either the SURFST or SURFSTES keywords in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SKRORG	SKRORG is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling SKRORG values for each cell in the model. Repeat counts may be used, for example 50*0.850.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 8.133: SKRORG Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be scale on the relative permeability values using the SKRO, SKRORG, SKRORV, SKRV and SKRVR surfactant relative permeability grid cell arrays for the relative permeability end-point data.

Example

The example uses the EQUALS keyword to set layer one SKRORG equal to 0.750, layer two SKRORG equals 0.775, and layer three SKRORG equals 0.800.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      SKRORG      0.7550      1*  1*    1*  1*    1  1  / SKRORG FOR LAYER 1
      SKRORG      0.7750      1*  1*    1*  1*    2  2  / SKRORG FOR LAYER 2
      SKRORG      0.8000      1*  1*    1*  1*    3  3  / SKRORG FOR LAYER 3
/
```

8.3.277 SKRORW – END-POINT SCALING OF GRID CELL K_{ro}(SWCR) (SURFACTANT)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SKRORW defines the scaling parameter for the surfactant relative permeability of oil at the critical water saturation (SWCR), for all the cells in the model via an array. The ENDSALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Surfactant option must be enabled by either the SURFST or SURFSTES keywords in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SKRORW	SKRORW is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling SKRORW values for each cell in the model. Repeat counts may be used, for example 50*0.850			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 8.134: SKRORW Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be scale on the relative permeability values using the SKRO, SKRORG, SKRORW, SKRW and SKRWR surfactant relative permeability grid cell arrays for the relative permeability end-point data.

Example

The example defines an input box for the whole grid and for layers one to three, for layer one SKRORW is set equal to 0.750, for layer two SKRORW equals 0.775, and for layer three SKRORW equals 0.800.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2  J1  J2  K1  K2
BOX      1*  1*  1*  1*  1   3                / DEFINE BOX AREA
--
--      SET SKRORW VALUES FOR THREE LAYERS IN THE MODEL
--
SKRORW   1000*0.755  1000*0.775  1000.0.800    /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
ENDBOX
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.278 SKRW – END-POINT SCALING OF GRID CELL KRW(SW =1.0) (SURFACTANT)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SKRW defines the scaling parameter at the maximum surfactant water relative permeability value (SWU), that is for $S_w = 1.0$, for all the cells in the model via an array. The ENDSALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Surfactant option must be enabled by either the SURFST or SURFSTES keywords in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SKRW	SKRW is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling SKRW values for each cell in the model. Repeat counts may be used, for example 50*1.000.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 8.135: SKRW Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be scale on the relative permeability values using the SKRO, SKRORG, SKRORW, SKRW and SKRWR surfactant relative permeability grid cell arrays for the relative permeability end-point data.

Example

The example uses the EQUALS keyword to set SKRW for layer one equal to 0.850, layer two SKRW to 0.875, and layer three KRW to 0.900.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--
EQUALS      I1  I2    J1  J2    K1  K2
            SKRW      0.8550    1*  1*    1*  1*    1   1  / SKRW FOR LAYER 1
            SKRW      0.8750    1*  1*    1*  1*    2   2  / SKRW FOR LAYER 2
            SKRW      0.9000    1*  1*    1*  1*    3   3  / SKRW FOR LAYER 3
/
```

8.3.279 SKRWR – END-POINT SCALING OF GRID CELL KRWR(SOWCR) (SURFACTANT)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SKRWR defines the scaling parameter at the critical oil to water saturation value (SOWCR), for the surfactant water relative permeability curve, for all the cells in the model via an array. The ENDSCALE keyword in the RUNSPEC section should be activated to enable end-point scaling and the use of this keyword. In addition, the Surfactant option must be enabled by either the SURFST or SURFSTES keywords in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SKRWR	SKRWR is an array of positive real numbers which are greater than zero and less than or equal to 1.0, that are the assigned scaling SKRWR values for each cell in the model. Repeat counts may be used, for example 50*1.000.			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2) The keyword is terminated by a “/”.

Table 8.136: SKRWR Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be scale on the relative permeability values using the SKRO, SKRORG, SKRORW, SKRW and SKRWR surfactant relative permeability grid cell arrays for the relative permeability end-point data.

Example

The first example defines an input box for the whole grid and for layers one to three, for layer one SKRWR is set equal to 0.750, for layer two SKRWR equals 0.775, and for layer three SKRWR equals 0.800.

```
--
--      DEFINE INPUT BOX FOR EDITING INPUT ARRAYS (NX=100, NY=100)
--
--      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
BOX      1*  1*   1*  1*   1   3
--
--      / DEFINE BOX AREA
--
--      SET SKRWR VALUES FOR THREE LAYERS IN THE MODEL
--
--      SKRWR
--      1000*0.755  1000*0.775  1000.0.800
--
--      /
--
--      DEFINE END OF INPUT BOX EDITING OF INPUT ARRAYS
--
--      ENDBOX
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.280 SLGOF – GAS-OIL SATURATION TABLES VERSUS GAS (FORMAT TYPE 1)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SLGOF keyword defines the oil and gas relative permeability and oil-gas capillary pressure versus liquid saturation tables for when oil and gas are present in the input deck. This keyword should only be used if both oil and gas are present in the run.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SLIQ	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the liquid saturation, that is the connate water saturation (SWL) plus the oil saturation. The first entry should correspond to residual liquid, that is Swc + Sorg and the last entry should be 1.0 to correspond to a gas saturation of zero.			None
		dimensionless	dimensionless	dimensionless	
2	KRG	A columnar vector of real values that are either equal or decreasing down the column and that are greater than or equal to zero and less than or equal to one that defines the gas relative permeability..			None
		dimensionless	dimensionless	dimensionless	
3	KRO	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the oil relative permeability with respect to gas and connate water saturation. When water is active in the run, the last entry the column, that is at krog(Sg = 0), must be the same as the first entry in the corresponding SWOF table, that is at krow(So = 1 - Swco). The first value in the column should be zero.			None
		dimensionless	dimensionless	dimensionless	
4	PCOG	A columnar vector of real values that are either equal or decreasing down the column that defines the oil-gas relative capillary pressure.			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.137: SLGOF Keyword Description

Example

--	GAS-OIL RELATIVE PERMEABILITY TABLES (SLGOF)				
--	SLIQ	KRG	KROG	PCOG	
--	FRAC			PSIA	
--	-----	-----	-----	-----	
	0.30060	0.55000	0.0000	0.0000	
	0.31480	0.42500	0.2848	0.0000	
	0.32910	0.35000	0.3091	0.0000	
	0.34330	0.27500	0.4333	0.0000	
	0.35760	0.25000	0.5576	0.0000	
	0.37180	0.22500	0.5818	0.0000	
	0.38610	0.20000	0.6061	0.0000	
	0.40030	0.17500	0.6303	0.0000	
	0.41450	0.15000	0.6545	0.0000	
	0.42880	0.12500	0.6788	0.0000	
	0.44300	0.10000	0.7030	0.0000	
	0.45730	0.07500	0.7273	0.0000	
	0.47150	0.05000	0.7515	0.0000	
	0.48580	0.02500	0.7758	0.0000	
	0.50000	0.00000	0.8000	0.0000	
	0.80000	0.00000	0.9000	0.0000	/ TABLE No. 01
--	-----	-----	-----	-----	
	0.30060	0.55000	0.0000	0.0000	
	0.31480	0.42500	0.2848	0.0000	
	0.32910	0.35000	0.3091	0.0000	
	0.34330	0.27500	0.4333	0.0000	
	0.35760	0.25000	0.5576	0.0000	
	0.37180	0.22500	0.5818	0.0000	
	0.38610	0.20000	0.6061	0.0000	
	0.40030	0.17500	0.6303	0.0000	
	0.41450	0.15000	0.6545	0.0000	
	0.42880	0.12500	0.6788	0.0000	
	0.44300	0.10000	0.7030	0.0000	
	0.45730	0.07500	0.7273	0.0000	
	0.47150	0.05000	0.7515	0.0000	
	0.48580	0.02500	0.7758	0.0000	
	0.50000	0.00000	0.8000	0.0000	
	0.80000	0.00000	0.9000	0.0000	/ TABLE No. 02

The example defines two SLGOF tables for use when oil, gas and water are present in the run.

8.3.281 SOCRS – END-POINT SCALING GRID CELL MISCIBLE CRITICAL OIL SATURATION WITH RESPECT TO WATER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SOCRs defines the miscible critical oil saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSALE keyword in the RUNSPEC section. The critical oil saturation with respect to water is defined as the maximum oil saturation for which the oil relative permeability is zero in a two-phase oil-water relative permeability table. The keyword is used with the Surfactant model to re-scale the surfactant relative permeability saturation tables allocated to a grid block by the SURFNUM keyword in the REGIONS section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SOCRS	SOCRS is an array of real numbers assigning the critical oil saturation with respect to water values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used,for example 30*0.30			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: <div><div>1)</div>Note this the directional independent version of the critical gas saturation used with the end-point scaling option.If directional end-point scaling has been activated then the SOCRSX± , SOCRSX± and SOCRSX± series of keyword should be used.</div> <div><div>2)</div>If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.</div> <div><div>3)</div>The keyword is terminated by a “/”.</div>					

Table 8.138: SOGCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOCRS, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SOCRS DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SOCRS      300*0.200      /
```

The above example defines a constant critical oil saturation of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.282 SOF2 – OIL SATURATION TABLES WITH RESPECT TO GAS OR WATER (FORMAT TYPE 2)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SOF2 keyword defines the oil relative permeability versus oil saturation tables for when oil and gas or oil and water are present in the input deck. The keyword is also used to define the relative permeability of the miscible hydrocarbon phase in SOLVENT runs. This keyword should only be used if the oil is present in the run.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SOIL	<p>A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the oil or the hydrocarbon solvent saturation.</p> <p>For two phase runs the oil saturation should be entered and for when the SOLVENT option has been activated in the RUNSPEC section the total hydrocarbon phase (including the solvent) should be entered, that is $SOIL = S_o + S_g + S_s$.</p>			None
		dimensionless	dimensionless	dimensionless	
3	KRO	<p>A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the oil relative permeability with respect to gas and connate water saturation.</p> <p>For two phase runs the oil relative permeability should be entered and for when the SOLVENT option has been activated in the RUNSPEC section the relative permeability of the miscible hydrocarbon phase with respect to water.</p> <p>The last value in the column should be zero.</p>			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.139: SOF2 Keyword Description

Not this keyword should only be used for when the SOLVENT keyword in the RUNSPEC section has been activated. It should not be use for two-phase oil-water runs.

Example

```
--
--      OIL RELATIVE PERMEABILITY TABLES (SOF2)
--
SOF2
--      SOIL      KRO
--      FRAC      FRAC
--      -----
--      0.00      0.000000
--      0.05      1.197e-5
--      0.10      0.000191
--      0.15      0.000969
--      0.20      0.003065
--      0.25      0.007483
--      0.30      0.015517
--      0.35      0.028747
--      0.40      0.049041
--      0.45      0.078555
--      0.56      0.119730
--      0.55      0.175297
--      0.60      0.248272
--      0.65      0.341961
--      0.70      0.459956
--      0.75      0.606134
--      0.80      0.784664
--      0.85      1.000000
--
--
--      0.00      0.000000
--      0.05      1.197e-5
--      0.10      0.000191
--      0.15      0.000969
--      0.20      0.003065
--      0.25      0.007483
--      0.30      0.015517
--      0.35      0.028747
--      0.40      0.049041
--      0.45      0.078555
--      0.56      0.119730
--      0.55      0.175297
--      0.60      0.248272
--      0.65      0.341961
--      0.70      0.459956
--      0.75      0.606134
--      0.80      0.784664
--      0.85      1.000000
```

/ TABLE NO. 01

/ TABLE NO. 02

The example defines two SOF2 tables for when oil and gas or oil and water are present in the input deck.

8.3.283 SOF3 – OIL SATURATION TABLES WITH RESPECT TO GAS AND WATER (FORMAT TYPE 2)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SOF3 keyword defines the oil relative permeability versus oil saturation tables for when oil, gas and water are present in the input deck. The keyword should only be used if oil, gas and water are present in the input deck.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SOIL	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the oil or the hydrocarbon solvent saturation. The final entry should be at the connate water saturation, that is 1 - Swc.			None
		dimensionless	dimensionless	dimensionless	
3	KROW	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the oil relative permeability with respect to oil and water saturation. The first value in the column should be zero.			None
		dimensionless	dimensionless	dimensionless	
4	KROG	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the oil relative permeability with respect to oil, gas and connate water saturation. The first value in the column should be zero.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.140: SOF3 Keyword Description

8.3.284 SOF32D – OIL SATURATION TABLES WITH RESPECT TO WATER AND GAS (THREE PHASE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SOF32D keyword defines the three phase oil relative permeability versus water and gas saturation tables for when oil, gas and water are present in the input deck. The keyword should only be used if oil, gas and water are present in the input deck. Normally the simulator calculates the three-phase oil relative permeabilities based on the entered two phase tables of water-oil and gas-oil, combined with the STONE1 and STONE2 keywords in the PROPS section that determine the method used to generate the three phase oil relative permeability curves. SOF32D allows for the direct input of the three phase tables, as such the STONE1 and STONE2 keywords should not be entered if SOF32D is used in the input deck.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.285 SOGCR – END-POINT SCALING GRID CELL CRITICAL OIL SATURATION WITH RESPECT TO GAS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SOGCR defines the critical oil saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section. The critical oil saturation with respect to gas is defined as the maximum oil saturation for which the oil relative permeability is zero in a two-phase gas-oil relative permeability table. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SOGCR	SOGCR is an array of real numbers assigning the critical oil saturation with respect to gas values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword.			Taken from cell allocated relative permeability table.
		Repeat counts may be used,for example 30*0.30 dimensionless			
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) Note this the directional independent version of the critical gas saturation used with the end-point scaling option.If directional end-point scaling has been activated then the SOGCRX± ,SOGCRX± and SOGCRX± series of keyword should be used.
- 2) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.
- 3) The keyword is terminated by a “/”.

Table 8.141: SOGCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SOGCRX, SOGCRY and SOGCRZ instead of SOGCR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SOGCRX-, SOGCRY-, SOGCRZ- and SOGCRZ-, instead of the SOGCR keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SOGCR DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SOGCR
      300*0.200 /
```

The above example defines a constant critical gas saturation of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.286 SOMGAS – STONE1 MODEL MINIMUM OIL SATURATION VERSUS GAS SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the minimum oil saturation as a function of gas saturation for Stone's¹²⁷ first three phase oil relative permeability model as modified by Aziz and Settari¹²⁸. If the STONE1 and STONE2 keywords are not present in the input deck then the default three phase oil relative permeability model is employed. The SOMGAS and STONE1 keywords should only be used in three phase runs containing the oil, gas and water phases. The keyword is optional.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹²⁷ Stone, H. L. "Probability Model for Estimating Three-Phase Relative Permeability," paper SPE 2116, Journal of Canadian Petroleum Technology (1973) 22, No. 2, 214-218.

¹²⁸ Aziz, K. and Settari, A. Petroleum Reservoir Simulation, London, UK, Applied Science Publishers (1979), page 398.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.287 SOMWAT – STONE1 MODEL MINIMUM OIL SATURATION VERSUS WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the minimum oil saturation as a function of water saturation for Stone's¹²⁹ first three phase oil relative permeability model as modified by Aziz and Settari¹³⁰. If the STONE1 and STONE2 keywords are not present in the input deck then the default three phase oil relative permeability model is employed. The SOMWAT and STONE1 keywords should only be used in three phase runs containing the oil, gas and water phases. The keyword is optional.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹²⁹ Stone, H. L. "Probability Model for Estimating Three-Phase Relative Permeability," paper SPE 2116, Journal of Canadian Petroleum Technology (1973) 22, No. 2, 214-218.

¹³⁰ Aziz, K. and Settari, A. Petroleum Reservoir Simulation, London, UK, Applied Science Publishers (1979), page 398.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.288 SORWMIS – MISCIBLE RESIDUAL OIL VERSUS WATER SATURATION FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SORWMIS defines the dependency between the miscible residual oil saturation and the water saturation, for when the MISCIBLE keyword in the RUNSPEC section has been activated. The keyword can only be used with the MISCIBLE option and for when the oil, water and gas phases are active in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SWAT	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the water saturation.			None
		dimensionless	dimensionless	dimensionless	
2	SORMIS	A columnar vector of real equal or increasing down the column values that are greater than or equal to zero and less than one, that define the corresponding miscible residual oil saturation for the corresponding water saturation SWAT.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTMISC tables as declared on the MISCIBLE keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSMISC rows as declared on the MISCIBLE keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.142: SORWMIS Keyword Description

Example

```
--
--      MISCIBLE RESIDUAL OIL VERSUS WATER SATURATION TABLE
--
SORWMIS
--      SWAT      SORWMIS
--      FRAC      FRAC
--      -----
--      0.0000    0.0000
--      0.2000    0.0000
--      1.0000    0.0000
--                               / TABLE NO. 01
--      SWAT      SORWMIS
--      FRAC      FRAC
--      -----
--      0.0000    0.0000
--      0.3000    0.1000
--      0.7500    0.1500
--                               / TABLE NO. 02
```

The above example defines two miscible residual oil versus water saturation tables assuming NTMISC equals two and NSMISC is greater than or equal to three on the MISCIBLE keyword in the RUNSPEC section.

8.3.289 SOWCR – END-POINT SCALING GRID CELL CRITICAL OIL SATURATION WITH RESPECT TO WATER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SOWCR defines the critical oil saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section. The critical oil saturation with respect to water is defined as the maximum oil saturation for which the oil relative permeability is zero in a two-phase oil-water relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SOWCR	SOWCR is an array of real numbers assigning the critical oil saturation with respect to water values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.30			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) Note this the directional independent version of the critical gas saturation used with the end-point scaling option. If directional end-point scaling has been activated then the SOWCRX± , SOWCRY± and SOWCRZ± series of keyword should be used.
- 2) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.
- 3) The keyword is terminated by a “/”.

Table 8.143: SOWCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SOWCRX, SOWCRY and SOWCRZ instead of SOWCR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SOWCRX-, SOWCRY-, SOWCRZ- and SOWCRZ-, instead of the SOWCR keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SOWCR DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SOWCR      300*0.200 /
```

The above example defines a constant critical oil saturation of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.290 SPECHEAT – DEFINE THE SPECIFIC HEAT OF OIL, WATER AND GAS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SPECHEAT defines the specific heat of the oil, water and gas phases for various PVT regions in the model for when the THERMAL option has been activated in the RUNSPEC section. The number of SPECHEAT vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the SPECHEAT data sets to different grid blocks in the model is done via the PVTNUM keyword in the REGION section.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TEMP	A columnar vector of real monotonically increasing down the column values that define the temperature for the corresponding oil, water and gas specific heat values.			None
		°F	°C	°C	
2	OILSHEAT	OILSHEAT is a columnar vector of positive real numbers defining the specific heat of oil at the corresponding temperature,TEMP.			None
		Btu/lb/°R	kJ/kg/K	J/gm/K	
3	WATSHEAT	WATSHEAT is a columnar vector of positive real numbers defining the specific heat of water at the corresponding temperature,TEMP.			None
		Btu/lb/°R	kJ/kg/K	J/gm/K	
4	GASSHEAT	GASHEAT is a columnar vector of positive real numbers defining the specific heat of gas at the corresponding temperature,TEMP.			None
		Btu/lb/°R	kJ/kg/K	J/gm/K	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.144: SPECHEAT Keyword Description

See also the SPECROCK keyword to define the reservoir rock specific heat.

Example

The example below defines three fluid phases specific heat versus temperature tables assuming NTPVT equals three and NPPVT is greater than or equal to two on the TABDIMS keyword in the RUNSPEC section.

```
--
-- SPECIFIC HEAT OF OIL, WATER AND GAS TABLE
--
SPECHEAT
-- TEMP SPECHEAT SPECHEAT SPECHEAT
-- OIL WATER GAS
-- -----
-- 0.000 0.5000 1.5000 0.5000
-- 250.000 0.5000 1.5000 0.5000 / TABLE NO. 01
-- TEMP SPECHEAT SPECHEAT SPECHEAT
-- OIL WATER GAS
-- -----
-- 0.000 0.5500 1.5000 0.5000
-- 260.000 0.5500 1.5000 0.5000 / TABLE NO. 02
-- TEMP SPECHEAT SPECHEAT SPECHEAT
-- OIL WATER GAS
-- -----
-- 0.000 0.5500 1.5500 0.5000
-- 270.000 0.6000 1.5500 0.5000 / TABLE NO. 03
```

There is no terminating "/" for this keyword.

8.3.291 SPECROCK – DEFINE THE SPECIFIC HEAT OF THE RESERVOIR ROCK

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SPECROCK defines the specific heat of the reservoir rock for various PVT regions in the model for when the THERMAL option has been activated in the RUNSPEC section. The number of SPECROCK vector data sets is defined by the NTSFUN parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the SPECROCK data sets to different grid blocks in the model is done via the SATNUM keyword in the REGION section.

This keyword can only be used if OPM's Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TEMP	A columnar vector of real monotonically increasing down the column values that define the temperature for the corresponding rock specific heat values.			None
		°F	°C	°C	
2	ROCKHEAT	ROCKHEAT is a columnar vector of positive real numbers defining the specific heat of the rock at the corresponding temperature,TEMP.			None
		Btu/ft³/°R	kJ/m³/K	J/cc/K	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.145: SPECROCK Keyword Description

See also the SPECHEAT keyword to define the specif heat relationships for the oil, water and gas phases.

Example

The example below defines three rock specific heat versus temperature tables assuming NTSFUN equals three and NSSFUN is greater than or equal to two on the TABDIMS keyword in the RUNSPEC section.

```
--
--          SPECIFIC HEAT OF ROCK
--
SPECROCK
--          TEMP          SPECHEAT
--                      ROCK
--          -----
--          0.000         20.000
--          250.000       20.000          / TABLE NO. 01
--          -----
--          0.000         21.000
--          260.000       21.000          / TABLE NO. 02
--          -----
--          0.000         23.000
--          270.000       23.000          / TABLE NO. 03
```

There is no terminating “/” for this keyword.

8.3.292 SSFN – SOLVENT AND GAS RELATIVE PERMEABILITY TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SSFN keyword defines the miscible normalized relative permeability tables for when the SOLVENT option has been activated in the RUNSPEC section using the respective keyword. The MISCIBLE keyword invokes a three component formulation (oil, water and solvent gas or an oil, water and solvent oil). Whereas, the SOLVENT keyword results in a four component model (oil, water and gas, plus a solvent). This keyword should only be used if the SOLVENT options have been activated.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SGAS	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the gas plus solvent saturation ration which is defined as either: $\frac{S_g}{(S_g + S_s)} \quad \text{or} \quad \frac{S_s}{(S_g + S_s)}$ Where Sg is the gas saturation and Ss is the solvent saturation.			None
		dimensionless	dimensionless	dimensionless	
2	KRG ^t	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the gas relative permeability. The resulting gas relative permeability is calculated from: $k_{rg} = k_{rgt}(S_g + S_s)k_{rg}^t$ where krg ^t is the data in this column and krgt is the gas relative permeability from the SGFN keyword..			None
		dimensionless	dimensionless	dimensionless	
3	KRS ^t	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the solvent relative permeability. The resulting solvent relative permeability is calculated from: $k_{rs} = k_{rgt}(S_g + S_s)k_{rs}^t$ where krs ^t is the data in this column and krgt is the gas relative permeability from the SGFN keyword..			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section. 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.146: SSFN Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      SOLVENT RELATIVE PERMEABILITY TABLES
--
SSFN
--      SGAS      KRGD      KRST
--      FRAC
--      -----
--      0.0000    0.0000    0.0000
--      1.0000    1.0000    1.0000      / TABLE NO. 01
--
--      -----
--      0.0000    0.0000    0.0000
--      0.2000    0.2000    0.3000
--      0.4000    0.3000    0.5000
--      0.6000    0.4000    0.7000
--      0.8000    0.5000    0.7500
--      1.0000    1.0000    1.0000      / TABLE NO. 02
```

The above example defines two SSFN tables for use with the MISCIBLE and SOLVENT options.

8.3.293 SSGCR – END-POINT SCALING GRID CELL SURFACTANT CRITICAL GAS SATURATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SSGCR defines the surfactant critical gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSALE keyword and the surfactant phase has been activated by the SURFACT keyword in the RUNSPEC section. The critical gas saturation is defined as the maximum gas saturation for which the gas relative permeability is zero in a two-phase relative permeability table. SSGCR is used to scale the surfactant oil relative permeability to gas data.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SSGCR	SSGCR is an array of real numbers assigning the surfactant critical gas saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.03			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

1)

If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.

2)

The keyword is terminated by a “/”.

Table 8.147: SSGCR Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SSWL, SSWCR, SSWU, SSGL, SSGCR, SSGU, SSOWCR, and SSOGR saturation grid arrays for the saturation end-points, and the SKRG, SKROG, SKROW and SKRW relative permeability grid cell arrays for the relative permeability end-point data.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SSGCR DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SSGCR
      300*0.050 /
```

The above example defines a constant surfactant critical oil saturation with respect to gas of 0.05 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.294 SSGL – END-POINT SCALING GRID CELL SURFACTANT CONNATE GAS SATURATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SSGL defines the surfactant connate gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword and the surfactant phase has been activated by the SURFACT keyword in the RUNSPEC section. The connate gas saturation is defined as the minimum gas saturation in a two-phase gas relative permeability table. SSGL is used to scale the surfactant oil and water relative permeability data.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SSGL	SSGL is an array of real numbers assigning the surfactant connate gas saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.03			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.
- 2) The keyword is terminated by a “/”.

Table 8.148: SSGL Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SSWL, SSWCR, SSWU, SSGL, SSGCR, SSGU, SSOWCR, and SSOGCR saturation grid arrays for the saturation end-points, and the SKRG, SKROG, SKROW and SKRW relative permeability grid cell arrays for the relative permeability end-point data.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SSGL DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SSGL
      300*0.030 /
```

The above example defines a constant surfactant connate gas saturation of 0.03 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.295 SSOGCR – END-POINT SCALING GRID CELL SURFACTANT CRITICAL OIL SATURATION WITH RESPECT TO GAS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SSOGCR defines the surfactant critical oil saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSKALE keyword and the surfactant phase has been activated by the SURFACT keyword in the RUNSPEC section. The critical oil saturation with respect to gas is defined as the maximum oil saturation for which the oil relative permeability is zero in a two-phase gas-oil relative permeability table. SSOGCR scales the surfactant oil relative permeability to gas data.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SSOGR	SSOGR is an array of real numbers assigning the surfactant critical oil saturation with respect to gas values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.30 dimensionless			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: 1) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table. 2) The keyword is terminated by a “/”.					

Table 8.149: SSOGCR Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SSWL, SSWCR, SSWU, SSGL, SSGCR, SSGU, SSOWCR, and SSOGCR saturation grid arrays for the saturation end-points, and the SKRG, SKROG, SKROW and SKRW relative permeability grid cell arrays for the relative permeability end-point data.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SSOGCR DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SSOGCR
      300*0.200 /
```

The above example defines a surfactant constant critical oil saturation with respect to gas of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.296 SSOWCR – END-POINT SCALING GRID CELL SURFACTANT CRITICAL OIL SATURATION WITH RESPECT TO WATER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SSOWCR defines the surfactant critical oil saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSKALE keyword and the surfactant phase has been activated by the SURFACT keyword in the RUNSPEC section. The critical oil saturation with respect to water is defined as the maximum oil saturation for which the oil relative permeability is zero in a two-phase oil-water relative permeability table. SSOWCR scales the surfactant oil relative permeability to water data.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SSOWCR	SSOWCR is an array of real numbers assigning the surfactant critical oil saturation with respect to water values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.30			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: 1) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table. 2) The keyword is terminated by a “/”.					

Table 8.150: SSOWCR Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SSWL, SSWCR, SSWU, SSGL, SSGCR, SSGU, SSOWCR, and SSOGR saturation grid arrays for the saturation end-points, and the SKRG, SKROG, SKROW and SKRW relative permeability grid cell arrays for the relative permeability end-point data.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SSOWCR DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SSOWCR
      300*0.200 /
```

The above example defines a constant critical oil saturation of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.297 SSWCR – END-POINT SCALING GRID CELL CRITICAL WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SSWCR defines the surfactant critical water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the **ENDSCALE** keyword and the surfactant phase has been activated by the **SURFACT** keyword in the **RUNSPEC** section. The critical water saturation is defined as the maximum water saturation for which the water relative permeability is zero in a two-phase relative permeability table. SSWCR scales the surfactant water relative permeability data.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SSWCR	SSWCR is an array of real numbers assigning the surfactant critical water saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.20			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.
- 2) The keyword is terminated by a “/”.

Table 8.151: SSWCR Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the **SSWL**, **SSWCR**, **SSWU**, **SSGL**, **SSGCR**, **SSGU**, **SSOWCR**, and **SSOGCR** saturation grid arrays for the saturation end-points, and the **SKRG**, **SKROG**, **SKROW** and **SKRW** relative permeability grid cell arrays for the relative permeability end-point data.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SSWCR DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SSWCR      300*0.200 /
```

The above example defines a constant surfactant critical water saturation of 0.20 to all 300 cells in the model as defined by the **DIMENS** keyword in the **RUNSPEC** section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.298 SSWL – END-POINT SCALING GRID CELL SURFACTANT CONNATE WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SSWL defines the surfactant connate water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSALE keyword and the surfactant phase has been activated by the SURFACT keyword in the RUNSPEC section. The connate water saturation is defined as the minimum water saturation in a two-phase water relative permeability table. SSWL scales the surfactant oil relative permeability to water and gas data.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SSWL	SSWL is an array of real numbers assigning the connate water saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used,for example 30*0.15			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

1) If the value for a cell has been defaulted then OPM Flow uses the value from the cell’s relative permeability table.

2) The keyword is terminated by a “/”.

Table 8.152: SSWL Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SSWL, SSWCR, SSWU, SSGL, SSGCR, SSGU, SSOWCR, and SSOGCR saturation grid arrays for the saturation end-points, and the SKRG, SKROG, SKROW and SKRW relative permeability grid cell arrays for the relative permeability end-point data.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SSWL DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SSWL
      300*0.150 /
```

The above example defines a constant surfactant connate water saturation of 0.15 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.299 SSWU – END-POINT SCALING GRID CELL SURFACTANT MAXIMUM WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SSWU defines the surfactant maximum water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword and the surfactant phase has been activated by the SURFACT keyword in the RUNSPEC section. The maximum water saturation is defined as the maximum water saturation in a two-phase water relative permeability table. SSWU scales the surfactant water relative permeability data.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SSWU	SSWU is an array of real numbers assigning the surfactant maximum water saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.70			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table.
- 2) The keyword is terminated by a “/”.

Table 8.153: SSWU Keyword Description

End-point scaling allows the entered surfactant relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SSWL, SSWCR, SSWU, SSGL, SSGCR, SSGU, SSOWCR, and SSOGCR saturation grid arrays for the saturation end-points, and the SKRG, SKROG, SKROW and SKRW relative permeability grid cell arrays for the relative permeability end-point data.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SSWU DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SSWU
      300*0.700 /
```

The above example defines a constant surfactant connate gas saturation of 0.70 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.300 STOG DEFINE CAPILLARY PRESSURE OIL-GAS SURFACE TENSION VERSUS PRESSURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The STOG keyword defines capillary pressure oil-gas surface tension versus pressure tables used in adjusting the pressure independent capillary pressure vectors in the SGFN, SGOF or SLGOF saturation tables, entered by their respective keywords in the PROPS section. The SATOPTS keyword in the RUNSPEC section should state the SURFTENS character string to activate the Capillary Pressure Surface Tension Pressure Dependency option. If the STOG keyword is not supplied then no capillary pressure surface tension pressure scaling will occur and the capillary pressure values on the SGFN, SGOF or SLGOF saturation tables will be used directly.

Capillary pressure surface tension pressure scaling can also be used with multi-segment wells, but this facility has not been incorporated in OPM Flow's multi-segment well implementation.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.301 STONE – ACTIVATE STONE'S SECOND THREE PHASE OIL RELATIVE PERMEABILITY MODEL (ALIAS FOR STONE2)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword is an alias for STONE2 keyword that activates Stone's¹³¹ second three phase oil relative permeability model as modified by Aziz and Settari¹³². If the STONE, STONE1 and STONE2 keywords are not present in the input deck then the default three phase oil relative permeability model is employed. The STONE keyword should only be used in three phase runs containing the oil, gas and water phases.

There is no data required for this keyword.

Example

```
--
--      ACTIVATE STONE'S SECOND THREE PHASE RELATIVE PERMEABILITY MODEL
--
STONE
```

The above example switches on the Modified Stone three phase relative permeability model.

¹³¹ Stone, H. L. "Estimation of Three-Phase Relative Permeability and Residual Oil Data," *Journal of Canadian Petroleum Technology* (1973) 12, No. 4, 53-61.

¹³² Aziz, K. and Settari, A. *Petroleum Reservoir Simulation*, London, UK, Applied Science Publishers (1979), page 398.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.302 STONE1 – ACTIVATE STONE’S FIRST THREE PHASE OIL RELATIVE PERMEABILITY MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates Stone’s¹³³ first three phase oil relative permeability model as modified by Aziz and Settari¹³⁴. If the STONE1 and STONE2 keywords are not present in the input deck then the default three phase oil relative permeability model is employed. The STONE1 keyword should only be used in three phase runs containing the oil, gas and water phases.

There is no data required for this keyword.

Example

```
--
--      ACTIVATE STONE’S FIRST THREE PHASE RELATIVE PERMEABILITY MODEL
--
STONE1
```

The above example switches on the Modified Stone three phase relative permeability model.

¹³³ Stone, H. L. “Probability Model for Estimating Three-Phase Relative Permeability,” paper SPE 2116, Journal of Canadian Petroleum Technology (1973) 22, No. 2, 214-218.

¹³⁴ Aziz, K. and Settari, A. Petroleum Reservoir Simulation, London, UK, Applied Science Publishers (1979), page 398.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.303 STONE1EX – DEFINE STONE’S FIRST THREE PHASE OIL RELATIVE PERMEABILITY PARAMETER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the exponent used in Stone’s¹³⁵ first three phase oil relative permeability model as modified by Aziz and Settari¹³⁶. The STONE1EX keyword should only be used in three phase runs containing the oil, gas and water phases and when the STONEI keyword in the SOLUTION section has been used to activate Stone’s first three phase oil relative permeability model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	STONEPAR I	A real positive value that defines the exponent to be used in the Modified Stone first three phase oil relative permeability model.			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) The keyword is followed by NTSFUN records as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each record must contain only one value and is terminated by a “/” 3) There is no “/” terminator for the keyword.					

Table 8.154: STONE1EX Keyword Description

If the STONE, STONEI and STONE2 keywords are not present in the input deck then the default three phase oil relative permeability model is employed.

Example

Given NTSFUN equals five on the TABDIMS keyword in the RUNSPEC section, then:

```
--
--      DEFINE STONE'S FIRST THREE PHASE RELATIVE PERMEABILITY MODEL PARAMETER
--
STONE1EX
      1.000          / SATURATION TABLE NO. 01
      1.000          / SATURATION TABLE NO. 02
      2.000          / SATURATION TABLE NO. 03
      1.000          / SATURATION TABLE NO. 04
      3.000          / SATURATION TABLE NO. 05
```

Defines the exponents to be used in the Modified Stone first three phase oil relative permeability model, for each of the five saturation tables.

¹³⁵ Stone, H. L. “Probability Model for Estimating Three-Phase Relative Permeability,” paper SPE 2116, Journal of Canadian Petroleum Technology (1973) 22, No. 2, 214-218.

¹³⁶ Aziz, K. and Settari, A. Petroleum Reservoir Simulation, London, UK, Applied Science Publishers (1979), page 398.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.304 STONE2 – ACTIVATE STONE’S SECOND THREE PHASE OIL RELATIVE PERMEABILITY MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates Stone’s¹³⁷ second three phase oil relative permeability model as modified by Aziz and Settari¹³⁸. If the STONE, STONE1 and STONE2 keywords are not present in the input deck then the default three phase oil relative permeability model is employed. The STONE2 keyword should only be used in three phase runs containing the oil, gas and water phases.

There is no data required for this keyword.

Example

```
--
--      ACTIVATE STONE’S SECOND THREE PHASE RELATIVE PERMEABILITY MODEL
--
STONE2
```

The above example switches on the Modified Stone three phase relative permeability model.

¹³⁷ Stone, H. L. “Estimation of Three-Phase Relative Permeability and Residual Oil Data,” *Journal of Canadian Petroleum Technology* (1973) 12, No. 4, 53-61.

¹³⁸ Aziz, K. and Settari, A. *Petroleum Reservoir Simulation*, London, UK, Applied Science Publishers (1979), page 398.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.305 STOW DEFINE CAPILLARY PRESSURE OIL-WATER SURFACE TENSION VERSUS PRESSURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The STOW keyword defines capillary pressure oil-water surface tension versus pressure tables used in adjusting the pressure independent capillary pressure vectors in the SWFN or SWOF saturation tables, entered by their respective keywords in the PROPS section. The SATOPTS keyword in the RUNSPEC section should state the SURFTENS character string to activate the Capillary Pressure Surface Tension Pressure Dependency option. If the STOW keyword is not supplied then no capillary pressure surface tension pressure scaling will occur and the capillary pressure values on the SWFN or SWOF saturation tables will be used directly.

Capillary pressure surface tension pressure scaling can also be used with multi-segment wells, but this facility has not been incorporated in OPM Flow's multi-segment well implementation.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.306 STWG DEFINE CAPILLARY PRESSURE WATER-GAS SURFACE TENSION VERSUS PRESSURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The STWG keyword defines capillary pressure water-gas surface tension versus pressure tables for use with multi-segment wells. This facility has not been incorporated in OPM Flow's multi-segment well implementation. Note that STWG is not required for Capillary Pressure Surface Tension Pressure Dependency option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.307 SURFADDW – DEFINED SURFACTANT ADSORBED CONCENTRATION VERSUS WETTABILITY FRACTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SURFADDW defines tables of surfactant adsorbed concentration versus wettability fraction for when the SURFACTW keyword in the RUNSPEC section as been declared to activate the surfactant phase with changing wettability. The tables consists of columnar vectors of adsorbed surfactant concentration versus a wettability fraction that indicates the fraction of phase wettability. Here, a wettability fraction of zero indicates a 100% water wet rock resulting in the SURFWNUM allocated saturation tables being used, and a value of one meaning 100% oil wet rock, with the SATNUM allocated saturations tables being employed. Both the SURFWNUM and SATNUM keywords are in the REGIONS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.308 SURFADS - DEFINE SURFACTANT ROCK ADSORPTION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	--------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SURFADS keyword defines the rock surfactant adsorption tables for when the surfactant option has been activated by the SURFACT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SURCON	A columnar vector of real monotonically increasing down the column values that defines the surfactant concentration in the solution surrounding the rock. The first entry should be zero to define a no surfactant concentration.			None
		lb/stb	kg/sm ³	gm/scc	
2	SURREATIO	A columnar vector of real increasing down the column values that defines the mass of adsorbed surfactant per unit mass of rock of the saturated concentration of surfactant adsorbed by the rock. The first entry should be zero to define a zero ratio of surfactant concentration.			None
		lb/lb	kg/kg	gm/gm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.155: SURFADS Keyword Description

See also the ADSORP keyword in the PROPS section that employs adsorption functions, as oppose to adsorption tables, to define rock surfactant adsorption behavior.

Example

```
--
--      SURFACTANT ROCK ADSORPTION TABLE
--
SURFADS
--      SURF      SURF
--      SURCON    SURRATIO
--      -----
--              0.0      0.00000
--              2.0      0.00003
--              4.0      0.00005
--              6.0      0.00007
--              8.0      0.00009
--             10.0      0.00011
--             12.0      0.00012
--             14.0      0.00015
--                                     / TABLE NO. 01
--      SURF      SURF
--      SURCON    SURRATIO
--      -----
--              0.0      0.00000
--              3.0      0.00004
--              5.0      0.00006
--              7.0      0.00008
--              8.0      0.00009
--             10.0      0.00011
--                                     / TABLE NO. 02
```

The above example defines two surfactant rock adsorption tables assuming NTSFUN equals two and NSSFUN is greater than or equal to eight on the TABDIMS keyword in the RUNSPEC section.

There is no terminating "/" for this keyword.

8.3.309 SURFCAPD – CAPILLARY NUMBER VERSUS MISCIBILITY TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SURFCAPD keyword defines the relationship between the log of the capillary number and the level of miscibility, for when the Surfactant option has been activated by the SURFACT keyword in the RUNSPEC section. A value of zero for the level of miscibility means fully immiscible conditions and consequently a value of one implies fully miscible conditions.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.310 SURFESAL – DEFINE SURFACTANT EFFECTIVE SALINITY COEFFICIENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, SURFESAL, defines the surfactant effective salinity coefficient as well as enabling the effective salinity calculation for surfactant adsorption. The keyword should only be used if the BRINE keyword has been declared to activate the brine phase, the ECLMC keyword to enable the Multi-Component Brine model, and the SURFACT keyword has been used to activate the surfact phase. All three keywords are in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.311 SURFROCK - DEFINE SURFACTANT-ROCK PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SURFROCK keyword defines rock properties for when the Surfactant option has been activated by the SURFACTANT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	ADINDX	A positive integer of 1 or 2 that defines the surfactant desorption option. <div>1) then surfactant desorption may occur by retracing the surfactant adsorption isotherm when the local surfactant concentration in the solution decreases. 2) then no surfactant desorption may occur.</div>			Defined
		dimensionless I	dimensionless I	dimensionless I	
2	DENSITY	A real value that defines the rock in-situ density, that is at reservoir conditions.			None
		lb/rtb	kg/rm³	gm/rcc	
Notes: 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section, for each surfactant flooding region. There should be only one row per table. 2) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.156: SURFROCK Keyword Description

Example

```
--
--      SURFACTANT-ROCK PROPERTIES
--
SURFROCK
--      DESORP      INSITU
--      OPTN        DENSITY
--      -----
--      1           1800.0           / TABLE NO. 01
--      2           1980.0           / TABLE NO. 02
--      1           2005.0           / TABLE NO. 03
```

The above example defines three surfactant-rock tables, based on the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section being equal to three.

There is no terminating "/" for this keyword.

8.3.312 SURFST - SURFACTANT WATER-OIL SURFACE TENSION VERSUS SURFACTANT CONCENTRATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SURFST keyword defines surfactant water-oil surface tension versus surfactant concentration in the water phase tables, used in adjusting the pressure independent capillary pressure vectors in the SWFN or SWOF saturation tables, entered by their respective keywords in the PROPS section. SURFST is also used to adjust the relative permeability curves on the aforementioned tables via the capillary number. The Surfactant option must have been activated by the SURFACTANT keyword in the RUNSPEC section to use this keyword and either this keyword or the SURFSTES keyword, also in the PROPS section, is obligatory in this case.

See also the SURFSTES that defines the surfactant water-oil surface tension as a function of surfactant concentration in the water phase and salt concentration or the effective salinity.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.313 SURFSTES - SURFACTANT WATER-OIL SURFACE TENSION VERSUS SURFACTANT AND SALT CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SURFSTES keyword defines surfactant water-oil surface tension versus surfactant concentration in the water phase tables, used in adjusting the pressure independent capillary pressure vectors in the SWFN or SWOF saturation tables, entered by their respective keywords in the PROPS section. SURFSTES is also used to adjust the relative permeability curves on the aforementioned tables via the capillary number. The Surfactant option must have been activated by the SURFACTANT keyword in the RUNSPEC section to use this keyword and either this keyword or the SURFST keyword, also in the PROPS section, is obligatory in this case. In addition, the BRINE keyword in the RUNSPEC section must be activated and the ESSNODE keyword in the PROPS section must be used to define the salt concentration or the effective salinity.

See also the SURFSTS that defines the surfactant water-oil surface tension as a function of surfactant concentration in the water phase only.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.314 SURFVISC – SURFACTANT SOLUTION VISCOSITY VERSUS CONCENTRATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SURFVISC defines the surfactant viscosity relationship of solution water viscosity with respect to increasing surfactant concentration within a grid block. The surfactant option must be activated by the SURFACT keyword in the RUNSPEC section in order to use this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SURFCON	A columnar vector of real monotonically increasing down the column values that defines the surfactant concentration in the solution surrounding the rock. The first entry should be zero to define a no surfactant concentration.			None
		lb/stb	kg/sm ³	gm/scc	
2	SURFVISC	A columnar vector of real positive values that defines the solution water viscosity of the solution for the given SURFCON entry at the reference pressure value, PRES, entered on the PVTW keyword in the PROPS section.			None
		cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.157: SURFVISC Keyword Description

Example

```
--
--      SURFACTANT SOLUTION WATER VISCOSITY TABLES
--
SURFVISC
--      SURF      VISCOSITY
--      SURFCON   SURFVISC
--      -----
--      0.0000    0.3500
--      0.0100    0.3900
--      0.0200    0.4200
--      0.0300    0.4300
--
-- / TABLE NO. 01
```


--	SURF	VISCOSITY
--	SURFCON	VISFAC
--	-----	-----
	0.0000	1.000
	0.0003	10.000
	0.0005	20.000
	0.0007	40.000
	0.0009	45.000
	0.0011	55.000
		/ TABLE NO. 02

The example defines two surfactant viscosity scaling factor tables, based on the NTPVT variable on the TABDIMS keyword in the RUNSPEC section being equal to two and NPPVT variable on the same keyword being greater than or equal to six.

8.3.315 SWATINIT – DEFINE THE INITIAL WATER SATURATION ARRAY FOR CAPILLARY PRESSURE SCALING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SWATINIT defines the initial water saturation for all the cells in the model via an array. The keyword can be used with all grid types. SWATINIT is used to initialize the model by setting each grid block's initial water saturation ("Sw"). If the array is present in the input deck, then OPM Flow will re-scale the water-oil capillary pressure curves entered via the SWFN saturation functions in the PROPS section, so that the resulting initialized Sw matches the values in the SWATINIT array.

Normally the SWATINIT array is generated in the static earth model when calculating the hydrocarbons in-place volumes using Saturation Height Functions ("SHF") derived from capillary pressure functions. Static earth models do not directly use capillary pressure in these type of calculations as individual cell pressures are not required. There is therefore some potential for inconsistencies to arise between the two sets of formulations. This is normally manifested by extreme scaling in the scaled capillary pressure values calculated by the simulator. If this is the case then the PPCMAX keyword can be used to set a maximum scaled capillary pressure value. Note that as large values of scaled capillary pressures can result in numerical issues, a more technically sound approach would be to resolve these inconsistencies before continuing with the model build.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SWATINIT	SWATINIT is an array of real positive numbers that are greater than or equal to zero and less than or equal to one, that define the initial water saturation values to each cell in the model. Repeat counts may be used, for example 3000*0.15			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 8.158: SWATINIT Keyword Description

See also the PPCMAX to control the re-scaling of the capillary pressure entries on the SWFN saturation function keyword in the PROPS section.

Example

```
--
--      DEFINE GRID BLOCK INITIAL SW DATA FOR ALL CELLS
--      (BASED ON NX x NY x NZ = 300)
--
SWATINIT
      300*0.300 /
```

The above example defines a constant initial water saturation of 0.300 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.316 SWCR – END-POINT SCALING GRID CELL CRITICAL WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SWCR defines the critical water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSALE keyword in the RUNSPEC section. The critical water saturation is defined as the maximum water saturation for which the water relative permeability is zero in a two-phase relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SWCR	SWCR is an array of real numbers assigning the critical water saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.20			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: 1) Note this the directional independent version of the critical water saturation used with the end-point scaling option. If directional end-point scaling has been activated then the SWCRX± , SWCRX± and SWCRX± series of keyword should be used. 2) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table. 3) The keyword is terminated by a “/”.					

Table 8.159: SWCR Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWCRX, SWCRY and SWCRZ instead of SWCR. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWCRX-, SWCRY-, SWCRZ- and SWCRZ-, instead of the SWCR keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SWCR DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SWCR      300*0.200 /
```

The above example defines a constant critical water saturation of 0.20 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.317 SWF32D – WATER SATURATION TABLES WITH RESPECT TO OIL AND GAS (THREE PHASE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SWF32D keyword defines the three phase water relative permeability versus oil and gas saturation tables for when oil, gas and water are present in the input deck. The keyword should only be used if oil, gas and water are present in the input deck. Normally the simulator calculates the three-phase oil relative permeabilities based on the entered two phase tables of water-oil and gas-oil, combined with the STONE1 and STONE2 keywords in the PROPS section that determine the method used to generate the three phase water relative permeability curves. SWF32D allows for the direct input of the three phase tables, as such the STONE1 and STONE2 keywords should not be entered if SWF32D is used in the input deck.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.318 SWFN – WATER SATURATION TABLES (FORMAT TYPE 2)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SWFN keyword defines the water relative permeability and water-oil capillary pressure data versus water saturation tables for when water is present in the input deck. This keyword should only be used if water is present in the run.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SWAT	A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the water saturation.			None
		dimensionless	dimensionless	dimensionless	
2	KRW	A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the water relative permeability with respect to gas saturation. The first value in the column should be zero.			None
		dimensionless	dimensionless	dimensionless	
3	PCWO	A columnar vector of real values that are either equal or increasing down the column that defines the water-oil relative capillary pressure. If the SWATINIT keyword has been used to initialize the model then columnar vector has to be strictly monotonically increasing.			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.160: SWFN Keyword Description

Example

```
--
--      WATER RELATIVE PERMEABILITY TABLES (SWFN)
--
SWFN
--      SWAT      KRW      PCOW
--      FRAC      FRAC      PSIA
--      -----
--      0.15      0.00000      1*
--      0.20      6.25e-6      1*
--      0.25      0.00010      1*
--      0.30      0.00050      1*
--      0.35      0.00160      1*
--      0.40      0.00390      1*
--      0.45      0.00810      1*
--      0.50      0.01500      1*
--      0.55      0.02560      1*
--      0.60      0.04100      1*
--      0.65      0.06250      1*
--      0.70      0.09150      1*
--      0.75      0.12960      1*
--      0.80      0.17850      1*
--      0.85      0.24010      1*
--      0.90      0.31640      1*
--      0.95      0.40960      1*
--      1.00      0.52200      1*
--
--
--      0.15      0.00000      1*
--      0.20      6.25e-6      1*
--      0.25      0.00010      1*
--      0.30      0.00050      1*
--      0.35      0.00160      1*
--      0.40      0.00390      1*
--      0.45      0.00810      1*
--      0.50      0.01500      1*
--      0.55      0.02560      1*
--      0.60      0.04100      1*
--      0.65      0.06250      1*
--      0.70      0.09150      1*
--      0.75      0.12960      1*
--      0.80      0.17850      1*
--      0.85      0.24010      1*
--      0.90      0.31640      1*
--      0.95      0.40960      1*
--      1.00      0.52200      1*
```

/ TABLE NO. 1

/ TABLE NO. 2

The example defines two SWFN tables for use when water is present in the run. In the tables the water-oil capillary pressure data has been defaulted with "1*" and will be set to zero as there are no other values for the water-oil capillary pressure columns.

8.3.319 SWL – END-POINT SCALING GRID CELL CONNATE WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SWL defines the connate water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSALE keyword in the RUNSPEC section. The connate water saturation is defined as the minimum water saturation in a two-phase water relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SWL	SWL is an array of real numbers assigning the connate water saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.15			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: 1) Note this the directional independent version of the connate gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the SWLX± , SWLY± and SWZ± series of keyword should be used. 2) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table. 3) The keyword is terminated by a “/”.					

Table 8.161: SWL Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWLX, SWLY and SWLZ instead of SWL. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWLX-, SWLY-, SWLZ- and SWLZ-, instead of the SWL keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SWL DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SWL      300*0.150      /
```

The above example defines a constant connate water saturation of 0.15 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.320 SWLPC – END-POINT SCALING GRID CELL CAPILLARY PRESSURE CONNATE WATER SATURATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SWLPC defines the connate water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSCALE keyword in the RUNSPEC section. The connate water saturation is defined as the minimum water saturation in a two-phase water relative permeability table. The keyword only applies the scaling to the drainage capillary pressures tables, unlike the SWL keyword that applies the scaling to both the capillary pressure and relative permeability tables. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SWLPC	<p>SWLPC is an array of real numbers assigning the connate water saturation values to each cell in the model. The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword.</p> <p>If SWLPC is omitted from the input deck the values will be defaulted to those on the SWL series of keywords. If the SWL series of keywords are missing from the input deck then the values are taken from the cell allocated capillary pressure table.</p> <p>Repeat counts may be used, for example 30*0.03</p>			Taken from SGL or from the cell allocated capillary pressure table.
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) Note this the directional independent version of the connate gas saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the SWLX± , SWLY± and SWZ± series of keyword should be used.
- 2) The keyword is terminated by a “/”.

Table 8.162: SWLPC Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWLX, SWLY and SWLZ instead of SWL or SWLPC. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWLX-, SWLY-, SWLZ- and SWLZ-, instead of the SWL or SWLPC keywords.

Missing Some Functionality - Use with Caution.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--  
--      DEFINE GRID BLOCK END-POINT SWLPC DATA FOR ALL CELLS  
--      (FOR NX x NY x NZ = 300)  
--  
SWLPC      300*0.150      /
```

The above example defines a constant connate water saturation of 0.15 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

8.3.321 SWOF – WATER-OIL SATURATION TABLES (FORMAT TYPE 1)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SWOF keyword defines the water and oil relative permeability and water-oil capillary pressure data versus water saturation tables for when water and oil are present in the input deck. This keyword should only be used if water and oil present in the run.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SWAT	<p>A columnar vector of real monotonically increasing down the column values starting from zero and terminating at one, that defines the water saturation.</p> <p>The first entry is the connate water saturation S_{wc} and the last entry should be 1.0.</p>			None
		dimensionless	dimensionless	dimensionless	
2	KRW	<p>A columnar vector of real values that are either equal or increasing down the column and that are greater than or equal to zero and less than or equal to one that defines the water relative permeability with respect to gas saturation.</p> <p>The first value in the column should be zero.</p>			None
		dimensionless	dimensionless	dimensionless	
3	KRO	<p>A columnar vector of real values that are either equal or decreasing down the column and that are greater than or equal to zero and less than or equal to one that defines the oil relative permeability with respect to oil and water saturation.</p> <p>When gas is active in the run, the first entry the column, that is at $k_{row}(S_o = 1 - S_{wc})$, must be the same as the first entry in the corresponding SGOF or SLGOF table, that is at $k_{rog}(S_g = 0)$.</p> <p>The first value in the column should be one.</p>			None
		dimensionless	dimensionless	dimensionless	
4	PCWO	<p>A columnar vector of real values that are either equal or increasing down the column that defines the water-oil relative capillary pressure.</p> <p>If the SWATINIT keyword has been used to initialize the model then columnar vector has to be strictly monotonically increasing.</p>			None
		psia	bars	atm	

Notes:

- 1) The keyword is followed by NTSFUN tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NSSFUN rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a "/" and there is no " terminator for the keyword.

Table 8.163: SWOF Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Example

```
--
--      WATER-OIL RELATIVE PERMEABILITY TABLES (SWOF)
--
SWOF
--      SWAT      KRW      KROW      PCOW
--      FRAC
--      -----
--      0.200000    0.0000    0.9000    0.000000
--      0.238616    0.0002    0.7664    0.000000
--      0.245309    0.0004    0.7443    0.000000
--      0.261989    0.0010    0.6907    0.000000
--      0.303091    0.0044    0.5671    0.000000
--      0.368269    0.0191    0.3962    0.000000
--      0.435026    0.0519    0.2528    0.000000
--      0.486387    0.0940    0.1643    0.000000
--      0.522283    0.1339    0.1137    0.000000
--      0.550683    0.1725    0.0803    0.000000
--      0.575342    0.2115    0.0559    0.000000
--      0.599076    0.2542    0.0367    0.000000
--      0.621294    0.2991    0.0223    0.000000
--      0.642171    0.3458    0.0120    0.000000
--      0.658984    0.3868    0.0061    0.000000
--      0.671123    0.4183    0.0030    0.000000
--      0.679268    0.4403    0.0015    0.000000
--      0.684963    0.4562    0.0008    0.000000
--      0.688893    0.4674    0.0004    0.000000
--      0.692025    0.4765    0.0002    0.000000
--      0.694641    0.4841    0.0001    0.000000
--      0.696976    0.4910    0.0000    0.000000
--      0.699099    0.4973    0.0000    0.000000
--      0.700000    0.5000    0.0000    0.000000
--      1.000000    0.9000    0.0000    0.000000
--
--
--      0.200000    0.0000    0.9000    0.000000
--      0.238616    0.0002    0.7664    0.000000
--      0.245309    0.0004    0.7443    0.000000
--      0.261989    0.0010    0.6907    0.000000
--      0.303091    0.0044    0.5671    0.000000
--      0.368269    0.0191    0.3962    0.000000
--      0.435026    0.0519    0.2528    0.000000
--      0.486387    0.0940    0.1643    0.000000
--      0.522283    0.1339    0.1137    0.000000
--      0.550683    0.1725    0.0803    0.000000
--      0.575342    0.2115    0.0559    0.000000
--      0.599076    0.2542    0.0367    0.000000
--      0.621294    0.2991    0.0223    0.000000
--      0.642171    0.3458    0.0120    0.000000
--      0.658984    0.3868    0.0061    0.000000
--      0.671123    0.4183    0.0030    0.000000
--      0.679268    0.4403    0.0015    0.000000
--      0.684963    0.4562    0.0008    0.000000
--      0.688893    0.4674    0.0004    0.000000
--      0.692025    0.4765    0.0002    0.000000
--      0.694641    0.4841    0.0001    0.000000
--      0.696976    0.4910    0.0000    0.000000
--      0.699099    0.4973    0.0000    0.000000
--      0.700000    0.5000    0.0000    0.000000
--      1.000000    0.9000    0.0000    0.000000
--
--
--      / TABLE NO. 01--
--
--
--      / TABLE NO. 01
```

The example defines two SWFN tables for use when water and oil are present in the run. In the tables the water-oil capillary pressure data has been set to zero.

8.3.322 SWU – END-POINT SCALING GRID CELL MAXIMUM WATER SATURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

SWU defines the maximum water saturation for all the cells in the model via an array when the end-point scaling option has been invoked via the ENDSALE keyword in the RUNSPEC section. The maximum water saturation is defined as the maximum water saturation in a two-phase water relative permeability table.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	SWU	SWU is an array of real numbers assigning the maximum water saturation values to each cell in the model.The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword. Repeat counts may be used, for example 30*0.70			Taken from cell allocated relative permeability table.
		dimensionless	dimensionless	dimensionless	
Notes: 1) Note this the directional independent version of the maximum water saturation array used with the end-point scaling option. If directional end-point scaling has been activated then the SWUX± , SWUY± and SWUZ± series of keyword should be used. 2) If the value for a cell has been defaulted then OPM Flow uses the value from the cell's relative permeability table. 3) The keyword is terminated by a “/”.					

Table 8.164: SWU Keyword Description

End-point scaling allows the entered relative permeability functions to be re-scaled based on the saturation end-points allocated to each cell by the SWL, SWCR, SWU, SGL, SGCR, SGU, SOWCR, and SOGCR saturation grid arrays for the saturation end-points, and the KRG, KROG, KROW and KRW relative permeability grid cell arrays for the relative permeability end-point data. In addition end-point scaling may be directional dependent in which case the directional dependent versions of the aforementioned arrays should be used, that is SWUX, SWUY and SWUZ instead of SWU. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is SWUX-, SWUY-, SWUZ- and SWUZ-, instead of the SWU keyword.

Example

```
--
--      DEFINE GRID BLOCK END-POINT SWU DATA FOR ALL CELLS
--      (FOR NX x NY x NZ = 300)
--
SWU
      300*0.700 /
```

The above example defines a constant connate gas saturation of 0.70 to all 300 cells in the model as defined by the DIMENS keyword in the RUNSPEC section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.323 TEMPNODE - TEMPERATURE TABLE FOR POLYMER SOLUTION VISCOSITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the reservoir temperature table used to calculate the polymer solution viscosity when the temperature option has been activated by the TEMP keyword in the RUNSPEC section in the commercial simulator. Naturally, the polymer option must also be activated by the POLYMER keyword in the RUNSPEC section in order to use this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.324 TEMPTVD – ACTIVATE TEMPERATURE FLUX LIMITED TRANSPORT OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

TEMPTVD activates the Temperature Flux Limited Transport option in the commercial simulator, to reduce numerical dispersion for when either the TEMP or THERMAL keywords in the RUNSPEC section have been declared.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.325 TLMIXPAR – DEFINE THE MISCIBLE TODD-LONGSTAFF MIXING PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TLMIXPAR keyword defines the Todd-Longstaff¹³⁹ mixing parameters, for when either the miscible or solvent options have been activated by the MISCIBLE or SOLVENT keyword in the RUNSPEC section. This keyword must be present in the input deck if the MISCIBLE or SOLVENT keywords have been activated.

Note that If the POLYMER option has been activated by the POLYMER keyword in the RUNSPEC section, then this keyword is ignored and the mixing parameters are taken from the PLMIXPAR keyword instead.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TLMVIS	A real positive value that is greater than or equal to zero and less than or equal to one, that defines the viscosity Todd-Longstaff mixing parameter for each miscibility region.			None
		dimensionless	dimensionless	dimensionless	
2	TLMDEN	A real positive value that is greater than or equal to zero and less than or equal to one, that defines the density Todd-Longstaff mixing parameter for each miscibility region.			The same value as entered for TLMVIS
		dimensionless	dimensionless	dimensionless	
Notes: 1) The keyword is followed by NTMISC tables as declared on the MISCIBLE keyword in the RUNSPEC section, for each rock region. There should be only one row per table. 2) Each entry is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.165: TLMIXPAR Keyword Description

Example

```
--
--      TODD-LONGSTAFF MIXING PARAMETERS
--
TLMIXPAR
--      TLM      TLM
--      VISCOS   DENSITY
--      -----
--      0.3500   0.3500           / TABLE NO. 01
--      0.2500   1*              / TABLE NO. 02
--      0.6500   0.7500           / TABLE NO. 03
```

The above example defines three Todd-Longstaff mixing parameter data sets, based on the NTMISC variable on the MISCIBLE keyword in the RUNSPEC section being equal to three.

¹³⁹ Todd, M. and Longstaff, W. "The Development, Testing and Application of a Numerical Simulator for Predicting Miscible Flood Performance," paper SPE 3484, Journal of Canadian Petroleum Technology (1972) 24, No. 7, 874-882.

8.3.326 TOLCRIT – DEFINE THE CRITICAL SATURATION TOLERANCE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	------------------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

Critical fluid saturations are determined from the relative permeability tables, that is the last saturation in a relative permeability table where the relative permeability of a phase is set equal to zero. Since floating-point numbers (as implemented in computers) are never exact, one cannot compare floating point numbers for exact equality. Thus, this keyword defines a value below which is considered equivalent to zero in determining the critical saturation for a phase.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TOLCRIT	TOLCRIT is a real positive number greater than zero and less than one that defines the critical saturation tolerance used to determine the critical saturation of a fluid in the relative permeability tables. The default value of 1×10^{-6} means that saturation values less than this value will be treated as being equal to zero.			1×10^{-6}
		dimensionless	dimensionless	dimensionless	
Notes: I) The keyword is terminated by a “/”.					

Table 8.166: TOLCRIT Keyword Description

See also section [8.2.2 Saturation Tables \(Relative Permeability and Capillary Pressure Tables\)](#) for a description of the relative permeability tables and the various end-point definitions, including oil, water and gas critical saturations.

Example

```

---
--      SET THE CRITICAL SATURATION TOLERANCE
--
TOLCRIT
      1.0E-6
      /
  
```

The above example defines the critical saturation tolerance to be the default value of 1×10^{-6} .

8.3.327 TPAMEPS – VOLUMETRIC STRAIN VERSUS COAL GAS CONCENTRATION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

TPAMEPS defines the volumetric strain versus coal gas concentration tables, for when the Coal Bed Methane option has been activated via the COAL keyword, and PALM-MAN has been declared for the ROCKOPT variable on the ROCKCOMP keyword; both keywords are in the RUNSPEC section. The Palmer-Mansoori¹⁴⁰ and ¹⁴¹ rock model is used to calculate the impact on pore volume and permeability due to rock compaction.

See also the ROCKPARMA keyword in the PROPS section that defines the Palmer-Mansoori parameters.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁴⁰ Palmer, I. and Mansoori, J. "How Permeability Depends on Stress and Pore Pressure in Coalbeds: A New Model," paper SPE 52607, SPE Reservoir Evaluation & Engineering (1998) 1, No. 6, 539-544.

¹⁴¹ Clarkson, C.R., Pan, Z., Palmer, I. and Harpalani, S. "Predicting Sorption-Induced Strain and Permeability Increase With Depletion for Coalbed-Methane Reservoirs", SPE 114778-PA, SPE Journal (2010) 15, No. 1, 152–159.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.328 TPAMEPSS - VOLUMETRIC STRAIN VERSUS COAL SOLVENT CONCENTRATION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

TPAMEPSS defines the volumetric strain versus coal solvent concentration tables, for when the Coal Bed Methane option has been activated via the COAL keyword, and PALM-MAN has been declared for the ROCKOPT variable on the ROCKCOMP keyword; both keywords are in the RUNSPEC section. The Palmer-Mansoori¹⁴² and ¹⁴³ rock model is used to calculate the impact on pore volume and permeability due to rock compaction.

See also the ROCKPARMA keyword in the PROPS section that defines the Palmer-Mansoori parameters.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁴² Palmer, I. and Mansoori, J. "How Permeability Depends on Stress and Pore Pressure in Coalbeds: A New Model," paper SPE 52607, SPE Reservoir Evaluation & Engineering (1998) 1, No. 6, 539-544.

¹⁴³ Clarkson, C.R., Pan, Z., Palmer, I. and Harpalani, S. "Predicting Sorption-Induced Strain and Permeability Increase With Depletion for Coalbed-Methane Reservoirs", SPE 114778-PA, SPE Journal (2010) 15, No. 1, 152–159.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.329 TRACER – DEFINE PASSIVE TRACER VARIABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TRACER keyword defines a series of passive tracers that are associated with a phase (oil, water, or gas) in the model. The maximum number of tracers for each phase are declared on the TRACERS keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	NAME	A three letter character string defining the tracer's name. NAME is used by the TNUM keyword in the REGIONS section, and unlike other keywords, the TNUM keyword itself must be concatenated with the phase and the name of the tracer defined by NAME. Similarly for the TVDP keyword in the SOLUTION section, where the TVDP keyword itself must be concatenated with the either letter F (for free) or S (for solution), followed by the name of the tracer defined by NAME. Note it is best to void names beginning with the letters F,S, and T as these names may create naming issues in post-processing software.			None
2	PHASE	A three letter character string that defines the tracer given by NAME to a particular fluid phase.The character should be set to OIL,WAT or GAS.			None
3	UNITS	The units for the tracer.This can be any unit but should be consistent with values entered via the TBLK and TVDP keywords in the SOLUTION section. The default values are the same as the PHASE in the model.			Same as the phases in the model
		Liquid: stb Gas: Mscf	Liquid: sm ³ Gas: sm ³	Liquid: scc Gas: scc	
4	SOLPHASE	A three or four letter character string defining the partitioned tracer's solution phase.The character string should be set to OIL, WAT, GAS or MULT. Note that SOLPHASE only needs to be defined if the partitioned tracer option has been activate with the PARTTRAC keyword in the RUNSPEC section.			None
5	KPNUM	The table number to be used with the partitioned tracers defined by the PARTTRAC,TRACERKP and TRACERKM keywords. Note that KPNUM only needs to be defined if the partitioned tracer option has been activate with the PARTTRAC keyword in the RUNSPEC section.			None
6	ADSPHASE	A three letter character string defining the phase used for the adsorption calculation for when the MULT option has been for SOLPHASE. The character string should be set to OIL,WAT, GAS or ALL. Note that ADSPHASE only needs to be defined if the partitioned tracer option has been activate with the PARTTRAC keyword in the RUNSPEC section.			None
Notes: 1) Each record (or row) should be terminated by a “/” and the keyword is terminated by a “/”.					

Table 8.167: TRACER Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

See also the TNUM keyword in the REGION section that defines tracer regions, and the TVDP keyword in the SOLUTION section that sets the initial tracer saturation for all the cells as a function of depth.

Example

```
--
--      DEFINE TRACER NAMES
--
--      TRACER      TRACER
--      NAME        PHASE
--      -----
TRACER
      'IGS'         'GAS'           / GAS INJECTOR
      'DGS'         'GAS'           / DISOLVED GAS
      'IW1'         'WAT'           / WAT INJECTOR 1
      'IW2'         'WAT'           / WAT INJECTOR 2
/
```

The above example defines four passive tracers one for a gas injection well, one for tracking the dissolved gas, and two to track the injected water from two water injection wells.

8.3.330 TRACERKM – MULTI-PARTITIONED TRACER OPTION K(P) TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, TRACERKM, defines the Multi-Partitioned Tracer option K(P) tables, for when the Partitioned Tracer option has been activate with the PARTTRAC keyword in the RUNSPEC section, and the SOLPHASE parameter on the TRACER keyword in the PROPS section has been set to MULT to activate the Multi-Partitioned Tracer option. Multi-partitioned tracers can partition into any number of phases (oil, water, gas etc.) and have adsorption, decay and diffusion parameters specific to each phase; whereas the standard partitioned tracers only have a “free” and “solution” phases. For the TRACERKM keyword the K(P) tables relate the ratio of the reference phase to the other phases versus pressure. So for example, given a multi-partitioned tracer in oil, water and gas, with the water phase acting as the reference phase, then TRACERKM would consist of columnar vectors of:

$$K_{ow}(P) = \frac{C_{oil}}{C_{water}} \quad \text{and} \quad K_{gw}(P) = \frac{C_{gas}}{C_{water}} \quad (8.27)$$

Where:

- $K_{ow}(P)$ = multi-partitioned oil-water K(P)
- $K_{gw}(P)$ = multi-partitioned gas-water K(P)
- C_{oil} = oil concentration
- C_{gas} = gas concentration
- C_{water} = water concentration

See also the TRACERKP keyword in the PROPS section that provides similar data for standard partitioned tracers.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.331 TRACERKP – STANDARD PARTITIONED TRACER OPTION K(P) TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, TRACERKP, defines the Standard Partitioned Tracer option K(P) tables, for when the Partitioned Tracer option has been activate with the PARTTRAC keyword in the RUNSPEC section. Standard partitioned tracers only have a “free” and “solution” phases; whereas, Multi-partitioned tracers can partition into any number of phases (oil, water, gas etc.) and have adsorption, decay and diffusion parameters specific to each phase. For the TRACERKP keyword the K(P) tables relate the ratio of the reference phase (the “free” phase) to the solution phase versus pressure. So for example, given a standard partitioned tracer in oil and gas, with the oil phase acting as the reference phase, then TRACERKP would consist of columnar vectors of:

$$K(P) = \frac{C_{gas}}{C_{oil}} \quad (8.28)$$

Where:

K(P) = standard partitioned K(P)
 C_{oil} = oil concentration
 C_{gas} = gas concentration

See also the TRACERKM keyword in the PROPS section that provides similar data for tmulti-partitioned tracers.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.332 TRACITVD – ACTIVATE AND DEFINE TRACER IMPLICIT FLUX LIMITED TRANSPORT OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

TRACITVD activates the Tracer Implicit Flux Limited Transport option and sets various parameters for this option. Basically the option is used to control numerical dispersion for tracers. Both the TRACERS keyword in the RUNSPEC section and the TRACER keyword in the PROPS section must be declared to activate tracers and to define the tracers.

See also the TRACTVD keyword in the PROPS section activates the Tracer Explicit Flux Limited Transport option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.333 TRACTVD – ACTIVATE TRACER EXPLICIT FLUX LIMITED TRANSPORT OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

TRACTVD activates the Tracer Explicit Flux Limited Transport option. Basically the option is used to control numerical dispersion for tracers. Both the TRACERS keyword in the RUNSPEC section and the TRACER keyword in the PROPS section must be declared to activate tracers and to define the tracers.

See also the TRACITVD keyword in the PROPS section activates the Tracer Implicit Flux Limited Transport option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.334 TRADS – ENVIRONMENTAL TRACER ADSORPTION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, TRADS, specifies the environmental tracer adsorption tables that describe how a tracer is absorbed by the surrounding rock, for when the MXENVTR parameter has been set to greater than zero on the TRACERS keyword in the RUNSPEC section to activate environmental tracers. The keyword can only be used with environmental tracers.

Unlike other keywords, the TRADS keyword must be concatenated with the three character name of the tracer declared by TRACER keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.335 TRDCY – ENVIRONMENTAL TRACER DECAY TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, TRDCY, specifies the environmental tracer decay tables that specifies the tracer decay half-life, for when the MXENVTR parameter has been set to greater than zero on the TRACERS keyword in the RUNSPEC section to activate environmental tracers. The keyword can only be used with environmental tracers.

Unlike other keywords, the TRDCY keyword must be concatenated with the three character name of the tracer declared by TRACER keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.336 TRDIF – TRACER DIFFUSION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, TRDIF, specifies the tracer diffusion tables that specify the diffusion coefficient for a tracer. The keyword can be used with Environmental Tracers if the MXENVTR parameter has been set greater than zero on the TRACERS keyword in the RUNSPEC section. When used with a Standard Partitioned Tracer the diffusion coefficient applies to the solution phase, whereas as for a Multi-Partitioned Tracer the diffusion coefficient can be entered for each defined tracer phase. Unlike other keywords, the TRADS keyword must be concatenated with the three character name of the tracer declared by TRACER keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.337 TRDIS – TRACER DISPERSION TABLE NUMBER ALLOCATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, TRDIS, specifies the tracer diffusion tables that should be allocated to a tracer; the actual dispersion tables are specified by the DISPERSE keyword in the PROPS section. The keyword can be used with Environmental Tracers if the MXENVTR parameter has been set greater than zero on the TRACERS keyword in the RUNSPEC section. The option does not work with two-phase Standard Partitioned Tracers and Multi-Partitioned Tracers. Unlike other keywords, the TRADS keyword must be concatenated with the three character name of the tracer declared by TRACER keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.338 TRNHD – ACTIVATE DISPERSION Non-HOMOGENEOUS DIFFUSION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The TRNHD keyword activates the Dispersion Non-Homogeneous Diffusion option for when tracer dispersion is independent of velocity or tracer concentration. Unlike other keywords, the TRNHD keyword must be concatenated with the name of the tracer declared by TRACER keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.339 TRROCK – ENVIRONMENTAL TRACER-ROCK PROPERTY DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, TRROCK, specifies the environmental tracer rock data for the tracer adsorption model, for when the MXENVTR parameter has been set to greater than zero on the TRACERS keyword in the RUNSPEC section to activate environmental tracers. The keyword can only be used with environmental tracers.

This keyword is ignored by OPM Flow and has no effect on the simulation.

8.3.340 TZONE – END-POINT SCALING TRANSITION ZONE OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TZONE keyword sets the transition end-point scaling options for the oil, water and gas phases, for when the End-Point Scaling option has been activated by the ENDSCALE keyword in the RUNSPEC section. The keyword determines if the phase critical saturation should or should not be set to the initial immobile saturation in areas where the initial saturation is below the entered critical saturation.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
1	OILZONE	OILZONE is a single character that sets the oil phase transition zone end-point scaling option and should be set to either T or F: 1) T: for true, results in the SOWCR values being adjusted to the initial immobile saturation for oil-water or oil-water-miscible gas simulations. For oil-gas simulations the SOGCR values are modified to be the initial immobile saturation. The modifications only occur in cells where the initial saturation is below the entered critical saturation. 2) F: for false, means the critical saturations are not modified.	F
2	WATZONE	WATZONE is a single character that sets the water phase transition zone end-point scaling option and should be set to either T or F: 1) T: for true, results in the SWCR values being adjusted to the initial immobile saturations. The modifications only occur in cells where the initial saturation is below the entered critical saturation values (SWCR). 2) F: for false, means the critical saturations are not modified.	F
3	GASZONE	GASZONE is a single character that sets the gas phase transition zone end-point scaling option and should be set to either T or F: 1) T: for true, results in the SGCR values being adjusted to the initial immobile saturation for oil-gas or gas-water simulations. The modifications only occur in cells where the initial saturation is below the entered critical saturation (SGCR). 2) F: for false, means the critical saturations are not modified.	F
Notes: 1) The keyword is terminated by a "/".			

Table 8.168: TZONE Keyword Description

See also the SCALECRS keyword in the PROPS section that sets the end-point scaling option to be either two-point or three-point scaling.

Example

```
--
--      END-POINT SCALING TRANSITION ZONE OPTIONS
--
--      OILZONE  WATZONE  GASZONE
--      -----  -----  -----
TZONE      F          T          F                      / SCALING OPTION
```

The above example results in the SWCR values being adjusted to the initial immobile saturations.

8.3.341 VDFLOW – VELOCITY DEPENDENT FLOW COEFFICIENT FOR GRID BLOCK FLOW (GRID)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

VDFLOW activates non-Darcy flow between grid blocks and defines a constant non-Darcy flow coefficient for the whole grid, the coefficient only applies to the gas phase. The coefficient is normally derived from well tests or calculated analytically based on the coefficient of inertial resistance, usually known as β , in Forchheimer's flow equation¹⁴⁴, ¹⁴⁵ and ¹⁴⁶. Dake¹⁴⁷, in chapter eight, reports a typical value of β to be 10.0^7 cm^{-1} .

See also the VDFLOWR keyword in the PROPS section that allows the non-Darcy coefficient to be entered for individual regions, and the WDFAC and WDFACCOR keywords in the SCHEDULE section that assigns the non-Darcy coefficient to well connections.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁴⁴ Geertsma, J., 1974. Estimating the Coefficient of Inertial Resistance in Fluid Flow Through Porous Media. Soc.Pet.Eng.J., October: 445-450.

¹⁴⁵ Gewers, C.W.W. and Nichol, L.R., 1969. Gas Turbulence Factor in a Microvugular Carbonate. J.Can.Pet.Tech., April.

¹⁴⁶ Wong, S.W., 1970. Effects of Liquid Saturation on Turbulence Factors for Gas Liquid Systems. J.Can.Pet.Tech., October

¹⁴⁷ Dake, L.P. Fundamentals of Reservoir Engineering, Amsterdam, The Netherlands, Elsevier Science BV (1978) Chapter 8.6, pages 252-257.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.342 VDFLOWR – VELOCITY DEPENDENT FLOW COEFFICIENT FOR GRID BLOCK FLOW (REGION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

VDFLOW activates non-Darcy flow between grid blocks and defines a constant non-Darcy flow coefficient for individual regions allocated by the SATNUM keyword in the REGIONS section. Note that the coefficient only applies to the gas phase. The coefficient is normally derived from well tests or calculated analytically based on the coefficient of inertial resistance, usually known as β , in Forchheimer's flow equation¹⁴⁸ ¹⁴⁹ and ¹⁵⁰. Dake¹⁵¹, in chapter eight, reports a typical value of β to be 10.0^7 cm^{-1} .

See also the VDFLOW keyword in the PROPS section that allows the non-Darcy coefficient to be entered for the whole grid, and the WDFAC and WDFACCOR keywords in the SCHEDULE section that assigns the non-Darcy coefficient to well connections.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁴⁸ Geertsma, J., 1974. Estimating the Coefficient of Inertial Resistance in Fluid Flow Through Porous Media. Soc.Pet.Eng.J., October: 445-450.

¹⁴⁹ Gewers, C.W.W. and Nichol, L.R., 1969. Gas Turbulence Factor in a Microvugular Carbonate. J.Can.Pet.Tech., April.

¹⁵⁰ Wong, S.W., 1970. Effects of Liquid Saturation on Turbulence Factors for Gas Liquid Systems. J.Can.Pet.Tech., October

¹⁵¹ Dake, L.P. Fundamentals of Reservoir Engineering, Amsterdam, The Netherlands, Elsevier Science BV (1978) Chapter 8.6, pages 252-257.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.343 VEFrac – VERTICAL EQUILIBRIUM RELATIVE PERMEABILITY FRACTION (Grid)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the Vertical Equilibrium (“VE”) relative permeability weighting factor (α) used to calculate the VE relative permeability curves to be used in the simulation, for when the VE option has been activated by the VE keyword in the RUNSPEC section. If $\alpha = 1.0$, then the VE model calculated relative permeability curves will be used, and if $\alpha = 0.0$, then the curves entered via the SWOF, SGOF, SLGOF series of keywords or the SWFN, SGFN, SGWFN, SOF2, SOF3, SOF32D series of keywords, will be used. A value of α between zero and one will result in weighted average relative permeability curves being employed, that is:

$$VE_{(average)} = (1.0 - \alpha) \times (SATNUM_{curves}) + \alpha \times (VE Model_{curves}) \quad (8.29)$$

Note that VEFrac sets α for the whole grid; whereas, the VEFracV keyword in the PROPS section assigns α on a cell by cell basis, See also the VEFracP and VEFracPV keywords that apply the weighting factors to the capillary pressure data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.344 VEFACP – VERTICAL EQUILIBRIUM CAPILLARY PRESSURE FRACTION (GRID)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the Vertical Equilibrium (“VE”) capillary pressure weighting factor (α) used to calculate the VE capillary pressure curves to be used in the simulation, for when the VE option has been activated by the VE keyword in the RUNSPEC section. If $\alpha = 1.0$, then the VE model calculated capillary pressure curves will be used, and if $\alpha = 0.0$, then the curves entered via the SWOF, SGOF, SLGOF series of keywords or the SWFN, SGFN, SGWFN, SOF2, SOF3, SOF32D series of keywords, will be used. A value of α between zero and one will result in weighted average capillary pressure curves being employed, that is:

$$VE_{(average)} = (1.0 - \alpha) \times (SATNUM_{curves}) + \alpha \times (VE Model_{curves}) \quad (8.30)$$

Note that VEFACP sets α for the whole grid; whereas, the VEFACPV keyword in the PROPS section assigns α on a cell by cell basis, See also the VEFAC and VEFACV keywords that apply the weighting factors to the relative permeability data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.345 VEFRACPV – VERTICAL EQUILIBRIUM CAPILLARY PRESSURE FRACTION (CELL)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the Vertical Equilibrium (“VE”) capillary pressure weighting factor (α) used to calculate the VE capillary pressure curves to be used in the simulation, for when the VE option has been activated by the VE keyword in the RUNSPEC section. If $\alpha = 1.0$, then the VE model calculated capillary pressure curves will be used, and if $\alpha = 0.0$, then the curves entered via the SWOF, SGOF, SLGOF series of keywords or the SWFN, SGFN, SGWFN, SOF2, SOF3, SOF32D series of keywords, will be used. A value of α between zero and one will result in weighted average capillary pressure curves being employed, that is:

$$VE_{(average)} = (1.0 - \alpha) \times (SATNUM_{curves}) + \alpha \times (VE Model_{curves}) \quad (8.31)$$

Note that VEFRACPV sets α on a cell by cell basis; whereas, the VEFRACP keyword in the PROPS section assigns α for the whole grid. See also the VEFRA and VEFRAV keywords that apply the weighting factors to the relative permeability data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.346 VEFRAVCV – VERTICAL EQUILIBRIUM RELATIVE PERMEABILITY FRACTION (CELL)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the Vertical Equilibrium (“VE”) relative permeability weighting factor (α) used to calculate the VE relative permeability curves to be used in the simulation, for when the VE option has been activated by the VE keyword in the RUNSPEC section. If $\alpha = 1.0$, then the VE model calculated relative permeability curves will be used, and if $\alpha = 0.0$, then the curves entered via the SWOF, SGOF, SLGOF series of keywords or the SWFN, SGFN, SGWFN, SOF2, SOF3, SOF32D series of keywords, will be used. A value of α between zero and one will result in weighted average relative permeability curves being employed, that is:

$$VE_{(average)} = (1.0 - \alpha) \times (SATNUM_{curves}) + \alpha \times (VE Model_{curves}) \quad (8.32)$$

Note that VEFRAVCV sets α on a cell by cell basis; whereas, the VEFRA keyword in the PROPS section assigns α for the whole grid. See also the VEFRA and VEFRAV keywords that apply the weighting factors to the capillary pressure data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

8.3.347 VISCREF - DEFINE VISCOSITY-TEMPERATURE REFERENCE CONDITIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

VISCREF defines the reference conditions for the viscosity-temperature tables, GASVISCT, OILVISCT and WATVISCT, for when the thermal option has been activated by THERMAL keyword in the RUNSPEC section. This keyword can only be used if the thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	PRES	PRES is a real positive number defining the reference pressure for the viscosity and temperature tables			None
		psia	barsa	atma	
2	RS	RS is a real positive number defining the reference gas-oil ratio for when the model contains gas dissolved as activated by the DISGAS keyword in the RUNSPEC section			None
		Mscf/stb	sm ³ /sm ³	scc/scc	
3	API	API is a real number defining the oil API for when the API tracking option has been invoked by the API keyword in the RUNSPEC section. Note that OPM Flow does not support API tracking, and therefore this variable is ignored.			None
		°API	°API	°API	

Notes:

1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.

2) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 8.169: VISCREF Keyword Description

OPM Flow currently does not support API tracking and therefore item (3) of this keyword is ignored. See also the OILVISCT, GASVISCT and WATVISCT keywords in the PROPS section.

Example

The following example shows the VISCREF keyword for when the thermal option has been activated by the TEMP keyword in the RUNSPEC section and for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to five.

```
--
--      REF      REF      REF
--      PRESSURE  GOR      API
--      -----  -
VISCREF
      3000.0      0.500      / TABLE NO. 01
      3200.0      0.550      / TABLE NO. 02
      3300.0      0.580      / TABLE NO. 03
      3400.0      0.620      / TABLE NO. 04
      3500.0      0.625      / TABLE NO. 05
```

There is no terminating "/" for this keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.348 WAGHYSTR – DEFINE WATER-ALTERNATING-GAS HYSTERESIS PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the parameters for the Water-Alternating-Gas (“WAG”) hysteresis option, for when the hysteresis option has been activated by the WAGHYSTR variable on the SATOPTS keyword in the RUNSPEC section.

The WAG recovery mechanism is an Enhanced Oil Recovery (“EOR”) process to optimize oil recovery by improving volumetric sweep efficiency. It was originally proposed as a method to improve the sweep efficiency of gas by using water to control the mobility ratio and to stabilize the front (Caudle and Dyes, 1958¹⁵²; Christensen et al., 1998¹⁵³; and Christensen et al., 2001¹⁵⁴). WAG injection can lead to improved oil recovery by combining better mobility control and contacting upswept zones, and by leading to improved microscopic displacement. Although initially the inject gas was immiscible with respect to the oil (WAG Immiscible) the more common process is WAG Miscible, with alternating different types of hydrocarbon gases and non-hydrocarbon gases, such as N₂ and CO₂ Gases. WAG flooding has been successfully applied to various fields worldwide.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁵² Caudle, B. H., & Dyes, A. B. (1958, January 1). Improving Miscible Displacement by Gas-Water Injection. Society of Petroleum Engineers.

¹⁵³ Christensen, J. R., Stenby, E. H., & Skauge, A. (1998, January 1). Review of WAG Field Experience. Society of Petroleum Engineers. doi:10.2118/39883-MS.

¹⁵⁴ Christensen, J. R., Stenby, E. H., & Skauge, A. (2001, April 1). Review of WAG Field Experience. Society of Petroleum Engineers. doi:10.2118/71203-PA.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.349 WARN – ACTIVATE WARNING MESSAGES

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

See [WARN – Activate Warning Messages](#) in the GLOBAL section for a full description.

8.3.350 WATDENT – DEFINE WATER DENSITY TEMPERATURE COEFFICIENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

WATDENT defines the water density as a function of temperature coefficients for when the thermal option has been activated by the THERMAL keyword in the RUNSPEC. The reference pressure for this table is given by the VISCREF keyword in the PROPS section.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TEMP	TEMP is a real positive value greater than zero that defines the absolute reference temperature used with TEXPI and TEXP2 to estimate the change in water density with respect to temperature.			Defined
		°R 527.67	°K 293.15	°K 293.15	
2	TEXPI	TEXPI is a real positive value greater than zero that defines the water thermal expansion coefficient of the first order.			Defined
		1/°R 1.67×10^{-4}	1/°K 3.0×10^{-4}	1/°K 3.0×10^{-4}	
3	TEXP2	TEXP2 is a real positive value greater than zero that defines the water thermal expansion coefficient of the second order.			Defined
		1/°R ² 9.26×10^{-7}	1/°K ² 3.0×10^{-6}	1/°K ² 3.0×10^{-6}	
Notes: 1) The keyword is followed by NTPVT records as declared on the TABDIMS keyword in the RUNSPEC section. 2) Each data set is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 8.170: WATDENT Keyword Description

Example

The following example shows the WATDENT keyword using the default values, for when the thermal option has been activated by the THERMAL keyword in the RUNSPEC section and for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to two.

```
--
--      WATER DENSITY TEMPERATURE COEFFICIENTS (OPM FLOW EXTENSION KEYWORD)
--
--      WATER      DENSITY      DENSITY
--      TEMP      COEFF1      COEFF2
--      -----
WATDENT
      1*          1*          1*          / TABLE NO. 01
      1*          1*          1*          / TABLE NO. 02
```

There is no terminating "/" for this keyword.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

8.3.351 WATVISCT – DEFINE WATER VISCOSITY VERSUS TEMPERATURE FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

WATVISCT defines the water viscosity as a function of temperature for when thermal option has been activated by the THERMAL keywords in the RUNSPEC. The reference pressure for this table is given by the VISCREF keyword in the PROPS section.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TEMP	A columnar vector of real monotonically increasing down the column values that defines the temperature values.			None
		°F	°C	°C	
2	VIS	A columnar vector of real decreasing down the column values that defines the water viscosity for the corresponding temperature values (TEMP). VIS should be given at the reference pressure defined by the PRESS variable on the VISCREF keyword.			None
		cP	cP	cP	

Notes:

- 1) The keyword is followed by NTPVT tables as declared on the TABDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NPPVT rows as declared on the TABDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a "/" and there is no "/" terminator for the keyword.

Table 8.171: WATVISCT Keyword Description

Example

The following example shows the WATVISCT keyword for when the thermal option has been activated by the THERMAL keyword in the RUNSPEC section and for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set equal to one.

```
--
--      WATER VISCOSITY VERSUS TEMPERATURE TABLES
--
--      WATER      WATER
--      TEMP      VISC
--      -----
WATVISCT
      100.0      0.625
      110.0      0.620
      120.0      0.580
      150.0      0.550
      165.0      0.500
                                     / TABLE NO. 01
```

There is no terminating "/" for this keyword.

CHAPTER 9: REGIONS SECTION

9.1 INTRODUCTION

The REGIONS section defines how various properties in the PROPS and SOLUTION sections are allocated to individual cells within the model, as well as defining various fluid in-place reporting regions. This is accomplished by assigning an integer value to each cell that represents the data set of the property to be assigned to the grid block.

9.2 DATA REQUIREMENTS

OPM Flow, like most numerical modeling software, uses a default value of one for the various region arrays and thus if there is only one PVT data set for example, then there is no need to define the region array associated with allocating the PVT tables (via the PVTNUM keyword in the REGIONS section), as all cells will be allocated PVT table number one. However, if there are more than one PVT table entered in the PROPS section and PVTNUM is not defined in the model, then PVT tables greater than one will not be used and there will be no warning message indicting the fact.

Table 9.1 summarizes the various property region data and their associated keywords.

No.	REGIONS Keyword	Standard Property Regions	Property Section
1	EQLNUM	<i>EQLNUM – Define the Equilibration Region Numbers.</i> Equilibrium region allocation based on the EQUIL keyword in the SOLUTION section.	SOLUTION
2	FIPNUM	<i>FIPNUM – Define the Fluid In-Place Region Numbers.</i> Fluid In-Place reporting via the FIPNUM array that divides the model into different fluid in-place reporting regions.	REGION
3	PVTNUM	<i>PVTNUM – Define the PVT Regions.</i> PVT table allocation of the DENSITY, PVDG, PVDO, PVTG, PVTO, PVCO, PVTW and ROCK tables	PROPS
4	SATNUM	<i>SATNUM – Define the Saturation Table Region Numbers.</i> Saturation (relative permeability) table allocation of the SGFN, SWFN, SOF2, SOF3, SGOF, and SWOF tables. This array is for the standard drainage, as oppose to the imbibition curves, used in all models. There are separate region arrays for alternative relative permeability curves.	PROPS
Function Specific Regions			
5	ENDNUM	<i>ENDNUM – Define the End-Point Scaling Depth Region Numbers.</i> ENPTVD and ENKRVD versus depth table allocation for when ENDSALE option has been activated in the RUNSPEC section.	PROPS
6	FIP	<i>FIP – Define the Fluid In-Place Names and Region and Numbers.</i> Fluid In-Place reporting via the FIP array that divides the model into different fluid in-place reporting regions.	REGION
7	FIPOWG	<i>FIPOWG – Activate Oil, Gas, and Water FIP Zone Reporting.</i> Fluid In-Place reporting for the total oil, gas and water in the model. There is no region property array for this keyword, as the simulator calculates the total phase volumes based on the contacts entered via the EQUIL keyword in the SOLUTION section.	REGION
8	HBNUM	<i>HBNUM – Define Herschel-Bulkley Region Numbers.</i> Herschel-Bulkley rheological property table region numbers.	PROPS
9	HWSNUM	<i>HWSNUM – Define the Saturation Table Region Numbers (High Salinity and Water Wet).</i> High salinity water wet saturation table allocation using the high salinity water wet saturation SWFN and SOFN tables. This is an alias for the SURFNUM property region which is also not supported by OPM Flow.	PROPS

No.	REGIONS Keyword	Standard Property Regions	Property Section
10	IBNUM	<i>IBNUM – Define the Imbibition Saturation Table Region Numbers.</i> Imbibition saturation table allocation of the SWFN, SOF2, SOF3 or SWOF imbibition tables.	PROPS
11	IMBNUMMF	<i>IMBNUMMF – Define the Imbibition Saturation Table Region Numbers (Matrix-Fracture).</i> Imbibition saturation tables region numbers for flow between the matrix and fracture blocks, for when the Hysteresis option has been activated in Dual Porosity or Dual Permeability runs.	PROPS
12	KRNUM	<i>KRNUM – Define the Directional Saturation Table Region Numbers.</i> Direction dependent saturation tables region numbers for when Directional Dependent Saturation Function option has been activated by the DIRECT parameter on the SATOPTS	PROPS
13	KRNUMMF	<i>KRNUMMF – Define the Saturation Table Region Numbers (Matrix-Fracture).</i> Drainage saturation tables region numbers for flow between the matrix and fracture blocks in a Dual Porosity or Dual Permeability model.	PROPS
14	LSLTWNUM	<i>LSLTWNUM – Define the Low Salt Water Wet Saturation Table Region Numbers.</i> Low salt water wet saturation tables region numbers for when the Low Salinity option for the Brine model and the Surfactant Wettability option have been activated for the model.	PROPS
15	LSNUM	<i>LSNUM – Define the Low Salt Oil Wet Saturation Table Region Numbers.</i> Low salt oil wet saturation tables region numbers for the Low Salinity Brine model.	PROPS
16	LWSLTNUM	<i>LWSLTNUM – Define the Low Salt Oil Wet Saturation Table Region Numbers.</i> Low salt oil wet saturation table region numbers for the Low Salinity Brine model.	PROPS
17	LWSNUM	<i>LWSNUM – Define the Low Salt Water Wet Saturation Table Region Numbers.</i> Low salt water wet saturation table region numbers for when the Low Salinity option for the Brine model and the Surfactant Wettability option have been activated for the model.	PROPS
18	MISNUM	<i>MISNUM – Define the Miscibility Region Numbers.</i> Miscible regions based on the TLMIXPAR records when the MISCIBLE or SOLVENT keywords have been activated in the RUNSPEC section.	PROPS
19	OPERNUM	<i>OPERNUM – Define Regions for Mathematical Operations on Arrays.</i> OPERATER keyword region numbers that can also be used with the EQUALREG, ADDREG, COPYREG, MULTIREG, MULTREGP and MULTREGT keywords, as well as the OPERATER keyword in calculating various grid properties in the GRID and REGION section.	GRID EDIT PROPS REGION SOLUTION
20	PENUM	<i>PENUM – Define the Petro-Elastic Region Numbers.</i> Petro-elastic region numbers for petro-elastic coefficients, bulk modulus functions and shear modulus functions.	PROPS
21	PLMIXNUM	<i>PLMIXNUM – Define the Polymer Region Numbers.</i> Polymer region numbers for the mixing tables, and the maximum polymer and salt concentrations for the Polymer option.	PROPS
22	RESIDNUM	<i>RESIDNUM – Define Vertical Equilibrium Residual Flow Region Numbers.</i> Vertical Equilibrium residual flow calculation saturation tables or when region numbers for the Vertical Equilibrium option.	PROPS

No.	REGIONS Keyword	Standard Property Regions	Property Section
23	ROCKNUM	<i>ROCKNUM – Define Rock Compaction Table Region Numbers.</i> Rock compaction table allocation for when the ROCKCOMP keyword has been activated in the RUNSPEC section, that allocates the ROCKTAB series of tables to a cell.	PROPS
24	SURFNUM	<i>SURFNUM – Define the Surfactant Miscible Saturation Table Region Numbers.</i> Surfactant saturation (relative permeability) tables allocation allocating the SWFN, SOF2, SOF3 or SWOFF as miscible tables.	PROPS
25	SURFNUM	<i>SURFNUM – Define the Saturation Table Region Numbers (High Salinity and Water Wet).</i> High salinity water wet saturation table allocation using the high salinity water wet saturation SWFN and SOFN tables.	PROPS
26	TNUM	<i>TNUM – Define Passive Tracer Concentration Regions.</i> Partitioned Tracer option region numbers for this option.	PROPS
27	TRKPF	<i>TRKPF – Define Partitioned Tracer Regions.</i> Defines the regions associated with partition tracers and the partitioning tables allocated to grid blocks for when the Partitioned Tracer option has been enabled by the PARTTRAC keyword in the RUNSPEC section.	PROPS
28	WH2NUM	<i>WH2NUM – Define WAG Hysteresis Saturation Table Region Numbers (Two Phase).</i> Two phase Water-Alternating-Gas (“WAG”) hysteresis saturation table region numbers for when the hysteresis option has been activated by the WAGHYSTR variable on the SATOPTS keyword in the RUNSPEC.	PROPS
29	WH3NUM	<i>WH3NUM – Define WAG Hysteresis Saturation Table Region Numbers (Three Phase).</i> Three phase WAG hysteresis saturation table region numbers for when the hysteresis option has been activated by the WAGHYSTR variable on the SATOPTS keyword in the RUNSPEC.	PROPS
Notes: <ol style="list-style-type: none"> Note that not all keywords and features listed above are implemented in OPM Flow. Cells not colored in the No. column indicate the keyword is supported or partially supported by OPM Flow, cells colored gray indicate that the keyword is not applicable and will be ignored by the simulator; and finally, cells colored in orange indicate keywords that are not supported by OPM Flow and will be ignored by the simulator. Note that is common to set the FIPNUM array to be equal to the EQLNUM to have fluid in-place reporting for each equilibrium region, this can be done by using the COPY keyword to copy the EQLNUM array to the FIPNUM array. 			

Table 9.1: REGION Section Allocation Array Summary

Note

Earth modeling software may export the region arrays to be loaded into the simulator with values starting from zero instead of one. This may result in an error message if these cells are active in the model, if the cells are inactive then the zero values will be ignored by the simulator.

The allocation is based on a complete property data set, that is all the property data associated with a given data set is allocated to the cell. For example, if the fluid properties for the model are the same, (for example, PVTO and PVDG keyword data) but the rock compressibility is varying with depth resulting in, say three different ROCK keyword records, then there has to be three complete data sets in order to allocate the three ROCK records. This would mean that the PVTO and PVDG keywords, in this instance, would have to be repeated three times to match the three ROCK keyword records.

Example SATNUM and EQUIL arrays from the Volve¹⁵⁵ field are displayed in Figure 9.1 and Figure 9.2, respectively.

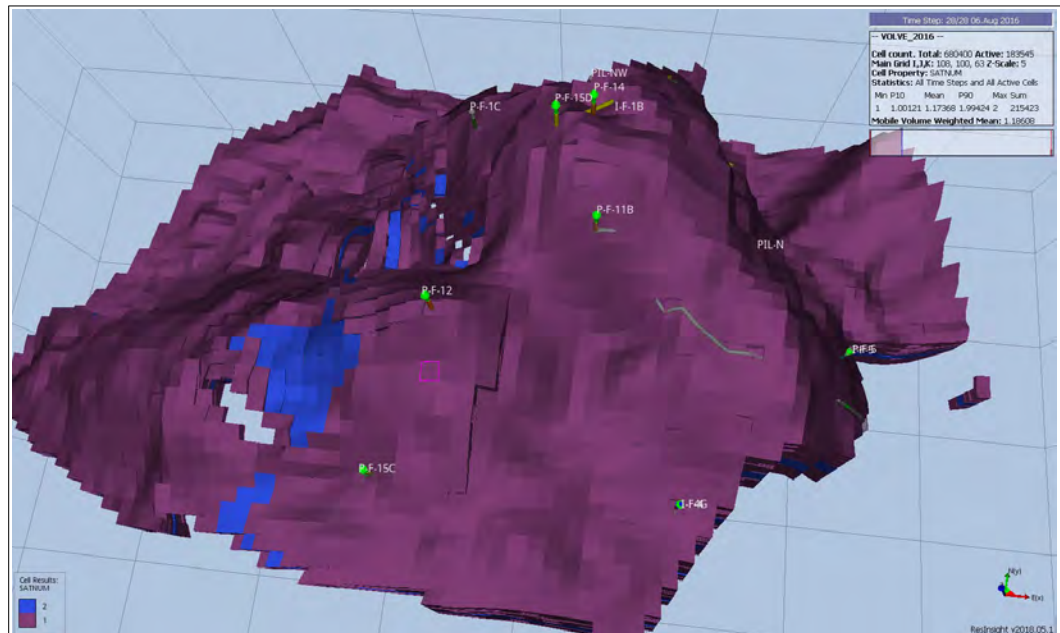


Figure 9.1:Volve Full Field Model SATNUM Array

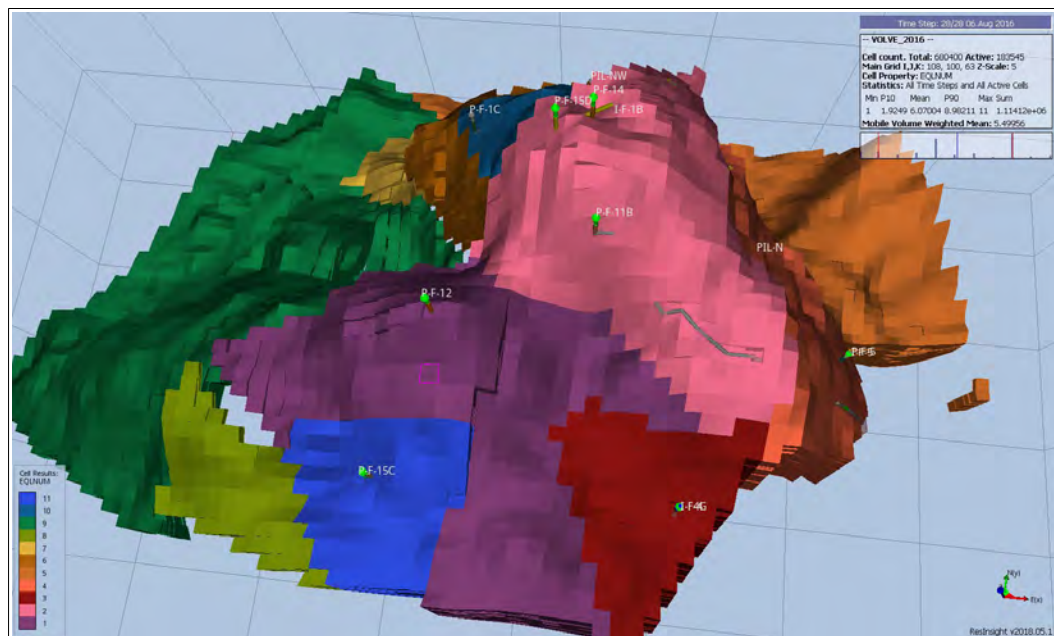


Figure 9.2:Volve Full Field Model EQUIL Array

¹⁵⁵ The Volve Data was approved for data sharing in 2018 by the initiative of the last Operating company, Equinor and approved by the license partners ExxonMobil E&P Norway AS and Bayerngas Norge AS in the end of 2017.

9.3 KEYWORD DEFINITIONS

9.3.1 ADD – ADD A CONSTANT TO A SPECIFIED ARRAY

The ADD keyword adds a constant to a specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the ADD keyword is being applied.

See [ADD – Add a Constant to a Specified Array](#) in the GRID section for a full description.

9.3.2 ADDREG – ADD A CONSTANT TO AN ARRAY BASED ON A REGION NUMBER

The ADDREG keyword adds a constant to a specified array or part of an array based on cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the ADDREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the ADDREG keyword is being used.

See [ADDREG – Add a Constant to an Array based on a Region Number](#) in the GRID section for a full description.

9.3.3 BOUNDARY – DEFINE A BOUNDARY BOX FOR PRINTING

The BOUNDARY keyword defines a rectangular grid for printing various arrays to the output print file (*.PRT); thus, avoiding printing all the elements in the selected array.

See [BOUNDARY – Define a Boundary Box for Printing](#) in the GRID section for a full description.

9.3.4 BOX - DEFINE A RANGE OF GRID BLOCKS TO ENTER PROPERTY DATA

BOX defines a range of grid blocks for which subsequent data is assigned for all the cells in the defined BOX. Note that the BOX grid is reset by the keyword ENDBOX by resetting the current defined BOX to be the whole grid. The keyword can be used for any array and for all grid types.

See [BOX - Define a Range of Grid Blocks to Enter Property Data](#) in the GRID section for a full description.

9.3.5 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

See [COLUMNS – Define Input File Column Margins](#) in the GLOBAL section for a full description.

9.3.6 COPY – COPY ARRAY DATA TO ANOTHER ARRAY

The COPY keyword copies an array (or part of an array) to another array or part of an array. The arrays can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the COPY keyword is being used.

See [COPY – Copy Array Data to Another Array](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

9.3.7 COPYBOX – COPY ARRAY DATA DEFINED BY A BOX

The COPYBOX keyword copies an array (or part of an array) to part of the same array. The array can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the COPYBOX keyword is being used.

See [COPYBOX – Copy Array Data Defined by a Box](#) in the GRID section for a full description.

9.3.8 COPYREG – COPY AN ARRAY TO ANOTHER ARRAY BASED ON A REGION NUMBER

The COPYREG keyword copies a specified array or part of an array based on cells with a specific region number to another array. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the COPYREG keyword is read by the simulator. The property arrays can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the COPYREG keyword is being used.

See [COPYREG – Copy an Array to Another Array based on a Region Number](#) in the GRID section for a full description.

9.3.9 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See [DEBUG – Define the Debug Data to be Printed to File](#) in the GLOBAL section for a full description.

9.3.10 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

See [ECHO – Activate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

9.3.11 END – DEFINE THE END OF THE INPUT FILE

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

See [END – Define the End of the Input File](#) in the GLOBAL section for a full description.

9.3.12 ENDBOX – DEFINE THE END OF THE BOX DEFINED GRID

This keyword marks the end of a previously defined BOX sub-grid as defined by a previously entered BOX keyword. The keyword resets the input grid to be the full grid as defined by the NX, NY, and NZ variables on the DIMENS keyword in the RUNSPEC section.

See [ENDBOX – Define the End of the BOX Defined Grid](#) in the GRID section for a full description.

9.3.13 ENDFIN – END THE DEFINITION OF A LOCAL GRID REFINEMENT

ENDFIN defines the end of a Cartesian or radial local grid refinement (“LGR”) definition and a LGR property definition data set.

See [ENDFIN – End the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

9.3.14 ENDINC – DEFINE THE END OF AN INCLUDE FILE

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

See [ENDINC – Define the End of an Include File](#) in the GLOBAL section for a full description.

9.3.15 ENDNUM – DEFINE THE END-POINT SCALING DEPTH REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ENDNUM keyword defines the end-point scaling depth table region numbers for each grid block. The end-point scaling depth tables for various regions are defined by the ENPVTD¹⁵⁶ and the ENKRVD¹⁵⁷ keywords in the PROPS section. In the RUNSPEC section the NTENDP variable on the ENDSALE keyword defines the maximum number of depth tables.

No.	Name	Description	Default
I	ENDNUM	ENDNUM defines an array of positive integers assigning a grid cell to a particular end-point scaling depth table region. The maximum number of ENDNUM regions is set by the NTENDP variable on the ENDSALE keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a ENDNUM region number then the default value of one will be used. 3) The keyword is terminated by a "/". 			

Table 9.2: ENDNUM Keyword Description

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Examples

The example below sets three ENDNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE ENDNUM REGIONS FOR ALL CELLS
--
ENDNUM
      2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
      3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      ENDNUM      1           1*  1*   1*  1*   1*  1* / SET REGION 1
      ENDNUM      2           1   2    1   2    1   1 / SET REGION 2
      ENDNUM      3           1   2    1   2    2   2 / SET REGION 3
/
```

¹⁵⁶ This keyword is ignored by OPM Flow and has no effect on the simulation

¹⁵⁷ This keyword is ignored by OPM Flow and has no effect on the simulation

9.3.16 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

See [ENDSKIP – DeActivate Skipping of Keywords and Input Data](#) in the GLOBAL section for a full description.

9.3.17 EQLNUM – DEFINE THE EQUILIBRATION REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The EQLNUM keyword defines the equilibration region numbers for each grid block. The equilibration data for various regions are defined in the SOLUTION section. For example, the EQUIL keyword in the SOLUTION defines the initial pressures and fluid contacts for each equilibration region identified by the EQLNUM region array.

No.	Name	Description	Default
I	EQLNUM	EQLNUM defines an array of positive integers assigning a grid cell to a particular fluid in-place region. The maximum number of EQLNUM regions is set by the NTEQUIL variable on the EQLDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The EQLNUM and PVTNUM arrays need to be consistent, that is the all cells with the same EQLNUM can only belong to one PVTNUM region. 3) If a cell is not assigned a EQLNUM region number then the default value will be used. 4) The keyword is terminated by a "/". 			

Table 9.3: EQLNUM Keyword Description

Examples

The example below sets three EQLNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE EQLNUM REGIONS FOR ALL CELLS
--
EQLNUM
    2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
    3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
    EQLNUM'      1          1*  1*   1*  1*   1*  1* / SET REGION 1
    EQLNUM'      2          1   2    1   2    1   1 / SET REGION 2
    EQLNUM'      3          1   2    1   2    2   2 / SET REGION 3
/
```

9.3.18 EQUALREG – SETS AN ARRAY TO A CONSTANT BY REGION NUMBER

The EQUALREG keyword sets a specified array to a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the EQUALREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the EQUALREG keyword is being used.

See [EQUALREG – Sets an Array to a Constant by Region Number](#) in the GRID section for a full description.

9.3.19 EQUALS – SETS A SPECIFIED ARRAY TO A CONSTANT

The EQUALS keyword sets a specified array or part of an array to a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the EQUALS keyword is being used.

See [EQUALS – Sets a Specified Array to a Constant](#) in the GRID section for a full description.

9.3.20 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

See [EXTRAPMS – Activate Extrapolation Warning Messages](#) in the GLOBAL section for a full description.

9.3.21 FILEUNIT – ACTIVATE UNIT CONSISTENCY VERIFICATION

The FILEUNIT keyword defines the units of the of the data set, and is used to verify that the units in the input deck and any associated include files are consistent grid data. The keyword does not provide for the conversion between different sets of units.

See [FILEUNIT – Activate Unit Consistency Checking](#) in the GRID section for a full description.

9.3.22 FIP – DEFINE THE FLUID IN-PLACE NAMES AND REGION AND NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FIP keyword defines the fluid in-place name and the associated region numbers for each grid block. The simulator can print out summaries of the fluid in-place in each region, the current flow rates between regions, and the cumulative flows between regions. This keyword is not in the standard keyword format due to the fluid in-place name being concatenated to the keyword FIP to fully define the keyword.

Note that the total number of FIP and FIPNUM regions must be defined by the NMFIPR variable on the REGDIMS keyword, or the NTFIP variable on the TABDIMS keyword. Both keywords are in the RUNSPEC section.

No.	Name	Description	Default
1	FIPNAME	A character string of up to eight characters, consisting of FIP as the first three characters followed by up to a five letter character string defining the fluid in-place's name.	None
2	FIPNUM	FIPNUM defines an array of positive integers greater than or equal to one, that assigns a grid cell to a particular fluid in-place region named by FIPNAME. The maximum number of FIP and FIPNUM regions is set by the REGDIMS(NMFIPR) or the TABDIMS(NTFIP) keywords(variables) in the RUNSPEC section. If both REGDIMS(NMFIPR) and TABDIMS(NTFIP) have been defined then the maximum of the two is used.	1

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) If a cell is not assigned a FIP region number by the end of the REGION section then the fault value of one will be used.
- 3) The keyword is terminated by a “/”.

Table 9.4: FIP Keyword Description

The keyword behaves the same as the FIPNUM keyword except the full name of the keyword, including the concatenated characters, are used as the property region name. For example, if we wish define a fluid in-place region name called UNIT, then the keyword would be FIPUNIT.

Note

The commercial simulator prints out a fluid in-place report if the FIP option on the RPTSCHED keyword is set equal to three, that is: FIP=3. This option is currently not available in OPM Flow.

The region property data for FIP arrays can be written to the SUMMARY file, and the RSM file if requested, similar to the FIPNUM regions, with some caveats:

- 1) Only SUMMARY keywords for regions may be used, that is the SUMMARY variable name must begin with the letter R.
- 2) The SUMMARY variable name must consist of a character string length of exactly five characters, if less than five characters, then the “_” character should be used to fill out the SUMMARY variable name. For example, instead of RPRUNIT, use RPR__UNI, or instead of ROIPUNIT, use ROIP__UNI.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

- 3) Only the first three characters of the FIP region name should be concatenated with the SUMMARY variable name. This means if the FIP region name is UNIT, the FIP keyword would be FIPUNIT; however, to access the regional pressures for FIPUNIT, one should use RPR__UNI, or to access the regional oil in-place one would use ROIP__UNI.

See also the FIPOWG keyword in the REGIONS section that automatically defines the fluid-in-place regions at the start of the run based the gas, oil and water zones at the time the model was initialized.

Example

The example below defines a region name of UNIT and sets three FIPUNIT regions for a 4 x 5 x 2 model.

```
--
--      DEFINE FIPUNIT FIP REGIONS FOR ALL CELLS
--
FIPUNIT
      2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1  1
      3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1  1
/
```

The second example is based on the Norne model that defines two FIP regions based on geological layers and numerical layers using the EQUALS keyword.

```
--      FIPGL BASED ON GEOLOGICAL LAYERS
--      ARRAY          CONSTANT          ----- BOX -----
--                                     I1  I2  J1  J2  K1  K2
EQUALS
      FIPGL          1          1  46      1 112      1  3  /  Garn
      FIPGL          2          1  46      1 112      4  4  /  Not
      FIPGL          3          1  46      1 112      5  5  /  Ile 2.2
      FIPGL          4          1  46      1 112      6  8  /  Ile 2.1
      FIPGL          5          1  46      1 112      9 11  /  Ile 1
      FIPGL          6          1  46      1 112     12 12  /  Tofte 2.2
      FIPGL          7          1  46      1 112     13 15  /  Tofte 2.1
      FIPGL          8          1  46      1 112     16 18  /  Tofte 1
      FIPGL          9          1  46      1 112     19 22  /  Tilje

--
--      FIPNL BASED ON NUMERICAL LAYERS
--
      FIPNL          1          1  46      1 112      1  1  /  Garn 3
      FIPNL          2          1  46      1 112      2  2  /  Garn 2
      FIPNL          3          1  46      1 112      3  3  /  Garn 1w
      FIPNL          4          1  46      1 112      4  4  /  Not
      FIPNL          5          1  46      1 112      5  5  /  Ile 2.2
      FIPNL          6          1  46      1 112      6  6  /  Ile 2.1.3
      FIPNL          7          1  46      1 112      7  7  /  Ile 2.1.2
      FIPNL          8          1  46      1 112      8  8  /  Ile 2.1.1
      FIPNL          9          1  46      1 112      9  9  /  Ile 1.3
      FIPNL         10          1  46      1 112     10 10  /  Ile 1.2
      FIPNL         11          1  46      1 112     11 11  /  Ile 1.1
      FIPNL         12          1  46      1 112     12 12  /  Tofte 2.2
      FIPNL         13          1  46      1 112     13 13  /  Tofte 2.1.3
      FIPNL         14          1  46      1 112     14 14  /  Tofte 2.1.2
      FIPNL         15          1  46      1 112     15 15  /  Tofte 2.1.1
      FIPNL         16          1  46      1 112     16 16  /  Tofte 1.2.2
      FIPNL         17          1  46      1 112     17 17  /  Tofte 1.2.1
      FIPNL         18          1  46      1 112     18 18  /  Tofte 1.1
      FIPNL         19          1  46      1 112     19 19  /  Tilje 4
      FIPNL         20          1  46      1 112     20 20  /  Tilje 3
      FIPNL         21          1  46      1 112     21 21  /  Tilje 2
      FIPNL         22          1  46      1 112     22 22  /  Tilje 1
/
```

Then in order to get the reservoir pressure for the regions and the in-place oil volumes SUMMARY variables written to the SUMMARY file, one would use the following SUMMARY variable names in the SUMMARY section

```
-- =====  
--  
-- SUMMARY SECTION  
--  
-- =====  
SUMMARY  
--      FIP REGION REPORTING  
--  
ROIP_GL  
/  
ROIP_NL  
/  
RPR__GL  
/  
RPR__NL  
/
```

Notice how the “_” character has been used to extend the SUMMARY variable name to five characters.

9.3.23 FIPNUM – DEFINE THE FLUID IN-PLACE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The FIPNUM keyword defines the fluid in-place region numbers for each grid block. The simulator can print out summaries of the fluid in-place in each region, the current flow rates between regions, and the cumulative flows between regions.

Note that the total number of FIPNUM and FIP regions must be defined by the NMFIPR variable on the REGDIMS keyword, or the NTFIP variable on the TABDIMS keyword. Both keywords are in the RUNSPEC section.

No.	Name	Description	Default
I	FIPNUM	FIPNUM defines an array of positive integers greater than or equal to one, that assigns a grid cell to a particular fluid in-place region. The maximum number of FIPNUM and FIP regions is set by the REGDIMS(NMFIPR) or the TABDIMS(NTFIP) keywords(variables) in the RUNSPEC section. If both REGDIMS(NMFIPR) and TABDIMS(NTFIP) have been defined then the maximum of the two is used.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If acell is not assigned a FIPNUM region then the default value will be used. 3) The keyword is terminated by a “/”. 			

Table 9.5: FIPNUM Keyword Description

Note

In most simulation models the FIPNUM array is used to define various regions in the model for fluid in-place reporting and to identify (or report) the flow between the different regions. When calibrating a model's in-place volumes it would be useful to use the FIPNUM array combined with the MULTREGP keyword to accomplish this. However, the FIPNUM array cannot be used in the GRID section.

A work around is to:

- 1) Use the FIPNUM array but change the keyword to MULTNUM and incorporate this keyword or INCLUDE file in the GRID section.
- 2) Use the MULTREGP to calibrate the fluid in-place volumes for the various regions.
- 3) In the REGIONS section, use the COPY keyword to copy the MULTNUM array to the FIPNUM array.

The above work flow will ensure that both arrays and the reporting of fluid in-place regions are consistent.

Examples

The example below sets three FIPNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE FIPNUM REGIONS FOR ALL CELLS
--
FIPNUM
      2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1  1
      3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      FIPNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
      FIPNUM      2          1  2    1  2    1  1  / SET REGION 2
      FIPNUM      3          1  2    1  2    2  2  / SET REGION 3
/
```

9.3.24 FIPOWG – ACTIVATE OIL, GAS, AND WATER FIP ZONE REPORTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The FIPOWG keyword activates automatic fluid in-place reporting based on the initial oil, gas and water zones defined by the initial equilibration. The fluid contacts on the EQUIL keyword in the SOLUTION section determine the reporting fluid category a grid cell belongs to. For example all grid cells with depths above the gas-oil contact on the EQUIL keyword will be assigned to the gas zone and reported accordingly. Similarly, grid cells with depths between the gas-oil contact and the water-oil contact will be assigned to the oil zone. And finally, grid cells with depths below the oil-water contact will be assigned to the water zone. The simulator can print out summaries of the fluid in-place in each region, the current flow rates between regions, and the cumulative flows between regions.

Note that the total number of FIP and FIPNUM regions must be defined by the NMFIPR variable on the REGDIMS keyword in the RUNSPEC section.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE OIL, GAS, AND WATER FIP ZONE REPORTING
--
FIPOWG
```

The above example switches on automatic fluid in-place reporting based on the initial oil, gas and water zones defined by the initial equilibration.

9.3.25 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be placed at the very top of the input file.

See [FORMFEED – Defined the Print File Form-Feed Character](#) in the GLOBAL section for a full description.

9.3.26 GETDATA – LOAD AND ASSIGN DATA ARRAY FROM INIT OR RESTART FILE

The GETDATA keyword loads a data array from a previously generated INIT or RESTART file and assigns the loaded array to either same array in the run or another array name.

See [GETDATA – Load and Assign Data Array from INIT or RESTART Files](#) in the GRID section for a full description.

9.3.27 HA – HISTORY MATCH END-POINT GRADIENT ADDITIVE MODIFIER

The HA series of keywords defines the history match end-point gradient parameters used to set the additive cumulative end point data, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

See [HA – History Match End-Point Gradient Additive Modifier](#) in the PROPS section for a complete description.

9.3.28 HBNUM – DEFINE HERSCHEL-BULKLEY REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HBNUM keyword defines the Herschel-Bulkley rheological property table region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which table of Herschel-Bulkley rheological property data is assigned to a grid block, for when the Polymer option has been invoked via the POLYMER keyword in the RUNSPEC section and the Non-Newtonian Fluid phase has been declared active by the NNEWTF keyword, also in the RUNSPEC section. The FHERCHBL keyword in the PROPS section is used to specify the Herschel-Bulkley rheological property table data.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

9.3.29 HM – HISTORY MATCH REGION GRADIENT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	----------------	--------------------------	-------------------------	--------------------------

Description

The HM series of keywords in the REGION section defines the history match gradient regions and sub-regions, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

For grid properties, the region name (or region property array) is based on the property arrays defined in Table 9.6.

Property Array	Region Name	Grid Property Data Description
PERMX	HMPERMX	Permeability multipliers in the x-direction.
PERMXY	HMPRMXY	Permeability multipliers in the x-direction and y-direction
PERMY	HMPERMY	Permeability multipliers in the y-direction.
PERMZ	HMPERMZ	Permeability multipliers in the z-direction.
PORV	HMPORV	Pore volume multiplier
SIGMA	HMSIGMA	Dual porosity and/or dual permeability SIGMA multiplier
TRANX	HMTRANX	Transmissibility multipliers in the x-direction.
TRANXY	HMTRNXY	Transmissibility multipliers in the x-direction and y-direction
TRANY	HMTRANY	Transmissibility multipliers in the y-direction.
TRANZ	HMTRANZ	Transmissibility multipliers in the z-direction.

Table 9.6: HM Region Grid Gradient Parameter Keyword List

In addition, if the End-Point Scaling option has been activated by the ENDSCALE keyword in the RUNSPEC section, then the history match gradient regions and sub-regions for the end-point data can be specified. In this the keyword consists of the first two characters of “HM” followed by the end-point keyword (Table 9.7), for example, HMSWL.

Type	End-Point Keyword	Oil-Water End-Point Definitions
Saturation	HMSWL	Connate water saturation, that is the smallest water saturation in a water saturation function table.
	HMSWCR	Critical water saturation, that is the largest water saturation for which the water relative permeability is zero.
	HMSOWCR	Critical oil-in-water saturation, that is the largest oil saturation for which the oil relative permeability is zero in an oil-water system.

Type	End-Point Keyword	Oil-Water End-Point Definitions
Relative Permeability	HMKRW	Relative permeability of water at the maximum water saturation (normally the maximum water saturation is one).
	HMKRO	Relative permeability of oil at the maximum oil saturation.
	HMKRWR	Relative permeability of water at the residual oil saturation or the residual gas saturation in a gas-water run.
	HMKRORW	Relative permeability of oil at the critical water saturation.
Capillary Pressure	HMSWLPC	Capillary pressure connate water saturation, that is the smallest water saturation in a water saturation function table.
Type	End-Point Keyword	Gas-Oil End-Point Definitions
Saturation	HMSGL	Connate gas saturation, that is the smallest gas saturation in a gas saturation function table.
	HMSGCR	Critical gas saturation, that is the largest gas saturation for which the gas relative permeability is zero.
	HMSOGR	Critical oil-in-gas saturation, that is the largest oil saturation for which the oil relative permeability is zero in an oil-gas-connate water system.
Relative Permeability	HMKRG	Relative permeability of gas at the maximum gas saturation.
	HMKRGR	Relative permeability of gas at the residual oil saturation or the critical water saturation in a gas-water run.
	HMKRORG	Relative permeability of oil at the critical gas saturation.
Capillary Pressure	HMSGLPC	Capillary pressure connate gas saturation, that is the smallest gas saturation in a gas saturation function table.

Table 9.7: HM Region End-Point Gradient Parameter Keyword List

9.3.30 HMPROPS – HISTORY MATCH END-POINT SECTION START

HMPROPS defines the start of a history match end-points section, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. In addition, the End-Point Scaling option must also be activated by the ENDSCALE keyword which is also in the RUNSPEC section. The keyword allows for the BOX, EQUALS, COPY, MINVALUE, MAXVALUE and ADD keywords to be used with the HM series of keywords that reference the end-point scaling arrays, that is: HMKRG, HMKRGR, HMKRO, HMKRORG, HMKRORW, HMKRW, HMKRWR, HMPCW, HMPCG, HMSGCR, HMSOWCR, HMSOGCR, HMSWCR, and HMSWL.

See [HMPROPS – History Match End-Point Section Start](#) in the PROPS section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

9.3.31 HWSNUM – DEFINE THE SATURATION TABLE REGION NUMBERS (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The HWSNUM keyword defines the saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the mode, for when the Surfactant Wettability option has been selected. The keyword may also be used with the Low Salt Brine option, in this case the water wet curves are calculated as a function of the low and high water wet salinity curves. The region number specifies which set of relative permeability tables are used to calculate the relative permeability and capillary pressure in a grid block. Note that the keyword is obligatory if the SURFACTW keyword in the RUNSPEC section has been used to invoke the Surfactant Wettability option.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness. The keyword is an alias for the SURFNUM keyword which is also in the REGION section and is also not supported by OPM Flow.

No.	Name	Description	Default
I	HWSNUM	HWSNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of HWSNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a SATNUM region then the default value will be used. 3) The keyword is terminated by a "/". 			

Table 9.8: HWSNUM Keyword Description

Examples

The example below sets three HWSNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE HWSNUM REGIONS FOR ALL CELLS
--
HWSNUM
      2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
      3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      HWSNUM      1           1*  1*   1*  1*   1*  1* / SET REGION 1
      HWSNUM      2           1  2    1  2    1  1  / SET REGION 2
      HWSNUM      3           1  2    1  2    2  2  / SET REGION 3
/
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

9.3.32 IMBNUM – DEFINE THE IMBIBITION SATURATION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The IMBNUM keyword defines the imbibition saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) are used to calculate the relative permeability and capillary pressure in a grid block.

No.	Name	Description	Default
I	IMBNUM	IMBNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of IMBNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a "/". 3) If a cell is not assigned an IMBNUM region then the default value of one will be used. 			

Table 9.9: IMBNUM Keyword Description

In addition, saturation table assignment may be may be directional dependent in which case the directional dependent versions of the aforementioned array should be used, that is IMBNUMX, IMBNUMY and IMBNUMZ instead of IMBNUM. There is also the facility to make the directional end-point scaling reversible or non-reversible and if the non-reversible option is selected the non-reversible versions of the aforementioned arrays should be used, that is IMBNUMX-, IMBNUMX-, IMBNUMY-, IMBNUMY-, IMBNUMZ and IMBNUMZ-, instead of the IMBNUM keyword.

Note that The directional form of the keyword is recognized, but is not supported by OPM Flow.

Example

The example below sets three IMBNUM regions for a 4 x 5 x 2 model using the EQUALS keyword.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      IMBNUM      1          1*  1*    1*  1*    1*  1* / SET REGION 1
      IMBNUM      2          1   2     1   2     1   1 / SET REGION 2
      IMBNUM      3          1   2     1   2     2   2 / SET REGION 3
/
```

9.3.33 IMBNUMMF – DEFINE THE IMBIBITION SATURATION TABLE REGION NUMBERS (MATRIX-FRACTURE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	----------------	--------------------------	-------------------------	--------------------------

Description

The IMBNUMMF keyword defines the imbibition saturation tables (relative permeability and capillary pressure tables) region numbers for flow between the matrix and fracture blocks, for when the HYSTER option on the SATOPTS keyword has been invoked to activate the Hysteresis option, and the Dual Porosity or Dual Permeability models have been activated via the DUALPORO or DUALPERM keywords. All keywords are in the RUNSPEC section.

The region number specifies which set of relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) are used to calculate the relative permeability and capillary pressure between the matrix and fracture blocks. The keyword is optional and any cell not assigned a value will use the assignment from the IMBNUM array.

This keyword is ignored by OPM Flow and has no effect on the simulation.

9.3.34 IMPORT – IMPORT GRID FILE DATA AT THE CURRENT POSITION

The IMPORT keyword informs the simulator to continue reading input data from the specified IMPORT file. When the end of the IMPORT file is reached, input data is read from the next keyword in the current file. Normally IMPORT files are generated by grid pre-processing software and the keyword allows for both formatted and unformatted (binary) files to be loaded.

See [IMPORT – Import Grid File Data at the Current Position](#) in the GRID section for a full description.

9.3.35 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file.

See [INCLUDE – Load Another Data File at the Current Position](#) in the GLOBAL section for a full description.

9.3.36 KRNUM – DEFINE THE DIRECTIONAL SATURATION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The KRNUM keyword defines the direction dependent saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block face, as such there must be one entry for each cell in the model. The region number specifies which set of relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) are used to calculate the relative permeability and capillary pressure in a grid block. The keyword should only be used if Directional Dependent Saturation Function option has been activated by the DIRECT parameter on the SATOPTS keyword in the RUNSPEC section. Otherwise the standard none directional relative permeability curves should be assigned by the SATNUM keyword in the REGIONS section.

This keyword is not in the standard keyword format due to the cell face (X, X+, Y, Y+, Z, and Z+ for Cartesian grids and R, R+, T, T+ for radial grids) being concatenated to the keyword KRNUM to fully define the keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
I	KRNUM	KRNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of KRNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a KRBNUM region then the default value of one will be used. 3) The keyword is terminated by a "/". 			

Table 9.10: KRNUM Keyword Description

If the Directional Dependent Saturation Function option has been activated by the DIRECT parameter on the SATOPTS keyword in the RUNSPEC section, then the KRNUMX, KRNUMY and KRNUMZ form of the keyword should be used. Secondly, if the Non-Reversible End-Point Scaling option is selected by the IRREVERS parameter on the SATOPTS keyword in the RUNSPEC section, then the non-reversible versions of the KRNUM should be used, that is KRNUMX-, KRNUMX-, KRNUMY, KRNUMY-, KRNUMZ and KRNUMZ-.

Example

The example below sets the directional saturation tables in all three directions using the EQUALS keyword.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      KRNUMX      1           1*  1*   1*  1*   1*  1* / SET X-DIR TABLES
      KRNUMY      2           1*  1*   1*  1*   1*  1* / SET Y-DIR TABLES
      KRNUMZ      3           1*  1*   1*  1*   1*  1* / SET Z-DIR TABLES
/
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

9.3.37 KRNUMMF – DEFINE THE SATURATION TABLE REGION NUMBERS (MATRIX-FRACTURE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	----------------	--------------------------	-------------------------	--------------------------

Description

The KRNUMMF keyword defines the drainage saturation tables (relative permeability and capillary pressure tables) region numbers for flow between the matrix and fracture blocks, for when the Dual Porosity or Dual Permeability models have been activated via the DUALPORO or DUALPERM keywords in the RUNSPEC section.

The region number specifies which set of relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) are used to calculate the relative permeability and capillary pressure between the matrix and fracture blocks. The keyword is optional and any cell not assigned a value will use the assignment from the SATNUM array.

This keyword is ignored by OPM Flow and has no effect on the simulation.

9.3.38 LSLTWNUM – DEFINE THE LOW SALT WATER WET SATURATION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LSLTWNUM keyword defines the saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of relative permeability tables (SWFN, SOF3 and related keywords) are used to calculate the relative permeability and capillary pressure in a grid block. The keyword should only be used if the Low Salinity option for the Brine model and the Surfactant Wettability option have been activated by the LOWSALT and SURFACTW keywords, respectively, in the RUNSPEC section.

The water wet curves are calculated as a weighted average of the low salinity saturation tables (allocated by this keyword) and the high salinity water wet saturation tables (allocated by the SURFWNUM keyword in the REGIONS section), using the weights provided by the LSALTFNC keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
I	LSLTWNUM	LSLTWNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of LSLTWNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a LSLTWNUM region then the default value will be used. 3) The keyword is terminated by a "/". 			

Table 9.11: LSLTWNUM Keyword Description

Example

The example below sets three LSLTWNUM regions for the model.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
EQUALS
      LSLTWNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
      LSLTWNUM      2          1   2    1   2    1   1 / SET REGION 2
      LSLTWNUM      3          1   2    1   2    2   2 / SET REGION 3
/
```

9.3.39 LSNUM – DEFINE THE LOW SALT OIL WET SATURATION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LSNUM keyword defines the saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of relative permeability tables (SWFN, SOF3 and related keywords) are used to calculate the relative permeability and capillary pressure in a grid block. The keyword should only be used if the Low Salinity option for the Brine model has been activated in the RUNSPEC section using the LOWSALT keyword.

The oil wet curves are calculated as a weighted average of the low salinity saturation tables (allocated by this keyword) and the high salinity oil wet saturation tables (allocated by the SATNUM keyword), using the weights provided by the LSALTFNC keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
I	LSNUM	LSNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of LSNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a LSNUM region then the default value will be used. 3) The keyword is terminated by a "/". 			

Table 9.12: LSNUM Keyword Description

If the Surfactant Wettability option have been activated by the SURFACTW keyword, the LSNUM tables correspond to the immiscible low salinity curves.

Example

The example below sets three LSNUM regions for the model.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      LSNUM        1           1*  1*   1*  1*   1*  1* / SET REGION 1
      LSNUM        2           1  2    1  2    1  1 / SET REGION 2
      LSNUM        3           1  2    1  2    2  2 / SET REGION 3
/
```

9.3.40 LWSLTNUM – DEFINE THE LOW SALT OIL WET SATURATION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LWSLTNUM keyword defines the saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of relative permeability tables (SWFN, SOF3 and related keywords) are used to calculate the relative permeability and capillary pressure in a grid block. The keyword should only be used if the Low Salinity option for the Brine model has been activated by the LOWSALT keyword in the RUNSPEC section.

The oil wet curves are calculated as a weighted average of the low salinity saturation tables (allocated by this keyword) and the high salinity oil wet saturation tables (allocated by the SATNUM keyword in the REGIONS section), using the weights provided by the LSALTFNC keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
I	LWSLTNUM	LWSLTNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of LSLTWNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a LWSLTNUM region then the default value will be used. 3) The keyword is terminated by a “/”. 			

Table 9.13: LWSLTNUM Keyword Description

Example

The example below sets three LWSLTNUM regions for the model.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2   J1  J2   K1  K2
EQUALS
      LWSLTNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
      LWSLTNUM      2          1   2    1   2    1   1 / SET REGION 2
      LWSLTNUM      3          1   2    1   2    2   2 / SET REGION 3
/
```

9.3.41 LWSNUM – DEFINE THE LOW SALT WATER WET SATURATION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The LWSNUM keyword defines the saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of relative permeability tables (SWFN, SOF3 and related keywords) are used to calculate the relative permeability and capillary pressure in a grid block. The keyword should only be used if the Low Salinity option for the Brine model and the Surfactant Wettability option have been activated by the LOWSALT and SURFACTW keywords, respectively, in the RUNSPEC section.

The water wet curves are calculated as a weighted average of the low salinity saturation tables (allocated by this keyword) and the high salinity water wet saturation tables (allocated by the HWSNUM keyword), using the weights provided by the LSALTFNC keyword in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
I	LWSNUM	LWSNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of LWSNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a LWSNUM region then the default value will be used. 3) The keyword is terminated by a "/". 			

Table 9.14: LWSNUM Keyword Description

The HWSNUM allocated tables correspond to the immiscible high salinity water wet curves.

Example

The example below sets three LWSNUM regions for the model.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      LWSNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
      LWSNUM      2          1   2    1   2    1   1 / SET REGION 2
      LWSNUM      3          1   2    1   2    2   2 / SET REGION 3
/
```

9.3.42 MESSAGE – OUTPUT USER MESSAGE

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGES keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

See [MESSAGE – Output User Message](#) in the GLOBAL section for a full description.

9.3.43 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

See [MESSAGES – Define Message Print Limits and Stop Limits](#) in the GLOBAL section for a full description.

9.3.44 MISNUM – DEFINE THE MISCIBILITY REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	----------------	--------------------------	-------------------------	--------------------------

Description

The MISNUM keyword defines the miscibility region number mixing tables as defined by the TLMIXPAR keyword in the PROPS section, for when the miscibility option has been activated by the MISCIBLE keyword in the RUNSPEC section. MISNUM also allocates miscible residual oil saturation versus water saturation tables (SORWMIS keyword in the PROPS section) used to calculate the relative permeability and PVT properties for a grid cell.

Note that although this keyword can only be used when the miscibility option is active, it is not necessary to use this keyword even if the MISCIBLE keyword in the RUNSPEC has been activated as the default value of one will be applied to all grid blocks. Secondly, a value of zero for a grid cell results in immiscible fluids in that grid cell.

No.	Name	Description	Default
1	MISNUM	MISNUM defines an array of positive integers greater than or equal to zero, that assign a grid cell to a particular table of mixing parameters as defined by the TLMIXPAR and SORWMIS keywords. A value of zero sets the fluids within a grid cell to be immiscible. The maximum number of MISNUM regions is set by the NTMIS variable on the MISCIBLE keyword in the RUNSPEC section.	1
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a MISNUM region then the default value of one will be used. 3) The keyword is terminated by a “/”. 			

Table 9.15: MISNUM Keyword Description

See also the TLMIXPAR and SORWMIS keyword in the PROPS section.

Example

The example below sets three MISNUM regions in the model on a layer by layer basis, using the EQUALS keyword.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      MISNUM      1          1*  1*   1*  1*   1  12 / SET REGION 1
      MISNUM      2          1*  1*   1*  1*  13  55 / SET REGION 2
      MISNUM      3          1*  1*   1*  1*  56 120 / SET REGION 3
/
```

9.3.45 MULTIPLY – MULTIPLY A SPECIFIED ARRAY BY A CONSTANT

The MULTIPLY keyword multiplies a specified array or part of an array by a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

See [MULTIPLY – Multiply a Specified Array by a Constant](#) in the GRID section for a full description.

9.3.46 MULTIREG – MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER

The MULTIREG keyword multiplies an array or part of an array by a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTIREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the MULTIREG keyword is being used.

See [MULTIREG – Multiply an Array by a Constant based on a Region Number](#) in the GRID section for a full description.

9.3.47 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active, but can subsequently be switched off by the NOECHO activation keyword.

See [NOECHO – Deactivate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

9.3.48 NOWARN – DEACTIVATE WARNING MESSAGES

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

See [NOWARN – Deactivate Warning Messages](#) in the GLOBAL section for a full description.

9.3.49 OPERATE – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS

This keyword, OPERATE, defines mathematical operations on property arrays (NTG, PORO etc.) and optionally using another property array as input to the function. The keyword allows for various mathematical functions and their associated variables to be defined and applied to the selected array data. Input constants can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

See [OPERATE – Define Mathematical Operations on Arrays](#) in the GRID section for a full description.

9.3.50 OPERATER – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS BY REGION

This keyword defines the mathematical operations on arrays for specific regions in the commercial simulator and is currently not supported by OPM Flow. However, similar functionality is provided by the ADD and MULTIPLY keywords.

See [OPERATER – Define Mathematical Operations on Arrays by Region](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

9.3.51 OPERNUM – DEFINE REGIONS FOR MATHEMATICAL OPERATIONS ON ARRAYS

This keyword defines the OPERATE region numbers for each grid block. The OPERATE keyword defines mathematical operations on arrays in the commercial simulator and is currently not supported by OPM Flow. However, similar functionality is provided by the ADD and MULTIPLY keywords combined with MULTNUM region array.

See [OPERNUM – Define Regions for Mathematical Operations on Arrays](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

9.3.52 PENUM – DEFINE THE PETRO-ELASTIC REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PENNUM keyword defines the petro-elastic region number for each grid block that is used to assign the of petro-elastic coefficients, bulk modulus functions and shear modulus functions as defined by the PECOEFS, PEKTAB and PEGTAB series of keywords in the PROPS section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

9.3.53 PLMIXNUM – DEFINE THE POLYMER REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PLMIXNUM keyword defines the polymer region number for each grid block that is used to assign the mixing tables as well as the maximum polymer and salt concentrations, as defined by the PLMIXPAR and PLYMAX keywords in the PROPS section, for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

The maximum polymer concentration and the associated salt concentration are declared on the PLYMAX keyword.

No.	Name	Description	Default
I	PLMIXNUM	PLMIXNUM defines an array of positive integers greater than or equal to one, that assign a grid cell to a particular table of mixing parameters as defined by the PLMIXPAR and PLYMAX keywords. The maximum number of PLMIXNUM regions is set by the NPLMIX variable on the REGDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a PLMIXNUM region then the default value of one will be used. 3) The keyword is terminated by a "/". 			

Table 9.16: PLMIXNUM Keyword Description

See also the PLYADS, PLYADSS, PLYDHLF, PLYMAX, PLYROCK, PLYSHEAR, PLYSHLOG and PLYVISC keywords in the PROPS section.

Example

The example below sets three PLMIXNUM regions in the model on a layer by layer basis, using the EQUALS keyword.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      PLMIXNUM      1           1*  1*   1*  1*   1  12 / SET REGION 1
      PLMIXNUM      2           1*  1*   1*  1*  13  55 / SET REGION 2
      PLMIXNUM      3           1*  1*   1*  1*  56 120 / SET REGION 3
/
```

9.3.54 PVTNUM – DEFINE THE PVT REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PVTNUM keyword defines the PVT region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of PVT tables (DENSITY, PVDG, PVDO, PVTG, PVTO, PVCO, PVTW and ROCK) are used to calculate the PVT properties in a grid block.

No.	Name	Description	Default
I	PVTNUM	PVTNUM defines an array of positive integers assigning a grid cell to a particular PVT region. The maximum number of PVTNUM regions is set by the NTPVT variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword, in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The EQLNUM and PVTNUM arrays need to be consistent, that is the all cells with the same PVTNUM can only belong to one EQLNUM region. 3) If a cell is not assigned a PVTNUM region then the default value will be used. 4) The keyword is terminated by a “/”. 			

Table 9.17: PVTNUM Keyword Description

Note

Care should be taken that cells in different PVTNUM regions are not in communication, since the fluid properties are associated with a cell. If for example, a rbbl or a rm^3 of oil flows from PVTNUM region 1 to PVTNUM region 2, then the oil properties of that oil will change from the PVT 1 data set to the PVT data set 2. This will result in material balance errors, that may or may not cause numerical issues.

To avoid this one should use the MULTNUM (or FLUXNUM, or OPERNUM) array with the MULTREGT array to ensure that the various PVTNUM regions are not in communication.

Examples

The example below sets three PVTNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE PVTNUM REGION FOR ALL CELLS
--
PVTNUM
    2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
    3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--          ARRAY          CONSTANT          ----- BOX -----
--          I1  I2    J1  J2    K1  K2
EQUALS
          PVTNUM          1          1*  1*    1*  1*    1*  1* / SET REGION 1
          PVTNUM          2          1   2     1   2     1   1 / SET REGION 2
          PVTNUM          3          1   2     1   2     2   2 / SET REGION 3
/
```

There third example shows how to ensure the various PVT regions are isolated. First of all define the MULTNUM array in the GRID section and ensure all the regions are isolated.

```
-- =====
--
-- GRID SECTION
--
-- =====
GRID
--
--          ARRAY          CONSTANT          ----- BOX -----
--          I1  I2    J1  J2    K1  K2
EQUALS
          MULTNUM          1          1*  1*    1*  1*    1*  1* / SET REGION 1
          MULTNUM          2          1   2     1   2     1   1 / SET REGION 2
          MULTNUM          3          1   2     1   2     2   2 / SET REGION 3
/
--
-- SET TRANSMISSIBILITES ACROSS DIFFERENT RESERVOIRS TO ZERO TO ISOLATE
-- RESERVOIRS
--
--          REGION  REGION  TRANS  DIREC  NNC  REGION ARRAY
--          FROM    TO      MULT   OPT    OPTS  M / F / O
MULTREGT
          1*       1*       0.0    1*     'ALL'  M          / ALL REGIONS SEALED
/
```

Then in the REGIONS section copy the MULTNUM array to the PVTNUM array.

```
-- =====
--
-- REGIONS SECTION
--
-- =====
REGIONS
--
--          COPY AN ARRAY TO ANOTHER ARRAY BASED ON A REGION NUMBER
--
--          ARRAY  ARRAY  REGION  REGION ARRAY
--          FROM   TO     NUMBER   M / F / O
COPYREG
          MULTNUM  PVTNUM  1       M          / COPY MULT TO PVT 1
          MULTNUM  PVTNUM  2       M          / COPY MULT TO PVT 2
          MULTNUM  PVTNUM  3       M          / COPY MULT TO PVT 3
/
```

All the separate PVT regions are now isolated.

9.3.55 PYEND – END THE DEFINITION OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow’s Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords. A PYINPUT Definition Section is terminated by a PYEND keyword on a separate single line.

See [PYEND – End the Definition of a PYINPUT Section](#) in the GRID section for a full description.

9.3.56 PYINPUT – DEFINE THE START OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow’s Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords used by the simulator. PYINPUT declares the start of a PYINPUT Definition Section on a single separate line, which is then followed by various standard Python commands, with one command per line.

See [PYINPUT – Define the Start of a PYINPUT Section](#) in the GRID section for a full description.

9.3.57 REFINE – START THE DEFINITION OF A LOCAL GRID REFINEMENT

The REFINE keyword defines the start of a Cartesian or radial local grid refinement (“LGR”) definition that sets the properties of the selected LGR. The keyword is then followed by the property keywords associated with the section where the keyword is being invoked. For example, if the REFINE keyword is used in the GRID section then most of the keywords in that section can be used to set the grid properties for the LGR.

See [REFINE – Start the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

9.3.58 REGIONS - DEFINE THE START OF THE REGIONS SECTION OF KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	----------------	--------------------------	-------------------------	--------------------------

Description

The REGIONS activation keyword marks the end of the PROPS section and the start of the REGIONS section that defines how various fluid and rock property data defined in the PROPS section are allocated to the individual cells in the model.

There is no data required for this keyword.

Example

```
-- =====
--
-- REGIONS SECTION
--
-- =====
REGIONS
```

The above example marks the end of the PROPS section and the start of the REGIONS section in the OPM Flow data input file.

9.3.59 RESIDNUM – DEFINE VERTICAL EQUILIBRIUM RESIDUAL FLOW REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The RESIDNUM keyword defines the Vertical Equilibrium (“VE”) residual flow calculation saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) are used to calculate the relative permeability and capillary pressure in a grid block. The keyword should only be used if the Vertical Equilibrium option has been invoked via the VE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	RESIDNUM	RESIDNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of RESIDNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a RESIDNUM region then the default value will be used. 3) The keyword is terminated by a “/”. 			

Table 9.18: RESIDNUM Keyword Description

Note that any capillary pressure data on the relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) will be ignored by the VE option.

Example

The example below sets three RESIDNUM regions for the model, by first setting all values to one, then setting layers 2 to 10 to two, and finally setting layers 30 to 50 to three.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      SATNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
      SATNUM      2          1   2    1   2    2  10 / SET REGION 2
      SATNUM      3          1   2    1   2    30  50 / SET REGION 3
/
```


9.3.60 ROCKNUM – DEFINE ROCK COMPACTION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ROCKNUM keyword defines the rock compaction table region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of rock compaction tables defined by the ROCKTAB keyword are used to calculate the rock compaction in a grid block.

No.	Name	Description	Default
I	ROCKNUM	ROCKNUM defines an array of positive integers assigning a grid cell to a particular rock compaction table region. The maximum number of ROCKNUM regions is set by the NTROCC variable on the ROCKCOMP keyword in the RUNSPEC section.	I
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a ROCKNUM region then the default value will be used. 3) The keyword is terminated by a "/".			

Table 9.19: ROCKNUM Keyword Description

Examples

The example below sets three ROCKNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE ROCKNUM REGION FOR ALL CELLS
--
ROCKNUM
    2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
    3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
    ROCKNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
    ROCKNUM      2          1   2    1   2    1   1 / SET REGION 2
    ROCKNUM      3          1   2    1   2    2   2 / SET REGION 3
/
```

9.3.61 RPTREGS – DEFINE REGIONS SECTION REPORTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the data in the REGIONS section that is to be printed to the output print file in human readable format. The keyword has two distinct forms, the first of which consists of the keyword followed by a series of integers on the next line indicating the data to be printed (see the first example). This is the original format in the commercial simulator and was subsequently superseded by the second format. The second format consists of the keyword followed by a series of character strings that indicate the data to be printed. In most cases the character string is the keyword used to load the data in the OPM Flow input deck, for example FIPNUM for the fluid in-place array. It is anticipated that OPM Flow will eventually support the functionality of the second format only, the first format although recognized will be completely ignored.

No.	Name	Description	Default
1	EQLNUM	Print the equilibration region array.	N/A
2	FIPNUM	Print the fluid in-place array.	N/A
3	PVTNUM	Print the PVT table assignment array.	N/A
4	SATNUM	Print the saturation function (relative permeability) assignment array.	N/A
....		N/A
Notes: 1) The keyword is terminated by a "/".			

Table 9.20: RPTREGS Keyword Description

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

Note

This keyword has the potential to produce very large print files that some text editors may have difficulty loading, coupled with the fact that reviewing the data in this format is very cumbersome. A more efficient solution is to load the *.INIT file into OPM ResInsight to view the data graphically, this also has the benefit of being able to filter the grid based on I, J, K ranges and grid properties.

Examples

The first example shows the original format of this keyword; although the keyword and format are recognized by OPM Flow, the format is ignored and is unlikely to be implemented in the simulator.

```
--
--      DEFINE REGIONS SECTION REPORT OPTION (ORIGINAL FORMAT)
--
RPTREGS
      1      2*0      1      3*1      /
```

The next example shows the second format of the keyword which may be supported in a future release of OPM Flow.

```
--
--      DEFINE REGIONS SECTION REPORT OPTIONS
--
RPTREGS
      FIPNUM      EQLNUM      PVTNUM      SATNUM      /
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

9.3.62 SATNUM – DEFINE THE SATURATION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SATNUM keyword defines the saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) are used to calculate the relative permeability and capillary pressure in a grid block.

No.	Name	Description	Default
I	SATNUM	SATNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of SATNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a SATNUM region then the default value will be used. 3) The keyword is terminated by a "/".			

Table 9.21: SATNUM Keyword Description

Examples

The example below sets three SATNUM regions for a 4 x 5 x 2 model.

```
--
--      DEFINE SATNUM REGIONS FOR ALL CELLS
--
SATNUM
    2  2  1  1  2  2  1  1  1  1  1  1  1  1  1  1  1  1
    3  3  1  1  3  3  1  1  1  1  1  1  1  1  1  1  1  1
/
```

Alternatively the EQUALS keyword could be employed to accomplish the same task, that is:

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
    SATNUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
    SATNUM      2          1  2    1  2    1  1  / SET REGION 2
    SATNUM      3          1  2    1  2    2  2  / SET REGION 3
/
```

9.3.63 SKIP – ACTIVATE SKIPPING OF ALL KEYWORDS AND INPUT DATA

The SKIP keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered. All keywords and between the SKIP and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP – Activate Skipping of All Keywords and Input Data](#) in the GLOBAL section for a full description.

9.3.64 SKIP100 – ACTIVATE SKIPPING OF BLACK-OIL KEYWORDS AND INPUT DATA

This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered. All black-oil keywords between the SKIP100 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data](#) in the GLOBAL section for a full description.

9.3.65 SKIP300 – ACTIVATE SKIPPING OF “COMPOSITIONAL” KEYWORDS AND INPUT DATA

Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered. All “compositional” keywords between the SKIP300 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data](#) in the GLOBAL section for a full description.

9.3.66 SURFNUM – DEFINE THE SURFACTANT MISCIBLE SATURATION TABLE REGION NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SURFNUM keyword defines the saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the model. The region number specifies which set of oil-water relative permeability tables (SWFN, SOF2, SOF3, and SWOF) are used to calculate the relative permeability and capillary pressure in a grid block. In this case the SURFNUM allocated tables assume that oil and water are miscible, whereas the SATNUM allocated tables are used to allocate the immiscible saturation tables. To use this keyword the Surfactant option must have been activated by the SURFACT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
I	SURFNUM	SURFNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of SURFNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a SURFNUM region then the default value will be used. 3) The keyword is terminated by a "/". 			

Table 9.22: SURFNUM Keyword Description

Example

The example below sets three SURFNUM for the model.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      SURFNUM      1           1*  1*   1*  1*   1*  1* / SET REGION 1
      SURFNUM      2           1*  1*   1*  1*   1   1 / SET REGION 2
      SURFNUM      3           1*  1*   1*  1*   2   2 / SET REGION 3
/
```

9.3.67 SURFNUM – DEFINE THE SATURATION TABLE REGION NUMBERS (HIGH SALINITY AND WATER WET)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SURFNUM keyword defines the saturation tables (relative permeability and capillary pressure tables) region numbers for each grid block, as such there must be one entry for each cell in the mode, for when the Surfactant Wettability option has been selected. The keyword may also be used with the Low Salt Brine option, in this case the water wet curves are calculated as a function of the low and high water wet salinity curves. The region number specifies which set of relative permeability tables are used to calculate the relative permeability and capillary pressure in a grid block. Note that the keyword is obligatory if the SURFACTW keyword in the RUNSPEC section has been used to invoke the Surfactant Wettability option.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness. The keyword is an alias for the HWSNUM keyword which is also in the REGION section and is also not supported by OPM Flow.

No.	Name	Description	Default
I	SURFNUM	SURFNUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of SURFNUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	I
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a SATNUM region then the default value will be used. 3) The keyword is terminated by a “/”. 			

Table 9.23: SURFNUM Keyword Description

Example

The example below sets three SURFNUM regions for the model.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--      I1  I2    J1  J2    K1  K2
EQUALS
      SURFNUM      1          1*  1*  1*  1*  1*  1* / SET REGION 1
      SURFNUM      2          1   2   1   2   1   1 / SET REGION 2
      SURFNUM      3          1   2   1   2   2   2 / SET REGION 3
/
```

9.3.68 TNUM – DEFINE PASSIVE TRACER CONCENTRATION REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TNUM keyword defines the regions associated with the series of tracers associated with a phase (oil, water, or gas) in the model. The maximum number of tracers for each phase are declared on the TRACER keyword in the RUNSPEC section. Unlike other keywords, the TNUM keyword must be concatenated with the phase and the name of the tracer declared by TRACER keyword in the PROPS section. Table 9.24 outlines the format of the TNUM keyword name.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
1	TNUM	A four letter character equal to TNUM that is the root keyword name for this data set array.	None
2	PHASE	A one letter character string that must be equal to F or S, that is concatenated to TNUM. The letter F states that the tracer is for the “free” phase, for example oil or water, as well as gas cap gas (free gas). The letter S signifies that the tracer is a “solution” phase tracer, for example gas dissolved in oil (as activated by the DISGAS keyword in the RUNSPEC section), or condensate (vaporized oil) in the gas (as per the VAPOIL keyword in the RUNSPEC section). Note tracers that are defined by the letter S to be in the “solution” phase, must also be initialized by the “free” phase as well.	None
3	NAME	A three letter character string defining the tracer’s name, which is concatenate to TNUM and PHASE to given the full name of the keyword Note it is best to void names beginning with the letters F, S, and T as these names may great naming issues in post-processing software.	None

Table 9.24: TNUM Keyword Name Format

Following the declaration of the full keyword name, TNUMPHASENAME, the keyword is followed by the data as outlined below.

No.	Name	Description	Default
1	TNUMREG	TUNREG defines an array of positive integers assigning a grid cell to a particular tracer table region. The maximum number of TNUMREG regions is set by the NTTRVD variable on the EQLDIMS keyword in the RUNSPEC section.	1
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a TNUMREG region then the default value will be used. 3) The keyword is terminated by a “/”. 			

Table 9.25: TNUM Keyword Data Description

See also the TRACER keyword in the PROPS section and the TBLK keyword in the SOLUTION section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

First define four passive tracers one for a free gas, one for dissolved gas, one for oil and one to track the water.

```
--
--      DEFINE TRACER NAMES
--
--      TRACER      TRACER
--      NAME        PHASE
--      -----
TRACER
      'GCG'        'GAS'          / GAS CAP GAS
      'DGS'        'GAS'          / DISOLVED GAS
      'OIL'        'OIL'          / OIL
      'WAT'        'WAT'          / WAT
/
```

Given a 100 x 100 x 5 grid with DISGAS activated in the RUNSPEC section, then the following TNUM keywords define the various tracer regions given that NTTRVD equals four on the EQLDIMS keyword in the RUNSPEC section.

```
--
--      DEFINE PASSIVE TRACER CONCENTRATION REGIONS
--
--      TNUMFGCG
--          1000*1
--          1000*2
--          1000*2
--          1000*2
--          1000*2
/
--      TNUMSDGS
--          1000*1
--          1000*1
--          1000*1
--          1000*1
--          1000*1
/
--      TNUMFOIL
--          1000*3
--          1000*3
--          1000*3
--          1000*3
--          1000*3
/
--      TNUMFWAT
--          1000*4
--          1000*4
--          1000*4
--          1000*4
--          1000*4
/
```

The keyword name is derived from the TNUM keyword, plus either F or S, plus the tracer name declared in the TRACER keyword. For example for the gas cap (free gas) this would be TNUM+F+GAS to give the TNUMFGAS keyword. And for the dissolved (solution) gas this would be TNUM+S+DGS resulting in the TNUMSDGS keyword.

9.3.69 TRKPF – DEFINE PARTITIONED TRACER REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The TRKPF keyword defines the regions associated with the series of partition tracers and the partitioning tables allocated to grid blocks in the model, for when the Partitioned Tracer option has been enabled by the PARTTRAC keyword in the RUNSPEC section. The maximum number of tracers for each phase are declared on the TRACERS keyword in the RUNSPEC section. Unlike other keywords, the TRKPF keyword must be concatenated with the name of the tracer declared by TRACER keyword in the PROPS section. Table 9.26 outlines the format of the TRKPF keyword name.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
1	TRKPF	A five letter character string equal to TRKPF that is the root keyword name for this data set array.	None
2	NAME	A three letter character string defining the tracer's name, as declared by the TRACER keyword, which is concatenate to TRKPF to given the full name of the keyword Note it is best to void names beginning with the letters F,S, and T as these names may great naming issues in post-processing software.	None

Table 9.26: TRKPF Keyword Name Format

Following the declaration of the full keyword name, TRKPFNAME, the keyword is followed by the data as outlined below.

No.	Name	Description	Default
1	TRKPFREG	TRKPFREG defines an array of positive integers assigning a grid cell to a particular tracer table region. The maximum number of TRKPFREG regions is set by the NTTRVD variable on the EQLDIMS keyword in the RUNSPEC section.	1
Notes: <ol style="list-style-type: none"> 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a TRKPFREG region then the default value will be used. 3) The keyword is terminated by a "/". 			

Table 9.27: TRKPF Keyword Data Description

See also the TRACER and TRACERKP keywords in the PROPS section and the TBLK keyword in the SOLUTION section.

Example

First define one multi-partitioned tracer for the water phase.

```
--
--      DEFINE TRACER NAMES
--
--      TRACER   TRACER   TRACER   PARTITION   NUM   ADSOR
--      NAME     PHASE    VOLUME  PHASE        K(P)  PHASE
--      -----
TRACER      'WAT'      'WAT'      1*        MULT        2      ALL      / WAT
/
```

Then for a given a 100 x 100 x 5 grid assign the partitioned tracer regions and K(P) tables, based on two regions.

```
--
--      DEFINE PARTITIONED TRACER REGIONS
--
TRKPFWAT
      1000*1
      1000*1
      1000*2
      1000*2
      1000*2
/
```

The keyword name is derived from the TRKPF keyword, plus the tracer name declared in the TRACER keyword, in this case the keyword name is TRKPFWAT.

9.3.70 WARN – ACTIVATE WARNING MESSAGES

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

See [WARN – Activate Warning Messages](#) in the GLOBAL section for a full description.

9.3.71 WH2NUM – DEFINE WAG HYSTERESIS SATURATION TABLE REGION NUMBERS (Two PHASE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WH2NUM keyword defines the two phase Water-Alternating-Gas (“WAG”) hysteresis tables (relative permeability and capillary pressure tables) region numbers for each grid block, for when the hysteresis option has been activated by the WAGHYSTR variable on the SATOPTS keyword in the RUNSPEC section. The region number specifies which set of relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) are used to calculate the relative permeability and capillary pressure in a grid block. Note that this keyword is the two phase water relative permeabilities WAG option.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	WH2NUM	WH2NUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of WH2NUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	Taken from cell allocated SATNUM
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a WH2NUM region then the default value will be used. 3) The keyword is terminated by a “/”.			

Table 9.28:WH2NUM Keyword Description

Example

The example below sets three WH2NUM regions for a model.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      WH2NUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
      WH2NUM      2          1   2    1   2    1   1 / SET REGION 2
      WH2NUM      3          1   2    1   2    2   2 / SET REGION 3
/
```

9.3.72 WH3NUM – DEFINE WAG HYSTERESIS SATURATION TABLE REGION NUMBERS (THREE PHASE)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WH3NUM keyword defines the three phase Water-Alternating-Gas (“WAG”) hysteresis tables (relative permeability and capillary pressure tables) region numbers for each grid block, for when the hysteresis option has been activated by the WAGHYSTR variable on the SATOPTS keyword in the RUNSPEC section. The region number specifies which set of relative permeability tables (SGFN, SWFN, SOF2, SOF3, SOF32D, SGOF, SLGOF and SWOF) are used to calculate the relative permeability and capillary pressure in a grid block. Note that this keyword is the three phase water relative permeabilities WAG option.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	WH3NUM	WH3NUM defines an array of positive integers assigning a grid cell to a particular saturation table region. The maximum number of WH3NUM regions is set by the NTSFUN variable on the TABDIMS keyword in the RUNSPEC section.	Taken from cell allocated SATNUM
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) If a cell is not assigned a WH3NUM region then the default value will be used. 3) The keyword is terminated by a “/”.			

Table 9.29: WH3NUM Keyword Description

Example

The example below sets three WH3NUM regions for a model.

```
--
--      ARRAY      CONSTANT      ----- BOX -----
--                                     I1  I2   J1  J2   K1  K2
EQUALS
      WH3NUM      1          1*  1*   1*  1*   1*  1* / SET REGION 1
      WH3NUM      2          1   2    1   2    1   1 / SET REGION 2
      WH3NUM      3          1   2    1   2    2   2 / SET REGION 3
/
```


CHAPTER 10: SOLUTION SECTION

10.1 INTRODUCTION

The SOLUTION section defines the initial conditions for the model, that is the conditions at time zero, before any flow occurs in the reservoir. As such, sufficient information from the previous sections is required for the simulator to calculate the initial saturation and pressure distributions through out the model, such that the fluids are in gravity/hydrostatic equilibrium. This means that if the simulator is run for a period of time without any production or injection then there should be no saturation or pressure changes in the model. In fact this “test” of running the simulator for a few years without any production or injection should always be performed to ensure that the model is indeed in hydrostatic equilibrium.

There are basically three methods to initialize a model:

- 1) **Equilibrium Initialization:** This is the primary method to initialize a model, and is in fact, the only manner that should be used to set the model at equilibrium conditions, unless a restart run is being initialized. Here, OPM Flow uses the previously entered PVT data and the fluid saturation tables (SWFN, SGFN, etc.), combined with the EQUIL keyword in the SOLUTION section to compute the capillary and fluid gradients, and hence the fluid saturations and fluid densities in each cell. The EQUIL keyword basically sets the pressure at a datum depth together with fluid contacts for an equilibrium region, from which all the required grid block properties can be calculated. Note that it is not uncommon for hydrostatic equilibrium not to be achieved initially, due for example different PVT regions being in communication, aquifer properties incorrectly defined, etc. Which it is why it is important to run the simulator for a few years without any production or injection to ensure that the model is indeed in hydrostatic equilibrium, and to rectify any issues.
- 2) **Enumeration Initialization:** This is the option where one defines the pressures for all the grid cells together with the cells initial gas and water saturations, the oil saturation in this case is back calculated by the simulator using $S_o = 1.0 - S_g - S_w$. Thus, in three phase runs only two phase saturations need be entered and for two phase run only one saturation array needs to be provided. This type of initialization is rarely used in the industry due to the complexity of ensuring that the model is in gravity equilibrium; however, the facility has been used by some companies in the past, using in-house proprietary software, to generate suitable input to the simulator. Enumeration of course can also be used to initialize the model in non-equilibrium state, similar to the restart initialization described next.
- 3) **Restart Initialization:** This is a form of enumeration initialization but in this case the condition of gravity equilibrium is not applied; in other words the model is initialized at a point in time when after the model has produced or injected fluids. This type of initialization is very common, as it enables the run to “restart” from a previously run case. For example, once a model has been history matched, all the prediction cases can be “restarted” from the end of the final history match run, as oppose to running the cases from the start of the history match to the end of the prediction cases. In some fields, the reservoir may not be in hydrostatic equilibrium, due for example, a pressure differential across the field caused by a re-charging aquifer. In these rare cases the model is initialized using the hydrostatic equilibrium approach but then run until the present day conditions match the measured present day conditions by adjusting the aquifer influx. The actual history match / prediction runs are then restarted from the resulting present day restart file.

Equilibrium Initialization uses the PVT data and saturation tables entered in the PROPS section combined with data entered on the EQUIL keyword in the SOLUTION section. As capillary forces are generally small relative to viscous forces in field scale simulations, one may expect the errors introduced by use of the drainage capillary pressure curves to simulate an imbibition process to be small. Thus, it is common practice in field scale simulations to use the capillary pressure drainage curves in initializing a model, mainly as drainage curves are routinely measured in the laboratory, whereas imbibition curves are not. The exception of course is when hysteresis is applicable or when simulating small scale systems. If the hysteresis option has been activated via HYSTER variable on the SATOPTS keyword in the RUNSPEC section, then the simulator will use the appropriate imbibition capillary pressure data entered via the saturation table keywords (SWFN, SGFN etc.) in determining the fluid saturation.

The initial vertical distribution of fluids will be governed by the fluid densities and capillary forces, with a gas zone, a gas-oil transition zone, an oil zone, an oil-water transition zone, finally the water zone within a

hydrostatic unit or region. Not all zones may be present in a hydrostatic unit, for example in dry gas reservoirs there will be only gas, gas-water transition and water zones. This is fundamental construct given the density of the in situ phases, there are rare exceptions to this principle; however, when there is an exception the more likely explanation is the various fluids are not in the same hydrostatic unit.

In the methodology outline below, it has been assumed that the initial oil pressure has been specified at some depth, z_{init} within the oil zone. Note it is not necessary that the pressure be specified within the oil zone, but it makes describing the analysis somewhat simpler. Thus we have:

$$p = p_{init}^{oil} \text{ at } z = z_{init} \quad (10.1)$$

The oil pressure at any other point in the oil column can be calculated as shown below:

$$p_{oil} = p_{init}^{oil} + \gamma^{oil} (z - z_{init}) \quad (10.2)$$

Where γ^{oil} is the oil density and z is the given depth. We can then calculate the oil pressure at the Water-Oil Contact ("WOC"), that is p_{woc}^{oil} , from:

$$p_{woc}^{oil} = p_{init}^{oil} + \gamma^{oil} (z_{woc} - z_{init}) \quad (10.3)$$

And employing the definition of water-oil capillary pressure, one can write an expression for the water pressure at the water-oil contact:

$$p_{woc}^{water} = p_{woc}^{oil} + p_{cwoc} \quad (10.4)$$

The water pressure at any other point in the reservoir can now be related to the water pressure at the water-oil contact as shown below:

$$p_{water} = p_{woc}^{water} + \gamma^{water} (z - z_{woc}) \quad (10.5)$$

Where γ^{water} is the water density and z is the given depth.

Similarly, for gas we have the oil phase pressure at the Gas-Oil Contact ("GOC").

$$p_{goc}^{oil} = p_{init}^{oil} + \gamma^{oil} (z_{goc} - z_{init}) \quad (10.6)$$

Again, we can use gas-oil capillary pressure to obtain the gas phase pressure at the GOC, that is p_{goc}^{gas} .

$$p_{goc}^{gas} = p_{goc}^{oil} + p_{cgoc} \quad (10.7)$$

and the gas phase pressure at any point in the reservoir is therefore determined from:

$$p_{gas} = p_{goc}^{gas} + \gamma^{gas} (z - z_{goc}) \quad (10.8)$$

Where γ^{was} is the water density.

Having calculated the phase pressures at all depths in the reservoir (all grid block cells in the model), we can then calculate the capillary pressures, as the difference between the oil and water pressures, and the oil and gas pressures, depending on the phases present, that is:

$$p_{cwo} = p_{oil} - p_{water} \quad (10.9)$$

$$p_{cgo} = p_{gas} - p_{oil} \quad (10.10)$$

Under the assumption that the reservoir is initially at capillary equilibrium, we now calculate the average water saturation for each grid block in the computational grid on the basis of the capillary pressure at the center of that grid block.

$$S_w = S_w \left(P_{cwo \text{ mid-point of grid cell}} \right) \quad (10.11)$$

The calculation of initial gas saturations is exactly analogous to the above treatment of water saturations.

$$S_g = S_g \left(P_{cgo \text{ mid-point of grid cell}} \right) \quad (10.12)$$

Note also that summation of all fluids in a grid block should sum to one, that is, $S_g + S_o + S_w = 1.0$.

With grid blocks of sufficiently small size, the procedure described above will yield accurate saturation distributions for the static equilibrium situation. Unfortunately, in practice we are often forced to use grid blocks that are much larger than we would like because of computer time and storage considerations. One of the results of using such large blocks is that the saturation distributions and hence the oil- and gas-in-place volumes can sometimes be substantially in error.

This is easily demonstrated by imagining a case where the water-oil contact lies infinitesimally above the center of a 20-foot thick grid block. In this case, the procedure described above would cause the water saturation to be calculated as 1.0, whereas in actual fact it should be very nearly 0.5 (1.0 - Swc). Hence, we would make an error approaching half the pore volume of the grid block in the oil and water in-place in that block. To overcome this we can sub-divide each grid block in the vertical plane, and calculate the saturations for the sub-blocks, with the number of sub-blocks defined via the EQLOPT3 option on the EQLNUM keyword. The simulator can then sum the sub-blocks to obtain the average simulator grid block saturation and thus obtain a more accurate estimate of the volumes in-place. Note this is less of a concern these days due to the fact that most models now use 0.5 to 1.0 metres (one to three ft.) in the vertical resolution due to the improvement in computer efficiency.

There are variations to the above general methodology depending on the data entered, for example:

- 1) If the SWATINIT array, that stipulates the initial water saturation for each cell, has been entered in the PROPS section then the entered capillary pressure data on the saturation tables are re-scaled to honor the SWATINIT array whenever possible, and the re-scaled capillary pressure data are used in the equilibrium initialization calculations. Thus, each cell will have its own scaling of the capillary pressure that needs to be taken into account during the simulation.
- 2) For reservoirs with both oil and dissolved gas phases (OIL and DISGAS keywords in the RUNSPEC section), the dissolved gas ratio, Rs, or the saturation pressure Pb, may also be entered as a function

of depth. See the RSVD and PBVD keywords in the SOLUTION section. If neither of these keywords have been entered then Rs is set to equal to the Rs value at the GOC. This also means that the datum depth on the EQUIL keyword in the SOLUTION section, must equal the GOC depth, in order for the saturated Rs to be calculated from the datum pressure and the associated PVT table.

- 3) Similarly, for reservoirs with both wet gas and vaporized oil (GAS and VAPOIL keywords in the RUNSPEC section), the dissolved vaporized oil (more commonly referred to as condensate) gas ratio, Rv, or the saturation pressure Pd, may also be entered as a function of depth. See the RVVD and PDVD keywords in the SOLUTION section. If neither of these keywords have been entered then Rv is set to equal to the Rv value at the GOC. Again, this also means that the datum depth must set to the GOC depth in order for the saturated Rv to be calculated from the datum pressure and the associated PVT table.

In OPM Flow¹⁵⁸ initial conditions are calculated in a similar manner by using the pressure at a reference depth, the depths of the water-oil and oil-gas contacts, and the capillary pressures at those contact depths. It then solves the following ordinary differential equations:

$$\begin{aligned}\frac{dp_{oil}}{dz} &= \gamma_{oil}(z P_{oil}) g \\ \frac{dp_{gas}}{dz} &= \gamma_{gas}(z P_{gas}) g \\ \frac{dp_{wat}}{dz} &= \gamma_{wat}(z P_{wat}) g\end{aligned}\tag{10.13}$$

Where

γ_i	= oil, gas, water density,
z	= the depth and,
P_i	= the reference pressure depth, and g the gravity term.

The equations are solved numerically using a 4th-order Runge-Kutta¹⁵⁹ and ¹⁶⁰ method, with the order of the phases decided by the location of the datum depth. First, the simulator solves for the phase in whose zone the datum is located, using the datum pressure to bind the pressure solution. Then the simulator solves for phases corresponding to the zones above and below. To tie the phase pressures, the simulator uses the already computed phase pressure(s) evaluated at the zone contact depth and the input capillary pressures.

The same approach is used for the water saturation but the capillary pressure is scaled to match the initial water saturation. Each cell will thus have its own scaling of the capillary pressure that needs to be taken into account during the simulations. Initial fluid properties (GOR, formation volume factors, etc.) are calculated from the cell equilibrium pressure and the entered fluid property tables, as described earlier.

¹⁵⁸ Atgeirr Flø Rasmussen, Tor Harald Sandve, Kai Bao, Andreas Lauser, Joakim Hove, Bård Skaflestad, Robert Klöfkorn, Markus Blatt, Alf Birger Rustad, Ove Sævaareid, Knut-Andreas Lie, Andreas Thune: *The Open Porous Media Flow Reservoir Simulator (2019)*. *Computers & Mathematics with Applications* October 2019.

¹⁵⁹ Runge, Carl David Tolmé (1895), "Über die numerische Auflösung von Differentialgleichungen", *Mathematische Annalen*, Springer, 46 (2): 167–178, doi:10.1007/BF01446807.

¹⁶⁰ Kutta, Martin (1901), "Beitrag zur näherungsweisen Integration totaler Differentialgleichungen", *Zeitschrift für Mathematik und Physik*, 46: 435–453.

10.2 DATA REQUIREMENTS

10.2.1 EQUILIBRIUM INITIALIZATION

For the standard Equilibrium Initialization the EQUIL keyword in the SOLUTION section is used to initialize the model. The keyword contains the datum depth and pressure, oil-water and gas-oil contacts, the capillary pressure values at the fluid contacts, as well as various equilibrium initialization options, including how the dissolve gas and vaporized oil should be calculated, and if a refined in-place volume calculation should be performed. There should be one record for each equilibration region with the number of regions defined by the NTEQUL parameter on the EQLDIMS keyword in the RUNSPEC section.

Note that if a fluid contact is not present in the reservoir, for example if for two phase runs containing only gas and water, the water oil-water contact on the EQUIL keyword should be set to the gas-water contact. Also, in cases where there is no gas cap (or free gas) then gas-oil should be set to a value shallower than the top of the reservoir, and for three phases cases where there is initially no oil zone, as for a gas condensate field for example, the gas-oil contact should be set to the same depth as water-oil contact. Table 10.1 outlines the minimum set of keywords required by OPM Flow in order for the simulator to initialize the model For the standard Equilibrium Initialization option.

No.	SOLUTION Keyword	Equilibrium Initialization Description	Type Of Initialization
1	EQUIL	<i>EQUIL – Define the Equilibration Initialization Data</i> - this is main keyword for the Equilibration initialization that sets the datum depth, the pressure and fluid contacts for an equilibrium region.	Equilibration
2	PBVD	<i>PBVD – Equilibration Bubble-Point versus Depth Tables</i> - used for Live Black Oil equilibration regions to define the saturation pressure versus depth relationship.	Equilibration
3	PDVD	<i>PDVD – Define Equilibration Dew-Point versus Depth Tables</i> - used for Wet Gas equilibration regions to define the saturation pressure versus depth relationship.	Equilibration
4	RSVD	<i>RSVD – Equilibration Dissolved Gas-Oil Ratio (Rs) versus Depth Tables</i> - used for Live Black Oil equilibration regions to define the gas-oil ratio versus depth relationship.	Equilibration
5	RVVD	<i>RVVD – Equilibration Vaporized Oil-Gas Ratio (Rv) versus Depth Tables</i> - use for Wet Gas equilibration regions to declare the condensate-gas ratio versus depth relationship.	Equilibration
6	THPRES	<i>THPRES - Define Equilibration Region Threshold Pressures</i>	Equilibration Enumeration

Notes:

- 1) Only the Equilibration and Restart initialization type of initialization are used in practice.
- 2) For the Equilibration option the PBVD, PDVD, RSVD and RSVVD keywords may be optional if the datum depth on the EQUIL keyword is set equal to the gas-oil contact ("GOC"), otherwise one of these keywords must be used to set the initial RS ("GOR") or RV ("GCR") values for the equilibrium region being defined.
- 3) For Live Black Oil equilibrium regions if the datum depth is not equal to the GOC then one can either use the PBVD keyword to set the saturation pressure (bubble-point) versus depth, or the RSVD keyword to set the GOR versus depth. Similarly for Wet Gas equilibrium regions, one can either use the PDVD keyword to set the saturation pressure (dew-point) versus depth, or RVVD keyword to set the CGR versus depth.
- 4) The THPRES keyword is entirely optional but is commonly used to isolate various equilibrium regions.

Table 10.1: Minimum Set of SOLUTION Equilibrium Keywords Required by OPM Flow

The minimum set of SOLUTION keywords is for general three phases runs, that is where the OIL, DISGAS, GAS, VAPOIL and/or WATER keywords in the RUNSPEC section have been invoked. If additional phases or options have been invoked in the RUNSPEC section, then additional SOLUTION keywords may be required in order to initialize the model. For example, if the BRINE keyword in the RUNSPEC section has been used to activate the BRINE model then the SALTVD keyword in the SOLUTION section may or may not be used to set the initial salt concentration versus depth relationship.

10.2.2 ENUMERATION INITIALIZATION

Enumeration Initialization is based on user supplying all the required data for the simulator to determine the pressures, fluid saturations, and fluid properties for each cell in the model. This is similar to entering the grid property array data in the GRID section, in that all the data is required for all the cells in the model.

To define the cell pressures for all the grid blocks the PRESSURE keyword in the SOLUTION section should be employed. There is also the PRVD keyword in the SOLUTION section that can be used to define a pressure versus depth relationship to enable the simulator to calculate the cell pressures instead of entering the data via the PRESSURE keyword; however, this keyword is not implemented in OPM Flow.

For the fluid saturations, it is only necessary to enter the saturations sufficient to define the system, so for a two phase system it is only necessary to define one phase, normally the water phase, as the other phase will be calculated by the simulator. Similarly, for three phases only two phases must be entered with the water phase always normally entered, and the other phase dependent on the type of reservoir. The data entered is using the SGAS, SOIL and SWAT keywords in the SOLUTION section.

Finally the initial fluid property data needs to be defined based on the fluid phases active in the model. For oil reservoirs either the RS keyword that defines a cell's initial gas-oil ratio, or the PBUB keyword that defines the oil's initial bubble point pressure for each cell are required. For gas reservoirs, either the RV keyword that defines vaporize oil-gas ratio (or condensate gas-oil ratio), or the PDEW keyword that defines the initial dew point pressure for each cell must be entered. Table 10.2 outlines the minimum set of keywords required by OPM Flow in order for the simulator to initialize the model. For the Enumeration Initialization option -all the keywords are in the SOLUTION section.

No.	SOLUTION Keyword	Enumeration Initialization Description	Type Of Initialization
1	PRESSURE	<i>PRESSURE – Define the Initial Equilibration Pressures for All Grid Blocks.</i> This keyword must be present for all Enumeration equilibration regions.	Enumeration
2	PBUB	<i>PBUB – Define the Initial Equilibration Bubble-Point Pressure for All Grid Blocks</i> - used for Live Black Oil equilibration regions to define the saturation pressure for each grid cell.	Enumeration
3	PDEW	<i>PDEW – Define the Initial Equilibration Dew-Point Pressure for All Grid Blocks</i> - used for Wet Gas equilibration regions to set the saturation pressure for each cell.	Enumeration
4	RS	<i>RS – Define the Initial Equilibration GOR (Rs) for All Grid Blocks</i> - used for Live Black Oil equilibration regions to define the gas-oil ratio for each grid blocks.	Enumeration
5	RV	<i>RV – Define the Initial Equilibration CGR (Rv) for All Grid Blocks</i> - use for Wet Gas equilibration regions to set the condensate-gas ratio for each cell.	Enumeration
6	SGAS	<i>SGAS – Define the Initial Equilibration Gas Saturation for All Grid Blocks</i> - if gas is present in the model then the keyword is used to set the initial gas saturation.	Enumeration

No.	SOLUTION Keyword	Enumeration Initialization Description	Type Of Initialization
7	SOIL	<i>SOIL – Define the Initial Equilibration Oil Saturation for All Grid Blocks</i> - if oil is present in the model then the keyword is used to set the initial gas saturation.	Enumeration
8	SWAT	<i>SWAT – Define the Initial Equilibration Water Saturation for All Grid Blocks</i> - since water is normally always present in petroleum reservoirs, this keyword is always used to define the initial water saturation. For two-phase runs, oil-water or gas-water, then it is only necessary to use this keyword, as the second phase saturations are automatically calculated by the simulator.	Enumeration
9	THPRES	<i>THPRES - Define Equilibration Region Threshold Pressures</i>	Equilibration Enumeration
		Microbial Induced Calcite Precipitation Model Enumeration (OPM Flow Specific Keywords)	
1	PRESSURE	<i>PRESSURE – Define the Initial Equilibration Pressures for All Grid Blocks.</i> This keyword must be present for all Enumeration equilibration regions.	Enumeration
2	SBIOF	<i>SBIOF - Define The Initial Equilibration Biofilm Volume Fraction For All Grid Blocks</i>	Enumeration
3	SCALC	<i>SCALC – Define The Initial Equilibration Calcite Volume Fraction For All Grid Blocks</i>	Enumeration
4	SMICR	<i>SMICR – Define The Initial Equilibration Microbial Concentration For All Grid Blocks</i>	Enumeration
5	SOXYG	<i>SOXYG - Define The Initial Equilibration Oxygen Concentration For All Grid Blocks</i>	Enumeration
6	SUREA	<i>SUREA - Define The Initial Equilibration Urea Concentration For All Grid Blocks</i>	Enumeration
<ol style="list-style-type: none"> 1) In an Enumeration type of initialization only sufficient data to define the pressures and fluid distributions are required, for example, in a two phase gas-water run it is only necessary to use the PRESSURE, RV and either SGAS or SWAT keywords to formulate the solution 2) The THPRES keyword is entirely optional but is commonly used to isolate various equilibrium regions. 3) Microbial Induced Calcite Precipitation ("MICP") model is OPM Flow's implementation of MICP used to investigate CO₂ leakage remediation. Note currently the model assumes 100% water saturation and therefore it is not necessary to use the SWAT keyword. 			

Table 10.2: Minimum Set of SOLUTION Enumeration Keywords Required by OPM Flow

Again, the minimum set of SOLUTION keywords is for general three phases runs, that is where the OIL, DISGAS, GAS, VAPOIL and/or WATER keywords in the RUNSPEC section have been invoked. If additional phases or options have been invoked, then additional SOLUTION keywords may be required in order to initialize the model.

10.2.3 RESTART INITIALIZATION

Restart Initialization is performed by the simulator by loading a previously generated RESTART file and equilibrating the model accordingly. In nearly all cases the model will not satisfy the condition of gravity equilibrium; in other words the model is initialized at a point in time when after the model has produced or injected fluids.

To write a restart record to the RESTART file, either the RPTSOL or RPTRST keyword in the SOLUTION section can be used to write the initial restart record at time equal to zero. To write restart records at various time points as the simulation progresses through time, then either the RPTRST or RPTSCHED keywords may be used. Both the RPTSOL and RPTSCHED keywords enable just the basic restart record to be written to the RESTART file, which is generally sufficient in most cases. In comparison with the dedicated RPTRST keyword, RPTRST provides additional functionality on the data to be written to the RESTART file and is therefore the preferred keyword to use. For example to request the standard restart data be written out every month using the RPTRST keyword, one would use the following:

```
--
--      RESTART CONTROL BASIC = 4 (YEARLY) 5 (MONTHLY)
--
RPTRST
      BASIC=5
```

Subsequently one of the monthly restart points can be used to restart the run.

The restart keywords in the various section used to create restart points and to initialize a model initialization are shown in Table 10.3.

No.	Keyword	Restart Creation Description	Keyword Section
1	RPTRST	RPTRST – Define Data to be Written to the RESTART File	SOLUTION
2	RPTSOL	RPTSOL – Define SOLUTION Section Reporting	
3	RPTRST	RPTRST – Define Data to be Written to the RESTART File	SCHEDULE
4	RPTSCHED	RPTSCHED – Define SCHEDULE Section Reporting	
No.	Keyword	Restart Initialization Description	Keyword Section
5	RESTART	<p>RESTART – Restart Run From an Existing Restart File - this keyword is used to initialize the model from a previously run OPM Flow run or from the commercial simulator.</p> <p>Note that due to the complexities of the RESTART file, OPM Flow may not always be able to restart from the commercial simulators RESTART file.</p>	SOLUTION
Notes: <ol style="list-style-type: none"> OPM Flow can only restart runs from a RESTART file, the commercial simulator's SAVE file format is not supported. The THPRES keyword is not required as the data is included in the RESTART file. SCHEDULE section keywords <u>not</u> stored in the RESTART and must therefore remain in the input deck if required include: <ul style="list-style-type: none"> GLOBAL section keywords: COLUMNS, DEBUG, ECHO, EXTRAPMS, FORMFEED, INCLUDE, MESSAGES, NOECHO, NOWARN and the OPTIONS keyword. SCHEDULE section keywords: PIMULTAB, RPTSCHED, RPTRST, SCDPTAB, SCDATAB, TUNING, VFPPROD, and VFPINJ keywords. 			

Table 10.3: SOLUTION Restart Initialization Keywords Required by OPM Flow

In the input deck that is being employed to restart the run, all the equilibration keywords (EQUIL, RSVD, etc.) or the enumeration equilibration keywords (PRESSURE, SGAS, SOIL, SWAT, etc.) in the SOLUTION section used to initialize the model, should be deleted. Secondly, it is good practice to insert the SKIPREST keyword at the very beginning of the SCHEDULE section. The SKIPREST keyword causes the simulator to only read in data it requires for restarting the run up to the RESTART point. This is because certain

keywords always need to be present in a restart run in the SCHEDULE section, as the data is not stored on the RESTART file, for example the VFP tables (VFPPROD and VFPINJ keywords in the SCHEDULE section). The SKIPREST keyword automatically processes the input deck and reads the required data.

10.2.4 SECTION KEYWORDS

A complete list of SOLUTION keywords in alphabetic order is shown in Table 10.4 together with a generalized Topic column that classifies the functionality of the keyword. Note that not all keywords and features listed in Table 10.4 are implemented in OPM Flow. Cells not colored in the No. column indicate the keyword is supported by OPM Flow, cells colored gray indicate that the keyword is not applicable, and finally, cells colored in orange indicate keywords that are not currently supported by OPM Flow.

No.	RUNSPEC Keyword	Description	Topic
1	ADD	<i>ADD – Add a Constant to a Specified Array.</i>	Input
2	ADDREG	<i>ADDREG – Add a Constant to an Array based on a Region Number.</i>	Input
3	APIVD	<i>APIVD - Equilibration Oil API Gravity versus Depth Tables.</i>	API
4	AQANCONL	<i>AQANCONL – Define Analytical Connections to a LGR Grid.</i>	Aquifer
5	AQANNC	<i>AQANNC – Define Analytic Aquifer Non-Neighbor Connections.</i>	Aquifer
6	AQANTRC	<i>AQANTRC - Define Analytic Aquifer Initial Tracer Concentrations.</i>	Aquifer
7	AQUALIST	<i>AQUALIST – Define An Analytic Aquifer Name to Aquifer Numbers .</i>	Aquifer
8	AQUANCON	<i>AQUANCON – Define Analytical Connections to the Grid.</i>	Aquifer
9	AQUCHGAS	<i>AQUCHGAS – Define Constant Pressure Gas Analytical Aquifer Properties.</i>	Aquifer
10	AQUCHWAT	<i>AQUCHWAT – Define Constant Pressure Water Analytical Aquifer Properties.</i>	Aquifer
11	AQUCON	<i>AQUCON – Define Numerical Aquifer Connections to the Grid.</i>	Aquifer
12	AQUCT	<i>AQUCT – Define Carter-Tracy Analytical Aquifers.</i>	Aquifer
13	AQUFET	<i>AQUFET – Define Fetkovich Analytical Aquifer and Connections .</i>	Aquifer
14	AQUFETP	<i>AQUFETP – Define Fetkovich Analytical Aquifers .</i>	Aquifer
15	AQUFLUX	<i>AQUFLUX - Define Constant Flux Analytical Aquifer.</i>	Aquifer
16	BOUNDARY	<i>BOUNDARY – Define a Boundary Box for Printing.</i>	Output
17	BOX	<i>BOX - Define a Range of Grid Blocks to Enter Property Data.</i>	Input
18	COLUMNS	<i>COLUMNS – Define Input File Column Margins.</i>	Input
19	COPY	<i>COPY – Copy Array Data to Another Array.</i>	Input
20	COPYREG	<i>COPYREG – Copy an Array to Another Array based on a Region Number.</i>	Input
21	DATUM	<i>DATUM – Define the Datum Depth for the Model.</i>	Output
22	DATUMR	<i>DATUMR – Define Datum Depths for the FIPNUM Regions.</i>	Output
23	DATUMRX	<i>DATUMRX – Define Datum Depths for the FIP Allocated Regions .</i>	Output
24	DEBUG	<i>DEBUG – Define the Debug Data to be Printed to File.</i>	Output
24	DYNAMICR	<i>DYNAMICR – Start of Dynamic Region Parameter Definition.</i>	Input
25	ECHO	<i>ECHO – Activate Echoing of User Input Files to the Print File.</i>	Output
26	END	<i>END – Define the End of the Input File.</i>	Input

No.	RUNSPEC Keyword	Description	Topic
27	ENDBOX	<i>ENDBOX – Define the End of the BOX Defined Grid.</i>	Input
28	ENDDYN	<i>ENDDYN– End of Dynamic Region Parameter Definition.</i>	Input
29	ENDFIN	<i>ENDFIN – End the Definition of a Local Grid Refinement.</i>	LGR
30	ENDINC	<i>ENDINC – Define the End of an Include File.</i>	Input
31	ENDSKIP	<i>ENDSKIP – DeActivate Skipping of Keywords and Input Data.</i>	Input
32	EQUALREG	<i>EQUALREG – Sets an Array to a Constant by Region Number.</i>	Input
33	EQUALS	<i>EQUALS – Sets a Specified Array to a Constant.</i>	Input
34	EQUIL	<i>EQUIL – Define the Equilibration Initialization Data.</i>	Equilibration
35	EXTRAPMS	<i>EXTRAPMS – Activate Extrapolation Warning Messages.</i>	Output
36	FILEUNIT	<i>FILEUNIT – Activate Unit Consistency Checking.</i>	Input
37	FORMFEED	<i>FORMFEED – Defined the Print File Form-Feed Character.</i>	Output
38	GASCONC	<i>GASCONC – Define the Initial Equilibration Coal Gas Concentration for All Grid Blocks.</i>	CBM
39	GASSATC	<i>GASSATC – Define the Initial Equilibration Saturated Coal Gas Concentration for All Grid Blocks.</i>	CBM
40	GCVD	<i>GCVD – Define Equilibration Coal Gas Concentration versus Depth Tables.</i>	CBM
41	GETDATA	<i>GETDATA – Load and Assign Data Array from INIT or RESTART Files.</i>	Input
42	GETGLOB	<i>GETGLOB – Activate Loading of Global Grid Restart Data Option.</i>	Input
43	GI	<i>GI - Define the Initial Equilibration Gi Values for All Grid Blocks.</i>	Enumeration
44	HMAQUCT	<i>HMAQUCT – History Match Carter-Tracy Aquifer Gradient Parameters.</i>	Gradient
45	HMAQUFET	<i>HMAQUFET – History Match Fetkovich Aquifer Gradient Parameters.</i>	Gradient
46	HMMLCTAQ	<i>HMMLCTAQ – History Match Carter-Tracy Aquifer Gradient Multipliers.</i>	Gradient
47	HMMLFTAQ	<i>HMMLFTAQ – History Match Fetkovich Aquifer Gradient Multipliers.</i>	Gradient
48	HMMLTWCN	<i>HMMLTWCN – History Match Well Connection and Skin Multipliers.</i>	Gradient
49	HMWELCON	<i>HMWELCON – History Match Well Connection and Skin Parameters.</i>	Gradient
50	IMPORT	<i>IMPORT – Import Grid File Data at the Current Position.</i>	Input
51	INCLUDE	<i>INCLUDE – Load Another Data File at the Current Position.</i>	Input
52	MESSAGE	<i>MESSAGE – Output User Message.</i> The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files.	Output
53	MESSAGES	<i>MESSAGES – Define Message Print Limits and Stop Limits.</i> The MESSAGES keyword defines the print and stops levels for various messages.	Output
54	MULTIPLY	<i>MULTIPLY – Multiply a Specified Array by a Constant.</i>	Input

No.	RUNSPEC Keyword	Description	Topic
55	MULTIREG	<i>MULTIREG – Multiply an Array by a Constant based on a Region Number.</i>	Input
56	NOECHO	<i>NOECHO – Deactivate Echoing of User Input Files to the Print File.</i>	Output
57	NOHMD	<i>NOHMD – Deactivate History Match Gradient Derivative Calculations.</i>	Gradient
58	NOHMO	<i>NOHMO – Deactivate History Match Gradient Derivative Calculations (Alias).</i>	Gradient
59	NOWARN	<i>NOWARN – Deactivate Warning Messages.</i>	Output
60	OILAPI	<i>OILAPI – Define the Initial Equilibration Oil API for All Grid Blocks.</i>	API
61	OPERATE	<i>OPERATE – Define Mathematical Operations on Arrays.</i>	Input
62	OPERATER	<i>OPERATER – Define Mathematical Operations on Arrays by Region.</i>	Input
63	OUTSOL	<i>OUTSOL – Define Data to be Written to the RESTART File (Retired).</i>	Output
64	PBUB	<i>PBUB – Define the Initial Equilibration Bubble-Point Pressure for All Grid Blocks.</i>	Enumeration
65	PBVD	<i>PBVD – Equilibration Bubble-Point versus Depth Tables.</i>	Equilibration
66	PDEW	<i>PDEW – Define the Initial Equilibration Dew-Point Pressure for All Grid Blocks.</i>	Enumeration
67	PDVD	<i>PDVD – Define Equilibration Dew-Point versus Depth Tables.</i>	Equilibration
68	PRESSURE	<i>PRESSURE – Define the Initial Equilibration Pressures for All Grid Blocks.</i>	Enumeration
69	PRVD	<i>PRVD – Define the Initial Equilibration Pressures versus Depth.</i>	Enumeration
70	PYEND	<i>PYEND – End the Definition of a PYINPUT Section.</i> This keyword is an OPM Flow specific keyword for the simulator's scripting facility using the standard Python interpreter.	Action
71	PYINPUT	<i>PYINPUT – Define the Start of a PYINPUT Section.</i> This keyword is an OPM Flow specific keyword for the simulator's scripting facility using the standard Python interpreter.	Action
72	RAINFALL	<i>RAINFALL – Constant Flux Aquifer Rainfall Flux by Month.</i>	Aquifer
73	RBEDCONT	<i>RBEDCONT – Define River Grid Block Contact Area versus Depth.</i>	Rivers
74	REFINE	<i>REFINE – Start the Definition of a Local Grid Refinement.</i>	LGR
75	RESTART	<i>RESTART – Restart Run From an Existing Restart File.</i>	Restart
76	RIVERSYS	<i>RIVERSYS - Define River System (Branch Structure and Boundary Conditions).</i>	Rivers
77	RPTRST	<i>RPTRST – Define Data to be Written to the RESTART File.</i>	Output
78	RPTSOL	<i>RPTSOL – Define SOLUTION Section Reporting.</i>	Output
79	RS	<i>RS – Define the Initial Equilibration GOR (Rs) for All Grid Blocks.</i>	Enumeration
80	RSVD	<i>RSVD – Equilibration Dissolved Gas-Oil Ratio (Rs) versus Depth Tables.</i>	Equilibration

No.	RUNSPEC Keyword	Description	Topic
81	RTEMP	<i>RTEMP - Define the Initial Reservoir Temperature for the Model.</i>	Thermal
82	RTEMPA	<i>RTEMPA - Define the Initial Reservoir Temperature for the Model.</i>	Thermal
83	RTEMPVD	<i>RTEMPVD - Define the Initial Reservoir Temperature versus Depth Tables.</i>	Thermal
84	RV	<i>RV – Define the Initial Equilibration CGR (Rv) for All Grid Blocks.</i>	Enumeration
85	RVVD	<i>RVVD – Equilibration Vaporized Oil-Gas Ratio (Rv) versus Depth Tables.</i>	Equilibration
86	SALT	<i>SALT – Define the Initial Equilibration Salt Concentration for All Grid Blocks.</i>	Brine
87	SALTPVD	<i>SALTPVD – Equilibration Salt Precipitated Concentration versus Depth Tables.</i> This is an OPM Flow specific keyword for the simulator's Salt Precipitation Model that is activated by the PRECSALT keyword and declaring that vaporized water is present in the run via the VAPWAT in the RUNSPEC section.	Water Vaporization
88	SALTREST	<i>SALTREST – Define the Restart Salt Concentration for All Grid Blocks.</i>	Brine
89	SALTSOL	<i>SALTSOL – Define the Salt Solubility Limit for All Cells.</i> This is an OPM Flow specific keyword for the simulator's Salt Precipitation Model that is activated by the PRECSALT keyword and declaring that vaporized water is present in the run via the VAPWAT in the RUNSPEC section.	Water Vaporization
90	SALTVD	<i>SALTVD – Equilibration Salt Concentration versus Depth Tables.</i>	Brine
91	SCVD	<i>SCVD – Define Equilibration Coal Solvent Concentration versus Depth Tables.</i>	CBM
92	SFOAM	<i>SFOAM – Define the Initial Equilibration Foam Concentration for All Grid Blocks.</i>	Enumeration
93	SGAS	<i>SGAS – Define the Initial Equilibration Gas Saturation for All Grid Blocks.</i>	Enumeration
94	SKIP	<i>SKIP – Activate Skipping of All Keywords and Input Data.</i>	Input
95	SKIP100	<i>SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data.</i>	Input
96	SKIP300	<i>SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data.</i>	Input
97	SOIL	<i>SOIL – Define the Initial Equilibration Oil Saturation for All Grid Blocks.</i>	Enumeration
98	SOLUTION	<i>SOLUTION - Define the Start of the SOLUTION Section of Keywords.</i>	Input
99	SOLVCONC	<i>SOLVCONC – Define the Initial Coal Solvent Concentration for All Grid Blocks.</i>	CBM
100	SOLVFRAC	<i>SOLVFRAC – Define the Initial Gas Solvent Fraction for All Grid Blocks</i>	Solvent
101	SPOLY	<i>SPOLY – Define the Initial Equilibration Polymer Concentration for All Grid Blocks.</i>	Polymer
102	SSOL	<i>SSOL – Define the Initial Equilibration Solvent Saturation for All Grid Blocks.</i>	Solvent

No.	RUNSPEC Keyword	Description	Topic
103	SURF	<i>SURF – Define the Initial Equilibration Polymer Concentration for All Grid Blocks.</i>	Surfactant
104	SWAT	<i>SWAT – Define the Initial Equilibration Water Saturation for All Grid Blocks.</i>	Enumeration
105	TBLK	<i>TBLK – Define Tracer Initial Grid Block Concentrations.</i>	Tracers
106	TEMPI	<i>TEMPI – Define the Initial Temperature Values for All Cells.</i>	Thermal
107	TEMPVD	<i>TEMPVD - Define the Initial Reservoir Temperature versus Depth Tables.</i>	Thermal
108	THPRES	<i>THPRES - Define Equilibration Region Threshold Pressures.</i>	Equilibration
109	TVDP	<i>TVDP – Define the Initial Equilibration Tracer Saturation versus Depth Functions.</i>	Tracers
110	VAPPARS	<i>VAPPARS – Oil Vaporization Parameters.</i>	Phases
111	VISDATES	<i>VISDATES – Define External Reservoir Geo-Mechanics VISAGE Stress Dates.</i>	Geo-Mechanics
112	VISOPTS	<i>VISOPTS – Define External Reservoir Geo-Mechanics VISAGE Options.</i>	Geo-Mechanics
113	WARN	<i>WARN – Activate Warning Messages.</i>	Output

Notes:

- 1) Note that not all keywords and features listed above are implemented in OPM Flow. Cells not colored in the No. column indicate the keyword is supported, cells colored gray indicate that the keyword is not applicable, and finally, cells colored in orange indicate keywords that are not supported by OPM Flow.
- 2) For the Topic column the definition of the entries is defined as follows:

<ol style="list-style-type: none"> 1) Action: Keywords associated with the ACTIONX or OPM Flow's Python facility. 2) API: API option equilibration keywords. 3) Brine: BRINE option equilibration keywords. 4) CBM: COAL BED METHANE equilibration keyword (not implemented in OPM Flow). 5) Enumeration: Enumeration equilibration keywords. 6) Equilibration: Equilibration keywords. 7) Geo-Mechanics: GEO_MECHANICS equilibration keywords (this option is not available in OPM Flow). 8) Gradient: GRADIENT equilibration keywords., used in history matching (this option is not available in OPM Flow). 9) Input: Input control and options. 	<ol style="list-style-type: none"> 10) LGR: LOCAL GRID REFINEMENT equilibration keywords (not implemented in OPM Flow). 11) Output: Output control and options. 12) Phases: Equilibration keywords related to the active phases. 13) Polymer: POLYMER equilibration keywords. 14) Restart: Restart equilibration keywords. 15) Rivers Keywords associated with the RIVERS facility (not implemented in OPM Flow). 16) Solvent: SOLVENT equilibration keywords. 17) Thermal: THERMAL equilibration keywords. 18) Tracers: TRACER equilibration keywords. 19) Water Vaporization: WATER VAPORIZATION equilibration keywords.
---	--

Table 10.4: Alphabetic List of SOLUTION Keywords

Note that a number of keywords can be classified under several topics, so the Topic column should only be used as a general reference guide.

Example

The first example is taken from the Norne field, in which the model is in SI units, and the NTEQUL varibale on the EQLDIMS keyword in the RUNSPEC section has been set to five for five equilibration regions in the model.

```
--
--          DATUM   DATUM   OWC   PCOW   GOC   PCGO   RS   RV   N
--          DEPTH   PRESS   DEPTH   ----   DEPTH   ----   OPT  OPT  OPT
EQUIL
          2582.0  268.56  2692.0   0.0  2582.0  0.0    1    0    0 / C+D:Garn
          2500.0  263.41  2585.5   0.0  2500.0  0.0    2    0    0 / G:  Garn
          2582.0  269.46  2618.0   0.0  2582.0  0.0    3    0    0 / E:  Garn
          2200.0  236.92  2400.0   0.0  2200.0  0.0    4    0    0 / G:Ile-Tilje
          2585.0  268.77  2693.3   0.0  2585.0  0.0    5    0    0 / C+D+E:Ile-Ti

--
--          DEPTH   RS
--                      sm3/sm3
--          -----
RSVD
          2582.0      120.25
          2597.0      110.00
          2660.7      106.77
          2697.0      106.77
--                      / RS VS DEPTH EQUIL REGN 01
--          -----
          2500.0      94.50
          2510.0      94.30
          2590.0      94.10
--                      / RS VS DEPTH EQUIL REGN 02
--          -----
          2582.0      120.25
          2597.0      110.00
          2660.7      106.77
          2697.0      106.77
--                      / RS VS DEPTH EQUIL REGN 03
--          -----
          2500.0      94.50
          2510.0      94.30
          2590.0      94.10
--                      / RS VS DEPTH EQUIL REGN 04
--          -----
          2585.9      120.29
          2599.9      110.00
          2663.6      106.77
          2699.9      106.77
--                      / RS VS DEPTH EQUIL REGN 05
--
--          EQLNUM  EQLNUM  THPRES
--          FROM    TO      VALUE
THPRES
          1         2        0.588031
          2         1        0.588031
          1         3        0.787619
          3         1        0.787619
          1         4        7.000830
          4         1        7.000830
/
```

Note that even though the datum depth are the gas-oil contact depths are the same the RSVD keyword has been used to defined the RS (GOR) versus depth relationship. Secondly, the THPRES keyword has been used to set a threshold pressure between the various equilibration regions to prevent flow between the regions until the threshold is exceeded.

The next example is taken from a field containing only dead¹⁶¹ oil field with one equilibration region and Fetkovich¹⁶² analytical aquifer connected on the flanks of the field.

¹⁶¹ "Dead" oil is oil that it contains no dissolved gas or a relatively thick oil or residue that has lost its volatile components.

¹⁶² Fetkovich, M. J. "A Simplified Approach to Water Influx Calculations - Finite Aquifer Systems," *Journal of Petroleum Technology*, (1971) 23, No. 7, 814-828.

```
--
--      DATUM      DATUM      OWC      PCOW      GOC      PCGO      RS      RV      N
--      DEPTH      PRESS      DEPTH      ----      DEPTH      ----      OPT      OPT      OPT
EQUIL      3707      1609      3707      0      1*      1*      0      0      0 /
--
--      DATUM
--      DEPTH
DATUM      3500 / DATUM DEPTH
--
--      FETKOVICH AQUIFER DESCRIPTION
--
--      ID      DATUM      AQF      AQF      AQF      AQF      AQF      SALT
--      NUM      DEPTH      PRESS      VOLM      COMP      PI      PVT      CONC
--
--      AQUFETP
--      1      1130.      1*      1.0E+12 3.0E-5 500E3 1      0.0      /
/
--
--      ANALYTIC AQUIFER CONNECTION
--
--      ID      ----- BOX ----- CONNECT AQF      AQF      ADJOIN
--      NUMBER I1 I2 J1 J2 K1 K2 FACE INFLX MULTI CELLS
--
--      ANALYTIC AQUIFER CONNECTION
--
--      ID      ----- BOX ----- CONNECT AQF      AQF      ADJOIN
--      NUMBER I1 I2 J1 J2 K1 K2 FACE INFLX MULTI CELLS
--
--      AQUANCON
--      1      57 57 28 36 46 58 'I+' 1* 1* 'NO' /
--      1      1 1 14 14 1 29 'J-' 1* 1* 'NO' / NORTHERN
--      1      2 2 12 12 1 29 'J-' 1* 1* 'NO' /
--      1      3 3 10 10 1 29 'J-' 1* 1* 'NO' /
--      1      4 5 9 9 1 29 'J-' 1* 1* 'NO' /
--      1      6 6 8 8 1 29 'J-' 1* 1* 'NO' /
--      1      14 14 4 4 1 29 'J-' 1* 1* 'NO' /
--      1      15 15 2 2 1 29 'J-' 1* 1* 'NO' /
--      1      16 77 1 1 1 29 'J-' 1* 1* 'NO' /
--      1      1 1 14 136 1 29 'I-' 1* 1* 'NO' / WESTERN
--      1      13 13 137 141 1 29 'I-' 1* 1* 'NO' /
--      1      12 12 142 143 1 29 'I-' 1* 1* 'NO' /
--      1      11 11 144 144 1 29 'I-' 1* 1* 'NO' /
--      1      10 10 145 145 1 29 'I-' 1* 1* 'NO' /
--      1      9 9 146 146 1 29 'I-' 1* 1* 'NO' /
--      1      8 8 147 147 1 29 'I-' 1* 1* 'NO' /
```

Notice how the gas-oil contact has been defaulted as there is no gas in the model only oil and water. Alternatively, one could located the gas-oil contact above the reservoir. Secondly the DATUM keyword has been used to reset the datum depth for pressure reporting.

10.3 KEYWORD DEFINITIONS

10.3.1 ADD – ADD A CONSTANT TO A SPECIFIED ARRAY

The ADD keyword adds a constant to a specified array or part of an array. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the ADD keyword is being applied.

See [ADD – Add a Constant to a Specified Array](#) in the GRID section for a full description.

10.3.2 ADDREG – ADD A CONSTANT TO AN ARRAY BASED ON A REGION NUMBER

The ADDREG keyword adds a constant to a specified array or part of an array based on cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the ADDREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the ADDREG keyword is being used.

See [ADDREG – Add a Constant to an Array based on a Region Number](#) in the GRID section for a full description.

10.3.3 APIVD - EQUILIBRATION OIL API GRAVITY VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The APIVD keyword defines the oil API gravity versus depth tables for each equilibration region when API Tracking has been activated by the API keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding API gravity values, API.			None
		feet	m	cm	
2	API	A columnar vector of real values that defines the API gravity at the corresponding DEPTH. The American Petroleum Institute (“API”) classifies oils based on an API gravity (γ_{API}), or degrees API ($^{\circ}API$), the relationship between relative density (γ_o) of oil and API gravity (γ_{API}) is given by: $\gamma_{API} = \frac{141.5}{\gamma_o} - 131.5$			None
		$^{\circ}API$	$^{\circ}API$	$^{\circ}API$	

Notes:

- 1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.5:APIVD Keyword Description

Example

Given NTEQUL equals three and NDRXVD is greater than or equal to two on the EQLDIMS keyword in the RUNSPEC section, then the following example defines the bubble-point versus depth functions.

```
--
--      DEPTH      API
--      GRAVITY
--      -----
APIVD
      3000.0      41.10
      8000.0      41.10                               / API VS DEPTH EQUIL REGN 01
--      -----
      3000.0      41.10
      8000.0      38.50                               / API VS DEPTH EQUIL REGN 02
--      -----
      3000.0      41.10
      8000.0      38.50                               / API VS DEPTH EQUIL REGN 03
```

Here three tables are entered; the first table has a constant API gravity versus depth relationship for equilibration region number one and the other two equilibration regions have the API gravity varying with depth.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.4 AQANCONL – DEFINE ANALYTICAL CONNECTIONS TO A LGR GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

AQANCONL keyword defines how analytical aquifers are connected to a Local Grid Refinement (“LGR”) simulation grid, this includes Carter-Tracy and Fetkovich analytical aquifers, both of which are implemented in OPM Flow. However, LGRs have not been implemented in OPM Flow.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	AQUID	AQUID is a positive integer greater than or equal to one and less than the maximum number of analytical aquifers as defined by the NANAQU variable on the AQUIDIMS keyword in the RUNSPEC section, that defines the aquifer to be connected to the grid.			None
2	LGRNAME	LGRNAME is a character string of up to eight characters that defines the name of the LGR to be connected to AQUID.			None
3	I1	A positive integer that defines the lower bound of the cells in the I-direction to be connected to the LGR grid and must be greater than or equal to one and less than or equal to I2 and NX.			I
4	I2	A positive integer that defines the upper bound of the of the cells in the I-direction to be connected to the LGR grid and must be greater than or equal to I1 and less than or equal to NX			NX
5	J1	A positive integer that defines the lower bound of the cells in the J-direction to be connected to the LGR grid and must be greater than or equal to one and less than or equal to J2 and NY.			I
6	J2	A positive integer that defines the upper bound of the cells in the J-direction to be connected to the LGR grid and must be greater than or equal to J1 and less than or equal to NY.			NY
7	K1	A positive integer that defines the lower bound of the cells in the K-direction to be to be connected to the LGR grid and must be greater than or equal to one and less than or equal to K2 and NZ.			I
8	K2	A positive integer that defines the upper bound of the cells in the K-direction to be connected to the LGRg rid and must be greater than or equal to K1 and less than or equal to NZ.			NZ
9	AQUFACE	AQUFACE is a character string that sets the connection “face” of the cells declared by this record and should be set to one of the following: 1) X+, Y+, or Z+ for the positive direction, or X-, Y- or Z- for the negative direction transmissibilities. 2) I+, J+, or K+ for the positive direction, or I-, J- or K- for the negative direction transmissibilities.			None
10	AQUFLUX	AQUFLUX is a positive real value that sets the fraction of the total influx between the aquifer and the defined cells declared on this keyword. If defaulted the cell face for each cell is applied and if a values is declared then then this values is applied to all cells declared by this record.			I*
		ft ²	m ²	cm ²	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
11	AQUCOEF	AQUCOEF is a real positive values that scales the calculated connection between the aquifer and the cells declared on this record.			1.0
		dimensionless	dimensionless	dimensionless	
12	AQUOPT	AQUOPT is a character string that sets the cell face connection and should be set to one of the following: <div><div>1) YES: Aquifer connections <u>can adjoint</u> to active cells allowing for connections inside the LGR grid. It is not recommended to use this option without thoroughly checking the connections in the model.</div><div>2) NO: Aquifer connections <u>cannot adjoint</u> to active cells preventing connections inside the LGR grid. This is the recommended and the default value.</div></div>			NO

Notes:

1) Where NX, NY and NZ are the dimensions of the LGR grid as defined on the CARFIN or RADFIN keywords in the GRID section.

2) Each record must be terminated by a “/” and the keyword is terminated by a “/”.

Table 10.6: AQANCONL Keyword Description

Example

The following example defines aquifer number one connected to the I+ face of LGR called LGROP01, LGROP01 must have been previously defined via the CARFIN or RADFIN keywords in the GRID section.

```
--
--                               LGR ANALYTIC AQUIFER CONNECTION
--
--      ID  LGR  ----- BOX -----  CONNECT  AQF  AQF  ADJOIN
--      NUM NAME      I1  I2  J1  J2   K1  K2   FACE   INFLX MULTI CELLS
AQANCONL
      1    LGROP01    1    1    1   25    1    2   'I+'    1*    1*    'NO' /
/
```

See the AQUCT keyword in the GRID section for a complete example on defining and connecting a Carter-Tracy aquifer to a simulation grid.

10.3.5 AQANNC – DEFINE ANALYTIC AQUIFER NON-NEIGHBOR CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

AQANNC defines the analytic aquifer non-neighbor connections.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.6 AQANTRC - DEFINE ANALYTIC AQUIFER INITIAL TRACER CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AQANTRC keyword defines the initial tracer concentrations for analytic aquifers that have previously been defined by the AQCT keyword in the GRID, PROPS, or SOLUTION sections for Carter-Tracy analytical aquifers, or the AQFET and AQFETP keywords in the SOLUTION section for Fetkovich analytical aquifers.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

10.3.7 AQUALIST – DEFINE AN ANALYTIC AQUIFER NAME TO AQUIFER NUMBERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, AQUALIST, defines an analytic aquifer name to aquifer numbers for greater readability in the output.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.8 AQUANCON – DEFINE ANALYTICAL CONNECTIONS TO THE GRID

The AQUANCON keyword defines how analytical aquifers are connected to the simulation grid, this includes Carter-Tracy and Fetkovich analytical aquifers, both of which are implemented in OPM Flow.

See [AQUANCON – Define Analytical Connections to the Grid](#) in the GRID section for a full description.

10.3.9 AQUCHGAS – DEFINE CONSTANT PRESSURE GAS ANALYTICAL AQUIFER PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AQUCHGAS keyword defines the properties of constant pressure gas analytical aquifers.

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.10 AQUCHWAT – DEFINE CONSTANT PRESSURE WATER ANALYTICAL AQUIFER PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AQUCHWAT keyword defines the properties of constant pressure water analytical aquifers.

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.11 AQUCON – DEFINE NUMERICAL AQUIFER CONNECTIONS TO THE GRID

AQUCON keyword defines how numerical aquifers are connected to the simulation grid.

See [AQUCON – Define Numerical Aquifer Connections to the Grid](#) in the GRID section for a full description.

10.3.12 AQUCT – DEFINE CARTER-TRACY ANALYTICAL AQUIFERS

The AQUCT keyword defines a Carter Tracy aquifer, the properties of the aquifer, including the Carter-Tracy aquifer influence function associated with the aquifer, defined by the AQTAB keyword in the PROPS section.

See [AQUCT – Define Carter-Tracy Analytical Aquifers](#) in the GRID section for a full description

10.3.13 AQUFET – DEFINE FETKOVICH ANALYTICAL AQUIFER AND CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AQUFET keyword defines Fetkovich¹⁶³ analytical aquifers, the aquifer properties, together with the cell connections to the aquifer. Each row entry in the AQUFETP keyword defines one Fetkovich analytical aquifer and one cell face to be connected to the aquifer.

This keyword is ignored by OPM Flow and has no effect on the simulation; however, see the AQUFETP keyword in the SOLUTION section and AQUANCON keyword in the GRID section, on how to define and connect Fetkovich analytical aquifers.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DATUM	DATUM is a single positive value that defines the Fetkovich reference datum depth for PRESS.			None
		feet	m	cm	
2	PRESS	PRESS is a single positive value that defines the aquifer pressure at DATUM. If PRESS is defaulted then the simulator will set the aquifer's initial reservoir pressure to be in equilibrium with the cells the aquifer is contacted to. Defaulting this parameter will avoid inconsistent equilibration pressures between the reservoir cells and the aquifer.			I*
		psia	barsa	atma	
3	PORV	A real positive value that defines the initial water volume of the aquifer.			None
		stb	sm ³	scc	
4	COMP	COMP is a real number defining the total compressibility (C_t) of the aquifer, that is the rock compressibility (C_f) plus the water compressibility (C_w) at the aquifer datum pressure (DATUM) and is defined as: $C_t = C_f + C_w$			None
		l/psia	l/barsa	l/atma	
5	PI	A real positive number that defines the aquifer productivity index based on the aquifer influx rate per unit pressure drop.			None
		stb/d/psia	sm ³ /barsa	scc/hr/atma	
6	PVTW	A positive integer that defines the aquifer's PVTW water property table.			I
7	I1	A positive integer that defines the lower bound of the cells in the I-direction to be connected to the aquifer and must be greater than or equal to one and less than or equal to I2 and NX.			I
8	I2	A positive integer that defines the upper bound of the of the cells in the I-direction to be connected to the aquifer and must be greater than or equal to I1 and less than or equal to NX			NX

¹⁶³ Fetkovich, M. J. "A Simplified Approach to Water Influx Calculations - Finite Aquifer Systems," *Journal of Petroleum Technology*, (1971) 23, No. 7, 814-828.

No.	Name	Description			Default
		Field	Metric	Laboratory	
9	J1	A positive integer that defines the lower bound of the cells in the J-direction to be connected to the aquifer and must be greater than or equal to one and less than or equal to J2 and NY.			1
10	J2	A positive integer that defines the upper bound of the cells in the J-direction to be connected to the aquifer and must be greater than or equal to J1 and less than or equal to NY.			NY
11	K1	A positive integer that defines the lower bound of the cells in the K-direction to be connected to the aquifer and must be greater than or equal to one and less than or equal to K2 and NZ.			1
12	K2	A positive integer that defines the upper bound of the cells in the K-direction to be connected to the aquifer and must be greater than or equal to K1 and less than or equal to NZ.			NZ
13	AQUFACE	AQUFACE is a character string that sets the connection “face” of the cells declared by this record and should be set to one of the following: 1) X+, Y+, or Z+ for the positive direction, or X-, Y- or Z- for the negative direction transmissibilities. 2) I+, J+, or K+ for the positive direction, or I-, J- or K- for the negative direction transmissibilities.			None
14	SALTCON	SALTCON is a real positive number that defines the initial salt concentration in the aquifer. This variable is ignored by OPM Flow.			0.0
		lb/stb	kg/sm ³	gm/scc	
Notes: 1) Where NX, NY and NZ are the dimensions of the model as defined on the DIMENS keyword in the RUNSPEC section. 2) The keyword is followed by up to NANAQU records as defined on the AQUODIMS keyword in the RUNSPEC section 3) The keyword should be terminated by a “/”.					

Table 10.7: AQUIFET Keyword Description

Note this keyword should only be used in equilibration and enumerated initialize runs, that is it should be omitted from RESTART runs.

Note

If the model is unstable then this may be due to an aquifer not being in equilibrium with the connecting reservoir blocks, for example the aquifer is connected to only hydrocarbon reservoir cells. Try commenting out the aquifer and see if this resolves the instabilities.

10.3.14 AQUFETP – DEFINE FETKOVICH ANALYTICAL AQUIFERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The AQUFETP keyword defines Fetkovich¹⁶⁴ analytical aquifers and the aquifer properties. Each row entry in the AQUFETP keyword defines one Fetkovich analytical aquifer. In order to fully define this type of aquifer, the aquifer must be connected to the reservoir using the AQUANCON keyword in the GRID or SOLUTION sections.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	AQUID	A positive integer greater than or equal to one and less than or equal to NANAQU on the AQUIDIMS keyword in the RUNSPEC section, that defines the Fetkovich aquifer number			I
2	DATUM	DATUM is a single positive value that defines the Fetkovich reference datum depth for PRESS.			None
		feet	m	cm	
2	PRESS	PRESS is a single positive value that defines the aquifer pressure at DATUM. If PRESS is defaulted then the simulator will set the aquifer's initial reservoir pressure to be in equilibrium with the cells the aquifer is contacted to. Defaulting this parameter will avoid inconsistent equilibration pressures between the reservoir cells and the aquifer.			I*
		psia	barsa	atma	
4	PORV	A real positive value that defines the initial water volume of the aquifer.			None
		stb	sm ³	scc	
5	COMP	COMP is a real number defining the total compressibility (C_t) of the aquifer, that is the rock compressibility (C_f) plus the water compressibility (C_w) at the aquifer datum pressure (DATUM) and is defined as: $C_t = C_f + C_w$			None
		l/psia	l/barsa	l/atma	
6	PI	A real positive number that defines the aquifer productivity index based on the aquifer influx rate per unit pressure drop.			None
		stb/d/psia	sm ³ /barsa	scc/hr/atma	
7	PVTW	A positive integer that defines the aquifer's PVTW water property table.			I
8	SALTCON	SALTCON is a real positive number that defines the initial salt concentration in the aquifer. This variable is ignored by OPM Flow.			0.0
		lb/stb	kg/sm ³	gm/scc	

¹⁶⁴ Fetkovich, M. J. "A Simplified Approach to Water Influx Calculations - Finite Aquifer Systems," *Journal of Petroleum Technology*, (1971) 23, No. 7, 814-828.

No.	Name	Description			Default
		Field	Metric	Laboratory	
9	TEMP	TEMP is a real positive number that defines the initial temperature of the aquifer at DATUM. This variable is ignored by OPM Flow.			I*
		°F	°C	°C	

Notes:

- 1) The keyword is followed by up to NANAQU records as defined on the AQUDIMS keyword in the RUNSPEC section
- 2) Each record is terminated by a "/" and the keyword should be terminated by a "/". Note the commercial simulator only requires a terminating "/" if the number of records on this keyword are less than NANAQU on the AQUDIMS keyword in the RUNSPEC section. If the number of records are equal to NANAQU and a terminating "/" has been entered then the commercial simulator will issue a warning message; however, the commercial simulator run will proceed as expected.

Table 10.8: AQUIFETP Keyword Description

Note this keyword should only be used in equilibration and enumerated initialize runs, that is it should be omitted from RESTART runs.

Note

If the model is unstable then this may be due to an aquifer not being in equilibrium with the connecting reservoir blocks, for example the aquifer is connected to some hydrocarbon reservoir cells. Try commenting out the aquifer and see if this resolves the instabilities, and if so amend the aquifer connections accordingly.

Example

Given the following grid and aquifer dimensions in the RUNSPEC section:

```

-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC  --
--      MAX      MAX      MAX
--      NDIVIX   NDIVIY   NDIVIZ
DIMENS
--      20      1      5
--
--      AQF      AQF      AQF      AQF      AQF      AQF      AQF      AQF      AQF
--      MXAQN    MXNAQC  NIFTBL  NRIFTB  NANAQU  NCAMAX  MXNALI  MXAAQL
AQUDIMS
--      1*      1*      5      100     1      1*      1*      1*
--
-- =====

```


The Fetkovich analytical aquifer is defined in the SOLUTION sections as:

```
-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION --
--
-- FETKOVICH AQUIFER DESCRIPTION
--
-- ID    DATUM    AQF    AQF    AQF    AQF    AQF    SALT
-- NUM  DEPTH    PRESS  VOLM   COMP  PI     PVT    CONC
--
--
AQUFETP
      1    1130.    1*     1.0E+12 3.0E-5  500E3  1     0.0
/
```

And the connection of the aquifer is set in the GRID or the SOLUTION sections as:

```
--
--
-- ANALYTIC AQUIFER CONNECTION
--
-- ID    BOX    CONNECT  AQF    AQF    ADJOIN
-- NUMBER I1  I2  J1  J2  K1  K2  FACE  INFLX  MULTI  CELLS
--
AQUANCON
      1    1    1    1    1    1    1    J-    1.0    1.0    'NO'
/
```

Here one Fetkovich analytical aquifer is connected to a single cell (1, 1, 1) at the J- face (or X- face) of the cell.

10.3.15 AQUIFLUX - DEFINE CONSTANT FLUX ANALYTICAL AQUIFER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AQUIFLUX keyword defines the properties of Constant Flux Analytical Aquifers.

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.16 BOUNDARY – DEFINE A BOUNDARY BOX FOR PRINTING

The BOUNDARY keyword defines a rectangular grid for printing various arrays to the output print file (*.PRT); thus, avoiding printing all the elements in the selected array.

See [BOUNDARY – Define a Boundary Box for Printing](#) in the GRID section for a full description.

10.3.17 BOX - DEFINE A RANGE OF GRID BLOCKS TO ENTER PROPERTY DATA

BOX defines a range of grid blocks for which subsequent data is assigned for all the cells in the defined BOX. Note that the BOX grid is reset by the keyword ENDBOX by resetting the current defined BOX to be the whole grid. The keyword can be used for any array and for all grid types.

See [BOX - Define a Range of Grid Blocks to Enter Property Data](#) in the GRID section for a full description.

10.3.18 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

See [COLUMNS – Define Input File Column Margins](#) in the GLOBAL section for a full description.

10.3.19 COPY – COPY ARRAY DATA TO ANOTHER ARRAY

The COPY keyword copies an array (or part of an array) to another array or part of an array. The arrays can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the COPY keyword is being used.

See [COPY – Copy Array Data to Another Array](#) in the GRID section for a full description.

10.3.20 COPYREG – COPY AN ARRAY TO ANOTHER ARRAY BASED ON A REGION NUMBER

The COPYREG keyword copies a specified array or part of an array based on cells with a specific region number to another array. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the COPYREG keyword is read by the simulator. The property arrays can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the COPYREG keyword is being used.

See [COPYREG – Copy an Array to Another Array based on a Region Number](#) in the GRID section for a full description.

10.3.21 DATUM – DEFINE THE DATUM DEPTH FOR THE MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DATUM keyword defines the datum depth for the model. This allows for all grid block pressures and potentials to be calculated at a common depth.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DATUM	DATUM is a single positive value that defines the datum depth for the model.			None
		feet	m	cm	
Notes: I) The keyword is terminated by a “/”.					

Table 10.9: DATUM Keyword Description

See also the DATUMR and DATUMRX keywords in the SOLUTION section that also define the datum depth for the model.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--      DATUM
--      DEPTH
--      -----
DATUM      5000.0                               / DATUM DEPTH FOR REPORTING
```

The above example defines the datum for the model to be 5000.0

10.3.22 DATUMR – DEFINE DATUM DEPTHS FOR THE FIPNUM REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DATUMR keyword defines the datum depth for each fluid in-place region (FIPNUM) declared in the model. This allows for all grid block pressures and potentials to be calculated at a common depth within a FIPNUM region.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DATUMR	DATUMR is a vector of positive values that defines the datum depth for each fluid in-place region.			None
		feet	m	cm	
Notes: 1) The keyword is followed by FIPNUM values as defined on REGDIMS keyword in the RUNSPEC section. 2) The keyword is terminated by a “/”.					

Table 10.10: DATUMR Keyword Description

See also the DATUM and DATUMRX keywords in the SOLUTION section that also define the datum depth for the model.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      DATUM
--      DEPTH
--      -----
DATUMR
      4800.0
      4900.0
      5000.0
                                     / DATUM DEPTH FOR REPORTING
```

The above example defines the datum depth for three FIPNUM regions, for when FIPNUM has been set equal to three on the REGDIMS keyword in the RUNSPEC section.

10.3.23 DATUMRX – DEFINE DATUM DEPTHS FOR THE FIP ALLOCATED REGIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The DATUMRX keyword defines the datum depth for each fluid in-place family region defined by the FIP keyword. This allows for all grid block pressures and potentials to be calculated at a common depth within a given FIP region. The FIP keyword in the REGION sections allows one to define additional sets of fluid in-place regions to the standard FIPNUM keyword. For example, one could use FIPNUM to define the reservoir layers as fluid in-place regions and the FIP keyword to define the fluid in-place region for fault blocks.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	FIPNAME	A character string of up to five characters in length that defines the FIP family name for which the datum depth data is being defined. The default value of I* will set DATUMR to the standard FIPNUM region numbers.			I*
2	DATUMR	DATUMR is a vector of positive values that defines the datum depth for each fluid in-place family region. There must be one entry for each region in the FIP family name. A maximum of NTFIP, as declared by the REGDIMS keyword in the RUNSPEC, values may be entered for each FIPNAME entry.			None
		feet	m	cm	
Notes: 1) The keyword is followed any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 10.11: DATUMR Keyword Description

See also the FIP keyword in the REGIONS section to define FIP family regions, and the DATUM and DATUMR keywords in the SOLUTION section that also define the datum depth for the model.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      FIP      DATUM
--      NAME      DEPTH
DATUMRX
      'FLTBL'    5000.0  5000.0  5000.0  5000.0  / DATUM DEPTH FOR REPORTING
      'LICBL'    5000.0  5050.0                / DATUM DEPTH FOR REPORTING
/
```

The above example defines the datum depth for two FIP families, FLTBL and LICBL, with the datum set to a constant 5000.0 psia for FLTBL family and different values for each of the regions in the LICBL family of regions.

10.3.24 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See [DEBUG – Define the Debug Data to be Printed to File](#) in the GLOBAL section for a full description.

10.3.25 DYNAMICR – START OF DYNAMIC REGION PARAMETER DEFINITION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DYNAMICR keyword marks the start of a Dynamic Region section and defines the parameters used for Dynamic Regions that allows for property and reporting regions to vary as the run progresses, based on the parameters and logic defined by this keyword and section. A Dynamic Region section is terminated by the ENDDYN keyword in the SOLUTION or SCHEDULE sections.

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.26 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

See [ECHO – Activate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

10.3.27 END – DEFINE THE END OF THE INPUT FILE

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

See [END – Define the End of the Input File](#) in the GLOBAL section for a full description.

10.3.28 ENDBOX – DEFINE THE END OF THE BOX DEFINED GRID

This keyword marks the end of a previously defined BOX sub-grid as defined by a previously entered BOX keyword. The keyword resets the input grid to be the full grid as defined by the NX, NY, and NZ variables on the DIMENS keyword in the RUNSPEC section.

See [ENDBOX – Define the End of the BOX Defined Grid](#) in the GRID section for a full description.

10.3.29 ENDDYN– END OF DYNAMIC REGION PARAMETER DEFINITION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ENDDYN keyword marks the end of a Dynamic Region section that was started with the DYNAMICR keyword in the SOLUTION or SCHEDULE sections. Dynamic Regions allow for property and reporting regions to vary as the run progresses, based on the parameters and logic defined within the section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.30 ENDFIN – END THE DEFINITION OF A LOCAL GRID REFINEMENT

ENDFIN defines the end of a Cartesian or radial local grid refinement (“LGR”) definition and a LGR property definition data set.

See [ENDFIN – End the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

10.3.31 ENDINC – DEFINE THE END OF AN INCLUDE FILE

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

See [ENDINC – Define the End of an Include File](#) in the GLOBAL section for a full description.

10.3.32 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

See [ENDSKIP – DeActivate Skipping of Keywords and Input Data](#) in the GLOBAL section for a full description.

10.3.33 EQUALREG – SETS AN ARRAY TO A CONSTANT BY REGION NUMBER

The EQUALREG keyword sets a specified array to a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the EQUALREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the EQUALREG keyword is being used.

See [EQUALREG – Sets an Array to a Constant by Region Number](#) in the GRID section for a full description.

10.3.34 EQUALS – SETS A SPECIFIED ARRAY TO A CONSTANT

The EQUALS keyword sets a specified array or part of an array to a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the EQUALS keyword is being used.

See [EQUALS – Sets a Specified Array to a Constant](#) in the GRID section for a full description.

10.3.35 EQUIL – DEFINE THE EQUILIBRATION INITIALIZATION DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	---------------------------------	-------------------------	--------------------------

Description

This keyword defines the parameters used to initialize the model for when equilibration is calculated by OPM Flow. This is the standard methodology to initialize a model, the non-standard formulation of entering the pressures and saturations for each grid cell is seldom employed in the industry. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DATUM	DATUM is a single positive value that defines the reference datum depth for PRESS.			0.0
		feet	m	cm	
2	PRESS	PRESS is a single positive value that defines the pressure at DATUM. If the DATUM depth lies above the GOC then PRESS is the pressure with respect to the gas phase. If the DATUM depth is below OWC then PRESS refers to the water phase pressure. Otherwise, PRESS refers to the oil phase pressure.			0.0
		psia	barsa	atma	
3	WATCONT	1) For three phase runs containing oil, gas and water WATCONT is the depth of the oil-water contact (OWC). 2) For two phase runs containing oil and water WATCONT is the depth of the oil-water contact (OWC). 3) For two phase runs containing gas and water WATCONT is the depth of the gas-water contact (GWC).			0.0
		feet	m	cm	
4	WATCAP	1) For three phase runs containing oil, gas and water WATCAP is the oil-water capillary pressure at the OWC. 2) For two phase runs containing oil and water WATCAP is the oil-water capillary pressure at the OWC. 3) For two phase runs containing gas and water WATCAP is the gas-water capillary pressure at the GWC			0.0
		psia	barsa	atma	
5	GASCONT	1) For three phase runs containing oil, gas and water GASCONT is the depth of the gas-oil contact (GOC). Note in cases where there is no gas cap (or free gas) then GASCONT should be set to a value shallower than the top of the reservoir. In cases where there is initially no oil zone, as for a gas condensate field for example, the GASCONT should be set to the same depth as WATCONT. 2) For two phase runs containing oil and water GASCONT is ignored. 3) For two phase runs containing gas and water GASCONT is ignored.			0.0

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
		feet	m	cm	
6	GASCAP	1) For three phase runs containing oil, gas and water GASCAP is the gas-oil capillary pressure at the GWC. 2) For two phase runs containing oil and water GASCAP is ignored. 3) For two phase runs containing gas and water GASCAP is ignored.			0.0
		psia	barsa	atma	
7	EQLOPT1	EQLOPT1 is an integer value that sets the initialization option for when dissolved gas is present in the run, as activated by the DISGAS keyword in the RUNSPEC section. 1) A positive value of EQLOPT1 results in the gas-oil ratio being calculated from data entered on the PBVD (saturation pressure or bubble-point pressure versus depth table) or the RSVD keyword (gas-oil ratio versus depth table). If this option is selected than either PBVD or RSVD keywords must be present in the input deck. Note that the allocation of multiple PBVD and RSVD tables to each grid cell is through the EQLNUM keyword and not the PVTNUM keyword. 2) A zero value of EQLOPT1 results in the gas-oil ratio being set to the saturated gas-oil ratio at the GOC. In this case DATUM must be equal GASCONT and the PBVD and RSVD keywords may be omitted. 3) A negative value of EQLOPT1 results in the same option for when EQLOPT1 is zero. EQLOPT1 is ignored if there is no dissolved gas in the run.			0
		dimensionless	dimensionless	dimensionless	
8	EQLOPT2	EQLOPT2 is an integer value that sets the initialization option for when vaporized oil (condensate) is present in the run, as activated by the VAPOIL keyword in the RUNSPEC section. 1) A positive value of EQLOPT2 results in the condensate-gas ratio being calculated from data entered on the PDVD (saturation pressure or dew point pressure versus depth table) or the RVVD keyword (condensate-gas ratio versus depth table). If this option is selected than either PDVD or RVVD keywords must be present in the input deck Note that the allocation of multiple PDVD and RVVD tables to each grid cell is through the EQLNUM keyword and not the PVTNUM keyword. 2) A zero value of EQLOPT2 results in the condensate-gas ratio being set to the saturated condensate-gas ratio at the GOC. In this case DATUM must be equal GASCONT and the PDVD and RVVD keywords may be omitted. 3) A negative value of EQLOPT2 results in the same option for when EQLOPT2 is zero. EQLOPT2 is ignored if there is no vaporized oil in the run.			0
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
9	EQLOPT3	<p>EQLOPT3 is an integer value that sets the initialization accuracy options for the equilibration calculation.</p> <p>1) A zero value of EQLOPT3 results in OPM Flow using the fluid saturations at the center of the grid block in the equilibration calculation. This results in a stable initialization at the expense of a potentially less accurate fluid in-place calculation, especially for large thick grid blocks with a fluid contact in the block.</p> <p>2) A negative value of EQLOPT3 results in the simulator dividing each grid cell into $2 N + 1$ horizontal sub-blocks for the equilibration calculation. This results in an accurate fluid in-place calculation at the expense of initialization stability, that is there may be some movement of fluids when there is no production at the start of the run.</p> <p>Increasing the value of N increases the accuracy of the calculation, with the maximum value of N being set to 20 by OPM Flow.</p> <p>3) A positive value of EQLOPT3 results in the same option for when EQLOPT3 is negative, except that tilted fault blocks are used in the calculation. Again, increasing the value of N increases the accuracy of the calculation, with the maximum value of N being set to 20 by OPM Flow.</p> <p>Note this option should be used with Irregular Corner-Point Grids.</p> <p>EQLOPT3 is ignored for Radial Grids.</p> <p>Only EQLOPT3 options (1) and (2), that is values less than and equal to zero, are supported by OPM Flow.</p>			0
10	EQLOPT4	<p>A positive integer value greater than or equal one and less than or equal to three, that sets the initialization option in the commercial compositional simulator.</p> <p>EQLOPT4 should be defaulted with 1*, as it is not used by OPM Flow.</p>			None
11	EQLOPT5	<p>A positive integer value that if set to one forces PRESS to be used for the datum pressure in the commercial compositional simulator.</p> <p>EQLOPT5 should be defaulted with either 1*, as it is not used by OPM Flow.</p>			None

Notes:

1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.

2) Each record is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.12: EQUIL Keyword Description

Note

A common method to initialize a model is by using the SWATINIT property array to set the initial water saturation for each cell in the model. This property is normally exported from a static model, where Saturation Height Functions (“SHF”) have been used to describe the water saturation profile with depth. In the dynamic model capillary pressure functions are used to describe the water profile versus depth.

Note that if the SWATINIT array has been used to initialize the model then the fine grid block initialization via the EQLOPT3 variable, should not normally be used, and should be defaulted or set equal to zero; otherwise, the resulting water saturation will not strictly honor the SWATINIT array.

See also the PRESSURE, SGAS, SOIL and SWAT keywords in the SOLUTION section to initialize the model using the non-standard formulation of entering the pressures and saturations for each grid cell.

Example

```
--
--      DATUM   DATUM   OWC   PCOW   GOC   PCGO   RS   RV   N
--      DEPTH   PRESS   DEPTH   ----   DEPTH   ----   OPT  OPT  OPT
EQUIL
      3650.0   1560.0   3712.0   0.00   1000.0   0.00   1    0   -5      /
      3650.0   1560.0   3741.0   0.00   1000.0   0.00   1    0   -5      /
      3650.0   1560.0   3741.0   0.00   1000.0   0.00   1    0   -5      /
```

The above example defines three equilibration records for when NTEQUL equals three on the EQLDIMS keyword in the RUNSPEC section. Here there is no gas cap and the GOC has been set to a value above the reservoirs (1000.0), and the default value of EQLOPT (-5) has been explicitly stated.

10.3.36 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

See [EXTRAPMS – Activate Extrapolation Warning Messages](#) in the GLOBAL section for a full description.

10.3.37 FILEUNIT – ACTIVATE UNIT CONSISTENCY VERIFICATION

The FILEUNIT keyword defines the units of the of the data set, and is used to verify that the units in the input deck and any associated include files are consistent grid data. The keyword does not provide for the conversion between different sets of units.

See [FILEUNIT – Activate Unit Consistency Checking](#) in the GRID section for a full description.

10.3.38 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be place at the very top of the input file.

See [FORMFEED – Defined the Print File Form-Feed Character](#) in the GLOBAL section for a dull description.

10.3.39 GASCONC – DEFINE THE INITIAL EQUILIBRATION COAL GAS CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GASCONC keyword defines the initial equilibration coal gas concentration values for all matrix grid cells in the model and should be used in conjunction with the GCVD keyword in the SOLUTION section, to fully describe the initial state of the model. The keyword should only be used if the coal phase has been activated in the model via the COAL keyword in the RUNSPEC section. Note both GASCONC and GCVD are optional as the simulator will calculate the coal gas concentration based on the equilibrium concentration and the block pressure.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	GASCONC	GASCONC is an array of real positive numbers that define the initial equilibration coal gas concentration values to each matrix cell in the model. Repeat counts may be used,for example 20*75.0.			None
		Mscf/ft ³	sm ³ /m ³	scc/cc	

Notes:

- 1) The number of entries should correspond to number of matrix cells in the model, that is (NX x NY x NZ) divided by two, as per the parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.13: GASCONC Keyword Description

See also the GCVD keyword in the SOLUTION section to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION COAL GAS CONCENTRATION FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 6
--
GASCONC      1000*75.500      1000*65.500      1000*60.000      /
```

The above example defines the initial equilibration coal gas concentration values to be 75.500 for all the matrix cells in the first layer, 65.500 for all the cells in the second layer, and finally 60.000 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.40 GASSATC – DEFINE THE INITIAL EQUILIBRATION SATURATED COAL GAS CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GASSATC keyword defines the initial equilibration saturated coal gas concentration values for all grid cells in the model. The keyword should only be used if the coal phase has been activated in the model via the COAL keyword in the RUNSPEC section. The keyword is used to re-scale the Langmuir isotherms entered via the LANGMUIR keyword in the PROPS section, in conjunction with a matrix grid blocks initial reservoir pressure. The keyword is optional, and if absent from the input file, the matrix grid block Langmuir isotherm is left unscaled.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	GASSATC	GASSATC is an array of real positive numbers that define the initial equilibration saturated coal gas concentration values to each cell in the model. Repeat counts may be used, for example 20*75.0.			None
		Mscf/ft ³	sm ³ /m ³	scc/cc	

Notes:

- 1) The number of entries should correspond to number of matrix cells in the model, that is (NX x NY x NZ) divided by two, as per the parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.14: GASSATC Keyword Description

See also the GASCONC and the GCVD keywords in the SOLUTION section to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION SAT COAL GAS CONCENTRATION ALL CELLS MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 6
--
GASSATC      1000*75.500      1000*65.500      1000*60.000      /
```

The above example defines the initial equilibration saturated coal gas concentration values to be 75.500 for all the matrix cells in the first layer, 65.500 for all the cells in the second layer, and finally 60.000 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.41 GCVD – DEFINE EQUILIBRATION COAL GAS CONCENTRATION VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GCVD keyword defines the initial coal gas concentration versus depth tables for each equilibration region for when the coal phase has been activated in the run via the COAL keyword in the RUNSPEC section. The keyword may be used in conjunction with the GASCONC keyword in the SOLUTION section, to fully describe the initial state of the model. Note both GASCONC and GCVD are optional as the simulator will calculate the coal gas concentration based on the equilibrium concentration and the block pressure.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding coal gas concentration, GCVALS.			None
		feet	m	cm	
2	GCVALS	A columnar vector of real values that defines the coal gas concentration values at the corresponding DEPTH.			None
		Mscf/ft ³	sm ³ /m ³	scc/cc	

Notes:

- 1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.15: GCVD Keyword Description

See also the GASCONC and GASSATC keywords in the SOLUTION section.

Example

Given NTEQUL equals three and NDRXVD is greater than or equal to two on the EQLDIMS keyword in the RUNSPEC section, then the following example defines the coal gas concentration versus depth functions.

```
--
--      DEPTH      GC
--      MSCF/FT
--      -----
GCVD
      100.0      75.5000
      1000.0     75.5000                      / GC VS DEPTH EQUIL REGN 01
--      -----
      100.0      65.5000
      1000.0     65.5000                      / GC VS DEPTH EQUIL REGN 02
--      -----
      100.0      60.0000
      1000.0     60.0000                      / GC VS DEPTH EQUIL REGN 03
```

Here three tables are entered with a constant coal gas concentration versus depth relationship for each equilibration region.

10.3.42 GETDATA – LOAD AND ASSIGN DATA ARRAY FROM INIT OR RESTART FILE

The GETDATA keyword loads a data array from a previously generated INIT or RESTART file and assigns the loaded array to either same array in the run or another array name.

See [GETDATA – Load and Assign Data Array from INIT or RESTART Files](#) in the GRID section for a full description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.43 GETGLOB – ACTIVATE LOADING OF GLOBAL GRID RESTART DATA OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	---------------------------------	-------------------------	--------------------------

Description

This keyword, GETGLOB, switches on the global grid read option for when the run is restarting from a RESTART file. Only the global grid will be loaded in the subsequent RESTART keyword and any Local Grid Refinements (“LGR”) on the RESTART file will be ignored.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      ACTIVATE LOADING OF GLOBAL GRID RESTART DATA OPTION
--
GETGLOB
```

The above example switches on the option to only load the global grid from the RESTART file.

10.3.44 GI - DEFINE THE INITIAL EQUILIBRATION GI VALUES FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GI keyword defines the initial equilibration GI values for all grid cells in the model and should be used in conjunction with the other enumeration equilibration keywords; PBUB, PDEV, PRESSURE, RS, RV, SOIL and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if the GI Pseudo Compositional option has been activated in the model via the GIMODEL keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

This keyword is ignored by OPM Flow and has no effect on the simulation.

See also the GIALL keyword in the PROPS section that sets the GI values as a function of pressure, as well as setting the corresponding RVGI, RSGI, BGGI and BOGI values at the same time.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.45 HMAQUCT – HISTORY MATCH CARTER-TRACY AQUIFER GRADIENT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	---------------------------------	-------------------------	--------------------------

Description

The HMAQUCT keyword defines the history match analytical Carter-Tracy aquifer gradient parameters for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section, and analytical Carter-Tracy aquifers have been specified in the model via the AQUCT and connected to the grid using the AQUANCON or AQANCONL keywords. All keywords are in the SOLUTION section.

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of aquifers that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.46 HMAQUFET – HISTORY MATCH FETKOVICH AQUIFER GRADIENT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMAQUFET keyword defines the history match analytical Fetkovich aquifer gradient parameters for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section, and analytical Fetkovich aquifers have been specified in the model via the AQUFET and/or the AQUFETP keywords and connected to the grid using AQUANCON or AQANCONL keywords. All keywords are in the SOLUTION section.

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of aquifers that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.47 HMMLCTAQ – HISTORY MATCH CARTER-TRACY AQUIFER GRADIENT MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMMLCTAQ keyword defines the history match analytical Carter-Tracy aquifer gradient multipliers for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section, and analytical Carter-Tracy aquifers have been specified in the model via the AQUCT and connected to the grid using the AQUANCON or AQANCONL keywords. All keywords are in the SOLUTION section.

Multipliers can be declared for the Carter-Tracy aquifer permeability, aquifer angle of influence and the aquifer depth.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.48 HMMLFTAQ – HISTORY MATCH FETKOVICH AQUIFER GRADIENT MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The HMAQUFET keyword defines the history match analytical Fetkovich aquifer gradient multipliers for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section, and analytical Fetkovich aquifers have been specified in the model via the AQUFET and/or the AQUFETP keywords and connected to the grid using AQUANCON or AQANCONL keywords. All keywords are in the SOLUTION section.

Multipliers can be declared for the Fetkovich aquifer water volume, aquifer permeability, and the aquifer depth.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.49 HMMLTWCN – HISTORY MATCH WELL CONNECTION AND SKIN MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	---------------------------------	-------------------------	--------------------------

Description

This keyword, HMMLTWCN, defines the history match gradient multipliers for well connection factors and connection skins, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. Wells must be specified using the WELPSECS keyword in the SCHEDULE section and their connections defined by the COMPDAT and/or COMPDATL keywords, also in the SCHEDULE section

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.50 HMWELCON – HISTORY MATCH WELL CONNECTION AND SKIN PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, HMWELCON, defines the history match gradient parameters for well connection factors and connection skins, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. Wells must be specified using the WELPSECS keyword in the SCHEDULE section and their connections defined by the COMPDAT and/or COMPDATL keywords, also in the SCHEDULE section

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.51 IMPORT – IMPORT GRID FILE DATA AT THE CURRENT POSITION

The IMPORT keyword informs the simulator to continue reading input data from the specified IMPORT file. When the end of the IMPORT file is reached, input data is read from the next keyword in the current file. Normally IMPORT files are generated by grid pre-processing software and the keyword allows for both formatted and unformatted (binary) files to be loaded.

See [IMPORT – Import Grid File Data at the Current Position](#) in the GRID section for a full description.

10.3.52 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file.

See [INCLUDE – Load Another Data File at the Current Position](#) in the GLOBAL section for a full description.

10.3.53 MESSAGE – OUTPUT USER MESSAGE

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGES keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

See [MESSAGE – Output User Message](#) in the GLOBAL section for a full description.

10.3.54 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

See [MESSAGES – Define Message Print Limits and Stop Limits](#) in the GLOBAL section for a full description.

10.3.55 MULTIPLY – MULTIPLY A SPECIFIED ARRAY BY A CONSTANT

The MULTIPLY keyword multiplies a specified array or part of an array by a constant. The constant can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

See [MULTIPLY – Multiply a Specified Array by a Constant](#) in the GRID section for a full description.

10.3.56 MULTIREG – MULTIPLY AN ARRAY BY A CONSTANT BASED ON A REGION NUMBER

The MULTIREG keyword multiplies an array or part of an array by a constant for cells with a specific region number. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTIREG keyword is read by the simulator. The constant can be real or integer depending on the property array type; however, the property arrays that can be operated on is dependent on which section the MULTIREG keyword is being used.

See [MULTIREG – Multiply an Array by a Constant based on a Region Number](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.57 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active, but can subsequently be switched off by the NOECHO activation keyword.

See [NOECHO – Deactivate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

10.3.58 NOHMD – DEACTIVATE HISTORY MATCH GRADIENT DERIVATIVE CALCULATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The NOHMD deactivates various history match gradient derivative calculations for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The keyword consists of a series of character strings that define which derivative should be switch off based on the keyword that requested the derivatives to be calculated, for example HMFAULTS keyword in the GRID section. If an empty list is entered then all the gradient derivative calculations previously requested are switch off. The keyword is useful for changing from history matching runs to predication cases, as the prediction cases will be more computationally efficient without the burden of the gradient derivative calculations.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.59 NOHMO – DEACTIVATE HISTORY MATCH GRADIENT DERIVATIVE CALCULATIONS (ALIAS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The NOHMO deactivates various history match gradient derivative calculations for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The keyword consists of a series of character strings that define which derivative should be switch off based on the keyword that requested the derivatives to be calculated, for example HMFAULTS keyword in the GRID section. If an empty list is entered then all the gradient derivative calculations previously requested are switch off. The keyword is useful for changing from history matching runs to predication cases, as the prediction cases will be more computationally efficient without the burden of the gradient derivative calculations.

The keyword is an alias for the NOHMD keyword in the SOLUTION section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.60 NOWARN – DEACTIVATE WARNING MESSAGES

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

See [NOWARN – Deactivate Warning Messages](#) in the GLOBAL section for a full description.

10.3.61 OILAPI – DEFINE THE INITIAL EQUILIBRATION OIL API FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The OILAPI keyword defines the initial equilibration oil API gravity pressures for all grid cells in the model, for when the Oil API Tracking option has been invoked by the API keyword in the RUNSPEC section. The keyword should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords etc., to fully describe the initial state of the model.

The keyword is used by the Enumeration Initialization method to initialize the model, as opposed to the Equilibration Initialization method that utilizes the EQUIL keyword in the SOLUTION section. This is the non-standard formulation to initialize the model and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	OILAPI	OILAPI is an array of real positive numbers assigning the initial equilibration oil API gravity to each cell in the model. The American Petroleum Institute (“API”) classifies oils based on an API gravity (γ_{API}), or degrees API ($^{\circ}API$), the relationship between relative density (γ_o) of oil and API gravity (γ_{API}) is given by: $\gamma_{API} = \frac{141.5}{\gamma_o} - 131.5$ Repeat counts may be used, for example 20*38.5			None
		$^{\circ}API$	$^{\circ}API$	$^{\circ}API$	

Notes:

1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2) The keyword is terminated by a “/”.

Table 10.16: OILAPI Keyword Description

See also the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION OIL API FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
OILAPI      1000*40.2      1000*39.5      1000*38.2      /
```

The above example defines the initial equilibration oil API gravity to be 40.2 for all the cells in the first layer, 39.5 for all the cells in the second layer, and finally 38.2 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.62 OPERATE – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS

This keyword, OPERATE, defines mathematical operations on property arrays (NTG, PORO etc.) and optionally using another property array as input to the function. The keyword allows for various mathematical functions and their associated variables to be defined and applied to the selected array data. Input constants can be real or integer depending on the array type; however, the arrays that can be operated on is dependent on which section the keyword is being used.

See [OPERATE – Define Mathematical Operations on Arrays](#) in the GRID section for a full description.

10.3.63 OPERATER – DEFINE MATHEMATICAL OPERATIONS ON ARRAYS BY REGION

This keyword defines the mathematical operations on arrays for specific regions in the commercial simulator and is currently not supported by OPM Flow. However, similar functionality is provided by the ADD and MULTIPLY keywords.

See [OPERATER – Define Mathematical Operations on Arrays by Region](#) in the GRID section for a full description.

10.3.64 OUTSOL – DEFINE DATA TO BE WRITTEN TO THE RESTART FILE (RETIRED)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the data and frequency of the data to be written to the RESTART file at each requested restart point. The keyword has been replaced by the RPTRST keyword in the SOLUTION and SCHEDULE sections and is therefore considered retired.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.65 PBUB – DEFINE THE INITIAL EQUILIBRATION BUBBLE-POINT PRESSURE FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PBUB keyword defines the initial equilibration bubble-point saturation pressures values for all grid cells in the model and should be used in conjunction with the PDEW, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if dissolved gas has been activated in the model via the DISGAS keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PBUB	PBUB is an array of real positive numbers assigning the initial equilibration bubble-point saturation pressure values to each cell in the model. Repeat counts may be used, for example 20*3500.0			None
		psia	barsa	atma	

Notes:

1)

The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2)

The keyword is terminated by a “/”.

Table 10.17: PBUB Keyword Description

See also the PBVD, PDEW, PRESSURE, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION PSAT VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
PBUB      1000*3500.0      1000*3525.0      1000*0.3535.0      /
```

The above example defines the initial equilibration bubble-point saturation pressure values to be 3500.0 for all the cells in the first layer, 3525.0 for all the cells in the second layer, and finally 3535.0 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.66 PBVD – EQUILIBRATION BUBBLE-POINT VERSUS DEPTH TABLES

<i>RUNSPEC</i>	<i>GRID</i>	<i>EDIT</i>	<i>PROPS</i>	<i>REGIONS</i>	<i>SOLUTION</i>	<i>SUMMARY</i>	<i>SCHEDULE</i>
----------------	-------------	-------------	--------------	----------------	-----------------	----------------	-----------------

Description

The PBVD keyword defines the bubble-point pressure versus depth tables for each equilibration region that should be used when there is dissolved gas in the model (DISGAS has been activated in the RUNSPEC section) and the EQLOPT1 variable has been set to a positive integer on the EQUIL keyword in the SOLUTION section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding bubble-point values, PBVALS.			None
		feet	m	cm	
2	PBVASL	A columnar vector of real values that defines the oil bubble-point values at the corresponding DEPTH.			None
		psia	barsa	atma	

Notes:

- 1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.18: PBVD Keyword Description

Alternatively, the dissolved gas-oil ratio versus depth tables may be entered using the RSVD keyword in the SOLUTION section instead of this keyword. See also the RSVD and EQUIL keywords in the SOLUTION section.

Example

Given NTEQUL equals three and NDRXVD is greater than or equal to two on the EQLDIMS keyword in the RUNSPEC section, then the following example defines the bubble-point versus depth functions.

DEPTH	PSAT PRESS	
3000.0	3000.0	
8000.0	3025.0	/ PSAT VS DEPTH EQUIL REGN 01
3000.0	3100.0	
8000.0	3125.0	/ PSAT VS DEPTH EQUIL REGN 02
3000.0	3200.0	
8000.0	3225.0	/ PSAT VS DEPTH EQUIL REGN 03

Here three tables are entered and each table is terminated by a “/” and there is no keyword terminating “/”.

10.3.67 PDEW – DEFINE THE INITIAL EQUILIBRATION DEW-POINT PRESSURE FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PDEW keyword defines the initial equilibration dew-point pressure values for all grid cells in the model and should be used in conjunction with the PBUB, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if vaporized oil been activated in the model via the VAPOIL keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PDEW	PDEW is an array of real positive numbers assigning the initial equilibration dew-point pressure values to each cell in the model. Repeat counts may be used,for example 20*3525.0			None
		psia	barsa	atma	

Notes:

1)

The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section,unless the BOX keyword defines a sub area of the grid,in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2)

The keyword is terminated by a “/”.

Table 10.19: PDEW Keyword Description

See also the PBUB, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION PSAT VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
PDEW      1000*3500.0      1000*3525.0      1000*0.3535.0      /
```

The above example defines the initial equilibration dew-point saturation pressure values to be 3500.0 for all the cells in the first layer, 3525.0 for all the cells in the second layer, and finally 3535.0 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.68 PDVD – DEFINE EQUILIBRATION DEW-POINT VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PDVD keyword defines the dew-point pressure versus depth tables for each equilibration region that should be used when there is vaporized oil in the model (VAPOIL has been activated in the RUNSPEC section) and the EQLOPT2 variable has been set to a positive integer on the EQUIL keyword in the SOLUTION section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding dew-point values, PDVALS.			None
		feet	m	cm	
2	PDVALS	A columnar vector of real values that defines the gas dew-point values at the corresponding DEPTH.			None
		psia	barsa	atma	

Notes:

- 1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.20: PDVD Keyword Description

Alternatively, the vaporized oil-gas ratio (condensate-gas ratio) versus depth tables may be entered using the RVVD keyword in the SOLUTION section instead of this keyword.

See also the RVVD and EQUIL keywords in the SOLUTION section.

Example

Given NTEQUL equals three and NDRXVD is greater than or equal to two on the EQLDIMS keyword in the RUNSPEC section, then the following example defines the bubble-point versus depth functions.

```
--
--      DEPTH      PSAT
--      PRESS
--      -----
PDVD
      3000.0      2000.0
      8000.0      2025.0
--                                     / PSAT VS DEPTH EQUIL REGN 01
--      3000.0      2100.0
      8000.0      3125.0
--                                     / PSAT VS DEPTH EQUIL REGN 02
--      3000.0      2200.0
      8000.0      2225.0
--                                     / PSAT VS DEPTH EQUIL REGN 03
```

Here three tables are entered and each table is terminated by a "/" and there is no keyword terminating "/".

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.69 PRESSURE – DEFINE THE INITIAL EQUILIBRATION PRESSURES FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PRESSURE keyword defines the initial equilibration pressures for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, RS, RV, SGAS, SOIL and SWAT keywords etc., to fully describe the initial state of the model.

The keyword is used by the Enumeration Initialization method to initialize the model, as opposed to the Equilibration Initialization method that utilizes the EQUIL keyword in the SOLUTION section. This is the non-standard formulation to initialize the model and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	PRESSURE	PRESSURE is an array of real positive numbers assigning the initial equilibration pressures to each cell in the model. Repeat counts may be used, for example 20*4200.0.			None
		psia	barsa	atma	

Notes:

1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2) The keyword is terminated by a “/”.

Table 10.21: PRESSURE Keyword Description

See also the PBUB, PDEW, RS, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION PRESSURES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
PRESSURE
      1000*4500.0   1000*4510.0   1000*4520.0      /
```

The above example defines the initial equilibration pressures to be 4500.0 for all the cells in the first layer, 4510.0 for all the cells in the second layer, and finally 4520.0 for all the cells in the third layer.

10.3.70 PRVD – DEFINE THE INITIAL EQUILIBRATION PRESSURES VERSUS DEPTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	-----------------	-------------------------	--------------------------

Description

The PRVD keyword defines the initial reservoir pressure versus depth and should be used in conjunction with the PBUB, PDEW, RS, RV, SGAS, SOIL and SWAT keywords etc., to fully describe the initial state of the model. PRVD is an alternative to the PRESSURE keyword in the SOLUTION section, that defines the initial equilibration pressures for all grid cells in the model

The keyword is used by the Enumeration Initialization method to initialize the model, as opposed to the Equilibration Initialization method that utilizes the EQUIL keyword in the SOLUTION section. This is the non-standard formulation to initialize the model and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding reservoir oil pressures values, PRESSURE.			None
		feet	m	cm	
2	PRESSURE	A columnar vector of real values that defines the initial equilibration oil pressure values at the corresponding DEPTH.			None
		psia	barsa	atma	

Notes:

- 1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.22: PRVD Keyword Description

See also the PBUB, PDEW, RS, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

Given NTEQUL equals three and NDRXVD is greater than or equal to five on the EQLDIMS keyword in the RUNSPEC section, then the following example defines the initial oil reservoir pressure versus depth

```
--
--      DEPTH      INIT
--      PRESS
--      -----
PRVD
      3000.0      3000.0
      4000.0      3345.0
      5000.0      3690.0
      7000.0      4700.0
      7200.0      4769.0
--
--      -----
--      3000.0      3100.0
--      4000.0      3445.0
--      5000.0      3790.0
--      7000.0      4700.0
--      7200.0      4769.0
--
--      -----
--      3000.0      3150.0
--      4000.0      3495.0
--      5000.0      3840.0
--      7000.0      4700.0
--      7200.0      4769.0
--
--      -----
--      / POIL VS DEPTH EQUIL REGN 01
--
--      / POIL VS DEPTH EQUIL REGN 02
--
--      / POIL VS DEPTH EQUIL REGN 03
```

Here three tables are entered and each table is terminated by a "/" and there is no keyword terminating "/".

10.3.71 PYEND – END THE DEFINITION OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow's Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords. A PYINPUT Definition Section is terminated by a PYEND keyword on a separate single line.

See [PYEND – End the Definition of a PYINPUT Section](#) in the GRID section for a full description.

10.3.72 PYINPUT – DEFINE THE START OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow's Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords used by the simulator. PYINPUT declares the start of a PYINPUT Definition Section on a single separate line, which is then followed by various standard Python commands, with one command per line.

See [PYINPUT – Define the Start of a PYINPUT Section](#) in the GRID section for a full description.

10.3.73 RAINFALL – CONSTANT FLUX AQUIFER RAINFALL FLUX BY MONTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This RAINFALL keyword defines the month by month rainfall flux for constant flux aquifers.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.74 RBEDCONT – DEFINE RIVER GRID BLOCK CONTACT AREA VERSUS DEPTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RBEDCONT keyword defines the river grid block contact area versus depth tables, for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.75 REFINE – START THE DEFINITION OF A LOCAL GRID REFINEMENT

The REFINE keyword defines the start of a Cartesian or radial local grid refinement (“LGR”) definition that sets the properties of the selected LGR. The keyword is then followed by the property keywords associated with the section where the keyword is being invoked. For example, if the REFINE keyword is used in the GRID section then most of the keywords in that section can be used to set the grid properties for the LGR.

See [REFINE – Start the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

10.3.76 RESTART – RESTART RUN FROM AN EXISTING RESTART FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RESTART keyword defines the parameters to restart the simulation from a previous run that has written a RESTART file out to disk. Only restarting from RESTART files is permitted by OPM Flow; restarting from SAVE files is not implemented.

No.	Name	Description	Default
1	RSNAME	The RSNAME variable is a character string that defines the root name of the RESTART file to be read into the current input deck.	None
2	RSNUM	A positive integer that defines the restart point on the RESTART file to be read and to be used to initialize the model. When OPM Flow writes a restart point a message is printed to the *.PRT file indicating the time step the restart was written out.	None
3	RSTYPE	A defined character sting set to SAVE to read the restart data from the SAVE file, otherwise defaulted to I* to read the data from the RESTART file. The SAVE file option is not supported by OPM Flow and should be defaulted with I*.	None
4	RSFORMAT	A defined character string that defines the format of the SAVE file to be read if RSTYPE has been set to SAVE, and should be set to one of the following: 1) FORMATTED: If the file is formatted as ASCII i.e. a text file, as oppose to a binary file. The option can be abbreviated to just the letter F. 2) UNFORMATTED: If the file is in binary format, note this option can be abbreviated to just the letter U. This type of file is operating system dependent If the variable RSFORMAT omitted then the default is for binary file input. This option is not supported by OPM Flow and should be defaulted with I*.	U

Notes:

- 1) OPM Flow can only restart runs from a RESTART file, the commercial simulator's SAVE file format is not supported.
- 2) Note that due to the complexities of the RESTART file, OPM Flow may not always be able to restart from the commercial simulators RESTART file.
- 3) The keyword is terminated by a "/".

Table 10.23: RESTART Keyword Description

The most direct way to start a restart run is to:

- 1) Copy the existing data file that created the RESTART file and give it a new name. For example if the RESTART file is from a case named NOR-OPM-A01/DATA, then the copied data file could be named NOR-OPM-A01-R1.DAT.
- 2) Edit the copied data file (NOR-OPM-A01-R1.DAT) and delete all equilibration keywords (EQUIL, RSVD, etc.) or the enumeration equilibration keywords (PRESSURE, SGAS, SOIL, SWAT, etc.) in the SOLUTION section used to initialize the model.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

- 3) In the SOLUTION section of *NOR-OPM-A01-RI.DATA* file insert the RESTART keyword, using *NOR-OPM-A01* as RSNAME and the required RSNUM value for the time step to restart from.
- 4) In the SCHEDULE section of *NOR-OPM-A01-RI.DATA* file insert the SKIPREST keyword at the very beginning of the SCHEDULE section. The SKIPREST keyword causes the simulator to only read in data it requires for restarting the run up to the RESTART point (RSNUM). Note that certain keywords always need to be present in a restart run in the SCHEDULE section as the data is not stored on the RESTART file, for example the VFP tables (VFPPROD and VFPINJ keywords). The SKIPREST keyword automatically processes the input deck and reads the required data.
- 5) In the SCHEDULE section of *NOR-OPM-A01-RI.DATA* file after the RESTART point make any required changes, save the file and run the *NOR-OPM-A01-RI.DATA* with OPM Flow.

See also RPTRST, RPTSCHED and SKIPREST keywords.

Example

The example below defines a restart from the previously run NOR-OPM-A01 case at time step number 40.

```
-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION
--
-- FLEXIBLE RESTART FROM PREVIOUS SIMULATION RUN
--
-- FILE          RESTART  RESTART  FILE
-- NAME          NUMBER   TYPE     FORMAT
RESTART
  'NOR-OPM-A01'  40      1*      1*      /
```

In addition in the SCHEDULE section the SKIPREST keyword should be used to correctly read in the schedule data up to the RESTART point.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
-- ACTIVATE SKIPREST OPTION TO AVOID MODIFYING SCHEDULE SECTION
--
SKIPREST
```

Note is advisable to place the SKIPREST keyword at the very beginning of the SCHEDULE section.

10.3.77 RIVERSYS - DEFINE RIVER SYSTEM (BRANCH STRUCTURE AND BOUNDARY CONDITIONS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

RIVERSYS defines a river system by specifying the branch structure of the river together with the branch's associated boundary conditions, for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.78 RPTRST – DEFINE DATA TO BE WRITTEN TO THE RESTART FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the data and frequency of the data to be written to the RESTART file at each requested restart point. In addition to the solution data arrays required to restart a run and the frequency of the data to be written, the user may request additional data to be written to the restart file for visualization in OPM ResInsight.

The format consists of the keyword followed by a series of character strings that indicate the data to be printed. In most cases the character string is the keyword used to load the data in the OPM Flow input deck, for example KRG for the gas relative permeability of each grid block at the requested times. It is anticipated that OPM Flow will support additional functionality as development progresses.

No.	Name	Description	Array Name
1	ALLPROPS	An alias for DEN, KRG, KRO, KRW, and VISC restart variable names combined that writes all the properties associated with these keywords.	
2	BASIC	<p>BASIC defines the frequency at which the restart data for restarting a run and the additional requested data is written to the RESTART file. The parameter is assigned a value, OPTION, using the form BASIC = OPTION, where OPTION is an integer variable set to:</p> <ol style="list-style-type: none"> OPTION = 1 then the restart files are written at every report time, but only the last one in the run is kept. This minimizes the restart file size but only the final results are stored, limiting the visualization in OPM ResInsight. OPTION = 2 then the restart files are written at every report time step until this switch is reset and all the restarts are kept. OPTION = 3 then the restart files are written every n^{th} report time step with the frequency determined by the mnemonic "FREQ=n". This feature is not currently supported by OPM Flow. OPTION = 4 then the restart files are written at the first report step of each year. OPTION = 5 then the restart files are written at the first report step of each month. OPTION = 6 then the restart files are written at every time step. <p>In addition for OPTION equal to 3, 4, and 5 the data may be written every n^{th} report time with the frequency determined by the mnemonic "FREQ=n". However, this feature is currently not supported in OPM Flow.</p>	
3	DEN	Oil, gas and water fluid phases in-situ densities.	OIL_DEN GAS_DEN WAT_DEN
4	KRG	Gas relative permeability at the grid blocks gas saturation.	GASKR
5	KRO	Oil relative permeability at the grid blocks oil saturation.	OILKR
6	KRW	Water relative permeability at the grid blocks water saturation.	WATKR

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description	Array Name
7	RSSAT	Saturated dissolved gas-oil ratio for each grid block to enable restarts.	RSSAT
8	RVSAT	Saturated vaporized oil-gas ratio for each grid block to enable restarts.	RVSAT
9	VISC	Oil, gas and water fluid phases in-situ grid block viscosity data.	OIL_VISC GAS_VISC WAT_VISC
Notes: 1) The keyword is terminated by a "/".			

Table 10.24: RPTRST Keyword Description

Note

Older versions of the commercial simulator used integer values to control the output to the RESTART file, this type of format is **not** supported by OPM Flow and thus they should be converted to the mnemonic format as outlined in Table 10.24.

Note that OPM Flow automatically writes out all the data required to make a restart run as outlined in the table below:

No.	Restart Variable Name	Variable Description	Variable Array Name
1	KRG	Gas relative permeability at the grid blocks gas saturation.	GASKR
2	KRNSW_GO	Gas-oil relative permeability scaling factor array used when the hysteresis option has been activated by the HYSTER variable on the SATOPTS keyword in the RUNSPEC section, to enable restarts.	KRNSW_GO
3	KRNSW_OW	Oil-water relative permeability scaling factor array used when the hysteresis option has been activated by the HYSTER variable on the SATOPTS keyword in the RUNSPEC section, to enable restarts.	KRNSW_OW
4	KRO	Oil relative permeability at the grid blocks oil saturation.	OILKR
5	PCSWM_GO	Gas-oil capillary pressure scaling factor array used when the hysteresis option has been activated by the HYSTER variable on the SATOPTS keyword in the RUNSPEC section, to enable restarts.	PCSWM_GO
6	PCSWM_OW	Oil-Water capillary pressure scaling factor array used when the hysteresis option has been activated by the HYSTER variable on the SATOPTS keyword in the RUNSPEC section, to enable restarts.	PCSWM_OW
7	POLY	Polymer concentration for each grid block to enable restarts for when the POLYMER option has been activated in the RUNSPEC section	CPOLYMER
8	PRESS	Pressure data for each grid block to enable restarts.	PRESSURE
9	RS	Dissolved gas-oil ratio for each grid block to enable restarts.	RS
10	RV	Vaporized oil-gas ratio for each grid block to enable restarts.	RVS
11	SGAS	Gas saturation for each grid block to enable restarts.	SGAS

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Restart Variable Name	Variable Description	Variable Array Name
12	SOIL	Oil saturation each grid block to enable restarts.	SOIL
12	SOMAX	Maximum oil saturation used in determining the rate of oil vaporization in the presence of undersaturated gas and the rate at which the remaining oil gets "heavier" via the reduction in the solution gas-oil ratio ("Rs").	SOMAX
14	SSOL	Solvent saturation for each grid block to enable restarts for when the SOLVENT option has been activated in the RUNSPEC section.	SSOL
15	SWAT	Water ratio for each grid block to enable restarts.	SWAT
16	TEMP	Temperature of each grid block, to enable restarts for when OPM Flow's THERMAL option has been activated in the RUNSPEC section.	TEMP
17	TERNARY	Three phase ternary saturation data is data array is calculated by OPM ResInsight when the RESTART file is loaded into OPM ResInsight.	TERNARY (Calculated)
18	KRW	Water relative permeability at the grid blocks water saturation.	WATKR
Notes: 1) Only items (1) to (14) that are necessary to restart a run are written to the restart file, for example if the neither the POLYMER and SOLVENT options have not been invoked in the RUNSPEC section then the CPOLYMER and SSOL arrays will not be written to the restart file.			

Table 10.25: Data Sets Automatically Written to the RESTART File

Examples

The first example request that the standard restart data be written out every month.

```
--
--      RESTART CONTROL BASIC = 4 (YEARLY) 5 (MONTHLY)
--
RPTRST
      BASIC=5
```

The next example requests that the standard restart data be written at every report time step until this switch is reset and all the restarts are kept. In addition to the standard the data the gas, oil and water relative permeability data will also be written out at each report time step.

```
--
--      RESTART CONTROL BASIC = 4 (YEARLY) 5 (MONTHLY)
--
RPTRST
      BASIC=2   KRG   KRO   KRW
```

10.3.79 RPTSOL – DEFINE SOLUTION SECTION REPORTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the data in the SOLUTION section that is to be printed to the output print file in human readable format. The keyword has two distinct forms, the first of which consists of the keyword followed by a series of integers on the next line indicating the data to be printed (see the first example). This is the original format in the commercial simulator and was subsequently superseded by the second format. The second format consists of the keyword followed by a series of character strings that indicate the data to be printed. In most cases the character string is the keyword used to load the data in the OPM Flow input deck, for example PVDG for the dry gas PVT tables. It is anticipated that OPM Flow will eventually support the functionality of the second format only, the first format although recognized will be completely ignored.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description	Default
1	DENO	Print the oil reservoir density array	N/A
2	EQUIL	Print the equilibration report.	N/A
3	FIP	Print the fluid in-place report.	N/A
4	FIPRESV	Print the reservoir volumes in-place report.	N/A
....		N/A
Notes: 1) The keyword is terminated by a "/".			

Table 10.26: RPTSOL Keyword Description

Note

Except for non-array like data, FIP etc., this keyword has the potential to produce very large print files that some text editors may have difficulty loading. A more efficient solution for array type data is to load the *.INIT and *.RESTART files into OPM ResInsight to view the data graphically, this also has the benefit of being able to filter the grid based on I, J, K ranges and grid properties.

Examples

The first example shows the original format of this keyword; although the keyword and format are recognized by OPM Flow, the format is ignored and is unlikely to be implemented in the simulator.

```
--
--      DEFINE SOLUTION SECTION REPORT OPTION (ORIGINAL FORMAT)
--
RPTSOL
      1      2*0      1      3*1      /
```

The next example shows the second format of the keyword which may be supported in a future release of OPM Flow.

```
--
--      DEFINE SOLUTION SECTION REPORT OPTIONS
--
RPTSOL
      FIP=2      FIPRESV      RESTART=3      /
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.80 RS – DEFINE THE INITIAL EQUILIBRATION GOR (Rs) FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The RS keyword defines the initial equilibration gas-oil ratio values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RV, SGAS, SOIL and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if dissolved gas has been activated in the model via the DISGAS keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	RS	RS is an array of real positive numbers assigning the initial equilibration gas-oil ratio values to each cell in the model. Repeat counts may be used, for example 20*I.30.			None
		Mscf/stb	sm ³ /sm ³	scc/scc	

Notes:

1)

The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2)

The keyword is terminated by a “/”.

Table 10.27: RS Keyword Description

See also the PBUB, PDEW, PRESSURE, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION GOR VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
RS      1000*1.3500    1000*1.3010    1000*1.3000    /
```

The above example defines the initial equilibration GOR values to be 1.3500 for all the cells in the first layer, 1.3010 for all the cells in the second layer, and finally 1.3000 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.81 RSVD – EQUILIBRATION DISSOLVED GAS-OIL RATIO (Rs) VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The RSVD keyword defines the dissolved gas-oil ratio (Rs) versus depth tables for each equilibration region that should be used when there is dissolved gas in the model (DISGAS has been activated in the RUNSPEC section) and the EQLOPTI variable has been set to a positive integer on the EQUIL keyword in the SOLUTION section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding dissolve gas-oil ratio values, RSVALS.			None
		feet	m	cm	
2	RSVALS	A columnar vector of real values that defines the dissolved gas-oil ratio values at the corresponding DEPTH.			None
		Mscf/stb	sm ³ /sm ³	scc/scc	

Notes:

- 1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.28: RSVD Keyword Description

Alternatively, the oil bubble-point pressure versus depth tables may be entered using the PBVD keyword in the SOLUTION section instead of this keyword.

See also the PBVD and EQUIL keywords in the SOLUTION section.

Example

Given NTEQUL equals three and NDRXVD is greater than or equal to two on the EQLDIMS keyword in the RUNSPEC section, then the following example defines the bubble-point versus depth functions.

```
--
--      DEPTH      RS
--      MSCF/STB
--      -----
RSVD
      3000.0      1.400
      8000.0      1.400
--
--      3000.0      1.400
--      8000.0      1.400
--
--      3000.0      1.400
--      8000.0      1.400
--
--      3000.0      1.400
--      8000.0      1.400
--
--      / RS VS DEPTH EQUIL REGN 01
--
--      / RS VS DEPTH EQUIL REGN 02
--
--      / RS VS DEPTH EQUIL REGN 03
```

Here three tables are entered with a constant GOR versus depth relationship.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.82 RTEMP - DEFINE THE INITIAL RESERVOIR TEMPERATURE FOR THE MODEL

This keyword defines the reservoir temperature for when a temperature option has been activated by the either the TEMP or THERMAL keywords in the RUNSPEC section. The RTEMPA keyword is alias for RTEMP

See [RTEMP - Define the Initial Reservoir Temperature for the Model](#) in the PROPS section for a full description.

10.3.83 RTEMPA - DEFINE THE INITIAL RESERVOIR TEMPERATURE FOR THE MODEL

This keyword defines the reservoir temperature for when a temperature option has been activated by the either the TEMP or THERMAL keywords in the RUNSPEC section. The RTEMP keyword is alias for RTEMPA

See [RTEMPA - Define the Initial Reservoir Temperature for the Model](#) in the PROPS section for a full description.

10.3.84 RTEMPVD - DEFINE THE INITIAL RESERVOIR TEMPERATURE VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the reservoir temperature versus depth tables for when the temperature or thermal options has been activated by either the TEMP or THERMAL keywords in the RUNSPEC section in the commercial simulator. For OPM Flow the THERMAL keyword must be used to invoke the thermal option. The RTEMPVD keyword is an alias for the TEMPVD keyword; however, the latter is ignored by OPM Flow.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth for corresponding reservoir temperature parameter TEMP.			None
		feet	m	cm	
2	TEMP	A columnar vector of real monotonically increasing down the column values that defines the corresponding reservoir temperature for the given depth.			None
		°F	°C	°C	

Notes:

- 1) The keyword is followed by NTEQUIL tables as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQIDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.29: RTEMPVD Keyword Description

See also the RTEMP keyword in the PROPS section.

Example

```
--          INITIAL RESERVOIR TEMPERATURE VERSUS DEPTH TABLE
--
RTEMPVD
--          DEPTH          TEMPERATURE
--          FEET          DEG F
--          -----
--          1000.0        90.000
--          2000.0        100.000
--          3000.0        130.000
--          4000.0        160.000
--                                     / TABLE NO. 01
--          -----
--          1000.0        90.000
--          2000.0        100.000
--          3000.0        130.000
--          4000.0        160.000
--                                     / TABLE NO. 02
--          -----
--          1000.0        90.000
--          2000.0        100.000
--          3000.0        130.000
--          4000.0        160.000
--                                     / TABLE NO. 03
```

The above example defines three identical reservoir depth versus temperature tables for the three NTEQUIL regions defined on the EQLDIMS keyword in the RUNSPEC section.

10.3.85 RV – DEFINE THE INITIAL EQUILIBRATION CGR (RV) FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RV keyword defines the initial equilibration vaporized oil-gas ratio values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, SGAS, SOIL and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if vaporized oil been activated in the model via the VAPOIL keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	RV	RV is an array of real positive numbers assigning the initial equilibration vaporized oil-gas ratio values to each cell in the model. Repeat counts may be used, for example 20*0.00720			None
		stb/Mscf	sm ³ /sm ³	scc/scc	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.30: RV Keyword Description

See also the PBUB, PDEW, PRESSURE, RS, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION CGR VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
RV      1000*0.00720    1000*0.00725    1000*0.00730    /
```

The above example defines the initial equilibration GOR values to be 0.00720 for all the cells in the first layer, 0.00725 for all the cells in the second layer, and finally 0.00730 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.86 RVVD – EQUILIBRATION VAPORIZED OIL-GAS RATIO (Rv) VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The RVVD keyword defines the vaporized oil-gas ratio (Rv) versus depth tables for each equilibration region that should be used when there is vaporize oil in the model (VAPOIL has been activated in the RUNSPEC section) and the EQLOPT2 variable has been set to a positive integer on the EQUIL keyword in the SOLUTION section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding vaporized oil-gas ratio values, RVVALS.			None
		feet	m	cm	
2	RVVALS	A columnar vector of real values that defines the vaporized oil-gas ratio values, values at the corresponding DEPTH.			None
		stb/Mscf	sm ³ /sm ³	scc/scc	

Notes:

- 1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.31: RVVD Keyword Description

Alternatively, the gas dew-point pressure versus depth tables may be entered using the PDVD keyword in the SOLUTION section instead of this keyword.

See also the PDVD and EQUIL keywords in the SOLUTION section.

Example

Given NTEQUL equals three and NDRXVD is greater than or equal to two on the EQLDIMS keyword in the RUNSPEC section, then the following example defines the bubble-point versus depth functions.

```
--
--      DEPTH      RV
--      STB/MSCF
--      -----
RVVD
      3000.0      0.00725
      8000.0      0.00725
--                                     / RV VS DEPTH EQUIL REGN 01
--      -----
      3000.0      0.00730
      8000.0      0.00730
--                                     / RV VS DEPTH EQUIL REGN 02
--      -----
      3000.0      0.00750
      8000.0      0.00750
--                                     / RV VS DEPTH EQUIL REGN 03
```

Here three tables are entered with a constant CGR versus depth relationship for each equilibration region.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.87 SALT – DEFINE THE INITIAL EQUILIBRATION SALT CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SALT keyword defines the initial equilibration salt concentration values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SGAS and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if the salt (brine) phase has been activated in the model via the BRINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SALT	SALT is an array of real positive numbers that are greater than or equal to zero assigning the initial equilibration salt concentration values to each cell in the model. Repeat counts may be used, for example 20*15.0.			None
		lb/stb	kg/sm ³	gm/scc	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a “/”.					

Table 10.32: SALT Keyword Description

See also the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION SALT VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SALT      1000*0.0000      1000*0.0000      1000*15.000      /
```

The above example defines the initial equilibration salt concentration values to be 0.0000 for all the cells in the first and second layers and finally 15.000 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.88 SALTPVD – EQUILIBRATION SALT PRECIPITATED CONCENTRATION VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SALTPVD keyword defines the initial salt precipitated concentration versus depth tables for each equilibration region for when OPM Flow's Salt Precipitation Model has been activated in the input deck via the PRECSALT keyword in the RUNSPEC section. The keyword defines the initial deposited salt as a volume fraction (S_s), that is solid salt saturation.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note

This is an OPM Flow specific keyword for the simulator's Salt Precipitation Model that is activated by the PRECSALT keyword and declaring that vaporized water is present in the run via the VAPWAT in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth for corresponding salt concentrations SALTCON.			None
		feet	m	cm	
2	SALTSAT	A columnar vector of real values that defines the corresponding volume fraction of precipitated salt for the given depth. Note only the standard Brine Model is supported and therefore there should be only one columnar vector of SALTSAT.			None
		lb/stb	kg/sm ³	gm/scc	

Notes:

- 1) The keyword is followed by NTEQUIL tables as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQIDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a "/" and there is no "/" terminator for the keyword.

Table 10.33: SALTPVD Keyword Description

Note

This is the initial precipitated salt concentration contained within the pore space, see SALTVD in the SOLUTION section that defines the initial salt concentration within the water phase.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

The example activates the standard Brine Tracking model using the BRINE keyword, OPM Flow's Salt Precipitation model using the PRECSALT keyword, and OPM Flow's vaporized water phase with the VAPWAT keyword; all three keywords are in the RUNSPEC section. The example also sets the number of equilibrium regions to three (NTEQUIL set to three on the EQLDIMS keyword also in the RUNSPEC), that is:

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      MAX      MAX      RSVD      TVDP      TVDP
--      EQLNUM    DEPTH    NODES    TABLE    NODES
EQLDIMS
--      3         1*       20        1*        1*                /
--
--      ACTIVATE STANDARD BRINE MODEL
--
BRINE
--
--      ACTIVATE THE OPM FLOW SALT PRECIPITATION MODEL (OPM FLOW KEYWORD)
--
PRECSALT
--
--      VAPORIZED WATER IN WET GAS IS PRESENT IN THE RUN (OPM FLOW KEYWORD)
--
VAPWAT
```

Then in the SOLUTION section the SALTPVD keyword would be of the form:

```
-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION
--
--      DEPTH      SALTSAT
--      -----
SALTPVD
--      3000.0      0.000
--      8000.0      0.000                / EQUIL REGN 01
--
--      3000.0      0.000
--      8000.0      0.000                / EQUIL REGN 02
--
--      3000.0      0.000
--      8000.0      0.000                / EQUIL REGN 03
```

Here the precipitated salt volume fraction has been set to zero for all three equilibration regions.

10.3.89 SALTREST – DEFINE THE RESTART SALT CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SALTREST keyword defines restart salt concentration values for all grid cells in the model and should be used in runs that are using the RESTART facility, where the initial run has not used the Low Salt or Brine options. This allows for initial runs that have used the standard water PVT properties via the PVTW keyword in the PROPS section, to be restarted with salt dependent water properties. The keyword should only be used if the salt (brine) phase has been activated in the current restart run (not the initial run) via the BRINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SALTREST	SALTREST is an array of real positive numbers that are greater than or equal to zero assigning the restart salt concentration values to each cell in the model. Repeat counts may be used, for example 20*15.0.			None
		lb/stb	kg/sm ³	gm/scc	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.34: SALTREST Keyword Description

See also the PVTWSALT keyword in the PROPS section and the RESTART keyword in the SOLUTION section.

Example

```
--
--      DEFINE RESTART SALTREST VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SALTREST
      1000*0.0000      1000*0.0000      1000*15.000      /
```

The above example defines the restart salt concentration values to be 0.0000 for all the cells in the first and second layers and finally 15.000 for all the cells in the third layer.

10.3.90 SALTVD – EQUILIBRATION SALT CONCENTRATION VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SALTVD keyword defines the initial salt concentration versus depth tables for each equilibration region for when the salt (brine) phase has been activated in the model via the BRINE keyword in the RUNSPEC section, and the EQLOPT1 variable has been set to a positive integer on the EQUIL keyword in the SOLUTION section. Secondly, the keyword should also be used to set the initial salt concentration versus depth if OPM Flow's PRECSALT keyword in the RUNSPEC section has been used to activate the simulator's Salt Precipitation model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth for corresponding salt concentrations SALTCON.			None
		feet	m	cm	
2	SALTCON	A columnar vector of real monotonically increasing down the column values that defines the corresponding salt concentration within the water phase for the given depth. There should be one columnar vector for each type of salt. For the standard Brine Model there is only one salt type and therefore there should be only one columnar vector of SALTCON. However, if the BRINE keyword has been invoked with the ECLMC keyword in the RUNSPEC section, then there should one columnar SALTCON vector for each declared salt type. <u>It is recommended to provide initial salt concentrations less than or equal to values provided by SALTSQL keyword in the PROPS section.</u>			None
		lb/stb	kg/sm ³	gm/scc	

Notes:

- 1) The keyword is followed by NTEQUIL tables as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQIDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.35: SALTVD Keyword Description

Note

This is the initial salt concentration contained within the water phase, see SALTVD in the SOLUTION section that defines the initial salt concentration that has been precipitated into the pore space.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Examples

The first example activates the standard Brine Tracking model using the BRINE keyword in the RUNSPEC section and sets the number of equilibrium regions to three (NTEQUIL set to 3 on the EQLDIMS keyword also in the RUNSPEC), that is:

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      MAX      MAX      RSVD      TVDP      TVDP
--      EQLNUM   DEPTH    NODES    TABLE  NODES
EQLDIMS
--      3        1*      20        1*       1*
--
--      ACTIVATE STANDARD BRINE MODEL
--
BRINE
```

Then in the SOLUTION section the SALTVD keyword would be of the form:

```
-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION
--
--      DEPTH      SALT-1      SALT-2      SALT-3      SALT-4
--      -----      SALTCON    SALTCON    SALTCON    SALTCON
SALTVD
--      3000.0      1.200
--      8000.0      1.200
--
--      3000.0      1.300
--      8000.0      1.300
--
--      3000.0      1.400
--      8000.0      1.400
--
--      / EQUIL REGN 01
--
--      / EQUIL REGN 02
--
--      / EQUIL REGN 03
```

The next example shows how the SALTVD keyword is entered when both the ECLMC and BRINE keywords have activated the Multi-Component Brine model in the RUNSPEC section, that is:

```

-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      MAX      MAX      RSVD      TVDP      TVDP
--      EQLNUM   DEPTH   NODES   TABLE   NODES
EQLDIMS
--      3        1*      20       1*       1*
--
--
--      ACTIVATE MULTI-COMPONENT BRINE MODEL
--
ECLMC
--
--      DEFINE WATER PHASE MULTI-COMPONENT BRINE COMPONENTS
--
--      SALT1    SALT2    SALT3    SALT4    SALT5
BRINE
--      NACL     CACL     MGC03
--

```

The above example activates the Multi-Component Brine model with three different water salinities for three equilibrium regions. In this case the resulting SALTVD keyword would be of the form:

```

-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION
--
--      DEPTH      SALT-01      SALT-02      SALT-03      SALT-04
--      -----      CONCENTR      CONCENTR      CONCENTR      CONCENTR
--
SALTVD
--      3000.0      1.200      0.540      0.020
--      7000.0      1.200      0.640      0.040
--
--      -----      -----      -----
--      3000.0      1.300      0.440      0.020
--      8000.0      1.300      0.540      0.040
--
--      -----      -----      -----
--      5000.0      1.400      0.640      0.002
--      8000.0      1.400      0.640      0.002
--

```

In this case there are three data sets, one for each equilibrium region and three SALTCON columnar vectors, one for each salt type (NACL, CACL and MGC03) declared via the BRINE keyword in the RUNSPEC section.

Note that the Multi-Component Brine model is not available in OPM Flow.

10.3.91 SBIOF - DEFINE THE INITIAL EQUILIBRATION BIOFILM VOLUME FRACTION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SBIOF keyword defines the initial equilibration biofilm volume fraction for all grid cells in the model and should be used in conjunction with the PRESSURE, SCALC, SMICR, SOXYG, and SUREA keywords to fully describe the initial state of the model. The keyword should only be used if the MICP model has been activated via the MICP keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SBIOF	SBIOF is an array of real positive numbers that are greater than or equal to zero and less than or equal to one assigning the initial equilibration biofilm volume fraction values to each cell in the model. Repeat counts may be used, for example 20*0..0010.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.36: SBIOF Keyword Description

See also the PRESSURE, SCALC, SMICR, SOXYG, and SUREA keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION BIOFILM VOLUME FRACTION FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SBIOF      1000*0.0000 1000*0.0000 1000*0.0010      /
```

The above example defines the initial equilibration biofilm volume fraction values to be 0.0000 for all the cells in the first and second layers and finally 0.0010 for all the cells in the third layer.

10.3.92 SCALC – DEFINE THE INITIAL EQUILIBRATION CALCITE VOLUME FRACTION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SCALC keyword defines the initial equilibration calcite volume fraction for all grid cells in the model and should be used in conjunction with the PRESSURE, SBIOF, SMICR, SOXYG and SUREA keywords to fully describe the initial state of the model. The keyword should only be used if the MICP model has been activated via the MICP keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SCALC	SCALC is an array of real positive numbers that are greater than or equal to zero and less than or equal to one assigning the initial equilibration calcite volume fraction values to each cell in the model. Repeat counts may be used, for example 20*0.0010.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.37: SCALC Keyword Description

See also the PRESSURE, SBIOF, SMICR, SOXYG and SUREA keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION CALCITE VOLUME FRACTION FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SCALC      1000*0.0000 1000*0.0000 1000*0.0010      /
```

The above example defines the initial equilibration calcite volume fraction values to be 0.0000 for all the cells in the first and second layers and finally 0.0010 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.93 SCVD – DEFINE EQUILIBRATION COAL SOLVENT CONCENTRATION VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SCVD keyword defines the initial coal solvent concentration versus depth tables for each equilibration region for when the coal phase has been activated in the run via the COAL keyword in the RUNSPEC section. The keyword may be used in conjunction with the SOLVCONC keyword in the SOLUTION section, to fully describe the initial state of the model. Note both SOLVCONC and SCVD are optional as the simulator will calculate the coal gas concentration based on the equilibrium concentration and the block pressure.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding coal solvent concentration, SCVALS.			None
		feet	m	cm	
2	SCVALS	A columnar vector of real values that defines the coal solvent concentration values at the corresponding DEPTH.			None
		Mscf/ft ³	sm ³ /m ³	scc/cc	

Notes:

- 1) The keyword is followed by NTEQUL records as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.38: SCVD Keyword Description

See also the SOLVCONC, GCVD, GASCONC and GASSATC keywords in the SOLUTION section.

Example

Given NTEQUL equals three and NDRXVD is greater than or equal to two on the EQLDIMS keyword in the RUNSPEC section, then the following example defines the coal solvent concentration versus depth functions.

--			
--	DEPTH	SOLVC	
--		MSCF/FT	
--	-----	-----	
SCVD			
	100.0	75.5000	
	1000.0	75.5000	/ SC VS DEPTH EQUIL REGN 01
--	-----	-----	
	100.0	65.5000	
	1000.0	65.5000	/ SC VS DEPTH EQUIL REGN 02
--	-----	-----	
	100.0	60.0000	
	1000.0	60.0000	/ SC VS DEPTH EQUIL REGN 03

Here three tables are entered with a constant coal solvent concentration versus depth relationship for each equilibration region

10.3.94 SFOAM – DEFINE THE INITIAL EQUILIBRATION FOAM CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SFOAM keyword defines the initial equilibration foam concentration values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SGAS and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if the foam phase has been activated in the model via the FOAM keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SFOAM	SFOAM is an array of real positive numbers that are greater than or equal to zero assigning the initial equilibration foam concentration values to each cell in the model.			
		Units are dependent on the transport phase specified via the FOAMOPT I variable on the FOAMOPTS keyword in the PROPS section. FOAMOPT I should be set to either GAS or WATER.			
		Repeat counts may be used, for example 20*0.5			
		Gas: lb/Mscf Water: lb/stb	Gas: kg/sm ³ Water: kg/sm ³	Gas: gm/scc Water: gm/scc	None

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.39: SFOAM Keyword Description

See also the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION FOAM VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SFOAM      1000*0.0000      1000*0.0000      1000*0.500      /
```

The above example defines the initial equilibration foam concentration values to be 0.0000 for all the cells in the first and second layers and finally 0.500 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.95 SGAS – DEFINE THE INITIAL EQUILIBRATION GAS SATURATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SGAS keyword defines the initial equilibration gas saturation values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, RV, SOIL and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if the gas phase has been activated in the model via the GAS keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SGAS	SGAS is an array of real positive numbers that are greater than or equal to zero and less than or equal to one assigning the initial equilibration gas saturation values to each cell in the model. Repeat counts may be used, for example 20*0.600.			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a “/”.					

Table 10.40: SGAS Keyword Description

Note for two phase runs it is only necessary to enter one saturation array of one of the phases present in the run (SGAS, SOIL, or SWAT), as the simulator will calculate the other phases by difference. Similarly for three phase runs it is only necessary to enter the array data for two of the phases, as the third saturation will again be calculated by the simulator.

See also the PBUB, PDEW, PRESSURE, RS, RV, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION GAS SAT VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SGAS      1000*0.7000      1000*0.6500      1000*0.6000      /
```

The above example defines the initial equilibration gas saturation values to be 0.7000 for all the cells in the first layer, 0.6500 for all the cells in the second layer, and finally 0.6000 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.96 SKIP – ACTIVATE SKIPPING OF ALL KEYWORDS AND INPUT DATA

The SKIP keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered. All keywords and between the SKIP and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP – Activate Skipping of All Keywords and Input Data](#) in the GLOBAL section for a full description.

10.3.97 SKIP100 – ACTIVATE SKIPPING OF BLACK-OIL KEYWORDS AND INPUT DATA

This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered. All black-oil keywords between the SKIP100 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data](#) in the GLOBAL section for a full description.

10.3.98 SKIP300 – ACTIVATE SKIPPING OF “COMPOSITIONAL” KEYWORDS AND INPUT DATA

Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered. All “compositional” keywords between the SKIP300 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data](#) in the GLOBAL section for a full description.

10.3.99 SMICR – DEFINE THE INITIAL EQUILIBRATION MICROBIAL CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	---------------------------------	-------------------------	--------------------------

Description

The SMICR keyword defines the initial equilibration microbial concentration values for all grid cells in the model and should be used in conjunction with the PRESSURE, SBIOF, SCALC, SOXYG, and SUREA keywords to fully describe the initial state of the model. The keyword should only be used if the MICP model has been activated via the MICP keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SMICR	SMICR is an array of real positive numbers that are greater than or equal to zero assigning the initial equilibration microbial concentration values to each cell in the model. Repeat counts may be used, for example 20*0.1500.			None
		lb/stb	kg/sm ³	gm/scc	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.41: SMICR Keyword Description

See also the PRESSURE, SBIOF, SCALC, SOXYG, and SUREA keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION MICROBIAL CONCENTRATION FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SMICR      1000*0.0000 1000*0.0000 1000*0.1500      /
```

The above example defines the initial equilibration microbial concentration values to be 0.0000 for all the cells in the first and second layers and finally 0.1500 for all the cells in the third layer.

10.3.100 SOIL – DEFINE THE INITIAL EQUILIBRATION OIL SATURATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SOIL keyword defines the initial equilibration oil saturation values for all grid cells in the model and should be used in conjunction with the PBUB, PDEV, PRESSURE, RS, RV, SGAS and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if the oil phase has been activated in the model via the OIL keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SOIL	SOIL is an array of real positive numbers that are greater than or equal to zero and less than or equal to one assigning the initial equilibration oil saturation values to each cell in the model. Repeat counts may be used, for example 20*0.600.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.42: SOIL Keyword Description

Note for two phase runs it is only necessary to enter one saturation array of one of the phases present in the run (SGAS, SOIL, or SWAT), as the simulator will calculate the other phases by difference. Similarly for three phase runs it is only necessary to enter the array data for two of the phases, as the third saturation will again be calculated by the simulator.

See also the PBUB, PDEV, PRESSURE, RS, RV, SGAS and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION OIL SAT VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SOIL      1000*0.7000      1000*0.6500      1000*0.6000      /
```

The above example defines the initial equilibration oil saturation values to be 0.7000 for all the cells in the first layer, 0.6500 for all the cells in the second layer, and finally 0.6000 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.101 SOLUTION - DEFINE THE START OF THE SOLUTION SECTION OF KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	---------------------------------	-------------------------	--------------------------

Description

The SOLUTION activation keyword marks the end of the REGIONS section and the start of the SOLUTION section that defines the initialized parameters used to initialize the model, by:

- 1) defining fluid contacts and pressures, or
- 2) defining pressures and fluid saturations for all cells in the model, or
- 3) by restarting from a previously run OPM Flow completed run.

There is no data required for this keyword.

Example

```
-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION
```

The above example marks the end of the REGIONS section and the start of the SOLUTION section in the OPM Flow data input file.

10.3.102 SOLVCONC – DEFINE THE INITIAL COAL SOLVENT CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SOLVCONC keyword defines the initial coal solvent concentration values for all matrix grid cells in the model and should be used in conjunction with the SCVD keyword in the SOLUTION section, to fully describe the initial state of the model. The keyword should only be used if the coal phase has been activated in the model via the COAL keyword in the RUNSPEC section. Note both SOLVCONC and SCVD are optional as the simulator will calculate the coal solvent concentration based on the equilibrium concentration and the block pressure.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SOLVCONC	SOLVCONC is an array of real positive numbers that define the initial equilibration coal solvent concentration values to each matrix cell in the model. Repeat counts may be used, for example 20*75.0.			None
		Mscf/ft ³	sm ³ /m ³	scc/cc	

Notes:

- 1) The number of entries should correspond to number of matrix cells in the model, that is (NX x NY x NZ) divided by two, as per the parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.43: SOLVCONC Keyword Description

See also the SCVD keyword in the SOLUTION section to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION COAL SOLVENT CONCENTRATION FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 6
--
SOLVCONC      1000*75.500      1000*65.500      1000*60.000      /
```

The above example defines the initial coal solvent concentration values to be 75.500 for all the matrix cells in the first layer, 65.500 for all the cells in the second layer, and finally 60.000 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.103 SOLVFRAC – DEFINE THE INITIAL GAS SOLVENT FRACTION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SOLVFRAC keyword defines the initial solvent fraction within the gas phase values for all matrix grid cells in the model. The keyword should only be used if the coal phase has been activated in the model via the COAL keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

SOLVFRAC is used with the standard equilibration method to initialize the model via the EQUIL keyword in the RUNSPEC section, as oppose to the non-standard enumeration method.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SOLVFRAC	SOLVFRAC is an array of real positive numbers that define the initial solvent fraction within the gas phase values for each matrix cell in the model. Repeat counts may be used, for example 20*0.075.			None
		dimensionless	dimensionless	dimensionless	
Notes: <div><div>1)</div><div>The number of entries should correspond to number of matrix cells in the model, that is (NX x NY x NZ) divided by two, as per the parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.</div></div> <div><div>2)</div><div>The keyword is terminated by a “/”.</div></div>					

Table 10.44: SOLVFRAC Keyword Description

See also the EQUIL keyword in the SOLUTION section to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION GAS SOLVENT FRACTION FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 6
--
SOLVFRAC
      1000*0.0250      1000*0.0350      1000*0.0500      /
```

The above example defines the initial gas solvent fraction values to be 0.250 for all the matrix cells in the first layer, 0.0350 for all the cells in the second layer, and finally 0.0500 for all the cells in the third layer.

10.3.104 SOXYG - DEFINE THE INITIAL EQUILIBRATION OXYGEN CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SOXYG keyword defines the initial equilibration oxygen concentration values for all grid cells in the model and should be used in conjunction with the PRESSURE, SBIOF, SCALC, SMICR, and SUREA keywords to fully describe the initial state of the model. The keyword should only be used if the MICP model has been activated via the MICP keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SOXYG	SOXYG is an array of real positive numbers that are greater than or equal to zero assigning the initial equilibration oxygen concentration values to each cell in the model. Repeat counts may be used, for example 20*0.1500			None
		lb/stb	kg/sm ³	gm/scc	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.45: SOXYG Keyword Description

See also the PRESSURE, SBIOF, SCALC, SMICR, and SUREA keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION OXYGEN CONCENTRATION FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SOXYG      1000*0.0000 1000*0.0000 1000*0.1500      /
```

The above example defines the initial equilibration oxygen concentration values to be 0.0000 for all the cells in the first and second layers and finally 0.1500 for all the cells in the third layer.

10.3.105 SPOLY – DEFINE THE INITIAL EQUILIBRATION POLYMER CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SPOLY keyword defines the initial equilibration polymer concentration values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SGAS and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if the polymer phase has been activated in the model via the POLYMER keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SPOLY	SPOLY is an array of real positive numbers that are greater than or equal to zero assigning the initial equilibration polymer concentration values to each cell in the model. Repeat counts may be used,for example 20*25.0.			None
		lb/stb	kg/sm ³	gm/scc	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section,unless the BOX keyword defines a sub area of the grid,in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a “/”.					

Table 10.46: SPOLY Keyword Description

See also the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION POLYMER VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SPOLY
      1000*0.0000      1000*0.0000      1000*15.000      /
```

The above example defines the initial equilibration polymer concentration values to be 0.0000 for all the cells in the first and second layers and finally 15.000 for all the cells in the third layer.

10.3.106 SSOL – DEFINE THE INITIAL EQUILIBRATION SOLVENT SATURATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SSOL keyword defines the initial equilibration solvent saturation values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if the solvent phase has been activated in the model via the SOLVENT keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SSOL	SSOL is an array of real positive numbers that are greater than or equal to zero and less than or equal to one assigning the initial equilibration solvent saturation values to each cell in the model. Repeat counts may be used, for example 20*0.000.			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement. 2) The keyword is terminated by a “/”.					

Table 10.47: SSOL Keyword Description

See also the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SOIL, and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION GAS SAT VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SSOL      1000*0.0000      1000*0.0000      1000*0.0000      /
```

The above example defines the initial equilibration solvent saturation values to be 0.0 for all the cells in the in the model.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.107 SUREA - DEFINE THE INITIAL EQUILIBRATION UREA CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SUREA keyword defines the initial equilibration urea concentration values for all grid cells in the model and should be used in conjunction with the PRESSURE, SBIOF, SCALC, SMICR, and SOXYG keywords to fully describe the initial state of the model. The keyword should only be used if the MICP model has been activated via the MICP keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SUREA	SUREA is an array of real positive numbers that are greater than or equal to zero assigning the initial equilibration urea concentration values to each cell in the model. Repeat counts may be used, for example 20*30.0.			None
		lb/stb	kg/sm ³	gm/scc	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.48: SUREA Keyword Description

See also the PRESSURE, SBIOF, SCALC, SMICR, and SOXYG keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION UREA CONCENTRATION FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SUREA      1000*0.0000 1000*0.0000 1000*20.0      /
```

The above example defines the initial equilibration urea concentration values to be 0.0000 for all the cells in the first and second layers and finally 20.0 for all the cells in the third layer.

10.3.108 SURF – DEFINE THE INITIAL EQUILIBRATION POLYMER CONCENTRATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	-----------------	-------------------------	--------------------------

Description

The SURF keyword defines the initial equilibration surfactant concentration values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SGAS and SWAT keywords etc., to fully describe the initial state of the model. The keyword should only be used if the surfactant phase has been activated in the model via the SURFACT keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SURF	SURF is an array of real positive numbers that are greater than or equal to zero assigning the initial equilibration surfactant concentration values to each cell in the model. Repeat counts may be used,for example 20*25.0.			None
		lb/stb	kg/sm ³	gm/scc	

Notes:

1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section,unless the BOX keyword defines a sub area of the grid,in which case the total number of entries should correspond to the number of cells defined by the BOX statement.

2) The keyword is terminated by a “/”.

Table 10.49: SURF Keyword Description

See also the PBUB, PDEW, PRESSURE, RS, RV, SGAS, SOIL and SWAT keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION SURFACTANT VALUES FOR ALL CELLS
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SURF      1000*0.0000      1000*0.0000      1000*0.2500      /
```

The above example defines the initial equilibration surfactant concentration values to be 0.0000 for all the cells in the first and second layers and finally 0.2500 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.109 SWAT – DEFINE THE INITIAL EQUILIBRATION WATER SATURATION FOR ALL GRID BLOCKS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SWAT keyword defines the initial equilibration water saturation values for all grid cells in the model and should be used in conjunction with the PBUB, PDEW, PRESSURE, RS, RV, SGAS and SOIL keywords etc., to fully describe the initial state of the model. The keyword should only be used if the water phase has been activated in the model via the WATER keyword in the RUNSPEC section.

This is the non-standard method to initialize the model via enumeration and is seldom employed in the industry. The standard methodology is for OPM Flow to initialize a model using the parameters on the EQUIL keyword combined with other keywords to fully describe the initial state of the model. The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SWAT	SWAT is an array of real positive numbers that are greater than or equal to zero and less than or equal to one assigning the initial equilibration water saturation values to each cell in the model. Repeat counts may be used, for example 20*0.300.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.50: SWAT Keyword Description

Note for two phase runs it is only necessary to enter one saturation array of one of the phases present in the run (SGAS, SOIL, or SWAT), as the simulator will calculate the other phases by difference. Similarly for three phase runs it is only necessary to enter the array data for two of the phases, as the third saturation will again be calculated by the simulator.

See also the PBUB, PDEW, PRESSURE, RS, RV, SGAS and SOIL keywords to fully define the initial state of the model.

Example

```
--
--      DEFINE INITIAL EQUILIBRATION WAT SAT VALUES FOR ALL CELLS IN THE MODEL
--      BASED ON NX = 100, NY = 100 AND NZ = 3
--
SWAT      1000*0.2000      1000*0.2500      1000*0.4500      /
```

The above example defines the initial equilibration water saturation values to be 0.2000 for all the cells in the first layer, 0.2500 for all the cells in the second layer, and finally 0.4500 for all the cells in the third layer.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

10.3.110 TBLK – DEFINE TRACER INITIAL GRID BLOCK CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

TBLK keyword defines the initial tracer concentration for all or selected cells in the model, for when the TRACERS keyword in the RUNSPEC section has declared the maximum number of tracers for each phase, and the TRACER keyword in the PROPS section has defined the tracer. This keyword is not in the standard keyword format due to the tracer name being concatenated to the keyword TBLK to fully define the tracer being initialized.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	NAME	<p>A character string of up to eight characters, consisting of TBLK as the first four characters followed by a four letter character string defining the tracer's name. The fifth character should either be the letter F or the letter S, that indicates the state of the tracer either to be free (F) or in solution (S). For example, TBLKFIGS (free) or TBLKSIGS (solution).</p> <p>The last three characters of NAME (the effective tracer name) must also match an entry on the TRACER keyword's NAME parameter, in the PROPS section.</p> <p>Note it is best to void names beginning with the letters F, S, and T as these names may create naming issues in post-processing software.</p>			None
2	TBLK	<p>TBLK is an array of real numbers greater than or equal to zero, that are assigned the tracer concentration values for each cell in the model or the current input BOX.</p> <p>Repeat counts may be used, for example 200*0.0.</p> <p>The units for the tracer, if required, are set on the TRACER keyword in the PROPS section. This should be the same as the PHASE in the model.</p>			None
		Liquid:TBLK/stb Gas:TBLK/Mscf	Liquid:TBLK/sm ³ Gas:TBLK/sm ³	Liquid:TBLK/scc Gas:TBLK/scc	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.51: TBLK Keyword Description

See also the TRACERS keyword in the RUNSPEC section to declared the maximum number of tracers for each phase, the TRACER keyword in the PROPS section to define the tracer, and the WTRACER keyword in the SCHEDULE section that defines the wells injecting the tracer.

Note

Currently, one cannot initialize tracers using the EQUALS keyword. Instead use the array format, that is the keyword followed by the required number of values, or the TVDP keyword in the SOLUTION section to set the initial tracer concentrations as a function of depth.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Example

The following TRACERS keyword in the RUNSPEC section declares the number of tracers in the model.

```
--
--          NUMBER AND TYPE OF TRACERS
--          NO OIL  NO WAT  NO GAS  NO ENV  DIFF    MAX    MIN    TRACER
--          TRACERS TRACERS TRACERS TRACERS CONTL  NONLIN NONLIN NONLIN
TRACERS
          0          0          1          0      'NODIFF' 1*    1*    1*          /
```

And the TRACER keyword in the PROPS section declares the tracer name and the phase for the tracer.

```
--
--          DEFINE TRACER NAMES
--
--          TRACER    TRACER
--          NAME      PHASE
--          -----
TRACER
          'IGS'      'GAS'          / INJECTED GAS
/
```

Finally, the TBLK keyword in the SOLUTION section sets the initial tracer concentrations in both the free and solution states.

```
--
--          INITIAL EQUILIBRATION TRACER SATURATION VERSUS DEPTH
--
--          DEPTH      TRACER
--          -----
--          TVDPFIGS
--          1000.0     0.0
--          5000.0     0.0          / TRACER FIGS CONCENTRATION VS DEPTH
--
--          TVDPSIGS
--          1000.0     0.0
--          5000.0     0.0          / TRACER FSIGS CONCENTRATION VS
```

Here the initial concentrations are set to zero.

Then in the SCHEDULE section one can use the WTRACER keyword to define the well injecting the tracer and the tracer concentration being injected,.

```
--
--          DEFINE CONCENTRATION OF TRACERS IN THE INJECTION STREAMS,
--          INJECTION TRACER CONCENTRATIONS NOT DEFINED USING THE WTRACER
--          KEYWORD ARE ASSUMED TO BE ZERO.
--
--          WELL NAME  TRACER  TRACER  TRACER
--          NAME TRACER VALUE   CUM     GROUP
WTRACER
'GI01'  'IGS'  1.0          /
/
```

In this case, well GI01 is a gas injection well injecting gas with a tracer concentration of 1.0. The example shows how to track dry gas injection in a gas condensate reservoir, although, the example can be used for any type of gas injection.

10.3.111 TEMPI – DEFINE THE INITIAL TEMPERATURE VALUES FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	---------------------------------	-------------------------	--------------------------

Description

TEMPI defines the initial temperature for all the cells in the model via an array for when the THERMAL option has been activated in the RUNSPEC section. This keyword is used to explicitly define the initial reservoir temperature via the Enumeration Initialization method rather than using the Equilibration Initialization method that utilizes the EQUIL keyword in the SOLUTION section.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

The keyword can be used with all grid types.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TEMPI	TEMPI is an array of real positive numbers assigning the initial temperature to each cell in the model. Repeat counts may be used, for example 20*100.0.			None
		°F	°C	°C	

Notes:

- 1) The number of entries should correspond to the NX x NY x NZ parameters on the DIMENS keyword in the RUNSPEC section, unless the BOX keyword defines a sub area of the grid, in which case the total number of entries should correspond to the number of cells defined by the BOX statement.
- 2) The keyword is terminated by a “/”.

Table 10.52: TEMPI Keyword Description

See also the RTEMP and RTEMPA keywords in the PROPS section and the RTEMPVD in the SOLUTION section for alternative ways to initialize the model's initial temperature.

Example

```
--
--      DEFINE GRID BLOCK TEMPERATURE FOR ALL CELLS
--      (BASED ON NX x NY x NZ = 300)
--
TEMPI      100*212.0    100*215.0    100*220.0      /
```

The above example defines the initial temperature to be 212.0, 215.0, and 220.0 °F for the first, second and third layers in the model for all 300 cells, as defined by the DIMENS keyword in the RUNSPEC section.

10.3.112 TEMPVD - DEFINE THE INITIAL RESERVOIR TEMPERATURE VERSUS DEPTH TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	-----------------	-------------------------	--------------------------

Description

This keyword defines the reservoir temperature versus depth tables for when the temperature or thermal options has been activated by either the TEMP or THERMAL keywords in the RUNSPEC section in the commercial simulator. For OPM Flow the THERMAL keyword must be used to invoke the thermal option.

The TEMPVD keyword is an alias for the RTEMPVD keyword; however, the former is ignored by OPM Flow.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A real monotonically increasing down the column values that defines the depth for corresponding reservoir temperature RTEMP.			None
		feet	m	cm	
2	RTEMP	A real monotonically increasing down the column values that defines the corresponding reservoir temperature for the given depth			None
		°F	°C	°C	

Notes:

- 1) The keyword is followed by NTEQUIL tables as declared on the EQLDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NDRXVD rows as declared on the EQLDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 10.53: TEMPVD Keyword Description

See also the RTEMP keyword in the PROPS section and RTEMPVD keyword in the SOLUTION section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

```
--
--      INITIAL RESERVOIR TEMPERATURE VERSUS DEPTH TABLE
--
RTEMPVD
--      DEPTH      TEMPERATURE
--      FEET       DEG F
--      -----
--      1000.0      90.000
--      2000.0      100.000
--      3000.0      130.000
--      4000.0      160.000
--
--
--      1000.0      90.000
--      2000.0      100.000
--      3000.0      130.000
--      4000.0      160.000
--
--
--      1000.0      90.000
--      2000.0      100.000
--      3000.0      130.000
--      4000.0      160.000
```

/ TABLE N0. 01

/ TABLE N0. 02

/ TABLE N0. 03

The above example defines three identical reservoir depth versus temperature tables for the three NTEQUIL regions defined on the EQLDIMS keyword in the RUNSPEC section.

10.3.113 THPRES - DEFINE EQUILIBRATION REGION THRESHOLD PRESSURES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The THPRES defines the threshold pressure between various equilibration regions that have been defined by the EQLNUM keyword in the REGIONS section. The threshold pressure defines the potential difference between two regions which must be exceeded before flow can occur between the two regions. Once flow occurs the potential between the two regions is reduced by the threshold pressure.

This option must be activated by THPRES variable on EQLOPTS keyword in the RUNSPEC section in order to utilize this feature. Note that the irreversible option, as defined by IRREVER variable on EQLOPTS keyword in the RUNSPEC section, is not supported.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	EQLNUM1	EQLNUM1 is an a positive integer that is greater or equal to one and less than or equal to NTEQUL on the EQLDIMS keyword in the RUNSPEC section, that defines the “from” equilibration region number.			None
		dimensionless	dimensionless	dimensionless	
2	EQLNUM2	EQLNUM2 is an a positive integer that is greater or equal to one and less than or equal to NTEQUL on the EQLDIMS keyword in the RUNSPEC section, that defines the “to” equilibration region number.			None
		dimensionless	dimensionless	dimensionless	
3	THPRES	THPRES defines the threshold pressure from EQLNUM1 to EQLNUM2 and from EQLNUM2 to EQLNUM1. The default value of I* sets the threshold pressure to a value that initially prevents flow between the two equilibration regions. Any subsequent production or injection in either of the two equilibration regions will therefore result in flow between the two regions. Thus, this default initially isolates the two equilibration regions. If a equilibration region number pair has not been explicitly defined by this keyword the THPRES is set to zero, for no threshold pressure.			I*
		psia	barsa	atma	

Notes:

- The keyword is followed by any number of records with each record terminated by a “/” and the keyword is terminated by a “/”.

Table 10.54: THPRES Keyword Description

See also the MULTREGT keyword in the GRID section that uses the transmissibility between the MULTNUM, FLUXNUM or OPERNUM region arrays to control the flow between various regions within the model.

Note

Care should be taken that cells in different EQLNUM regions are not in communication, as this will result in an unstable initial equilibration.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Examples

Given NTEQUL is equal to six on the EQLDIMS keyword in the RUNSPEC section,

```
--
--      EQLNUM  EQLNUM  THPRES
--      FROM    TO      VALUE
THPRES
      1        2        0.588031      / REGN 1 TO REGN 2
      2        1        0.588031      / REGN 2 TO REGN 1
      1        3        0.787619      / REGN 1 TO REGN 3
      3        1        0.787619      / REGN 3 TO REGN 1
      1        4        7.000830      / REGN 1 TO REGN 4
      4        1        7.000830      / REGN 4 TO REGN 1
/
```

The above example defines the threshold pressures between equilibration regions one and two, one and three and one and four. As the threshold pressures between regions one and five and one and six (as well as other combinations), have not been explicitly set in the example, the threshold pressures for these combinations are set to zero.

However, as the irreversible option, as defined by IRREVER variable on EQLOPTS keyword in the RUNSPEC section, is not supported, then example can be simplified to:

```
--
--      EQLNUM  EQLNUM  THPRES
--      FROM    TO      VALUE
THPRES
      1        2        0.588031      / REGN 1 AND REGN 2
      1        3        0.787619      / REGN 1 AND REGN 3
      1        4        7.000830      / REGN 1 AND REGN 4
/
```

Again, as the threshold pressures between regions one and five and one and six (as well as other combinations), have not been explicitly set in the example, the threshold pressures for these combinations are set to zero.

10.3.114 TVDP – DEFINE THE INITIAL EQUILIBRATION TRACER SATURATION VERSUS DEPTH FUNCTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the initial equilibration tracer concentration versus depth functions for each grid cell in the model, for when the Tracer option has been enabled by the TRACERS keyword in the RUNSPEC section. The maximum number of tracers for each phase are declared on the TRACERS keyword in the RUNSPEC section. Unlike other keywords, the TVDP keyword must be concatenated with the name of the tracer declared by the TRACER keyword in the PROPS section as outlined in Table 10.55.

No.	Name	Description	Default
1	TVDP	A four letter character string equal to TVDP that is the root keyword name for this data set function.	None
2	STATE	A one letter character string defining the tracer's state, which is concatenate to TVDP to given the partial name of the keyword. STATE should be set to F ("free") or S ("solution"), with the latter related to a tracer that is dissolved in an associated phase. If the tracer defined by NAME is associated with the OIL, GAS or WATER phases then STATE should be set to F. If the tracer is associated with the DISGAS or VAPOIL phases then STATE should be set to S.	None
3	NAME	A three letter character string defining the tracer's name as defined by the TRACER keyword, which is concatenate to TVDP and STATE to given the full name of the keyword. For example, if the TRACER keyword has been used to define a tracer named SEA in the WAT phase, then the full keyword name would be TVDPFSEA. Whereas, if a tracer was defined as IGS for the GAS phase then it could be TVDPFIGS and/or TVDPSIGS depending if one was wishing to track the "free" or "solution" gas phase, or both. Note it is best to void names beginning with the letters F, S, and T as these names may great naming issues in post-processing software.	None

Table 10.55:TVDP Keyword Name Format

Following the declaration of the full keyword name, TVDSTATENAME, the keyword is followed by the data as outlined below.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DEPTH	A columnar vector of real monotonically increasing down the column values that defines the depth values for the corresponding initial tracer saturations,TVDP			None
		feet	m	cm	
2	TVDPVAL	A columnar vector of real values, greater than or equal to zero, that defines the initial tracer concentration values at the corresponding DEPTH. If tracer units have been defined by the UNITS parameter on the TRACER keyword in the PROPS section, then the units of TVDPVAL are the ratio of UNITS divided the TVDPVAL units given below. For example, if UNITS was defined as kg, then for metric units TVDPVAL units would be kg/sm ³ .			None
		Liquid: stb Gas: Mscf	Liquid: sm ³ Gas: sm ³	Liquid: scc Gas: scc	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by NTTRVD records as declared on the EQLDIMS keyword in the RUNSPEC section. 2) Each table must contain a minimum of two rows and a maximum of NSTRVD rows as declared on the EQLDIMS keyword in the RUNSPEC section. 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 10.56: TVDP Keyword Description

See also the TBLK keyword in the SOLUTION section that also sets the initial tracer concentration for each grid block.

Example

This example is taken from Norne model, in which there are seven tracers related to the water phase.

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      MAX      MAX      RSVD      TVDP      TVDP
--      EQLNUM   DEPTH   NODES   TABLE   NODES
EQLDIMS
  9          1*       20        7         1*
--
-- =====
--
-- PROPS SECTION
--
-- =====
PROPS
--
--      DEFINE TRACER NAMES
--
--      TRACER   TRACER
--      NAME     PHASE
--      -----
TRACER
  SEA          WAT
  HTO          WAT
  S36          WAT
  2FB          WAT
  4FB          WAT
  DFB          WAT
  TFB          WAT
/
```



```

-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION
--
--      INITIAL EQUILIBRATION TRACER SATURATION VERSUS DEPTH
--
--      DEPTH      TRACER
--      -----
TVDPFSEA
      1000.0      0.0
      5000.0      0.0
                                / TRACER FSEA CONCENTRATION VS DEPTH

TVDPFHTO
      1000.0      0.0
      5000.0      0.0
                                / TRACER FHTO CONCENTRATION VS DEPTH

TVDPFS36
      1000.0      0.0
      5000.0      0.0
                                / TRACER FS36 CONCENTRATION VS DEPTH

TVDPF2FB
      1000.0      0.0
      5000.0      0.0
                                / TRACER F2FB CONCENTRATION VS DEPTH

TVDPF4FB
      1000.0      0.0
      5000.0      0.0
                                / TRACER F4FB CONCENTRATION VS DEPTH

TVDPFDfB
      1000.0      0.0
      5000.0      0.0
                                / TRACER FDFB CONCENTRATION VS DEPTH

TVDPFTFB
      1000.0      0.0
      5000.0      0.0
                                / TRACER FTFB CONCENTRATION VS DEPTH

```

Here we first define the number of tracers in the model via the EQLDIMS keyword in the RUNSPEC section, then the actual tracers themselves in the PROPS section using the TRACER keyword, and finally the initial tracer concentrations are all set to zero via the TVDP keyword in the PROPS section.

10.3.115 VAPPARS – OIL VAPORIZATION PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

VAPPARS defines the rate of oil vaporization in the presence of undersaturated gas and the rate at which the remaining oil gets “heavier” via the reduction in the solution gas-oil ratio (“Rs”). This keyword should only be used if the OIL, GAS, DISGAS and VAPOIL keywords in the RUNSPEC section have been invoked to allow oil, gas, dissolved gas and vaporized oil to be present in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	VAPPAR1	VAPPAR1 is a real positive dimensionless number that defines the rate at which oil vaporizes into the available undersaturated gas in a grid block. The default value of zero invokes the standard black-oil formulation in which all oil vaporizes into the available undersaturated phase in a grid cell. Increasing this parameter decrease the rate of vaporization. Typical values for VAPPAR1 range from zero and five.			0
		dimensionless	dimensionless	dimensionless	
2	VAPPAR2	VAPPAR2 is a real positive dimensionless number that defines the rate at which the Rs of the remaining oil in a grid cell decreases The default value of zero invokes the standard black-oil formulation in which the remaining oil's Rs does not change as the oil vaporizes into the available undersaturated gas in a grid cell. Increasing this parameter increases the difference between the remaining oil and the vaporized oil Rs values. Typical values for VAPPAR2 are less than one.			0
		dimensionless	dimensionless	dimensionless	

Notes:

1) The keyword is terminated by a “/”.

Table 10.57: VAPPARS Keyword Description

Note this keyword is normally used in history matching field performance to control the availability of the vaporized oil phase.

See also the DRSDT and DRVDT keywords in the SCHEDULE section that control the rate at which the solution gas-oil ratio and the vaporized oil-gas ratio increase within a grid block, respectively.

Examples

The first example sets the black-oil default parameters

```
--
--      OIL VAPORIZATION PARAMETERS
--
--      OIL-VAP    RS-INCS
--      VAPPAR1    VAPPAR2
VAPPARS
      0            0                               /
```

And the second example decreases the rate at which the oil vaporizes into the available undersaturated gas and increases the difference between the grid block oil saturation Rs and the vaporized oil Rs within a grid cell.

```
--
--      OIL VAPORIZATION PARAMETERS
--
--      OIL-VAP    RS-INCS
--      VAPPAR1    VAPPAR2
VAPPARS
      1.5          0.150                               /
```

Again, the keyword is normally used in history matching field performance to control the availability of the vaporized oil phase.

10.3.116 VISDATES – DEFINE EXTERNAL RESERVOIR GEO-MECHANICS VISAGE STRESS DATES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The VISDATES keyword defines External Reservoir Geo-Mechanics VISAGE option stress dates. The keyword should not be used in input decks as the associated data is generated by an external program.

This keyword is ignored by OPM Flow and has no effect on the simulation.

10.3.117 VISOPTS – DEFINE EXTERNAL RESERVOIR GEO-MECHANICS VISAGE OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The VISDATES keyword defines External Reservoir Geo-Mechanics VISAGE option modeling options. The keyword should not be used in input decks as the associated data is generated by an external program.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

10.3.118 WARN – ACTIVATE WARNING MESSAGES

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

See [WARN – Activate Warning Messages](#) in the GLOBAL section for a full description.

CHAPTER 11: SUMMARY SECTION

11.1 INTRODUCTION

The SUMMARY section defines the variables to be written to the summary files that are used to generate line graphs of properties such as oil flow rate versus time, grid block pressure versus time, etc. Unlike the other sections, the SUMMARY section has basically two types of keywords, keywords that request a variable to be written out to the summary file as described in section [11.2 Data Requirements](#), and the conventional type of keyword described in section [11.3 Keyword Definitions](#) that perform an action. There are literally hundreds of keywords associated with the former indicating the variety of data that can be written to the summary file. Whereas, for the latter there are less than twenty keywords.

Summary file output consists of three files as outlined Table 11.1, with the raw requested data stored in SUMMARY index and SUMMARY data files, the SUMMARY RSM file is an ASCII file that is generated from the other two files by the simulator at the end of the run.

File Type	Data Type	Description	OPM Flow Status
ESMRY	Dynamic Vector Data	This is an OPM FLOW specific Enhanced SUMMARY (*.ESMRY) output file format that is optimized for fast loading of selected vectors by post-processing applications. The *.ESMRY file is re-written for every time step and does not have a performance impact on the simulation. Load times are in the order of 30 times faster compared with fetching selected vectors using the *.UNSMRY file format in post processing software. The file type is compatible with OPM ResInsight and the option is activated via the enable-esmry=true command line option. Note that the FMTOUT, MULTOUT, and UNIFOUT keywords have no impact on this file type.	OPM Flow Fully Supported.
RSM	Output File	The RSM file contains the variables requested to be written to the SUMMARY file via the keywords described in the 11.2 Data Requirements , in a tabulated ASCII output format. The format of the file enables the data to be easily loaded into the LibreOffice Calc program for further processing, as each vector represents one column. The report is written at the end of the simulation run by parsing the SUMMARY Index and SUMMARY Data files.	Fully Supported
SUMMARY Index	Dynamic Vector Index	The SUMMARY index file type specifies and defines the format and data type written to the SUMMARY Data file.	Fully Supported
SUMMARY Data	Dynamic Vector Data	The SUMMARY data file contains the variables requested to be written to the file via the keywords described in the 11.2 Data Requirements . The data consists of vectors that are used to generate line graphs of properties such as oil flow rate versus time, grid block pressure versus time, etc. The properties to be stored on the SUMMARY file are written to the summary file at the end of each successful time step. The data can be used to compare actual production data with the simulation derived results in post processing software like OPM ResInsight.	Fully Supported
Notes: <ol style="list-style-type: none"> 1) If no summary data is requested then the files will not be created. 2) The SUMMARY files can be loaded or written out in either unified or non-unified formats as well as in binary or ASCII formats. 			

Table 11.1: OPM Flow Summary Output File Summary

As mentioned in Table 11.1 all files can be written out in either ASCII or binary formats and in addition the SUMMARY file can be loaded or written out in either unified or non-unified formats. The file type (ASCII or

binary) and file structure format (unified or non-unified formats) is set via a set of keywords in the RUNSPEC section, as described in Table 11.2 for easy of reference.

Process	RUNSPEC Keyword	Description	Files
Input	FMTIN	The keyword defines the input files to be formatted as ASCII i.e. text files, as oppose to binary files.	*.FSMSPEC *.FUNSMRY
	MULTIN	The keyword defines the input files to be non-unified multiple files, as opposed to unified files.	*.SMSPEC *.S0001
	UNIFIN	UNIFIN defines the input files to be unified files, as opposed to non-unified multiple files.	*.SMSPEC *.UNSMRY
Output	FMTOUT	The keyword sets all output files to be formatted as ASCII i.e. text files, as opposed to binary files.	*.FSMSPEC *.FUNSMRY
	MULTOUT	MULTOUT defines the output files to be non-unified multiple files, as opposed to unified files.	*.SMSPEC *.S0001
	UNIFOUT	UNIFOUT defines the output files to be unified files, as opposed to non-unified multiple files.	*.SMSPEC *.UNSMRY
Notes: <ol style="list-style-type: none"> 1) A binary file is computer-readable but not human-readable. 2) For unified files if the run terminates unexpectedly, or there is insufficient disk space, then the last reported output is not stored. The main advantage of unified files is that if a number of simulation cases reside in one directory, the number of output files per case is minimum compared to using non-unified multiple files. There is no limit on the number of reporting steps that a unified file can store. 			

Table 11.2: RUNSPEC Input and Output File Format Keywords

OPM Flow automatically generates the SUMMARY file names based on the input file name and the output options selected via the keywords in the RUNSPEC section as summarized in in Table 11.2. For example, starting OPM Flow using the following command from the terminal:

`flow CASENAME`

will start the simulator and run the case specified by CASENAME.DATA. Here CASENAME is the “root” of the filename and DATA is the extension of the filename. OPM Flow will generate the SUMMARY output files based on the CASENAME with the extension based on the type (ASCII or binary) and file structure format (unified or non-unified formats), as outlined in Table 11.3.

File Type	Unformatted Extension	Description	Formatted Extension
RSM	*.RSM	Output RSM file.	*.RSM
SUMMARY Index	*.SMSPEC	The SUMMARY index file for both unified and non-unified formats.	*.FSMSPEC

File Type	Unformatted Extension	Description	Formatted Extension
SUMMARY Data Non-Unified	*.Snnnn	The SUMMARY data files containing the variables requested to be written to the SUMMARY files. For example, the SUMMARY non-unified binary files would be: CASENAME.S0001 CASENAME.S0002 CASENAME.S0003 etc. CASENAME.SMSPEC	*.Annnn
SUMMARY Data Unified	*.UNSMRY	The SUMMARY data file containing the variables requested to be written to the SUMMARY file. For example, the SUMMARY data unified binary files: CASENAME.UNSMRY CASENAME.SMSPEC	*.FUNSMRY
Notes: 1) The above file naming convention is for Linux type operating systems, as OPM Flow is currently only officially supported for Linux distributions.			

Table 11.3: OPM Flow File Naming Conventions

The default behavior is write out the requested variables at each time step. As this can lead to large files, especially for full field simulation models, the [RPTONLY - Activate the Report Time Steps Only Option for the SUMMARY File](#) keyword allows one to write out the data only at a report time step instead.

The SUMMARY section is terminated by the SCHEDULE keyword.

11.2 DATA REQUIREMENTS

To generate a summary vector, the appropriate keyword must be entered in the SUMMARY section of the input data file; only variables explicitly requested will be written to the SUMMARY files. Normally the data is written to the summary file at the end of each successful time step, but as mentioned previously, this can be changed by the *RPTONLY - Activate the Report Time Steps Only Option for the SUMMARY File* keyword to write out the data only at report time steps, thus reducing the overall size of the SUMMARY files.

The following sections describe the summary variable mnemonic syntax which defines the type of summary variable object (Aquifer, Field, Group, Well, etc.), the variable format for a given variable object, and the variable names for the various variable objects.

11.2.1 SUMMARY VARIABLE MNEMONIC SYNTAX

As mentioned earlier, there are literally hundreds of variables that can be written to the SUMMARY file, which can make the process of requesting the data rather complex. Fortunately in most cases, but not always, the variable names follow a four or five letter syntax that defines the variable mnemonic used to describe the data to be written out. Table 11.4 outlines the general syntax employed in deriving the variable mnemonic.

Summary Variable Mnemonic Syntax									
First Character Object		Second Character Object Type		Third Character Flow Type		Four Character Value Type		Fifth Character Special	
A	Aquifers	A	Analytical Aquifer	Q	Influx	R			
		L	Analytical Aquifer List	L	Liquid influx	T			
		N	Numerical Aquifer						
B	Block (Grid Cell)	O	Oil	P	Production	R	Rate	L	Liquid
F	Field	W	Water	I	Injection	T	Total (cumulative)	H	History
G	Group	G	Gas	F	Flow			G	Gas
R	Region	V	Volume at reservoir conditions						
W	Well	L	Liquid						
C	Well Connection	P ^I	Pressure						
S	Well Segment	T	Tracer						
Notes: I) For Field and Region pressures the mnemonic is PR, that is FPR for the field reservoir pressure and RPR for region average pressure. A well's bottom-hole pressure is WBHP and the tubing head pressure is WTHP.									

Table 11.4: Summary Variable Mnemonic Syntax

So for example, FOPR would mean Field Oil Production Rate. Also if there is historical data associated with a variable, then the same variable mnemonic is used with the suffix H, that is for the historical field oil production rate the mnemonic would be FOPRH. Table 11.5 shows some examples of variable mnemonics that follow the general syntax.

Summary Variable Mnemonics Examples	
Name	Description
BOFT	Block Oil Flow Total
COFR	Connection Oil Flow Rate
FOPR	Field Oil Production Rate
GVPR	Group Volume Production Rate
RTIT	Region Tracer Injection Total
WWPT	Well Water Production Total

Table 11.5: Summary Variable Mnemonics Examples

And Table 11.6 shows some examples that do not follow the general syntax. Where applicable, each of these keywords would also have a history equivalent mnemonics available in history matching runs, that is: FPRH, FWCTH, WBHPH, WTHPH, WWCTH, etc.

Summary Variable Mnemonics Examples Not Following the General	
Name	Description
BAPI	Block API
BOSAT	Block Oil Saturation
BPR	Block Pressure
FAQR	Field Aquifer Influx Rate
FPR	Field Average Pressure
FWCT	Field Water Cut
WBHP	Well Bottom-Hole Pressure
WTHP	Well Tubing Head Pressure
WWCT	Well Water Cut

Table 11.6: Summary Variable Mnemonics Examples Not Following the General Syntax

11.2.2 SUMMARY VARIABLE FORMAT

In addition to the general mnemonic syntax, each object type (Field, Group, Region, Well etc.) has additional syntax governing what specific object (group, well, etc.) should be written out to the SUMMARY file as explained in Table 11.7.

Summary Variable Format		
Summary Object	Format	Example
AQUIFER	<p>Analytical aquifers are identified by the first two characters AA in the variable mnemonic and numerical aquifers are identified by the first two characters of AQ.</p> <p>Aquifer variables for a given aquifer can be followed by a list of aquifer numbers and therefore a terminating "/" is required to end the list of aquifers. A blank list requests output for all the aquifers.</p>	<p>For instance to obtain the aquifer influx rate and cumulative influx for all analytical aquifers in the model, one would use:</p> <pre>AAQR / AAQT /</pre> <p>or just for numerical aquifers one, two and three:</p> <pre>ANQR 1 2 3 / ANQR 1 2 3 /</pre> <p><u>Note OPM Flow does not currently support Numerical Aquifers</u></p>
	<p>Analytical aquifers that have been allocated to an analytical aquifer list via the AQUALIST keyword in the SOLUTION section are identified by the first two characters AL in the variable mnemonic.</p> <p>Aquifer variables for a given aquifer list can be followed by a list of aquifer names and therefore a terminating "/" is required to end the list of aquifers. A blank list requests output for all the aquifers.</p>	<p>For instance to obtain the aquifer influx rate and cumulative influx for all two analytical aquifers list, EAST and WEST in the model, one would use:</p> <pre>AAQR 'EAST' 'WEST' / AAQT 'EAST' 'WEST' /</pre> <p><u>Note OPM Flow does not currently support Analytical Aquifer Lists.</u></p>
BLOCK (Grid Cells)	<p>Block variables are followed by a list of cell (I, J, K) indices, with each line terminated by a ",", and the list terminated with another terminating "/".</p>	<p>To request the oil saturation for a series of grid cells one would use the following:</p> <pre>BOSAT 1 1 1 / 10 10 3 / 15 15 10 / /</pre>
FIELD	<p>Field variables take no additional parameters and therefore do not require a terminating "/".</p>	<p>For example:</p> <pre>FOPR FOPT FPR</pre> <p>Would export the field oil rate and total, plus the field average reservoir pressure to the SUMMARY file.</p>

Summary Variable Format		
Summary Object	Format	Example
GROUP	Group variables can be followed by a list of group names enclosed in quotes and therefore a terminating “/” is required to end the list of groups. A blank list requests output for all groups.	<p>As an example to get the oil production rates and totals for two groups representing two platforms one would use</p> <pre>GOPR 'PLAT1' 'PLAT2' / GOPT 'PLAT1' 'PLAT2' /</pre> <p>or</p> <pre>GOPR / GOPT /</pre> <p>if there are only two groups in the model.</p>
REGION	Region variables for a given region can be followed by a list of region numbers and therefore a terminating “/” is required to end the list of regions. A blank list requests output for all the regions.	<p>For instance to obtain the reservoir pressures and oil totals for all regions:</p> <pre>RPR / ROPT /</pre> <p>or just for regions one, two and three:</p> <pre>RPR 1 2 3 / ROPT 1 2 3 /</pre>
	Region variables that are based on flows between regions must be followed by a list of region pair numbers, indicating the two regions. Each region pair is terminated by a “/”. In addition the variable mnemonic should also be terminated by a terminating “/”.	<p>To obtain the oil and water flow between regions one and two, and also three and four, one would use:</p> <pre>ROFT 1 2 / 3 4 / / RWFT 1 2 / 3 4 / /</pre>
WELL	Well variables can be followed by a list of well names enclosed in quotes and therefore a terminating “/” is required to end the list of wells. A blank list requests output for all wells.	<p>As an example to get the oil production rates and totals for all oil wells beginning with the letters OP one would use</p> <pre>WOPR 'OP*' / WOPT 'OP*' /</pre>

Summary Variable Format		
Summary Object	Format	Example
WELL CONNECTIONS	Connection variables are followed by a list of well names in quotes and completion I, J, K indices, each terminated by a "/". In addition the list is terminated by a terminating "/".	To request the gas-oil ratio and water cut for the OP01 and OP02 wells for several connections, one would use: CGOR OP01 1 1 1 / OP01 1 1 2 / OP02 10 10 1 / / CWCT OP01 1 1 1 / OP01 1 1 2 / OP02 10 10 1 / /
WELL SEGMENTS	Well variables for multi-segment well segments can be followed by a list of well names enclosed in quotes and the segment number, each terminated by a "/". In addition the list is terminated by a terminating "/". A blank list for the segments results in all segments for a well being written out. And a blank list for the well will result in all wells being written to the SUMMARY file. Care should be exercised when defaulting the list of wells and segments as there is the potential to generate large volumes of data.	For example, to get the segment oil production rates for wells OP01 segments two, three, and four and for segment two for OP02 one would use: SOFR 'OP01' 2 / 'OP01' 3 / 'OP01' 4 / 'OP02' 2 / / or to get all the oil production rates for all the segments for well OP01: SOFR 'OP01' / /

Table 11.7: Summary Variable Format

11.2.3 AQUIFER SUMMARY VARIABLES

Table 11.8 outlines the aquifer summary variables based on the type of aquifer: analytical, analytical list and numerical. Note that the analytical list aquifer type is just an analytical aquifer “set” defined using the AQLIST keyword in the SOLUTION section, that assigns an analytic aquifer name to a set of aquifer numbers for greater readability in the output. This type of aquifer is not supported by OPM Flow and neither are numerical aquifers.

Aquifer Summary Variables						
Variable	Root	Field	Analytical Aquifer	Analytical Aquifer List	Numerical Aquifer	Comment
Aquifer Influx Rate (Water Aquifers)	QR	FAQR	AAQR	ALQR	ANQR	
Aquifer Influx Total (Water Aquifers)	QT	FAQT	AAQT	ALQT	ANQT	
Aquifer Influx Rate (Gas Aquifers)	QRG	FAQRG	AAQRG	ALQRG		
Aquifer Influx Total (Gas Aquifers)	QTG	FAQTG	AAQTG	ALQTG		
Aquifer Pressure	QP		AAQP		ANQP	Water pore volume weighted average
Aquifer Carter-Tracy Dimensionless Pressure	QTD		AAQTD			
Aquifer Carter-Tracy Dimensionless Time	QPD		AAQPD			
Notes: <ol style="list-style-type: none"> Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available, for example, numerical aquifers are currently not supported by OPM Flow. 						

Table 11.8: Aquifer Summary Variables

Example

The following example requests the field and analytical aquifer pressure, rate and cumulative water influxes for all analytical aquifers to be written to the SUMMARY file.

```

-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--     ANALYTICAL AQUIFERS (FIELD)
--
FAQR
FAQT
--
--     ANALYTICAL AQUIFERS
--
AAQP
/
AAQR
/
AAQT
/

```


11.2.4 FIELD, GROUP, WELL, WELL CONNECTION AND COMPLETION SUMMARY VARIABLES

The following table (Table 11.9) lists the field, group, well, well connection and well completion production, injection, pressure and productivity summary variables. Note that not all of these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

See also section [11.2.6 Field, Region and Block Summary Variables](#) that outlines the field, region and block production and injection data summary variables, and section [11.2.7 Field and Region Summary Recovery Variables](#) that describes the summary variables for oil recovery efficiency and the oil recovery mechanism.

Field, Group, Well, Well Connection and Completion Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Well Completion	Comment
Flow	Artificial Lift Quantity	ALQ			WALQ			
Flow	Artificial Lift and VFP Table Number	MVFP			WMVFP			Well VFP table number.
Flow	Efficiency Factor	EFF		GEFF	WEFF			
Flow	Efficiency Factor Product	EFFG			WEFFG			Efficiency factor of the well times the product of all the groups above the well.
Flow	Energy Production Rate	EPR	FEPR	GEPR	WEPR			
Flow	Energy Production Total	EPT	FEPT	GEPT	WEPT			
Flow	Gas Consumption Rate	GSCR	FGSCR	GGSCR				
Flow	Gas Consumption Total	GCT	FGCT	GGCT				
Flow	Gas Flow Rate	GFR				CGFR	CGFRL	Positive for production and negative for injection
Flow	Gas Flow Rate (Free)	GFRF				CGFRF		
Flow	Gas Flow Rate (Solution)	GFRS				CGFRS		
Flow	Gas Flow Rate (Upstream)	GFRU				CGFRU		Sum of connection Gas flow rates upstream of, and including, this connection
Flow	Gas Import Rate	GIMR	FGIMR	GGIMR				
Flow	Gas Import Total	GIMT	FGIMT	GGIMT				
Flow	Gas Injection Guide Rate	GIGR		GGIGR	WGIGR			
Flow	Gas Injection Rate	GIR	FGIR	GGIR	WGIR	CGIR	CGIRL	
Flow	Gas Injection Rate History	GIRH	FGIRH	GGIRH	WGIRH			
Flow	Gas Injection Rate Target/Limit	GIRT	FGIRT	GGIRT	WGIRT			
Flow	Gas Injection Total	GIT	FGIT	GGIT	WGIT	CGIT	CGITL	

Field, Group, Well, Well Connection and Completion Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Well Completion	Comment
Flow	Gas Injection Total History	GITH	FGITH	GGITH	WGITH			
Flow	Gas Lift Rate	GLIR	FGLIR	GGLIR	WGLIR			Gas lift gas with group and field total rates based on well efficiency
Flow	Gas Potential Injection Rate	GPI	FGPI	GGPI	WGPI	CGPI		Also WGPI for WGPI
Flow	Gas Potential Injection Rate	GPI2	FGPI2	GGPI2	WGPI2			Including shut and stopped wells.
Flow	Gas Potential Production Rate	GPP	FGPP	GGPP	WGPP	CGPP		
Flow	Gas Potential Production Rate	GPP2	FGPP2	GGPP2	WGPP2			Including shut and stopped wells.
Flow	Gas Potential Production Rate (Free)	GPPF	FGPPF	GGPPF	WGPPF			
Flow	Gas Potential Production Rate (Free)	GPPF2	FGPPF2	GGPPF2	WGPPF2			Including shut and stopped wells.
Flow	Gas Potential Production Rate (Soln)	GPPS	FGPPS	GGPPS	WGPPS			
Flow	Gas Potential Production Rate (Soln)	GPPS2	FGPPS2	GGPPS2	WGPPS2			Including shut and stopped wells.
Flow	Gas Production Guide Rate	GPGR		GGPGR	WGPGR			
Flow	Gas Production Rate	GPR	FGPR	GGPR	WGPR	CGPR		Produced reservoir gas only, gas lift gas excluded
Flow	Gas Production Rate (Free)	GPRF	FGPRF	GGPRF	WGPRF			
Flow	Gas Production Rate (Solution)	GPRS	FGPRS	GGPRS	WGPRS			
Flow	Gas Production Rate History	GPRH	FGPRH	GGPRH	WGPRH			
Flow	Gas Production Rate Target/Limit	GPRT	FGPRT	GGPRT	WGPRT			
Flow	Gas Production Total	GPT	FGPT	GGPT	WGPT	CGPT	CGPTL	
Flow	Gas Production Total (Free)	GPTF	FGPTF	GGPTF	WGPTF			
Flow	Gas Production Total (Solution)	GPTS	FGPTS	GGPTS	WGPTS			
Flow	Gas Production Total History	GPTH	FGPTH	GGPTH	WGPTH			
Flow	Gas Sales Rate	GSR	FGSR	GGSR				
Flow	Gas Sales Total	GST	FGST	GGST				
Flow	Gas Voidage Injection Rate	GVIR			WGVIR			
Flow	Gas Voidage Production Rate	GVPR			WGVPR			

Field, Group, Well, Well Connection and Completion Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Well Completion	Comment
Flow	Liquid Flow Rate	LFR				CLFR	CLFRL	Positive for production and negative for injection
Flow	Liquid Production Rate	LPR	FLPR	GLPR	WLPR	CLPR		
Flow	Liquid Production Rate History	LPRH	FLPRH	GLPRH	WLPRH			
Flow	Liquid Production Rate Target/Limit	LPRT	FLPRT	GLPRT	WLPRT			
Flow	Liquid Production Total	LPT	FLPT	GLPT	WLPT	CLPT	CLPTL	
Flow	Liquid Production Total History	LPTH	FLPTH	GLPTH	WLPTH			
Flow	Oil Flow Rate	OFR				COFR	COFRL	Positive for production and negative for injection
Flow	Oil Flow Rate (Free)	OFRF				COFRF		
Flow	Oil Flow Rate (Solution)	OFRS				COFRS		
Flow	Oil Flow Rate (Upstream)	OFRU				COFRU		Sum of connection oil flow rates upstream of, and including, this connection
Flow	Oil Injection Guide Rate	OIGR		GOIGR	WOIGR			
Flow	Oil Injection Rate	OIR	FOIR	GOIR	WOIR	COIR	COIRL	
Flow	Oil Injection Rate History	OIRH	FOIRH	GOIRH	WOIRH			
Flow	Oil Injection Rate Target/Limit	OIRT	FOIRT	GOIRT	WOIRT			
Flow	Oil Injection Total	OIT	FOIT	GOIT	WOIT	COIT	COITL	
Flow	Oil Injection Total History	OITH	FOITH	GOITH	WOITH			
Flow	Oil Potential Injection Rate	OPI	FOPI	GOPI	WOPI			
Flow	Oil Potential Injection Rate	OPI2	FOPI2	GOPI2	WOPI2			Including shut and stopped wells.
Flow	Oil Potential Production Rate	OPP	FOPP	GOPP	WOPP	COPP		
Flow	Oil Potential Production Rate	OPP2	FOPP2	GOPP2	WOPP2			Including shut and stopped wells.
Flow	Oil Production Guide Rate	OPGR		GOPGR	WOPGR			
Flow	Oil Production Rate	OPR	FOPR	GOPR	WOPR	COPR		
Flow	Oil Production Rate (Free)	OPRF	FOPRF	GOPRF	WOPRF			
Flow	Oil Production Rate (Solution)	OPRS	FOPRS	GOPRS	WOPRS			
Flow	Oil Production Rate History	OPRH	FOPRH	GOPRH	WOPRH			
Flow	Oil Production Rate Target/Limit	OPRT	FOPRT	GOPRT	WOPRT			
Flow	Oil Production Total	OPT	FOPT	GOPT	WOPT			
Flow	Oil Production Total (Free)	OPTF	FOPTF	GOPTF	WOPTF			

Field, Group, Well, Well Connection and Completion Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Well Completion	Comment
Flow	Oil Production Total (Solution)	OPTS	FOPTS	GOPTS	WOPTS			
Flow	Oil Production Total History	OPTH	FOPTH	GOPTH	WOPTH			
Flow	Res.Vol. Flow Rate	VFR				CVFR	CVFRL	Positive for production and negative for injection
Flow	Res.Vol. Flow Rate (Free)	VFRF				CVFRF		
Flow	Res.Vol. Injection Guide Rate	VIGR		GVIGR	WVIGR			
Flow	Res.Vol. Injection Rate	VIR	FVIR	GVIR	WVIR	CVIR	CVIRL	
Flow	Res.Vol. Injection Rate Target/Limit	VIRT	FVIRT	GVIRT	WVIRT			
Flow	Res.Vol. Injection Total	VIT	FVIT	GVIT	WVIT	CVIT	CVITL	
Flow	Res.Vol. Potential Injection Rate	VPI	FVPI	GVPI	WVPI			
Flow	Res.Vol. Potential Injection Rate	VPI2	FVPI2	GVPI2	WVPI2			Including shut and stopped wells.
Flow	Res.Vol. Potential Production Rate	VPP	FVPP	GVPP	WVPP	CVPP		
Flow	Res.Vol. Potential Production Rate	VPP2	FVPP2	GVPP2	WVPP2			Including shut and stopped wells.
Flow	Res.Vol. Production Guide Rate	VPGR		GVPPGR	WVPPGR			
Flow	Res.Vol. Production Guide Rate	VPGR		GVPPGR	WVPPGR			
Flow	Res.Vol. Production Rate	VPR	FVPR	GVPR	WVPR	CVPR		
Flow	Res.Vol. Production Rate Target/Limit	VPRT	FVPRT	GVPRRT	WVPRRT			
Flow	Res.Vol. Production Total	VPT	FVPT	GVPT	WVPT	CVPT		
Flow	Water Flow Rate	WFR				CWFR	CWFRL	Positive for production and negative for injection
Flow	Water Flow Rate (Upstream)	WFRU				CWFRU		Sum of connection water flow rates upstream of, and including, this connection
Flow	Water Injection Guide Rate	WIGR		GWIGR	WWIGR			
Flow	Water Injection Rate	WIR	FWIR	GWIR	WWIR	CWIR	CWIRL	
Flow	Water Injection Rate History	WIRH	FWIRH	GWIRH	WWIRH			
Flow	Water Injection Rate Target/Limit	WIRT	FWIRT	GWIRT	WWIRT			
Flow	Water Injection Total	WIT	FWIT	GWIT	WWIT	CWIT	CWITL	
Flow	Water Injection Total History	WITH	FWITH	GWITH	WWITH			
Flow	Water Potential Injection Rate	WPI	FWPI	GWPI	WWPI			Also WWPI for WWPI

Field, Group, Well, Well Connection and Completion Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Well Completion	Comment
Flow	Water Potential Injection Rate	WPI2	FWPI2	GWPI2	WWPI2			Including shut and stopped wells.
Flow	Water Potential Production Rate	WPP	FWPP	GWPP	WWPP	CWPP		
Flow	Water Potential Production Rate	WPP2	FWPP2	GWPP2	WWPP2			Including shut and stopped wells.
Flow	Water Produce/Injected Ratio	WPIR	FWPIR	GWPIR	WWPIR			Reported as a percent.
Flow	Water Production Guide Rate	WPGR		GWPGR	WWPGR			
Flow	Water Production Rate	WPR	FWPR	GWPR	WWPR	CWPR		
Flow	Water Production Rate History	WPRH	FWPRH	GWPRH	WWPRH			
Flow	Water Production Rate Target/Limit	WPRT	FWPRT	GWPRT	WWPRT			
Flow	Water Production Total	WPT	FWPT	GWPT	WWPT	CWPT	CWPTL	
Flow	Water Production Total History	WPTH	FWPTH	GWPTH	WWPTH			
Flow	Water Voidage Injection Guide Rate	WVIR			WWVIR			
Flow	Water Voidage Injection Guide Total	WVIT			WWVIT			
No. Wells	Number of abandoned injection wells	MWIA	FMWIA	GMWIA				
No. Wells	Number of abandoned production wells	MWPA	FMWPA	GMWPA				
No. Wells	Number of drilling events in total	MWDT	FMWDT	GMWDT				
No. Wells	Number of drilling events this timestep	MWDR	FMWDR	GMWDR				
No. Wells	Number of injection wells currently flowing	MWIN	FMWIN	GMWIN				
No. Wells	Number of injectors on group control	MWIG	FMWIG	GMWIG				
No. Wells	Number of injectors on own reservoir volume rate limit control	MWIV	FMWIV	GMWIV				
No. Wells	Number of injectors on own surface rate limit control	MWIS	FMWIS	GMWIS				
No. Wells	Number of injectors on pressure control	MWIP	FMWIP	GMWIP				
No. Wells	Number of producers controlled by own oil rate limit	MWPO	FMWPO	GMWPO				
No. Wells	Number of producers on group control	MWPG	FMWPG	GMWPG				
No. Wells	Number of producers on own reservoir volume rate limit control	MWPV	FMWPV	GMWPV				
No. Wells	Number of producers on own surface rate limit control	MWPS	FMWPS	GMWPS				
No. Wells	Number of producers on pressure control	MWPP	FMWPP	GMWPP				
No. Wells	Number of producers using artificial lift (with ALQ > 0.0)	MWPL	FMWPL	GMWPL				

Field, Group, Well, Well Connection and Completion Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Well Completion	Comment
No. Wells	Number of production wells currently flowing	MWPR	FMWPR	GMWPR				
No. Wells	Number of unused injection wells	MWIU	FMWIU	GMWIU				
No. Wells	Number of unused production wells	MWPU	FMWPU	GMWPU				
No. Wells	Number of workover events in total	MWWT	FMWWT	GMWWT				
No. Wells	Number of workover events this time step.	MWWO	FMWWO	GMWWO				
No. Wells	The number of connections capable of flowing in the well	MCON			WMCON			
No. Wells	Total number of injection wells	MWIT	FMWIT	GMWIT				
No. Wells	Total number of production wells	MWPT	FMWPT	GMWPT				
Pressure	Blocking Factor (GPP)	CDBF				CCDBF		
Pressure	Bottom-Hole Pressure	BHP			WBHP			
Pressure	Bottom-Hole Pressure (Five Point)	BP5			WBP5			
Pressure	Bottom-Hole Pressure (Four Point)	BP4			WBP4			
Pressure	Bottom-Hole Pressure (Nine Point)	BP9			WBP9			
Pressure	Bottom-Hole Pressure (One Point)	BP			WBP			
Pressure	Bottom-Hole Pressure History	BHPH			WBHPH			
Pressure	Bottom-Hole Pressure Target/Limit	BHPT			WBHPT			
Pressure	Connection Pressure	PR				CPR	CPRL	Completion pressure is an average pressure for the completion
Pressure	Connection Transmissibility Factor	TFAC				CTFAC		
Pressure	Productivity (Gas Phase)	PIG			WPIG			
Pressure	Productivity (Liquid Phase)	PIL			WPIL			
Pressure	Productivity (Oil Phase)	PIO			WPIO			
Pressure	Productivity (Preferred Phase – Five Point)	PI5			WPI5			
Pressure	Productivity (Preferred Phase – Four Point)	PI4			WPI4			
Pressure	Productivity (Preferred Phase – Nine Point)	PI9			WPI9			
Pressure	Productivity (Preferred Phase – One Point)	PI1			WPI1			
Pressure	Productivity (Preferred Phase)	PI			WPI	CPI		
Pressure	Productivity (Water Phase)	PIW			WPIW			
Pressure	Tubing Head Pressure	THP			WTHP			
Pressure	Tubing Head Pressure History	THPH			WTHPH			

Field, Group, Well, Well Connection and Completion Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Well Completion	Comment
Ratio	Gas-Liquid Ratio	GLR	FGLR	GGLR	WGLR	CGLR	CGLRL	
Ratio	Gas-Liquid Ratio (Bottom-Hole)	BGLR			WBGLR			
Ratio	Gas-Liquid Ratio History	GLRH	FGLRH	GGLRH	WGLRH			
Ratio	Gas-Oil Ratio	GOR	FGOR	GGOR	WGOR	CGOR	CGORL	
Ratio	Gas-Oil Ratio History	GORH	FGORH	GGORH	WGORH			
Ratio	Oil-Gas Ratio	OGR	FOGR	GOCR	WOCR	COGR	COGRL	
Ratio	Oil-Gas Ratio History	OGRH	FOGRH	GOCRH	WOCRH			
Ratio	Water -Gas Ratio	WGR	FWGR	GWGR	WWGR	CWGR	CWGRRL	
Ratio	Water Cut	WCT	FWCT	GWCT	WWCT	CWCT	CWCTL	
Ratio	Water Cut History	WCTH	FWCTH	GWCTH	WWCTH			
Ratio	Water-Gas Ratio History	WGRH	FWGRH	GWGRH	WWGRH			
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 								

Table 11.9: Field, Group, Well, Well Connection and Completion Summary Variables

11.2.5 FIELD, GROUP AND WELL CONTROL MODE SUMMARY VARIABLES

In addition to the production, injection, pressure and productivity summary variables, there are also summary variables that output the control mode at which the field, groups and wells are being controlled. Table 11.10 summarizes the mnemonics for the field and groups together with a description and the values written out to the SUMMARY file.

Field and Group Control Mode Reporting						
Object	Field	Group	Field	Group	Field	Group
Mnemonic	FMCTP	GMCTP	FMCTW	GMCTW	FMCTG	GMCTG
Description	Production Group.		Water Injection Group.		Gas Injection Group.	
Values	Value	Mnemonic	Value	Mnemonic	Value	Mnemonic
	0.0	NONE	0.0	NONE	0.0	NONE
	1.0	ORAT	1.0	RATE	1.0	RATE
	2.0	WRAT	2.0	RESV	2.0	RESV
	3.0	GRAT	3.0	REIN	3.0	REIN
	4.0	LRAT	4.0	VREP	4.0	VREP
	5.0	RESV	5.0		5.0	
	6.0	PRBL	6.0		6.0	
	7.0	ENERGY	7.0		7.0	
	8.0	WGRA	8.0	WGRA	8.0	WGRA
	9.0	CRAT	9.0	Availability	9.0	Availability
	10.0	PBGS	10.0		10.0	
	11.0	PBWS	11.0		11.0	
	12.0	CRAT	12.0		12.0	
Notes:						
1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow.						
2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination.						
3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available.						
4) For both production and injection groups the mode of control set to negative if the rate was set by a higher group.						
5) Note that the output to the SUMMARY file is the numeric values, whereas for the RSM file it is the mnemonics, that is: ORAT, WRAT, etc.						
6) See Table 11.11 for an explanation of the mnemonics used in Table 11.10.						

Table 11.10: Field and Group Control Mode Reporting

Similarly, Table 11.11 shows the control mode reporting variables for wells.

Well Control Mode Reporting						
Object	Well			Well		
Mnemonic	WSTAT			WMCTL		
Description	Well Status indicator.			Well Mode of Control indicator.		
Values	Value	Mnemonic	Description	Value	Mnemonic	Description
	1.0	PROD	Well is a producing well.	-1.0		Well is under group control.
	2.0	INJ	Well is an injection well.	0.0	SHUT or STOP	Well is shut-in or stopped.
	3.0	SHUT	Well is shut-in except those under priority control.	1.0	ORAT	Well is on oil rate control.
	4.0	STOP	Well is stopped except those under priority control.	2.0	WRAT	Well is on water rate control.
	5.0	PSHUT	Well is shut-in under priority control.	3.0	GRAT	Well is on gas rate control.
	6.0	PSTOP	Well is stopped under priority control	4.0	LRAT	Well is on liquid rate control.
				5.0	RESV	Well is on reservoir voidage rate control.
				6.0	THP	Well is on THP control.
				7.0	BHP	Well is on BHP control.
				9.0	CRAT	Not used
				11.0	GOR Penalty	
				12.0	Drawdown	Well is draw down control
				13.0	NGL	Not used
				30.0	Availability	
				31.0	REIN	
				32.0	TMRA	
				33.0	WGRA	
				34.0	CVAL	
				41.0 - 51.0		

Notes:

- 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow.
- 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination.
- 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available.
- 4) Note that the output to the SUMMARY file is the numeric values, whereas for the RSM file it is the mnemonics, that is: PROD, INJ, etc.

Table 11.11: Well Control Mode Reporting

11.2.6 FIELD, REGION AND BLOCK SUMMARY VARIABLES

The next set of summary data is based on the block, field and region summary variables and the variables are tabulated in Table 11.9. Note when the data is for a block variable, like for example the oil saturation, this will be the actual value for the a grid cell (block), whereas, for the field and region items this will be an average value.

See also section [11.2.4 Field, Group, Well, Well Connection and Completion Summary Variables](#) that outlines the field production data summary variables, and section [11.2.7 Field and Region Summary Recovery Variables](#) that describes the summary variables for oil recovery efficiency and the oil recovery mechanism.

Block, Field and Region Summary Variables						
Type	Variable	Root	Field	Region	Block	Comment
Flow	Gas Flow (Inter-Block in I+ Direction)	FLOGI			BFLOGI	
Flow	Gas Flow (Inter-Block in J+ Direction)	FLOGJ			BFLOGJ	
Flow	Gas Flow (Inter-Block in K+ Direction)	FLOGK			BFLOGK	
Flow	Gas Flow Total Inter-Region	RGFT		RRGFT		Liquid and gas phases
Flow	Gas Flow Total Inter-Region (Gas Phase)	RGFTG		RRGFTG		
Flow	Gas Flow Total Inter-Region (Liquid Phase)	RGFTL		RRGFTL		
Flow	Gas Injection Rate	GIR		RGIR		
Flow	Gas Injection Total	GIT		RGIT		
Flow	Gas Potential	PPG	FPPG	RPPG	BPPG	
Flow	Gas Production Rate	GPR		RGPR		
Flow	Gas Production Rate (Free)	GPRF		RGPRF		
Flow	Gas Production Rate (Solution)	GPRS		RGPRS		
Flow	Gas Production Total	GPT		RGPT		Liquid and gas phases
Flow	Gas Production Total (Free)	GPTF		RGPTF		
Flow	Gas Production Total (Net From Region)	GP		RGP		Minus injected gas
Flow	Gas Production Total (Solution)	GPTS		RGPTS		
Flow	Gas Velocity (Inter-Block in I+ Direction)	VELGI			BVELGI	
Flow	Gas Velocity (Inter-Block in J+ Direction)	VELGJ			BVELGJ	
Flow	Gas Velocity (Inter-Block in K+ Direction)	VELGK			BVELGK	
Flow	Oil Flow (Inter-Block in I+ Direction)	FLOOI			BFLOOI	
Flow	Oil Flow (Inter-Block in J+ Direction)	FLOOJ			BFLOOJ	
Flow	Oil Flow (Inter-Block in K+ Direction)	FLOOK			BFLOOK	
Flow	Oil Flow Total Inter-Region	ROFT		RROFT		Liquid and gas phases
Flow	Oil Flow Total Inter-Region (Gas Phase)	ROFTG		RROFTG		
Flow	Oil Flow Total Inter-Region (Liquid Phase)	ROFTL		RROFTL		
Flow	Oil Injection Rate	OIR		ROIR		

Block, Field and Region Summary Variables						
Type	Variable	Root	Field	Region	Block	Comment
Flow	Oil Injection Total	OIT		ROIT		
Flow	Oil Potential	PPO	FPPO	RPPO	BPPO	
Flow	Oil Production Rate	OPR		ROPR		
Flow	Oil Production Total	OPT		ROPT		
Flow	Oil Production Total (Net From Region)	OP		ROP		
Flow	Oil Velocity (Inter-Block in I+ Direction)	VELOI			BVELOI	
Flow	Oil Velocity (Inter-Block in J+ Direction)	VELOJ			BVELOJ	
Flow	Oil Velocity (Inter-Block in K+ Direction)	VELOK			BVELOK	
Flow	Water Flow (Inter-Block in I+ Direction)	FLOWI			BFLOWI	
Flow	Water Flow (Inter-Block in J+ Direction)	FLOWJ			BFLOWJ	
Flow	Water Flow (Inter-Block in K+ Direction)	FLOWK			BFLOWK	
Flow	Water Flow Total Inter-Region	RWFT		RRWFT		
Flow	Water Injection Rate	WIR		RWIR		
Flow	Water Injection Total	WIT		RWIT		
Flow	Water Potential	PPW	FPPW	RPPW	BPPW	
Flow	Water Production Rate	WPR		RWPR		
Flow	Water Production Total	WPT		RWPT		
Flow	Water Production Total (Net From Region)	WP		RWP		
Flow	Water Velocity (Inter-Block in I+ Direction)	VELWI			BVELWI	
Flow	Water Velocity (Inter-Block in J+ Direction)	VELWJ			BVELWJ	
Flow	Water Velocity (Inter-Block in K+ Direction)	VELWK			BVELWK	
Pressure	Gas Phase Pressure	GPR			BGPR	
Pressure	Oil Phase Pressure	PR	FPR	RPR	BPR BPRESSUR	Field and Region HCPV weighted
Pressure	Oil Phase Pressure	PRH	FPRH	RPRH		Field and Region HCPV weighted
Pressure	Oil Phase Pressure (PV Weighted)	PRP	FPRP	RPRP		Field and Region PV weighted
Pressure	Water Phase Pressure	WPR			BWPR	
Property	Block Hydrocarbon Phase State	STATE			BSTATE	Gas (1), Gas & Oil (2), Oil (3)
Property	Bubble Point Pressure	PBUB			BPBUB	
Property	Capillary Pressure (Gas-Oil)	GPC			BGPC	
Property	Capillary Pressure (Water-Oil)	WPC			BWPC	

Block, Field and Region Summary Variables						
Type	Variable	Root	Field	Region	Block	Comment
Property	Dew Point	PDEW			BPDEW	
Property	Gas P/Z	PRGZ	FPRGZ	RPRGZ		
Property	Gas Reservoir Density	GDEN	FGDEN	RGDEN	BGDEN	
Property	Gas Saturation	GSAT	FGSAT	RGSAT	BGSAT BGSAT	
Property	Gas Saturation (Drainage to Imbibition)	GSHY			BGSHY	Leaving gas saturation for gas capillary pressure hysteresis
Property	Gas Saturation (Dynamically Trapped)	GTPD			BGTPD	WAG Hysteresis only
Property	Gas Saturation (Trapped Critical)	GSTRP			BGSTRP	For gas capillary pressure hysteresis
Property	Gas Saturation (Trapped)	GTRP			BGTRP	WAG Hysteresis only
Property	Gas Viscosity	GVIS	FGVIS	RGVIS	BGVIS	
Property	Gas-Oil Ratio (Saturated)	RSSAT			BRSSAT	
Property	Initial Contact Corrected Potential	PPC	FPPC	RPPC	BPPC	
Property	Oil Reservoir Density	ODEN	FODEN	RODEN	BODEN	
Property	Oil Saturation	OSAT	FOSAT	ROSAT	BOSAT BSOIL	
Property	Oil Viscosity	OVIS	FOVIS	ROVIS	BOVIS	
Property	Oil-Gas Ratio (Saturated)	RVSAT			BRVSAT	
Property	Relative Permeability (Gas in the R- Direction)	GKRR-			BGKRR-	
Property	Relative Permeability (Gas in the R+ Direction)	GKRR			BGKRR	
Property	Relative Permeability (Gas in the Theta- Direction)	GKRT-			BGKRT-	
Property	Relative Permeability (Gas in the Theta+ Direction)	GKRT			BGKRT	
Property	Relative Permeability (Gas in the X- Direction)	GKRX-			BGKRX-	Also BGKRI-
Property	Relative Permeability (Gas in the X+ Direction)	GKRX			BGKRX	Also BGKRI
Property	Relative Permeability (Gas in the Y- Direction)	GKRY-			BGKRY-	Also BGKRJ-
Property	Relative Permeability (Gas in the Y+ Direction)	GKRY			BGKRY	Also BGKRJ
Property	Relative Permeability (Gas in the Z- Direction)	GKRZ-			BGKRZ-	Also BGKRK-
Property	Relative Permeability (Gas in the Z+ Direction)	GKRZ			BGKRZ	Also BGKRK
Property	Relative Permeability (Gas)	KRG			BKRG	Also BGWR
Property	Relative Permeability (Krw Reduction Factor)	RK			BRK	Due to Polymer
Property	Relative Permeability (Oil Two Phase to Gas)	KROG			BKROG	
Property	Relative Permeability (Oil Two Phase to Water)	KROW			BKROW	
Property	Relative Permeability (Oil in the R- Direction)	OKRR-			BOKRR-	

Block, Field and Region Summary Variables						
Type	Variable	Root	Field	Region	Block	Comment
Property	Relative Permeability (Oil in the R+ Direction)	OKRR			BOKRR	
Property	Relative Permeability (Oil in the Theta- Direction)	OKRT-			BOKRT-	
Property	Relative Permeability (Oil in the Theta+ Direction)	OKRT			BOKRT	
Property	Relative Permeability (Oil in the X- Direction)	OKRX-			BOKRX-	Also BOKRI-
Property	Relative Permeability (Oil in the X+ Direction)	OKRX			BOKRX	Also BOKRI
Property	Relative Permeability (Oil in the Y- Direction)	OKRY-			BOKRY-	Also BOKRJ-
Property	Relative Permeability (Oil in the Y+ Direction)	OKRY			BOKRY	Also BOKRJ
Property	Relative Permeability (Oil in the Z- Direction)	OKRZ-			BOKRZ-	Also BOKRK-
Property	Relative Permeability (Oil in the Z+ Direction)	OKRZ			BOKRZ	Also BOKRK
Property	Relative Permeability (Oil)	KRO			BKRO	Also BOKR
Property	Relative Permeability (Water in the R- Direction)	WKRR-			BWKRR-	
Property	Relative Permeability (Water in the R+ Direction)	WKRR			BWKRR	
Property	Relative Permeability (Water in the Theta- Direction)	WKRT-			BWKRT-	
Property	Relative Permeability (Water in the Theta+ Direction)	WKRT			BWKRT	
Property	Relative Permeability (Water in the X- Direction)	WKRX-			BWKRX-	Also BWKRI-
Property	Relative Permeability (Water in the X+ Direction)	WKRX			BWKRX	Also BWKRI
Property	Relative Permeability (Water in the Y- Direction)	WKRY-			BWKRY-	Also BWKRJ-
Property	Relative Permeability (Water in the Y+ Direction)	WKRY			BWKRY	Also BWKRJ
Property	Relative Permeability (Water in the Z- Direction)	WKRZ-			BWKRZ-	Also BWKRK-
Property	Relative Permeability (Water in the Z+ Direction)	WKRZ			BWKRZ	Also BWKRK
Property	Relative Permeability (Water)	KRW			BKRW	Also BWKR
Property	Water Reservoir Density	WDEN	FWDEN	RWDEN	BWDEN	
Property	Water Saturation	WSAT	FWSAT	RWSAT	BWSAT BSWAT	
Property	Water Saturation (Drainage to Imbibition)	WSHY			BWSHY	Leaving water saturation for gas capillary pressure hysteresis
Property	Water Saturation (Maximum Wetting)	WSMA			BWSMA	Capillary pressure hysteresis maximum water saturation
Property	Water Viscosity	WVIS	FWVIS	RWVIS	BWVIS	
Ratio	Gas-Oil Ratio	RS	FRS	RRS	BRs	
Ratio	Oil-Gas Ratio	RV	FRV	RRV	BRV	
Volumes	Gas In-Place	GIP	FGIP	RGIP	BGIP	Liquid and gas phases

Block, Field and Region Summary Variables						
Type	Variable	Root	Field	Region	Block	Comment
Volumes	Gas In-Place (Gas Phase)	GIPG	FGIPG	RGIPG	BGIPG	
Volumes	Gas In-Place (Liquid Phase)	GIPL	FGIPL	RGIPL	BGIPL	
Volumes	Gas In-Place (Reservoir Conditions)	GIPR	FGIPR			Compositional vector implemented in OPM Flow.
Volumes	Oil In-Place	OIP	FOIP	ROIP	BOIP	Liquid and gas phases
Volumes	Oil In-Place (Gas Phase)	OIPG	FOIPG	ROIPG	BOIPG	
Volumes	Oil In-Place (Liquid Phase)	OIPL	FOIPL	ROIPL	BOIPL	
Volumes	Oil In-Place (Reservoir Conditions)	OIPR	FOIPR			Compositional vector implemented in OPM Flow.
Volumes	Pore Volume (Gas)	GPV	FGPV	RGPV	BGPV	
Volumes	Pore Volume (HCPV)	HPV	FHPV	RHPV	BHPV	Also BHPV
Volumes	Pore Volume (Oil)	OPV	FOPV	ROPV	BOPV	
Volumes	Pore Volume (Reservoir Conditions)	RPV	FRPV		BRPV	
Volumes	Pore Volume (Water)	WPV	FWPV	RWPV	BWPV	
Volumes	Rock Compaction (Trans. Multiplier X Direction)	PERMMDX			BPERMMDX	Also BPERMOD
Volumes	Rock Compaction (Trans. Multiplier Y Direction)	PERMMDY			BPERMMDY	
Volumes	Rock Compaction (Trans. Multiplier Z Direction)	PERMMDZ			BPERMMDZ	
Volumes	Rock Compaction (Trans. Multiplier)	RTM	FRTM	RRTM	BRTM	
Volumes	Rock Compaction (Dual Porosity SIGMA Multiplier)	SIGMMOD			BSIGMMOD	
Volumes	Rock Compaction (PV Multiplier)	PORVMOD			BPORVMOD	
Volumes	Water In-Place	WIP	FWIP	RWIP	BWIP	
Volumes	Water In-Place (Reservoir Conditions)	WIPR	FWIPR			Compositional vector implemented in OPM Flow.
Notes: <ol style="list-style-type: none"> Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 						

Table 11.12: Block, Field and Region Summary Variables

11.2.7 FIELD AND REGION SUMMARY RECOVERY VARIABLES

Oil recovery factors (or efficiency) may be reported at both the field and the region levels using a variety of parameters as summarized in Table 11.13 and equations (11.1) to (11.6). In addition to the actual recovery factors the simulator can also report the oil volumes produced by various drive mechanisms as described in the table.

See also section [11.2.4 Field, Group, Well, Well Connection and Completion Summary Variables](#) that outlines the field production data summary variables, and section [11.2.6 Field, Region and Block Summary Variables](#) that outlines the field, region and block production and injection data summary variables.

Field and Region Summary Recovery Variables					
Type	Variable	Root	Field	Region	Comment
Recovery	Oil Recovery Efficiency (STOIIP)	OE	FOE	ROE	Based on STOIIP
Recovery	Oil Recovery Efficiency (Wells)	OEW	FOEW	ROEW	Based on well production and STOIIP
Recovery	Oil Recovery Efficiency (STOIIP Mobile with respect to Water)	OEIW	FOEIW	ROEIW	Based on STOIIP and initial mobile oil saturate with respect to water
Recovery	Oil Recovery Efficiency Wells Mobile with respect to Water)	OEWW	FOEWW	ROEWW	Based on well production and initial mobile oil saturate with respect to water
Recovery	Oil Recovery Efficiency (STOIIP Mobile with respect to Gas)	OEIG	FOEIG	ROEIG	Based on STOIIP and initial mobile oil saturate with respect to gas.
Recovery	Oil Recovery Efficiency (Wells Mobile with respect to Gas)	OEWG	FOEWG	ROEWG	Based on well production and initial mobile oil saturate with respect to gas.
Recovery	Oil Production Total (Free Gas Gas)	OTMF	FOTMF	ROTMF	Volumes reported at stock tank conditions
Recovery	Oil Production Total (Gas Influx)	ORMG	FORMG	RORMG	
Recovery	Oil Production Total (Oil Expansion)	ORME	FORME	RORME	
Recovery	Oil Production Total (Rock Compaction)	ORMR	FORMR	RORMR	
Recovery	Oil Production Total (Solution Gas)	ORMS	FORMS	RORMS	
Recovery	Oil Production Total (Water Influx)	ORMW	FORMW	RORMW	
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 					

Table 11.13: Field and Region Summary Recovery Variables

Where:

$$OE = \frac{(STOIIP_{t=0} - STOIIP_{t=i})}{STOIIP_{t=0}} \quad (11.1)$$

$$OEI = \frac{(\text{Well Oil Production}_{t=i})}{STOIP_{t=0}} \quad (11.2)$$

$$OEIW = \frac{(STOIP_{t=0} - STOIP_{t=i})}{(\text{Initial Mobile Oil Saturation with respect to Water}_{t=0})} \quad (11.3)$$

$$OEWW = \frac{(\text{Well Oil Production}_{t=i})}{(\text{Initial Mobile Oil Saturation with respect to Water}_{t=0})} \quad (11.4)$$

$$OEIG = \frac{(STOIP_{t=0} - STOIP_{t=i})}{(\text{Initial Mobile Oil Saturation with respect to Gas}_{t=0})} \quad (11.5)$$

$$OEWG = \frac{(\text{Well Oil Production}_{t=i})}{(\text{Initial Mobile Oil Saturation with respect to Gas}_{t=0})} \quad (11.6)$$

In addition to all the aforementioned summary variables, there are variables associated with specific features that may have been enabled in the input deck, for instance, the Brine Model, or the Polymer Model. The next set of sections describe the variables associated with these specific options.

11.2.8 OPTION SPECIFIC SUMMARY VARIABLES – ALKALINE MODEL

This feature has not been implemented in OPM Flow.

11.2.9 OPTION SPECIFIC SUMMARY VARIABLES – API AND TRACER TRACKING

The summary variables in this section are for use for when either the API tracking model has been activated by the API keyword in the RUNSPEC section so that the various “oil types” are tracked in the model, or for when the Tracer Model has been requested via the TRACERS keyword in the RUNSPEC section, that defines the number of tracers in the model and the various passive tracer tracking options. Only the Tracer model has been currently implemented in OPM Flow.

API and Tracer Tracking Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block
Flow	Oil API	API	FAPI	GAPI	WAPI	CAPI	RAPI	BAPI
Flow	Tracer Flow Rate	TFR				CTFR		
Flow	Tracer Flow Total (Free Inter Region)	TFTF					RTFTF	
Flow	Tracer Flow Total (Free Inter Region)	TFTT					RTFTT	
Flow	Tracer Flow Total (Solution Inter Region)	TFTS					RTFTS	
Flow	Tracer Injection Concentration	TIC	FTIC	GTIC	WTIC	CTIC		
Flow	Tracer Injection Rate	TIR	FTIR	GTIR	WTIR	CTIR		
Flow	Tracer Injection Total	TIT	FTIT	GTIT	WTIT	CTIT		
Flow	Tracer Production Concentration	TPC	FTPC	GTPC	WTPC	CTPC		
Flow	Tracer Production Rate	TPR	FTPR	GTPR	WTPR	CTPR		
Flow	Tracer Production Total	TPT	FTPT	GTPT	WTPT	CTPT		
Volume	Tracer Concentration	TCN						BTCN
Volume	Tracer Concentration (Free)	TCNF						BTCNF
Volume	Tracer Concentration (Solution)	TCNS						BTCNS
Volume	Tracer In-Place	TIPT	FTIPT				RTIPT	BTIPT
Volume	Tracer In-Place (Free)	TIPF	FTIPF				RTIPF	BTIPF
Volume	Tracer In-Place (Solution)	TIPS	FTIPS				RTIPS	BTIPS
Notes: <ol style="list-style-type: none"> Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 								

Table 11.14: API and Tracer Tracking Summary Variables

Note that for the tracer summary variables the mnemonic should be concatenated with the tracer name as defined by the TRACER keyword in the PROPS section. This keyword defines a series of passive tracers that are associated with a phase (oil, water, or gas) in the model, see the example for reference.

Example

In the PROPS section the TRACER keyword defines four passive tracers one for a gas injection well, one for tracking the dissolved gas, and two to track the injected water from two water injection wells.

```
-- =====
--
-- PROPS SECTION
--
-- =====
PROPS
--
--      DEFINE TRACER NAMES
--
--      TRACER      TRACER
--      NAME        PHASE
--      -----
TRACER
      'IGS'         'GAS'           / GAS INJECTOR
      'DGS'         'GAS'           / DISOLVED GAS
      'IW1'         'WAT'           / WAT INJECTOR 1
      'IW2'         'WAT'           / WAT INJECTOR 2
/
```

If we wish to report the field total amount of the tracers in-place we would use the following in the SUMMARY section:

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY

FTIPTIGS
FTIPTDGS
FTIPIW1
FTIPIW2
```

Notice there are no terminating “/” for field summary variables.

11.2.10 OPTION SPECIFIC SUMMARY VARIABLES – ASPHALTENE MODEL

This feature has not been implemented in OPM Flow.

11.2.11 OPTION SPECIFIC SUMMARY VARIABLES – BRINE MODEL

The available Brine model summary keywords are dependent on which form of the Brine model has been invoked in the simulation input deck. In the RUNSPEC section the BRINE keyword activates the standard Brine Tracking model and optionally defines the water phase to have various salinities if the ECLMC keyword in the RUNSPEC section has been used to activate the Multi-Component Brine model. The Multi-Component Brine model allows for the water phase to have multiple water salinities.

Note that the Multi-Component Brine model is currently not supported by OPM Flow.

Brine and Multi-Component Brine Model Summary Variables									
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block	Comment
Flow	Salt Flow Rate	SFR				CSFR			Brine Model
Flow	Salt Injection Rate	SIR	FSIR	GSIR	WSIR	CSIR			
Flow	Salt Injection Total	SIT	FSIT	GSIT	WSIT	CSIT			
Flow	Salt Production Rate	SPR	FSPR	GSPR	WSPR	CSPR			
Flow	Salt Production Total	SPT	FSPT	GSPT	WSPT	CSPT			
Property	Salt Corrected Water Viscosity	EMV_SAL						BEMV_SAL	
Volume	Salt Concentration (Block)	SCN						BSCN	
Volume	Salt Concentration (Injection)	SIC	FSIC	GSIC	WSIC	CSIC			
Volume	Salt Concentration (Production)	SPC	FSPC	GSPC	WSPC	CSPC			
Volume	Salt In-Place	SIP	FSIP				RSIP	BSIP	
Flow	Anion Concentration (Block)	TCNFANI						BTCNFANI	Multi-Component Brine Model
Flow	Anion Flow Rate	TFRANI				CTFRANI			
Flow	Anion Injection Rate	TIRANI	FTIRANI	GTIRANI	WTIRANI				
Flow	Anion Injection Total	TITANI	FTITANI	GTITANI	WTITANI	CTITANI			
Flow	Anion Production Rate	TPRANI	FTPRANI	GTPRANI	WTPRANI				
Flow	Anion Production Total	TPTANI	FTPTANI	GTPTANI	WTPTANI	CTPTANI			
Flow	Cation Flow Rate	TFRCAT				CTFRCAT			
Flow	Cation Injection Rate	TIRCAT	FTIRCAT	GTIRCAT	WTIRCAT				
Flow	Cation Injection Total	TITCAT	FTITCAT	GTITCAT	WTITCAT	CTITCAT			
Flow	Cation Production Rate	TPRCAT	FTPRCAT	GTPRCAT	WTPRCAT				
Flow	Cation Production Total	TPTCAT	FTPTCAT	GTPTCAT	WTPTCAT	CTPTCAT			
Property	Effective Salinity (Polymer)	ESALPLY						BESALPLY	
Property	Effective Salinity (Surfactant)	ESALSUR						BESALSUR	
Volume	Cation Concentration (Block)	TCNFCAT						BTCNFCAT	

Brine and Multi-Component Brine Model Summary Variables									
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block	Comment
Volume	Cation Concentration (Rock Associated)	TRADCAT						BTRADCAT	
Volume	Cation Concentration (Surfactant Associated)	TSADCAT						BTSADCAT	
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 									

Table 11.15: Brine and Multi-Component Brine Model Summary Variables

Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

11.2.12 OPTION SPECIFIC SUMMARY VARIABLES – COAL BED METHANE MODEL

The Coal Bed Methane model is not supported by OPM Flow.

11.2.13 OPTION SPECIFIC SUMMARY VARIABLES – CONDUCTIVE FAULTS MODEL

Conductive faults have not been implemented in OPM Flow.

11.2.14 OPTION SPECIFIC SUMMARY VARIABLES – ENVIRONMENTAL TRACERS

Environmental tracers are not supported by OPM Flow.

11.2.15 OPTION SPECIFIC SUMMARY VARIABLES – FOAM MODEL TRACERS

The Foam phase and model are activated via the FOAM keyword in the RUNSPEC section. Note in the commercial simulator the FOAM phase and model can be used in conjunction with the POLYMER and SURFACT phases; this is not the case for OPM Flow. OPM Flow's FOAM phase and model is a standalone implementation and cannot be used in conjunction with either the POLYMER or SURFACT phases.

Foam Model Tracers Summary Variables									
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block	Comment
Flow	Foam Flow Rate	TFRFOA				CTFRFOA			
Flow	Foam Injection Rate	TIRFOA	FTIRFOA	GTIRFOA	WTIRFOA				
Flow	Foam Injection Total	TITFOA	FTITFOA	GTITFOA	WTITFOA	CTITFOA			
Flow	Foam Production Rate	TPRFOA	FTPRFOA	GTPRFOA	WTPRFOA				
Flow	Foam Production Total	TPTFOA	FTPTFOA	GTPTFOA	WTPTFOA	CTPTFOA			
Property	Foam Adsorption Total	TADSFOA	FTADSFOA			CTADSFOA	RTADSFOA	BTADSFOA	Block is current value
Property	Foam Capillary Number	TCNMFOA						BTCNMFOA	
Property	Foam Decayed Half Life	THLFFOA						BTHLFFOA	
Property	Foam Decayed Tracer	TDCYFOA	FTDCYFOA				RTDCYFOA	BTDCYFOA	
Property	Foam Gas Mobility Factor	TMOBFOA	FTMOBFOA						Excluding shear
Property	Foam in Solution	TIPTFOA	FTIPTFOA			CTIPTFOA	RTIPTFOA	BTIPTFOA	
Volume	Foam Concentration	TCNFFOA						BTCNFFOA	
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 									

Table 11.16: Foam Model Tracers Summary Variables

Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

11.2.16 OPTION SPECIFIC SUMMARY VARIABLES – GAS FIELD OPERATIONS MODEL

The Gas Field Operations model has not been implemented in OPM Flow.

11.2.17 OPTION SPECIFIC SUMMARY VARIABLES – GAS LIFT OPTIMIZATION MODEL

For the Gas Lift Optimization model only a few SUMMARY vectors are available, both in OPM Flow and the commercial simulator, as depicted in Table 11.17. Gas lift optimization is activated by the LIFTOPT keyword in the RUNSPEC section as gas lift activation can vary through time depending on the flow characteristics of the wells.

Gas Lift Optimization Model Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block
Flow	Gas lift gas rate, based on ALQ.	GLIR	FGLIR	GGLIR	WGLIR			
Flow	Incremental oil rate per unit incremental gas lift gas quantity, that is the well's GRADIENT as defined by equation (11.7) below.	OGLR			WOGLR			
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 								

Table 11.17: Gas Lift Optimization Model Summary Variables

The incremental gas lift gas supply is allocated to a well based on the well's current incremental gradient using the following formulae:

$$Gradient = \left(\frac{(\beta_w \times \Delta Q_{Oil})}{(\Delta Q_{GasLift} + \beta_g \times \Delta Q_{Gas})} \right) \quad (11.7)$$

Where:

- β_w = a weighting factor for the preferential allocation of lift gas,
- β_g = the gas production rate weighting factor,
- ΔQ_{Oil} = the increment/decrement in oil production rate,
- ΔQ_{Gas} = the increment/decrement in gas production rate, and
- $\Delta Q_{GasLift}$ = the increment/decrement in gas lift gas rate.

Normally β_g is defaulted to zero and in which case equation (11.7) reduces to:

$$Gradient = \left(\frac{(\beta_w \times \Delta Q_{Oil})}{\Delta Q_{GasLift}} \right) \quad (11.8)$$

Note if gas lift optimization has been activated in the model then the gas production SUMMARY variables (FGPR, GGPR, WGPR, FGPT etc.) only contain the produced gas volumes, that is the reported values exclude the gas associated with gas lift gas.

Secondly, the well gas lift rates are adjusted by the well efficiencies in the calculating the group and field gas lift rates.

11.2.18 OPTION SPECIFIC SUMMARY VARIABLES – GAS CALORIFIC VALUE REPORTING

This feature has not been implemented in OPM Flow.

11.2.19 OPTION SPECIFIC SUMMARY VARIABLES – GI PSUEDO-COMPOSITIONAL MODEL

This feature has not been implemented in OPM Flow.

11.2.20 OPTION SPECIFIC SUMMARY VARIABLES – LGR AND COARSENING

Local Grid Refinement (“LGR”) and cell coarsening have not been implemented in OPM Flow.

11.2.21 OPTION SPECIFIC SUMMARY VARIABLES – MULTI-SEGMENT WELLS

The summary variables in this section are for use for when multi-segment wells are active in the model, and the variables only apply to the well segments requested for a multi-segment well, not to the well, well connection or well completion.

Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

Multi-Segment Wells Summary Variables				
Type	Variable	Root	Well Segment	Comment
Flow	Artificial Lift Quantity	ALQ	SALQ	See keyword WSEGTabl
Flow	Brine Flow Rate	FR	SFR	Surfactant and Polymer model
Flow	Gas Flow Rate	GFR	SGFR	
Flow	Gas Flow Rate (Free)	GFRF	SGFRF	
Flow	Gas Flow Rate (Solution)	GFRS	SGFRS	
Flow	Gas Flow Total (Absolute)	GFTA	SGFTA	
Flow	Gas Flow Total	GFT	SGFT	
Flow	Gas Flow Velocity	GFV	SGFV	
Flow	Gas Holdup Fraction	GHF	SGHF	
Flow	Gas Import Rate	GIMR	SGIMR	See keyword WSEGEXSS
Flow	Gas Import Total	GIMT	SGIMT	See keyword WSEGEXSS
Flow	Oil Absolute Flow Total	OFTA	SOFTA	
Flow	Oil Flow Rate	OFR	SOFR	
Flow	Oil Flow Rate (Free)	OFRF	SOFRF	
Flow	Oil Flow Rate (Solution)	OFRS	SOFRS	
Flow	Oil Flow Total	OFT	SOFT	
Flow	Oil Flow Velocity	OFV	SOFV	
Flow	Oil Holdup Fraction	OHF	SOHF	
Flow	Polymer Flow Rate	CFR	SCFR	Polymer model
Flow	Tracer Flow Rate	TFR	STFR	Tracer model
Flow	Water Flow Rate	WFR	SWFR	
Flow	Water Flow Total	WFT	SWFT	
Flow	Water Flow Total (Absolute)	WFTA	SWFTA	
Flow	Water Flow Velocity	WV	SWV	
Flow	Water Holdup Fraction	WHF	SWHF	
Flow	Water Import Rate	WIMR	SWIMR	See keyword WSEGEXSS

Multi-Segment Wells Summary Variables				
Type	Variable	Root	Well Segment	Comment
Flow	Water Import Total	WIMT	SWIMT	See keyword WSEGEXSS
Pressure	Pressure	PR	SPR	
Pressure	Pressure Drop	PRD	SPRD	
Pressure	Pressure Drop component due to Friction	PRDF	SPRDF	
Pressure	Pressure Drop component due to Hydrostatic head	PRDH	SPRDH	
Pressure	Pressure drop due to Acceleration head	PRDA	SPRDA	
Pressure	Pressure Drop Frictional Multiplier	PRDM	SPRDM	See keyword WSEGMULT
Property	API	API	SAPI	API model
Property	Fluid Mixture Density (Excludes Exponents)	DENM	SDENM	Excludes exponents of flowing fractions
Property	Fluid Mixture Density (Includes Exponents)	MDEN	SMDEN	Includes exponents of flowing fractions
Property	Fluid Mixture Viscosity (Includes Exponents)	MVIS	SMVIS	Includes exponents of flowing fractions
Property	Fluid Viscosity (Effective Mixture)	EMVIS	SEMVIS	Water/polymer fluid
Property	Gas Density	GDEN	SGDEN	
Property	Gas Viscosity	GVIS	SGVIS	
Property	Gas-Liquid Drift Velocity (Vd)	GLVD	SGLVD	Drift flux slip model
Property	Gas-Liquid Profile Parameter (C0)	GLPP	SGLPP	Drift flux slip model
Property	Oil Density	ODEN	SODEN	
Property	Oil Viscosity	OVI	SOVI	
Property	Oil-Water Drift Velocity (Vd)	OWVD	SOWVD	Drift flux slip model
Property	Oil-Water Profile Parameter (C0)	OWPP	SOWPP	Drift flux slip model
Property	Pump Working Power	PPOW	SPPOW	See keyword WSEGPULL
Property	Scale Deposition Diameter (Karst Conduit Calcite Dissolution)	FD	SFD	Scale Deposition model
Property	Setting of segment	FOPN	SFOPN	See keywords WSEGVALV, WSEGAICD, WSEGSICD, WSEGTABLE, WSEGLABY and WSEGFLIM)
Property	Strength of ICD on segment	STR	SSTR	See keywords WSEGVALV, WSEGAICD and WSEGSICD)
Property	Water Density (Pure Water)	WDEN	SWDEN	
Property	Water Viscosity (Pure Water)	WVIS	SWVIS	
Ratio	Gas-Oil Ratio	GOR	SGOR	
Ratio	Oil-Gas Ratio	OGR	SOGR	
Ratio	Water Cut	WCT	SWCT	
Ratio	Water Gas Ratio	WGR	SWGR	

Multi-Segment Wells Summary Variables				
Type	Variable	Root	Well Segment	Comment
Volume	Brine Concentration	SCN	SSCN	Surfactant and Polymer model
Volume	Polymer Concentration	CCN	SCCN	Polymer model
Volume	Tracer Concentration	TFC	STFC	Tracer model
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 				

Table 11.18: Multi-Segment Wells Summary Variables

Examples

For example, to get the segment oil production rates for well OP01 segments two, three, and four and for segment two for OP02 one would use:

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY

SOFR
'OP01' 2 /
'OP01' 3 /
'OP01' 4 /
'OP02' 2 /
/
```

or to get all the oil production rates for all the segments for well OP01:

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY

SOFR
'OP01' /
/
```

Care should be exercised when defaulting the list of wells and segments as there is the potential to generate large volumes of data.

11.2.22 OPTION SPECIFIC SUMMARY VARIABLES – NETWORK MODEL

For the Network models only a few SUMMARY vectors for groups and nodes are available, both in OPM Flow and the commercial simulator, as depicted in Table 11.19. There are two types of network option in the simulator a Standard Network and an Extended Network option, the latter is activated by the NETWORK keyword in the RUNSPEC section. The summary vectors apply to both the Standard and Extended Network options.

Network Model Summary Variables								
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block
Pressure	Group/Node pressure in a production network.			GPR				
Pressure	Group /Node pressure in a gas injection network.			GPRG				
Pressure	Group/Node pressure in a water injection network.			GPRW				
Pressure	Pressure drop along the group's or node's outlet branch in a production network.			GPRB				
Pressure	Pressure drop along the group's or node's inlet branch in a gas injection network.			GPRBG				
Pressure	Pressure drop along the group's or node's inlet branch in a water injection network.			GPRBW				
Flow	Artificial Lift Quantity ("ALQ") in the group's or node's outlet branch in a production network. Note no units are stated as ALQ units are variable, for example Hz for ESP or rate for gas lift gas.			GALQ				
Flow	Oil flow rate along the group's or node's outlet branch in a production network.			GOPRNB				
Flow	Water flow rate along the group's or node's outlet branch in a production network.			GWPRNB				
Flow	Gas flow rate along the group's or node's outlet branch in a production network.			GGPRNB				
Flow	Liquid flow rate along the group's or node's outlet branch in a production network.			GLPRNB				
Flow	Water flow rate along the group's or node's inlet branch in water injection network.			GWIRNB				
Flow	Gas flow rate along the group's or node's inlet branch in gas injection network.			GGIRNB				
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 								

Table 11.19: Network Model Summary Variables

Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

11.2.23 OPTION SPECIFIC SUMMARY VARIABLES – OPM FLOW SIMULATION PERFORMANCE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	----------------	--------------------------

Description

The following table (Table 11.20) lists the OPM Flow simulation performance summary variables that can be written to the SUMMARY file. Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

Cumulative Message Variables		
Variable	Root	Comment
CPR Solver - Average number of pressure iterations per linear iteration for each time step.	NCPRLINS	Unknown keyword.
CPR Solver - Average number of pressure iterations per Newton iteration per time step.	NLINEARP	Unknown keyword.
CPR Solver - Cumulative number of pressure iterations.	MSUMLINP	Unknown keyword.
CPR Solver - Number of pressure iterations for each time step.	MLINEARP	Unknown keyword.
CPU - CPU time per day (or hour in lab units depending on run units system).	TCPUDAY	No data written to file.
CPU - CPU time per time step for all gradient calculations (Gradient Option).	TCPUSHT	OPM Flow currently has not implemented the Gradient option.
CPU - CPU time per time step for each gradient calculation (Gradient Option).	TCPUTSH	OPM Flow currently has not implemented the Gradient option.
CPU - CPU time per time step in seconds.	TCPUTS	No data written to file.
CPU - Cumulative CPU time for each gradient calculation (Gradient Option).	TCPUH	OPM Flow currently has not implemented the Gradient option.
CPU - Cumulative CPU time for all gradient calculations (Gradient Option).	TCPUHT	OPM Flow currently has not implemented the Gradient option.
CPU - Cumulative CPU time used in SCHEDULE section.	TCPUSCH	
CPU - Current CPU usage in seconds.	TCPU	Does not consider the time taken by inter-process communications in parallel runs, whereas ELAPSED does. Thus, for parallel jobs, ELAPSED is the most relevant time measurement. Written to file.
Elapsed - Cumulative waiting time per process in seconds.	DTMWAIT	Unknown keyword.
Elapsed - Elapsed time in seconds.	ELAPSED	No data written to file.
Elapsed - Elapsed time per day (or hour in lab units).	TELAPDAY	
Elapsed - Elapsed time per linear iteration in seconds.	TELAPLIN	No data written to file.
Elapsed - Elapsed time per time step in seconds.	TELAPTS	

Cumulative Message Variables		
Variable	Root	Comment
Iterations - Average number of linear iterations per Newton iteration for each time step.	NLINEARS	For runs with LGRs, LLINEARS will automatically be exported for each LGR.
Iterations - Cumulative number of linear iterations.	MSUMLINS	No data written to file.
Iterations - Cumulative number of Newton iterations.	MSUMNEWT	No data written to file.
Iterations - Maximum number of linear iterations in the Newton iterations per time step.	NLINSMAX	No data written to file.
Iterations - Minimum number of linear iterations in the Newton iterations per time step.	NLINSMIN	No data written to file.
Iterations - Number linear iterations for each time step.	MLINEARS	No data written to file.
Iterations - Number of linear iterations for each gradient calculation (Gradient Option).	HLINEARS	OPM Flow currently has not implemented the Gradient option.
Iterations - Number of Newton iterations used for each time step.	NEWTON	No data written to file.
Iterations - Number of well Newton iterations taken in the last global Newton iteration. A negative value indicates that the well failed to converge.	WNEWTON	
Iterations - Total number of linear iterations for each gradient pressure (Gradient Option).	HSUMLINS	OPM Flow currently has not implemented the Gradient option.
Maximum change in gas saturation for each time step.	MAXDSG	
Maximum change in oil saturation for each time step.	MAXDSO	
Maximum change in pressure for each time step.	MAXDPR	
Maximum change in water saturation for each time step.	MAXDSW	
Memory - Operating system reported maximum current memory usage across processors.	MEMORYTS	
Memory - Peak usage of dynamically allocated memory reported by OPM Flow. For parallel cases this is the maximum across all processors.	NBYTOT	
Messages - Cumulative number of BUG messages.	MSUMBUG	
Messages - Cumulative number of COMMENT messages.	MSUMCOMM	
Messages - Cumulative number of ERROR messages.	MSUMERR	
Messages - Cumulative number of MESSAGES messages.	MSUMMESS	
Messages - Cumulative number of PROBLEM messages.	MSUMPROB	
Messages - Cumulative number of WARNING messages.	MSUMWARN	
Time Step – Criteria used to select the length of the time step, set to one of the following:	STEPTYPE	No data written to file. Note if the RUNSUM keyword has been activated in the SUMMARY section, then the mnemonics are written to the RSM file instead of
Value Criteria Definition		
I INIT Initial time step.		

Cumulative Message Variables				
Variable			Root	Comment
2	TRNC	Controlled via time truncation error.		integer values.
3	MINF	Minimum ratio between one time step and the next.		
4	MAXF	Maximum ratio between one time step and the next.		
5	MINS	Minimum permitted time step.		
6	MAXS	Maximum permitted time step.		
7	REPT	Report time step		
8	HALF	Half of the time set to reach the next report time step.		
9	CHOP	Time step chopped due non-convergence of non-linear equations.		
10	SATM	Maximum saturation change.		
11	PCHP	Time step chopped due to maximum pressure change in IMPES formulation.		
12	DIFF	Difficult time step after a time step CHOP.		
13	LGRC	Determined by LGR fluid in-place error targets.		
14	SURF	Set by maximum expected grid block surfactant concentration change.		
15	NETW	Time step determined by network balancing controls.		
16	THRP	Time step controlled by maximum through put ratio.		
17	EMTH	Time step selected to match the end of a month.		
18	MAXP	Set by maximum expected grid block pressure change.		
19	WCYC	Determined by well cycling on/off time.		
20	MAST	Chosen by the master simulation in a reservoir coupling run.		
21	SLVR	Selected by a slave simulation to match a slave reporting time step, in a reservoir coupling run.		
22	SLVC	Time step selected by a slave simulation due to a slave's expected		

Cumulative Message Variables			
Variable			Root
			Comment
		flow rate change in a reservoir coupling run.	
23	MAXW	Maximum time step size after a well control event.	
24	EFF+	Selected by ZIPPY optimum time selection algorithm.	
25	EFF-		
26	NLTR		
27	EFFT		
28	DLYA		
29	ACTN		
30	RAIN		
Time Step - Length of time step.			TIMESTEP
Time Step - Predicted efficiency of the time step (developer use).			ZIPEFF
Time Step - Predicted efficiency of the time step divided by the actual efficiency (developer use).			ZIPEFFC
Notes: <ol style="list-style-type: none"> Cells under the Root column not colored indicate that the summary variable is available in OPM Flow. Cells under the Root column colored in gray indicate that the summary variable is recognized by the parser but the summary variable is not available. Cells under the Root column colored in orange indicate that the summary variable is <u>not</u> recognized by the parser and the summary variable is not available. These summary variables may cause the simulator to abort. 			

Table 11.20: OPM Flow Simulator Performance Summary Variables

See also the PERFORMA and NMESSAGE keywords in section [11.3 Keyword Definitions](#) that write out a selection of the variables in Table 11.20.

11.2.24 OPTION SPECIFIC SUMMARY VARIABLES – POLYMER MODEL

The summary variables in this section are associated with Polymer phase and the polymer flood model. The feature is activated by the POLYMER keyword in the RUNSPEC section.

Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

Polymer Model Summary Variables									
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block	Comment
Flow	Polymer Flow Rate	CFR				CCFR			
Flow	Polymer Flow Total (Inter-Region)	CFT					RCFT		
Flow	Polymer Injection Rate	CIR	FCIR	GCIR	WCIR	CCIR			
Flow	Polymer Injection Total	CIT	FCIT	GCIT	WCIT	CCIT			
Flow	Polymer Production Rate	CPR	FCPR	GCPR	WCPR	CCPR			
Flow	Polymer Production Total	CPT	FCPT	GCPT	WCPT	CCPT			
Flow	Salt Flow Rate	SFR				CSPR			
Flow	Salt Injection Rate	SIR	FSIR	GSIR	WSIR	CSIR			
Flow	Salt Injection Total	SIT	FSIT	GSIT	WSIT	CSIT			
Flow	Salt Production Rate	SPR	FSPR	GSPR	WSPR	CSPR			
Flow	Salt Production Total	SPT	FSPT	GSPT	WSPT	CSPT			
Property	Polymer Adsorbed (PLYTRRFA)	CABnnn						BCABnnn	By highest temperature band at which residual resistance factor was calculated, see keyword PLYTRRFA. The band number nnn can range from 001 to 999, but must be less than or equal to the argument on the PLYTRRFA keyword.
Property	Polymer Adsorption Total	CAD	FCAD				RCAD	BCAD	Block is concentration
Property	Polymer Solution (Effective Viscosity)	EPVIS						BEPVIS	Also BVPOLY
Property	Polymer Solution Shear Viscosity (Inter-Block I+ Direction)	SHWVISI						BSHWVISI	
Property	Polymer Solution Shear Viscosity (Inter-Block J+ Direction)	SHWVISJ						BSHWVISJ	
Property	Polymer Solution Shear Viscosity (Inter-Block K+ Direction)	SHWVISK						BSHWVISK	

Polymer Model Summary Variables									
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block	Comment
Property	Polymer Thermal Degradation	CDCS						BCDCS	Total mass degraded in previous time step
Property	Polymer Thermal Degradation Rate	CDCR						BCDCR	Total mass degraded in previous time step
Property	Polymer Thermal Degradation Rate (Adsorbed)	CDCA						BCDCA	
Property	Polymer Thermal Degradation Rate (Solution)	CDCP						BCDCP	
Property	Polymer Water (Effective Viscosity)	EMVIS						BEMVIS	Based on block center properties.
Property	Water Flow Rate Times Shear Multiplier (Inter-Block I+ Direction)	FLOW0I						BFLOW0I	Multiplied by the corresponding shear multiplier (PLYSHLOG and PLYSHEAR options only)
Property	Water Flow Rate Times Shear Multiplier (Inter-Block J+ Direction)	FLOW0J						BFLOW0J	
Property	Water Flow Rate Times Shear Multiplier (Inter-Block K+ Direction)	FLOW0K						BFLOW0K	
Property	Water Shear Rate After Shear Effects (Inter-Block I+ Direction)	SRTWI						BSRTWI	
Property	Water Shear Rate After Shear Effects (Inter-Block J+ Direction)	SRTWJ						BSRTWJ	
Property	Water Shear Rate After Shear Effects (Inter-Block K+ Direction)	SRTWK						BSRTWK	
Property	Water Shear Rate Prior to Shear Effects (Inter-Block I+ Direction)	SRTW0I						BSRTW0I	
Property	Water Shear Rate Prior to Shear Effects (Inter-Block J+ Direction)	SRTW0J						BSRTW0J	
Property	Water Shear Rate Prior to Shear Effects (Inter-Block K+ Direction)	SRTW0K						BSRTW0K	
Property	Water Velocity (Inter-Block I+ Direction)	VELW0I						BVELW0I	
Property	Water Velocity (Inter-Block J+ Direction)	VELW0J						BVELW0J	
Property	Water Velocity (Inter-Block K+ Direction)	VELW0K						BVELW0K	
Property	Water Viscosity (Effective)	EWV_POL						BEWV_POL	
Property	Water Viscosity Sheared Factor (Inter-Block I+ Direction)	PSHLZI						BPSHLZI	
Property	Water Viscosity Sheared Factor (Inter-Block J+ Direction)	PSHLZJ						BPSHLZJ	
Property	Water Viscosity Sheared Factor (Inter-Block K+ Direction)	PSHLZK						BPSHLZK	
Volume	Polymer Concentration (Block)	CCN						BCCN	

Polymer Model Summary Variables									
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block	Comment
Volume	Polymer Concentration (Injection)	CIC	FCIC	GCIC	WCIC	CCIC			
Volume	Polymer Concentration (Production)	CPC	FCPC	GCPC	WCPC	CCPC			
Volume	Polymer Solution (In Solution)	CIP	FCIP				RCIP	BCIP	
Volume	Salt Cell Concentration	SCN						BSCN	
Volume	Salt In Place	SIP	FSIP				RSIP	BSIP	
Volume	Salt inter-region Flow Total	SFT					RSFT		
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 									

Table 11.21: Polymer Model Summary Variables

11.2.25 OPTION SPECIFIC SUMMARY VARIABLES – PSEUDO STEADY STATE

This feature has not been implemented in OPM Flow.

11.2.26 OPTION SPECIFIC SUMMARY VARIABLES – RESERVOIR COUPLING

This feature has not been implemented in OPM Flow.

11.2.27 OPTION SPECIFIC SUMMARY VARIABLES – SOLVENT MODEL

The SOLVENT keyword in the RUNSPEC section activates the solvent phase in the model and activates the four component solvent model for the run. In addition to this keyword, the oil, water and gases phases should also be declared for the run using the OIL, WATER and GAS keywords. The summary variables for this option are outlined in Table 11.22.

Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

Solvent Model Summary Variables									
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block	Comment
Flow	Solvent Flow Rate	NFR				CNFR			Field, group and wells gas rates and cumulative volumes include the solvent gas.
Flow	Solvent Flow Total (Inter-Region)	NFT					RNFT		
Flow	Solvent Injection Rate	NIR	FNIR	GNIR	WNIR				
Flow	Solvent Injection Total	NIT	FNIT	GNIT	WNIT	CNIT			
Flow	Solvent Production Rate	NPR	FNPR	GNPR	WNPR				
Flow	Solvent Production Total	NPT	FNPT	GNPT	WNPT	CNPT			
Property	Solvent Relative Permeability	NKR						BNKR	
Volume	Solvent In-Place	NIP	FNIP				RNIP	BNIP	
Volume	Solvent Saturation	BNSAT						BBNSAT	
Notes: 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available.									

Table 11.22: Solvent Model Summary Variables

11.2.28 OPTION SPECIFIC SUMMARY VARIABLES – SURFACTANT MODEL

This feature has not been implemented in OPM Flow.

11.2.29 OPTION SPECIFIC SUMMARY VARIABLES – THERMAL MODEL

The temperature option (TEMP keyword in the RUNSPEC section) and the thermal option (THERMAL keyword in the RUNSPEC section) are two separate modeling facilities in the commercial simulator; although some keywords can be used by both options. OPM Flow's thermal implementation is based on solving the energy equation fully coupled with the black-oil equations so the results are not directly equivalent to the commercial simulator's black-oil TEMP or compositional THERMAL formulations. The THERMAL keyword is used to invoke OPM Flow's thermal option. The summary variables for this option are listed in Table 11.23.

Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

Thermal Model Summary Variables									
Type	Variable	Root	Field	Group	Well	Well Connection	Region	Block	Comment
Flow	Energy Injection Rate	TIRHEA	FTIRHEA	GTIRHEA	WTIRHEA				
Flow	Energy Injection Total	TITHEA	FTITHEA	GTITHEA	WTITHEA				
Flow	Energy Production Rate	TPRHEA	FTPRHEA	GTPRHEA	WTPRHEA				
Flow	Energy Production Total	TPTHEA	FTPTHEA	GTPTHEA	WTPTHEA				
Property	Temperature (Block)	TCNFHEA						BTCNFHEA	
Property	Temperature (Injection)	TICHEA	FTICHEA	GTICHEA	WTICHEA				
Property	Temperature (Production)	TPCHEA	FTPCHEA	GTPCHEA	WTPCHEA			BTPCHEA	
Volume	Energy In-Place Difference	TIPTHEA	FTIPTHEA				RTIPTHEA	BTIPTHEA	Difference in energy in- place from start of run to current time.
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 									

Table 11.23: Thermal Model Summary Variables

See the THERMAL keyword in the RUNSPEC section for additional information on this feature.

11.2.30 OPTION SPECIFIC SUMMARY VARIABLES – USER DEFINE QUANTITIES

The UDQ keyword in the SCHEDULE section defines variables and operations used to access the User Defined Quantities features in OPM Flow. UDQ variables can be constants, summary variables, as defined in the SUMMARY section, or a formula using various mathematical functions together with constants and summary variables.

The variable names defined by the UDQ keyword in the SCHEDULE section consist of a character string of length eight, that stipulates the name of the user defined variable based on the type of variable. The variable type is defined by the first two characters of the variable name and must be set to one of the following:

- 1) CU: For variables that are associated with connections, for example summary variable COFR (Connection Oil Flow Rate).
- 2) FU: For variables that are associated with field data, for example summary variable FOPR (Field Oil Production Rate).
- 3) GU: For variables that are associated with groups, for example summary variable GLPR (Group Liquid Production Rate).
- 4) RU: For variables that are associated with regions, for example summary variable RPR (Region Pressure).
- 5) SU: For variables that are associated with multi-segment wells, for example summary variable SOFR (Segment Oil Flow Rate).
- 6) WU: For variables that are associated with wells, for example summary variable WWCT (Well Water Cut).
- 7) AU: For variables that are associated with aquifers, for example summary variable AAQP (Analytical Aquifer Pressure).
- 8) BU: For variables that are associated with blocks, for example summary variable BPR (Block oil phase Pressure).

The summary variable format for UDQ defined variables is presented in Table 11.24.

User Define Quantities Summary Variables							
Variable	Root	Field	Group	Well	Well Connection	Region	Well Segment
UDQ Variable	XXXXXX	FUXXXXXX	GUXXXXXX	WUXXXXXX	CUXXXXXX	RUXXXXXX	SUXXXXXX
Notes: <ol style="list-style-type: none"> 1) Where XXXXXX is the variable name defined by the UDQ keyword in the SCHEDULE section. 2) Output of aquifer (AU) and block (BU) summary variables is not supported. 							

Table 11.24: User Define Quantities Summary Variables

The following example illustrates the use of this type of summary variable.

Examples

The example shows how to define some constant field variables used for calculating facilities corrected condensate yields in a wet gas model in the SCHEDULE section. The corrected condensate rate is stored as variable named FU_FNGLR.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
-- DEFINE START OF USER DEFINED QUANTITY SECTION
--
UDQ
--
-- OPERATOR VARIABLE  EXPRESSION
--
ASSIGN      FUNGLYLD  1.100000          / Condensate Yield Correction
--
-- OPERATOR VARIABLE  EXPRESSION
--
DEFINE      FU_FNGLR  FGPR *(FOGR * FUNGLYLD) / Calculate Condensate Rate Field
UPDATE      FU_FNGLR  ON                /
UNITS       FU_FNGLR  STBD              /

/  DEFINE END OF USER DEFINED QUANTITY SECTION
```

In order to report the field corrected condensate values, one would declare FU_FNGLR in the SUMMARY section, as shown below.

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY

FU_FNGLR
```

Note that the normal summary variables syntax rules still apply to groups, regions and wells, etc. So for example, in addition, if the same calculations were performed on two wet gas producers, GP01 and GP02, then one would use:

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY

FU_FNGLR

WU_FNGLR
GP01
GP02
/
```

Assuming of course that WU_FNGLR was defined in the SCHEDULE section.

11.2.31 OPTION SPECIFIC SUMMARY VARIABLES – WELLBORE FRICTION MODEL

This feature has not been implemented in OPM Flow.

11.3 KEYWORD DEFINITIONS

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

11.3.1 ALL – EXPORT STANDARD SUMMARY VARIABLE VECTORS TO FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the writing out of a standard set of summary production and injection data vectors for the field, group and well objects to the SUMMARY (*.SMSPEC and *.UNSMRY) and RSM (*.RSM) files. Table 11.25 lists the production, injection, pressure and volume summary variables written out by the ALL keyword, and Table 11.26 list the aquifer variables.

Standard Production, Injection, and Pressures Summary Variables					
Variable	Root	Field	Group	Well	Comment
Gas Injection Rate	GIR	FGIR	GGIR	WGIR	
Gas Injection Total	GIT	FGIT	GGIT	WGIT	
Gas Production Rate	GPR	FGPR	GGPR	WGPR	Produced reservoir gas only, gas lift gas is excluded.
Gas Production Total	GPT	FGPT	GGPT	WGPT	
Oil Injection Rate	OIR	FOIR	GOIR	WOIR	
Oil Injection Total	OIT	FOIT	GOIT	WOIT	
Oil Production Rate	OPR	FOPR	GOPR	WOPR	
Oil Production Total	OPT	FOPT	GOPT	WOPT	
Res.Vol. Injection Rate	VIR	FVIR	GVIR	WVIR	
Res.Vol. Injection Total	VIT	FVIT	GVIT	WVIT	
Res.Vol. Production Rate	VPR	FVPR	GVPR	WVPR	
Res.Vol. Production Total	VPT	FVPT	GVPT	WVPT	
Water Injection Rate	WIR	FWIR	GWIR	WWIR	
Water Injection Total	WIT	FWIT	GWIT	WWIT	
Water Production Rate	WPR	FWPR	GWPR	WWPR	
Water Production Total	WPT	FWPT	GWPT	WWPT	
Bottom-Hole Pressure	BHP			WBHP	
Productivity	PI			WPI	Preferred Phase
Tubing Head Pressure	THP			WTHP	
Gas-Oil Ratio	GOR	FGOR	GGOR	WGOR	
Water -Gas Ratio	WGR	FWGR	GWGR	WWGR	
Water Cut	WCT	FWCT	GWCT	WWCT	
Pressures and Volumes					
Variable	Root	Field	Group	Well	Comment

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Standard Production, Injection, and Pressures Summary Variables					
Oil Phase Pressure	PR	FPR			Field and Region HCPV weighted
Gas In-Place	GIP	FGIP			Liquid and gas phases
Gas In-Place (Gas Phase)	GIPG	FGIPG			
Gas In-Place (Liquid Phase)	GIPL	FGIPL			
Oil In-Place	OIP	FOIP			Liquid and gas phases
Oil In-Place (Gas Phase)	OIPG	FOIPG			
Oil In-Place (Liquid Phase)	OIPL	FOIPL			
Water In-Place	WIP	FWIP			
Notes: <ol style="list-style-type: none"> Cells colored in gray indicate that the summary variable is not available for this combination. Cells colored orange under the Type column indicate that this set of summary variables are not available in OPM Flow because the underlying feature is not available in OPM Flow. 					

Table I I.25: Standard Production, Injection, and Pressure Summary Variables

Standard Aquifer Summary Variables						
Variable	Root	Field	Analytical Aquifer	Analytical Aquifer List	Numerical Aquifer	Comment
Aquifer Influx Rate (Water Aquifers)	QR	FAQR	AAQR			
Aquifer Influx Total (Water Aquifers)	QT	FAQT	AAQT			
Aquifer Influx Rate (Gas Aquifers)	QRG	FAQRG	AAQRG			
Aquifer Influx Total (Gas Aquifers)	QTG	FAQTG	AAQTG			
Notes: <ol style="list-style-type: none"> Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 						

Table I I.26: Standard Aquifer Summary Variables

There is no data required for this keyword and there is no terminating “/” for this keyword.

Examples

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--      EXPORT STANDARD SUMMARY VARIABLE VECTORS TO FILE
--
ALL
--
--      ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--      ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
```

Note the SEPARATE keyword is not required for OPM Flow as this is the default behavior; however, it is probably good practice to include it if the same input decks are being run with commercial simulator.

11.3.2 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

See [COLUMNS – Define Input File Column Margins](#) in the GLOBAL section for a full description.

11.3.3 DATE - ACTIVATE THE DATE OPTION FOR THE SUMMARY FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	----------------	----------

Description

This keyword activates the writing out of the date of each time step to the SUMMARY file. Normally only the time in days and decimal years are written out to the SUMMARY file, activating the DATE option also results in the DATE being written out to the SUMMARY file as well. This option is normally used when the RUNSUM keyword in the SUMMARY section has been activated to produce a RSM file.

There is no data required for this keyword and there is no terminating "/" for this keyword.

Example

The following example shows an example RSM file output when the DATE option has not been activated.

SUMMARY OF RUN NO-DATE-KEYWORD

TIME DAYS	YEARS YEARS	FPR PSIA	FOEW	FOPR STB/DAY	FOPT STB
0	0	4467.125	0	0	0
1.000000	0.002738	4466.943	0.000239	3235.662	3235.662
31.00000	0.084873	4464.476	0.007407	3230.117	100256.4
60.00000	0.164271	4462.717	0.014291	3193.902	193421.5
91.00000	0.249144	4460.813	0.021523	3127.557	291306.3
121.0000	0.331280	4458.909	0.028362	3055.878	383879.7
152.0000	0.416153	4456.914	0.035262	2982.212	477271.4

And activating the SUMMARY file DATE option with:

```
--
--      ACTIVATE DATE SUMMARY FILE OPTION
--
DATE
```

Results in the following example RSM file output.

SUMMARY OF RUN WITH-DATE-KEYWORD

DATE	YEARS YEARS	DAY	MONTH	YEAR	FPR PSIA	FOEW	FOPR STB/DAY
1-JAN-98	0	19	10	1992	4467.125	0	0
2-JAN-98	0.002738	20	10	1992	4466.943	0.000239	3235.662
31-JAN-98	0.084873	21	10	1992	4464.476	0.007407	3230.117
28-FEB-98	0.164271	24	10	1992	4462.717	0.014291	3193.902
31-MAR-98	0.249144	28	10	1992	4460.813	0.021523	3127.557
30-APR-98	0.331280	3	11	1992	4458.909	0.028362	3055.878
31-MAY-98	0.416153	14	11	1992	4456.914	0.035262	2982.212

11.3.4 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See [DEBUG – Define the Debug Data to be Printed to File](#) in the GLOBAL section for a full description.

11.3.5 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

See [ECHO – Activate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

11.3.6 END – DEFINE THE END OF THE INPUT FILE

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

See [END – Define the End of the Input File](#) in the GLOBAL section for a full description.

11.3.7 ENDINC – DEFINE THE END OF AN INCLUDE FILE

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

See [ENDINC – Define the End of an Include File](#) in the GLOBAL section for a full description.

11.3.8 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

See [ENDSKIP – DeActivate Skipping of Keywords and Input Data](#) in the GLOBAL section for a full description.

11.3.9 EXCEL - ACTIVATE THE EXCEL OPTION FOR THE SUMMARY FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the writing out of the RSM file data in a format that can easily be loaded into Microsoft's EXCEL spreadsheet program or LibreOffice's CALC spreadsheet program. The RSM file output is activated by the RUNSUM keyword in the SUMMARY section.

There is no data required for this keyword and there is no terminating "/" for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Examples

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY      --
--
--          ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--          ACTIVATE EXCEL SUMMARY FILE OPTION
--
EXCEL
```

The above example activates the SUMMARY file EXCEL option for directly loading the RSM file into either Microsoft's EXCEL or LibreOffice's CALC spreadsheet programs.

11.3.10 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

See [EXTRAPMS – Activate Extrapolation Warning Messages](#) in the GLOBAL section for a full description.

11.3.11 FMWSET - EXPORT WELL STATUS VECTORS FOR THE FIELD TO FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	----------------	--------------------------

Description

This keyword is similar to the ALL keyword in the SUMMARY section, in that it results in a group of summary variables to be written out to the SUMMARY file. In this case the keyword activates the writing out of a set of data vectors that give the production and injections status of all the wells in the model, as well as the number of wells in the drilling queue and the number of workover events occurring within a time step. Both instantaneous and cumulative well counts and events are written out as listed in Table 11.27.

There is no data required for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Field and Group Well Status Summary Variables				
Variable	Root	Field	Group	Comment
Number of abandoned injection wells	MWIA	FMWIA	GMWIA	
Number of abandoned production wells	MWPA	FMWPA	GMWPA	
Number of drilling events in total	MWDT	FMWDT	GMWDT	
Number of drilling events this time step	MWDR	FMWDR	GMWDR	
Number of injection wells currently flowing	MWIN	FMWIN	GMWIN	
Number of injectors on group control	MWIG	FMWIG	GMWIG	
Number of injectors on own reservoir volume rate limit control	MWIV	FMWIV	GMWIV	
Number of injectors on own surface rate limit control	MWIS	FMWIS	GMWIS	
Number of injectors on pressure control	MWIP	FMWIP	GMWIP	
Number of producers controlled by own oil rate limit	MWPO	FMWPO	GMWPO	
Number of producers on group control	MWPG	FMWPG	GMWPG	
Number of producers on own reservoir volume rate limit control	MWPV	FMWPV	GMWPV	
Number of producers on own surface rate limit control	MWPS	FMWPS	GMWPS	
Number of producers on pressure control	MWPP	FMWPP	GMWPP	
Number of producers using artificial lift (with ALQ > 0.0)	MWPL	FMWPL	GMWPL	
Number of production wells currently flowing	MWPR	FMWPR	GMWPR	
Number of unused injection wells	MWIU	FMWIU	GMWIU	
Number of unused production wells	MWPU	FMWPU	GMWPU	
Number of workover events in total	MWWT	FMWWT	GMWWT	
Number of workover events this time step.	MWWO	FMWWO	GMWWO	
Total number of injection wells	MWIT	FMWIT	GMWIT	
Total number of production wells	MWPT	FMWPT	GMWPT	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Field and Group Well Status Summary Variables				
Variable	Root	Field	Group	Comment
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 				

Table 11.27: FMWSET - Standard Field and Group Well Status Summary Variables

See also the GMWSET keyword in the SUMMARY schedule that has similar functionality but at a group level.

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY  --
--      EXPORT WELL STATUS VECTORS FOR THE FIELD TO FILE
--
FMWSET
--
--      ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--      ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
```

The above example exports the field standard well status variables to the SUMMARY file.

11.3.12 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be placed at the very top of the input file.

See [FORMFEED – Defined the Print File Form-Feed Character](#) in the GLOBAL section for a full description.

11.3.13 GMWSET - EXPORT WELL STATUS VECTORS BY GROUP TO FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	----------------	--------------------------

Description

This keyword is similar to the ALL keyword in the SUMMARY section, in that it results in a group of summary variables to be written out to the SUMMARY file. In this case the keyword activates the writing out of a set of data vectors that give the production and injections status of all the wells in the named groups, as well as the number of wells in the drilling queue and the number of workover events occurring within a time step for the requested groups. Both instantaneous and cumulative well counts and events for the groups are written out as tabulated in Table 11.28.

Note that GMWSET should be followed by a list of group names enclosed in quotes and therefore a terminating "/" is required to end the list of groups. A blank list requests output for all groups.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Field and Group Well Status Summary Variables				
Variable	Root	Field	Group	Comment
Number of abandoned injection wells	MWIA	FMWIA	GMWIA	
Number of abandoned production wells	MWPA	FMWPA	GMWPA	
Number of drilling events in total	MWDT	FMWDT	GMWDT	
Number of drilling events this timestep	MWDR	FMWDR	GMWDR	
Number of injection wells currently flowing	MWIN	FMWIN	GMWIN	
Number of injectors on group control	MWIG	FMWIG	GMWIG	
Number of injectors on own reservoir volume rate limit control	MWIV	FMWIV	GMWIV	
Number of injectors on own surface rate limit control	MWIS	FMWIS	GMWIS	
Number of injectors on pressure control	MWIP	FMWIP	GMWIP	
Number of producers controlled by own oil rate limit	MWPO	FMWPO	GMWPO	
Number of producers on group control	MWPG	FMWPG	GMWPG	
Number of producers on own reservoir volume rate limit control	MWPV	FMWPV	GMWPV	
Number of producers on own surface rate limit control	MWPS	FMWPS	GMWPS	
Number of producers on pressure control	MWPP	FMWPP	GMWPP	
Number of producers using artificial lift (with ALQ > 0.0)	MWPL	FMWPL	GMWPL	
Number of production wells currently flowing	MWPR	FMWPR	GMWPR	
Number of unused injection wells	MWIU	FMWIU	GMWIU	
Number of unused production wells	MWPU	FMWPU	GMWPU	
Number of workover events in total	MWWT	FMWWT	GMWWT	
Number of workover events this time step.	MWWO	FMWWO	GMWWO	
Total number of injection wells	MWIT	FMWIT	GMWIT	
Total number of production wells	MWPT	FMWPT	GMWPT	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Field and Group Well Status Summary Variables				
Variable	Root	Field	Group	Comment
Notes: <ol style="list-style-type: none"> 1) Cells colored in gray with a mnemonic indicate that the summary variable is not available in OPM Flow. 2) Cells colored in gray with no mnemonic indicate that the summary variable is not available for this combination. 3) Cells colored orange show combinations that are not available in OPM Flow because the underlying feature is not available. 				

Table 11.28: GMWSET - Standard Field and Group Well Status Summary Variables

See also the FMWSET keyword in the SUMMARY schedule that has similar functionality but at the field level.

Examples

The first example below exports all the group standard well status variables to the SUMMARY file.

```
-- =====
-- SUMMARY SECTION
-- =====
SUMMARY
--
-- EXPORT WELL STATUS VECTORS FOR NAMED GROUPS TO FILE
--
GMWSET
/
--
-- ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
-- ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
```

The second example exports all the group standard well status variables for just the PLAT1 and PLT2 groups only to the SUMMARY file.

```
--
-- EXPORT WELL STATUS VECTORS FOR NAMED GROUPS TO FILE
--
GMWSET
'PLAT1' 'PLAT2'
/
--
-- ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
-- ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
```

11.3.14 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file.

See [INCLUDE – Load Another Data File at the Current Position](#) in the GLOBAL section for a full description.

11.3.15 MESSAGE – OUTPUT USER MESSAGE

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGES keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

See [MESSAGE – Output User Message](#) in the GLOBAL section for a full description.

11.3.16 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

See [MESSAGES – Define Message Print Limits and Stop Limits](#) in the GLOBAL section for a full description.

11.3.17 MONITOR – ACTIVATE OUTPUT OF THE MONITORING DATA AND FILE

The MONITOR keyword activates the writing out of the run time monitoring information used by post-processing graphics software to display run time information, for example the simulated production and injection rates and cumulative values. OPM Flow does not have this functionality.

See [MONITOR – Activate Output of the Monitoring Data and File](#) in the RUNSPEC section for a full description.

11.3.18 NARROW – ACTIVATE RUN SUMMARY NARROW COLUMN OUTPUT OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The NARROW keyword activates the Run Summary Narrow Column Output option, for when printed SUMMARY data has been requested by the RUNSUM keyword in the SUMMARY section. The option increases the number of columns “printed on the page”.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

11.3.19 NEWTON – ACTIVATE NEWTON ITERATION SUMMARY OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the writing out of the Newtonian iteration vector (the number of non-linear iterations per time step) to the SUMMARY file, and the RSM file if the RSM file option has been requested by the RUNSUM keyword in the SUMMARY section,

There is no data required for this keyword and there is no terminating “/” for this keyword.

Although the keyword is recognized by OPM Flow only zeros are written to the SUMMARY file.

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--     ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--     ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE    --
--     ACTIVATE NEWTON ITERATION SUMMARY OUTPUT
--
NEWTON
```

The above example activates the writing out of the Newtonian iteration vector to the SUMMARY file.

11.3.20 NMESSAGE – EXPORT CUMULATIVE MESSAGE SUMMARY VARIABLES TO FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the writing out of a standard set of summary OPM Flow simulation performance summary variables to the SUMMARY (*.SMSPEC and *.UNSMRY) and RSM (*.RSM) files, namely the number of messages written per message class. Table 11.25 lists the summary variables written out by the NMESSAGE keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

OPM Flow Simulator Performance Summary Variables Cumulative Message Variables		
Variable	Root	Comment
Messages - Cumulative number of BUG messages.	MSUMBUG	Unknown keyword.
Messages - Cumulative number of COMMENT messages.	MSUMCOMM	Unknown keyword.
Messages - Cumulative number of ERROR messages.	MSUMERR	Unknown keyword.
Messages - Cumulative number of MESSAGES messages.	MSUMMESS	Unknown keyword.
Messages - Cumulative number of PROBLEM messages.	MSUMPROB	Unknown keyword.
Messages - Cumulative number of WARNING messages.	MSUMWARN	Unknown keyword.
Notes: <ol style="list-style-type: none"> Cells under the Root column not colored indicate that the summary variable is available in OPM Flow. Cells under the Root column colored in gray indicate that the summary variable is recognized by the parser but the summary variable is not available. Cells under the Root column colored in orange indicate that the summary variable is <u>not</u> recognized by the parser and the summary variable is not available. These summary variables may cause the simulator to abort. 		

Table 11.29: Simulator Performance Summary Variables (Cumulative Messages)

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--     EXPORT PERFORMANCE CUMULATIVE MESSAGE VARIABLE VECTORS TO FILE
--
NMESSAGE
--
--     ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--     ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Note the SEPARATE keyword is not required for OPM Flow as this is the default behavior; however, it is probably good practice to include it if the same input decks are being run with the commercial simulator.

11.3.21 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active. but can subsequently be switched off by the NOECHO activation keyword.

See [NOECHO – Deactivate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

11.3.22 NOMONITO – DEACTIVATE OUTPUT OF THE MONITORING DATA AND FILE

The NOMONITO keyword deactivates the writing out of the run time monitoring information used by post-processing graphics software to display run time information, for example the simulated production and injection rates and cumulative values. OPM Flow does not have this functionality.

See [NOMONITO – Deactivate Output of the Monitoring Data and File](#) in the RUNSPEC section for a full description.

11.3.23 NOWARN – DEACTIVATE WARNING MESSAGES

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

See [NOWARN – Deactivate Warning Messages](#) in the GLOBAL section for a full description.

11.3.24 OFM – ACTIVATE OFM FILE OUTPUT OF THE SUMMARY DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword activates the writing out of the SUMMARY file data in the Oil Field Manager (“OFM”) file format to enable the simulated data to be directly loaded into OFM.

There is no data required for this keyword and there is no terminating “/” for this keyword.

See also the EXCEL, RPTONLY, RUNSUM and SEPARATE keywords in the SUMMARY section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

11.3.25 PERFORMA – EXPORT STANDARD SIMULATOR PERFORMANCE SUMMARY VARIABLES TO FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PERFORMA keyword activates the writing out of a standard set of summary OPM Flow simulation numerical performance summary variables to the SUMMARY (*.SMSPEC and *.UNSMRY) and RSM (*.RSM) files. Table 11.25 lists the summary variables written out by the keyword.

Note that not all these variables are available in OPM Flow; however, the simulator will issue a warning messages if this is indeed the case. It is anticipated that the number of recognized summary variables will increase in future releases of OPM Flow.

OPM Flow Simulator Performance Summary Variables		
Numerical Performance Variables		
Variable	Root	Comment
CPU - CPU time per day (or hour in lab units depending on run units system).	TCPUDAY	No data written to file.
CPU - CPU time per time step for all gradient calculations (Gradient Option).	TCPUTSHT	OPM Flow currently has not implemented the Gradient option.
CPU - Cumulative CPU time for each gradient calculation (Gradient Option).	TCPUH	OPM Flow currently has not implemented the Gradient option.
Elapsed - Elapsed time in seconds.	ELAPSED	No data written to file.
Elapsed - Elapsed time per linear iteration in seconds.	TELAPLIN	No data written to file.
Iterations - Average number of linear iterations per Newton iteration for each time step.	NLINEARS	For runs with LGRs, LLINEARS will automatically be exported for each LGR.
Iterations - Cumulative number of linear iterations.	MSUMLINS	No data written to file.
Iterations - Cumulative number of Newton iterations.	MSUMNEWT	No data written to file.
Iterations - Maximum number of linear iterations in the Newton iterations per time step.	NLINSMAX	No data written to file.
Iterations - Minimum number of linear iterations in the Newton iterations per time step.	NLINSMIN	No data written to file.
Iterations - Number linear iterations for each time step.	MLINEARS	No data written to file.
Iterations - Number of Newton iterations used for each time step.	NEWTON	No data written to file.
Time Step – Criteria used to select the length of the time step. See section 11.2.23 Option Specific Summary Variables – OPM Flow Simulation Performance for the definition of the STEPTYPE mnemonics.	STEPTYPE	No data written to file.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

OPM Flow Simulator Performance Summary Variables		
Numerical Performance Variables		
Variable	Root	Comment
Notes: <ol style="list-style-type: none"> 1) Cells under the Root column not colored indicate that the summary variable is available in OPM Flow. 2) Cells under the Root column colored in gray indicate that the summary variable is recognized by the parser but the summary variable is not available. 3) Cells under the Root column colored in orange indicate that the summary variable is <u>not</u> recognized by the parser and the summary variable is not available. These summary variables may cause the simulator to abort. 		

Table 11.30: Simulator Performance Summary Variables (Numerical Performance)

Note

If the summary vector data is unavailable then zeros are written at each time step to the SUMMARY and RSM file.

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--      EXPORT NUMERICAL PERFORMANCE SUMMARY VARIABLES TO FILE
--
PERFORMA
--
--      ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--      ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
```

Note the SEPARATE keyword is not required for OPM Flow as this is the default behavior; however, it is probably good practice to include it if the same input decks are being run with commercial simulator.

11.3.26 PYEND – END THE DEFINITION OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow's Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords. A PYINPUT Definition Section is terminated by a PYEND keyword on a separate single line.

See [PYEND – End the Definition of a PYINPUT Section](#) in the GRID section for a full description.

11.3.27 PYINPUT – DEFINE THE START OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow's Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords used by the simulator. PYINPUT declares the start of a PYINPUT Definition Section on a single separate line, which is then followed by various standard Python commands, with one command per line.

See [PYINPUT – Define the Start of a PYINPUT Section](#) in the GRID section for a full description.

11.3.28 RPTONLY - ACTIVATE THE REPORT TIME STEPS ONLY OPTION FOR THE SUMMARY FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the writing out of the SUMMARY file and the RSM file data, if the RSM file option has been requested by the RUNSUM keyword in the SUMMARY section, at report time steps only. The default is for the data to be written out for all time steps to the SUMMARY files. This keyword reduces the file size at the expense of lower resolution in the time domain.

There is no data required for this keyword and there is no terminating “/” for this keyword.

The option can be deactivated by the RPTONLYO keyword in the SUMMARY section.

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--     EXPORT STANDARD SUMMARY VARIABLE VECTORS TO FILE
--
ALL
--
--     ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--     ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE --
--     ACTIVATE REPORT TIME STEPS ONLY SUMMARY FILE OPTION
--
RPTONLY
```

The above example activates the writing out of the SUMMARY file at report time steps only.

11.3.29 RPTONLYO - DEACTIVATE THE REPORT TIME STEPS ONLY OPTION FOR THE SUMMARY FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword deactivates the writing out of the SUMMARY file and the RSM file data, if the RSM file option has been requested by the RUNSUM keyword in the SUMMARY section, at report time steps only, and switches on writing out all the time steps to the files. This option is the default behavior for when RPTONLY has not been activated.

There is no data required for this keyword and there is no terminating “/” for this keyword.

The option can be deactivated by the RPTONLY keyword in the SUMMARY section that will switch on writing the data at every report time step instead of every time step.

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--      EXPORT STANDARD SUMMARY VARIABLE VECTORS TO FILE
--
ALL
--
--      ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--      ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE --
--      DEACTIVATE REPORT TIME STEPS ONLY SUMMARY FILE OPTION
--
RPTONLYO
```

The above example deactivates the writing out of the SUMMARY file at report time steps only, and switches on writing out all the time steps to the file.

11.3.30 RPTSMRY - ACTIVATE OR DEACTIVATE SUMMARY LIST REPORT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates or deactivates a listing of all the summary variables that are going to be written to the SUMMARY file and the RSM file, if the RSM file option has been requested by the RUNSUM keyword in the SUMMARY section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	RPTSMRY	An integer value set to zero for no report, or one to produce the report.	0
Notes: I) The keyword is terminated by a "/".			

Table 11.31: RPTSMRY Keyword Description

Example

```

-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--     EXPORT STANDARD SUMMARY VARIABLE VECTORS TO FILE
--
ALL
--
--     ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--     ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
--
--     ACTIVATE OR DEACTIVATE SUMMARY LIST REPORT
--
RPTSMRY
      1                               /
  
```

The example switches on the summary list report.

11.3.31 RUNSUM – ACTIVATE RSM FILE OUTPUT OF THE SUMMARY DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword activates the writing out of the SUMMARY file data in a columnar format to the PRT file. Normally the SEPARATE keyword in the SUMMARY section is invoked in the same run to direct the data stream to a separate RSM file for easy loading into other programs, for example, Microsoft's EXCEL or LibreOffice's CALC spreadsheet programs.

There is no data required for this keyword and there is no terminating “/” for this keyword.

See also the EXCEL, RPTONLY and SEPARATE keywords in the SUMMARY section.

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--     ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--     ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
```

Note unlike the commercial simulator, OPM Flow always writes out the data to a separate file.

11.3.32 SEPARATE – ACTIVATE THE SEPARATE RSM FILE OUTPUT OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	----------------	--------------------------

Description

This keyword activates the writing out of the SUMMARY file data in a columnar format to the RSM file, if the RUNSUM keyword has also been activated in the SUMMARY section. Both the SEPARATE and the RUNSUM keywords need to be invoked. If the SEPARATE option is not activated then the RSM output is directed to the end of the PRT file. Normally the both the SEPARATE and RUNSUM keywords are invoked in the same run to enable easy loading of the data into Microsoft's EXCEL or LibreOffice's CALC spreadsheet programs.

There is no data required for this keyword and there is no terminating "/" for this keyword.

See also the EXCEL, RPTONLY and RUNSUM keywords in the SUMMARY section.

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
--
--     ACTIVATE COLUMNAR SUMMARY DATA REPORTING OPTION
--
RUNSUM
--
--     ACTIVATE SUMMARY DATA RSM FILE OUTPUT OPTION
--
SEPARATE
```

Note unlike the commercial simulator, OPM Flow always writes out the data to a separate file; however, it is probably good practice to include it if the same input decks are being run with commercial simulator.

11.3.33 SUMMARY - DEFINE THE START OF THE SUMMARY SECTION OF KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SUMMARY activation keyword marks the end of the SOLUTION section and the start of the SUMMARY section that defines the variables to be written out to the SUMMARY file for reporting and plotting of grid block data, production data, etc.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

```
-- =====
--
-- SUMMARY SECTION
--
-- =====
SUMMARY
```

The above example marks the end of the SOLUTION section and the start of the SUMMARY section in the OPM Flow data input file.

11.3.34 SUMTHIN – DEFINE SUMMARY DATA REPORTING TIME STEPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	----------------	--------------------------

Description

This keyword defines a time interval for writing out the SUMMARY data to the SUMMARY file and the RSM file, if the RUNSUM keyword has also been activated in the SUMMARY section. Only the data for the first time step in the time interval is written out and the other time steps are skipped until the next time interval, except for report time steps. Note that report time steps data are always written out regardless of the setting on this keyword. This enables the size of the SUMMARY files to be reduced depending on the size of the time interval. However, the keyword will produce irregular time steps reports of the SUMMARY data.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	SUMSTEP	SUMSTEP is a real positive number that defines the time interval for which the first time step of data will be written to the SUMMARY file (and the RSM file if RSM output has been activated). For example, if SUMSTEP is set to 30 days, and if the simulator takes time steps of 0, 5, 10, 16, 24, 30, 40, 45, 60, 90 days. Then the SUMMARY data will be written out at time steps 0, 30, 40 and 60 days.			None
		days	days	hours	
Notes: I) The keyword is terminated by a “/”.					

Table 11.32: SUMTHIN Keyword Description

See also the RPTONLY keyword in the SUMMARY section that forces the SUMMARY data to be only written out at report time steps, as oppose to all time steps or SUMSTEP time intervals.

Example

```
--
--      DEFINE SUMMARY DATA REPORTING TIME STEP INTERVAL
--
--      SUMSTEP
SUMTHIN      30.0      /
```

The above example defines the SUMMARY file time step interval to be 30 days for both field and metric units.

11.3.35 WARN – ACTIVATE WARNING MESSAGES

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

See [WARN – Activate Warning Messages](#) in the GLOBAL section for a full description.

CHAPTER 12: SCHEDULE SECTION

12.1 INTRODUCTION

The SCHEDULE section is used to specify the production and injection targets and constraints for the entire model, advance the model through time, and stipulate any other data that depends on time. For example, drilling wells at a particular time, incorporating production and/or injection rate changes as the model progresses through time, and opening and shutting wells and well connections/completions at particular times during the history of the reservoir. Field development and operating strategy are also incorporated in the SCHEDULE section, for example the timing and effect of upgrading of the field facilities liquid and water handling capacities. All these actions must be specified in the SCHEDULE section at the time they occur, that is all the events in the SCHEDULE section are time dependent. This is different to the other sections of the input deck where the order of keywords is largely unimportant; in the SCHEDULE section it is essential because the order in which events take place in the field have to be preserved. For instance, the keyword defining wellhead locations via the WELSPECS keyword must precede the keyword defining the locations and properties of the well connections using the COMPDAT keyword. The rules on keyword order generally follow the same sequence as the order of events in a production plan, that is we drill wells first (WELSPECS), then complete them (COMPDAT), and put them on production (WCONHIST, WCONPROD or WCONINJE).

In most cases a significant part of the contents of the SCHEDULE section is often imported from other applications. For instance, the Vertical Lift Performance ("VLP") tables used to convert from Bottom-Hole Pressure ("BHP") to Tubing Head Pressure ("THP") and entered via the VFPPROD keyword, are always generated by an external Nodal Analysis application. These tables are then included in the input deck via the INCLUDE keyword. Note as the VFP tables are assigned to a well via the WCONHIST, WCONPROD or WCONINJE keywords, then the tables need to have been previously entered prior to assigning them to a well, that is the data is order dependent. Well historical production data is also normally "included" from an external source, typically the production data base, and may have to be edited to ensure that the correct connections/completions are opened and shut at the appropriate time.

Note

The term well connection is used to describe individual connections from the wellbore to the reservoir grid cell, as opposed to a well completion. A well completion is used to describe a set of connections that are "grouped" into well completions using the COMPLUMP keyword in the SCHEDULE section. For instance, a well may consist of several completions with each completion consisting of multiple connections.

The reservoir management flexibility offered in the SCHEDULE section is indicated by over 300 keywords available in the section and thus makes quality assurance of the data challenging. This means that one should not assume that the data included from third party applications are error free and therefore suitable error checking should be performed.

The majority of the keywords are related to controlling how wells and groups are operated, by applying production/injection targets and constraints, economic criteria and associated actions if a criteria is violated, drilling of additional wells to meet production targets or constraints, as well as the relationship between the different wells and groups in the model. In addition, the DATES, TIME and TSTEP keywords that are used to progress the simulation through time and the TUNING series of keywords control the numerical parameters in defining numerical convergence of each time step. Note that OPM Flow can be instructed to read the first record of the TUNING keyword if the appropriate command line parameter has been activated (see section [2.2 Running OPM Flow 2021-10 From The Command Line](#)).

Note

When the DATES, TIME and TSTEP keywords are used to advanced the simulation through time this “new” time step is known as a “report time step”, as either an action (open a well for example) or a report request will be made. This is different to a simulator’s automatic time step used to advance the simulator to the next “reporting time step”.

For instance, if the simulation is currently at January 1, 2020 and the next reporting time step is January 1, 2021, then the simulator may not be able to advance directly in one time step to January 1, 2021. Instead, a series of time steps of various duration will be automatically selected by the simulator based on the current set of numerical convergence controls until the required “report time step” is reached.

The next section summarizes the data requirements for the SCHEDULE section and offers some guidance on structuring the format of the keywords in order to increase readability of the input deck and to minimize potential input errors.

12.2 DATA REQUIREMENTS

Apart from the keywords that advance the simulator through time (the DATES, TIME and TSTEP keywords), the minimum required data is associated with defining a well (WELSPECS), defining a well’s connection to the reservoir (COMPDAT), and the operating and production targets and constraints for the well (WCONHIST, WCONPROD or WCONINJE). Well connections can be “grouped” into completions using the COMPLUMP keyword to represent actual physical well completions in the model. Well’s can either operate independently or under group control. That is when a well is allocated to a group, then the group can dictate how the wells in the group under group control are operated. For example, a group may have production targets and constraints and all wells under group control within the group will be operated in such a manner as to satisfy the group’s targets and constraints. Note that wells can belong to a group but do not necessary have to be under group control. The top level group, level one, has the name FIELD and under this level can be wells, groups and sub groups to the higher level groups. By default three group levels are defined that sets the wells as level three, reporting directly to defined groups at level two, and the level two groups reporting to the FIELD group at level one. If a different configuration is required, then the GRUPTREE keyword should be used to define the group hierarchy by defining a lower level group that reports directly to a higher level group.

The major well specification keywords are summarized in Table 12.1 for ease of reference.

Major Well Specification Keywords		
Purpose	Keywords	Description
Vertical Flow Tubing Performance Table Specification	VFPINJ	<i>VFPINJ – Define Injection Vertical Flow Performance Tables.</i> VFPINJ declares similar data but for injection wells.
	VFPPROD	<i>VFPPROD – Define Production Vertical Flow Performance Tables.</i> The VFPPROD keyword defines production Vertical Flow Performance (“VFP”) tables that are used to determine the outflow or downstream pressure based on the inlet or upstream pressure and the phases flowing through the system. For a well this means the table relates the flowing bottom-hole pressure (“FBHP”) to the well’s tubing head pressure (“THP”) based on the oil, gas and water rates (and any artificial lift quantities like gas lift gas), or phases ratios, flowing up the wellbore.

Major Well Specification Keywords		
Purpose	Keywords	Description
Well Specification	WELSPECS	<i>WELSPECS – Define Well Specifications</i> . The WELSPECS keyword defines the general well specification data for all well types, and must be used for all wells before any other well specification keywords are used in the input file. The keyword declares the name of well, the initial group the well belongs to, the wellhead location and other key parameters.
	COMPDAT	<i>COMPDAT – Define Well Connections to the Grid</i> . COMPDAT defines how a well is connected to the reservoir by defining or modifying existing well connections.
Well Completion Data	COMPLUMP	<i>COMPLUMP – Assign Well Connections to Completions</i> . The COMPLUMP keyword assigns connections, as defined by the COMPDAT keyword, to completion intervals. This “lumping” or “grouping” of the connections to various completion intervals allows automatic workovers and economic criteria to be applied to the completions (that is a set of connections) as opposed to the individual connections.
	WCONHIST	<i>WCONHIST – Define Well Historical Production Rates and Pressures</i> . WCONHIST defines production rates and pressures for wells that have been declared history matching wells by the use of this keyword. History matching wells are handled differently than ordinary wells that use the WCONPROD keyword for controlling their production targets and constraints.
Historical Production and Injection Data	WCONINJH	<i>WCONINJE – Well Injection Targets and Constraints</i> . WCONINJH declares similar data as the WCONHIST keyword but for injection wells.
	WCONPROD	<i>WCONPROD – Define Well Production Targets and Constraints</i> . The WCONPROD keyword defines production targets and constraints for wells that have previously been defined by the WELSPECS keyword.
Predictive Production and Injection Data	WCONINJE	<i>WCONINJE – Well Injection Targets and Constraints</i> . WCONINJE declares similar data as the WCONPROD keyword but for injection wells.
	WELCNTL	<i>WELCNTL – Modify Well Control and Targets</i> . The WELCNTL keyword modifies a wells’ target control and value, both rates and pressures, for previously defined wells without having to define all the variables on the well control keywords: WCONPROD, WCONHIST, WCONDINJE, or WCONDINJH keywords. See also the WELTARG keyword below.
Well Control	WECON	<i>WECON – Well Economic Criteria for Production Wells</i> . WECON defines the economic criteria for production wells that have previously been defined by the WELSPECS and WCONPROD keywords.
	WEFAC	<i>WEFAC – Define Well Efficiency</i> . WEFAC defines a well’s efficiency or up-time as opposed to setting the efficient factors at the group level.
	WHISCTL	<i>WHISCTL - Define Well Historical Target Phase</i> . The WHISCTL keyword changes the target control phase for wells declared as history match wells via the WCONHIST keyword. The target phase is set on the WCONHIST keyword and WHISCTL overrides this value for all subsequent entries on the WCONHIST keyword

Major Well Specification Keywords		
Purpose	Keywords	Description
Well Productivity Adjustments (Normally used in History Matching)	WELOPEN	WELOPEN – Define Well and Well Connections Flowing Status . WELOPEN defines the status of wells and the well connections, and is used to open and shut previously defined well and well connections without having to re-specify all the data on the well control keywords: WCONPROD, WCONHIST, WCONINJE, or WCONINJH keywords.
	WELTARG	WELTARG – Modify Well Target and Constraint Values . The WELTARG keyword modifies the target and constraints values of both rates and pressures for previously defined wells without having to define all the variables on the well control keywords: WCONPROD, WCONHIST, WCONINJE, or WCONINJH keywords. See also the WELCNTL keyword above.
	WELPI	WELPI – Define Well Productivity and Injectivity Indices . WELPI is used to define a well's productivity or injectivity index and the values enter on this keyword for a given well will override any previously calculated values, or values previously entered values using this keyword.
	WPIMULT	WPIMULT – Define Well Connection Multipliers . The WPIMULT keyword defines a well connection multiplier factor that scales the existing well connection values. The resulting effect is to scale the well's productivity at the reporting time step the keyword is entered.

Table 12.1: Major Well Specification Keywords

Wells are initially allocated to groups via the WELSPECS keyword and groups have similar set of keywords as for wells, as outlined in Table 12.2. However only a limited set of keywords have been implemented in OPM Flow compared with the commercial simulator's set of keywords.

Major Group Specification Keywords		
Purpose	Keywords	Description
Group Specification	GRUPTREE	GRUPTREE – Define Group Tree Hierarchy . GRUPTREE defines the group hierarchy of groups that have been created by having wells assigned to them via the WELSPECS keyword. By default three group levels are defined that sets the wells as level three, reporting directly to defined groups at level two, and the level two groups reporting to the FIELD group at level one.
Predictive Production and Injection Data	GCONPROD	GCONPROD – Group Production Targets and Constraints . The GCONPROD keyword defines production targets and constraints for groups, including the top most group in the group hierarchy known as the FIELD group.
	GCONINJE	GCONINJE – Group Injection Targets and Constraints . GCONINJE declares similar data as for GCONPROD but for group injection targets and constraints.
Group Control	GECON	GECON – Group Economic Criteria for Production Groups . The GECON keyword defines economic criteria for production groups, including the field level group FIELD, that have previously been defined by the GCONPROD keyword.
	GEFAC	GEFAC – Define Group Efficiency GEFAC defines a group's efficiency or up-time as opposed to setting the efficient factors for individual wells.

Major Group Specification Keywords		
	GRUPTARG	<i>GRUPTARG – Modify Group Targets and Constraints Values.</i> GRUPTARG keyword modifies the target and constraints values of both rates and pressures for previously defined groups without having to define all the variables on the group control keywords: GCONPROD or GCONPRI keywords.

Table 12.2: Major Group Specification Keywords

The final set of keywords define various controls for the model, the keywords available to advance the simulator through time, and the available reporting keywords, as illustrated in Table 12.3.

Schedule Advancement, Control And Reporting Keywords		
Purpose	Keywords	Description
Control RS and RV Behavior	DRSDT	<i>DRSDT – Solution Gas (Rs) Maximum Rate of Increase Parameters.</i> DRSDT defines the maximum rate at which the solution gas-oil ratio (Rs) can be increased in a grid cell. The keyword is similar in functionality to the DRSDTR keyword, that defines the maximum rate at which Rs can be increased in a grid cell by region.
	DRSDTR	<i>DRSDTR – Solution Gas (Rs) Maximum Rate of Increase Parameters by Region.</i> DRSDTR defines the maximum rate at which the solution gas-oil ratio (Rs) can be increased in a grid cell for various regions in the model. The keyword is similar in functionality to the DRSDT keyword, that defines the maximum rate at which Rs can be increased in a grid cell for all cells in the model.
	DRVDT	<i>DRVDT – Solution Oil (Rv) Maximum Rate of Increase Parameters.</i> DRVDT defines the maximum rate at which the solution oil-gas ratio or condensate-gas ratio (Rv) can be increased in a grid cell. The keyword is similar in functionality to the DRVDTTR keyword, that defines the maximum rate at which Rv can be increased in a grid cell by region.
	DRVDTTR	<i>DRVDTTR – Solution Oil (Rv) Maximum Rate of Increase Parameters by Region.</i> DRVDTTR defines the maximum rate at which the solution oil-gas ratio or condensate-gas ratio (Rv) can be increased in a grid cell for various regions in the model. The keyword is similar in functionality to the DRVDT keyword, that defines the maximum rate at which Rv can be increased in a grid cell for all cells in the model.
Schedule Advancement	DATES	<i>DATES – Advance Simulation by Reporting Date.</i> DATES advances the simulation to a given report date after which additional keywords may be entered to instruct OPM Flow to perform additional functions via the SCHEDULE section keywords, or further DATES keywords may be entered to advance the simulator to the next report date.
	TIME	<i>TIME – Advance Simulation by Cumulative Reporting Time.</i> TIME advances the simulation to a given <u>cumulative</u> report time after which additional keywords may be entered to instruct OPM Flow to perform additional functions via the SCHEDULE section keywords, or further TIME keywords may be entered to advance the simulator to the next report time.
	TSTEP	<i>TSTEP – Advance Simulation by Reporting Time.</i> TSTEP keyword advances the simulation to a given report time after which additional keywords may be entered to instruct OPM Flow to perform additional functions via the SCHEDULE section keywords, or further TSTEP keywords may be entered to advance the simulator to the next report time

Schedule Advancement, Control And Reporting Keywords		
Purpose	Keywords	Description
Schedule Advancement Control	TUNING	<i>TUNING - Numerical Tuning Control.</i> TUNING defines the parameters used for controlling the commercial simulator's numerical convergence parameters for the global grid. The keyword is mostly ignored by OPM Flow; however, the simulator can be instructed to read the first record of the TUNING keyword if the appropriate command line parameter has been activated (see section 2.2 Running OPM Flow 2021-10 From The Command Line).
	NEXTSTEP	<i>NEXTSTEP – Maximum Next Time Step Size .</i> NEXTSTEP defines the maximum time step size the simulator should take for the next time step. This keyword can be used to reset the time step for when known large changes to the model are taking place that may result in time step chops.
Reporting	RPTSCHED	<i>RPTSCHED – Define SCHEDULE Section Reporting.</i> RPTSCHED keyword defines the data in the SCHEDULE section that is to be printed to the output print file in human readable format.
	RPTRST	<i>RPTRST – Define Data to be Written to the RESTART File.</i> RPTRST keyword defines the data and frequency of the data to be written to the RESTART file at each requested restart point. In addition to the solution data arrays required to restart a run, the user may request additional data to be written to the restart file for visualization in OPM ResInsight.

Table 12.3: Schedule Advancement, Control and Reporting Keywords

In terms of structuring the format of the keywords in the SCHEDULE section it is advisable to declared all the VLP tables, wells and groups at the start of SCHEDULE section as oppose to declaring the items as they are needed, or when they come on stream at various times during the simulation. This produces a cleaner input deck and tends to limit unforeseen errors, as all items are declared upfront and only the operational changes (opening wells, changing group and well targets, etc.) are needed. The example SCHEDULE section given on the following pages illustrates a typical SCHEDULE based on this philosophy.

The first segment of the example shows the start of the SCHEDULE section and the group definitions and controls. Here there are controls on the group level only at the FIELD level and there is both production and injection rate targets, as well as water and liquid handling constraints applied on the FIELD level. These keywords are activated from the start of the simulation as set by the START keyword in the RUNSPEC section, in this case January 1, 2020.

```

-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
-- GROUP PRODUCTION AND INJECTION CONTROLS
--
--
-- DEFINE GROUP TREE HIERARCHY
--
-- LOWER      HIGHER
-- GROUP      GROUP
GRUPTREE
    FLTBLK1  FIELD
    FLTBLK2  FIELD
    FLTBLK3  FLTBK2
/
/
/

```

```
--
--          GROUP PRODUCTION CONTROLS
--
-- GRUP  CNTL  OIL    WAT    GAS    LIQ    CNTL  GRUP  GUIDE  GUIDE  CNTL
-- NAME  MODE  RATE   RATE   RATE   RATE   OPT   CNTL  RATE  DEF   WAT
GCONPROD
FIELD   GRAT  1*    8E3   125E3  10E3   1*    1*    1*    1*    1*    /
/
--
--          GROUP INJECTION TARGETS AND CONSTRAINTS
--
-- GRUP  FLUID  CNTL    SURF    RESV    REINJ    VOID    GRUP  GUIDE  GUIDE  GRUP  GRUP
-- NAME  TYPE  MODE    RATE    RATE    FRAC     FRAC     CNTL  RATE  DEF   REINJ  RESV
GCONINJE
FIELD   GAS   RATE    100E3   1*      1*      1.0     YES   1*    1*    1*    1*    /
/
```

The next segment covers the well specification and includes the loading of the VFP tables via include files, declaring the wells using the WELSPECS keyword, and connecting the wells to the reservoir using the COMPDAT keyword. In addition, the COMPLUMP keyword is invoked to assign the well connections to well completions.

In multi-stacked reservoirs it is a good idea to associate the completion number with a given reservoir for all the wells. So for example completion number one is always associated with the Lower Talang Akar Formation Unit A, completion number two with the Lower Talang Akar Formation Unit B, and completion number three with the Upper Talang Akar Formation Unit C, etc. In this way one can easily identify which zone a well is producing from or completed in.

Finally, the WCONPROD keyword is used to define the operating conditions for the gas producers(GP01 and GP02) and to assign the VFP tables to the producing wells. Whereas the WCONINJE keyword performs a similar function for the single gas injector, GI01.

```
--
-- WELL SPECIFICATIONS AND COMPLETIONS
--
--
--          LOAD INCLUDE FILES WITH VLP TABLES
--
INCLUDE
    'WEL-P50-VLP01.inc'      / VFP TABLE #1 5 1/2 inch tubing

INCLUDE
    'WEL-P50-VLP02.inc'      / VFP TABLE #2 4 1/2 inch tubing
--
--          WELL SPECIFICATION DATA
--
-- WELL  GROUP      LOCATION  BHP    PHASE  DRAIN  INFLOW  OPEN  CROSS  PVT
-- NAME  NAME        I      J  DEPTH  FLUID  AREA   EQUANS  SHUT  FLOW  TABLE
WELSPECS
GI01    FIELD        14    13  1*     GAS   1*     GPP    SHUT  NO    1*    /
GP01    FLTBLK1      64    80  1*     GAS   1*     GPP    SHUT  NO    1*    /
GP02    FLTBLK1      24   110  1*     GAS   1*     GPP    SHUT  NO    1*    /
/
--
--          WELL CONNECTION DATA
--
--
-- WELL  --- LOCATION ---  OPEN  SAT    CONN  WELL  KH    SKIN  D    DIR
-- NAME  II  JJ  K1  K2  SHUT  TAB   FACT  DIA  FACT  FACT  FACT  PEN
COMPDAT
GI01    1*  1*  1  60  SHUT  1*    1*    0.708  1*    0.0  1*    'Z'  /
GP01    1*  1*  1  60  SHUT  1*    1*    0.708  1*    0.0  1*    'Z'  /
GP01    1*  1*  1  60  SHUT  1*    1*    0.708  1*    0.0  1*    'Z'  /
/
```

```
--
--      ASSIGN WELL CONNECTIONS TO COMPLETIONS
--
--      WELL    --- LOCATION    --- COMPL
--      NAME    II   JJ   K1   K2   NO.
COMPLUMP
GI01          14   13    1   20    1          / COMPLETION NO. 01
GI01          14   13   35   60    2          / COMPLETION NO. 02
GP01          64   80    1   20    1          / COMPLETION NO. 01
GP01          64   80   20   60    1          / COMPLETION NO. 02
GP02          24  110    1   20    1          / COMPLETION NO. 01
GP02          24  110   25   60    1          / COMPLETION NO. 02
/
```

```
--
--      WELL PRODUCTION WELL CONTROLS
--
--      WELL    OPEN/  CNTL   OIL    WAT    GAS    LIQ    RES    BHP    THP    VFP    VFP
--      NAME    SHUT   MODE   RATE   RATE   RATE   RATE   RATE   PRES   PRES   TABLE  ALFQ
WCONPROD
GP01          SHUT    GRUP   1*    1*    70E3   1*    1*    500.0 120.0 1          /
GP02          SHUT    GRUP   1*    1*    70E3   1*    1*    500.0 120.0 2          /
/
```

```
--
--      WELL INJECTION CONTROLS
--
--      WELL    FLUID   OPEN/  CNTL   SURF   RESV   BHP    THP    VFP
--      NAME    TYPE    SHUT   MODE   RATE   RATE   PRSES   PRES   TABLE
WCONINJE
GI01          GAS     SHUT    RATE  125E3   1*    10E3   1*    1*          /
/
```

Notice also the well naming nomenclature that easily identifies the type of well: the letter G for a gas well, O for an oil well and W for a water well, and the function of the well, P for a producer and I for an injector.

The final part of the well specification segment is shown below and sets the well efficiency for the wells via the WEFAC keyword, the producing wells economic limits via the WECON keyword, and then advances the simulation to June 25, 2020. Thus, there is no production up to January 25, 2020 as all the wells are shut-in.

```
--
--      WELL EFFICIENCY FACTORS
--
--      WELL    EFF     NETWK
--      NAME    FACT    OPTN
WEFAC
'GI*'         0.950          /
'GP*'         0.950          /
/
```

```
--
--      WELL ECONOMIC CRITERIA FOR PRODUCTION WELLS
--      WELL    MIN     MIN     MAX     MAX     MAX     CNTL     END     WELL
--      NAME    ORAT    GRAT    WCUT    GOR     WGR     MODE     RUN    NAME
WECON
'GP*'         1*      5.0E3   1*      1*      1*      'WELL'   'NO'          /
/
```

```
DATES
 25 JAN      2020          /
/
```

At January 25, 2020 yearly restarts are requested (RPTRST) together with various printed reports (RPTSCHED), as well as the maximum time step size of 31 days being set via the TUNING keyword. More importantly, well GP01 is opened together with completion number one to put the well on production. Note that one needs to open both the well and the completion; hence, the two lines in the WELOPEN keyword.


```

-----
-- SCHEDULE SECTION FOR PHASE 1 DEVELOPMENT
-----
--
--          RESTART CONTROL BASIC = 4 (ALL=2, YEARLY=4, MONTHLY=5, TSTEP=6)
--
RPTRST
--          BASIC=4 /
--
--          DEFINE SCHEDULE SECTION REPORT OPTION
--
RPTSCHED
--          'WELLS=2'      'WELSPECS'      'CPU=2'      'FIP=2' /
--
--          DEFAULT TUNING PARAMETERS (SET MAX TSTEP = 31 days)
--
TUNING
1.0      31.0      0.1      0.15      3      0.3      0.1      1.25      0.75 /
/
--
--          DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
--          WELL WELL  --LOCATION--  COMPLETION
--          NAME STAT   I   J   K   FIRST LAST
WELOPEN
GP01      OPEN
GP01      OPEN      0   0   0      1      1 /
/
/
DATES
1  FEB    2020 /
/

```

At February 1, 2020 further SCHEDULE keywords are processed. The first keyword is the RPTSCHED keyword that in this case switches off all reports printed to the *.PRT file, as only annual reports are required for this particular model.

Next the gas producer GP02 is put on production using two statements in the WELOPEN keyword, and the simulator is requested to advance to report time step of March 1, 2020.

```

--
--          DEFINE SCHEDULE SECTION REPORT OPTION
--
RPTSCHED
'NOTHING' /
--
--          DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
--          WELL WELL  --LOCATION--  COMPLETION
--          NAME STAT   I   J   K   FIRST LAST
WELOPEN
GP02      OPEN
GP02      OPEN      0   0   0      1      1 /
/
/
DATES
1  MAR    2020 /
/

```

Then finally at March 1, 2020 the gas injector is place on stream and the simulation advances on a monthly report basis to the end of the year.


```
--
--      DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
```

```
-- WELL WELL  --LOCATION-- COMPLETION
-- NAME STAT   I   J   K   FIRST LAST
```

```
WELOPEN
```

```
GI01      OPEN                                     /
```

```
GI01      OPEN      0   0   0      1      1      /
```

```
/
```

```
DATES
```

```
1 APR 2020 /
```

```
1 MAY 2020 /
```

```
1 JUN 2020 /
```

```
1 JUL 2020 /
```

```
1 AUG 2020 /
```

```
1 SEP 2020 /
```

```
1 OCT 2020 /
```

```
1 NOV 2020 /
```

```
1 DEC 2020 /
```

```
/
```

Next a detailed report is produced as of January 1, 2021, and reporting is then switch off and the simulation continues to the end of the run.

```
--
-- SCHEDULE SECTION - 2021-01-01
--
```

```
RPTSCHED
```

```
'WELLS=2'      'WELSPECS'      'CPU=2'      'FIP=2'      /
```

```
DATES
```

```
1 JAN 2021 /
```

```
/
```

```
RPTSCHED
```

```
'NOTHING'      /
```

```
DATES
```

```
1 FEB 2021 /
```

```
1 MAR 2021 /
```

```
1 APR 2021 /
```

```
. . . . .
```

```
/
```

12.2.1 HISTORY MATCHING RUNS

History matching is the process of matching actual historical production data versus the model's production performance. During history matching the engineer specifies the actual field measured production and injection rates for a reservoir which has been producing for a period of time. Although other reservoir characteristics such as permeability, layering structure, aquifer strength and individual well performance are specified as normal in the remainder of the data file, they are in only one realization out of possibly thousands of realizations. There is therefore significant uncertainty associated with the data set. Thus in most cases, the simulated past performance of the reservoir, that is the well rates calculated by OPM Flow up to the present day, will not in general correspond to the measured rates specified by the user. History matching then becomes an exercise in identifying those reservoir properties subject to the greatest uncertainty and adjusting them to bring the simulated and measured rates to an acceptable degree of agreement.

Prior to beginning the matching process the production data should be reviewed and quality checked. This step is needed mainly to:

- Allocate production data areally and vertically to the pertinent areas and zones, as well as ensuring that the correct well completions have been implemented into the model's schedule section. Particular care should be taken with multiple completed wells to ensure that the wells produce from the correct zones at the correct times. Wells that are completed across fault planes also need be checked so that the completions are on the right side of the fault plane.
- Correct field production data to separator conditions consistent with model conditions, or vice versa.
- Correct reported pressures for simulation use (e.g., Peaceman correction), or use the weighted areal average well bottom-hole pressures from the simulator to match against actual data.

Note also that not all production volumes have the same level of quality assurance. Product streams that are sold are going to have a higher level of quality assurance because they have value, compared with production streams that are disposed of or re-injected, as they have no value. Thus, in an oil field selling the produced oil but flaring or re-injecting the produced gas, the oil volumes will be back allocated based on "ticketed sales", and thus the field volumes are reasonably certain. However, even here there are uncertainties associated with allocating production volumes back to the individual wells and well completions. As the gas volumes are not sold they have no value and thus have greater uncertainty than the oil volumes, especially when back allocating back to the wells.

History matching is an iterative process, in which steps are repeated a number of times with variations in reservoir characterization (permeability, pore volume, relative permeability modifications, etc.), until a reasonable match is obtained. There are no precise rules for conducting a history match but the methodology is well established. Generally one first matches pressures globally, then overall saturations (and well rates) and repeat until an overall match is achieved, as the process of matching pressures also effects the saturations and vice versa. Which is why this is an iterative process. This methodology is then repeated on a regional level until the process is complete and reasonable matches have been obtained at the field, region and well levels.

Generally, group control, targets and constraints are not utilized in the history matching part of a simulation study. Instead, the WCONHIST keyword is used to enter the well production (oil, gas and water rates), pressure data (BHP and THP when available) and VFP table assignment, on a well by well basis and on discrete time intervals, normally monthly. WCONHIST allows one to set the "target" phase and rate the well will attempt to produce at, if possible, and to produce the other phases that come with the target rate. That is there are no constraints applied to the other phases, unlike when using the WCONPROD keyword. If well productivity has been matched then the target phase rates will be satisfied and the quality of the history match is determined by the accuracy of the other phases, together with the pressure match. Thus, in an oil field the target phase will normally be the oil phase and the oil rate, and the quality of the history would be determined by the produced gas and water volumes plus the pressure match at various levels (field, region, reservoir and well). If water breakthrough has not occurred and the field is producing above the saturation pressure then there is very little to match, as the gas production in this case is a direct function of the oil rate.

The WCONHIST keyword also has a RESV target phase where the target is set to the in situ reservoir volume rate which is calculated by the simulator using the oil, water, gas and liquid rates declared on the keyword. This is useful in the initial part of the history matching study where one is trying to match the overall pressure behavior, as the option forces the simulator to produce the correct number of reservoir barrels (or m³), although the actual oil, gas and water rates will most likely not match at this stage of the study. Note that it is not necessary to edit the WCONHIST keywords for a run to change the target phase, as the WHISTCNTL keyword can be used to do this from the time this keyword is invoked, thus avoiding changing the control mode on all subsequent WCONHIST keywords.

As mentioned above, the rates and volumes of product streams that are sold are more reliable than those that are being re-injected, flared or otherwise disposed of, and therefore in an oil field the preferred target phase is oil and not liquid, which some engineers prefer to use.

The WCONINJH keyword has similar functionality as the WCONHIST keyword, but is used for history matching injection wells instead.

More recent developments in history matching incorporate Assisted History Matching (“AHM”) techniques ¹⁶⁵ ¹⁶⁶ ¹⁶⁷ ¹⁶⁸ ¹⁶⁹ ¹⁷⁰ and ¹⁷¹ in which various statistical techniques are applied in specialized software to match the field data by the user supplying the parameters to vary, the range of the parameters values, and the objective function to minimize. This type of software can also generate a range of “reasonable” history match models that can then be used to quantify the uncertainty range in the prediction phase.

¹⁶⁵ *History Matching and Uncertainty Quantification: Multi-objective Particle Swarm Optimisation Approach (SPE 143067)*, L. Mohamed, M. Christie, V. Demyanov, Vienna, Austria, 23–26 May 2011.

¹⁶⁶ *Field-Scale Assisted History Matching Using a Systematic, Massively Parallel Ensemble Kalman Smoother Procedure (SPE00182617)*, Binghuai Lin, Paul I Crumpton, and Ali H. Dogru, Society of Petroleum Engineers (February 2017).

¹⁶⁷ *Enhancing the Geological Models Consistency in Ensemble-Based History Matching - An Integrated Approach (SPE00186049)*, A. Perrone, F Pennadoro, A Tiani, E Della Rossa, and J. Saetrom, Society of Petroleum Engineers (May, 2017).

¹⁶⁸ *Correlation-Based Adaptive Localization for Ensemble-Based History Matching - Applied to the Norne Field Case Study (SPE00191305)*, Xiaodong Luo, Rolf Lorentzen, Randi Valestrand, and Geir Evensen, Society of Petroleum Engineers (April, 2018).

¹⁶⁹ *Rapid Forecast Calibration Using Nonlinear Simulation Regression with Localization (SPE-193845-MS)*, Jincong He, Wenye Sun, and Xian-Huan Wen, SPE Reservoir Simulation Conference held in Galveston, Texas, USA, 10–11 April 2019.

¹⁷⁰ *Multilevel Strategies and Geological Parameterizations for History Matching Complex Reservoir Models (SPE-193895-MS)*, Yimin Liu and Louis J. Durlofsky, SPE Reservoir Simulation Conference held in Galveston, Texas, USA, 10–11 April 2019.

¹⁷¹ *Improved Estimation and Forecast Through Model Error Estimation – Norne Field Example (IPTC-19142-MS)*, Minjie Lu and Yan Chen, International Petroleum Technology Conference held in Beijing, China, 26 – 28 March 2019.

12.2.2 PREDICTION RUNS


Prediction runs are used to optimize future production from the field and can take two forms:

- Prediction runs may follow directly from a history match case using the reservoir description estimated during the history matching phase. The history matching and prediction runs are frequently in separate data files, with the prediction cases “restarting” from the final history match run, as the history match restart file contains sufficient data to continue the simulation into the future. Therefore, the prediction data set contains the same reservoir description as the history match but is initialized using the restart file output from the history match case. In general, the base case scenario is the No Further Activity (“NFA”) scenario. This is just a continuation of the history match into the future using the well controls in force at the end of the history matching period. This is the simplest way to run the field since the surface facilities remain unchanged and no workovers take place. However, the switch from history matching mode to prediction mode should be treated with care in order to ensure a smooth transition between the two phases. Subsequent cases will then be based on the NFA scenario, and will attempt to optimize recovery by examining the impact of drilling infill wells, modifying facilities constraints, varying the reservoir management strategy, etc.
- Prediction cases may also be based on predicting production from structures that have not been put on production at the time of the study, that is there is no historical production available. In this case, the reservoir description is based on the best available data set and interpretation, although there may be various variations of the models to cover the range of uncertainties in the static earth modeling. Typically, Low, Best and High models are generated to capture the range of uncertainty in the static modeling, although full uncertainty analysis is becoming more common as computational computer power becomes more available. Additional dynamic sensitivities are then run to determine the Low, Best and High models that address both the static and dynamic uncertainties. These models then form the basis of the supplementary predictions using a variety of different production strategies that are used to improve the petroleum recovery and reduce production costs. For each prediction case, an aspect of the surface facilities or well management policy is changed and the case is compared to the base prediction. Most simulators, including OPM Flow, have a wide range of well, group and surface facility modeling features and it is likely that several will be invoked during recovery optimization to model events such as drilling infill wells, modifying facilities constraints, investigating various depletion strategies, etc.

In both scenarios more recent developments within the industry apply a full uncertainty analysis to the models, in which multiple cases are run under various parameter changes to derive a distribution of recoverable volumes, which in turn are used to select the Low, Best and High scenarios. This can result in hundreds of cases being run and is computationally expensive.

As mentioned above, the switch from history matching mode to prediction mode should be treated with care in order to ensure a smooth transition between the two phases. History matching of a well's BHP has always been somewhat problematic, as the field measured data consists of shutting-in the well for a specific period for the BHP to build backup to a well's average drainage pressure (usually assumed to be the reservoir pressure in the surrounding area). History matching time steps are normally based on monthly time steps to coincide with the monthly back allocated field reported production volumes. Thus, to correctly match the measured Shut-in Bottom-Hole Pressure (“SBHP”) data in the model, one would have to shut-in the well in the model as per the field, and then open up the well back up at the end of the BHP survey. One would also have to re-adjust the well rates to match the cumulative volumes produced for the time the well was shut-in. These steps are impracticable and engineers originally handled the problem by assigning the wells a high productivity index, so that the difference between the Flowing Bottom-Hole Pressure (“FBHP”) and the SBHP was small.

This would lead to a mismatch in rates when switching from history matching mode to prediction mode as shown in Figure 12.1. Thus, the final step in history matching was to calibrate the well rates based on adjusting the Productivity Indices (“PI”) of the wells, in order to get a smooth transition between the two modes of operating the wells.

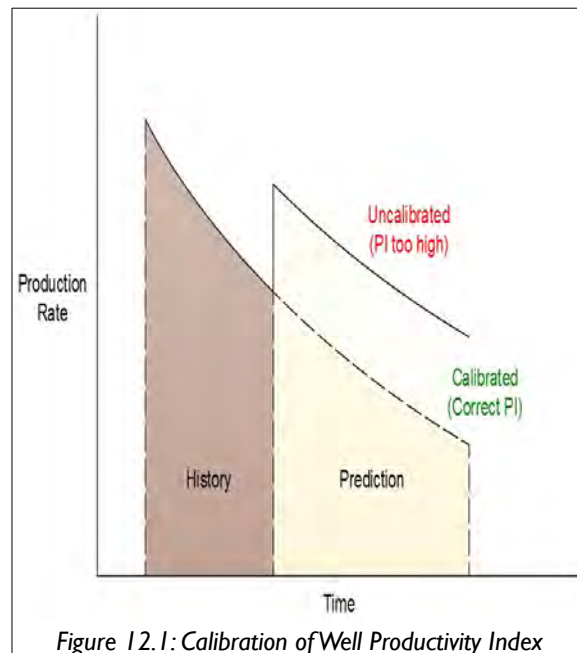

Calibration is achieved by running the model at the back pressures held against the wells at one or several time-steps. The well PIs and/or wellbore flow parameters are adjusted to duplicate field-observed rates. Although the calibration step was usually done after the history-matching step, there are times when it must be done beforehand (e.g., when modeling multi-layer flow into a well). This is because in stratified reservoirs the correct allocation of rates among layers is dependent on the absolute value of the well's PI (and not solely on the ratios of PIs of the various layers).

Although well PI matching is still performed as part of the general history matching methodology, it is no longer necessary to set a well's PI to a high value in order to mimic the field measured SBHP. This is because most simulators are now capable of reporting an "average" bottom-hole pressure around the well, including one, four, five and nine grid cell averaging, as well as alternative averaging schemes. Thus, the engineer now matches the field measured SBHP with one of the simulator's average grid cell BHPs, normally either the five or nine grid cell average BHP values.


This leaves the question on what controls should be used when moving from history matching mode to prediction mode and ensuring a smooth transition between the two, and at the same time ensuring the resulting predictive forecast is reasonable. There are basically three approaches to this problem:

- 1) set the well's prediction constraint to the last observed rate,
- 2) set the well's prediction constraint to the average FBHP and adjusting a well's PI, and thirdly,
- 3) set the well's prediction constraint to the last FBHP or THP.

The next three sections discusses these options in some detail.

(I) Prediction Constraint Based on a Well's Last Observed Rate

In the history matching mode the wells are controlled by a rate target, so using the last observed well rate would seem a sensible approach. Thus, this approach uses the last observed well rates as well constraints in the prediction run. The typical approach is to constrain production based on a preferred phase (oil rate, gas rate or liquid rate), and then set a reasonable flowing BHP value as a limit for when the well can no longer meet the rate target set. The main requirement for using this approach is therefore that the history-matched model reproduces the rates and flowing bottom-hole pressures fairly exactly.

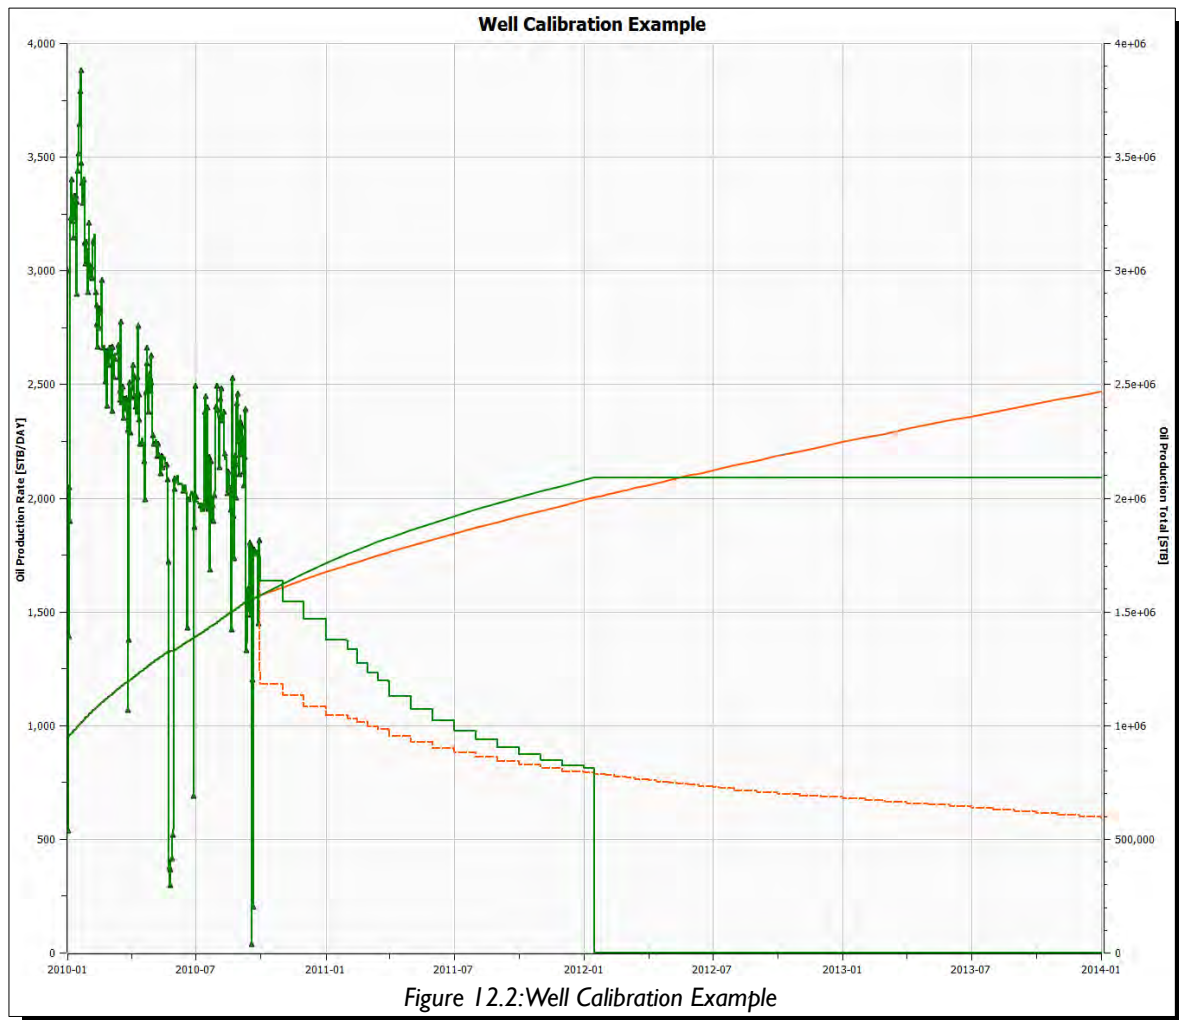

However, there are some drawbacks to this approach as one can observe in Figure 12.2, which shows the oil rate and cumulative oil for a well, the symbols on the plot are the actual historical oil production rates. If the last period of production history were not matched successfully, a smooth transition from the history simulation to prediction phase will not be achieved, as shown by the orange lines in Figure 12.2.

A second drawback to this approach, is that the well and field production rate profiles will tend to have a flat trend for a few months (or even years) when the well can still deliver the rate target. In real field management such rate profiles can be optimistic if the specified boundary conditions are not representative of actual operating conditions in the field.

(2) Prediction Constraint Based on a Well's Average FBHP and Adjusting a Well's PI

This approach has been adopted by some reservoir engineers as a result of the issues mentioned for the first approach.

Here, an average FBHP of each well, based on most recent production history, is used as a target to control the wells during the prediction phase. Usually, this will lead to abrupt changes in rate and pressure profiles during the transition. The next step is therefore to dampen these abrupt changes in the well rate profiles by applying well PI multipliers (at the well and/or completion level) until a smooth transition is obtained in the rate profiles, similar to that shown by the green lines after the history matching period in Figure 12.1.

The problem with this approach is that it is synonymous to re-calibrating a supposedly history-matched simulation model (with a given permeability distribution based on a certain geological characterization), and thus this approach is rather questionable and is not recommended.

(3) Prediction Constraint Based on a Well's Last Flowing BHP or THP

This methodology is the recommended approach for switching between historical and prediction controls in a reservoir model. It involves automatically applying the last flowing bottom-hole pressure at the instant the transition takes place as the production target, and therefore setting the latest flow rates to be constraints. This ensures a smooth transition between history and prediction phases without having to resort to unreasonable changes to the model. In OPM Flow this is accomplished by using the WELTARG keyword to specify that all the wells should use the bottom-hole pressure as the target at the beginning of the restart run, and defaulting the actual value for the BHP. By defaulting the BHP value the simulator will use the current value of FBHP for a well as the constraint. Note that the WELTARG keyword only defines the variable to be changed, it does not change how a well is controlled. However, by setting the BHP to equal to the current FBHP this has a similar effect as changing the operating target.

Using this approach, all wells will continue flowing at the last flowing bottom-hole pressure from the previous time step, using this value of FBHP as the effective target while the last historical rates are kept as limits (if BHP is requested as shown in the example). This approach achieves two important objectives, firstly it results in a smooth transition from the history-match phase to prediction phase in well and field production profiles. And secondly, it gives a smooth decline in well production rate, as is expected of real wells in the field.

Although this discussion has been based on using the BHP as the effective control mechanism, one could also use THP, and to a lesser extent, liquid rate, instead.

The following example below shows how to apply the recommended method to obtain a smooth transition to the predictive phase using the BHP as the controlling mechanism.

Example

In the example, December 2019 is the last month of historical data and therefore the predication phase starts from January 1, 2020.

```

DATES
01 DEC 2019 /
/
--
--          WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    VFP    VFP    THP    BHP
-- NAME  SHUT   MODE   RATE   RATE   RATE   TABLE  ALFQ   PRES  PRES
WCONHIST
OP01     OPEN   ORAT   15.5E3  100.0  1550   10      1*    900.0  1*    /
OP02     OPEN   ORAT   10.3E3  500.0  1550   10      1*    700.0  1*    /
OP03     OPEN   ORAT   5.4E3  2100.0  1550   10      1*    500.0  1*    /
/
-----
-- 01 JAN 2020 START OF PREDICTION SCHEDULE SECTION
-----
DATES
01 JAN 2020 /
/
--
--          WELL PRODUCTION AND INJECTION TARGETS
--
-- WELL  WELL   TARGET
-- NAME  TARG   VALUE
WELTARG
OP*      BHP                               /
/

```

From December 1, 2019 to January 1, 2020 the three oil producing wells will be under history matching control with the oil rate being the target rate for the wells. On January 1, 2020 the wells will be converted to normal producers as the WELTARG keyword changes a well status from a history match well to a regular well. At the same time the WELTARG keyword sets all the wells to have their current FBHP as a constraint, by setting the target BHP values to the default values, which effectively makes the FBHP a target as it is now the “active” constraint.

The alternative keyword for implementing the same approach is the WELCNTL keyword, but unfortunately this is currently not implemented in OPM Flow.

12.2.3 WELL PRODUCTIVITY

Throughout this section the equations are presented in terms of oil production, - or liquid flow, i.e., oil and water. Note that similar equations exist for gas flow in terms of p^2 and pseudo pressure formulations ($\psi(p)$).

Under the assumption of (1) one-dimensional, radial flow into the wellbore, (2) steady-state pressure behavior, and (3) single-phase flow, it can be shown that the flow rate of a well is given by:

$$q = (0.001127) (2\pi) \frac{kh}{\mu} \left[\frac{p_e - p_w}{\left(\ln \left(\frac{r_e}{r_w} \right) + S \right)} \right] \quad (12.1)$$

Where:

q	= production rate, res.bbl./day
p_e	= pressure at the drainage radius of the well, psia
p_w	= bottom-hole well pressure, psia
r_e	= drainage radius, ft.
r_w	= wellbore radius, ft.
S	= skin factor, dimensionless
kh	= effective permeability thickness, md-ft.

This is extended to multi-phase flow by introduction of relative permeabilities and adjusted to surface conditions by use of the formation volume factor resulting in the following expression for oil production rate:

$$q_o = (0.001127) (2\pi) \frac{kk_{ro} h}{B_o \mu_o} \left[\frac{p_e - p_w}{\left(\ln \left(\frac{r_e}{r_w} \right) + S \right)} \right] \quad (12.2)$$

If the modified radial flow equation is written for each perforated interval and summed over all intervals, the resulting equation is the one used to calculate oil production rates in the simulator. One way to specify the flow capacities of wells is to enter r_e , r_w , s and p_w values for the well, with the kh values for each perforated interval. The simulator then determines the other parameter values from calculated pressure and saturation distributions.

Because the pressure at the drainage radius is not readily determined in the simulator, it substitutes p_b (a representative pressure of each perforation grid block) for p_e . That is readily accommodated by replacing the drainage radius by a probe radius as defined by Peaceman¹⁷²

$$r_b = 0.28 \frac{\left[\sqrt{\frac{K_y}{K_x}} \Delta x^2 + \sqrt{\frac{K_x}{K_y}} \Delta y^2 \right]^{0.5}}{\left(\frac{K_y}{K_x} \right)^{0.25} + \left(\frac{K_x}{K_y} \right)^{0.25}} \quad (12.3)$$

Where:

K_x and K_y	= x- and y- direction absolute permeabilities
Δx and Δy	= grid block sizes (feet)

¹⁷² Peaceman, D.W. "Interpretation of Well-Block Pressures in Numerical Reservoir Simulation with Nonsquare Grid Blocks and Anisotropic Permeability." SPE 10528 presented at the Sixth SPE Symposium on Reservoir Simulation, New Orleans, (February 1982), pp. 553-569.

The simulator then uses the modified radial flow equation, written for each connection:

$$q_o = \frac{(0.001127) (2\pi) \left(\frac{k k_{ro} h}{B_o \mu_o} (p_b - p_w) \right)}{\left(\ln \left(\frac{r_b}{r_w} \right) + S \right)} \quad (12.4)$$

The connection term on the COMPDAT keyword in the SCHEDULE section, CONFACT, is simply the transmissibility portion of equation (12.4) for a given connection that is:

$$T_{xy} = \frac{(0.001127) (2\pi) (kh)}{\left(\ln \left(\frac{r_b}{r_w} \right) + S \right)} \quad (12.5)$$

And the oil phase mobility term is defined as:

$$M_o = \left(\frac{k_{ro}}{B_o \mu_o} \right) \quad (12.6)$$

Substituting (12.5) and (12.6) into (12.4) and summing all the connections for the well to obtain the oil rate for the well gives:

$$q_o = \sum_1^N (T_{xy} M_o (p_b - p_w)) \quad (12.7)$$

Note in the case of partially completed wells, the effective permeability thickness of a perforated interval may be substantially greater than the average permeability thickness of the formation opposite the perforation.

Engineers commonly use the Productivity Index ("PI") as a parameter to defined an oil well's deliverability, as it is derived relatively easy from field measurements, that is:

$$q_o = \frac{PI}{(p_e - p_w)} \quad (12.8)$$

or in terms of the productivity index:

$$PI = \frac{q_o}{(p_e - p_w)} \quad (12.9)$$

It is significant that this equation is written in terms of the pressure at the drainage radius, p_e , rather than grid block pressure, p_b . It must be written this way since PI is a property that is determined by field production tests. One can also relate the above equation to the multilayered extension of the steady-state radial flow equation (12.7), that is

$$PI = \frac{q_o}{(p_b - p_w)} = \sum_1^N (T_{xy} M_o) \quad (12.10)$$

On very important point to note is that the productivity index is, in general, not constant for a given well since both relative permeability and drainage radius can be time dependent. This makes PI an inappropriate

quantity for computer prediction of production rates, but it is often the only type of data available on well performance. To overcome this limitation, most simulators accept PI data as input, and then immediately convert this assuming steady state radial flow with a uniform mobility throughout the drainage area, resulting in the following equation.

$$PI = \sum_{n=1}^N \left(T_{xy} M_o \frac{\ln \left(\frac{r_e}{r_w} \right) + S}{\ln \left(\frac{r_b}{r_w} \right) + S} \right)_n \quad (12.11)$$

Since the drainage radius, r_e , is generally different from the grid block radius, r_b , the ratio of logarithms may be significant; hence, the use of the PI option normally requires specification of both r_e and r_b .

Equation (12.11) is used to calculate the PI for the well and is used to print the PI on the WELLS production report requested via the RPTSCHED keyword in the SCHEDULE section. Note that gas wells with non-zero D-factors, the non-Darcy skin factor is added to the skin (S) in equation (12.11) in both the nominator and the denominator. Secondly, r_e is often undetermined or unknown and it is common to default the DRADIUS parameter on the WELSPICS keyword, in the SCHEDULE section. If the well drainage radius (DRADIUS) is defaulted then equation (12.11) simplifies to:

$$PI = \sum_{n=1}^N (T_{xy} M_o)_n \quad (12.12)$$

In this case the PI should be considered a grid block productivity index and not a well drainage area productivity index. Note also that if DRADIUS is set to a negative number, then this results in a well's potential being written out to the WELLS production report instead of the productivity index. In this instance this is the rate based on only applying the BHP and THP constraints only, all other constraints are ignored.

12.3 KEYWORD DEFINITIONS

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.1 ACTION – DEFINE ACTION CONDITIONS AND COMMAND PROCESSING (FIELD)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

The ACTION keyword defines a series of conditions that invoke run time processing of ACTION functions and is similar to executing a run time script for conditions and variables at the field level.

This keyword is ignored by OPM Flow and has no effect on the simulation; use the ACTIONX keyword instead.

12.3.2 ACTIONG – DEFINE ACTION CONDITIONS AND COMMAND PROCESSING (GROUPS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

The ACTIONG keyword defines a series of conditions that invoke run time processing of ACTION functions and is similar to executing a run time script for conditions and variables at the group level

This keyword is ignored by OPM Flow and has no effect on the simulation; use the ACTIONX keyword instead.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.3 ACTIONR – DEFINE ACTION CONDITIONS AND COMMAND PROCESSING (REGIONS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

The ACTIONR keyword defines a series of conditions that invoke run time processing of ACTION functions and is similar to executing a run time script for conditions and variables at the region level.

This keyword is ignored by OPM Flow and has no effect on the simulation; use the ACTIONX keyword instead.

12.3.4 ACTIONS – DEFINE ACTION CONDITIONS AND COMMAND PROCESSING (WELL SEGMENTS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

The ACTIONS keyword defines a series of conditions that invoke run time processing of ACTION functions and is similar to executing a run time script for conditions and variables associated with well segments.

This keyword is ignored by OPM Flow and has no effect on the simulation; use the ACTIONX keyword instead.

12.3.5 ACTIONW – DEFINE ACTION CONDITIONS AND COMMAND PROCESSING (WELLS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

The ACTIONW keyword defines a series of conditions that invoke run time processing of ACTION functions and is similar to executing a run time script for conditions and variables at the well level.

This keyword is ignored by OPM Flow and has no effect on the simulation; use the ACTIONX keyword instead.

12.3.6 ACTIONX – DEFINE ACTION CONDITIONS AND COMMAND PROCESSING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The ACTIONX keyword defines a series of conditions that invoke run time processing of ACTION functions and is similar to executing a run time script. This is the general purpose version of the ACTION series of keywords that can apply Boolean conditional tests to variables at the field, group, region, well segment and well levels. The ACTION, ACTIONG, ACTIONR, ACTIONS and ACTIONW keywords are not implemented in OPM Flow and are unlikely to be so, as the ACTIONX keyword implements their functionality with greater flexibility.

This keyword starts the definition of a ACTIONX section that stipulates the Boolean conditions to test and the resulting SCHEDULE keywords to be executed if the Boolean condition evaluates to true. An ACTIONX Definition Section is terminated by an ENDACTION keyword on a separate single line.

Although this keyword is read by OPM Flow and the ACTION and UDAQ computational logic and calculations have been implemented, one should use caution using this facility as it may result in OPM Flow aborting. This is because the ACTIONX keyword enables the user to implement complex functionality and therefore it is advisable to start with simple expressions before adding the desired complexity.

See also the PYACTION keyword, also in the SCHEDULE, that implements OPM Flow's Python scripting facility using the Python scripting language.

No.	Name	Description	Default
	ACTIONX	Define the start of ACTIONX Definition Section. This is then followed on a new line by any number of ACTIONX records that define the conditions for which the defined action will be executed and the various operations to be performed if the conditions are satisfied.	
I-1	ACTNAME	ACTNAME is a character string of up to length eight that defines the name of this action definition.	None
I-2	ACTNSTEP	ACTNSTEP is a positive integer that defines the number times that the ACTNAME definition is executed. ACTIONX definitions are activated at the end of a time step and this parameter is used to set how many time steps the ACTNAME definition will be invoked. The default value of one means that the definition will be executed only once. Use a large value, for example 10,000 for the definition to be executed at every time step. Noted that the counter only affects successful evaluations; i.e. if ACTNSTEP is set equal to one (the default), then the simulator will test the action at the end of every time step until it evaluates to true.	1
I-3	ACTDELTA	ACTDELTA is a real positive value that stipulates the duration of time that the conditions defined on the second record to be satisfied before the ACTIONX action are executed. For example, if ACTDELTA is defaulted the actions will be executed at the end of the time step for which the conditions are met. If set to say 30, then a minimum of 30 days will pass before the actions are executed (assuming field or metric units).	
		days days hours	0.0
I-4	/	Record terminated by a "/"	Not Applicable

No.	Name	Description	Default
2-1	ACTLHS	<p>ACTLHS is a series of character strings, each up to eight characters in length, that defines a constant, UDQ defined value, or a SUMMARY variable on the left hand side of a Boolean conditional test.</p> <p>The format for ACTLHS is dependent on the SUMMARY variable type: Aquifer, Block, Field, Group, Region, Time, Well, Well Connection, Well Local Grid Refinement Connection, or a Well Segment. In addition to SUMMARY variables, an UDQ defined value or a Constant variable can be used. The format for the various data types is given in Table 12.5.</p>	Not Applicable
2-2	ACTTEST	<p>ACTTEST is a defined character string that states the Boolean operator and must be set to one of the following Boolean conditionals:</p> <ol style="list-style-type: none"> 1) >: Greater than. 2) <: Less than. 3) >=: Greater than or equal to. 4) <=: Less than or equal to. 5) =: Equals to. 6) !=: Not equal to <p>For example to test if the field's gas production rate is less than 600 MMscf/d then one would use:</p> <pre> ACTIONX PHASE2 1 / GGPR 'FIELD' < 600E3 / / ENDACTIO </pre>	Not Applicable
2-3	ACTRHS	<p>ACTRHS is a numeric value or a series of character strings, each up to eight characters in length, that defines a constant, an UDQ defined value, or a SUMMARY variable on the right hand side of a Boolean conditional test, as outlined in Table 12.5 (see also ACTLHS).</p> <p>In the case of well quantities on the right hand side the set of matching wells is captured and can be used as a general "well list" with the symbol '?' in subsequent well keywords. For example, to shut-in all oil producing wells ('OP*') with a water cut greater than 90% for every time the field water production rate exceeds 60,000 stb/d one would use:</p> <pre> ACTIONX MXWATER 10000 / GWPR 'FIELD' > 60E3 AND / WCUT > 'OP*' > 0.90 / / -- WELL PRODUCTION STATUS -- -- WELL WELL --LOCATION-- COMPLETION -- NAME STAT I J K FIRST LAST WELOPEN '?' SHUT / / ENDACTIO </pre>	Not Applicable

No.	Name	Description	Default
2-4	ANDOR	<p>An optional defined character string that stipulates a Boolean operator that must be set to either AND or OR if included on this record, that links this record with additional records of this type. For example, to test if the field's gas production rate is less than 600 MMscf/d after 2020 then one would use:</p> <pre> ACTIONX PHASE2 1 / GGPR 'FIELD' < 600E3 AND / YEAR > 2020 / / ENDACTIO </pre> <p>This item should be left blank if not required.</p>	Not Applicable
2.5	/	Termination of an ACTIONX Boolean condition record. Note that multiple numbers of records of this type can be entered with each record terminated by a “/”, as illustrated above.	Not Applicable
3-1	/	The Boolean condition section of the ACTIONX keyword is terminated by an empty line with a single “/”.	Not Applicable
		<p>The next section contains any number of standard SCHEDULE keywords that will be executed if the Boolean expression evaluates to true. For example, to test if the field's gas production rate is less than 600 MMscf/d after 2020 and to open up additional wells if this occurs, then one would use:</p> <pre> ACTIONX PHASE2 1 / GGPR 'FIELD' < 600E3 AND / YEAR > 2020 / / -- WELL PRODUCTION STATUS -- -- WELL WELL --LOCATION-- COMPLETION -- NAME STAT I J K FIRST LAST WELOPEN GP10 OPEN / GP11 OPEN / / ENDACTIO </pre> <p>In theory, most SCHEDULE keywords can be used in an ACTIONX Define Section here, except for the time stepping keywords, i.e, TSTEP and DATES. See Table 12.6 for a list of the SCHEDULE keywords that are known to work with the ACTIONX keyword.</p>	Not Applicable
	ENDACTIO	Define the end of ACTIONX Definition Section.	Not Applicable
<p>Notes:</p> <p>l) There is no terminating “/” for this keyword, instead the ENDACTIO keyword terminates the keyword.</p>			

Table 12.4: ACTIONX Keyword Description

The variable types and the associated definitions that are available for use with Boolean conditionals are outlined in Table 12.5.

Variable Type	Description
AQUIFER	<p>AQUIFER variable consists of two parameters the:</p> <ol style="list-style-type: none"> 1) Aquifer SUMMARY variable; for example, Analytical Aquifer Influx Rate, AAQR, and the 2) Aquifer number consisting of a positive integer greater than zero that defines the aquifer to be used.
BLOCK	<p>BLOCK variable consists of four parameters:</p> <ol style="list-style-type: none"> 1) Block SUMMARY variable; for example Block Oil Saturation, BOSAT. 2) Block I location which should be a positive integer greater than or equal to zero and less than or equal to NX that defines the connection location in the I-direction. 3) Block J location which should be a positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction. 4) Block K location which should be a positive integer greater than or equal to one and less than or equal to NZ that defines the connection location in the K-direction. <p>The NX, NY, and NZ parameters are defined on the DIMENS keyword in the RUNSPEC section.</p>
CONSTANTS	<p>CONSTANTS can be any numerical value and can also include an integer constant as a counter secondary variable. This type of variable has the following form:</p> <ol style="list-style-type: none"> 1) Any numerical value. 2) ACTIONX counter as defined by ACTNSTEP in the ACTIONX Definition Section. The default value is zero, but this parameter can be any integer value. For example, if one wanted to activate the action after the third time the Boolean condition was passed then setting ACTNSTEP to one and this parameter to -2 would accomplish this.
FIELD	<p>The FIELD variable consists of any field SUMMARY variable; for example the Field average Pressure, as shown below:</p> <pre> ACTIONX WIPHASE 1 / FPR < 2500 / / ENDACTIO </pre> <p>The above would action a set of SCHEDULE keywords if the field average pressure fell below 2,500 psia for a run using FIELD units.</p>
GROUP	<p>GROUP variable definition consists of:</p> <ol style="list-style-type: none"> 1) Group SUMMARY variable; for example, Group Oil Production Rate, GOPR. 2) Group Name which is a character string of up to eight characters in length that defines an existing group, note that the group named FIELD is the top most group. <p>To enable an action for when the field's oil production rate drops below 20,000 stb/d then one could use.</p> <pre> ACTIONX OILMIN 1 / GOPR 'FIELD' < 20.0E3 / / ENDACTIO </pre>

Variable Type	Description
REGION	<p>REGION variable definition consists of:</p> <ol style="list-style-type: none"> 1) Region SUMMARY variable; selected from one of the following only: RPR, RGSAT, ROSAT, RWSAT, RGIP, ROIP, and RVIP. No other region summary fields are permitted in the expressions. 2) Fluid In-Place region number which is a positive integer greater than or equal to zero that defines the region number. The value should less than or equal to the NTFIP variable on either REGDIMS or TABDIMS keywords in the RUNSPEC section. Note that a zero value indicates the whole model. 3) Fluid In-Place region family (not used by OPM Flow). <p>For example,</p> <pre> ACTIONX WIPHASE 1 / RRP 0 < 2500 / / ENDACTIO </pre> <p>Would action a set of SCHEDULE keywords if the field average pressure fell below 2,500 psia for a run using FIELD units.</p>
TIME	<p>TIME variables consists of one parameter that can have three values:</p> <ol style="list-style-type: none"> 1) DAY for the current simulation day of the month, MNTH for the current simulation month, and YEAR for the current simulation year. <p>Thus, to set an action for April 1, 2025 one would use:</p> <pre> ACTIONX DAY = 1 AND / MNTH = 'APR' AND / YEAR = 2025 AND / / ENDACTIO </pre> <p>Note that the value for the MNTH variable, 'APR', in the example, can also be entered without the quotes, that is:</p> <pre> MNTH = APR AND / </pre> <p>In addition, numerical values for MNTH, similar to DAY and YEAR, are also permitted and are converted to the nearest integer for comparison, so for example:</p> <pre> ACTIONX DAY = 0.95 AND / MNTH = 4.40 AND / YEAR = 2024.9 AND / / ENDACTIO </pre> <p>Would again result in the action taking place on April 1, 2025.</p>

Variable Type	Description
WELL	<p>WELL variable definition consists of:</p> <ol style="list-style-type: none"> 1) Well SUMMARY variable; for example, Well Oil Production Rate, WOPR. 2) Well Name which is a character string of up to eight characters in length that defines the well, which must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur. <p>To reduce the tubing head pressure constraint for when any of the oil producers' oil rate drop below 100 stb/d then one could use.</p> <pre> ACTIONX WOILMIN 1 / WOPR 'OP*' < 100.0 / / -- -- FLOW WELLS THROUGH LOW PRESSURE SEPARATOR -- -- WELL WELL TARGET -- NAME TARG VALUE WELTARG 'OP*' ' THP 150 / / ENDACTIO </pre>
WELL CONNECTION	<p>WELL CONNECTION variable definition is comprised of:</p> <ol style="list-style-type: none"> 1) Well connection SUMMARY variable; for example, Connection Oil Flow Rate, COFR. 2) Well Name which is a character string of up to eight characters in length that defines the well, which must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur. 3) I- Connection: A positive integer greater than or equal to zero and less than or equal to NX that defines the connection location in the I-direction 4) J- Connection: A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction. 5) K- Connection: A positive integer greater than or equal to one and less than or equal to NZ that defines the connection location in the K-direction. <p>The NX, NY, and NZ parameters are defined on the DIMENS keyword in the RUNSPEC section.</p>

Variable Type	Description
WELL LOCAL GRID REFINEMENT CONNECTION	<p>WELL LOCAL GRID REFINEMENT CONNECTION variable definition is comprised of:</p> <ol style="list-style-type: none"> 1) Well local grid refinement connection SUMMARY variable; for example, the Local Grid Refinement Connection Oil Flow Rate, LCOFR. 2) Well Name which is a character string of up to eight characters in length that defines the well, which must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur. 3) Local Grid Refinement Name which is a character string of up to eight characters in length that defines the Local Grid Refinement ("LGR"), which must have been declared previously using the CARFIN or RADFIN keywords in the GRID section, otherwise an error may occur. 4) I- Connection: A positive integer greater than or equal to zero and less than or equal to NX that defines the connection location in the I-direction within the LGR. 5) J-Connection: A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction within the LGR. 6) K- Connection: A positive integer greater than or equal to one and less than or equal to NZ that defines the connection location in the K-direction within the LGR. <p>The NX, NY, and NZ parameters are defined on either the CARFIN or RADFIN keywords in the GRID section depending upon whether a Cartesian or radial local grid refinement is being utilized.</p> <p>Note Local Grid Refinements are currently not implemented in OPM Flow.</p>
WELL SEGMENT	<p>WELL SEGMENT variable definition consists of:</p> <ol style="list-style-type: none"> 1) Well Segment SUMMARY variable; for example, Segment Oil Flow Rate, SOFR. 2) Multi-Segment Well which is a character string of up to eight characters in length that defines the well name which must have been declared previously using the WELSPECS and WELSEGS keywords in the SCHEDULE section, otherwise an error may occur. 3) Segment Number, which is a positive integer greater than or equal to two and less than or equal to MXSEGS on WSEGDIMS keyword in the RUNSPEC section that defines the segment. <p>Note that the total number of wells should be defined via the WELLSDIMS keyword and the number of multi-segment wells should be declared on the WSEGDIMS keyword, both keywords are in the RUNSPEC section.</p>

Table 12.5: ACTIONX Variable Definitions

See also the ACTDIMS and UDADIMS keyword in the RUNSPEC section to define the dimensions for the ACTIONX keyword and associated variables. In addition, the EXIT keyword in the SCHEDULE that allows for terminating the simulation for when a condition within an ACTIONX definition is satisfied

Although most SCHEDULE keywords should work with the ACTIONX keyword, Table 12.6 shows the status of keywords that have been tested and known to work, together with keywords that are currently planned to be implemented.

ACTIONX					
Schedule Section Keywords Status					
Action Keywords	Group Keywords	Well Keywords		Connection Keywords	Miscellaneous Keywords
ACTIONX	GCONINJE	WCONINJE	WTEST	COMPDAT	BOX
UDQ	GCONPROD	WCONPROD	WTMULT	COMPLUMP	ECHO
	GCONSUMP	WEFAC			ENDBOX
	GRUPNET	WEOPEN			EXIT ⁵
	GRUPTARG	WELSPECS			MULTX
	GRUPTREE	WELTARG			MULTX-
	GSATINJE	WGRUPCON			MULTY
	GSATPROD	WINJMULT			MULTZ
		WPIMULT			NEXTSTEP
		WSEGVALLV			NOECHO

Notes:

- 1) Cells not colored show that the keyword has been tested and is functional within an ACTIONX block.
- 2) Cells colored in gray indicate that the keyword has been tested in OPM Flow but the results are currently different to the commercial simulator.
- 3) Cells colored orange show keywords that are currently available in OPM Flow but have not been tested; however, testing is ongoing.
- 4) Cells colored red show keywords currently unavailable in OPM Flow because the underlying feature is not available; however, there are plans to implement this functionality.
- 5) OPM Flow specific keyword.

Table 12.6: ACTIONX Schedule Section Keyword Status

As mentioned previously, the UDQ keyword stipulates the variables and operations used to access the User Defined Quantities features in OPM Flow. UDQ variables can be constants, SUMMARY variables, as defined in the SUMMARY section, or a formula using various mathematical functions together with constants and SUMMARY variables.

Note

Within an ACTIONX Definition Section any UDQ variables utilizing group and well variables, must have their associated groups and wells previously fully defined in the commercial simulator, otherwise an error will occur. For example, if a well's GOR is being used as part of a UDQ definition, then the well must be fully characterized prior to declaring the UDQ definition.

This restriction does not apply to OPM Flow; however, it should be considered if the same deck is to be run with both simulators.

User Defined Quantities and also be used as User Defined Arguments (“UDA”) in the SCHEDULE section with various group, well, and connection keywords. In this case, the UDA variables are used to replace numerical values on these keywords by UDA variables that have been defined by the UDQ keyword. For example, if we wish to make the oil rate for certain wells to be a function of their water cut, then one can define the function using the UDQ keyword that results in a UDQ variable, WU_WCUT say, and then use

WU_WCUT as a UDA variable on the WCONPROD keyword for the ORAT parameter. See Table 12.69 for a list of keywords that can be used with UDA variables in the *UDQ - Declare User Define Quantities ("UDQ")* keyword section.

Examples

The first example uses the UDQ keyword to sort the oil wells from high water cut to low, via the WU_WLIST variable, and then use the ACTIONX keyword to shut-in the worst offending well when the field's water production is greater than 30,000 stb/d.

```
--
--      DEFINE START OF USER DEFINED QUANTITY SECTION
--
UDQ
--
--      OPERATOR VARIABLE  EXPRESSION
--
DEFINE  WU_WCUT    1/(WWCT 'OP*')                / WELL WWCT LIST
DEFINE  WU_LIST    SORT(WU_WCUT)                  / WELL WWCT LIST SORTED
/                                                END OF UDQ SECTION
--
--      DEFINE START OF ACTIONX SECTION
--
ACTIONX
      WSHUT          10                                /
      GWPR 'FIELD' > 30E3  AND                          /
      WU_LIST 'OP*' > 1                                /
/

--
--      DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
--  WELL WELL  --LOCATION--  COMPLETION
--  NAME STAT   I   J   K   FIRST LAST
WELOPEN
'?'      SHUT                                /
'?'      SHUT      0   0   0   0   0      /
/

ENDACTIO
```

Apart from checking that the field's water production rate is greater than 30,000 stb/d the Boolean conditional also checks that there is more than one well in the sorted well list. Notice also the use of '?' symbol as a substitution of the well name and that the ACTIONX WSHUTIN series of commands will be executed a total of ten times.

The second example checks to see if the field's gas rates is below 600 MMscf/d and if the simulation time is greater than January 1, 2030. If it is, then compression is installed by re-setting all the gas producing well's THP and BHP pressures to 450 psia and 300 psia respectively. In addition all gas wells currently shut-in are tested to see if they can be opened up under the new THP and BHP constraints.

```
--
--      START ACTIONX FIELD PHASE-3 AUTOMATIC COMPRESSION
--
ACTIONX
  PHASE-3      1
  GGPR  'FIELD' < 600E3 AND
  DAY      = 1    AND
  MNTH     = JAN  AND
  YEAR     = 2030
/

--
--      INSTALL COMPRESSION AND RESET WELL THP AND BHPS
--
--      WELL      WELL      TARGET
--      NAME      TARG      VALUE
WELTARG
'GP*'      ' THP      450
'GP*'      ' BHP      300
/

--
--      TEST AND OPEN ALL WELLS UNDER COMPRESSION CONSTRAINTS
--
--      WELL      TEST      CLOSE      NO.      START
--      NAME      INTV      CHECK      CHECK      TIME
WTEST
'GP*'      '  1.0      PE          1          3
/

--
--      END OF ACTIONX FIELD PHASE-3 AUTOMATIC COMPRESSION DEFINITION
--
ENDACTIO
```

12.3.7 AITS – ACTIVATE INTELLIGENT TIME STEPPING

Turns on the commercial simulator's intelligent time stepping.

See [AITS – Activate Intelligent Time Stepping](#) in the RUNSPEC section.

12.3.8 AITSOFF – DEACTIVATE INTELLIGENT TIME STEPPING

Turns off the commercial simulator's intelligent time stepping.

See [AITSOFF – Deactivate Intelligent Time Stepping](#) in the RUNSPEC Section

12.3.9 APILIM – DEFINE API TRACKING GRID BLOCK LIMITS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The APILIM keyword defines API Tracking grid block limits for when API Tracking has been activated via the API keyword in the RUNSPEC section. The keyword enables the simulator to monitor the grid blocks outside the limits defined on the keyword, as well as to optionally constrain the values within a given range.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.10 AQUCHGAS – DEFINE CONSTANT PRESSURE GAS ANALYTICAL AQUIFER PROPERTIES

The AQUCHGAS keyword defines the properties of constant pressure gas analytical aquifers.

See [AQUCHGAS – Define Constant Pressure Gas Analytical Aquifer Properties](#) in the SOLUTION section for a full description.

12.3.11 AQUCHWAT – DEFINE CONSTANT PRESSURE WATER ANALYTICAL AQUIFER PROPERTIES

The AQUCHWAT keyword defines the properties of constant pressure water analytical aquifers.

See [AQUCHWAT – Define Constant Pressure Water Analytical Aquifer Properties](#) in the SOLUTION section for a full description.

12.3.12 AQUCT – DEFINE CARTER-TRACY ANALYTICAL AQUIFERS

The AQUCT keyword defines Carter-Tracy¹⁷³ analytical aquifers, the properties of the aquifer, including the Carter-Tracy aquifer influence function associated with the aquifer, defined by the AQU TAB keyword in the PROPS section.

See [AQUCT – Define Carter-Tracy Analytical Aquifers](#) in the GRID section.

¹⁷³ Carter, R. D. and Tracy, G. W. “An Improved Method for Calculating Water Influx,” Transactions of AIME (1960) 219, 215-417.

12.3.13 AQUCWFAC – MODIFY CONSTANT PRESSURE WATER ANALYTICAL AQUIFER PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The AQUCWFAC keyword modifies the datum depth and pressure for all aquifers specified by the AQUCHWAT keyword in the SOLUTION or SCHEDULE sections.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.14 AQUFETP – DEFINE FETKOVICH ANALYTICAL AQUIFERS

The AQUFETP keyword defines Fetkovich Analytical aquifers and the aquifer properties. Each row entry in the AQUFETP keyword defines one Fetkovich Analytical aquifer. In order to fully define this type of aquifer, the aquifer must be connected to the reservoir using the AQUANCON keyword in the GRID or SOLUTION sections.

See [AQUFETP – Define Fetkovich Analytical Aquifers](#) in the SOLUTION section for a full description.

12.3.15 AQUFLUX - DEFINE CONSTANT FLUX ANALYTICAL AQUIFER

The AQUFLUX keyword defines the properties of Constant Flux Analytical Aquifers.

See [AQUFLUX - Define Constant Flux Analytical Aquifer](#) in the SOLUTION section for a full description.

12.3.16 BOUNDARY – DEFINE A BOUNDARY BOX FOR PRINTING

The BOUNDARY keyword defines a rectangular grid for printing various arrays to the output print file (*.PRT); thus, avoiding printing all the elements in the selected array.

See [BOUNDARY – Define a Boundary Box for Printing](#) in the GRID section for a full description.

12.3.17 BOX - DEFINE A RANGE OF GRID BLOCKS TO ENTER PROPERTY DATA

BOX defines a range of grid blocks for which subsequent data is assigned for all the cells in the defined BOX. Note that the BOX grid is reset by the keyword ENDBOX by resetting the current defined BOX to be the whole grid. The keyword can be used for any array and for all grid types.

See [BOX - Define a Range of Grid Blocks to Enter Property Data](#) in the GRID section for a full description.

12.3.18 BRANPROP – DEFINE NETWORK BRANCH PROPERTIES FOR EXTENDED NETWORK OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

BRANPROP defines network branch properties for the extended network option for when the Extended Network Model has been activated by the NETWORK keyword in the RUNSPEC section. There are two types of network facilities in the simulator, the Standard Network model, which is defined with the GRUPNET keyword in the SCHEDULE section and the Extended Network Model defined by the BRANPROP and NODEPROP keywords, again in the SCHEDULE section.

For the Extended Network Model the group hierarchy can be different to that defined by the GRUPTREE keyword; however, the bottom most nodes in the network tree associated with wells, must be the same as that defined by the GRUPTREE keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DOWNNODE	A character string of up to eight characters in length that defines the down stream node name for this branch, that is the node closest to the wells. Thus for a production network, this will be an inlet node as the wells are importing fluid into the branch node. Whereas as for an injection node, this is outlet node as well's are exporting the fluid.			None
2	UPNODE	A character string of up to eight characters in length that defines the up stream node name for this branch, that is the node furthestmost from the wells. Thus for a production network, this will be an outlet node as the wells are exporting fluid from the branch node. Whereas as for an injection node, this is inlet node as the well's are importing the injection fluid.			None
3	VFPTAB	A positive integer greater than or equal to zero that defines the vertical lift performance table to be used for calculating the pressure behavior between NODEIN and NODEOUT. For a production network this must reference a table associated with the VFPPROD keyword, and for an injection network a table declared via the VFPINJ keyword. Both keywords are in the SCHEDULE section. If the pressure behavior between the two nodes is zero, then the value of 9999 should be entered for this variable. A value of zero for VFPTAB removes the branch from the extended network and the resulting flows are ignored in the network flow stream.			None
4	ALQ-NODE	A real positive value that defines the artificial lift quantity to be used in conjunction with the VFPPROD assigned to the branch via the VFPTAB variable. VFPTAB vertical lift performance table and the artificial lift quantity ALQ-NODE are used with the branch fluid rates to calculate the pressure behavior through the branch. For a network this can be considered to be either a pump to pump fluid through the network or a compressor to compress gas to a higher export pressure. Basically, ALQ-NODE is used to reduce the pressure loss through the branch. Note that the units for ALQ-NODE are dependent on the associated variable on the VFPPROD keyword. Should be set to zero if ALQ-DEN is set to either DENO or DENG, or if the branch is associated with an automatic compressor.			0.0

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	ALQ-DEN	<p>A defined character string that defines that ALQ-NODE variable represents either a surface density or as an artificial lift quantity for a pump or a compressor, and should be set to one of the following:</p> <ul style="list-style-type: none">1) DENO: ALQ-NODE represents the average surface oil density flowing through the branch.2) DENG: ALQ-NODE represents the average surface gas density flowing through the branch.3) NONE: ALQ-NODE is the artificial lift quantity as defined on the VFPPROD keyword to model a pump or a compressor. <p>The VFPPROD keyword should be consistent with this variable, that is, if ALQ-DEN is set to DENO then the surface oil should be used as the ALQ variable on the VFPPROD keyword.</p>			NONE
<p>Notes:</p> <ul style="list-style-type: none">1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.7: BRANPROP Keyword Description

See also the NETWORK keyword in the RUNSPEC section and the NODEPROP in the SCHEDULE section.

Example

Given the following Extended Network model in Figure 12.3.

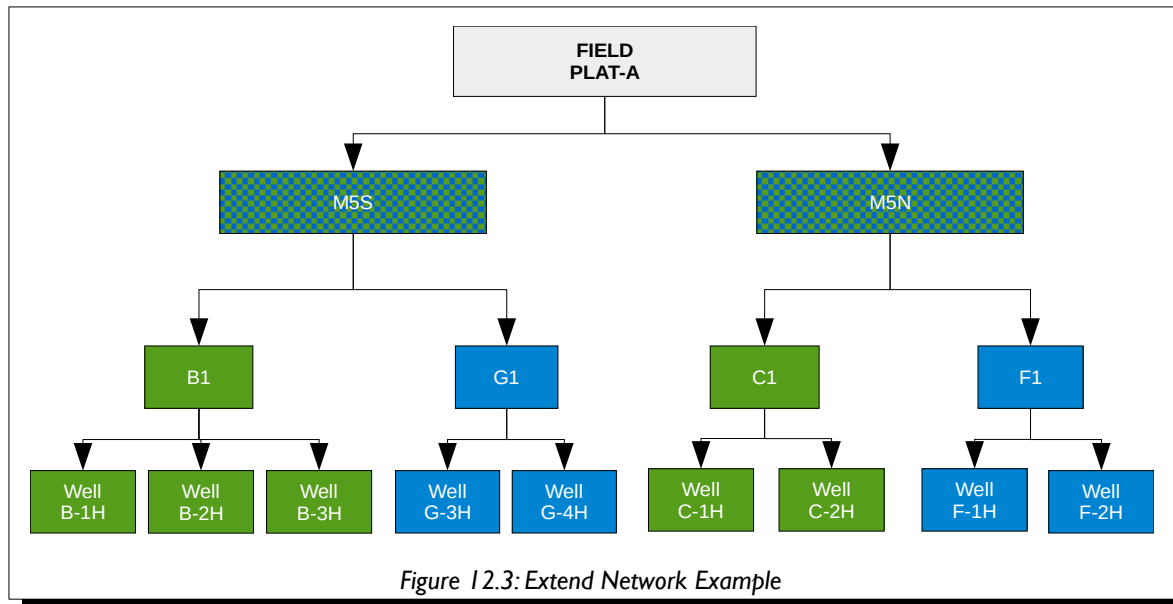


Figure 12.3: Extend Network Example

First the Extended Network model should be used invoked in the RUNSPEC section, and then the BRANPROP keyword should be used to define the branch network, and finally the NODEPROP keyword is used to describe the node properties.

```

-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      ACTIVATE THE EXTENDED NETWORK OPTION AND DEFINE PARAMETERS
--
--      MAX.      MAX      NOT
--      NODE      LINK      USED
NETWORK
3          2          1*
/

. . . . .
. . . . .
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
--      EXTENDED NETWORK BRANCH PROPERTIES
--
--      DOWN  UP      VFP      VFP
--      NODE  NODE      TABLE  ALFQ
BRANPROP
B1      PLAT-A      5          1*
C1      PLAT-A      4          1*
/

--
--      EXTENDED NETWORK NODE PROPERTIES
--
--      NODE  NODE  CHOK  GAS  CHOK  SOURCE  NETWORK
--      NAME  PRESS OPTN LIFT GROUP SINK   TYPE
NODEPROP
PLAT-A      21.0   NO    NO
B1          1*    NO    NO
C1          1*    NO    NO
/

```

Here the main platform for the field, PLAT-A, has a fixed 21 barsa pressure applied as an operating constraint.

12.3.19 CALTRAC – DEFINE A GAS CALORIFIC VALUE TRACER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The CALTRAC keyword is used to assign a gas calorific value to a tracer, for when the Tracer option has been invoked by the TRACER keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.20 CECON – DEFINE WELL CONNECTIONS ECONOMIC LIMIT CRITERIA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

CECON sets the economic cut-off criteria for a well's connection to the simulation grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.21

CECONT – DEFINE WELL CONNECTIONS TRACER ECONOMIC LIMIT CRITERIA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, CECONT, sets the tracer economic cut-off criteria for a well's connection to the simulation grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.22 COLUMNS – DEFINE INPUT FILE COLUMN MARGINS

The COLUMNS keyword defines the input file column margins; characters outside the margins are ignored by the input parser.

See [COLUMNS – Define Input File Column Margins](#) in the GLOBAL section for a full description.

12.3.23 COMPDAT – DEFINE WELL CONNECTIONS TO THE GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COMPDAT keyword defines how a well is connected to the reservoir by defining or modifying existing well connections. Ideally the connections should be declared in the correct sequence, starting with the connection nearest the well head and then working along the wellbore towards the bottom or toe of the well, however this may not be possible or convenient, for example when connections are added or removed from a well during the simulation (see COMPORD in the SCHEDULE section for options regarding connection ordering).

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	I	A positive integer greater than or equal to zero and less than or equal to NX that defines the connection location in the I-direction. If set to zero or defaulted with I* the location is taken from the wellhead location I-direction value on the WELSPECS keyword in the SCHEDULE section.			0
3	J	A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction. If set to zero or defaulted with I* the location is taken from the wellhead location J-direction value on the WELSPECS keyword in the SCHEDULE section.			0
4	K1	A positive integer greater than or equal to one and less than or equal to NZ that defines the UPPER connection location in the K-direction.			None
5	K2	A positive integer greater than or equal to K1 and less than or equal to NZ that defines the LOWER connection location in the K-direction.			None
6	STATUS	A character string of length four that defines the connections' operational status, STATUS should be set to one of the following character strings: 1) OPEN: the connections are open to flow. 2) SHUT: the connections are closed to flow (shut-in). 3) AUTO: the connection are initially closed, but may be opened automatically if an economic limit is violated. Currently this option is not supported by OPM Flow			OPEN

No.	Name	Description			Default
		Field	Metric	Laboratory	
7	SATNUM	<p>An integer greater than or equal to zero and less than NTSFUN as declared on the TABDIMS keyword in the RUNSPEC, that defines the saturation table number to be used for flow between the reservoir grid block and the well connections.</p> <p>If SATNUM is set to zero or defaulted with I* then:</p> <ul style="list-style-type: none"> The saturation table allocated to the grid block that the connections are located within is used. If the hysteresis option has been activated via the HYSTER variable on the SATOPTS keyword in the RUNSPEC section, then both the imbibition and drainage saturation tables allocated to the grid block that the connections are located within are used. The imbibition table allocation can be changed by the COMPIMB keyword in the RUNSPEC section, provided it is entered after the COMPDAT keyword. 			0
8	CONFACT	<p>A real value greater than or equal to zero that defines the transmissibility connection factor between the well bore and the reservoir grid block.</p> <p>If set to zero or defaulted with I* then items (9) through (13) are used to calculate CONFACT.</p>			Defined
		cPrb/day/psia 0	cPrm ³ /day/bars 0	cPrcc/hr/atm 0	
9	RW	<p>A real positive value that defines the well bore <u>diameter</u> of the connections for the well.</p> <p>RW is used in calculating a well's productivity or injectivity index; however the value will be ignored in calculating the connections CONFACT value if CONFAC has been directly entered.</p>			None
		feet	m	cm	
10	KH	<p>A real value that defines the effective KH (permeability x length) for the connections.</p> <p>If less than or equal to zero or defaulted by I* then KH is calculated from the connected grid blocks. KH is ignored if CONFAC has been directly entered.</p>			Calculated from connected grid blocks
		mD.ft	mD.m	mD.cm	
11	SKIN	<p>A real value that defines the connections dimensionless skin factor.</p> <p>SKIN is used in calculating a well's productivity or injectivity index; however, the value will be ignored in calculating the connections CONFACT value if CONFAC has been directly entered.</p>			0.0
		dimensionless	dimensionless	dimensionless	
12	DFACT	<p>A real value that defines the non-Darcy D factor coefficient for gas wells.</p> <p>This value should be defaulted with I* and the non-Darcy D factor coefficient for gas wells defined via the WDFAC keyword in the SCHEDULE section.</p> <p>Currently this option is not supported by OPM Flow.</p>			I*
		day/Mscf	day/m ³	hour/sc	

No.	Name	Description			Default
		Field	Metric	Laboratory	
13	DIRECT	A one letter character string that defines the orientation of the connections and should be set to either X, Y, or Z. The direction of connections also determines the length of the connection used to calculate the connection factor if CONFAC has not been entered directly. The default value is for a vertical connection, that is DIRECT is defaulted to Z.			Z

Notes:

- 1) The keyword is followed by up to MXCONS records as declared on the WELLDIMS keyword in the RUNSPEC section.
- 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.8: COMPDAT Keyword Description

Multiple grid block connections can be defined on one record for vertical wells by assigning different values to K1 and K2, for deviated and horizontal wells this may not be possible and therefore each grid block connection must be separately defined by using one record per connection, setting K1 equal to K2 in each record.

See also the WELSPECS keyword to define wells, the COMPIMB to reset the imbibition relative permeability table allocation, and the COMPORD to re-order the completions along the well trajectory. In addition, the COMPLUMP keyword groups well connections together to form well completions for a well. All the aforementioned keywords are described in the SCHEDULE section.

Note

The term well connection is used to describe individual connections from the wellbore to the reservoir grid, as opposed to well completions. A well completion is used to describe a set of connections, for example, a well may consist of several completions with each completion consisting of multiple connections.

Example

The following example defines two vertical oil wells using the WELSPECS keyword and their associated connection data.

```
--
--      WELL SPECIFICATION DATA
--
-- WELL  GROUP      LOCATION  BHP    PHASE  DRAIN  INFLOW  OPEN  CROSS  PRESS
-- NAME  NAME        I      J    DEPTH FLUID  AREA  EQUANS SHUT  FLOW  TABLE
WELSPECS
OP01    PLATFORM    14    13    1*     OIL    1*     STD   SHUT   NO    1*   /
OP02    PLATFORM    28    96    1*     OIL    1*     STD   SHUT   NO    1*   /
/
--
--      WELL CONNECTION DATA
--
-- WELL  --- LOCATION ---  OPEN  SAT    CONN  WELL  KH    SKIN  D    DIR
-- NAME  II  JJ  K1  K2  SHUT  TAB   FACT  DIA  FACT FACT FACT  PEN
COMPDAT
OP01    1*  1*  20  56  OPEN  1*    1*    0.708 1*    0.0  1*    'Z' /
OP01    1*  1*  75 100  SHUT  1*    1*    0.708 1*    0.0  1*    'Z' /
OP02    35  96  75 100  OPEN  1*    1*    0.708 1*    0.0  1*    'Z' /
```

Well OP01 has two sets of connections; the first one connects grid cells (14, 13, 20) to (14, 13, 56) to the well and is open to flow and the second connecting grid cells (14, 13, 75) to (14, 13, 100) is shut. Well OP02 has only one open connection from cells (35, 96, 75) to cells (35, 96, 100).

12.3.24 COMPDATL – DEFINE WELL CONNECTIONS TO A LGR GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COMPDATL keyword defines how a well in a Local Grid Refinement (“LGR”) is connected to the reservoir by declaring the LGR and defining or modifying existing well connections. Ideally the connections should be declared in the correct sequence, starting with the connection nearest the well head and then working along the wellbore towards the bottom or toe of the well, however this may not be possible or convenient, for example when connections are added or removed from a well during the simulation (see the COMPORD keyword in the SCHEDULE section for options regarding connection ordering).

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which the well LGR connection data are being defined. Note that the well name (LGRNAME) must have been declared previously using the WELSPECL keyword in the SCHEDULE section, otherwise an error may occur. If defaulted with I* the LGR on the WELSPECL keyword will be utilized.			Defined
3	I	A positive integer greater than or equal to zero and less than or equal to NX that defines the connection location in the I-direction. If set to zero or defaulted with I* the location is taken from the wellhead location I-direction value on the WELSPECS keyword in the SCHEDULE section.			0
4	J	A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction. If set to zero or defaulted with I* the location is taken from the wellhead location J-direction value on the WELSPECS keyword in the SCHEDULE section.			0
5	K1	A positive integer greater than or equal to one and less than or equal to NZ that defines the UPPER connection location in the K-direction.			None
6	K2	A positive integer greater than or equal to K1 and less than or equal to NZ that defines the LOWER connection location in the K-direction.			None
7	STATUS	A character string of length four that defines the connections’ operational status, STATUS should be set to one of the following character strings: 1) OPEN: the connections are open to flow. 2) SHUT: the connections are closed to flow (shut-in). 3) AUTO: the connection are initially closed, but may be opened automatically if an economic limit is violated. Currently this option is not supported by OPM Flow			OPEN

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
8	SATNUM	<p>An integer greater than or equal to zero and less than NTSFUN as declared on the TABDIMS keyword in the RUNSPEC, that defines the saturation table number to be used for flow between the reservoir grid block and the well connections.</p> <p>If SATNUM is set to zero or defaulted with I* then:</p> <ul style="list-style-type: none"> The saturation table allocated to the grid block that the connections are located within is used. If the hysteresis option has been activated via the HYSTER variable on the SATOPTS keyword in the RUNSPEC section, then both the imbibition and drainage saturation tables allocated to the grid block that the connections are located within are used. The imbibition table allocation can be changed by the COMPIMB keyword in the RUNSPEC section, provided it is entered after the COMPDAT keyword. 			0
9	CONFACT	<p>A real value greater than or equal to zero that defines the transmissibility connection factor between the well bore and the reservoir grid block.</p> <p>If set to zero or defaulted with I* then items (9) through (13) are used to calculate CONFACT.</p>			Defined
		cPrb/day/psia 0	cPrm ³ /day/bars 0	cPrcc/hr/atm 0	
10	RW	<p>A real positive value that defines the well bore <u>diameter</u> of the connections for the well.</p> <p>RW is used in calculating a well's productivity or injectivity index; however the value will be ignored in calculating the connections CONFACT value if CONFAC has been directly entered.</p>			None
		feet	m	cm	
11	KH	<p>A real value that defines the effective KH (permeability x length) for the connections.</p> <p>If less than or equal to zero or defaulted by I* then KH is calculated from the connected grid blocks. KH is ignored if CONFAC has been directly entered.</p>			Calculated from connected grid blocks
		mD.ft	mD.m	mD.cm	
12	SKIN	<p>A real value that defines the connections dimensionless skin factor.</p> <p>SKIN is used in calculating a well's productivity or injectivity index; however, the value will be ignored in calculating the connections CONFACT value if CONFAC has been directly entered.</p>			0.0
		dimensionless	dimensionless	dimensionless	
13	DFACT	<p>A real value that defines the non-Darcy D factor coefficient for gas wells.</p> <p>This value should be defaulted with I* and the non-Darcy D factor coefficient for gas wells defined via the WDFAC keyword in the SCHEDULE section.</p> <p>Currently this option is not supported by OPM Flow.</p>			I*
		day/Mscf	day/m ³	hour/sc	

No.	Name	Description			Default
		Field	Metric	Laboratory	
14	DIRECT	A one letter character string that defines the orientation of the connections and should be set to either X, Y, or Z. The direction of connections also determines the length of the connection used to calculate the connection factor if CONFAC has not been entered directly. The default value is for a vertical connection, that is DIRECT is defaulted to Z.			Z

Notes:

- 1) The keyword is followed by up to MXCONS records as declared on the WELLDIMS keyword in the RUNSPEC section.
- 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.9: COMPDATL Keyword Description

Multiple grid block connections can be defined on one record for vertical wells by assigning different values to K1 and K2, for deviated and horizontal wells this may not be possible and therefore each grid block connection must be separately defined by using one record per connection, setting K1 equal to K2 in each record.

See also the WELSPECS keyword to define wells, the COMPIMB to reset the imbibition relative permeability table allocation, and the COMPORD to re-order the completions along the well trajectory. In addition, the COMPLUMP keyword groups well connections together to form well completions for a well. All the aforementioned keywords are described in the SCHEDULE section.

Note

The term well connection is used to describe individual connections from the wellbore to the reservoir grid, as opposed to well completions. A well completion is used to describe a set of connections, for example, a well may consist of several completions with each completion consisting of multiple connections.

Example

The following example defines two vertical oil wells using the WELSPECS keyword and their associated connection data.

```
--
--      WELL LGR SPECIFICATION DATA
--
--      WELL GROUP  LGR   -LOCATION-  BHP   PHASE DRAIN INFLOW SHUT CROSS PVT
--      NAME NAME    NAME      I      J  DEPTH FLUID AREA  EQUA.  IN   FLOW  TABLE
WELSPECL
      OP01  PLAT  OP01LGR  14   13   1*    OIL   1*    STD   SHUT  NO   1*  /
      OP02  PLAT  OP02LGR  28   96   1*    OIL   1*    STD   SHUT  NO   1*  /
/
--
--      WELL LGR CONNECTION DATA
--
--      WELL  LGR   ---LOCATION---  OPEN   SAT CONN  WELL  KH   SKIN  D   DIR
--      NAME  NAME   II  JJ  K1  K2  SHUT   TAB FACT  DIA  FACT FACT FACT PEN
COMPDATL
      OP01  OP01LGR  1*   1*   20  56  OPEN   1*   1*   0.708  1*   1*   1*   Z  /
      OP01  OP01LGR  1*   1*   75 100  SHUT   1*   1*   0.708  1*   1*   1*   Z  /
      OP02  OP02LGR  35   96   75 100  OPEN   1*   1*   0.708  1*   1*   1*   Z  /
/
```

Well OP01 has two sets of connections; the first one connects grid cells (14, 13, 20) to (14, 13, 56) to the well and is open to flow and the second connecting grid cells (14, 13, 75) to (14, 13, 100) is shut. Well OP02 has only one open connection from cells (35, 96, 75) to cells (35, 96, 100).

12.3.25 COMPDATM – DEFINE WELL CONNECTIONS TO AN AMALGAMATED LGR GRID

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COMPDATM keyword is an alias for the COMPDATL keyword. COMPDATM defines how a well in an amalgamated Local Grid Refinement (“LGR”) is connected to the reservoir by declaring the LGR and defining or modifying existing well connections. Ideally the connections should be declared in the correct sequence, starting with the connection nearest the well head and then working along the wellbore towards the bottom or toe of the well, however this may not be possible or convenient, for example when connections are added or removed from a well during the simulation (see the COMPORD keyword in the SCHEDULE section for options regarding connection ordering).

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.26 COMPFLSH – ASSIGN COMPDAT DIFFERENTIAL-FLASH LIBERATION RATIOS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

COMPFLSH is used to assign saturated PVT differential-flash liberation ratios to individual well completions for both the oil formation volume factor and the gas-oil ratio. Only the saturated oil properties are changed by this keyword, that is only data entered via the PVCO or PVTO keywords in the PROPS section will be used in the calculation. The other fluid PVT property keywords: PVTW, PVTG, DENSITY, etc., are not used.

The differential liberation expansion (“DLE”) experiment is designed to approximate the depletion process of an oil reservoir, and thereby provide suitable PVT data for calculating reservoir performance. This is then coupled with surface facilities via the multi-stage separator flash data. The multi-stage separator test is performed on an oil sample primarily to provide a basis for converting differential liberation data from a residual oil to a stock-tank oil basis. Occasionally, several separator tests are run to help choose separator conditions that maximize stock-tank oil production. Usually two or three stages of separation are used, with the last stage being at atmospheric pressure and near-ambient temperature (60 to 80 °F).

Note, normally the data on the PVCO and PVTO keywords should have already taken the two datasets into account and therefore this keyword should not normally be used in practice, unless there is a specific requirement to adjust the oil PVT data on a well connection basis.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.27 COMPIMB – ASSIGN IMBIBITION SATURATION TABLES TO WELL CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COMPIMB keyword assigns imbibition saturation tables to well connections. The COMPDAT keyword in the SCHEDULE section also assigns imbibition saturation tables to connections, but in this case the table number is the same as for the drainage curve. If this is not the required assignment then the COMPIMB keyword can be used to reset the imbibition saturation table number. For this to be effective the COMPIMB keyword must precede the COMPDAT keyword, otherwise it will have no effect.

The COMPIMB keyword should only be used if the hysteresis option has been activated via the HYSTER variable on the SATOPTS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	I	A positive integer greater than or equal to zero and less than or equal to NX that defines the connection location in the I-direction. If set to zero or defaulted with I* then all connections in the I-direction that also satisfy J, K1 and K2 criteria are assigned the IMBNUM imbibition table number.			0
3	J	A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction. If set to zero or defaulted with I* then all connections in the J-direction that also satisfy I, K1 and K2 criteria are assigned the IMBNUM imbibition table number.			0
4	K1	A positive integer greater than or equal to one and less than or equal to NZ that defines the UPPER connection location in the K-direction. If set to zero or defaulted with I* then the upper most connection in the well is used.			0
5	K2	A positive integer greater than or equal to K1 and less than or equal to NZ that defines the LOWER connection location in the K-direction. If set to zero or defaulted with I* then the lowest most connection in the well is used.			0

No.	Name	Description			Default
		Field	Metric	Laboratory	
6	IMBNUM	<p>An integer greater than or equal to zero and less than NTSFUN as declared on the TABDIMS keyword in the RUNSPEC, that defines the imbibition saturation table number to be used for flow between the reservoir grid block and the well connections.</p> <p>If IMBNUM is set to zero or defaulted with I* then the inhibition saturation table allocated to the grid block that the connections are located within is used.</p> <p>If I, J, K1, K2 are all set to zero or defaulted to I*, then IMBNUM is allocated to all connections in the well.</p>			0

Notes:

- 1) The keyword is followed by up to MXCONS records as declared on the WELLDIMS keyword in the RUNSPEC section.
- 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.10: COMPIMB Keyword Description

Multiple grid block connections can be defined on one record for vertical wells by assigning different values to K1 and K2, for deviated and horizontal wells this may not be possible and therefore each grid block connection must be separately defines by setting K1 equal to K2.

See also the COMPDAT keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

The following example defines the connections for two vertical oil wells using the COMPDAT keyword and then re-sets the imbibition saturation functions using the COMPIMP keyword.

```
--
--      WELL CONNECTION DATA
--
-- WELL   --- LOCATION --- OPEN   SAT   CONN   WELL   KH   SKIN   D   DIR
-- NAME   II  JJ  K1  K2  SHUT   TAB   FACT   DIA   FACT   FACT   FACT   PEN
COMPDAT
OP01      1*  1*  20  56  OPEN   1     1*    0.708  1*    0.0    1*    'Z' /
OP01      1*  1*  75 100  SHUT   2     1*    0.708  1*    0.0    1*    'Z' /
OP02      35  96  75 100  OPEN   1     1*    0.708  1*    0.0    1*    'Z' /
--
-- ASSIGN IMBIBITION SATURATION TABLES TO CONNECTIONS
--
-- WELL   ---LOCATION--- SAT
-- NAME   II  JJ  K1  K2  TAB
COMPIMP
OP01      1*  1*  20  56  11      /
OP01      1*  1*  75 100  12      /
OP02      1*  1*  1*  1*  11      /
/
```

Well OP01 has two sets of COMPIMP records to overwrite the imbibition saturation tables, one for connections (14, 13, 20) to (14, 13, 56) resetting the imbibition saturation table number from one to 11 and one for connections (14, 13, 75) to (14, 13, 100) that resets the imbibition table number from 2 to 12. Well OP02 has only one connection from cells (35, 96, 75) to cells (35, 96, 100), so all the default values for I, J, K1, and K2 can be used to set the imbibition table numbers from 2 to 11. Note in all cases the drainage saturation table retains the value as specified by the COMPDAT keyword, that is one, two and one.

12.3.28 COMPINJK – ASSIGN INJECTION WELL RELATIVE PERMEABILITY VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COMPINJK keyword assigns injection well relative permeability values to well connections.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.29 COMPLMPL – ASSIGN WELL LGR CONNECTIONS TO COMPLETIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COMPLMPL keyword assigns well connections in a LGR, as defined by the COMPDATL keyword in the SCHEDULE section, to completion intervals. This “lumping” of the connections to various completion intervals allows automatic workovers and economic criteria to be applied to the completions (that is a set of connections) as opposed to the connections. This allows for a more realistic approach for workovers operations.

For example, if the water cut criteria for working over a well was set to 95%, and the average grid block connection thickness was one meter, then once a well’s water cut reached 95% the worst offending one meter connection would be shut-in. If the well’s actual perforation interval was 10 meters and the 10 connections were lumped as one completion, then when the water cut limit of 95% is reach, the completion would be shut-in, that is all of the 10 connections within the completion would be shut-in.

As the keyword is used to lump connections into a completions, the simulator adds together the contribution from all connections in the completion and uses the total values to test the economic limits. Note that a connection can only belong to one completion. In addition, completions can be used instead of connections in the WELOPEN and WPIMULT keywords if the completions have been defined by COMPLUMP for a well.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which the well LGR connection data are being defined. Note that the well name (LGRNAME) must have been declared previously using the WELSPECL keyword in the SCHEDULE section, otherwise an error may occur. If defaulted with I* the LGR on the WELSPECL keyword will be utilized.			Defined
3	I	A positive integer greater than or equal to zero and less than or equal to NX that defines the connection location in the I-direction. If set to zero or defaulted with I* then all connections in the I-direction that also satisfy J, K1 and K2 criteria are assigned the ICOMP completion number.			0
4	J	A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction. If set to zero or defaulted with I* then all connections in the J-direction that also satisfy I, K1 and K2 criteria are assigned the ICOMP completion number.			0

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	K1	A positive integer greater than or equal to one and less than or equal to NZ that defines the UPPER connection location in the K-direction. If set to zero or defaulted with I* then the upper most connection in the well is used.			0
6	K2	A positive integer greater than or equal to K1 and less than or equal to NZ that defines the LOWER connection location in the K-direction. If set to zero or defaulted with I* then the low most connection in the well is used.			0
7	ICOMP	An integer greater than or equal to one and less than or equal to MXCONS as defined on the WELLDIMS keyword in the RUNSPEC section, that defines the completion number of the currently defined set of connections. If I, J, K1, K2 are all set to zero or defaulted to I*, then all connections in the well have the same completion number of ICOMP.			None

Notes:

- 1) The keyword is followed by any number of records.
- 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.11: COMPLUPL Keyword Description

Multiple grid block connections can be defined on one record for vertical wells by assigning different values to K1 and K2, for deviated and horizontal wells this may not be possible and therefore each grid block connection must be separately defined by setting K1 equal to K2.

See also the COMPDATL keyword in the SCHEDULE section.

Example

The following example defines the connections for two vertical oil wells using the COMPDATL keyword and the re-allocation of the connections to completions intervals using the COMPLMPL keyword.

```
--
--      WELL CONNECTION DATA FOR LGR WELLS
--
--      WELL      LGR      --- LOCATION ---  OPEN  SAT   CONN   WELL   D      DIR
--      NAME      NAME      II  JJ  K1  K2  SHUT  TAB   FACT   DIA    FACT  PEN
COMPDATL
      OP01      OP01LGR      1*  1*  20  56  OPEN  1*    1*    0.708  3*    Z /
      OP01      OP01LGR      1*  1*  75 100  SHUT  1*    1*    0.708  3*    Z /
      OP02      OP02LGR      35  96  75 100  OPEN  1*    1*    0.708  3*    Z /
/
--
--      ASSIGN WELL CONNECTIONS TO COMPLETIONS
--
--      WELL      LGR      --- LOCATION ---  COMPL
--      NAME      NAME      II  JJ  K1  K2  NO.
COMPLMPL
      OP01      OP01LGR      1*  1*  20  56      1      / COMPLETION NO. 01
      OP01      OP01LGR      1*  1*  75 100      2      / COMPLETION NO. 02
      OP02      OP02LGR      1*  1*  75  85      1      / COMPLETION NO. 01
      OP02      OP21LGR      1*  1*  86 100      2      / COMPLETION NO. 02
/
```

Here the well OP01 connections (14, 13, 20) to (14, 13, 56) are assigned to completion number one and connections (14, 13, 75) to (14, 13, 100) are assigned to completion number two. Well OP02 has only one set of connection data from cells (35, 96, 75) to cells (35, 96, 100), but they have split into two separate completion intervals, with connections (35, 96, 75) to (35, 96, 85) assigned to completion interval number one and (35, 96, 86) to (35, 96, 100) to completion number two.

12.3.30 COMPLUMP – ASSIGN WELL CONNECTIONS TO COMPLETIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COMPLUMP keyword assigns connections, as defined by the COMPDAT keyword in the SCHEDULE section, to completion intervals. This “lumping” of the connections to various completion intervals allows automatic workovers and economic criteria to be applied to the completions (that is a set of connections) as opposed to the connections. This allows for a more realistic approach for workovers operations.

For example, if the water cut criteria for working over a well was set to 95%, and the average grid block connection thickness was one meter, then once a well’s water cut reached 95% the worst offending one meter connection would be shut-in. If the well’s actual perforation interval was 10 meters and the 10 connections were lumped as one completion, then when the water cut limit of 95% is reach, the completion would be shut-in, that is all of the 10 connections within the completion would be shut-in.

As the keyword is used to lump connections into a completions, the simulator adds together the contribution from all connections in the completion and uses the total values to test the economic limits. Note that a connection can only belong to one completion. In addition, completions can be used instead of connections in the WELOPEN and WPIMULT keywords if the completions have been defined by COMPLUMP for a well.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	I	A positive integer greater than or equal to zero and less than or equal to NX that defines the connection location in the I-direction. If set to zero or defaulted with I* then all connections in the I-direction that also satisfy J, K1 and K2 criteria are assigned the ICOMP completion number.			0
3	J	A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction. If set to zero or defaulted with I* then all connections in the J-direction that also satisfy I, K1 and K2 criteria are assigned the ICOMP completion number.			0
4	K1	A positive integer greater than or equal to one and less than or equal to NZ that defines the UPPER connection location in the K-direction. If set to zero or defaulted with I* then the upper most connection in the well is used.			0
5	K2	A positive integer greater than or equal to K1 and less than or equal to NZ that defines the LOWER connection location in the K-direction. If set to zero or defaulted with I* then the low most connection in the well is used.			0

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
6	ICOMP	An integer greater than or equal to one and less than or equal to MXCONS as defined on the WELLDIMS keyword in the RUNSPEC section, that defines the completion number of the currently defined set of connections. If I, J, K1, K2 are all set to zero or defaulted to I*, then all connections in the well have the same completion number of ICOMP.			None

Notes:

- 1) The keyword is followed by any number of records.
- 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.12: COMPLUMP Keyword Description

Multiple grid block connections can be defined on one record for vertical wells by assigning different values to K1 and K2, for deviated and horizontal wells this may not be possible and therefore each grid block connection must be separately defined by setting K1 equal to K2.

See also the COMPDAT keyword in the SCHEDULE section.

Example

The following example defines the connections for two vertical oil wells using the COMPDAT keyword and the re-allocation of the connections to completions intervals using the COMPLUMP keyword.

```
--
--      WELL CONNECTION DATA
--
-- WELL  --- LOCATION --- OPEN  SAT  CONN  WELL  KH  SKIN  D  DIR
-- NAME  II  JJ  K1  K2  SHUT  TAB  FACT  DIA  FACT  FACT  FACT  PEN
COMPDAT
OP01      1*  1*  20  56  OPEN  1*   1*   0.708  1*   0.0  1*   'Z' /
OP01      1*  1*  75 100  SHUT  1*   1*   0.708  1*   0.0  1*   'Z' /
OP02      35  96  75 100  OPEN  1*   1*   0.708  1*   0.0  1*   'Z' /
/
--
--      ASSIGN WELL CONNECTIONS TO COMPLETIONS
--
-- WELL  --- LOCATION --- COMPL
-- NAME  II  JJ  K1  K2  NO.
COMPLUMP
OP01      1*  1*  20  56  1 / COMPLETION NO. 01
OP01      1*  1*  75 100  2 / COMPLETION NO. 02
OP02      1*  1*  75  85  1 / COMPLETION NO. 01
OP02      1*  1*  86 100  2 / COMPLETION NO. 02
/
```

Here the well OP01 connections (14, 13, 20) to (14, 13, 56) are assigned to completion number one and connections (14, 13, 75) to (14, 13, 100) are assigned to completion number two. Well OP02 has only one set of connection data from cells (35, 96, 75) to cells (35, 96, 100), but they have split into two separate completion intervals, with connections (35, 96, 75) to (35, 96, 85) assigned to completion interval number one and (35, 96, 86) to (35, 96, 100) to completion number two.

12.3.31 COMPOFF – DEACTIVATE NETWORK AUTOMATIC COMPRESSORS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COMPOFF keyword deactivates network automatic compressors defined via the GASFCOMP keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.32 COMPORD - DEFINE WELL CONNECTION ORDERING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COMPORD keyword defines how the well connection data entered on the COMPDAT keyword in the SCHEDULE section are to be ordered for a well.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	COMPORD	A character string that defines the method for ordering the well connections given on the COMPDAT keyword, and should be set to DEPTH, INPUT, or TRACK. 1) DEPTH: The connections are ordered by a connection's true vertical depth from the shallowest to the deepest. If multiple connections are at the same depth then these connections are sub ordered by the sequence they were entered on the COMPDAT keyword. 2) INPUT: This option results in the connections being ordered in the same sequence as entered via the COMPDAT keyword. In this case the connections should be declared in the correct sequence, starting with the connection nearest the well head and then working along the wellbore towards the bottom or toe of the well. 3) TRACK: This option enables OPM Flow to trace the well connections through the grid to obtain the correct order for the connections. If the supplied COMPDAT indicates the well is vertical (via the DIRECT variable being equal to Z on the COMPDAT keyword) then the DEPTH option will be applied instead. <u>All options are now supported by OPM Flow.</u>			TRACK

Notes:
1) The keyword is followed by any number of records.
2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.13: COMPORD Keyword Description

See also the COMPDAT keyword in the SCHEDULE section.

Note

If visual inspection of the well trajectories in the model indicate problematic or unrealistic well connections, the options on this keyword may be useful in correcting the issue.

Example

The following example defines the connections for two vertical oil wells using the COMPDAT keyword and the COMPORD to defined the connection ordering for the wells.

```

---
--      WELL CONNECTION DATA
--
-- WELL  --- LOCATION --- OPEN  SAT   CONN  WELL  KH   SKIN  D   DIR
-- NAME   II  JJ  K1  K2   SHUT  TAB   FACT  DIA  FACT  FACT  FACT  PEN
COMPDAT
OP01      1*  1*  20  56   OPEN  1*   1*   0.708  1*   0.0   1*   'Z' /
OP01      1*  1*  75 100   SHUT  1*   1*   0.708  1*   0.0   1*   'Z' /
OP02      35  96  75 100   OPEN  1*   1*   0.708  1*   0.0   1*   'Z' /
--
--      DEFINE WELL CONNECTION ORDERING
--
-- WELL  COMPL
-- NAME  ORDER
COMPORD
OP01    DEPTH
OP02    DEPTH
/

```

The DEPTH option has been chosen because both wells are vertical. Also one could use the following format instead for the COMPORD:

```

--
--      DEFINE WELL CONNECTION ORDERING
--
-- WELL  COMPL
-- NAME  ORDER
COMPORD
*      DEPTH
/

```

as both wells should utilize the DEPTH option. This version would set all wells in the model to DEPTH connection ordering.

12.3.33 COMPRIV – DEFINE GRID CELL CONNECTIONS TO A RIVER

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COMPRIV keyword defines grid cell connections to a river, for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.34 COMPRP – Re-SCALE FLUID SATURATIONS OF WELL CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COPMPRP keyword re-scales the fluid saturations of a well’s connection to the grid block.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.35 COMPRPL – RE-SCALE FLUID SATURATIONS OF WELL LGR CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COPMPRPL keyword re-scales the fluid saturations of a well's connection to an LGR grid block, for when the Local Grid Refinement ("LGR") option has been activated by the LGR keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.36 COMPSEGL – DEFINE WELL CONNECTIONS FOR MULTI-SEGMENT WELLS IN A LGR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COMSEGL keyword defines how a multi-segment well is connected to the reservoir by defining or modifying existing well connections in an LGR. Note that well must have been previously define by the WELSPECL keyword in the SCHEDULE section and the well connections must have been previously defined via the COMPDATL keyword in the SCHEDULE section. The COMPSEGL keyword should be repeated for each multi-segment well in the model.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-1	WELNAME	A character string of up to eight characters in length that defines the well name for which a multi-segment well is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECL keyword in the SCHEDULE section, otherwise an error may occur.			None
1-2	/	Record terminated by a "/"			Not Applicable
2-1	LGRNAME	A character string of up to eight characters in length that defines the name of the local grid refinement for which the well is assigned to.			None
2-2	I	A positive integer greater than or equal to one and less than or equal to NX that defines the connection location in the I-direction.			None
2-3	J	A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction.			None
2-4	K	A positive integer greater than or equal to zero and less than or equal to NZ that defines the connection location in the K-direction.			None
2-5	IBRANCH	A positive integer greater than or equal to one and less than or equal to MXBRAN on WSEGDIMS keyword in the RUNSPEC section that defines the branch number of the defined I, J and K connection.			None
2.6	DEPTH1	DEPTH1 is a real positive value that defines the length of the tubing from the tubing head or wellhead at the surface to the <u>start</u> of the connection in the I, J, K cell.			None
		feet	m	cm	
2-7	DEPTH2	DEPTH2 is a real positive value that defines the length of the tubing from the tubing head or wellhead at the surface to the end of the connection in the I, J, K cell.			None
		feet	m	cm	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
2-8	DIRECT	A one letter character string that defines the orientation of the connections and should be set to either X, Y, or Z. The direction of connections also determines the length of the connection The default value is for a vertical connection, that is DIRECT is defaulted to Z.			Z
2-9	IEND	IEND is positive or negative integer, that is not equal to zero that is set to one of the following: 1) a value between -NX and +NX that is not equal to zero that defines the last connection location in the I-direction, 2) a value between -NY and +NY that is not equal to zero that defines the last connection location in the J-direction, or 3) a value between -NZ and +NZ that is not equal to zero that defines the last connection location in the K-direction, that defines the end of the range of the connections depending on the value of DIRECT. For example, if DIRECT is equal to Y or J then the IEND will be associated with the J-direction. The value may be positive or negative but must be calculated to remain within the grid. For example for NY is set 100 on the DIMENS keyword in the RUNSPEC section and J on this record set to 50, then IEND must range between -49 to +50. Currently this option is not supported by OPM Flow.			None
2-10	DEPTH3	DEPTH3 is a real positive value that defines the datum depth for this set of connection, normally taken as the mid-point of the perforations associated with this set of connections. Currently this option is not supported by OPM Flow.			None
		feet	m	cm	
2-11	LENGTH	LENGTH is a real positive value that defines the length of the well for this set of completions that is used in thermal calculations.. Currently this option is not supported by OPM Flow.			None
		feet	m	cm	
2-12	ISEG	A real positive values equal to or greater than zero that defines the coordinate in the x-direction of the nodal point of this segment that is used for display purposes only. Currently this option is not supported by OPM Flow.			None
		feet	m	cm	
2-13	/	Record terminated by a "/"			Not Applicable

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: <div>1) Each multi-segment wells must be defined by a separate COMPSEGL keyword that consists of two records, with entries 1-1 to 1-2 representing record one items and 2-1 to 2-13 representing record number two items in the “No.” column in this table.</div> <div>2) Record number two of the keyword, items 2-1 to 2-13 is followed by up to MXCONS records as declared on the WSEGDIMS keyword in the RUNSPEC section.</div> <div>3) Each of the records are terminated by a “/” and is explicitly shown in the above rows and the keyword should be terminated by a “/”.</div>					

Table 12.14: COMPSEGL Keyword Description

The total number of wells and completions should be defined via the WELLSDIMS keyword and the number of multi-segment wells and completions should be declared on the WSEGDIMS keyword, both keywords are in the RUNSPEC section.

See also the WELSPECL keyword to define wells in an LGR, the COMPDATL keyword to define the well connections for both ordinary wells and multi-segment wells with an LGR, and the COMPSEGS keyword to define a multi-segment connections in the global grid. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the completions for two oil producing segment oil wells (OP01 and OP02) using the COMPSEGS keywords.

```
--      COMPLETION SEGMENT SPECIFICATION DATA
--
-- WELL
-- NAME
COMPSEGS
OP01
--      LGR  --LOCATION--  BRAN  TUBING  NODAL  DIR  LOC  MID  COMP  ISEG
--      NAME  II  JJ  K1  NO  LENGTH  DEPTH  PEN  I, J, K  PERFS  LENGTH
LGR01 10 10 1 1 2512.5 2525.0
LGR01 10 10 2 1 2525.0 2550.0
LGR01 10 10 3 1 2550.0 2575.0
LGR01 10 10 4 1 2575.0 2600.0
LGR01 10 10 5 1 2600.0 2625.0
LGR01 10 10 6 1 2625.0 2650.0
LGR01 9 10 2 2 2637.5 2837.5
LGR01 8 10 2 2 2837.5 3037.5
LGR01 7 10 2 2 3037.5 3237.5
LGR01 6 10 2 2 3237.5 3437.5
LGR01 5 10 2 2 3437.5 3637.5
/
```

Note that the COMPDATL keyword in the SCHEDULE section must also be defines for this well.

12.3.37 COMSEGS – DEFINE WELL CONNECTIONS FOR MULTI-SEGMENT WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The COMSEGS keyword defines how a multi-segment well is connected to the reservoir by defining or modifying existing well connections. Note that well must have been previously define by the WELSPECS keyword in the SCHEDULE section and the well connections must have been previously defined via the COMPDAT keyword in the SCHEDULE section

The COMSEGS keyword should be repeated for each multi-segment well in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-1	WELNAME	A character string of up to eight characters in length that defines the well name for which a multi-segment well is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
1-2	/	Record terminated by a "/"			Not Applicable
2-1	I	A positive integer greater than or equal to one and less than or equal to NX that defines the connection location in the I-direction.			None
2-2	J	A positive integer greater than or equal to zero and less than or equal to NY that defines the connection location in the J-direction.			None
2-3	K	A positive integer greater than or equal to zero and less than or equal to NZ that defines the connection location in the K-direction.			None
2-4	IBRANCH	A positive integer greater than or equal to one and less than or equal to MXBRAN on WSEGDIMS keyword in the RUNSPEC section that defines the branch number of the defined I, J and K connection.			None
2-5	DEPTH1	DEPTH1 is a real positive value that defines the length of the tubing from the tubing head or wellhead at the surface to the <u>start</u> of the connection in the I, J, K cell.			None
		feet	m	cm	
2-6	DEPTH2	DEPTH2 is a real positive value that defines the length of the tubing from the tubing head or wellhead at the surface to the end of the connection in the I, J, K cell.			None
		feet	m	cm	
2-7	DIRECT	A one letter character string that defines the orientation of the connections and should be set to either X, Y, or Z. The direction of connections also determines the length of the connection The default value is for a vertical connection, that is DIRECT is defaulted to Z. Currently this option is not supported by OPM Flow.			Z

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
2-8	IEND	IEND is positive or negative integer, that is not equal to zero that is set to one of the following: 1) a value between -NX and +NX that is not equal to zero that defines the last connection location in the I-direction, 2) a value between -NY and +NY that is not equal to zero that defines the last connection location in the J-direction, or 3) a value between -NZ and +NZ that is not equal to zero that defines the last connection location in the K-direction, that defines the end of the range of the connections depending on the value of DIRECT. For example, if DIRECT is equal to Y or J then the IEND will be associated with the J-direction. The value may be positive or negative but must be calculated to remain within the grid. For example for NY is set 100 on the DIMENS keyword in the RUNSPEC section and J on this record set to 50, then IEND most range between -49 to +50. Currently this option is not supported by OPM Flow.			None
2-9	DEPTH3	DEPTH3 is a real positive value that defines the datum depth for this set of connection, normally taken as the mid-point of the perforations associated with this set of connections. Currently this option is not supported by OPM Flow.			None
		feet	m	cm	
2-10	LENGTH	LENGTH is a real positive value that defines the length of the well for this set of completions that is used in thermal calculations.. Currently this option is not supported by OPM Flow.			None
		feet	m	cm	
2-11	ISEG	A real positive values equal to or greater than zero that defines the coordinate in the x-direction of the nodal point of this segment that is used for display purposes only. Currently this option is not supported by OPM Flow.			None
		feet	m	cm	
2-12	/	Record terminated by a “/”			Not Applicable
Notes:					
1) Each multi-segment wells must be defined by a separate COMPSEGS keyword that consists of two records, with entries 1-1 to 1-2 representing record one items and 2-1 to 2-12 representing record number two items in the “No.” column in this table.					
2) Record number two of the keyword, items 2-1 to 2-12 is followed by up to MXCONS records as declared on the WSEGDIMS keyword in the RUNSPEC section.					
3) Each of the records are terminated by a “/” and is explicitly shown in the above rows and the keyword should be terminated by a “/”.					

Table 12.15: COMPSEGS Keyword Description

The total number of wells and completions should be defined via the WELLSDIMS keyword and the number of multi-segment wells and completions should be declared on the WSEGDIMS keyword, both keywords are in the RUNSPEC section.

See also the WELSPECS keyword to define wells, the COMPDAT keyword to define the well connections for both ordinary wells and multi-segment wells, and the COMPSEGL keyword to define a multi-segment connections in a LGR. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the completions for two oil producing segment oil wells (OP01 and OP02) using the COMPSEGS keywords.

```
--          COMPLETION SEGMENT SPECIFICATION DATA
--
-- WELL
-- NAME
COMPSEGS
OP01
--          --LOCATION--  BRAN  TUBING  NODAL  DIR  LOC  MID  COMP  ISEG
--          II  JJ  K1  NO    LENGTH  DEPTH  PEN  I, J, K  PERFS  LENGTH
--          10  10  1    1    2512.5  2525.0
--          10  10  2    1    2525.0  2550.0
--          10  10  3    1    2550.0  2575.0
--          10  10  4    1    2575.0  2600.0
--          10  10  5    1    2600.0  2625.0
--          10  10  6    1    2625.0  2650.0
--
--          9  10  2    2    2637.5  2837.5
--          8  10  2    2    2837.5  3037.5
--          7  10  2    2    3037.5  3237.5
--          6  10  2    2    3237.5  3437.5
--          5  10  2    2    3437.5  3637.5
/
--          COMPLETION SEGMENT SPECIFICATION DATA
--
-- WELL
-- NAME
COMPSEGS
OP02
--          --LOCATION--  BRAN  TUBING  NODAL  DIR  LOC  MID
--          II  JJ  K1  NO    LENGTH  DEPTH  PEN  I, J, K  PERFS
--          1  9  3    1    2662.5  2862.5
--          1  8  3    1    2862.5  3062.5
--          1  7  3    1    3062.5  3262.5
--          1  6  3    1    3262.5  3462.5
--          1  5  3    1    3462.5  3662.5
--
--          2  10  5    2    2712.5  2912.5
--          2  10  5    2    2912.5  3112.5
--          4  10  5    2    3112.5  3312.5
--          5  10  5    2    3312.5  3512.5
--          6  10  5    2    3512.5  3712.5
--
--          1  9  6    3    2737.5  2937.5
--          1  8  6    3    2937.5  3137.5
--          1  7  6    3    3137.5  3337.5
--          1  6  6    3    3337.5  3537.5
--          1  5  6    3    3537.5  3737.5
/
```

Note that the COMPDAT keyword in the SCHEDULE section must also be defined for these two wells.

12.3.38 COMPVE – RE-DEFINE WELL CONNECTION DEPTHS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COMPVE keyword is used to re-define the well connection depths in the global grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.39 COMPVEL – Re-DEFINE Well LGR Connection Depths

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The COMPVEL keyword is used to re-define the well connection depths in a Local Grid Refinement (“LGR”) grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.40 CPIFACT – DEFINE WELL CONNECTION TRANSMISSIBILITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The CPIFACT keyword is used to define well connection transmissibility multipliers for well connections to the global grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.41 CPIFACTL – DEFINE WELL CONNECTION TRANSMISSIBILITY MULTIPLIERS IN A LGR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The CPIFACT keyword is used to define well Local Grid Refinement (“LGR”) connection transmissibility multipliers for well connections to a LGR, for when the LGR option has been invoked by the LGR keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.42 CSKIN – RE-DEFINE WELL CONNECTION SKIN FACTORS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, CSKIN, is used to re-define a well's connection skin factors and as such will result in the well's connection transmissibility factors being updated accordingly.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.43 DATES – ADVANCE SIMULATION BY REPORTING DATE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword advances the simulation to a given report date after which additional keywords may be entered to instruct OPM Flow to perform additional functions via the SCHEDULE section keywords, or further DATES data sets or keywords may be entered to advance the simulator to the next report date.

If the DATES keyword is to be used during the simulation, then the START keyword in the RUNSPEC section must be declared to set the start date for the run.

No.	Name	Description	Default
1	DAY	A positive integer that defines the day of the month for the data set, the value should be greater than or equal to one and less than or equal to 31.	None
2	MONTH	Character string for the month for the data set and should be one of the following 'JAN', 'FEB', 'MAR', 'APR', 'MAY', 'JUN', 'JUL' (or 'JLY'), 'AUG', 'SEP', 'OCT', 'NOV', or 'DEC'	None
3	YEAR	A positive four digit integer value representing the year for the data set, which must be specified fully by four digits, that is 1986.	None
4	TIME	A numeric character string that defines the time for the data set in the form of: HH;MM:SS:SSSS The default value means in most cases this parameter can be defaulted. TIME is normally used when detailed DST matching is performed to enable the pressures and rates to be stated at specific dates and times.	00:00:00
Notes: <ol style="list-style-type: none"> 1) The keyword is followed by a number of data sets (or rows) representing one DATE record per row. 2) Each record (or row) is terminated by a "/" and the keyword is terminated by a "/". 			

Table 12.16: DATES Keyword Description

Note that since OPM Flow uses the standard Gregorian calendar and therefore leap years are accounted for in the DATES keyword. Thus, it is more accurate to use the DATES keyword to progress the simulator through time if one is matching actual production data.

See also the TIME and TSTEP keywords in the SCHEDULE section.

Whenever possible it is a good idea to always set the start date to be at the beginning of the year, as like most simulators, OPM Flow reports are always stated at the number of days from the start date (and sometimes at a given date). If the start date is at the beginning of the year, then calculating the actual date is relatively straight forward and simple.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Examples

Given a start date of January 1, 2020 set via the START keyword in the RUNSPEC section, the following example advances the simulator from the start date of January 1, 2020 to January 1, 2021, using quarterly reporting time steps.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
-- -----
-- SCHEDULE SECTION - 2020-01-01
-- -----
RPTSCHED      'WELLS=2'      'WELSPECS'      'CPU=2'      FIP=2'      /
DATES
2 JAN 2020 /
/
RPTSCHED      'NOTHING'      /
DATES
1 APR 2020 /
1 JUL 2020 /
1 OCT 2020 /
/
-- -----
-- SCHEDULE SECTION - 2021-01-01
-- -----
RPTSCHED      'WELLS=2'      'WELSPECS'      'CPU=2'      FIP=2'      /
DATES
1 JAN 2021 /
/
RPTSCHED      'NOTHING'      /
DATES
1 APR 2021 /
1 JUL 2021 /
1 OCT 2021 /
/
```

The above example writes out a series of report at the start of the run and then advances the simulation one day to January 2, 2020 and switches off the reporting. The simulation then advances to April 1, July 1 and October 1, 2020 with no further changes to the run. After October 1, 2020 reporting is switched on again to enable a report on January 1, 2021, which is then subsequently switched off after the January 1, 2021 report time step has been completed.

Note if one wishes to terminate the run at the end of year (as opposes to the beginning of the year and get a final report for the year, then the next example demonstrates the keyword sequence to enable this.

```

-----
-- SCHEDULE SECTION - 2021-01-01
-----
RPTSCHED
    'WELLS=2'      'WELSPECS'      'CPU=2'      FIP=2'      /

DATES
    2  JAN  2021  /
/

RPTSCHED
    'NOTHING'      /

DATES
    1  FEB  2021  /
    1  MAR  2021  /
    1  APR  2021  /
    1  MAY  2021  /
    1  JUN  2021  /
    1  JULY 2021  /
    1  AUG  2021  /
    1  SEP  2021  /
    1  OCT  2021  /
    1  NOV  2021  /
    1  DEC  2021  /
/
--
-- FINAL REPORT AND RESTART AT YEAR END
--
RPTSCHED
    'WELLS=2'      'WELSPECS'      'CPU=2'      FIP=2'      /

RPTRST
    'BASIC=2'      /

DATES
    31 DEC  2021  /
/

```

In the above example monthly reporting time steps have been used instead of quarterly and report is requested after the December 1, 2021 time step and is therefore written out on December 31, 2021.

12.3.44 DCQDEFN – DEFINE GAS DCQ UNITS AS RATE OR ENERGY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DCQDEFN keyword defines the DCQ units to be rate or energy (calorific value) when using the Gas Field Operation model and the Gas Calorific Value control option. The gas DCQ rates are controlled by the GASYEAR, GASPERIO, GDCQ, GASFTARG or GASFDECR keywords in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.45 DEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE

This keyword defines the debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See [DEBUG – Define the Debug Data to be Printed to File](#) in the GLOBAL section for a full description.

12.3.46 DELAYACT - DEFINE DELAYED ACTION KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The DELAYACT keyword defines a series of keywords that should be executed after an ACTION keyword has been triggered by the ACTION, ACTIONG, ACTIONR, ACTIONW, ACTIONS, or ACTIONX keywords.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.47 DIFFMMF – DEFINE DIFFUSIVITY MULTIPLIERS FOR MATRIX-FRACTURES

This keyword, DIFFMMF, defines the diffusivity multipliers for matrix-fractures for when the Dual Porosity option has been activated by either the DUALPORO or DUALPERM keywords, or the Coal Bed Methane option is selected by the COAL keyword, and the Diffusivity option has been activated by the DIFFUSE keywords; all four keywords are in the RUNSPEC section.

See [DIFFMMF – Define Diffusivity Multipliers for Matrix-Fractures](#) in the GRID section for a full description.

12.3.48 DIMPES – DEFINE IMPES DYNAMIC SOLUTION PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, DIMPES, defines the Implicit in Pressure Explicit Saturation (“IMPES”) dynamic solution parameters and results in the simulator switching from the current solution formulation to the IMPES formulation. OPM Flow uses a different numerical scheme which makes this keyword redundant; hence, OPM Flow ignores this keyword. It is documented here for completeness.

There is no data required for this keyword.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

Example

```
--
--      ACTIVATE THE IMPES SOLUTION OPTION
--
DIMPES
```

The above example switches on the IMPES solution option; however, this has no effect in OPM Flow input decks.

12.3.49 DIMPLICT – ACTIVATE FULLY IMPLICIT DYNAMIC SOLUTION FORMULATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, DIMPLICT, activates the Fully Implicit Formulation and results in the simulator switching from the current solution formulation to the fully implicit formulation. OPM Flow uses a different numerical scheme which makes this keyword redundant; hence, OPM Flow ignores this keyword. It is documented here for completeness.

There is no data required for this keyword.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

Example

```
--
--      ACTIVATES THE FULLY IMPLICIT SOLUTION OPTION
--
DIMPLICT
```

The above example switches on the fully implicit solution option; however, this has no effect in OPM Flow input decks.

12.3.50 DRILPRI – DEFINE PRIORITIZED DRILLING QUEUE PRIORITY PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, DRILPRI, defines the prioritized drilling queue priority parameters used in the priority formulae for this type of drilling queue.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.51 DRSDT – SOLUTION GAS (Rs) MAXIMUM RATE OF INCREASE PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

DRSDT defines the maximum rate at which the solution gas-oil ratio (R_s) can be increased in a grid cell. The keyword is similar in functionality to the DRSDTR keyword, that defines the maximum rate at which R_s can be increased in a grid cell by region. Both keywords should only be used if the OIL, GAS, and DISGAS keywords in the RUNSPEC section have been invoked to allow oil, gas and dissolved gas to be present in the model. The keyword only affects the behavior of an increasing R_s , for example when gas is being injected into an oil reservoir, and is subject to the availability of free gas and the ability of the undersaturated oil to adsorb this gas.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DRSDT1	<p>DRSDT1 is a real positive number that defines the maximum rate at which the solution gas-oil ratio is allowed to increase in a grid cell, that is the maximum rate the gas can dissolve into the available undersaturated oil.</p> <p>A value of zero means that Rs cannot increase and free gas cannot dissolve into the unsaturated oil in a grid cell. Alternatively a very large value of DRSDT1 allows Rs to increase rapidly until there is no free gas or the oil within the grid block is fully saturated.</p> <p>Note if the keyword is not present in the input deck then DRSDT1 is assumed to be a very large number resulting in complete re-solution of the gas into the available undersaturated oil.</p>			None
		Mscf/stb/d	sm ³ /sm ³ /day	scc/scc/day	
2	DRSDT2	<p>DRSDT2 is a defined character string that defines whether the DRSDT1 is applied to either all grid blocks or just those grid blocks containing free gas:</p> <p>1) ALL: means the DRSDT1 maximum rate at which Rs is allowed to increase in a grid cell is applied to all grid blocks.</p> <p>2) FREE: means the DRSDT1 maximum rate at which Rs is allowed to increase in a grid cell is applied to grid blocks only containing free gas.</p> <p>Note if the keyword is not present in the input deck then DRSDT2 is set to the default value of ALL.</p>			ALL

Notes:

1) The keyword is terminated by a “/”.

Table 12.17: DRSDT Keyword Description

Note this keyword can be used in history matching field performance to control the availability of the movable gas phase.

See also the VAPPAR keyword in the SOLUTION section and the DRSDTR, DRVDT and DRVDTR keywords in the SCHEDULE section that controls how vaporized oil is treated and the rate at which the dissolved phase ratio increases within a grid block.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Examples

The first example prevents the solution gas-oil ratio from increasing and applies this to all grid cells.

```
--
--      SOLUTION GAS (RS) MAXIMUM RATE OF INCREASE FOR MODEL
--
DRSDT
--      MAX RS      ALL/FREE
--      DRSDT1      DRSDT2
--      -----
--      0.000      ALL
```

And the second example below applies 0.005 Mscf/stb/d as the maximum rate at which the solution gas-oil ratio is allowed to increase in a grid cell, and applies this to only cells containing free gas.

```
--
--      SOLUTION GAS (RS) MAXIMUM RATE OF INCREASE FOR MODEL
--
DRSDT
--      MAX RS      ALL/FREE
--      DRSDT1      DRSDT2
--      -----
--      0.0005      FREE
```

Again, the keyword parameters when applied are subject to the availability of free gas and the ability of the undersaturated oil to adsorb this gas.

12.3.52 DRSDTCON – CO₂ CONVECTIVE DISSOLUTION PARAMETER (χ)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DRSDTCON defines a dimensionless parameter (χ) that controls convective dissolution of carbon dioxide (CO₂) into in situ brine within a grid cell, as described by Sandve et al.¹⁷⁴, based on an assumption of vertical equilibrium¹⁷⁵. The keyword internally causes the simulator to calculate the solution gas-oil ratio (Rs), as normally defined by the DRSDTI parameter on the DRSDT keyword in the SCHEDULE section, making the DRSDT keyword redundant.

The keyword should only be used if the CO2STORE keyword in the RUNSPEC section has been activated to model CO₂ storage via OPM Flow's CO₂-Brine PVT model. Both of these keywords are OPM Flow specific keywords. The DRSDTCON keyword must be used together with the GAS and OIL keywords in the RUNSPEC section to declare that the gas and oil phases are present in the model. Internally the simulator refers to the oil phase as the brine phase and the gas phase to the CO₂. Input / output keywords need to be consistent with this assumption. i.e., SGOF (gas-oil relative permeability) is used for the CO₂-Brine relative permeability, FOIP (Field Oil-In-Place) shows the total amount of brine in the reservoir, etc.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DRSDTCON	<p>DRSDTCON is a real positive number that defines a dimensionless parameter (χ) that controls convective dissolution of CO₂ into in situ brine within a grid cell.</p> <p>A value of zero means that convective dissolution of CO₂ into in situ brine does not occur and free CO₂ cannot dissolve into the brine in a grid cell. Alternatively a none zero value of DRSDTCON allows convective dissolution of CO₂.</p> <p>Note if the CO2STORE keyword is present but the DRSDTCON is absent in the input deck, then convective dissolution of CO₂ into in situ brine does not occur.</p>			0.0
		dimensionless	dimensionless	dimensionless	

Notes:

I) The keyword is terminated by a “/”.

Table 12.18: DRSDTCON Keyword Description

The dissolution rate¹⁷⁶, F, in kg/(m²s) is defined as:

$$F = \chi \left(\frac{c_{max} K_z \Delta \rho_c g}{\mu} \right) \quad (12.13)$$

¹⁷⁴ Tor Harald Sandve I, Sarah E. Gasda, Atgeirr Rasmussen, and Alf Birger Rustad. Convective dissolution in field scale CO₂ storage simulation using the OPM Flow simulator. Submitted to TCCS 11 – Trondheim Conference on CO₂ Capture, Transport and Storage Trondheim, Norway – June 21-23, 2021.

¹⁷⁵ Since the oil phase represents the brine phase phase and the gas phase is the CO₂ phase, then effectively the Rs (DRSDT) models the maximum rate at which CO₂ can dissolve into the brine phase. Thus, there is no need to enter data for the DRSDT keyword as this is computed internally.

¹⁷⁶ Elenius, M. T., Nordbotten, J. M., & Kalisch, H. (2014). Convective mixing influenced by the capillary transition zone. Computational Geosciences, 18(3-4), 417-431

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Where:

- χ = a non-dimensional parameter controlling the dissolution,
- C_{\max} = the maximum concentration at the solubility limit,
- K_z = the vertical permeability,
- $\Delta\rho_c$ = the difference of the brine density at maximum amount of dissolved CO_2 and the density without dissolved CO_2 .
- g = the gravity constant, and
- μ = the viscosity.

Now in the standard black oil model the solution gas oil ratio (R_s) is given by:

$$R_s = \frac{\text{Volume of Gas}_{ref}}{\text{Volume of Oil}_{ref}} \quad (12.14)$$

and relating R_s to mass we have:

$$R_s = \left(\frac{\chi_o^g}{1 - \chi_o^g} \right) \left(\frac{\rho_{o,ref}}{\rho_{g,ref}} \right) \quad (12.15)$$

Where:

- χ_o^g = the mass fraction of gas in the oil phase,
- $\rho_{o,ref}$ = density of oil at reference conditions,
- $\rho_{g,ref}$ = density of gas at reference conditions,

In the black oil model, the dissolution rate (as defined by the DRSDT keyword) is defined as the maximum rate at which the solution gas-oil ratio (R_s) can be increased in a grid cell per time. Thus, in order to convert equation (12.13) into a black oil formulation we first need to replace the maximum concentration at the solubility limit used in the equation (12.13)) with its black oil equivalent, $R_{s,sat}$. where $R_{s,sat}$ is defined as:

$$\begin{aligned} R_{s,sat} &= \frac{V_{CO_2,max,ref}}{V_{brine,ref}} \\ &= \frac{m_{CO_2,max}}{V_{brine} B_{brine} \rho_{CO_2,ref}} \end{aligned} \quad (12.16)$$

Where:

- $m_{CO_2,max}$ = the mass of CO_2 at the maximum solubility limit, and
- B_{brine} = the brine formation volume factor

The next step is to convert F in equation (12.13) from $\text{kg}/(\text{m}^2\text{s})$ to change in R_s (gas-oil ratio at reference conditions) per day. This is done by multiplying the cell top face area (A) by a conversion factor $\tau=86,400$ (s/day), then dividing by the volume of the brine and the density of the CO_2 both at reference condition, that is:

$$\frac{\tau F A}{V_{brine,ref} \rho_{CO_2,ref}} = \frac{\tau F A}{V S_{brine,ref} \phi \rho_{CO_2,ref} B_{brine}} \quad (12.17)$$

Where:

- S_{brine} = the brine saturation within a cell,
- V = the cell volume, estimate by $V \approx A D_z$ in which D_z is the cell thickness and,
- ϕ = the cell's porosity.

Combining equations (12.16) and (12.17) to obtain the maximum dissolution rate, as per the DRSDT keyword in the SCHEDULE section in units of $\text{Sm}^3/(\text{Sm}^3/\text{day})$, we obtain:

$$DRSDT = \chi \left(\tau \frac{c_{max} K_z \Delta \rho_c g}{\mu S_{brine} D_z \phi} \right) \quad (12.18)$$

The value of χ can either be estimated from historical data, from fine-scale simulation, or from laboratory tests¹⁷⁷. It typically varies from 0.01 - 0.1 depending on reservoir properties. Elenius et al.¹⁷⁸ states that 0.04 is a reasonable value for χ for the Utsira formation.

Note

In the commercial simulator a constant or regional value for DRSDT can be given as an input parameter. The DRSDT can be used to include the effect of convective mixing as shown by Thibeau and Dutin¹⁷⁹.

OPM Flow's approach differs from this in that the DRSDT value is computed internally and is dependent on both the static and dynamic cell properties.

Example

The example below is identical to the one shown under the CO2STORE keyword in the RUNSPEC section, and is repeated here for convenience. In the RUNSPEC section one declares that the carbon dioxide storage model is active for the run to account for both carbon dioxide and water phase solubility using OPM Flow's CO₂-Brine PVT model.

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
-- =====
-- FLUID TYPES AND TRACER OPTIONS
--
--
-- OIL PHASE IS PRESENT IN THE RUN BUT IS THE BRINE PHASE FOR CO2STORE
--
OIL
--
-- GAS PHASE IS PRESENT IN THE RUN BUT IS THE CO2 PHASE FOR CO2STORE
--
GAS
--
-- ACTIVATE CO2 STORAGE IN THE MODEL (OPM FLOW CO2 STORAGE KEYWORD)
--
CO2STORE
```

¹⁷⁷ Taheri, A., Torsæter, O., Lindeberg, E., Hadia, N. J., & Wessel-Berg, D. (2018). Qualitative and quantitative experimental study of convective mixing process during storage of CO₂ in heterogeneous saline aquifers. *International Journal of Greenhouse Gas Control*, 71, 212-226.

¹⁷⁸ Elenius, M. T., Nordbotten, J. M., & Kalisch, H. (2014). Convective mixing influenced by the capillary transition zone. *Computational Geosciences*, 18(3-4), 417-431

¹⁷⁹ Thibeau, S., & Dutin, A. (2011). Large scale CO₂ storage in unstructured aquifers: Modeling study of the ultimate CO₂ migration distance. *Energy Procedia*, 4, 4230-4237.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

The second part of the example covers the data required for the PROPS section, in which the input keywords need to be consistent with the OIL phase referring to the Brine and the GAS to CO₂; that is SGOF (gas-oil relative permeability) is used for the CO₂-Brine relative permeability.

```
-- =====
--
-- PROPS SECTION
--
-- =====
PROPS
--
--      ROCK COMPRESSIBILITY
--
--      REFERENCE PRESSURE IS TAKEN FROM THE HCPV WEIGHTED RESERVOIR PRESSURE
--
--      REF PRES  CF
--      BARSA      1/BARSA
--      -----
ROCK
--      1.0000      1.0E-06 / ROCK COMPRESSIBILITY
--
--      GAS-OIL RELATIVE PERMEABILITY TABLES (SGOF) - CO2STORE PHASES
SGOF
--      SG          KRG          KROG          PCOG
--      FRAC          PSIA
--      -----
--      0.00000      0.000000      1.00000      0.0000
--      1.00000      1.000000      0.00000      0.0000 / TABLE No. 01
--
--      SET SALINITY FOR ALL CELLS (OPM FLOW KEYWORD)
--
--      SALINITY
--      0.7 /
```

No other data is required to define the fluid and rock properties in the PROPS section as the data is generated from internal analytic correlations and models by the simulator. Finally, note that units for salinity are to the 10⁻³, thus for metric units we have 10⁻³ × kg-M/kg.

The third and final part of the example sets the maximum dissolution rate for convective CO₂ mixing via the DRSDTCON keyword in the SCHEDULE section.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
--      CO2 CONVECTIVE DISSOLUTION PARAMETER
--
--      DRSDTCON
--      CO2 CONV
--      DISSOLN
--      -----
--      0.04 /
```

See also the CO2STORE keyword in the RUNSPEC section for further information on OPM Flow's CO₂ storage facility.

12.3.53 DRSDTR – SOLUTION GAS (Rs) MAXIMUM RATE OF INCREASE PARAMETERS BY REGION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DRSDTR defines the maximum rate at which the solution gas-oil ratio (Rs) can be increased in a grid cell for various regions in the model. The keyword is similar in functionality to the DRSDT keyword, that defines the maximum rate at which Rs can be increased in a grid cell for all cells in the model. The number of DRSDTR vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the DRSDTR records to different grid blocks in the model is done via the PVTNUM keyword in the REGION section. One data set consists of one record or line which is terminated by a “/”.

DRSDTR should only be used if the OIL, GAS, and DISGAS keywords in the RUNSPEC section have been invoked to allow oil, gas and dissolved gas to be present in the model. The keyword only affects the behavior of an increasing Rs, for example when gas is being injected into an oil reservoir, and is subject to the availability of free gas and the ability of the undersaturated oil to adsorb this gas.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	DRSDT1	<p>DRSDT1 is a real positive number that defines the maximum rate at which the solution gas-oil ratio is allowed to increase in a grid cell, that is the maximum rate the gas can dissolve into the available undersaturated oil.</p> <p>A value of zero means that Rs cannot increase and free gas cannot dissolve into the unsaturated oil in a grid cell. Alternatively a very large value of DRSDT1 allows Rs to increase rapidly until there is no free gas or the oil within the grid block is fully saturated.</p> <p>Note if the keyword is not present in the input deck then DRSDT1 is assumed to be a very large number resulting in complete re-solution of the gas into the available undersaturated oil.</p>			None
		Mscf/stb/d	sm ³ /sm ³ /day	scc/scc/day	
2	DRSDT2	<p>DRSDT2 is a defined character string that defines whether the DRSDT1 is applied to either all grid blocks or just those grid blocks containing free gas:</p> <p>1) ALL: means the DRSDT1 maximum rate at which Rs is allowed to increase in a grid cell is applied to all grid blocks.</p> <p>2) FREE: means the DRSDT1 maximum rate at which Rs is allowed to increase in a grid cell is applied to grid blocks only containing free gas.</p> <p>Note if the keyword is not present in the input deck then DRSDT2 is set to the default value of ALL.</p>			ALL
Notes:					
1) The keyword is followed by NTPVT records as declared on the TABDIMS keyword in the RUNSPEC section.					
1) Each record is terminated by a “/” and there is no “/” terminator for the keyword.					

Table 12.19: DRSDTR Keyword Description

Note this keyword can be used in history matching field performance to control the availability of the movable gas phase.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

See also the VAPPAR keyword in the SOLUTION section and the DRSDT, DRVDT and DRVDTTR keywords in the SCHEDULE section that controls how vaporized oil is treated and the rate at which the dissolved phase ratio increases within a grid block.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness, as it is expected to be available in the next release of OPM Flow.

Examples

The first example prevents the solution gas-oil ratio from increasing and applies this to all regions for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to three.

```
--
--      SOLUTION GAS (RS) MAXIMUM RATE OF INCREASE BY REGION
--
DRSDTR
--      MAX RS      ALL/FREE
--      DRSDT1      DRSDT2
--      -----
--      0.0000      ALL /
--      0.0000      ALL /
--      0.0000      ALL /
```

The second example below prevents the solution gas-oil ratio from increasing and applies this to all grid cells in PVTNUM region one. For PVTNUM regions one and two the keyword applies 0.005 Mscf/stb/d as the maximum rate at which the solution gas-oil ratio is allowed to increase in a grid cell, and applies this to only cells containing free gas.

```
--
--      SOLUTION GAS (RS) MAXIMUM RATE OF INCREASE BY REGION
--
DRSDTR
--      MAX RS      ALL/FREE
--      DRSDT1      DRSDT2
--      -----
--      0.0000      ALL /
--      0.0005      FREE /
--      0.0005      FREE /
```

Again, the keyword parameters when applied are subject to the availability of free gas and the ability of the undersaturated oil to adsorb this gas.

12.3.54 DRVDT – SOLUTION OIL (RV) MAXIMUM RATE OF INCREASE PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

DRVDT defines the maximum rate at which the solution oil-gas ratio or condensate-gas ratio (Rv) can be increased in a grid cell. The keyword is similar in functionality to the DRVDTTR keyword, that defines the maximum rate at which Rv can be increased in a grid cell by region. Both keywords should only be used if the OIL, GAS, and VAPOIL (condensate) keywords in the RUNSPEC section have been invoked to allow oil, gas and condensate to be present in the model. The keyword only affects the behavior of an increasing Rv, for example when gas is being injected into a gas condensate reservoir as part of a gas re-cycling scheme, and is subject to the availability of free oil (condensate) and the ability of the undersaturated gas to adsorb this condensate.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DRVDTI	<p>DRVDTI is a real positive number that defines the maximum rate at which the solution oil-gas ratio is allowed to increase in a grid cell, that is the maximum rate at which the oil can dissolve into the available undersaturated gas.</p> <p>A value of zero means that Rv cannot increase and free oil cannot dissolve into the unsaturated gas in a grid cell. Alternatively a very large value of DRVDTI allows Rv to increase rapidly until there is no free oil or the gas within the grid block is fully saturated.</p> <p>Note if the keyword is not present in the input deck then DRVDTI is assumed to be a very large number resulting in complete re-solution of the oil into the available undersaturated gas.</p>			None
		stb/Mscf/d	sm ³ /sm ³ /day	scc/scc/day	
Notes:					
I) The keyword is terminated by a “/”.					

Table 12.20: DRVDT Keyword Description

Note this keyword can be used in history matching field performance to control the availability of the movable gas phase.

See also the VAPPARS keyword in the SOLUTION section and the DRVDTTR, DRSDT and DRSDTR keywords in the SCHEDULE section that controls how vaporized oil is treated and the rate at which the dissolved phase ratio increases within a grid block.

Example

The example prevents the solution oil-gas ratio from increasing.

```
--
--      SOLUTION OIL (RV) MAXIMUM RATE OF INCREASE FOR MODEL
--
DRVDT
--      MAX RV
--      DRVDT1
--      -----
--      0.000
```

Again, the keyword parameters when applied are subject to the availability of free oil and the ability of the undersaturated gas to adsorb this oil.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.55 DRVDTR – SOLUTION OIL (Rv) MAXIMUM RATE OF INCREASE PARAMETERS BY REGION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

DRVDTR defines the maximum rate at which the solution oil-gas ratio or condensate-gas ratio (Rv) can be increased in a grid cell for various regions in the model. The keyword is similar in functionality to the DRVDT keyword, that defines the maximum rate at which Rv can be increased in a grid cell for all cells in the model. The number of DRVDTR vector data sets is defined by the NTPVT parameter on the TABDIMS keyword in the RUNSPEC section and the allocation of the DRVDTR records to different grid blocks in the model is done via the PVTNUM keyword in the REGION section. One data set consists of one record or line which is terminated by a “/”.

This keyword should only be used if the OIL, GAS, and VAPOIL (condensate) keywords in the RUNSPEC section have been invoked to allow oil, gas and condensate to be present in the model. The keyword only affects the behavior of an increasing Rv, for example when gas is being injected into a gas condensate reservoir as part of a gas re-cycling scheme, and is subject to the availability of free oil (condensate) and the ability of the undersaturated gas to adsorb this condensate.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	DRVDTI	<p>DRVDTI is a real positive number that defines the maximum rate at which the solution oil-gas ratio is allowed to increase in a grid cell, that is the maximum rate at which the oil can dissolve into the available undersaturated gas.</p> <p>A value of zero means that Rv cannot increase and free oil cannot dissolve into the unsaturated gas in a grid cell. Alternatively a very large value of DRVDTI allows Rv to increase rapidly until there is no free oil or the gas within the grid block is fully saturated.</p> <p>Note if the keyword is not present in the input deck then DRVDTI is assumed to be a very large number resulting in complete re-solution of the oil into the available undersaturated gas.</p>			None
		stb/Mscf/d	sm ³ /sm ³ /day	scc/scc/day	

Notes:

- 1) The keyword is followed by NTPVT records as declared on the TABDIMS keyword in the RUNSPEC section.
- 1) Each record is terminated by a “/” and there is no “/” terminator for the keyword.

Table 12.21: DRVDTR Keyword Description

Note this keyword can be used in history matching field performance to control the availability of the movable gas phase.

See also the VAPPARS keyword in the SOLUTION section and DRVD, DRSDT, and DRSDTR keywords in the SCHEDULE section that controls how vaporized oil is treated and the rate at which the dissolved phase ratio increases within a grid block.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Examples

The first example prevents the solution oil-gas ratio from increasing and applies this to all regions for when NTPVT on the TABDIMS keyword in the RUNSPEC section is set to three.

```
--
--      SOLUTION OIL (RV) MAXIMUM RATE OF INCREASE PARAMETERS BY REGION
--
--      DRVDTR
--          MAX RV
--          DRVDT1
--          -----
--          0.000          /
--          0.000          /
--          0.000          /
```

The second example below prevents the solution oil-gas ratio from increasing and applies this to all grid cells in PVTNUM region one. For PVTNUM regions one and two the keyword applies 0.005 stb//Mscf/d as the maximum rate at which the solution oil-gas ratio is allowed to increase in a grid cell,

```
--
--      SOLUTION OIL (RV) MAXIMUM RATE OF INCREASE PARAMETERS BY REGION
--
--      DRVDTR
--          MAX RV
--          DRVDT1
--          -----
--          0.0000          /
--          0.0005          /
--          0.0005          /
```

Again, the keyword parameters when applied are subject to the availability of free oil and the ability of the undersaturated gas to adsorb this oil.

12.3.56 DUMPCUPL – ACTIVATE OUTPUT TO THE RESERVOIR COUPLING FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, DUMPCUPL, activates output to the Reservoir Coupling file from the reservoir coupling file in the master run for when reservoir coupling is invoked by the GRUPMAST and SLAVES keywords in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.57 DYNAMICR – DEFINE DYNAMIC REGION PARAMETERS

The DYNAMICR keyword marks the start of a Dynamic Region section and defines the parameters used for Dynamic Regions that allows for property and reporting regions to vary as the run progresses, based on the parameters and logic defined by this keyword and section. A Dynamic Region section is terminated by the ENDDYN keyword in the SOLUTION or SCHEDULE sections.

See [DYNAMICR – Start of Dynamic Region Parameter Definition](#) in the SOLUTION section for a full description.

12.3.58 ECHO – ACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns on echoing of all the input files to the print file; note that this keyword is activated by default and can subsequently be switched off by the NOECHO activation keyword.

See [ECHO – Activate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

12.3.59 END – DEFINE THE END OF THE INPUT FILE

This keyword marks the end of the input file and can occur in any section. Any keywords and data after the END keyword are ignored.

See [END – Define the End of the Input File](#) in the GLOBAL section for a full description.

12.3.60 ENDACTIO – END THE DEFINITION OF ACTION COMMANDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

The ENDACTIO keyword defines the end of a series of conditions that invoke run time processing of the ACTION series of keywords, namely: ACTION, ACTIONG, ACTIONR, ACTIONS, ACTIONW and ACTIONX. Only the ACTIONX keyword is implemented in OPM Flow as this keyword implements the ACTION, ACTIONG, ACTIONR, ACTIONS, ACTIONW functionality with greater flexibility. See the ACTIONX keyword in the SCHEDULE section for a full description of the ACTION facility.

There is no data required for this keyword and there is no terminating “/” for this keyword.

Example

The example shows the use of the ACTIONX and ENDACTIO keywords to test if the field's gas production rate is less than 600 MMscf/d after 2020 and to open up additional wells if this occurs.

```
--
-- START OF ACTIONX FIELD PHASE-2 DEVELOPMENT DEFINITION
--
ACTIONX
    PHASE2      1      /
    GGPR 'FIELD' < 600E3 AND /
    YEAR > 2020 /
/
-- WELL PRODUCTION STATUS
--
-- WELL      WELL  --LOCATION--  COMPLETION
-- NAME      STAT   I   J   K   FIRST LAST
WELOPEN
GP10        OPEN                      /
GP11        OPEN                      /
/
--
-- END OF ACTIONX FIELD PHASE-2 DEVELOPMENT DEFINITION
--
ENDACTIO
```

12.3.61 ENDBOX – DEFINE THE END OF THE BOX DEFINED GRID

This keyword marks the end of a previously defined BOX sub-grid as defined by a previously entered BOX keyword. The keyword resets the input grid to be the full grid as defined by the NX, NY, and NZ variables on the DIMENS keyword in the RUNSPEC section.

See [ENDBOX – Define the End of the BOX Defined Grid](#) in the GRID section for a full description.

12.3.62 ENDDYN– END OF DYNAMIC REGION PARAMETER DEFINITION

The ENDDYN keyword marks the end of a Dynamic Region section that was started with the DYNAMICR keyword in the SOLUTION or SCHEDULE sections. Dynamic Regions allow for property and reporting regions to vary as the run progresses, based on the parameters and logic defined within the section.

See [ENDDYN– End of Dynamic Region Parameter Definition](#) in the SOLUTION for a full description.

12.3.63 ENDFIN – END THE DEFINITION OF A LOCAL GRID REFINEMENT

ENDFIN defines the end of a Cartesian or radial local grid refinement (“LGR”) definition and a LGR property definition data set.

See [ENDFIN – End the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

12.3.64 ENDINC – DEFINE THE END OF AN INCLUDE FILE

This keyword marks the end of an include file specified on the INCLUDE keyword. When the ENDINC keyword is encountered in the INCLUDE file, input data is read from the next keyword in the current file. Any keywords and data after the ENDINC keyword in the INCLUDE file are ignored.

See [ENDINC – Define the End of an Include File](#) in the GLOBAL section for a full description.

12.3.65 ENDSKIP – DeACTIVATE SKIPPING OF KEYWORDS AND INPUT DATA

Turns off skipping of keywords that was activated by the SKIP, SKIP100, or SKIP300 keywords. Note that for each SKIP keyword activated there must be a corresponding ENDSKIP keyword.

See [ENDSKIP – DeActivate Skipping of Keywords and Input Data](#) in the GLOBAL section for a full description.

12.3.66 EPSDBGS – WRITE END-POINT DEBUG DATA TO THE DEBUG FILE (MULTIPLE)

This keyword, EPSDBGS, defines the end-point debug data for multiple grid blocks that should be written to the DEBUG file (*.DBG) for when the End-Point Scaling option has been activated by the ENDSCALE keyword in the RONSPEC section.

See [EPSDBGS - Write End-Point Debug Data to the DEBUG File \(Multiple\)](#) in the PROPS section for a full description.

12.3.67 EPSDEBUG - WRITE END-POINT DEBUG DATA TO THE DEBUG FILE (INDIVIDUAL)

This keyword, EPSDEBUG, defines the end-point debug data for individual grid blocks that should be written to the DEBUG file (*.DBG) for when the End-Point Scaling option has been activated by the ENDSCALE keyword in the RONSPEC section.

See [EPSDEBUG - Write End-Point Debug Data to the DEBUG File \(Individual\)](#) in the PROPS section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.68 EXCAVATE - SET THE STATUS OF A GRID BLOCK TO ACTIVE OR EXCAVATE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, EXCAVATE, sets the status of global and LGR grid blocks to active or excavate. Excavated grid blocks have all the transmissibilities set to zero thus disabling flow between the surrounding grid blocks.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.69 EXIT – EXIT SIMULATION FROM WITHIN AN ACTION SECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The EXIT keyword is part of OPM Flow's ACTION facility that allows for terminating the simulation for when a condition within an ACTIONX definition is satisfied. Invoking the keyword within an ACTIONX definition will result in the simulation terminating with an exit status code. The ACTION facility allows the user to enter computational logic to the simulation run based on the how the simulation run is proceeding – see the ACTIONX keyword in the SCHEDULE section.

Note

This is an OPM Flow specific keyword for the simulator's ACTION facility and will therefore cause an error if used in the commercial simulator.

No.	Name	Description	Default
I	EXITCODE	An optional integer that sets the exit code printed to the *.PRT file, if not not defined the default value of zero will be used.	0
Notes: I) The keyword is terminated by a "/".			

Table 12.22: EXIT Keyword Description

The EXIT keyword should only be used as part of an ACTIONX block, if found elsewhere in the input deck it will be ignored.

Examples

The first example uses the ACTIONX keyword to define a condition for when the Field Oil Production Rate ("FOPR") falls below 1,000 stb/d (or 1,000 m³) using the default value for the EXITCODE.

```
--
--      DEFINE START OF ACTIONX SECTION
--
ACTIONX
      'CHECK_FOPR' 100000      /
      FOPR < 1000             /
/
--
--      TERMINATE AND EXIT SIMULATION
--
EXIT
/

ENDACTIO
```

The next example terminates the simulation with EXITCODE one when the Field Pressure ("FPR") falls below 200 psia (or 200 barsa).

```
--
--      DEFINE START OF ACTIONX SECTION
--
ACTIONX
    'CHECK_FPR'  100000      /
    FPR < 200      /
/
--
--      TERMINATE AND EXIT SIMULATION
--
EXIT
    1      /

ENDACTIO
```

Note is is probably good practice to always set the EXITCODE to be able to identify the reason for the simulation stopping.

12.3.70 EXTRAPMS – ACTIVATE EXTRAPOLATION WARNING MESSAGES

The EXTRAPMS keyword activates extrapolation warning messages for when OPM Flow extrapolates the PVT or VFP tables. Frequent extrapolation warning messages should be investigated and resolved as this would indicate possible incorrect data and may result in the simulator extrapolating to unrealistic values.

See [EXTRAPMS – Activate Extrapolation Warning Messages](#) in the GLOBAL section for a full description.

12.3.71 FBHPDEF – DEFINE WELL DEFAULT BHP TARGET AND CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, FBHPDEF, defines the default well BHP target for production wells and the default BHP constraint for injection wells.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.72 FILEUNIT – ACTIVATE UNIT CONSISTENCY VERIFICATION

The FILEUNIT keyword defines the units of the of the data set, and is used to verify that the units in the input deck and any associated include files are consistent grid data. The keyword does not provide for the conversion between different sets of units.

See [FILEUNIT – Activate Unit Consistency Checking](#) in the GRID section for a full description.

12.3.73 FORMFEED – DEFINED THE PRINT FILE FORM-FEED CHARACTER

The FORMFEED keyword defines the form-feed character, or carriage control character, for the output print (*.PRT) run summary (*.RSM) files. The keyword should be place at the very top of the input file.

See [FORMFEED – Defined the Print File Form-Feed Character](#) in the GLOBAL section for a dull description.

12.3.74 GASBEGIN – DEFINE START OF ANNUAL SCHEDULING SECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GASBEGIN, defines the start of an Annual Scheduling section set of keywords used when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section. An Annual Scheduling section starts with the GASBEGIN keyword and is terminated by the GASEND keyword, with keywords in between used to control and write reports at selected times between the start and end of a contract period. Only one Annual Scheduling section is activate at a time, that is, a subsequent Annual Scheduling section overwrites the previous set of entries. To clear the current Annual Schedule section enter the GASBEGIN keyword followed by the GASEND keyword word with no other keywords in between.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.75 GASEND – DEFINE END OF ANNUAL SCHEDULING SECTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GASEND, defines the end of an Annual Scheduling section set of keywords used when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section. An Annual Scheduling section starts with the GASBEGIN keyword and is terminated by the GASEND keyword, with keywords in between used to control and write reports at selected times between the start and end of a contract period. Only one Annual Scheduling section is activate at a time, that is, a subsequent Annual Scheduling section overwrites the previous set of entries. To clear the current Annual Schedule section enter the GASBEGIN keyword followed by the GASEND keyword word with no other keywords in between.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.76 GASFCOMP – DEFINE AUTOMATIC GAS COMPRESSORS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GASFCOMP, defines automatic gas compressors for when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section and the Standard Network option has been specified by the GRUPTREE, GRUPNET and GNETINJE series of keywords in the SCHEDULE section. Automatic gas compressors are automatically switch on for a group if a group's gas production target cannot be satisfied. In addition, if a group's gas target is reduced then the automatic compressors are initially switch off to test that the reduced gas rate target can be met without compression, if not, compression is switched back on. Note that all automatic compressors are “switch on” when calculating a field's gas deliverability.

There is no data required for this keyword and there is no terminating “/” for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.77 GASFDECR – DEFINE FIELD GAS SALES CONTRACT MONTHLY REDUCTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, GASFDECR, defines the field's monthly reduction in the gas sales contract quantity for when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section. Gas contracts are commonly based on a Daily Contract Quantity ("DCQ") that determines the gas rate that the field should be produced at, which is normally expressed as a multiple of the DCQ, for example 1.33, and is often referred to as the "swing factor". Some gas contracts also define a maximum DCQ ("Max DCQ") and/or a minimum take or pay DCQ ("Min DCQ"), as well as seasonal demand characteristics. For example, gas rates may be set higher in the winter months in order to meet heating demand compared with summer months in colder climates, and the opposite in warmer climates where air conditioning demand is high.

Thus, the DCQ must be calculated first over a contract period, where the contract period is commonly contract years, or in some instances contract quarters. This is performed by the simulator using the current DCQ and checking to see if the (DCQ x Swing Factor) can be satisfied throughout the current contract period, if not the DCQ is re-calculated so that the (DCQ x Swing Factor) condition is satisfied. Once this condition is met, the second and final pass uses the calculated DCQ in conjunction with the monthly scaling profile data to set the monthly gas rate for the field:

$$Q_{month} = DCQ \times SWINGFAC_{month} \quad (12.19)$$

Where:

Q_{month} = the monthly gas production target

DCQ = Daily Contract Quantity

$SWINGFAC_{month}$ = monthly rate scaling factor that takes into account seasonal demand, etc.

Here the GASFDECR keyword allows for a reduction in the calculated final pass monthly gas rates and thus equation (12.19) become:

$$Q_{month} = (DCQ \times SWINGFAC_{month}) - GASFDECR_{month} \quad (12.20)$$

Where:

Q_{month} = the monthly gas production target

DCQ = Daily Contract Quantity

$SWINGFAC_{month}$ = monthly rate scaling factor that takes into account seasonal demand, etc.

$GASFDECR_{month}$ = monthly gas rate reduction.

Since the simulator must make two passes to calculate the final rates this will naturally decrease computational efficiency.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.78 GASFDEL C – DEFINE GAS DELIVERABILITY CALCULATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GASFDEL C keyword defines how the field's gas deliverability calculation should be performed for when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.79 GASFTARG – DEFINE FIELD GAS SALES CONTRACT MONTHLY TARGET

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, GASFTARG, defines the field's monthly gas sales contract quantity for when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section. Gas contracts are commonly based on a Daily Contract Quantity ("DCQ") that determines the gas rate that the field should be produced at, which is normally expressed as a multiple of the DCQ, for example 1.33, and is often referred to as the "swing factor". Some gas contracts also define a maximum DCQ ("Max DCQ") and/or a minimum take or pay DCQ ("Min DCQ"), as well as seasonal demand characteristics. For example, gas rates may be set higher in the winter months in order to meet heating demand compared with summer months in colder climates, and the opposite in warmer climates where air conditioning demand is high.

Thus, the DCQ must be calculated first over a contract period, where the contract period is commonly contract years, or in some instances contract quarters. This is performed by the simulator using the current DCQ and checking to see if the (DCQ x Swing Factor) can be satisfied throughout the current contract period, if not the DCQ is re-calculated so that the (DCQ x Swing Factor) condition is satisfied. Once this condition is met, the second and final pass uses the calculated DCQ in conjunction with the monthly scaling profile data to set the monthly gas rate for the field:

$$Q_{month} = DCQ \times SWINGFAC_{month} \quad (12.21)$$

Where:

Q_{month} = the monthly gas production target

DCQ = Daily Contract Quantity

$SWINGFAC_{month}$ = monthly rate scaling factor that takes into account seasonal demand, etc.

Here the GASFTARG keyword sets a minimum target rate in the calculated final pass monthly gas rates and thus equation (12.21) become:

$$Q_{month} = \text{Minimum} \left((DCQ \times SWINGFAC_{month}), GASFTARG_{month} \right) \quad (12.22)$$

Where:

Q_{month} = the monthly gas production target

DCQ = Daily Contract Quantity

$SWINGFAC_{month}$ = monthly rate scaling factor that takes into account seasonal demand, etc.

$GASFTARG_{month}$ = minimum monthly gas rate target.

Since the simulator must make two passes to calculate the final rates this will naturally decrease computational efficiency.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.80 GASMONT – DEFINE START OF ANNUAL SCHEDULING EVENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GASMONT, states the month for which subsequent scheduling events take place within an Annual Schedule section for when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section. The keyword must lie in between the GASBEGIN, that defines the start of an Annual Scheduling section and the GASEND keyword that ends the section. Optionally, the keyword can be used to write a report to the print file (*.PRT) at the requested month.

See also the GASBEGIN and GASEND keywords in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.81 GASPERIO – ADVANCE SIMULATION BY GAS CONTRACT PERIOD

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword advances the simulation over one or more gas contract periods for when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section. A contract period in this case is the period over which the Daily Contract Quantity is fixed, this can be a year or one or more months. If the contract period is a year then the GASYEAR keyword in the SCHEDULE section can be used instead of GASPERIOD.

GASPERIO is an alternative to the DATES, TIME and TSTEP keywords in the SCHEDULE section that advances the simulation to a given report time after which additional keywords may be entered to instruct OPM Flow to perform additional functions via the SCHEDULE section keywords.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.82 GASYEAR – ADVANCE SIMULATION BY GAS CONTRACT YEAR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword advances the simulation over one or more gas contract years for when the Gas Field Operations option has been activated by the GASFIELD keyword in the RUNSPEC section. A contract year in this case is the period over which the Daily Contract Quantity is fixed, this can be a year, this keyword or the GASPERIO keyword in the SCHEDULE section, or one or more months. If the contract period is over one or more months then the GASPERIO keyword in the SCHEDULE section can be used instead of GASYEAR.

GASYEAR is an alternative to the DATES, TIME and TSTEP keywords in the SCHEDULE section that advances the simulation to a given report time after which additional keywords may be entered to instruct OPM Flow to perform additional functions via the SCHEDULE section keywords.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.83 GCALECON – GROUP ECONOMIC CRITERIA FOR PRODUCTION CALORIFIC GROUPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GCALECON keyword defines economic criteria for production groups, including the field level group FIELD, that have previously been defined by the GCONPROD keyword in the SCHEDULE section and have had their rate targets and constraints set by calorific value via the GCONVAL keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note that wells are allocated to a group when they are specified by the WELSPECS keyword and wells can also have economic controls. Wells under group control are therefore subject to the economic criteria set via the GCONPROD and CECON keywords in the SCHEDULE section and the controls specified by the WECON keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group target and constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	ENEVAL	A real positive value that defines the minimum economic surface energy production rate, below which an economic action of shutting in or stopping all the wells in the group, as requested by item (9) of the WELSPECS keyword. A value less than or equal to zero switches of this criteria.			0.0
		BTU/day	kJ/day	J/hour	
3	CALVAL	A real positive value that defines the minimum economic surface calorific value, below which an economic action of shutting in or stopping all the wells in the group, as requested by item (9) of the WELSPECS keyword. A value less than or equal to zero switches of this criteria,			0.0
		Btu/Mscf	kJ/sm ³	J/hour	
8	END	A defined character string that defines if the simulation should terminate if all the producing wells in the group, including the FIELD group, are shut or stopped. END should be set to one of the following character strings: <div>1) NO: no action is taken and the run continues.</div> <div>2) YES: terminate the run at the next report time step.</div>			NO
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.23: GCALECON Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

See also the WELSPECS keyword to define a wells shut-in or stop options, GCONPROD, GCONCAL, GCONENG for group controls, and WECON for setting a well's economic criteria. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the economic criteria for the field with a minimum economic surface energy production rate of 5×10^9 BTU/day and a minimum economic surface calorific value of 900 Btu/Mscf

```
--  
--          GROUP ECONOMIC CRITERIA FOR PRODUCTION GROUPS UNDER CALORIFIC CONTROL  
--  
--  GRUP  ENERGY  CALORIFIC  END  
--  NAME  RATE     VALUE      RUN  
GCALECON  
FIELD    5E9      900.0      'YES'                               /  
/
```

If the economic limits are violated then the run will stop at the next report time step.

12.3.84 GCONCAL – GROUP PRODUCTION CALORIFIC TARGETS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GCONCAL keyword defines calorific production targets and constraints for groups, including the top most group in the group hierarchy known as the FIELD group. Wells are allocated to groups when the wells are specified by the WELSPES keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group's target calorific value is being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	CALVAL	A real positive value that defines the target surface calorific value of the produced gas. The default value of 1×10^{20} switches off calorific control for the group.			1.0×10^{20}
		Btu/Mscf	kJ/sm ³	J/hour	
3	ACTION	A defined character string that defines the action to be taken if the CALVAL is violated. ACTION should be set to one of the following character strings: 1) NONE: no action is taken and the group's produced calorific value will therefore no longer meet CALVAL. 2) RATE: scale back the gas rate of various wells under the group by the value of FACTOR until the calorific target (CALVAL) is satisfied. The corrective action takes places at the end of the time step in which the constraint is violated.			None
4	FACTOR	A real positive value that is less than or equal to one that defines the amount wells can be scaled back in order to satisfy CALVAL. Note this assumes that there are wells within the group that are producing with higher and lower calorific values, and the simulator is thus able to fine a combination of wells that satisfy the group's CALVAL target.			None
		dimensionless	dimensionless	dimensionless	
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.24: GCONCAL Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

See also the GRUPTREE keyword to define the hierarchy of the groups below the FIELD level, the GCONPROD and GCONINJ keywords to define a group's production and injection rate targets and constraints, the WCONPROD keyword to define a production well's targets and constraints, and the WCONINEJ keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the calorific production target for the field.

```

---
--          GROUP CALORIFIC PRODUCTION CONTROLS
--
--  GRUP  CALORIFIC  ACTION  CUT
--  NAME  VALUE
GCONCAL
FIELD    1010E3      RATE    0.95
/
  
```

Here the calorific production target has been set to $1,010 \times 10^3$ Btu/Mscf for the field and if the target cannot be met then the well rates are reduced by 0.95 at each iteration until the target is satisfied.

12.3.85 GCONENG – GROUP PRODUCTION ENERGY TARGETS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GCONCAL keyword defines energy production targets and constraints for groups, including the top most group in the group hierarchy known as the FIELD group. Wells are allocated to groups when the wells are specified by the WELSPES keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group's target calorific value is being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	ENGVAL	A real positive value that defines the surface energy target for the group. The default value of 1×10^{20} switches off the energy target for the group.			1.0×10^{20}
		BTU/day	kJ/day	J/hour	
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.25: GCONENG Keyword Description

See also the GRUPTREE keyword to define the hierarchy of the groups below the FIELD level, the GCONPROD and GCONINJ keywords to define a group's production and injection rate targets and constraints, the WCONPROD keyword to define a production well's targets and constraints, and the WCONINEJ keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the energy production target for the field.

```
--
--      GROUP ENERGY PRODUCTION CONTROLS
--
-- GRUP  ENERGY
-- NAME  VALUE
GCONENG
FIELD   1010E9
/
```

Here the energy production target has been set to $1,010 \times 10^9$ Btu/day for the field.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.86 GCONINJE – GROUP INJECTION TARGETS AND CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GCONINJE keyword defines injection targets and constraints for groups, including the top most group in the group hierarchy known as the FIELD group. Wells are allocated to groups when the wells are specified by the WELSPES keyword in the SCHEDULE section. Wells defined to be under group control will have their injection rates controlled by the group to which they belong, in addition to any well constraints defined for the wells.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group target and constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the whole field. Note that the group hierarchy should be defined by the GRUPTREE keyword in the SCHEDULE, when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	TYPE	A defined character string that defines the type of injection fluid. TYPE should be set to one of the following character strings: 1) GAS: for a gas injection well. 2) OIL: for a water injection well. 3) WAT: for a water injection well.			None
3	TARGET	A defined character string that sets the target injection control for the group, all the other phases will therefore act as constraints. The simulator will attempt to meet the TARGET based on the phase rate stated in items (4) to (7) on this keyword. TARGET should be set to one of the following character strings: 1) NONE: the group has no target phase, but if entered, constraints are still defined and active. 2) FLD: this group is controlled from a higher level group, including the FIELD group. 3) RATE: the injection phase will be control by the surface fluid rate for the phase defined by the TYPE variable. For example, if TYPE has been set to WAT then this would mean the water injection rate as defined by item (4). 4) RESV: the target is set to the in situ reservoir volume rate as defined by item (5). 5) REIN: the target is set to groups production of the phase defined by TYPE multiplied by the value on item (6). For example, if TYPE has been set to WAT then this would mean the groups water production multiplied by item (6). 6) VREP: the target is set to the groups voidage replacement ratio as defined by item (7).			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	RATE	A real positive value that defines the maximum surface injection rate target or constraint for the phase declared by the TYPE variable.			None
		Liquid stb/d Gas Mscf/d	Liquid sm ³ /day Gas sm ³ /day	Liquid scc/hour Gas scc/hour	
5	RESV	A real positive value that defines the maximum reservoir volume injection rate target or constraint. Note setting a value here other than the default means that TYPE, item (2) will be the supplement or “make up” phase.			None
		rtb/d	rm ³ /day	rcc/hour	
6	REIN	A real positive value that defines the target or constraint re-injection fraction for the produced phase defined by the TYPE variable. For example, if TYPE is equal to GAS and REINJ is equal to 0.85, then 85% of the produced gas will be re-injected.			None
		dimensionless	dimensionless	dimensionless	
7	VREP	A real positive value that defines the target or constraint of the voidage replacement ratio based on all the produced fluids. For example, if TYPE is equal to WAT and VREP is equal to 1.00, then 100% of the produced reservoir volume will be re-inject as an equivalent water volume. Note setting a value here other than the default means that TYPE, item (2) will be the supplement phase.			None
		dimensionless	dimensionless	dimensionless	
8	GRPCNTL	A defined character string that determines if this group is subject to higher level group control. 1) YES: then this group is subject to a higher level group's control and the flow rates for this group will be adjusted accordingly. 2) NO: then this group is NOT subject to a higher level group's control and the flow rates for this group will only be control by the parameters for this group. This variable is ignored if GRPNAME is equal to FIELD.			YES
9	GRPGUIDE	A real positive value that defines a group's injection guide rate expressed as a dimensionless number. A group requires a value for GRPGUIDE only if it is required to produce a specified proportion of a higher level group's rate. Defaulting GRPGUIDE results in the subordinate groups and wells under guide control having their rates dictating by any higher level groups under guide rate control. In other words the GRPNAME is masked out. Setting GRPGUIDE to a real positive value and GUIPHASE to either RATE or RESV will result in a constant injection guide rate.			None
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
10	GUIPHASE	<p>A defined character string that sets the guide phase to which the guide rate in item (9) applies. GUIPHASE should be set to one of the following character strings:</p> <ul style="list-style-type: none">1) NETV: the guide phase is set to production rate minus any injected reservoir rate from the other phases.The net volume is calculated at the beginning of a time step and the option should only be used for groups under voidage replacement control. Note that using this option means that TYPE, item (2) will be the supplement or “make up” phase and the value entered for the groups guide rate (GRPGUIDE) will be ignored with this option.2) RATE: the guide phase is set to the surface injection rate. Setting GUIPHASE to RATE and GRPGUIDE to a real positive value will result in a constant injection guide rate.3) RESV: the guide phase is set to the in situ reservoir volume rate. Setting GUIPHASE to RESV and GRPGUIDE to a real positive value will result in a constant injection guide rate.4) VOID: the guide rate is calculated at the beginning of each time step based on the group’s net voidage rate. <p>OPM Flow now supports all guide rate options. The default value of I* means that the group has no injection guide rate for this phase.</p>			None
11	GRPREIN	<p>A character string of up to eight characters in length that defines the group name whose production rate should be used for applying the REIN quantity to be injected into GRPNAME.</p> <p>This variable is used to re-inject the REIN production faction from another group (GRPREIN) via this group (GRPNAME). If GRPREIN is defaulted then the re-injection quantity for GRPNAME will be based on the production from GRPNAME.</p>			GRPNAME
12	GRPVREP	<p>A character string of up to eight characters in length that defines the group name whose production rate should be used for applying the VREP quantity to be injected into GRPNAME.</p> <p>This variable is used to re-inject the VREP production faction from another group (GRPVREP) via this group (GRPNAME). If GRPVREP is defaulted then the voidage quantity for GRPNAME will be based on the production from GRPNAME.</p>			GRPNAME
13	WGASRATE	<p>Wet gas injection rate used in the commercial compositional simulator.</p> <p>Not used and should be defaulted with I*.</p>			I*
Notes:					
1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.26: GCONINJE Keyword Description

See also the GRUPTREE keyword to define the hierarchy of the groups below the FIELD level, the GCONPROD keyword to define a group’s production targets and constraints, the WCONPROD keyword to define a production well’s targets and constraints, and the WCONINJE keyword to define an injection well’s targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the injection targets and constraints for the field and two groups that are one level below the field group, since the GRUPTREE keyword has not been entered to define the group hierarchy.

```
--
--          GROUP INJECTION TARGETS AND CONSTRAINTS
--
--  GRUP  FLUID  CNTL   SURF   RESV   REINJ   VOID   GRUP  GUIDE  GUIDE  GRUP  GRUP
--  NAME   TYPE   MODE   RATE   RATE   FRAC    FRAC   CNTL  RATE   DEF   REINJ  RESV
GCONINJE
FIELD    WAT    VREP   35E3   1*     1*     1*     NO    1*    1*    1*    1*  /
GRP01    WAT    VREP    1*     1*     1*     1.0   YES   1*    1*    1*    1*  /
GRP02    WAT    VREP    1*     1*     1*     1.0   YES   1*    1*    1*    1*  /
/
```

In this example, group GRP01 and GRP02 are injecting water via voidage replacement with a voidage replacement of one and are under the control on the field group, that imposes a 35,000 m³/day total water injection limit.

12.3.87 GCONPRI – GROUP PRODUCTION PRIORITY TARGETS AND CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GCONPRI keyword defines production targets and constraints for groups, including the top most group in the group hierarchy known as the FIELD group, for when groups and their associated wells are operating under priority control as oppose to guide rate control. Priority control is activated by the PRIORITY keyword in the SCHEDULE section. Wells are allocated to groups when the wells are specified by the WELSPES keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group target and constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	ORAT	A real positive value that defines the maximum surface oil production rate constraint.			None
		stb/d	sm ³ /day	scc/hour	
3	OILACT	A defined character string that defines the action to be taken if ORAT is exceeded. OILACT should be set to one of the following character strings: 1) NONE: no action is taken. 2) CON: close the worst offending connection in the worst offending well. If connections have been grouped as completions then the worst offending completion in the worst offending well will be closed. 3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed. 4) WELL: close the worst offending well. 5) PLUG: plug back the worst offending well based on the plug back length and options defined on the WPLUG keyword in the SCHEDULE. 6) PRI: control the group production rate using the first priority formulae defined by the PRIORITY keyword in the SCHEDULE section. 7) PR2: control the group production rate using the second priority formulae defined by the PRIORITY keyword in the SCHEDULE section.			"NONE"

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	WRAT	A real positive value that defines the maximum surface water production rate constraint.			None
		stb/d	sm ³ /day	scc/hour	
5	WATACT	A defined character string that defines the action to be taken if WRAT is exceeded. WATACT should be set to a character string described by the OILACT parameter on this record.			None
6	GRAT	A real positive value that defines the maximum surface gas production rate constraint			None
		Mscf/d	sm ³ /day	scc/hour	
7	GASACT	A defined character string that defines the action to be taken if GRAT is exceeded. GASACT should be set to a character string described by the OILACT parameter on this record.			None
8	LRAT	A real positive value that defines the maximum surface liquid (oil plus water) production rate constraint.			None
		stb/d	sm ³ /day	scc/hour	
9	LIQRAT	A defined character string that defines the action to be taken if LRAT is exceeded. LIQACT should be set to a character string described by the OILACT parameter on this record.			None
10	RESV	A real positive value that defines the maximum reservoir volume production rate constraint.			None
		rb/d	rm ³ /day	rcc/hour	
11	RESVFRAC	A real positive value that defines a group's maximum production balancing fraction constraint.			None
		dimensionless	dimensionless	dimensionless	
12		Not used should be defaulted with I*.			I*
13		Not used should be defaulted with I*.			I*
14		Not used should be defaulted with I*.			I*
15		Not used should be defaulted with I*.			I*
16	LINCOMB	A real positive value that defines the linearly combined maximum surface target rate or constraint, as per the LINCOM keyword in the SCHEDULE section.			I*
17	LINACT	A defined character string that defines the action to be taken if LINCOMB is exceeded. LINACT should be set to a character string described by the OILACT parameter on this record.			None

Notes:
1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.27: GCONPRI Keyword Description

See also the GRUPTREE keyword to define the hierarchy of the groups below the FIELD level, the GCONPROD keyword to define a group's production targets and constraints, the GCONINJ keyword to define a group's injection targets and constraints, the WCONPROD keyword to define a production well's targets and constraints, and the WCONINEJ keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the production targets and constraints for the field and two groups that are one level below the field group, since the GRUPTREE keyword has not been entered to define the group hierarchy.

```
--
--          GROUP PRIORITY PRODUCTION CONTROLS
--
-- GRUP  ORAT  ORAT  WRAT  WRAT  GRAT  GRAT  LRAT  LRAT  RVOL  RVOL
-- NAME  LIMIT ACTN  LIMIT ACTN  LIMIT ACTN  LIMIT ACTN  LIMIT ACTN
GCONPRI
FIELD   40E3  PRI    30E3  +CON  125E3  PRI    1*    1*    1*    1*    /
GRP01   25E3  PRI    1*    1*    1*    1*    1*    1*    1*    1*    /
GRP02   25E3  PRI    1*    1*    1*    1*    1*    1*    1*    1*    /
/
```

All groups are controlled by oil constraints, but only the field level has water and gas constraints to reflect the actual production facility constraints. The oil production constraint of 40,000, 25,000 and 25,000 stb/d are defined for the field, GRP01 and GRP02 groups, respectively. If the oil rate constraint is exceeded then the wells will be controlled using the priority formulae one, as defined on the PRIORITY keyword in the SCHEDULE section. Similarly for the field, for when the gas constraint is exceeded. Finally, if the field water constraint is surpassed then the worst offending connection and below in the worst offending well are shut.

12.3.88 GCONPROD – GROUP PRODUCTION TARGETS AND CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GCONPROD keyword defines production targets and constraints for groups, including the top most group in the group hierarchy known as the FIELD group. Wells are allocated to groups when the wells are specified by the WELSPEDS keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group target and constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword in the SCHEDULE section, when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	TARGET	A defined character string that sets the target production phase for the group, all the other phases will therefore act as constraints. The simulator will attempt to meet the TARGET based on the phase rate stated in items (3) to (6) on this keyword. TARGET should be set to one of the following character strings: 1) NONE: the group has no target phase, but if entered, constraints are still defined and active. 2) FLD: this group is controlled from a higher level group, including the FIELD group. 3) ORAT: the target is set to the surface oil production rate as defined by item (3). 4) WRAT: the target is set to the surface water production rate as defined by item (4). 5) GRAT: the target is set to the surface gas production rate as defined by item (5). 6) LRAT: the target is set to the surface liquid (oil plus water) production rate as defined by item (6). 7) RESV: the target is set to the in situ reservoir volume rate as defined by item (14). All other options are not supported by OPM Flow.			None
3	ORAT	A real positive value that defines the maximum surface oil production rate target or constraint.			None
		stb/d	sm ³ /day	scc/hour	
4	WRAT	A real positive value that defines the maximum surface water production rate target or constraint.			None
		stb/d	sm ³ /day	scc/hour	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	GRAT	A real positive value that defines the maximum surface gas production rate target or constraint.			None
		Mscf/d	sm ³ /day	scc/hour	
6	LRAT	A real positive value that defines the maximum surface liquid (oil plus water) production rate target or constraint.			None
		stb/d	sm ³ /day	scc/hour	
7	ACTION	<p>A defined character string that defines the action to be taken if the constraints in (3) to (6) are violated. ACTION should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) NONE: no action is taken. 2) CON: close the worst offending connection in the worst offending well. If connections have been grouped as completions then the worst offending completion in the worst offending well will be closed. 3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed. 4) WELL: close the worst offending well. 5) PLUG: plug back the worst offending well. This option is not implemented in OPM Flow. 6) RATE: control the group production rate to equal the upper limit. This effectively changes the TARGET to be the violated phase constraint. <p>The corrective action takes places at the end of the time step in which the constraint is violated.</p>			None
8	GRPCNTL	<p>A defined character string that determines if this group is subject to higher level group control.</p> <ol style="list-style-type: none"> 1) YES: then this group is subject to a higher level group's control and the flow rates for this group will be adjusted accordingly. 2) NO: then this group is NOT subject to a higher level group's control and the flow rates for this group will only be control by the parameters for this group. <p>GRPCNTL will be ignored for the FIELD group.</p>			None
9	GRPGUIDE	A real positive value that defines a group's production guide rate expressed as a dimensionless number. A group requires a value for GRPGUIDE only if it is required to produce a specified proportion of a higher level group's rate			None
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
10	GUIPHASE	<p>A defined character string that sets the guide phase to which the guide rate in item (9) applies. GUIPHASE should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) ORAT: the guide phase is set to the surface oil production rate. 2) WRAT: the guide phase is set to the surface water production rate. 3) GRAT: the guide phase is set to the surface gas production rate. 4) LRAT: the guide phase is set to the surface liquid (oil plus water) production rate. 5) RESV: the guide phase is set to the in situ reservoir volume rate. 6) FORM: the guide rate will be based on the guide rate formulae defined via the GUIDERAT keyword in the SCHEDULE section. The formulae enables subordinate groups and wells to decrease their contribution from wells producing too much gas or too much water. <p>Only the FORM option is not supported.</p>			I*
11	ACTWAT	<p>A defined character string that defines the action to be taken if the WRAT constraint, item (4), is violated. ACTWAT should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) NONE: no action is taken. 2) CON: close the worst offending connection in the worst offending well. If connections have been grouped as completions then the worst offending completion in the worst offending well will be closed. 3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed. 4) WELL: close the worst offending well. 5) PLUG: plug back the worst offending well. This option is not implemented in OPM Flow. 6) RATE: control the group production rate to equal the upper limit. This effectively changes the TARGET to be the violated phase constraint. <p>If defaulted then procedure defined by ACTION, item (7), is applied. The corrective action takes places at the end of the time step in which the constraint is violated.</p> <p>Not used and should be defaulted with I*.</p>			I*

No.	Name	Description			Default
		Field	Metric	Laboratory	
12	ACTGAS	<p>A defined character string that defines the action to be taken if the GRAT constraint, item (5), is violated. ACTGAS should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) NONE: no action is taken. 2) CON: close the worst offending connection in the worst offending well. If connections have been grouped as completions then the worst offending completion in the worst offending well will be closed. 3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed. 4) WELL: close the worst offending well. 5) PLUG: plug back the worst offending well. This option is not implemented in OPM Flow. 6) RATE: control the group production rate to equal the upper limit. This effectively changes the TARGET to be the violated phase constraint. <p>If defaulted then procedure defined by ACTION, item (7), is applied. The corrective action takes places at the end of the time step in which the constraint is violated</p> <p>Not used and should be defaulted with I*.</p>			I*
13	ACTLIQ	<p>A defined character string that defines the action to be taken if the LRAT constraint, item (6), is violated. ACTLIQ should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) NONE: no action is taken. 2) CON: close the worst offending connection in the worst offending well. If connections have been grouped as completions then the worst offending completion in the worst offending well will be closed. 3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed. 4) WELL: close the worst offending well. 5) PLUG: plug back the worst offending well. This option is not implemented in OPM Flow. 6) RATE: control the group production rate to equal the upper limit. This effectively changes the TARGET to be the violated phase constraint. <p>If defaulted then procedure defined by ACTION, item (7), is applied. The corrective action takes places at the end of the time step in which the constraint is violated.</p> <p>Not used and should be defaulted with I*.</p>			I*
14	RESV	<p>A real positive value that defines the maximum reservoir volume production rate target or constraint.</p>			None
		rtb/d	rm ³ /day	rcc/hour	

No.	Name	Description			Default
		Field	Metric	Laboratory	
15	RESVFRAC	A real positive value that defines the maximum reservoir volume production balancing fraction. Not used and should be defaulted with I*.			I*
16	WGASRATE	Wet gas production rate used in the commercial compositional simulator. Not used and should be defaulted with I*.			I*
17	CALRATE	Calorific production rate used in the commercial compositional simulator. Not used and should be defaulted with I*.			I*
18	GASFRAC	Surface gas production fraction used in the commercial compositional simulator Not used and should be defaulted with I*.			I*
19	WATFRAC	Surface water production fraction used in the commercial compositional simulator. Not used and should be defaulted with I*.			I*
20	COMBRATE	Linearly combined production rate used in the commercial compositional simulator. Not used and should be defaulted with I*.			I*
21	COMBPROC	Linearly combined procure for when exceeding COMBRATE, used in the commercial black-oil simulator. Not used and should be defaulted with I*.			I*
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.28: GCONPROD Keyword Description

See also the GRUPTREE keyword to define the hierarchy of the groups below the FIELD level, the GCONINJ keyword to define a group's injection targets and constraints, the WCONPROD keyword to define a production well's targets and constraints, and the WCONINEJ keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the production targets and constraints for the field and two groups that are one level below the field group, since the GRUPTREE keyword has not been entered to define the group hierarchy.

```
--
--          GROUP PRODUCTION CONTROLS
--
--  GRUP  CNTL  OIL    WAT    GAS    LIQ    CNTL  GRUP  GUIDE  GUIDE  CNTL
--  NAME  MODE  RATE   RATE   RATE   RATE   OPT   CNTL  RATE   DEF    WAT
GCONPROD
FIELD    ORAT  40E3    60E3    300E3  60E3    1*    1*    1*    1*    1*    /
GRP01    FLD   25E3     1*      1*      1*      1*    1*    1*    1*    1*    /
GRP02    FLD   25E3     1*      1*      1*      1*    1*    1*    1*    1*    /
/
```

All groups are controlled by oil rate targets or constraints, but only the field level has water, gas and liquid constraints to reflect the actual production facility constraints. The wells under group control will be produced based on oil potential of each of the wells under group control, such that the field oil production target of 40,000 stb/d is honored and subject to the other phase fluid constraints. In addition, GRP01 and GRP02 oil rate values of 25,000 stb/d are constraints as these two groups are subject to the FIELD level targets and constraints.

12.3.89 GCONSALE – DEFINE GROUP SALES GAS PRODUCTION TARGETS AND CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

GCONSALE defines group sales gas production targets and constraints for when the gas production from an oil field group is exported under a Gas Sales Agreement (“GSA”) and the oil field group also has oil production targets and constraints.

Note that the keyword should not be used to control sales gas for a gas field group, as the gas injection rate is used to control the sales gas production with this keyword, that is:

$$\begin{aligned} \text{Gas Sales Rate} = & \text{Total Group Gas Production Rate} \\ & - \text{Group Gas Injection Rate} \\ & + \text{Total Group Gas Import Rate} \\ & - \text{Total Group Gas Consumption} \end{aligned} \quad (12.23)$$

Thus, surplus gas that cannot be sold is re-injected, which requires that there are active gas injectors in the model that are subordinate to groups’ with gas sales targets. Note that the surplus gas re-injection rates are automatically calculated by OPM Flow at each time step.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group gas sales target and constraints are being defined. The group named FIELD is the top most group and should be used to set the gas sales targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	GSALE	GSALE should either be set to: 1) A real positive value that defines the gas sales rate for the group, or, 2) a real negative value that switches off both gas sales and gas re-injection for the group. Note that if GSALE has been set to switch off both gas sales and gas re-injection, then the GCONINJE keyword in the SCHEDULE section may be used to re-enable gas re-injection again.			None
		Mscf/d	sm ³ /day	scc/hour	
3	GSALEMAX	A real positive value that must be greater than GSALE that defines the maximum allowed gas sales rate. If GSALE exceeds GSALEMAX then the action defined by the ACTION variable on this keyword is implemented at the end of the current time step.			1 x 10 ²⁰
		Mscf/d	sm ³ /day	scc/hour	

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	GSALEMIN	<p>A real positive value that must be less than GSALE that defines the minimum allowed gas sales rate. If GSALE is less than GSALEMAX then one of the following actions will be implemented at the end of the current time step:</p> <ol style="list-style-type: none">1) If the group's maximum gas production rate constraint is constraining the gas rate, then reset the constraint to satisfy the group's minimum gas sales rate (GSALEMIN), else:2) If the group has active subordinate dedicated gas producers, as defined by the WGASPROD keyword in the SCHEDULE section, then reset their gas target rates to satisfy GSALEMIN, else:3) If there are subordinate dedicated gas producers for the group in a drilling queue, open the next dedicated well and set the well's gas rate to satisfy GSALEMIN. Note that only wells that are subordinate to the group and are not under gas rate control or group prioritization are considered for opening.4) If there are no appropriate subordinate dedicated gas producers for the group in a drilling queue, open the next non-dedicated well and set the well's gas rate to satisfy GSALEMIN. Again, note that only wells that are subordinate to the group and are not under gas rate control or group prioritization are considered for opening. <p>If none of the above actions can be implemented then the minimum gas sales rate will not be satisfied.</p>			-1 x 10 ²⁰
5	ACTION	<p>A defined character string that defines the action to be taken if the maximum gas rate, GSALEMAX, is violated. ACTION should be set to one of the following character strings:</p> <ol style="list-style-type: none">1) NONE: no action is taken.2) CON: close the worst offending connection in the worst offending well. If connections have been grouped as completions then the worst offending completion in the worst offending well will be closed.3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed.4) WELL: close the worst offending well.5) PLUG: plug back the worst offending well. This option is not implemented in OPM Flow.6) RATE: the group's production rate target is reduced to equal GSALEMAX, after accounting for fuel gas (GCONSUMP keyword) and the current rate of re-injection. This will also place the group on gas production control.7) END: stop the simulation at the end of the report step. <p>The corrective action takes places at the end of the time step in which the constraint is violated.</p>			None

Notes:

- 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".

Table 12.29: GCONSALE Keyword Description

GCONSALE and also be used with the GCONINJE keyword in the SCHEDULE section in order to apply additional limits, for example by applying a maximum group injection rate. In this scenario, the TARGET variable on the GCONINJE keyword must be set to "REIN" together, and if desired, a re-injection fraction (REIN on the GCONINJE keyword), or any other constraint.

See also the GCONSUMP in the SCHEDULE section that defines the fuel gas requirements for groups.

Example

The following examples sets the field gas sales target rate:

```
--
--      GROUP GAS SALES FOR OIL FIELDS
--
-- GRUP  GAS      MAX      MIN      CNTL
-- NAME  SALES    RATE     RATE     ACTN
GCONSALE
FIELD   40E3     50E3     20E3     RATE /
/
```

Here the field has a gas sales target of 40 MMscf/d, with a maximum rate of 50 MMscf/d and a minimum of 20 MMscf/d. If the maximum gas sales rate is exceeded then the group's gas production rate target is reduced to equal GSALEMAX, after accounting for fuel gas and the current rate of re-injection. This will also place the group on gas production control.

12.3.90 GCONSUMP – DEFINE GROUP GAS CONSUMPTION AND GAS IMPORT TARGETS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

GCONSUMP defines the group gas consumption rate either as an actual rate or as a percentage of the group's production. In both oil and gas fields produced gas is commonly used as fuel to support the processing and utility facilities needed to run the plant.

In addition to defining gas consumption, the keyword can also be used to define the group's gas import rate, if required. This is used to import gas into the model from other sources (fields, reservoirs etc.) that are not included in the current run. For example, if a several fields are supplying gas to a power plant (field A, B and C), but only one is being modeled in the current import deck (A), then production from the other two fields (B and C) can be incorporated into model in order to meet the plant demand. Note in this case the import gas rates from fields B and C are fixed, and therefore field A acts like a "swing" producer to match the gas demand target.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group gas consumption is being defined. The group named FIELD is the top most group and should be used to set the fuel consumption for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	GASFUEL	A real value that defines the gas consumption, that is the fuel gas consumed by the group, either defined as a volumetric rate or as a fraction of the group's gas production. The two options are implemented by: 1) Volumetric Rate Option: Setting GASFUEL to a value greater than zero will be interpreted as the actual fuel gas rate consumed by the group. 2) Fraction of Produced Gas: Setting GASFUEL to a negative value between minus one and zero will be interpreted as a fraction of the groups production rate. For example, if GASFUEL is entered as -0.05, would mean 5% of the group's produced gas will be consumed as fuel.			0.0
		Mscf/d	sm ³ /day	scc/hour	
3	GASIMP	A real positive value greater than zero that defines the amount of gas to be imported into the group. This option is currently not supported by OPM Flow			0.0
		stb/d	sm ³ /day	scc/hour	
4	GASNODE	A character string of up to eight characters in length that defines the network node in the Extended Network Model, for which the fuel gas should be removed (GASFUEL) or the imported gas (GASIMP) assigned. This option is currently not supported by OPM Flow			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.30: GCONSUMP Keyword Description

If the group is acting under Group Gas Sales control via the GCONSALE keyword in the SCHEDULE section, then the sales gas is calculated by:

$$\begin{aligned}
 \text{Gas Sales Rate} = & \text{Total Group Gas Production Rate} \\
 & - \text{Group Gas Injection Rate} \\
 & + \text{Total Group Gas Import Rate} \\
 & - \text{Total Group Gas Consumption}
 \end{aligned}
 \tag{12.24}$$

If the group is acting under Group Gas Re-Injection control via the GCONINJE keyword in the SCHEDULE section, then the group gas injection rate calculated by:

$$\begin{aligned}
 \text{Group Gas Injection Rate} = & \text{Group Gas Injection Rate} \times \text{Group Re-Injection Fraction} \\
 & + \text{Total Group Gas Import Rate} \\
 & - \text{Total Group Gas Consumption}
 \end{aligned}
 \tag{12.25}$$

Note

In oil fields with no gas compression typical values of fuel gas range from three to five percent.

Example

The first example sets the fuel gas consumption to 3.0 MMscf/d for the field.

```

--
--      GROUP GAS CONSUMPTION (FUEL) AND IMPORT
--
-- GRUP   GAS      GAS
-- NAME   FUEL     IMPORT
--      -----
GCONSUMP
FIELD    3.0E3
/

```

The second example sets group PLAT-EST's fuel consumption to be 5% of the platform's produced gas and group PLAT-WST's to a constant 1.0 MMscf/d.

```

--
--      GROUP GAS CONSUMPTION (FUEL) AND IMPORT
--
-- GRUP   GAS      GAS
-- NAME   FUEL     IMPORT
--      -----
GCONSUMP
PLAT-WST -0.050
PLAT-EST 1.0E3
/

```

12.3.91 GCONTROL – DEFINE GROUP CONSTRAINT TOLERANCE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GCONTROL keyword defines the tolerance and parameters used to control the accuracy of group targets and constraints, including the field's targets and constraints. The keyword sets the tolerance and number of Newtonian iterations for each time step so that the wells under group control can match the desired group targets and constraints.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPCNV	<p>GRPCNV is a real positive value less than one that sets the group tolerance criteria used to define if convergence has been satisfied for group's under rate control. Here, GRPCNV is an acceptable fraction of the group's rate target. Thus, the a numerical quantity 0.01 means that values must be with 0.01 (or 1.0%) of the groups' production target.</p> <p><u>For groups under priority control, as per GCONPRI keyword in the SCHEDULE section, GRPCNV is ignored.</u></p> <p>Note that this criteria may not be satisfied if the number of Newtonian iterations used in updating the well targets, as set by the NUPCOL keyword in the RUNSPEC section, or the NUPCOL parameter on this keyword, is exceeded. In this case, and <u>only</u> if the well potentials allow, the well rates are re-calculated ignoring the NUPCOL limit.</p> <p>Group tolerance criteria can also be set by the GRPCNV parameter on the NETBALAN keyword in the SCHEDULE section. If both values of GRPCNV have been entered, then the minimum of the two is used.</p> <p>The default value means there is no convergence criteria.</p>			1.0 x 10 ²⁰
		dimensionless	dimensionless	dimensionless	
2	NUPCOL	<p>A positive integer that defines the maximum number of Newtonian iterations used to update well targets within a time step.</p> <p>Wells under group control may suffer from some dependency with other wells in the same group that are under group control. This may cause some oscillation in the production and injection well rates within the group. In order to avoid this, after the number Newtonian iterations within a time step surpasses NUPCOL, the group well rates are frozen until the time step has converged. Reducing the potential of well rate oscillations within the time step may result in the group targets and limits not being exactly being met in this case. Increasing the value of NUPCOL will improve the accuracy of the group targets and limits at the expense of computational efficiency.</p> <p>NUPCOL can also be set by the NUPCOL keyword in the RUNSPEC section. A value entered on this keyword overwrites any previously entered values of NUPCOL, including the value set by the NUPCOL keyword.</p> <p>The default value of 1* invokes the last previously entered value of either by the NUPCOL keyword or this keyword.</p>			1*
		dimensionless	dimensionless	dimensionless	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	GASCNV	In the commercial compositional simulator GASCNV is a real positive value less than one that sets the tolerance criteria used to define if convergence has been satisfied for well gas injection rates. GASCNV is also used in conjunction with well availability gas fraction quantities in the commercial compositional simulator The value is ignored by OPM Flow.			1.0 x 10 ⁻³
		dimensionless	dimensionless	dimensionless	
4	GASMXITE	In the commercial compositional simulator GASMXITE is a positive integer value that defines the maximum number of iterations for the gas injection computation. The value is ignored by OPM Flow.			5
		dimensionless	dimensionless	dimensionless	
Notes: 1) The keyword is terminated by a “/”.					

Table 12.31: GCONTROL Keyword Description

See also the NUPCOL keyword in the RUNSPEC section, and the NETBALAN and WLIMTOL keywords in the SCHEDULE section that control the network balancing convergence criteria and the tolerance parameters for wells, respectively.

Examples

The example sets the group target convergence criteria to 1% (0.01) with a maximum of four Newtonian iterations (NUPCOL).

```
--
--          GROUP CONSTRAINT TOLERANCE
--
--          GROUP  NEWTON  INJEC  NEWTON
--          TOL    ITERS   TOL    ITERS
--          -----
GCONTROL
          0.01    4        1*     1*          /
```

12.3.92 GCUTBACK – DEFINE GROUP CUTBACK LIMITS AND PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GCUTBACK, defines a production group's cutback limits and parameters. See also the WCUTBACK keyword in the SCHEDULE section that provides similar functionality for wells.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.93 GCUTBACT – DEFINE GROUP TRACER CUTBACK LIMITS AND PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GCUTBACT, defines a production group's cutback limits and parameters based on the named produced tracer from the group. See also the WCUTBACT keyword in the SCHEDULE section that provides similar functionality for groups.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.94 GDCQ – DEFINE GROUP MULTIPLE DAILY CONTRACT QUANTITIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GDCQ keyword defines the Daily Contract Quantities (“DCQ”) for when multiple group contracts are required when the Gas Field Operations model has been activated by the GASFIELD keyword in the RUNSPEC section, or the GWSINGF has been invoked to define multiple group contracts in the SCHEDULE section. The group contracts must first be defined by the GSWINGF keyword, followed by the GCDQ keyword, and then the GASYEAR or GASPERIO keywords. GCDQ may be repeated in the SCHEDULE section to reset group DCQs.

See also the SWINGFAC keyword that set a single group DCQ at the field level, as opposed to having multiple DCQ group contracts using the GDCQ keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.95 GDCQECON – GROUP ECONOMIC CRITERIA FOR DCQ PRODUCTION GROUPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GDCQECON keyword defines economic criteria for DCQ production groups, including the field level group FIELD, that have previously been defined by the GCONPROD keywords in the SCHEDULE section. Note that wells are allocated to a group when they are specified by the WELSPECS keyword and wells can also have economic controls. Wells under group control are therefore subject to the economic criteria set via the GCONPROD and CECON keywords in the SCHEDULE section and the controls specified by the WECON keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group target and constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	DCQ	A real positive value that defines the minimum economic DCQ gas production rate, below which an economic action of shutting in or stopping all the wells in the group, as requested by item (9) of the WELSPECS keyword. Note if GRPNAME is equal to FIELD then the run will be terminated. A value less than or equal to zero switches of this criteria.			0.0
		Mscf/d	sm ³ /day	scc/hour	
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.32: GDCQECON Keyword Description

See also the WELSPECS keyword to define a wells shut-in or stop options, GCONPROD for group controls, and WECON for setting a well's economic criteria. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the minimum DCQ for the field to be 10 MMscf/d.

```
--
--      GROUP ECONOMIC CRITERIA FOR DCQ PRODUCTION GROUPS
--
-- GRUP  GAS
-- NAME  DCQ
GDCQECON
FIELD   10E3
/
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.96 GDRILPOT – DEFINE GROUP POTENTIAL RATES FOR AUTOMATIC DRILLING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GDRILPOT, defines the minimum group potential rate that will result in a well from the one of the automatic drilling queues, as defined by either the QDRILL or WDRILPRI keywords in the SCHEDULE section, to be drilled and placed on production. The advantage of using a group's potential, as oppose to a minimum rate limit, is that setting the potential greater than the group's minimum flow rate, will result in well being drilled in time to support the desired production rate.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.97 GECON – GROUP ECONOMIC CRITERIA FOR PRODUCTION GROUPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GECON keyword defines economic criteria for production groups, including the field level group FIELD, that have previously been defined by the GCONPROD keywords in the SCHEDULE section.

Note that wells are allocated to a group when they are specified by the WELSPECS keyword and wells can also have economic controls. Wells under group control are therefore subject to the economic criteria set via the GCONPROD and CECON keywords in the SCHEDULE section and the controls specified by the WECON keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group target and constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	ORAT	A real positive value that defines the minimum economic surface oil production rate, below which an economic action of shutting in or stopping all the wells in the group, as requested by item (9) of the WELSPECS keyword. A value less than or equal to zero switches of this criteria.			0.0
		stb/d	sm ³ /day	scc/hour	
3	GAS	A real positive value that defines the minimum economic surface gas production rate, below which an economic action of shutting in or stopping all the wells in the group, as requested by item (9) of the WELSPECS keyword. A value less than or equal to zero switches of this criteria,			0.0
		Mscf/d	sm ³ /day	scc/hour	
4	WCUT	A real positive value that defines the maximum economic surface water cut, above which an economic action will take place. Water cut is defined as: $f_w = \frac{q_w}{q_w + q_o}$, and the various actions that are available if the water cut limit is exceeded are described in item (7). A value less than or equal to zero switches of this criteria.			0.0
		dimensionless	dimensionless	dimensionless	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	GOR	A real positive value that defines the maximum economic surface gas-oil ratio, above which an economic action will take place, as defined by item (7). A value less than or equal to zero switches of this criteria.			0.0
		Mscf/stb	sm ³ /sm ³	scc/scc	
6	WGR	A real positive value that defines the maximum economic surface water-gas ratio, above which an economic action will take place, as defined by item (7). A value less than or equal to zero switches of this criteria.			0.0
		stb/Mscf	sm ³ /sm ³	scc/scc	
7	ACTION	A defined character string that defines the action to be taken if the economic WCUT, GOR, or WGR limits are violated. ACTION should be set to one of the following character strings: 1) NONE: no action is taken. 2) CON: close the worst offending connection in the worst offending. If connections have been grouped as completions then the worst offending completion will be closed. 3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed. 4) WELL: shut or stop the well as per the AUTO variable on the WELSPECS keyword. 5) PLUG: plug back the worst offending well based on the plug back length and options defined on the WPLUG keyword in the SCHEDULE. The corrective action takes places at the end of the time step in which the constraint is violated.			None
8	END	A defined character string that defines if the simulation should terminate if all the producing wells in the group, including the FIELD group, are shut or stopped. END should be set to one of the following character strings: 1) NO: no action is taken and the run continues. 2) YES: terminate the run at the next report time step.			NO
9	MXWELS	A positive integer defining the maximum number of producing and injecting wells for this this group and any subordinate groups. The default value of zero implies that there is no limit to the number of wells.			0
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.33: GECON Keyword Description

See also the WELSPECS keyword to define a wells shut-in or stop options, GCONPROD for group controls, and WECON for setting a well's economic criteria. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the economic criteria for the field with a minimum oil rate of 2,000 m³/day and a maximum water cut of 95%.

```
--
--      GROUP ECONOMIC CRITERIA FOR PRODUCTION GROUPS
--
-- GRUP  OIL   GAS   WCT   GOR   WGR   WORK  END  MAX
-- NAME  MIN   MIN   MAX   MAX   MAX   OVER  RUN  WELLS
GECON
FIELD   2E3   1*    0.95   1*    1*    CON   'YES' 1*
/
```

If the economic limits are violated then the run will stop at the next report time step.

12.3.98 GECONT – GROUP TRACER ECONOMIC CRITERIA FOR PRODUCTION GROUPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GECONT keyword defines tracer economic criteria for production groups, including the field level group FIELD, that have previously been defined by the GCONPROD keywords in the SCHEDULE section, for tracers define by the TRACER keyword in the PROPS section.

Note that wells are allocated to a group when they are specified by the WELSPECS keyword and wells can also have economic controls. Wells under group control are therefore subject to the economic criteria set via the GCONPROD and CECON keywords in the SCHEDULE section and the controls specified by the WECON keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I-1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group target and constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
I-2	ACTION	A defined character string that defines the action to be taken if the economic WCUT, GOR, or WGR limits are violated. ACTION should be set to one of the following character strings: 1) NONE: no action is taken. 2) CON: close the worst offending connection in the worst offending. If connections have been grouped as completions then the worst offending completion will be closed. 3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed. 4) WELL: shut or stop the well as per the AUTO variable on the WELSPECS keyword. 5) PLUG: plug back the worst offending well based on the plug back length and options defined on the WPLUG keyword in the SCHEDULE. The corrective action takes places at the end of the time step in which the constraint is violated.			None
I-3	END	A defined character string that defines if the simulation should terminate if all the producing wells in the group, including the FIELD group, are shut or stopped. END should be set to one of the following character strings: 1) NO: no action is taken and the run continues. 2) YES: terminate the run at the next report time step.			NO

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-4	MXWELS	A positive integer defining the maximum number of producing and injecting wells for this group and any subordinate groups. The default value of zero implies that there is no limit to the number of wells.			0
1-5	/	Record one terminated by a “/”			Not Applicable
2-1	NAME	A three letter character string defining the tracer’s name. Note it is best to void names beginning with the letters F,S, and T as these names may create naming issues in post-processing software.			None
2-2	MXTOTAL	A real positive value that defines the maximum total (free plus solution) tracer rate.Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-3	MXFREET	A real positive value that defines the maximum total (free plus solution) tracer concentration. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-4	MXFREEQ	A real positive value that defines the maximum free tracer rate. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-5	MXCONC	A real positive value that defines the maximum free tracer concentration. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-6	MXSOLNQ	A real positive value that defines the maximum solution rate.Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-7	MXSOLNC	A real positive value that defines the maximum solution concentration. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-8	/	Record two terminated by a “/”			Not Applicable
3-1	/	Group terminated by a “/”			Not Applicable
Notes:					
1) GECONT keyword consists of two records, with entries 1-1 to 1-5 representing record one items and 2-1 to 2-8 representing record number two items, in the “No.” column in this table. A maximum of three type two records can be entered following a type one record.					
2) Each type one and type two records are terminate by a “/” as indicated in the table, and a group data set is terminated by a further “/”, after which additional group data sets can be entered stating with a record of type one followed by type two.					
3) The keyword the keyword should be terminated by an additional “/” after the group data set termination “/” character.					

Table 12.34: GECONT Keyword Description

See also the WELSPEDS keyword to define a wells shut-in or stop options, GCONPROD for group controls, and WECON for setting a well's economic criteria. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the tracer economic criteria for the field and two groups, FLTBLK1 and FLTBLK2.

```
--
--          GROUP TRACER ECONOMIC CRITERIA FOR PRODUCTION GROUPS
--
--  GRUP  WORK  END  MAX
--  NAME  OVER  RUN  WELLS
GECONT
FIELD    +CON  'YES'  1*                                /  START OF GROUP
--
--      TRACER  TRACER  TRACER  TRACER  TRACER  TRACER  TRACER
--      NAME    TOTAL  TOTAL  FREE   FREE   SOLN   SOLN
--            RATE  CONCEN  RATE   CONCEN  RATE   CONCEN
--      PLY     1000.0
--      BRI     1000.0
--      TR1     1*      0.7500
--
FLTBLK1  +CON  'YES'  1*                                /  START OF GROUP
--
--      TRACER  TRACER  TRACER  TRACER  TRACER  TRACER  TRACER
--      NAME    TOTAL  TOTAL  FREE   FREE   SOLN   SOLN
--            RATE  CONCEN  RATE   CONCEN  RATE   CONCEN
--      PLY     800.0
--      BRI     800.0
--
FLTBLK2  +CON  'YES'  1*                                /  START OF GROUP
--
--      TRACER  TRACER  TRACER  TRACER  TRACER  TRACER  TRACER
--      NAME    TOTAL  TOTAL  FREE   FREE   SOLN   SOLN
--            RATE  CONCEN  RATE   CONCEN  RATE   CONCEN
--      PLY     800.0
--      BRI     800.0
--
--                                /  END OF GROUP
--                                /  END OF KEYWORD
```

If the economic limits are violated then the worst offending connection and all below it in the worst offending well will be closed, If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed.

12.3.99 GEFAC – DEFINE GROUP EFFICIENCY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

Defines a group's efficiency or up-time as opposed to setting the efficient factors for individual wells.

Note that wells are allocated to a group when they are specified by the WELSPECS keyword and wells can also have efficient factors.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group efficient factor is being defined. The group named FIELD is the top most group and cannot have an efficiency factor set. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	FACTOR	A real positive value that is less than or equal to one that defines the efficiency factor for the group. If a group's down time is 5% then FACTOR should be set to 0.95 (1.0 – 0.05).			1.0
		dimensionless	dimensionless	dimensionless	
3	GRPNETWK	A defined character string that determines if the GRPNAME efficiency factor should be transferred to the equivalent Extended Network Model node, and should be set to either: 1) NO: The group's equivalent Extended Network Model node flow rates are <u>not reduced</u> by the efficiency factor FACTOR. 2) YES: The group's equivalent Extended Network Model node flow rates <u>are reduced</u> by the efficiency factor FACTOR This option is only applicable for the Extended Network Model, as in the Standard Network Model groups flow rates are always used in the calculation of pressure drops.			YES
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.35: GEFAC Keyword Description

See also the WEFAC keyword in the SCHEDULE section to define a well's' efficiency factor.

Example

```
--  
--      GROUP EFFICIENCY FACTORS  
--
```

```
-- GRUP  EFF      NETWK  
-- NAME  FACT      OPTN  
--      -----
```

```
GEFAC
```

```
PLATFORM 0.950
```

```
/
```

```
SUBSEA1  0.860
```

```
/
```

```
/
```

In the above example the group PLATFORM has it's efficiency factor (up time) set to 0.95 and the subsea group SUBSEA1 has an up time of 0.860.

12.3.100 GLIFTLIM – GROUP ARTIFICIAL LIFT CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GLIFTLIM keyword defines the maximum number of wells on artificial lift and the maximum amount of the artificial lift that is available for a group, including the top most group in the group hierarchy known as the FIELD group. Wells are allocated to groups when the wells are specified by the WELSPecs keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group's artificial lift constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	MXLIFT	A real positive value that defines the total amount of artificial lift available for this group and any subordinate groups. The units for MXLIFT are the same as that defined by the ALQ parameter on the VFPPROD keyword in the SCHEDULE section. For example, if ALQ has been set to GRAT on the VFPPROD keyword, then MXLIFT would be the maximum amount of gas lift gas available for this group and any subordinate groups, and the units would Mscf, assuming FIELD units had been activated in the RUNSPEC section. The default value of zero implies that there is no limit applied to the group and its subordinate groups.			0
		See VFPPROD (ALQ)	See VFPPROD (ALQ)	See VFPPROD (ALQ)	
3	MXWELS	A positive integer defining the maximum number of producing wells on artificial lift for this group and any subordinate groups. The default value of zero implies that there is no limit to the number of wells.			0
		dimensionless	dimensionless	dimensionless	
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.36: GLIFTLIM Keyword Description

See also the GRUPTREE keyword to define the hierarchy of the groups below the FIELD level, the GCONPROD and GCONINJ keywords to define a group's production and injection rate targets and constraints, the WCONPROD keyword to define a production well's targets and constraints, and the WCONINEJ keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

The following example defines the artificial lift constraints for the field, assuming all the wells are on gas lift.

```
---  
--          GROUP ARTIFICIAL LIFT CONSTRAINTS  
--  
-- GRUP  MAX    MAX  
-- NAME  ALQ    WELLS  
GLIFTLIM  
FIELD    20E3  20  
/
```

Here the maximum amount of gas lift gas for the field is set to 20.0 MMscf/f and a maximum of 20 wells can utilize gas lift at a time.

12.3.101 GLIFTOPT – DEFINE GROUP GAS OPTIMIZATION LIMITS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GLIFTOPT keyword defines the maximum amount of gas lift gas available and the maximum amount of gas the group can produce, including the top most group in the group hierarchy known as the FIELD group, for when gas lift optimization has been activated via the LIFTOPT keyword in the SCHEDULE section. Note that the LIFTOPT keyword should precede the GLIFTOPT keyword in the SCHEDULE section in order to activate the gas lift optimization facility.

Wells are allocated to groups when the wells are specified by the WELSPES keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells, including any well gas lift optimization parameters on the WLIFTOPT keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group's gas lift optimization parameters are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	MXLIFT	A real value that defines the total amount of gas lift gas available for this group and any subordinate groups, multiplied by their respective efficiency factors. The units for MXLIFT are the same as that defined by the ALQ parameter on the VFPPROD keyword in the SCHEDULE section. In this case ALQ should be GRAT on the VFPPROD keyword, as MXLIFT applies to the maximum amount of gas lift gas available. The default value of zero, or a negative value implies that there is no limit applied to the group and its subordinate groups.			0
		Mscf/d	sm ³ /day	scc/hour	
3	MXGAS	A real value that defines the total amount of gas the group can process. This is the sum of the gas lift gas plus the produced gas for this group and any subordinate groups, multiplied by their respective efficiency factors. The default value of zero, or a negative value implies that there is no limit applied to the group and its subordinate groups			0
		Mscf/d	sm ³ /day	scc/hour	

Notes:

1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.37: GLIFTOPT Keyword Description

See also the LIFTOPT keyword to activate gas lift optimization, the WLIFTOPT keyword to define the wells under gas lift optimization control, the GRUPTREE keyword to define the hierarchy of the groups below the FIELD level, the GCONPROD and GCONINJ keywords to define a group's production and injection rate targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Example

The following example first switches on gas lift optimization via the LIFTOPT keyword and then defines the artificial lift constraints for the field, assuming all the wells are on gas lift, using the GLIFTOPT keyword.

```
--      ACTIVATE GAS LIFT OPTIMIZATION AND PARAMETERS
--
-- INCR   INCR   TSTEP   NEWTON
-- GAS    OIL    INTVAL   OPTN
LIFTOPT
12.5E3    5E-3    0.0      YES                               /
/
--
--      GROUP GAS LIFT OPTIMIZATION CONSTRAINTS
--
-- GRUP   MAX      MAX
-- NAME   GAS ALQ   TOTAL GAS
GLIFTOPT
FIELD    200E3     1*                               /
/
```

Here the LIFTOPT keyword defines the maximum incremental gas lift gas quantity to be $12.5 \times 10^3 \text{ m}^3$, the minimum incremental oil gain per m^3 of gas lift gas is set to $5.0 \times 10^{-3} \text{ m}^3$, the time step interval is set to zero to perform the gas optimization every time step, and finally the gas lift optimization will be performed NUPCOL Newtonian iterations for the time step.

The GLIFTOPT sets the maximum amount of gas lift gas for the field to 200,000 m^3 and there is no maximum limit for the total maximum amount of gas that the group can process.

12.3.102 GNETDP – GROUP NETWORK PRESSURE AND RATE CONTROLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GNETDP keyword sets a group's minimum and maximum network pressure and rate controls for when the either the Standard Network or the Extended Network options have been activated, and the group is part of a network. The keyword allows for the pressure of the group to vary in order to satisfy the rate conditions declared by this keyword. The Standard Network option is invoked if the GRUPTREE, GRUPNET, GNETINJE, GNETPUMP, etc. series of keywords have been used in the SCHEDULE section. Whereas, the Extended Network option is activated by the NETWORK keyword in the RUNSPEC section. Several keywords, including, GNETDP, can be used by both network options.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.103 GNETINJE – DEFINE GROUP INJECTION NETWORK CONFIGURATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GNETINJE keyword defines the configuration of a group injection network for when the either the Standard Network or the Extended Network options have been activated. The Standard Network option is invoked if the GRUPTREE, GRUPNET, GNETINJE, GNETPUMP, etc. series of keywords have been used in the SCHEDULE section. Whereas, the Extended Network option is activated by the NETWORK keyword in the RUNSPEC section. Several keywords, including, GNETINJE, can be used by both network options.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

12.3.104 GNETPUMP – STANDARD NETWORK AUTOMATIC COMPRESSOR AND PUMPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GNETPUMP keyword defines the configuration of automatic compressors and pumps in a production Standard Network, for when the Standard Network option is invoked by the GRUPTREE, GRUPNET, GNETINJE, GNETPUMP, etc., series of keywords in the SCHEDULE section. Although several keywords can be used by both the Standard and Extended Network options, GNETPUMP can only be used with the Standard Network option. The equivalent keyword for the Extended Network option is the NETCOMPA keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

12.3.105 GPMAINT – DEFINE GROUP PRESSURE MAINTENANCE TARGETS AND CONTROLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GPMAINT keyword defines the groups under pressure maintenance control, the associated flow rate and pressure targets, and fluid in-place regions associated with pressure maintenance, as well as various pressure maintenance controls. GPMAINT allows for various regions, as defined by the FIPNUM or FIP keywords in the REGIONS section, to have their average reservoir pressure maintained at a specified value.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group's associated FIPNUM region will have a targeted average reservoir pressure maintained. The group named FIELD is the top most group and can also be used to set pressure target for the whole field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	GRPCNTL	A defined character string of length four, that sets the production or injection control for the group, used to maintain the average pressure for the FIPNUM region. GRPCNTL should be set to one of the following character strings: 1) NONE: the group will no longer maintain the average reservoir pressure for the FIPNUM region by adjusting production and injection rates. 2) GINJ: GRPNAME's gas in situ reservoir volume injection rate (RESV) will be adjusted in order to maintain FIPNUM's average reservoir pressure. 3) GINS: GRPNAME's gas surface rate (GRAT) will be used to maintain FIPNUM's average reservoir pressure. 4) OINJ: GRPNAME's oil in situ reservoir volume injection rate (RESV) will be adjusted in order to maintain FIPNUM's average reservoir pressure. 5) OINS: GRPNAME's oil surface rate (ORAT) will be used to maintain FIPNUM's average reservoir pressure. 6) PROD: GRPNAME's <u>total</u> in situ reservoir volume <u>production</u> rate (RESV) will be adjusted in order to maintain FIPNUM's average reservoir pressure. Note that group cannot be under prioritization group control, as per the GCONPRI keyword in the SCHEDULE section, with this option. 7) WINJ: GRPNAME's water in situ reservoir volume injection rate (RESV) will be adjusted in order to maintain FIPNUM's average reservoir pressure. 8) WINS: GRPNAME's water surface rate (WRAT) will be used to maintain FIPNUM's average reservoir pressure.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	FIPNUM	<p>A positive integer value that defines the region for which pressure maintenance is to be applied by GRPNAME, where FIPNUM may be define as per the:</p> <ol style="list-style-type: none"> 1) FIPNUM keyword in the REGIONS section. 2) The FIP keyword in the REGIONS section, used to define the fluid in-place name and the associated region numbers for each grid block. This option is used in conjunction with FIPNAME (item (5)) to define the name of fluid in-place region and FIPNUM, which in this case is the region number associated with FIPNAME. 3) Alternatively, a value of zero may be entered, in which case pressure maintenance is applied to the whole field. <p>The maximum number of FIPNUM and FIP regions is set by the REGDIMS(NMFIPR) or the TABDIMS(NTFIP) keywords(variables) in the RUNSPEC section. If both REGDIMS(NMFIPR) and TABDIMS(NTFIP) have been defined then the maximum of the two is used.</p>			None
4	FIPNAME	<p>A character string of up to five characters in length, defining the fluid in-place's name, as defined by the FIP keyword in the REGIONS section. For example, if the FIP keyword has been used to define a FIP group or family, named FIPBLK-A, then FIPNAME would be set to BLK-A.</p> <p>The default value of I* means that FIPNUM on this keyword applies to the standard FIPNUM array and not to the FIP defined group regions.</p>			I*
5	TARGET	<p>A real positive value that defines the average hydrocarbon pore volume weighted reservoir pressure target for the region, for which GRPNAME should attempt to satisfy.</p> <p>Note that the average pressure report in the RPTSCHED series of reports is a pore volume weight average reservoir pressure, not the average hydrocarbon pore volume weighted reservoir pressure specified by TARGET on this keyword. Thus, there will be small differences between the two numbers.</p>			None
		psia	barsa	atma	
6	ALPHA	<p>A real positive value that defines the proportionality constant used to control the flow rates in order to maintain/reach the TARGET average hydrocarbon pore volume pressure for the region. See equation (12.26).</p> <p>Larger values of ALPHA accelerate the time for the region's pressure to satisfy the required target pressure (TARGET). However, ALPHA values that are too large may cause the region's pressure to oscillate. Thus, the value of ALPHA should be a value that gives the expected steady state flow rate (TARGET) of the group divided by a reasonable transient pressure error.</p>			None
		Liquid stb/d/psia Gas Mscf/d/psia RESV: rb	Liquid sm ³ /day/bars Gas sm ³ /day/bars RESV: rm ³	Liquid scc/hour/atm Gas scc/hour/atm RESV: rcc	

No.	Name	Description			Default
		Field	Metric	Laboratory	
7	BETA	<p>A real positive value that defines the time interval used to control the flow rates in order to maintain the TARGET average hydrocarbon pore volume pressure for the region. See equation (12.26).</p> <p>Larger values of BETA reduce the tendency for the regional pressure to oscillate, but consequently decrease the rate at which the pressure reaches its target value. This is because the pressure error is measured at the end of the previous time step, resulting in a “delay” in the response. Also, the larger the time steps the greater the propensity for the pressure to oscillate for given ALPHA and BETA.</p> <p>As a guide BETA should be set to a value that is at least as large as the maximum time step size (see the TUNING keyword in the SCHEDULE section and section 2.2 Running OPM Flow 2021-10 From The Command Line for setting the maximum time step size).</p>			*
		day	day	day	

Notes:

1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.38: GPMaint Keyword Description

The GPMaint keyword utilizes control theory^{180, 181, 182 and 183} to calculate the required injection and production rates to ensure some stability in the behavior of the average hydrocarbon pore volume reservoir pressure for a given region and the injection rates over time. For example, if the group’s flow control (GRPCNT) is set to one of the in situ reservoir volume injection rates (GINJ, OILJ or WATJ), say Q , then the group’s flow injection rates for each time step is calculated by:

$$Q = Q_i + \alpha \left((P_{TARGET} - P_{i-1}) + \frac{\sum_{i=1}^{i-1} (P_{TARGET} - P_{i-1}) \times \Delta t_i}{\beta} \right) \quad (12.26)$$

Where:

- P_{TARGET} = the regions average hydrocarbon pore volume weighted reservoir pressure target, the TARGET parameter in Table 12.38.
- P_{i-1} = the resulting average hydrocarbon pore volume weighted reservoir pressure for the region from the preceding completed time step.
- Q = the new in situ reservoir volume rate.
- Q_i = the initial in situ reservoir volume rate at the time the keyword was activated in the input. Subsequent GPMaint keywords will reset Q_i .
- α = the proportionality constant used to control the flow rates, the ALPHA parameter in Table 12.38.
- β = the time interval parameter used to control the flow rates, the BETA parameter in Table 12.38.

¹⁸⁰ John Doyle, Bruce Francis, Allen Tannenbaum, *Feedback Control Theory*, Macmillan Publishing Co., 1990.

¹⁸¹ Karl J. Åström; Richard M. Murray (2008). *Feedback Systems: An Introduction for Scientists and Engineers*. Princeton University Press. ISBN 978-0-691-13576-2.

¹⁸² Andrei, Neculai (2005)., *Modern Control Theory – A Historical Perspective*, Research Institute for Informatics, Center for Advanced Modeling and Optimization, 8-10, Averscu Avenue, Bucharest 1, Romania.

¹⁸³ Sontag, Eduardo (1998). *Mathematical Control Theory: Deterministic Finite Dimensional Systems. Second Edition*, Springer. ISBN 978-0-387-98489-6.

The $\sum_{i=1}^{i-1} (P_{TARGET} - P_{i-1}) \times \Delta t_i$ term in equation (12.26) is the cumulative sum of the average hydrocarbon pore volume weighted reservoir pressure error for the region, times the time step length, from when the last GPMAINT keyword was entered, up to the preceding completed time step.

The objective of equation (12.26) is to stabilize the injection/production rates for the group for when there are changes to the average hydrocarbon pore volume weighted reservoir pressure target set by the initial and subsequent GPMAINT keywords, or by any group constraints applied afterwards. In addition, if the pressure error is small $(P_{TARGET} - P_{i-1})$ then the equation should result in approximately the same rates as the previous time step, if the GPMAINT has been previously entered.

However, if the first time the keyword is entered coincides with the start of injection, then Q_i in equation (12.26) by definition will be zero, and the injection rate will start from zero and increase as calculated by the equation. The ALPHA and BETA parameters in Table 12.38 can be used to control how the rate is built up to meet the desired average hydrocarbon pore volume weighted reservoir pressure target.

Examples

The first example uses the gas surface rate to maintain the fields' average hydrocarbon pore volume pressure at 225 barsa, with the ALPHA and BETA parameters set to 40.0 and 70.0 respectively.

```
--
--          GROUP PRESSURE MAINTENANCE TARGETS AND CONTROLS
--
-- GRUP  CNTL  FIPNUM  FIP  PRESS  ALPHA  BETA
-- NAME  MODE  REGION  FIPNAME TARGET  CONST  CONST
GPMAINT
FIELD    GINS    0      1*    225    40.0   70.0   /
/
```

The second example uses group's BLK-A gas surface rate to maintain the average hydrocarbon pore volume pressure at 200 barsa for FIPNUM regions one to four, with the ALPHA and BETA parameters set to 40.0 and 70.0 respectively.

```
--
--          GROUP PRESSURE MAINTENANCE TARGETS AND CONTROLS
--
-- GRUP  CNTL  FIPNUM  FIP  PRESS  ALPHA  BETA
-- NAME  MODE  REGION  FIPNAME TARGET  CONST  CONST
GPMAINT
BLK-A    GINS    1      1*    200    40.0   70.0   /
BLK-A    GINS    2      1*    200    40.0   70.0   /
BLK-A    GINS    3      1*    200    40.0   70.0   /
BLK-A    GINS    4      1*    200    40.0   70.0   /

BLK-B    WINJ    1      FLT-B  215    30.0   65.0   /
BLK-B    WINJ    2      FLT-B  215    30.0   65.0   /
BLK-B    WINJ    3      FLT-B  215    30.0   65.0   /
BLK-B    WINJ    4      FLT-B  215    30.0   65.0   /
/
```

For group BLK-B, water in situ reservoir volume injection rate (RESV) is used to maintain FIP group/family FLT-B's average reservoir pressure at 215 barsa for FIPFLT-B regions one to four. Here the ALPHA and BETA parameters set to 30.0 and 65.0 respectively.

12.3.106 GRADGRUP – DEFINE GROUP HISTORY MATCH GRADIENT FILE OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GRADGRUP keyword defines the SUMMARY field and group vectors that should be written to the History Match Gradient output file, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.107 GRADRESV – DEFINE SOLUTION DERIVATIVE HISTORY MATCH GRADIENT OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GRADRESV keyword defines the SOLUTION derivative arrays that should be written to the History Match Gradient output file, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.108 GRADRFT – DEFINE RFT DERIVATIVE HISTORY MATCH GRADIENT OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GRADRFT keyword defines the derivative well RFT data, the SOLUTION pressure and saturations at a well's connected grid block, that should be written to the History Match Gradient output file, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.109 GRADWELL – DEFINE WELL HISTORY MATCH GRADIENT FILE OUTPUT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GRADWELL keyword defines the SUMMARY well vectors that should be written to the History Match Gradient output file, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.110 GRDREACH – DEFINE RIVER AND GRID BLOCK CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GRDREACH keyword defines the location of grid blocks connecting to a previously defined river, for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.111 GRUPMAST – DEFINE MASTER AND SLAVE GROUPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GRUPMAST keyword defines master groups and their associated slave groups for when the Reservoir Coupling option as been activated by the GRUPMAST and SLAVES keywords in the SCHEDULE section. Reservoir coupling allows for independent reservoir simulation decks (SLAVES) to be controlled by a separate master run file. For example, if there are five separate reservoir models each representing one field, one of the four would be used as the master and the other four would be the subordinate SLAVES.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.112 GRUPNET – DEFINE GROUP STANDARD NETWORK PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GRUPNET keyword defines the standard group network parameters used to model the flow and pressures behavior within the network. The group hierarchy is defined by the GRUPTREE keyword and wells are assigned to groups using the WELSPECS keyword, both keywords are in the SCHEDULE section.

Group pressure values are optionally entered for each group in the network together with a vertical lift performance (“VFP”) table that determines the pipeline pressure behavior from the LOWER group to the HIGHER given the current flowing conditions; the group relationship is defined by the GRUPTREE keyword. The VPP table is entered via the VFPPROD keyword for production pipelines and VFPINJ for injection pipelines. Although these keywords are the same as used for well modeling, they are also used for pipeline modeling as well; however, the manner in which they are generated by an external software is completely different.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the network parameters are being defined. The group named FIELD is the top most group and may be used as a GRUPNAME.			None
2	PRES	A real value that defines the fixed pressure for this group when the group is a terminating group. If the group is not a terminating group then PRES should be defaulted with I* or set to a negative number.			I*
		psia	barsa	atma	
3	VFPTAB	A positive integer greater than or equal to zero that defines the VFPPROD or VFPINJ vertical lift performance table to be used for calculating the pipeline pressures connecting the LOWER and HIGHER group in the network. Note that: <ol style="list-style-type: none"> 1) The default value of zero implies that there is no pipeline connecting the LOWER and HIGHER groups. 2) If PRES is set to a real positive number then VFPTAB should be set to zero as this implies that GRPNAME is a terminating group and therefore there is no pipeline connecting GRPNAME to a HIGHER group. 3) If PRES and VFPTAB are defaulted with I* or zero, then GRPNAME is not part of the network. 4) IF VFPTAB is set equal to 9999 then this implies that there is no pressure change between the LOWER and HIGHER group. If a non-zero value is entered then the vertical lift performance tables must be entered via the VFPPROD or VFPINJ keyword in the SCHEDULE section.			0

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	ALQ-PIPE	<p>A real positive value that defines the artificial lift quantity to be used in conjunction with the VFPPROD assigned to the group via VPFTAB variable. VFPTAB vertical lift performance table and the artificial lift quantity ALQ-WELL are used with the pipeline fluid rates to calculate the pipeline pressures between the LOWER and HIFGHER groups.</p> <p>Note that the units for ALQ-PIPE is dependent on the associated variable on the VFPPROD keyword and may represent a pump or a compressor depending how the VFPPROD table was generated was generated by an external program.</p>			0.0
5	OPTIONI	<p>A defined character string that defines if a group's production target should be achieved by adjusting the tubing pressure of the wells within the group or by the adjusting the well rates by their guide rate. OPTIONI should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) YES: the group production target is achieved by adjusting the tubing pressure of the wells within the group, so that all wells flow at the same tubing head pressure. This is normally used for wells that flow into a common manifold, for example a sub-sea completion manifold. If a group is using this option and has a higher group with production targets or constraints, than this group should have have it's guide rate set via the GCONPROD keyword in the SCHEDULE section, to ensure that the well's within this group operate at the same tubing head pressure. 2) NO: the group production target is achieved by adjusting the guide rates of the wells within the group. This is the standard method in matching group targets and may result with the wells within the having different tubing head pressures. <p>Only groups containing wells can use OPTIONI equal to YES or NO, a group without wells should set OPTIONI to NO.</p> <p>Numerical convergence controls and iteration limits for wells using OPTIONI set equal to YES are defined via the NETBALAN keyword in the SCHEDULE section.</p>			NO

No.	Name	Description			Default
		Field	Metric	Laboratory	
6	OPTION2	<p>A defined character string that defines if how gas lift gas flows through the group's pipeline. OPTION2 should be set to one of the following character strings:</p> <ul style="list-style-type: none">1) NO: no gas lift gas is allowed to flow through the pipeline only produced reservoir gas is allowed to flow through the pipeline.2) FLO: both gas lift gas and produced reservoir gas are allowed to flow through the pipeline. Gas lift gas is calculated from summing the calculated gas lift values of all the subordinate wells. Here the summed well gas lift gas (ALQ-WELL), the pipeline gas lift gas (ALQ-PIPE), and the reservoir produced gas are added to the gas flow rate along the pipeline.3) ALQ: both gas lift gas and produced reservoir gas are allowed to flow through the pipeline. Gas lift gas is calculated from summing the calculated gas lift values of all the subordinate wells. Here the summed ALQ-WELL gas lift gas is added to the reservoir produced gas flow rate along the pipeline. This means that ALQ-PIPE gas lift gas value declared on item (4) is ignored. <p>If either FLO or ALQ have been selected then artificial lift quantity for the pipeline (ALQ-PIPE) and the wells (ALQ-WELL) must be defined as gas lift gas on the VFPPROD tables. A well's specific gas lift gas quantity is set via the ALQ-WELL variable on the WCONPROD keyword in the SCHEDULE section.</p>			NO
7	OPTION3	<p>A defined character string that defines if the ALQ-PIPE variable should be reset to an equivalent surface oil or gas density flowing along the pipeline. OPTION3 should be set to one of the following character strings:</p> <ul style="list-style-type: none">1) DENO: set ALQ-PIPE to the average surface density of the oil flowing along the pipeline.2) DENG: set ALQ-PIPE to the average surface density of the gas flowing along the pipeline.3) NONE: the group production target is achieved by adjusting the guide rates of the wells within the group. This is the standard method in matching group targets and may result with the wells within the having different tubing head pressures. <p>If either DENO or DENG have been selected then artificial lift quantity on the VFPPROD tables must be based on the same density parameter. These options are normally used when a mixture of oil or gas with different surface densities flows into the network.</p>			NONE
Notes:					
1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.39: GRUPNET Keyword Description

See also the WELSPCE keyword to define wells, the VFPPROD and VFPINJ keywords that the define vertical lift performance table to be used for calculating the pipeline pressures connecting the LOWER and HIGHER group in the network. All the aforementioned keywords are described in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Examples

The following example defines a network based on two groups

```
--
--      DEFINE GROUP STANDARD NETWORK PARAMETERS
--
-- GRUP  CNTL  VFP  PUMP  MANIFOLD  INCLUDE  ALQ
-- NAME  PRES  TABLE  POWER  GROUP  LIFT GAS  DENS
GRUPNET
PROD-A   1200.  1*
PROD-B   1*    1    1*  'YES'    1*    1*
/
```

The next example is more complex and is taken from the Norne model.

```
--
--      DEFINE GROUP STANDARD NETWORK PARAMETERS
--
-- GRUP  CNTL  VFP  PUMP  MANIFOLD  INCLUDE  ALQ
-- NAME  PRES  TABLE  POWER  GROUP  LIFT GAS  DENS
GRUPNET
FIELD   20.0  5*
PROD    20.0  5*
MANI-B2 1*    8    1*    NO    2*
MANI-B1 1*    8    1*    NO    2*
MANI-K1 1*    9999  4*
B1-DUMMY 1*    9999  4*
MANI-D1 1*    8    1*    NO    2*
MANI-D2 1*    8    1*    NO    2*
MANI-K2 1*    9999  4*
D2-DUMMY 1*    9999  4*
MANI-E1 1*    9    1*    NO    2*
MANI-E2 1*    9    4*
```

Here the FIELD controlling pressure is set at 20 barsa and the same limit is used for group PROD which sits directly under the FIELD group (see Figure 12.4)

12.3.113 GRUPRIG – GROUP DRILLING AND WORKOVER RIG SPECIFICATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

Defines a groups drilling and workover specifications.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.114 GRUPLAV – DEFINE SLAVE GROUPS IN SLAVE RESERVOIRS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GRUPLAV keyword defines slave groups in a slave input deck and their associated master groups in the master run, for when the Reservoir Coupling option has been activated by the GRUPMAST and SLAVES keywords in the SCHEDULE section. This keyword is required for every slave input deck. Reservoir coupling allows for independent reservoir simulation decks (SLAVES) to be controlled by a separate master run file. For example, if there are five separate reservoir models each representing one field, one of the four would be used as the master and the other four would be the subordinate SLAVES.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.115 GRUPTARG – MODIFY GROUP TARGETS AND CONSTRAINTS VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The GRUPTARG keyword modifies the target and constraints values of both rates and pressures for previously defined groups without having to define all the variables on the group control keywords: GCONPROD or GCONPRI keywords. Variables not changed by the GRUPTARG keyword remain the same as those previously entered via the group control keywords or previously entered GRUPTARG keywords. Note that the group must still be initially be fully defined using the GCONPROD or GCONPRI keywords. All the aforementioned keywords are described in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Note that wells are allocated to groups when the wells are specified by the WELSPECS keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the group name for which the group target and constraints are being defined. The group named FIELD is the top most group and should be used to set targets and constraints for the field. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
2	TARGET	A defined character string that sets the item to be changed for the group the value of the item is set by item (3). 1) ORAT: reset the surface oil production rate value as defined by item (3). 2) WRAT: reset the surface water production rate value as defined by item (3). 3) GRAT: reset the surface gas production rate value as defined by item (3). 4) LRAT: reset the surface liquid (oil plus water) production rate value as defined by (3). 5) RESV: reset the in situ reservoir volume rate value as defined by (3). 6) GUID: reset the guide rate value for wells operating under group control. Note TARGET only defines the variable to be changed, it does not change how a group is controlled. For example, if a group is operating on ORAT control, as defined by the previously entered GCONPROD keyword, entering TARGET equal to LRAT with a value, changes the liquid constraint but the group still remains on ORAT control. Use the GCONPROD or GCONPRI keywords in the SCHEDULE section to change the control mode of a well.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	VALUE	A real positive value that defines the value of the variable declared by TARGET			None
	Liquid	stb/d	sm ³ /day	scc/hour	
	Gas	Mscf/d	sm ³ /day	scc/hour	
	Res Vol	rb/d	rm ³ /day	rcc/hour	
	Pressure	psia	barsa	atma	

Notes:

1) The keyword is followed by any number records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.40: GRUPTARG Keyword Description

See also the WELTARG and WELCNTL keyword, in the SCHEDULE section that can be used to reset a well's control mode, as well as a well's target and constraints of both rates and pressures.

Example

The following example below shows the oil rates for the field at the start of the schedule section (January 1, 2000).

```

-----
-- 01 JAN 2000 START OF SCHEDULE SECTION
-----
--
--          GROUP PRODUCTION CONTROLS
--
-- GRUP  CNTL  OIL    WAT    GAS    LIQ    CNTL  GRUP  GUIDE  GUIDE  CNTL
-- NAME  MODE  RATE   RATE   RATE   RATE   OPT   CNTL  RATE   DEF   WAT
GCONPROD
FIELD   ORAT  40E3   60E3   30E3   65E3   1*    1*    1*    1*    1*    /
/
DATES
01 FEB 2000 /
/
--
--          GROUP PRODUCTION AND INJECTION TARGETS
--
--          GROUP    GROUP    TARGET
--          NAME      TARG     VALUE
GRUPTARG
FIELD     ORAT      45E3
FIELD     LIQ       75E3
/
/

```

From January 1, 2000 to February 1, 2000 the field is on oil rate control and has a target oil rate of 40,000 stb/d, a maximum water handling capacity of 60,000 stb/d, a maximum liquid capacity of 65,000 stb/d, and a maximum gas constraint of 30 MMscf/d. After February 1, 2000 the field's target oil rate is increased to 45,000 stb/d and the maximum liquid constraint is increased to 75,000 stb/s; all the other parameters remain unchanged.

12.3.116 GRUPTREE – DEFINE GROUP TREE HIERARCHY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

GRUPTREE defines the group hierarchy of groups that have been created by having wells assigned to them via the WELSPEDS keyword in the SCHEDULE section, By default three group levels are defined that sets the wells as level three, reporting directly to defined groups at level two, and the level two groups reporting to the FIELD group at level one. If a different configuration is required then the GRUPTREE keyword should be used to define the group hierarchy by defining a lower level group that reports directly to a higher level group.

No.	Name	Description	Default
1	LOWER	A character string of up to eight characters in length that defines the group name which belongs to the HIGHER group. The group named FIELD is the top most group and should NOT be used as a group name for the LOWER group name. Undefined group relationships are automatically assigned to the FIELD group.	None
2	HIGHER	A character string of up to eight characters in length that defines the HIGHER group name that the LOWER group belongs to. The group named FIELD is the top most group and can be used as the HIGHER group name. Undefined group relationships are automatically assigned to the FIELD group.	None
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".			

Table 12.41: GRUPTREE Keyword Description

A group hierarchy can have any number of levels but groups that have other groups as LOWER groups cannot also have wells for the HIGHER group. Thus, a group either contains wells or has LOWER groups

See also the GCONPROD and GCONINJE for defining group production and injection volumes, and the WELSPEDS keywords to allocate wells to groups. All the aforementioned keywords are described in the SCHEDULE section.

Examples

The first example defines PLAT01 and PLAT03 reporting to the FIELD level (default if these records are omitted) and PLAT02 reporting to PLAT01.

```
--
--      DEFINE GROUP TREE HIERARCHY
--
--      LOWER      HIGHER
--      GROUP      GROUP
GRUPTREE
      PLAT01      FIELD
      PLAT02      PLAT01
      PLAT03      FIELD
/
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

The next example is more complex and is taken from the Norne model.

```
--
--      DEFINE GROUP TREE HIERARCHY
--
--      LOWER      HIGHER
--      GROUP      GROUP
GRUPTREE
    'INJE'        'FIELD'
    'PROD'        'FIELD'
    'MANI-B2'     'PROD'
    'MANI-B1'     'PROD'
    'MANI-D1'     'PROD'
    'MANI-D2'     'PROD'
    'MANI-E1'     'PROD'
    'MANI-E2'     'PROD'
    'MANI-K1'     'MANI-B1'
    'MANI-K2'     'MANI-D2'
    'MANI-C'      'INJE'
    'MANI-F'      'INJE'
    'WI-GSEG'     'INJE'
    'B1-DUMMY'    'MANI-B1'
    'D2-DUMMY'    'MANI-D2'
```

The group hierarchy for this example is shown below.

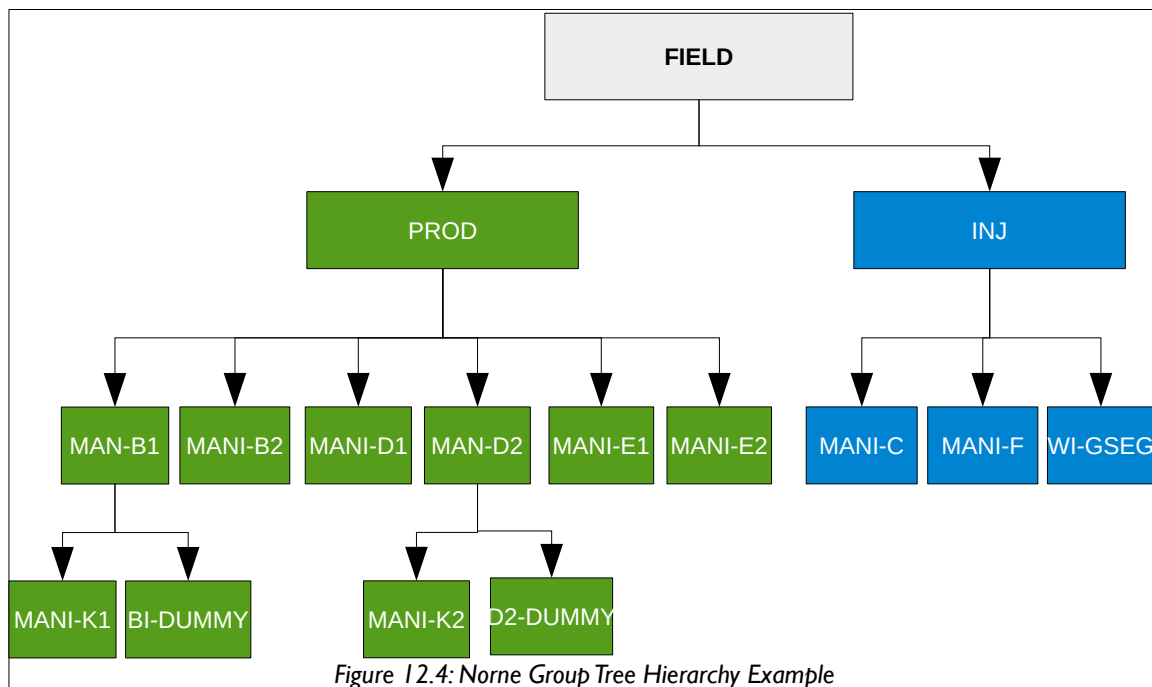


Figure 12.4: Norne Group Tree Hierarchy Example

Here groups PROD, INJ, MAN-B1, and MAN-D2 report to higher level groups and the other remaining groups all have individual wells allocated to them instead.

12.3.117 GSATINJE – DEFINE GROUP SATELLITE INJECTION RATES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GSATINJE keyword defines a satellite group's oil, gas and water injection rates in the model. Satellite groups are not connected to the reservoir model and therefore have no wells or subordinate groups associated with them, they are nevertheless connected to other higher level groups and higher level groups within a network model (if activated). They thus provide a means to “add-in” outside injection and production to the model without modeling the “add-in” reservoir model.

The keyword is used to define injection rates into the model from other sources (fields, reservoirs etc.) that are not defined in the current run. For example, if a several fields are producing through a common plant (field A, B and C), but only one is being modeled in the current input deck (A), then injection and production from the other two fields (B and C) can be incorporated into model in order to meet the plant injection rates for field A. Note in this case the import rates from fields B and C are fixed, and therefore field A acts like a “swing” injector to match the overall injection requirement.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the satellite group name for which the group injection rates are being defined. The group named FIELD is the top most group and should <u>not</u> be used to set targets and constraints for the whole field. Note that the group hierarchy should be defined by the GRUPTREE keyword in the SCHEDULE, when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy. <u>Note that a satellite group cannot have subordinate groups or wells.</u>			None
2	TYPE	A defined character string that defines the type of injection fluid. TYPE should be set to one of the following character strings: 1) GAS: for a gas injection well. 2) OIL: for a water injection well. 3) WAT: for a water injection well.			0.0
3	RATE	A real positive value that defines the surface injection rate for the phase declared by the TYPE variable.			0.0
		Liquid stb/d Gas Mscf/d	Liquid sm ³ /day Gas sm ³ /day	Liquid scc/hour Gas scc/hour	
4	RESV	A real positive value that defines the reservoir volume injection rate for the phase declared by the TYPE variable for the satellite group. Generally, RESV should be set to zero, unless one wishes to have the satellite reservoir volume rate added to the group's superordinate groups. If RESV is set to zero for all satellite groups and if the superordinate group has a reservoir volume injection target, a voidage replacement target, or a production balancing fraction target, then only the non-satellite group volumes will be used.			0.0
		rtb/d	rm ³ /day	rcc/hour	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	CALRATE	Calorific injection rate used in the commercial compositional simulator. Not used and should be defaulted with I* or zero.			0.0
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.42: GSATINJE Keyword Description

See also the GSATPROD and GRUPTREE keywords to define satellite production rates and the group hierarchy, respectively. For non-satellite groups see the GCONINJE and GCONPROD keywords. All the aforementioned keywords are in the SCHEDULE section.

Note

Once a group has been defined to be a satellite group, via the GSATINJE and GSATPROD keywords, then the equivalent modeled group keywords, GCONINJE and GCONPROD in the SCHEDULE section, cannot be used to set the operating conditions for satellite groups, only the GSATINJE and GSATPROD keywords may be used.

Example

The example below is based on an oil field, with the main field FLD-A being modeled in the input deck with two groups (FLD-A1 and FLD-A2), combined with one satellite field supplementing oil production and water injection (FLD-B).

```

-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
--   DEFINE GROUP TREE HIERARCHY
--   LOWER      HIGHER
--   GROUP      GROUP
GRUPTREE
      FLD-A      FIELD
      FLD-A1     FLD-A
      FLD-A2     FLD-A
      FLD-B      FIELD
/
--
--   GROUP PRODUCTION CONTROLS
--
-- GRUP  CNTL  OIL    WAT    GAS    LIQ    CNTL  GRUP  GUIDE  GUIDE  CNTL
-- NAME  MODE  RATE   RATE   RATE   RATE   OPT   CNTL  RATE   DEF    WAT
GCONPROD
FIELD    ORAT  20E3   30E3   50E3  1*    1*    1*
FLD-A    FLD   20E3   30E3   50E3  1*    1*    1*
/
--
--   LOAD INCLUDE FILE - LOAD ALL WELLS AND VFP TABLES
--
INCLUDE
      'FLD-A-P50-WELLS.INC' /

```

```
--
--      GROUP INJECTION TARGETS AND CONSTRAINTS
--
--  GRUP  FLUID  CNTL   SURF   RESV   REINJ   VOID   GRUP   GUIDE   GUIDE   GRUP   GRUP
--  NAME  TYPE   MODE   RATE   RATE   FRAC    FRAC   CNTL   RATE   DEF    REINJ  RESV
GCONINJE
FIELD    WAT    REIN   35E3   1*     1*     1.0    NO     1*     1*     1*     1*   /
/
--
--      SATELLITE GROUP PRODUCTION CONTROLS
--
--  GRUP  OIL    WAT    GAS    RESV   GAS    CALORIFIC
--  NAME  RATE   RATE   RATE   RATE   LIFT   RATE
GCONPROD
FLD-B    5E3     0.00   2E3    1*     1*                /
/
--
--      SATELLITE GROUP INJECTION CONTROLS
--
--  GRUP  FLUID  SURF   RESV   CALORIFIC
--  NAME  TYPE   RATE   RATE   RATEV
GSATINJE
FLD-B    WAT    10E3   1*     1*                /
/
--
--      ADVANCE SIMULATION BY REPORTING DATE
--
DATES
1  FEB   2021  /
/
--
--      SATELLITE GROUP PRODUCTION CONTROLS
--
--  GRUP  OIL    WAT    GAS    RESV   GAS    CALORIFIC
--  NAME  RATE   RATE   RATE   RATE   LIFT   RATE
GCONPROD
FLD-B    5E3     0.00   2E3    0.0    1*                /
/
--
--      SATELLITE GROUP INJECTION CONTROLS
--
--  GRUP  FLUID  SURF   RESV   CALORIFIC
--  NAME  TYPE   RATE   RATE   RATEV
GSATINJE
FLD-B    WAT    10E3   1*     1*                /
/
```

Here FLD-B will supplement FLD-A's water re-injection rated by 10,000 stb/d of water, subject to a maximum field water injection rate of 35,000 stb/d of water on the GCONINJE keyword. This means that FLD-A's maximum water injection rate cannot exceed 25,000 stb/d. In terms of oil rates, GCONPROD defines a maximum oil rate of 20,000 stb/d of which 5,000 stb/d is from FLD-B. If any of the constraints on the GCONINJE and GCONPROD keywords are violated, then the appropriate action will occur only for FLD-A, in order to ensure the group constraints are honored.

12.3.118 GSATPROD – DEFINE GROUP SATELLITE PRODUCTION RATES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GSATPROD keyword defines a satellite group's oil, gas and water production rates in the model. Satellite groups are not connected to the reservoir model and therefore have no wells or subordinate groups associated with them, they are nevertheless connected to other higher level groups and higher level groups within a network model (if activated). They thus provide a means to “add-in” outside injection and production to the model without modeling the “add-in” reservoir model.

The keyword is used to import additional fluids into the model from other sources (fields, reservoirs etc.) that are not defined in the current run. For example, if a several fields are supplying gas to a power plant (field A, B and C), but only one is being modeled in the current input deck (A), then production from the other two fields (B and C) can be incorporated into model in order to meet the plant demand. Note in this case the import gas rates from fields B and C are fixed, and therefore field A acts like a “swing” producer to match the gas demand target.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRPNAME	A character string of up to eight characters in length that defines the satellite group name for which the group production import rates are being defined. The group named FIELD is the top most group and should <u>not</u> be used with this keyword. Note that the group hierarchy should be defined by the GRUPTREE keyword in the SCHEDULE section when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy. <u>Note that a satellite group cannot have subordinate groups or wells.</u>			None
2	ORAT	A real positive value, greater than or equal to zero, that defines the satellite's surface oil production rate to be imported into the model.			0.0
		stb/d	sm ³ /day	scc/hour	
3	WRAT	A real positive value, greater than or equal to zero, that defines the satellite's surface water production rate to be imported into the model.			0.0
		stb/d	sm ³ /day	scc/hour	
4	GRAT	A real positive value, greater than or equal to zero, that defines the satellite's surface gas production rate to be imported into the model.			0.0
		Mscf/d	sm ³ /day	scc/hour	
5	RESV	A real positive value, greater than or equal to zero, that defines the satellite's reservoir volume production rate to be imported into the model.			0.0
		rtb/d	rm ³ /day	rcc/hour	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default		
		Field	Metric	Laboratory			
6	GASLIFT	A real value, greater than or equal to zero, that defines the satellite's gas lift gas to be imported for this group. A value for GASLIFT is only required if externally supplied gas lift is being imported into the model, and: 1) The Network Model is active in the input deck via the NETWORK keyword in the RUNSPEC section. Here, GASLIFT is applied to the production network in order to calculate the pressure drop through the network, for branches that have: 1) OPTION2 set to FLO on the GRUPNET keyword in the SCHEDULE section, or 2) the GASLIFT parameter on the NODEPROP keyword in the SCHEDULE section set to YES, for when the Extended Network Model is being used, as per the BRANPROP and NODEPROP keywords, in the SCHEDULE section. 2) The Gas Lift Optimization Model is active in the deck via the LIFTOPT keyword in the SCHEDULE section. In this case GASLIFT is applied to GRUPNAME's superordinate group's gas supply constraints based on the GLIFTOPT keyword in the SCHEDULE section. For clarity, GLIFTOPT constraint violations result in the groups being modeled having their rates adjusted, satellite group rates are not effected.					
		Mscf/d	sm ³ /day	scc/hour	0.0		
7	CALRATE	Calorific production rate used in the commercial compositional simulator. Not used and should be defaulted with I* or zero.			0.0		

Notes:

1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".

Table I 2.43: GSATPROD Keyword Description

See also the GSATINJE and GRUPTREE keywords to define satellite injection rates and the group hierarchy, respectively. For non-satellite groups see the GCONINJE and GCONPROD keywords. All the aforementioned keywords are in the SCHEDULE section.

Note

Once a group has been defined to be a satellite group, via the GSATINJE and GSATPROD keywords, then the equivalent modeled group keywords, GCONINJE and GCONPROD in the SCHEDULE section, cannot be used to set the operating conditions for satellite groups, only the GSATINJE and GSATPROD keywords may be used.

Example

The example below is based on a dry gas field, with the main field FLD-A being modeled in the input deck with two groups (FLD-A1 and FLD-A2), combined with two satellite gas fields, FLD-B and FLD-C.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
-- DEFINE GROUP TREE HIERARCHY
-- LOWER    HIGHER
-- GROUP    GROUP
GRUPTREE
    FLD-A    FIELD /
    FLD-A1   FLD-A /
    FLD-A2   FLD-A /
    FLD-B    FIELD /
    FLD-C    FIELD /
/
--
-- GROUP PRODUCTION CONTROLS
--
-- GRUP  CNTL  OIL    WAT    GAS    LIQ    CNTL  GRUP  GUIDE  GUIDE  CNTL
-- NAME  MODE  RATE   RATE   RATE   RATE   OPT   CNTL  RATE  DEF   WAT
GCONPROD
FIELD    GRAT  1*    1*    450E3  1*    1*    1*
FLD-A    FLD   1*    1*    450E3  1*    1*    1*
/
--
-- LOAD INCLUDE FILE - LOAD ALL WELLS AND VFP TABLES
--
INCLUDE
    'FLD-A-P50-WELLS.INC' /
--
-- SATELLITE GROUP PRODUCTION CONTROLS
--
-- GRUP  OIL    WAT    GAS    RESV    GAS    CALORIFIC
-- NAME  RATE   RATE   RATE   RATE    LIFT   RATE
GCONPROD
FLD-B    10.0   0.00   30E3   1*    1*
FLD-C    20.0   5.50   20E3   0.0    1*
/
--
-- ADVANCE SIMULATION BY REPORTING DATE
--
DATES
    1  FEB  2021 /
/
--
-- SATELLITE GROUP PRODUCTION CONTROLS
--
-- GRUP  OIL    WAT    GAS    RESV    GAS    CALORIFIC
-- NAME  RATE   RATE   RATE   RATE    LIFT   RATE
GCONPROD
FLD-B    10.0   0.00   30E3   0.0    1*
FLD-C    20.0   9.00   20E3   0.0    1*
/
```

Since the field gas rate is set to 450 MMscf/d and the satellite production is 50 MMscf/d, then FLD-A will produce only 400 MMscf/d and not the stipulated 450 MMscf/d on the GCONPROD keyword.

12.3.119 GSEPCOND – ASSIGN GROUP SEPARATORS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GSEPCOND keyword assigns previously defined separators to a group. Group separators are specified by the SEPVALS keyword in the SCHEDULE section. The facility is used in black-oil modeling to re-scale the PVT data entered via the PROPS section, based on the saturation point oil formation volume factor (B_{ob}) and the initial saturated gas-oil ratio (R_{si}) entered on the SEVPALS keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.120 GSSCPTST – PERFORM SUSTAINABLE CAPACITY TEST

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GSSCPTST keyword instructs the simulator to perform a sustainable capacity test. This causes the model to be saved in it's current state via the RESTART file, and the test performed by running the simulation under the current conditions combine with the parameters on this keyword. After the test is perform, the simulator will restart from the point prior to the test by loading in the RESTART file. This type of testing is normally applied to gas fields for which the gas sales contracts stipulate that the gas sales rates are based on a sustainable capacity rate over a fixed period of time.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.121 GSWINGF – DEFINE GROUP MULTIPLE GAS CONTRACT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, GSWINGF, defines the gas contract parameters, swing factor and the monthly seasonal profile factor, for when there are multiple gas contracts being used in the model. The keyword is used with the Gas Field Operations option which is activated by the GASFIELD keyword in the RUNSPEC section. Gas contracts are commonly based on a Daily Contract Quantity (“DCQ”) that determines the gas rate that the field should be produced at, which is normally expressed as a multiple of the DCQ, for example 1.33, and is often referred to as the “swing factor”. Some gas contracts also define a maximum DCQ (“Max DCQ”) and/or a minimum take or pay DCQ (“Min DCQ”), as well as seasonal demand characteristics. For example, gas rates may be set higher in the winter months in order to meet heating demand compared with summer months in colder climates, and the opposite in warmer climates where air conditioning demand is high.

Thus, the DCQ must be calculated first over a contract period, where the contract period is commonly contract years, or in some instances contract quarters. This is performed by the simulator using the current DCQ and checking to see if the (DCQ × Swing Factor) can be satisfied throughout the current contract period, if not the DCQ is re-calculated so that the (DCQ × Swing Factor) condition is satisfied. Once this condition is met, the second and final pass uses the calculated DCQ in conjunction with the monthly scaling profile data to set the monthly gas rate for the field:

$$Q_{month} = DCQ \times SWINGFAC_{month} \quad (12.27)$$

Where:

Q_{month} = the monthly gas production target

DCQ = Daily Contract Quantity

SWINGFAC_{month} = monthly rate scaling factor that takes into account seasonal demand, etc.

Here the GSWINGF keyword allows for different gas contract parameters to be assign to different groups and is mutually exclusive to the SWINGFAC keyword in the SCHEDULE section, that sets the gas contract parameters for a single contract at the FIELD group level.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.122 GTADD – ADD A CONSTANT TO A GROUP TARGET OR CONSTRAINT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GTADD, adds a numerical constant to a group's target or constraint value. The group must have been initially fully defined using the GCONPROD or GCONPRI keywords for producers or GCONINJE for injectors. Variables not changed by the GTADD keyword remain the same as those previously entered via the group control keywords or previously entered GTADD keywords. See also the GRUPTARG keyword that sets the values for a group's target and constraints and the GTMULT keyword that multiplies a group target or constraint by a constant. All the aforementioned keywords are described in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.123 GTMULT – MULTIPLY GROUP TARGET OR CONSTRAINT BY A CONSTANT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, GTMULT, multiplies a group's target or constraint value by a numerical constant. The group must have been initially fully defined using the GCONPROD or GCONPRI keywords for producers or GCONINJE for injectors. Variables not changed by the GTMULT keyword remain the same as those previously entered via the group control keywords or previously entered GTMULT keywords. See also the GRUPTARG keyword that sets the values for a group's target and constraints, and the GTADD keyword that adds a constant to a group's target or constraint. All the aforementioned keywords are described in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.124 GUIDECAL – SCALE GUIDE RATES BASED ON GAS CALORIFIC VALUE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GUIDECAL keyword defines a well or group's guide rate as a function of their calorific values, for when the individual wells and groups are under guide rate control. Group and well guide rates that have not been directly defined are set equal to their production potentials at the start of each time step. In this case the GUIDECAL keyword can be used to specify the coefficients of a function that takes into account the calorific value of the produced gas, effectively scaling the guide rates based on the calorific value of the gas being produced.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.125 GUIDERAT – DEFINE GROUP GUIDE RATE FORMULA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines a general formulae used to define a group's and well's guide rate as a function of the their potential. The default behavior, that is when this keyword is not invoked, is to set the target control mode and rate via the GCONCON keyword in the SCHEDULE section. In this case the target rate is distributed between the group's wells that are under group control using a well's guide rate. If a well's guide rate has not been defined, for example by this keyword, then the well potential of the group controlling phase at the beginning of the time step is used. For example, if the group target rate and phase is oil, then the well's under group control will have their oil rates determined by their oil rate potential¹⁸⁴. The GUIDERAT keyword substitutes the potential calculation with a more general formulae in the aforementioned distribution and allocation of the rates:

$$\text{Phase Guide Rate} = \frac{(\text{Potential}_{\text{Phase}})^A}{B + C(\text{Potential Ratio}_1)^D + E(\text{Potential Ratio}_2)^F} \quad (12.28)$$

Where:

- $\text{Potential}_{\text{Phase}}$ = the potential of the phase,
- A to F = constants define on this keyword,
- Potential Ratio_1 = the potential phase ratio as defined by this keyword,
- Potential Ratio_2 = the potential phase ratio as defined by this keyword.

The formulae can be used to control high water cut or high GOR wells in an oil field, such as the offending wells are given progressively smaller guide rates as they water out or gas out.

Note that groups can only have potential guide rates if they are subordinate in another group and required to produce a proportion of the superior group's target rate. In this case the GUIDERAT keyword can optionally be applied by setting GUIPHASE variable on the GCONPROD keyword in the SCHEDULE section. Group potentials are the sum of the potentials of their subordinate open wells.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TSTEP	<p>A real positive value that defines the minimum time interval to recalculate the guide rates. The guide rates are calculated at the start of a time step and the default value of zero means that the guide rates are calculated for each time step.</p> <p>A non-zero value for TSTEP resets the minimum interval, for example setting TSTEP equal to 30 would mean the guide rates are calculate every 30 days, or to the nearest associated time step.</p> <p>Calculating guide rates every time step may cause issues due to the rate dependent behavior; for example gas cusping or water coning causing the well rates to oscillate. In this case using a non-zero value of TSTEP may eliminate this oscillating behavior.</p>			0.0
		days	days	hours	

¹⁸⁴ Production and injection potentials are based on rates that are unrestricted. For wells this implies that well potential is calculated based on either the BHP or THP limit, which ever is the more constraining.

No.	Name	Description			Default																		
		Field	Metric	Laboratory																			
2	PHASE	<p>A defined character string that sets the potential phase guide rate for the group and well, the resulting <i>Phase Guide Rate</i> in equation (12.28). PHASE should be set to one of the following character strings:</p> <ul style="list-style-type: none">1) OIL: is set as the potential phase guide rate and in this case the <i>Potential Ratio₁</i> variable is the water-oil ratio ("WOR") and <i>Potential Ratio₂</i> refers to the gas-oil ratio ("GOR") in equation (12.28).2) LIQ: is set as the potential phase guide rate and the <i>Potential Ratio₁</i> variable is the water cut ("WCT") and <i>Potential Ratio₂</i> refers to the gas-liquid ratio ("GLR") in equation (12.28).3) GAS: is set as the potential phase guide rate with the <i>Potential Ratio₁</i> variable being the water cut ("WCT") and <i>Potential Ratio₂</i> referring to the oil-gas ratio ("OGR") in equation (12.28).4) RES: here the potential phase guide rate is defined as the reservoir fluid volume rate and the <i>Potential Ratio₁</i> variable is the water-oil ratio ("WOR") and <i>Potential Ratio₂</i> refers to the gas-oil ratio ("GOR") in equation (12.28).5) COMB: this option is uses the linearly combined phase guide rate based on the values entered on the LINCOM keyword in the SCHEDULE section. Here the <i>Potential Ratio₁</i> variable is the water divided by linearly combined phase and <i>Potential Ratio₂</i> refers to the gas divided by linearly combined phase in equation (12.28). <u>This option is not available in OPM Flow.</u>6) NONE: the Phase Guide Rate calculation is switch off and the well guides rates revert to the well potentials of their group target phase. <p>For reference, the units for the various options is given below .</p> <table><tr><td>WOR: dimensionless</td><td>dimensionless</td><td>dimensionless</td></tr><tr><td>WCT: dimensionless</td><td>dimensionless</td><td>dimensionless</td></tr><tr><td>WGR: stb/Mscf</td><td>dimensionless</td><td>dimensionless</td></tr><tr><td>GOR: Mscf/stb</td><td>dimensionless</td><td>dimensionless</td></tr><tr><td>GLR: Mscf/stb</td><td>dimensionless</td><td>dimensionless</td></tr><tr><td>OGR: stb/Mscf</td><td>dimensionless</td><td>dimensionless</td></tr></table>			WOR: dimensionless	dimensionless	dimensionless	WCT: dimensionless	dimensionless	dimensionless	WGR: stb/Mscf	dimensionless	dimensionless	GOR: Mscf/stb	dimensionless	dimensionless	GLR: Mscf/stb	dimensionless	dimensionless	OGR: stb/Mscf	dimensionless	dimensionless	None
WOR: dimensionless	dimensionless	dimensionless																					
WCT: dimensionless	dimensionless	dimensionless																					
WGR: stb/Mscf	dimensionless	dimensionless																					
GOR: Mscf/stb	dimensionless	dimensionless																					
GLR: Mscf/stb	dimensionless	dimensionless																					
OGR: stb/Mscf	dimensionless	dimensionless																					
3	A	A real value greater than or equal to -3 and less than or equal to 3, that defines coefficient A in equation (12.28).			0.0																		
4	B	B is a real positive value that defines coefficient B in equation (12.28).			0.0																		
5	C	C is a real value that defines coefficient C in equation (12.28).			0.0																		
6	D	D is a real value greater than or equal to -3 and less than or equal to 3, that defines coefficient A in equation (12.28).			0.0																		
7	E	E is a real value that defines coefficient E in equation (12.28).			0.0																		
8	F	D is a real value greater than or equal to -3 and less than or equal to 3, that defines coefficient A in equation (12.28).			0.0																		

No.	Name	Description			Default
		Field	Metric	Laboratory	
9	GROPT01	<p>A defined character string that determines if calculated phase guide rates should be allowed to increase (YES) or not (NO), and should be set to one of the following:</p> <p>1) NO: The phase guide rates calculated from equation (12.28) are not allowed to increase above the current value, and will be reset to the current value if the calculated value does exceed the current value.</p> <p>2) YES: The phase guide rates calculated from equation (12.28) are allowed to increase at each calculation. This may increase the propensity for oscillations in the rates if if the water cut and GOR are rate dependent.</p> <p>Note only the default value is currently supported by OPM Flow.</p>			YES
10	GROPT02	<p>A real positive value greater than or equal to zero and less than or equal to one that “dampens” the calculated phase guide rate based on the following formula:</p> $(Phase\ Guide\ Rate)_t^{new} = GROPT\ 02 \times (Phase\ Guide\ Rate)_t + (1 - GROPT\ 02) \times (Phase\ Guide\ Rate)_{(t-1)}$ <p>The option is intended to have a similar effect as the GROPT01 NO option to reduce oscillations as a result of either the water cut or GOR being rate dependent.</p> <p>Values approaching one allows the calculated phase guide rates to change instantaneously with the phase potentials, whereas values approaching zero dampen the potential guide rates towards the previously calculated values, thereby reducing the potential for oscillating behavior.</p>			1.0
11	GROPT03	<p>A defined character string that determines if “free” gas potential rates for the <i>Potential Ratio₂</i> variable in equation (12.28) should be used (YES), or if “free and associated” gas should be used (NO), and should be set to one of the following:</p> <p>1) NO: Use “free and associated” gas, that is total gas in the <i>Potential Ratio₂</i> variable.</p> <p>2) YES: Only utilize “free” gas in the <i>Potential Ratio₂</i> variable.</p>			NO
12	GROPT04	<p>A real positive value that sets the minimum potential guide rate. If the calculated potential guide is below this value it will be reset to GROPT04.</p> <p>The option is meant to avoid groups and wells being ignored due to the calculated potential guide rates being minuscule.</p>			1.0 x10 ⁻⁶
Notes:					
1) The keyword is terminated by a “/”.					

Table 12.44: GUIDERAT Keyword Description

Note that the GUIDERAT keyword only applies to production groups and wells, injection groups and wells are still control by their potential guide rates.

Finally, as mentioned previously, if the GUIDERAT or WGRUPCON keywords are not present in the input deck then the group and well potential guide rates will be calculated using the well's potential rates. The WGRUPCON keyword in the SCHEDULE section can be used to set a constant potential guide rate for a well.

Note

GUIDERAT can be used to penalize wells producing excessive water by utilizing the C and D coefficients in equation (12.28), and to discriminate against wells that are gassing out by setting the E and F coefficients.

Note that the value range through which *Potential Ratio*₁ and *Potential Ratio*₂ vary is variable. For example, if *Potential Ratio*₁ is water cut, then the value should be between zero and one, whereas for the water-oil ratio the value can vary between zero and infinity. The same applies to the units of *Potential Ratio*₂ which are on dependent on if the GOR, GLR or OGR ratio is used in the calculation.

One can use the C and E coefficients to scale these terms to the required relative magnitudes in the denominator and the D and F powers to influence how quickly the penalty increases with increasing water and gas fractions. High positive value for D and F coefficients will make production fall off rapidly as the water or gas fraction increases, while a negative values will favor producing these type of wells.

Note that the B coefficient should always be positive to prevent the denominator's going to zero.

Finally, if one wishes each well to produce in proportion to its potential when the water fraction and gas fraction are equal (the usual case), then the A coefficient should be set to one.

Examples

The first example sets the guide phase to oil and the resulting Phase Guide Rate based on oil potential based on setting the A and B coefficients to to one, that is:

$$\begin{aligned} \text{Phase Guide Rate} &= \frac{(\text{Potential}_{\text{Phase}})^A}{B + C(\text{Potential Ratio}_1)^D + E(\text{Potential Ratio}_2)^F} \\ &= \frac{\text{Oil Potential}^{1.0}}{1.0} \end{aligned} \quad (12.29)$$

with all the other parameters defaulted, except for the minimum time interval to re-calculate the guide rates which is set to 30 days..

```
--
--      SETS GUIDE RATES FOR GROUPS AND WELLS UNDER GUIDE RATE CONTROL
--
--      TIME  GUIDE  A      B      C      D      E      F      INCR  DAMP  FREE
--      STEP  PHASE  POW    CON    CON    POW    CON    POW    OPTN  OPTN  GAS
GUIDERAT
      30    'OIL'   1.0    1.0    1*    1*    1*    1*    1*    1*    1*    /
```

The next example sets the Phase Guide Rate to the reservoir fluid volume rate, with preference given to low GOR wells and with high GOR wells penalized, based on setting A and B to one, C and D to zero, E equal to 10 and F equal to two, that is:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

$$\begin{aligned} \text{Phase Guide Rate} &= \frac{(\text{Potential}_{\text{Phase}})^A}{B + C (\text{Potential Ratio}_1)^D + E (\text{Potential Ratio}_2)^F} \\ &= \frac{\text{Reservoir Fluid Volume Potential}^{1.0}}{1.0 + 10 \times (\text{GOR})^2} \end{aligned} \quad (12.30)$$

with all the other parameters defaulted.

```
--
--      SETS GUIDE RATES FOR GROUPS AND WELLS UNDER GUIDE RATE CONTROL
--
--      TIME  GUIDE  A    B    C    D    E    F    INCR  DAMP  FREE
--      STEP  PHASE  POW  CON  CON  POW  CON  POW  OPTN  OPTN  GAS
GUIDERAT
      1*    'OIL'  1.0  1.0  1*  1*  10   2    1*   1*   1*   /
```

The GUIDERAT keyword is very flexible but can also lead to unexpected results, thus it is probably useful to perform some manual calculations outside of the simulator before implementing the selected scheme in the input deck.

12.3.126 GUPFREQ – INSTANTANEOUS GRADIENT OPTION UPDATE FREQUENCY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GUPFREQ keyword sets the update frequency of the Instantaneous Gradient option for when this option has been activated by the GDIMS keyword in the RUNSPEC section. The Instantaneous Gradient option calculates derivatives of solution quantities at the current time step with respect to variations in the variables at the current time step. This is different to Gradient option that calculates the derivatives of solution quantities at the current time step with respect to variations in the variables at the initial time step, that is a time equal to zero. Consequently, the Instantaneous Gradient option can be switched on and off by the GUPFREQ keyword in the SCHEDULE section, whereas the Gradient option cannot.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.127 GWRTWCV – INSTANTANEOUS GRADIENT OPTION WELL VARIABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The GWRTWCV keyword defines the wells and instantaneous gradient parameters to be calculated and exported as SUMMARY vectors to the summary file, for when the Instantaneous Gradient option has been activated by the GDIMS keyword in the RUNSPEC section. The Instantaneous Gradient option calculates derivatives of solution quantities at the current time step with respect to variations in the variables at the current time step. This is different to Gradient option that calculates the derivatives of solution quantities at the current time step with respect to variations in the variables at the initial time step, that is a time equal to zero. Consequently, the Instantaneous Gradient option can be switched on and off by the GUPFREQ keyword in the SCHEDULE section, whereas the Gradient option cannot.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.128 HMWPIMLT – HISTORY MATCH WELL PRODUCTIVITY INDEX PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, HMWPIMLT, defines the history match gradient parameters for well productivity indices, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. Wells must be specified using the WELPSECS keyword in the SCHEDULE section and their connections defined by the COMPDAT and/or COMPDATL keywords, also in the SCHEDULE section

See also the HMDIMS keyword in the RUNSPEC section that specifies the dimensions for the gradient option, including the maximum number of gradient wellss that can be used with the History Match Gradient option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.129 INCLUDE – LOAD ANOTHER DATA FILE AT THE CURRENT POSITION

The INCLUDE keyword informs OPM Flow to continue reading input data from the specified INCLUDE file. When the end of the INCLUDE file is reached, or the ENDINC keyword is encountered in the included file, input data is read from the next keyword in the current file.

See [INCLUDE – Load Another Data File at the Current Position](#) in the GLOBAL section for a full description.

12.3.130 LGRFREE – ACTIVATE LOCAL GRID REFINEMENT INDEPENDENT TIME STEPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LGRFREE keyword activates the Local Grid Refinement (“LGR”) Independent Time Step option that allows the LGR to have solution time steps independent of the host grid for the stated LGR, and for when LGRs have been declared by the LGR keyword in the RUNSPEC section, and defined by the CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) keywords in the GRID section. LGR independent solution time stepping can be deactivated by the LGRLOCK keyword in the SCHEDULE section.

Currently, OPM Flow does not support the local grid refinement feature and therefore this keyword is ignored by the simulator.

No.	Name	Description	Default
I	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which independent solution time stepping is to be activated. The LGR must have been previously defined by the CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) keywords in the GRID section.	None
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.			

Table 12.45: LGRFREE Keyword Description

Example

The example below defines three oil LGRs(LGR-OP01,-OP02, and -OP03) and all the gas well LGRs (LGR-GP*) that should use independent solution time steps.

```
--
--      ACTIVATE LOCAL GRID REFINEMENT INDEPENDENT TIME STEPS
--
--      LGRNAME
LGRFREE
      LGR-OP01 /
      LGR-OP02 /
      LGR-OP03 /
      LGR-GP* /
/
```

12.3.131 LGRLOCK – DEACTIVATE LOCAL GRID REFINEMENT INDEPENDENT TIME STEPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LGRLOCK keyword deactivates the Local Grid Refinement (“LGR”) Independent Time Step option that allows the LGR to have solution time steps independent of the host grid for the stated LGR, that is the LGR will now follow the global grid solution time steps. LGRs must have declared by the LGR keyword in the RUNSPEC section, and defined by the CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) keywords in the GRID section. LGR independent solution time stepping can be activated by the LGRFREE keyword in the SCHEDULE section.

Currently, OPM Flow does not support the local grid refinement feature and therefore this keyword is ignored by the simulator.

No.	Name	Description	Default
I	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which independent solution time stepping is to be deactivated. The LGR must have been previously defined by the CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) keywords in the GRID section.	None
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.			

Table 12.46: LGRLOCK Keyword Description

Example

The example below defines three oil LGRs(LGR-OP01,-OP02, and -OP03) and all the gas well LGRs (LGR-GP*) that should have their independent solution time steps deactivated.

```
--
--      DEACTIVATE LOCAL GRID REFINEMENT INDEPENDENT TIME STEPS
--
--      LGRNAME
LGRLOCK
      LGR-OP01 /
      LGR-OP02 /
      LGR-OP03 /
      LGR-GP* /
/
```

12.3.132 LGROFF – DEACTIVATE A LOCAL GRID REFINEMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LGROFF keyword deactivates a stated Local Grid Refinement (“LGR”) and optionally sets the minimum number of wells below which the LGR will be automatically deactivated. LGRs must have declared by the LGR keyword in the RUNSPEC section, and defined by the CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) keywords in the GRID section. LGRs can subsequently be activated by the LGRON keyword in the SCHEDULE section.

Currently, OPM Flow does not support the local grid refinement feature and therefore this keyword is ignored by the simulator.

No.	Name	Description	Default
1	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which the LGR is being deactivated. The LGR must have been previously defined by the CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) keywords in the GRID section.	None
2	MNWELLS	A positive integer greater than or equal to zero that defines the minimum number of active wells, below which the LGR will be automatically deactivated. The default value of zero implies that there is no limit to the number of wells and results in the LGR being unconditionally being deactivated.	0
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.			

Table 12.47: LGROFF Keyword Description

Example

The example below unconditionally deactivates LGR-OP01, and sets the minimum number of active wells for deactivating LGR-OP02 and LGR-OP03 to one. For all the gas well LGRs (LGR-GP*) the minimum number of wells for deactivation is set to two.

```
--
--      DEACTIVATE LOCAL GRID REFINEMENTS
--
--      LGRNAME      MNWELLS
LGROFF
      LGR-OP01                      /
      LGR-OP02      1                /
      LGR-OP03      1                /
      LGR-GP*       2                /
/
```

12.3.133 LGRON – ACTIVATE A LOCAL GRID REFINEMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LGRON keyword activates a stated Local Grid Refinement (“LGR”) and optionally sets the minimum number of wells above which the LGR will remain active. LGRs must have declared by the LGR keyword in the RUNSPEC section, and defined by the CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) keywords in the GRID section. LGRs can subsequently be deactivated by the LGROFF keyword in the SCHEDULE section.

Currently, OPM Flow does not support the local grid refinement feature and therefore this keyword is ignored by the simulator.

No.	Name	Description	Default
1	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which the LGR is being activated. The LGR must have been previously defined by the CARFIN (Cartesian LGR grid) or RADIN/RADIN4 (radial LGR grid) keywords in the GRID section.	None
2	MNWELLS	A positive integer greater than or equal to zero that defines the minimum number of active wells, below which the LGR will be automatically deactivated. The default value of zero implies that there is no limit to the number of wells and results in the LGR being unconditionally being activated.	0
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.			

Table 12.48: LGRON Keyword Description

Example

The example below unconditionally activates LGR-OP01, and sets the minimum number of active wells for activating LGR-OP02 and LGR-OP03 to one. For all the gas well LGRs (LGR-GP*) the minimum number of wells for activating these LGRs is set to two.

```
--
--      ACTIVATE LOCAL GRID REFINEMENTS
--
--      LGRNAME      MNWELLS
LGRON
      LGR-OP01                      /
      LGR-OP02      1                /
      LGR-OP03      1                /
      LGR-GP*       2                /
/
```

12.3.134 LIFTOPT – ACTIVATE GAS LIFT OPTIMIZATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LIFTOPT keyword activates the gas lift optimization option and defines the gas lift gas increment size, the minimum incremental oil improvement, as well as the timing of the calculations. Note that the LIFTOPT keyword should precede any GLIFTOPT and WLIFTOPT keywords in the SCHEDULE section in order to activate the gas lift optimization facility.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GASLIFT	A real positive number that defines the gas lift gas size increment that is used to increase the gas lift size quantity in steps. For example, if GASLIFT is set to 0.5 MMscf/d then gas lift gas will be allocated in step of 0.5 MMscf/d to each well during the optimization process. A zero or negative value switches off gas lift optimization.			None
		Mscf/d	sm ³ /day	scc/hour	
2	MINOIL	MINOIL is a real positive value that defines the minimum increase in oil rate for a given quantity of gas lift gas, for when gas lift gas should be applied to a well. Additional GASLIFT will only be assigned to a well if: $\frac{\Delta Q_{Oil} \times OPTWGT}{GASLIFT} > MINOIL$ Where ΔQ_{Oil} is the incremental oil and OPTWGT is the well's weighting factor defined by the OPTWGT variable on the WLIFTOPT keyword in the SCHEDULE section.			None
		stb/Mscf	sm ³ /sm ³	scc/scc	
3	TSTEP	TSTEP is a real positive value that defines the frequency of the gas lift optimization calculations, for example setting TSTEP equal to 30 days would result in the gas lift optimization calculation being performed approximately every 30 days. The default value of zero will result in the calculations being performed every time step. Note if the group or well is part of a production network then gas lift optimization is performed at the same time as the network is being balance, that is this parameter is ignored in this scenario. See the NETBALAN keyword in the SCHEDULE section to set the network balancing frequency in this case.			0.0
		days	days	hours	

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	OPTLIFT	<p>A defined character string that determines if the gas lift optimization iterations should be performed for the same number of Newtonian iterations within a time step as used to update well targets, or to just use the first Newtonian iteration only.</p> <p>The NUPCOL keyword in the RUNSPEC section determines the number of Newtonian iterations used to update well targets during a time step.</p> <p>OPTLIFT should be set to one of the following:</p> <ul style="list-style-type: none">1) NO: In this case the gas lift optimization is only performed for the first Newtonian iteration for a time step and the distributed gas lift gas is then held constant for the groups and wells through resultant Newtonian iterations during the time step. This leads to better numerical performance, but may lead to the targets and constraints not being exactly satisfied if the reservoir conditions change during the time step calculations.2) YES: Sets the number gas lift optimization iterations to the same number of Newtonian iterations within a time step as used to update well targets, as per the NUPCOL keyword in the RUNSPEC section. This results in greater target and constraint accuracy even if the reservoir conditions change during the time step calculations, but at the expense of numerical performance. Similar to the NO option, after the NUPCOL Newtonian iteration during the time step, the distributed gas lift gas is then held constant for the groups and wells in subsequent Newtonian iterations.			
Notes:					
1) The keyword is terminated by a “/”.					

Table 12.49: LIFTOPT Keyword Description

See also the GLIFTOPT keyword to define the group gas lift optimization controls and the WLIFTOPT keyword to define the wells under gas lift optimization control, both keywords are described in the SCHEDULE section. The NUPCOL keyword in the RUNSPEC section that determines the number of Newtonian iterations used to update well targets and gas lift optimization calculations during a time step may also be of interest.

Example

The following example activates gas lift optimization for the field and defines the optimization parameters.

```
--          ACTIVATE GAS LIFT OPTIMIZATION AND PARAMETERS
--
-- INCR      INCR      TSTEP      NEWTON
-- GAS       OIL       INTVAL     OPTN
LIFTOPT
12.5E3      5E-3      0.0        YES
```

Here the maximum incremental gas lift gas quantity is set to $12.5 \times 10^3 \text{ m}^3$, the minimum incremental oil gain per m^3 of gas lift gas is set to $5.0 \times 10^{-3} \text{ m}^3$, the time step interval is set to zero to perform the gas optimization every time step, and finally the gas lift optimization will be performed NUPCOL Newtonian iterations for the time step.

12.3.135 LINCOM – DEFINE LINEAR COMBINATION COEFFICIENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The LINCOM keyword defines the oil, gas and water coefficients for the Linear Combination facility which allows for a linear combination of the aforementioned phase rates and volumes to be used as targets and constraints in controlling group and well production and injection data. See also the LCUNIT in the PROPS section that defines the units for linear combination equation.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.136 MATCORR – ACTIVATE THE MATERIAL BALANCE CORRECTION OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The MATCORR keyword activates the Material Balance Correction option used to adjust the accumulated material balance error in the simulation.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.137 MESSAGE – OUTPUT USER MESSAGE

The MESSAGE keyword outputs a user message to the terminal, as well as to the print (*.PRT) and debug (*.DBG) files. Note this is different to the MESSAGES keyword, that defines OPM Flows message print limits and stop limits generated by the simulator.

See [MESSAGE – Output User Message](#) in the GLOBAL section for a full description.

12.3.138 MESSAGES – DEFINE MESSAGE PRINT LIMITS AND STOP LIMITS

The MESSAGES keyword defines the print and stops levels for various messages. The “print limits” set the maximum number of messages that will be printed, after which no more messages will be printed and the “stop limits” terminate the run when these limits are exceeded. There are six levels of message that increase in severity from informative all the way to programming errors, as outlined in Table 4.5.

See [MESSAGES – Define Message Print Limits and Stop Limits](#) in the GLOBAL section for a full description.

12.3.139 MESSOPTS – RESET SEVERITY LEVEL FOR FORCED TIME STEPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, MESSOPTS, resets the severity level for time steps that are forced to be accepted by the simulator. The normal severity level for this type of simulator generated message is PROBLEM and this can result in the run stopping depending on the parameters entered on the MESSAGES keyword. MESSOPTS can be used to reset the severity level to MESSAGE, COMMENT, WARNING, or PROBLEM; for example, to avoid the run terminating due to too many PROBLEM messages.

Note that the MESSAGES keyword is a global keyword can therefore be used in any section; however, only the last instance of the keywords is active. The MESSOPTS keyword can only be used in the SCHEDULE section but can be used multiple times to change the severity level for forced time steps. Again, only the last occurrence of the keyword is active.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.140 MULSGGD – MULTIPLY MATRIX-FRACTURE COUPLING FOR OIL-GAS GRAVITY DRAINAGE FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, MULSGGD, defines a constant multiplier to modify the matrix-fracture coupling transmissibility for dual porosity and dual permeability models, for when the alternative matrix-fracture coupling transmissibilities for oil-gas gravity drainage has been selected. The alternative matrix-fracture coupling transmissibilities for oil-gas gravity drainage option is activated via the SIGMAGD or SIGMAGDV keywords in the GRID section, and the dual porosity or dual permeability models are activated by the DUALPORO or DUALPERM keywords in the RUNSPEC section, respectively.

This keyword applies the multiplier for all cells in model; whereas, the MULSGGDV keyword in the SCHEDULE section applies the multiplier to individual grid blocks.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.141 MULSGGDV – MULTIPLY MATRIX-FRACTURE COUPLING FOR OIL-GAS GRAVITY DRAINAGE FOR INDIVIDUAL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, MULSGGDV, defines a constant multiplier to modify the matrix-fracture coupling transmissibility for dual porosity and dual permeability models, for when the alternative matrix-fracture coupling transmissibilities for oil-gas gravity drainage has been selected. The alternative matrix-fracture coupling transmissibilities for oil-gas gravity drainage option is activated via the SIGMAGD or SIGMAGDV keywords in the GRID section, and the dual porosity or dual permeability models are activated by the DUALPORO or DUALPERM keywords in the RUNSPEC section, respectively.

This keyword applies the multiplier for individual cells in model; whereas, the MULSGGD keyword in the SCHEDULE section applies the multiplier to all grid blocks.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.142 MULTFLT – MULTIPLY THE TRANSMISSIBILITY OF A DEFINED FAULT BY A CONSTANT

MULTFLT enables the transmissibilities across defined faults, as declared by the FAULTS keyword, to be modified. They keyword allows for the re-scaling of the existing fault transmissibilities calculated by OPM Flow, for example setting a fault to be completely sealing by setting the multiplier to zero..

See [MULTFLT – Multiply the Transmissibility of a Defined Fault by a Constant](#) in the GRID section for a full description.

12.3.143 MULTPV – MULTIPLY CELL PORE VOLUMES BY A CONSTANT

MULTPV multiplies the pore volumes of a cell by a real positive constant for all the cells in the model via an array. An alternative to defining the complete array is to use the BOX keyword to define an area of the grid and then use the MULTPV keyword to set the multipliers just for the area defined by the BOX keyword (see the example).

See [MULTPV – Multiply Cell Pore Volumes by a Constant](#) in the GRID section for a full description.

12.3.144 MULTR - MULTIPLY CELL TRANSMISSIBILITY IN THE +R DIRECTION

MULTR multiplies the transmissibility between two cell faces in the +R direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I+1, J, K). The keyword should only be used with radial grids, as declared by the RADIAL keyword in the RUNSPEC section.

See [MULTR - Multiply Cell Transmissibility in the +R Direction](#) in the GRID section for a full description.

12.3.145 MULTR- - MULTIPLY CELL TRANSMISSIBILITY IN THE -R DIRECTION

MULTX- multiplies the transmissibility between two cell faces in the -X direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I-1, J, K) and (I, J, K). The keyword should only be used with radial grids, as declared by the RADIAL keyword in the RUNSPEC section.

See [MULTR- - Multiply Cell Transmissibility in the -R Direction](#) in the GRID section for a full description.

12.3.146 MULTREGT – MULTIPLY TRANSMISSIBILITIES BETWEEN REGIONS

The MULTREGT keyword multiplies the transmissibility between two regions by a constant. The region number array can be FLUXNUM, MULTNUM or OPERNUM and these arrays must be defined and be available before the MULTREGT keyword is read by the simulator. The constant should be a real number.

See [MULTREGT – Multiply Transmissibilities Between Regions](#) in the GRID section for a full description.

12.3.147 MULTSIG – MULTIPLY MATRIX-FRACTURE COUPLING FOR ALL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, MULTSIG, defines a constant multiplier to modify the matrix-fracture coupling transmissibility for dual porosity and dual permeability models, for when the matrix-fracture coupling transmissibilities have been specified via the SIGMAGD or SIGMAGDV keywords in the GRID section, and the dual porosity or dual permeability models have been activated by the DUALPORO or DUALPERM keywords in the RUNSPEC section, respectively.

This keyword applies the multiplier for all cells in model; whereas, the MULTSIGV keyword in the SCHEDULE section applies the multiplier to individual grid blocks.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.148 MULTSIGV – MULTIPLY MATRIX-FRACTURE COUPLING FOR INDIVIDUAL CELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, MULTSIGV, defines a constant multiplier to modify the matrix-fracture coupling transmissibility for dual porosity and dual permeability models, for when the matrix-fracture coupling transmissibilities have been specified via the SIGMAGD or SIGMAGDV keywords in the GRID section, and the dual porosity or dual permeability models have activated by the DUALPORO or DUALPERM keywords in the RUNSPEC section, respectively.

This keyword applies the multiplier for individual cells in model; whereas, the MULTSIG keyword in the SCHEDULE section applies the multiplier to all grid blocks.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.149 MULTTHT - MULTIPLY CELL TRANSMISSIBILITY IN THE +THETA DIRECTION

MULTTHT multiplies the transmissibility between two cell faces in the +Theta direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J+1, K). The keyword should only be used with radial grids, as declared by the RADIAL keyword in the RUNSPEC section.

See [MULTTHT - Multiply Cell Transmissibility in the +Theta Direction](#) in the GRID section for a full description.

12.3.150 MULTTHT- - MULTIPLY CELL TRANSMISSIBILITY IN THE -THETA DIRECTION

MULTTHT- multiplies the transmissibility between two cell faces in the -Theta direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J-1, K) and (I, J, K). The keyword should only be used with radial grids, as declared by the RADIAL keyword in the RUNSPEC section.

See [MULTTHT- - Multiply Cell Transmissibility in the -Theta Direction](#) in the GRID section for a full description.

12.3.151 MULTX - MULTIPLY CELL TRANSMISSIBILITY IN THE +X DIRECTION

MULTX multiplies the transmissibility between two cell faces in the +X direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I+1, J, K).

See [MULTX - Multiply Cell Transmissibility in the +X Direction](#) in the GRID section for a full description.

12.3.152 MULTX- - MULTIPLY CELL TRANSMISSIBILITY IN THE -X DIRECTION

MULTX- multiplies the transmissibility between two cell faces in the -X direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I-1, J, K) and (I, J, K).

See [MULTX- - Multiply Cell Transmissibility in the -X Direction](#) in the GRID section for a full description.

12.3.153 MULTY - MULTIPLY CELL TRANSMISSIBILITY IN THE +Y DIRECTION

MULTY multiplies the transmissibility between two cell faces in the +Y direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J+1, K).

See [MULTY - Multiply Cell Transmissibility in the +Y Direction](#) in the GRID section for a full description.

12.3.154 MULTY- - MULTIPLY CELL TRANSMISSIBILITY IN THE -Y DIRECTION

MULTY- multiplies the transmissibility between two cell faces in the -Y direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J-1, K) and (I, J, K).

See [MULTY- - Multiply Cell Transmissibility in the -Y Direction](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.155 MULTZ - MULTIPLY CELL TRANSMISSIBILITY IN THE +Z DIRECTION

MULTZ multiplies the transmissibility between two cell faces in the +Z direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K) and (I, J, K+1).

See [MULTZ - Multiply Cell Transmissibility in the +Z Direction](#) in the GRID section for a full description.

12.3.156 MULTZ- - MULTIPLY CELL TRANSMISSIBILITY IN THE -Z DIRECTION

MULTZ- multiplies the transmissibility between two cell faces in the -Z direction for all the cells in the model via an array, that is the keyword sets the transmissibility multiplier of block (I, J, K) between the cells (I, J, K-1) and (I, J, K).

See [MULTZ- - Multiply Cell Transmissibility in the -Z Direction](#) in the GRID section for a full description.

12.3.157 NCONSUMP - Node Gas Consumption (Extended Network)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The NCONSUMP keyword defines an extended network node's gas consumption rate, for when the Extended Network option has been activated by the NETWORK keyword in the RUNSPEC section. The keyword can also be used to attribute the gas consumption to a previously defined group. See also the GCONSUMP keyword in the SCHEDULE section that offers more flexibility and can also be used with the Extended Network option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.158 NEFAC - NODE EFFICIENCY FACTORS (EXTENDED NETWORK)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The NEFAC keyword defines an extended network node's efficiency factor, for when the Extended Network option has been activated by the NETWORK keyword in the RUNSPEC section. See also the GEFAC keyword in the SCHEDULE section that can also be used with the Extended Network option.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.159 NETBALAN – NETWORK BALANCING PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

NETBALAN keyword causes the simulator to perform a network balancing operation at the next time step. In addition, the keyword defines the network balancing parameters used to control how network balancing is performed on a network, as well as the frequency of the network balancing calculations. If any of the parameters on the keyword are defaulted, then either the previously entered values are used, or if there are no previously entered values, then the keyword default values are employed.

OPM Flow does not currently support this keyword and hence the keyword is ignored and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	NTSTEP	<p>NTSTEP is a real value that defines the criteria for the network balancing interval, used to define the frequency of the network balancing algorithm. NTSTEP may be a negative number, a value of zero, or a positive number, as described below:</p> <ol style="list-style-type: none"> 1) <u>Negative Value</u>: If NTSTEP is <u>any</u> negative value then the time stepping interval for the network balancing is based on the number of Newtonian iterations used in updating the well targets, as set by the NUPCOL keyword in the RUNSPEC section, or the NUPCOL parameter on the GCONTROL keyword in the SCHEDULE section. If NUPCOL is defined on both keywords, then the GCONTROL value takes precedence. Thus, any negative value of NTSTEP means the network will be balance for the first NUPCOL Newtonian iterations for each time step. Consequently, if this option is used it may result in some oscillations as the THP of the wells are updated at each Newtonian network re-balance computation. 2) <u>Zero Value</u>: Here the network is balanced at the beginning of every time step, and should result in small network balancing errors for the time step, provided of course the reservoir conditions are fairly constant over the time step. This is the default value. 3) <u>Positive Value</u>: In this case NTSTEP is a time interval between the previous network balance and the next schedule network balancing. For example, if NTSTEP is set equal to 91.25 days (365/4), then network balancing will occur every quarter. Again, the balancing occurs at the beginning of the time step. 			0.0
		days or dimensionless	days or dimensionless	hours or dimensionless	
2	NCNV	<p>NCNV is a real positive value that defines the nodal pressure convergence variance, used to define if convergence has been satisfied.</p>			Defined
		psia 1.45	barsa 0.10	atma 0.09869	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	NMXITER	A positive integer value that defines the maximum number of network balancing operations that may be performed during a network balancing computation.			10
		dimensionless	dimensionless	dimensionless	
4	GRPCNV	<p>GRPCNV is a real positive value less than one that sets the group tolerance criteria used to define if convergence has been satisfied for:</p> <ol style="list-style-type: none"> 1) Wells in subsea completion manifold groups under rate control. In this case GRPCNV is applied to the THP values of the wells within the group. In the field, these type of wells must flow against a common manifold pressure, that is all the wells must flow at approximately the same THP, for a given group's flow rate. 2) Automatic chokes for group's under rate control. Here, GRPCNV is applied to the pressure drop across the automatic chokes. <p>In both cases GRPCNV is an acceptable fraction of the group's rate target. Thus, the default value 0.01 means that network balance calculated rate must be within 0.01 (or 1.0%) of the groups' production target.</p> <p>Note that this criteria may not be satisfied if the number of Newtonian iterations used in updating the well targets, as set by the NUPCOL keyword in the RUNSPEC section, or the NUPCOL parameter on the GCONTROL keyword in the SCHEDULE section, is exceeded.</p> <p>Group convergence criteria can also be set by the GRPCNV parameter on the GCONTROL keyword in the SCHEDULE section. If both values of GRPCNV have been entered, then the minimum of the two is used.</p>			0.01
		dimensionless	dimensionless	dimensionless	
5	THPMXITE	<p>A positive integer value that defines the maximum number of well THP iterations for wells in subsea completion manifold groups under rate control.</p> <p>There is no equivalent iteration maximum for automatic chokes in groups under rate control, as the pressure drop across the chokes is automatically calculated in the network balancing calculation. Thus, NMXITER is used for these calculations.</p>			10
		dimensionless	dimensionless	dimensionless	
6	NTRGERR	<p>A real positive value that stipulates the maximum target branch error in a network balance calculation, at the end of the time step.</p> <p>NTRGERR is compared with the branch error (Error), where Error is the difference between the pressure drop along the branch from the previous network balance and the current calculation, again, at the end of the time step.</p> <p>Subject to existing targets and constraints, the simulator will attempt to adjust the time step size in order to roughly match NTRGERR. Note also that NTRGERR should be a value that is sufficient to allow convergence as defined by NCNV and GRPCNV parameters.</p> <p>The default value of 1.0×10^{20} means that this parameter has no effect in the selection of the time step size.</p>			1.0×10^{20}
		psia	barsa	atma	

No.	Name	Description			Default
		Field	Metric	Laboratory	
7	NMAXERR	<p>A real positive value that stipulates the <u>maximum</u> branch error in a network balance calculation, at the end of the time step.</p> <p>Again, NMAXERR is compared against the branch error (Error), where Error is the difference between the pressure drop along the branch from the previous network balance and the current calculation, at the end of the time step.</p> <p>If Error is greater than NMAXERR then the simulator will enforce a time step chop. Time step chops are computationally expensive and should therefore be minimized. Hence, care should be used in setting this value, which should be significantly greater than NTRGERR.</p> <p>The default value of 1.0×10^{20} means that this parameter has no effect in the selection of the time step size.</p>			1.0×10^{20}
		psia	barsa	atma	
8	NTSMIN	<p>NTSMIN is a real positive value that sets the minimum time step size for when NTRGERR and NMAXERR have values.</p> <p>Large network balancing errors (Error) can take place for various reasons, a common occurrence is for wells producing near their operating limit which may shut in during a network balance operation. If NTRGERR and NMAXERR have values, then this will result in the simulator enforcing time step chops to perhaps very small time steps. NTSMIN can therefore be used to set the minimum time step size under, and only, these circumstances.</p> <p>The default value, TSMINZ, is taken from TSMINZ parameter on the TUNING keyword in the SCHEDULE section.</p>			TSMINZ
		days	days	hour	

Notes:

1) The keyword is terminated by a “/”.

Table 12.50: NETBALAN Keyword Description

Examples

The first example sets network balancing to occur at the beginning of each time step using a 1.0 psia convergence criteria, and a maximum of 10 iterations. All the other parameters are defaulted.

```
--
--      NETWORK BALANCE CONTROL OPTIONS
--
--      BAL   CONV   MAX   WTHP   WTHP   ERR   ERR   TSTEP
--      INTV  TOL   ITRS  TOL   ITS   TARG  MAX   MIN
NETBALAN
      0.0   1.0   10    1*    1*    1*    1*    1*    /
```

The next example sets network balancing to occur for the first NUPCOL Newtonian iterations for each time step. All the other parameters are defaulted.

```
--
--      NETWORK BALANCE CONTROL OPTIONS
--
--      BAL   CONV   MAX   WTHP   WTHP   ERR   ERR   TSTEP
--      INTV  TOL   ITRS  TOL   ITS   TARG  MAX   MIN
NETBALAN
      -1    1*    1*    1*    1*    1*    1*    1*    /
```

12.3.160 NETCOMPA – DEFINE AUTOMATIC COMPRESSORS (EXTENDED NETWORK)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The NETCOMPA keyword defines automatic compressors in an extended network, for when the Extended Network option has been activated by the NETWORK keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.161 NEXT – MAXIMUM NEXT TIME STEP SIZE (ALIAS FOR NEXTSTEP)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the maximum time step size the simulator should take for the next time step. This keyword can be used to reset the time step for when known large changes to the model are taking place that may result in time step chops. For example, if the reporting time size is using monthly reporting steps via the DATES keyword in the SCHEDULE section, then if for example, a group of wells start production at a given date, then the NEXT keyword can be used to shorten the next step in order to avoid a time step chop.

Time steps chops are computationally expensive as the simulator cannot solve the current time step at the given tolerance, and therefore has to reduce the time step size. For example, if the previous completed time step was at day 365 and the current time step ending at 396 days cannot be solved, then the simulator will reduce the current time step to perhaps end at day 370, if this still cannot be solved then the time step will be chopped back again to perhaps to less than one day. Using the NEXT or NEXTSTEP keyword, the simulator is instructed to take a small time step in the anticipation that this will avoid time step chops and thus improve computational performance.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	NSTEPI	NSTEPI is a real positive value that defines the maximum length of the next time step.			None
		days	days	hours	
2	NSTEP2	NSTEP2 is a character string that should be set to either NO or YES to state if the NSTEPI should be applied to future reporting time steps. <div>1) NO: Means that NSTEPI should not be applied to subsequent reporting time steps.</div> <div>2) YES: means that STEP1 should be applied to subsequent reporting time steps.</div> The default value of NO means that NSTEPI will only be applied once.			NO

Notes:

1) The keyword is terminated by a “/”.

Table 12.51: NEXT Keyword Description

See also the DATES and TSTEP keywords in the RUNSPEC section that are used to advance the simulation through time.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to control time stepping for OPM Flow.

Example

```
--      NEXT      ALL
--      STEP      TIME
--      ----      ----
NEXT          1      'NO'      /
```

Here the next step size is set to one day and should only be used once.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.162 NEXTSTEP – MAXIMUM NEXT TIME STEP SIZE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the maximum time step size the simulator should take for the next time step. This keyword can be used to reset the time step for when known large changes to the model are taking place that may result in time step chops. For example, if the reporting time size is using monthly reporting steps via the DATES keyword in the SCHEDULE section, then if for example, a group of wells start production at a given date, then the NEXTSTEP keyword can be used to shorten the next step in order to avoid a time step chop.

Time steps chops are computationally expensive as the simulator cannot solve the current time step at the given tolerance, and therefore has to reduce the time step size. For example, if the previous completed time step was at day 365 and the current time step ending at 396 days cannot be solved, then the simulator will reduce the current time step to perhaps end at day 370, if this still cannot be solved then the time step will be chopped back again to perhaps to less than one day. Using the NEXT or NEXTSTEP keyword, the simulator is instructed to take a small time step in the anticipation that this will avoid time step chops and thus improve computational performance.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	NSTEPI	NSTEPI is a real positive value that defines the maximum length of the next time step.			None
		days	days	hours	
2	NSTEP2	NSTEP2 is a character string that should be set to either NO or YES to state if the NSTEPI should be applied to future reporting time steps. 3) NO: Means that NSTEPI should not be applied to subsequent reporting time steps. 4) YES: means that STEP1 should be applied to subsequent reporting time steps. The default value of NO means that NSTEPI will only be applied once.			NO

Notes:

1) The keyword is terminated by a “/”.

Table 12.52: NEXTSTEP Keyword Description

See also the DATES and TSTEP keywords in the RUNSPEC section that are used to advance the simulation through time.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to control time stepping for OPM Flow.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Examples

The first example shows the direct use of the NEXTSTEP keyword;

```
--      NEXT    ALL
--      STEP    TIME
--      ----    ----
NEXTSTEP
      1      'NO'      /
```

Here the next step size is set to one day and should only be used once.

The next example shows a more complete use of the keyword for when the field oil production has increased dramatically from 10,000 stb/d to 50,000 stb/d as indicated by the two GCONPROD keywords.

```
-----
-- SCHEDULE SECTION - 2021-01-01
-----
--
-- GROUP PRODUCTION CONTROLS
--
-- GRUP    CNTL  OIL    WAT    GAS    LIQ    CNTL  GRUP  GUIDE  GUIDE  CNTL
-- NAME    MODE  RATE    RATE    RATE    RATE    OPT   CNTL  RATE  DEF    WAT
GCONPROD
'FIELD'    'ORAT' 10E3    60E3    300E3  60E3    1*    1*    1*    1*    1*    /
/
RPTSCHED
'WELLS=2'  'WELSPECS'  'CPU=2'  'FIP=2'      /

DATES
  2  JAN    2021  /
/
RPTSCHED
'NOTHING'      /

DATES
  1  FEB    2021  /
  1  MAR    2021  /
/
-- GROUP PRODUCTION CONTROLS
--
-- GRUP    CNTL  OIL    WAT    GAS    LIQ    CNTL  GRUP  GUIDE  GUIDE  CNTL
-- NAME    MODE  RATE    RATE    RATE    RATE    OPT   CNTL  RATE  DEF    WAT
GCONPROD
'FIELD'    'ORAT' 50E3    90E3    300E3  90E3    1*    1*    1*    1*    1*    /
/
--
--      NEXT    ALL
--      STEP    TIME
--      ----    ----
NEXTSTEP
      1      'NO'      /

DATES
  1  APR    2021  /
  1  MAY    2021  /
  1  JUN    2021  /
  1  JUL    2021  /
  1  AUG    2021  /
  1  SEP    2021  /
  1  OCT    2021  /
  1  NOV    2021  /
  1  DEC    2021  /
/
```

Given a start date of January 1, 2020 set via the START keyword in the RUNSPEC section, the above example shows the initial oil production of 10,000 stb/d starting in January 1, 2020, and continuing up to March 1, 2021. At the March 1, 2021 time step the field oil production rate is increased to 50,000 stb/d and the maximum next time step is set to one day. After the one day time step is completed (March 2, 2012), the simulator will progressively increase the time step size until a maximum of 31 days is reached. The 31 day maximum is a result of requesting monthly time steps via the DATES keyword. The intent of using the NEXTSTEP keyword in this case is to prevent time step chops occurring due to the “shock” to the system caused by the large increase in oil production.

12.3.163 NEXTSTPL – MAXIMUM NEXT TIME STEP SIZE (LGR)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword defines the maximum time step size the simulator should take for the next time step for all Local Grid Refinements (LGR). This keyword can be used to reset the time step for when known large changes to the model are taking place that may result in time step chops. For example, if the reporting time size is using monthly reporting steps via the DATES keyword in the SCHEDULE section, then if for example, a group of wells start production at a given date, then the NEXTSTPL keyword can be used to shorten the next step in all the LGRs in order to avoid a time step chop.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	NSTEPI	NSTEPI is a real positive value that defines the maximum length of the next time step.			None
		days	days	hours	
2	NSTEP2	NSTEP2 is a character string that should be set to either NO or YES to state if the NSTEPI should be applied to future reporting time steps. 5) NO: Means that NSTEPI should not be applied to subsequent reporting time steps. 6) YES: means that STEP1 should be applied to subsequent reporting time steps. The default value of NO means that NSTEPI will only be applied once.			NO

Notes:

1) The keyword is terminated by a “/”.

Table 12.53: NEXTSTPL Keyword Description

See also the NEXT and NEXTSTEP keywords in the SCHEDULE section that are used to control the global grid's next time step.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to control time stepping for OPM Flow.

Example

```
--
--      NEXT      ALL
--      STEP      TIME
--      ----      ----
NEXTSTEP
      1          'NO' /
```

Here the next step size for all LGRs is set to one day and should only be used once.

12.3.164 NODEPROP – DEFINE NETWORK NODE PROPERTIES FOR EXTENDED NETWORK

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the network node properties for the extended network option for when the Extended Network Model has been invoked by the NETWORK keyword in the RUNSPEC section. There are two types of network facilities in the simulator, the Standard Network model, which is defined with the GRUPNET keyword in the SCHEDULE section and the Extended Network Model defined by the BRANPROP and NODEPROP keywords, again in the SCHEDULE section.

For the Extended Network Model the group hierarchy can be different to that defined by the GRUPTREE keyword; however, the bottom most nodes in the network tree associated with wells, must be the same as that defined by the GRUPTREE keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	NODE	A character string of up to eight characters in length that defines the node name for the data on this keyword record.			None
2	PRESS	A real value that sets the terminal fixed pressure for the node, this should be set to: 1) A real positive value to define the fixed pressure for the node if the node is a terminal node, otherwise: 2) PRESS should be set to the default value of I* or a real negative value if the node is not a terminal node.			I*
		psia	bars	atm	
3	CHOKE	CHOKE is a defined character string that sets if the upstream branch from this node should have the capability to choke back the flow rate in order impose a flow constraint. Here the upstream branch that is the node furthestmost from the wells. Thus for a production network, this will be an outlet branch as the wells are exporting fluid from the branch node. Wheres as for an injection node, this is inlet branch as the well's are importing the injection fluid.			NO
4	GASLIFT	A defined character string that sets if the associated subordinate well's produced gas lift gas should be included in the node's flow stream (YES), or not (NO). GASLIFT should be set to either: 1) NO: Do not include gas lift gas in the nodes production. This means that only the produced gas from the nodes subordinate wells will be included in the nodes production stream. 2) YES: Include both gas lift gas in and produced gas in the nodes production. This means that all gas from the subordinate wells will be included in the nodes production stream. If NODE does not have any subordinate wells or satellite groups (see the GSATPROD keyword in the SCHEDULE section) directly attached to the node, then GASLIFT should be defaulted (I*) or set to NO. The option is only valid for producing networks			NO

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	GROUP	A character string of up to eight characters in length that defines the group for which the automatic choke will be applied in order to match the group's target rate (the TARGET variable on the GCONPROD keyword in the SCHEDULE section). The target rate is matched by adjusting the pressure drops across the automatic choke. The default value of I* uses NODE (item one) as the group if it exists in the run. In addition, if NODE is just connected to subordinate wells than GROUP should also be defaulted.			I*
6	GRPNAME	GRPNAME defines the name of the source or sink group in the commercial compositional simulator; however, the variable is not used as sources and sinks nodes must have the same name as their comparable groups in the Extended Network Model in both OPM Flow and the commercial black-oil simulator.			I*
7	NETYPE	NETYPE defines the network type in the commercial compositional simulator: PROD,WINJ or GINJ. However, the variable is not used as only production networks are supported in the Extended Network Model in both OPM Flow and the commercial black-oil simulator.			I*
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.54: NODEPROP Keyword Description

See also the NETWORK keyword in the RUNSPEC section and the BRANPROP in the SCHEDULE section.

Example

Given the following Extended Network model in Figure 12.5.

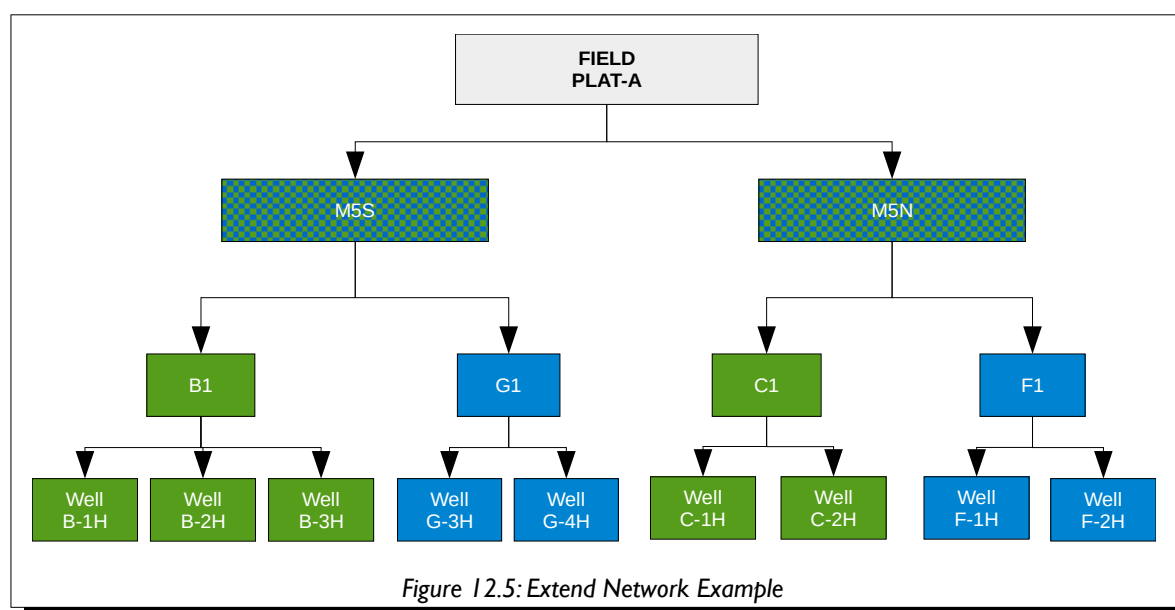


Figure 12.5: Extend Network Example

First the Extended Network model should be used invoked in the RUNSPEC section, and then the BRANPROP keyword should be used to define the branch network, and finally the NODEPROP keyword is used to describe the node properties with the network.

```
-- =====
--
-- RUNSPEC SECTION
--
-- =====
RUNSPEC
--
--      ACTIVATE THE EXTENDED NETWORK OPTION AND DEFINE PARAMETERS
--
--      MAX.      MAX      NOT
--      NODE      LINK      USED
NETWORK
      3          2          1*
/
.....
.....
-- =====
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
--      EXTENDED NETWORK BRANCH PROPERTIES
--
-- DOWN  UP      VFP      VFP
-- NODE  NODE      TABLE  ALFQ
BRANPROP
B1      PLAT-A    5        1*
C1      PLAT-A    4        1*
/
--
--      EXTENDED NETWORK NODE PROPERTIES
--
-- NODE  NODE  CHOKE  GAS   CHOKE  SOURCE  NETWORK
-- NAME  PRESS OPTN  LIFT  GROUP  SINK    TYPE
NODEPROP
PLAT-A  21.0   NO    NO
B1      1*    NO    NO
C1      1*    NO    NO
/
```

Here the main platform for the field, PLAT-A, has a fixed 21 barsa pressure applied as an operating constraint.

12.3.165 NOECHO – DEACTIVATE ECHOING OF USER INPUT FILES TO THE PRINT FILE

Turns off echoing of all the input files to the print file. Note by default echoing of the inputs files is active. but can subsequently be switched off by the NOECHO activation keyword.

See [NOECHO – Deactivate Echoing of User Input Files to the Print File](#) in the GLOBAL section for a full description.

12.3.166 NOHMD – DEACTIVATE HISTORY MATCH GRADIENT DERIVATIVE CALCULATIONS

The NOHMD deactivates various history match gradient derivative calculations for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The keyword consists of a series of character strings that define which derivative should be switch off based on the keyword that requested the derivatives to be calculated, for example HMFAULTS keyword in the GRID section. If an empty list is entered then all the gradient derivative calculations previously requested are switch off. The keyword is useful for changing from history matching runs to predication cases, as the prediction cases will be more computationally efficient without the burden of the gradient derivative calculations.

See [NOHMD – Deactivate History Match Gradient Derivative Calculations](#) in the SOLUTION section for a full description.

12.3.167 NOHMO – DEACTIVATE HISTORY MATCH GRADIENT DERIVATIVE CALCULATIONS (ALIAS)

The NOHMO deactivates various history match gradient derivative calculations for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section. The keyword consists of a series of character strings that define which derivative should be switch off based on the keyword that requested the derivatives to be calculated, for example HMFAULTS keyword in the GRID section. If an empty list is entered then all the gradient derivative calculations previously requested are switch off. The keyword is useful for changing from history matching runs to predication cases, as the prediction cases will be more computationally efficient without the burden of the gradient derivative calculations.

See [NOHMO – Deactivate History Match Gradient Derivative Calculations \(Alias\)](#) in the SOLUTION section for a full description.

12.3.168 NOSIM – ACTIVATE THE NO SIMULATION MODE FOR DATA FILE CHECKING

NOSIM switches the mode of OFM Flow to data input checking mode. In this mode the input file is read and all messages and print instructions are sent to the respective output files. The SCHEDULE section is read but the simulation is not performed.

See [NOSIM – Activate the No Simulation Mode for Data File Checking](#) in the RUNSPEC section for a full description

12.3.169 NOWARN – DEACTIVATE WARNING MESSAGES

Turns off warning messages to be printed to the print file; note that this keyword is deactivated by default and can subsequently be switched off by the WARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN.

See [NOWARN – Deactivate Warning Messages](#) in the GLOBAL section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.170 NUPCOL – DEFINE THE NUMBER OF NEWTONIAN ITERATIONS USED TO UPDATE WELL TARGETS

The NUPOL keyword defines the maximum number of Newtonian iterations within a time step that may be used to update the well production and injection targets, after which the well targets will be frozen until the time step calculations have converged and the time step is complete.

See [NUPCOL – Define the Number of Newtonian Iterations Used to Update Well Targets](#) in the RUNSPEC section for a full description and also section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to set various other numerical control parameters for OPM Flow.

12.3.171 NWATREM – Node Water Removal (Extended Network)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The NWATREM keyword defines an extended network node as a point where water is removed from the network, for when the Extended Network option has been activated by the NETWORK keyword in the RUNSPEC section. The water to be removed can be specified as a rate or as a fraction of the total volume passing through the node.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.172 OUTSOL – DEFINE DATA TO BE WRITTEN TO THE RESTART FILE (RETIRED)

This keyword defines the data and frequency of the data to be written to the RESTART file at each requested restart point. The keyword has been replaced by the RPTRST keyword in the SOLUTION and SCHEDULE sections and is therefore considered retired.

See [OUTSOL – Define Data to be Written to the RESTART File \(Retired\)](#) in the SOLUTION section for a full description.

12.3.173 PICOND – DEFINE THE GENERALIZED PSEUDO PRESSURE PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PICOND keyword defines the Generalized Pseudo Pressure (“GPP”) ¹⁸⁵ and ¹⁸⁶ parameters used in a gas condensate well connection inflow equations. GPP accounts for both the impact of condensate drop out and compressibility in the mobility inflow term . If the keyword is absent from the input deck then the default values are applied.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁸⁵ Whitson, C. H. and Fevang, Ø. “Generalised Pseudopressure Well Treatment in Reservoir Simulation,” Presented at the IBC Technical Services Conference on Optimisation of Gas Condensate Fields, Aberdeen, UK (June 26-27, 1997)

¹⁸⁶ Whitson, C. H. and Fevang, Ø. “Modeling Gas Condensate Well Deliverability,” paper SPE 30714, SPE Reservoir Engineering (1996) 11, No. 4, 221-230; also presented at the SPE Annual Technical Conference and Exhibition, Dallas, Texas, USA (October 22-25, 1995).

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.174 PIMULTAB – DEFINE WELL PRODUCTIVITY INDEX VERSUS WATER CUT TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PIMULTAB defines productivity index multiplier versus water cut tables that are used to scaled a well's connection factors based on connection's current producing water cut. The tables are used for modeling the productivity decline due to increasing water cut. Allocation of the tables to a well is via the WPITAB keyword in the SCHEDULE section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WCUT	A real monotonically increasing positive columnar vector that defines the maximum surface water cut for the corresponding PIMULT vector. Water cut is defined as $f_w = \frac{q_w}{q_w + q_o}$.			None
		dimensionless	dimensionless	dimensionless	
2	PIMULT	A real positive decreasing columnar vector that defines the productivity index multiplier used to scale a well's connection factors, for the corresponding WCUT vector.			None
		dimensionless	dimensionless	dimensionless	

Notes:

- 1) The keyword is followed by NTPIMT tables as stated on the PIMTDIMS keyword in the RUNSPEC section.
- 2) Each table must contain a minimum of two rows and a maximum of NRPIMT rows as declared on the PIMTDIMS keyword in the RUNSPEC section.
- 3) Each table is terminated by a “/” and there is no “/” terminator for the keyword.

Table 12.55: PIMULTAB Keyword Description

See also the WPITAB keyword that allocates the tables to the wells, and also the WPIMULT keyword that scales a well's productivity index by a constant value, both of which are in the SCHEDULE section. This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Examples

Given NTPIMT equals two and NRPIMT equals four on PIMTDIMS keyword in the RUNSPEC section, then:

```
--      DEFINE WELL PRODUCTIVITY INDEX VERSUS WATER CUT TABLES
--
--      MAX      PI
--      WCUT     MULT
--      -----
PIMULTAB
      0.0000    1.0000
      0.2500    0.9500
      0.5000    0.8500
      0.7500    0.7500      /
--
      0.0000    1.0000
      0.2500    0.9500
      0.5000    0.8500
      0.7500    0.7500      /
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

The next example is summarized from the Norne model with NTPIMT equals one and NRPIMT equals to 51 on the PIMTDIMS keyword in the RUNSPEC section.

```
--
--      DEFINE WELL PRODUCTIVITY INDEX VERSUS WATER CUT TABLES
--      The following is the reviewed model in Aug-2006, low-high case
--      a=0.25, b=0.1; PIMULT=(1-a)/exp(fw/b)+a
--
--      MAX      PI
--      WCUT     MULT
--      -----
PIMULTAB
    0.000      1.0000
    0.025      0.8341
    0.050      0.7049
    0.075      0.6043
    0.100      0.5259
    0.125      0.4649
    0.150      0.4173
    0.175      0.3803
    0.200      0.3515
    0.225      0.3290
    0.250      0.3116
    0.275      0.2979
    0.300      0.2873
    0.325      0.2791
    0.350      0.2726
    0.375      0.2676
    0.400      0.2637
    0.425      0.2607
    0.450      0.2583
    0.475      0.2565
    0.500      0.2551
    0.525      0.2539
    0.550      0.2531
    0.575      0.2524
    0.600      0.2519
    0.625      0.2514
    0.650      0.2511
    0.675      0.2509
    0.700      0.2507
    0.725      0.2505
    0.750      0.2504
    0.775      0.2503
    0.800      0.2503
    0.825      0.2502
    0.850      0.2502
    0.875      0.2501
    0.900      0.2501
    0.925      0.2501
    0.950      0.2501
    0.975      0.2500
    1.000      0.2500 /
```

12.3.175 PLYADS - DEFINE POLYMER ROCK ADSORPTION TABLES

The PLYADS keyword defines the rock polymer adsorption tables for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section. Alternatively, the functions can be entered via the PLYADSS keyword in the PROPS section for when salt sensitivity is to be considered.

See [PLYADS - Define Polymer Rock Adsorption Tables](#) in the PROPS section for a full description.

12.3.176 PLYDHFLF - DEFINE POLYMER THERMAL DEGRADATION HALF-LIFE TABLES

The PLYDHFLF keyword defines the polymer thermal degradation half-life with respect to temperature functions for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

See [PLYDHFLF - Define Polymer Thermal Degradation Half-Life Tables](#) in the PROPS section for a full description.

12.3.177 PLYMAX - DEFINE POLYMER-SALT VISCOSITY MIXING CONCENTRATIONS

The PLYMAX keyword defines maximum polymer and salt concentrations that are to be used in the mixing parameter calculation of the fluid component viscosities, for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

See [PLYMAX - Define Polymer-Salt Viscosity Mixing Concentrations](#) in the PROPS section for a full description.

12.3.178

PLYROCKM - MODIFY POLYMER-ROCK PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The PLYROCKM keyword modifies rock properties entered via the PLYCAMAX, PLYKRRF, PLYRMDEN, and PLYROCK keywords in the PROPS section, for when the Polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.179 PLYSHEAR – ACTIVATE AND DEFINE POLYMER SHEARING PARAMETERS

The PLYSHEAR keyword activates and the defines the polymer shear thinning-thickening option for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

See [PLYSHEAR – Activate and Define Polymer Shearing Parameters](#) in the PROPS section for a full description.

12.3.180 PLYSHLOG - ACTIVATE AND DEFINE THE POLYMER SHEARING LOGARITHMIC PARAMETERS

This keyword activates and defines the parameters for the logarithm-based polymer shear thinning/thickening option.

See [PLYSHLOG - Activate and Define the Polymer Shearing Logarithmic Parameters](#) in the PROPS section for a full description.

12.3.181 PLYVISC – DEFINE POLYMER VISCOSITY SCALING FACT

PLYVISC defines the polymer viscosity scaling factors used to determine the relationship of pure water viscosity with respect to increasing polymer saturation within a grid block. The polymer option must be activated by the POLYMER keyword in the RUNSPEC section in order to use this keyword.

See [PLYVISC – Define Polymer Viscosity Scaling Factors](#) in the PROPS section for a full description.

12.3.182 PLYVISCS – DEFINE POLYMER-SALT VISCOSITY SCALING FACTORS

PLYVISCS defines the polymer-salt viscosity scaling factor tables applied to pure water that are used to determine the viscosity of a polymer-salt mixture with respect to increasing polymer saturation within a grid block. The polymer option must be activated by the POLYMER keyword, as well as the brine phase declared by the BRINE keyword in the RUNSPEC section in order to use this keyword. However the ECLM keyword in the RUNSPEC must not be used with this keyword.

See [PLYVISCS – Define Polymer-Salt Viscosity Scaling Factors](#) in the PROPS section for a full description.

12.3.183 PLYVISCT – DEFINE POLYMER-TEMPERATURE VISCOSITY SCALING FACTORS

PLYVISCT defines the polymer-temperature viscosity scaling factor tables applied to pure water that are used to determine the viscosity of the polymer at a given temperature with respect to increasing polymer saturation within a grid block. Both the polymer option must be activated by the POLYMER keyword and the temperature option invoked by the TEMP keyword in the RUNSPEC section in order to use this keyword. However the BRINE keyword in the RUNSPEC must not be used with this keyword, that is the salt sensitivity options should be deactivated.

See [PLYVISCT – Define Polymer-Temperature Viscosity Scaling Factors](#) in the PROPS section for a full description.

12.3.184 PLYVSCST – DEFINE POLYMER-SALT-TEMPERATURE VISCOSITY SCALING FACTORS

PLYVSCST defines the polymer-salt-temperature viscosity scaling factor tables applied to pure water that are used to determine the viscosity of the polymer at a given salt concentration and for a given temperature, with respect to increasing polymer saturation within a grid block. Both the polymer option must be activated by the POLYMER keyword and the temperature option invoked by the TEMP keyword in the RUNSPEC section in order to use this keyword. In addition, the BRINE keyword in the RUNSPEC must also be invoked. The keyword is used in conjunction with the SALTNODE keyword to define the various salt concentrations and the TEMPNODE keyword to define the various reservoir temperatures. Both keywords are in the PROPS section.

See [PLYVSCST – Define Polymer-Salt-Temperature Viscosity Scaling Factors](#) in the PROPS section for a full description.

12.3.185 PRIORITY – ACTIVATE AND DEFINE WELL PRIORITIZATION COEFFICIENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PRIORITY keyword activates the Well Priority option and defines the coefficients in the well priority equation. Wells under group control are ranked based on their well potential in order to satisfy group controls. For example if a group's oil target is exceeded, then the group may shut-in the lease productive oil wells based on their well potential. The Priority option is an alternative form of ranking the wells based on the following equation:

$$\text{Priority} = \frac{a_1 + a_2 Q_{oil} + a_3 Q_{water} + a_4 Q_{gas}}{b_1 + b_2 Q_{oil} + b_3 Q_{water} + b_4 Q_{gas}} \quad (12.31)$$

Where:

Q_{oil}	= well oil potential
Q_{water}	= well water potential
Q_{gas}	= well gas potential
a_{1-4}	= priority coefficients supplied by this keyword
b_{1-4}	= priority coefficients supplied by this keyword

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TIME	A real positive integer that defines the minimum time interval between executing the well priority calculation. The calculation is performed at the beginning of the time step that exceeds the previous calculation (t_0) by a minimum of TIME, that is for when $t_n \geq (t_0 + \text{TIME})$. Note that the default value of zero means that the calculation is performed at each time step. As a consequence, this may result in some oscillation as well wells are switched on/off at subsequent time steps.			0
		days	days	hours	
2	A1	A real positive integer greater than or equal to zero that defines a_1 priority coefficient in equation (12.31).			0
3	A2	A real positive integer greater than or equal to zero that defines a_2 priority coefficient in equation (12.31).			0
4	A3	A real positive integer greater than or equal to zero that defines a_3 priority coefficient in equation (12.31).			0
5	A4	A real positive integer greater than or equal to zero that defines a_4 priority coefficient in equation (12.31).			0
6	B1	A real positive integer greater than or equal to zero that defines b_1 priority coefficient in equation (12.31).			0
7	B2	A real positive integer greater than or equal to zero that defines b_2 priority coefficient in equation (12.31).			0

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
8	B3	A real positive integer greater than or equal to zero that defines b_3 priority coefficient in equation (12.31).			0
9	B4	A real positive integer greater than or equal to zero that defines b_4 priority coefficient in equation (12.31).			0
Notes: 1) The keyword is terminated by a “/”.					

Table 12.56: PRIORITY Keyword Description

Example

```
--
--      SETS COEFFICIENTS FOR WELL PRIORITIZATION OPTION
--
--      TIME      A      B      C      D      E      F      G      H
--      STEP      Qo     Qw     Qg     Qo     Qw     Qg
PRIORITY
--      0.0      0.0     1.0     0.0     0.0     1.0     0.0     0.0     0.0 / High Oil Pot
--      0.0      0.0     1.0     1.0     0.0     0.0     0.0     1.0     0.0 / Low Water Cut Pot
--      0.0      0.0     1.0     0.0     0.0     0.0     0.0     0.0     1.0 / Low GOR Pot
```

The above example defines the well priority calculation to be based on a well's oil potential, with calculation to be performed at each time step. Note that the low water cut and low GOR options are given for reference but are commented out and therefore ignored by the simulator.

12.3.186 PRORDER – DEFINE A GROUP PRODUCTION RULES SEQUENCE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

PRORDER defines the order of group production rules to be implemented fore when a group's target is not satisfied.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.187 PYACTION – DEFINE PYTHON BASED ACTION CONDITIONS AND COMMAND PROCESSING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The PYACTION keyword is part of OPM Flow's Python scripting facility that loads a standard Python script file that can be used to define a series of conditions and actions as the simulation proceeds through time. The "included" Python script file is executed by the standard Python interpreter. Thus, OPM Flow's Python scripting facility offers greater flexibility compared to the commercial simulator's ACTION series of keywords (ACTION, ACTIONG, ACTIONR, ACTIONS, ACTIONW and ACTIONX) that can apply Boolean conditional tests to variables at the field, group, region, well segment and well levels. Note that OPM Flow has also implemented the commercial simulator's ACTIONX keyword, but not the ACTION, ACTIONG, ACTIONR, ACTIONS and ACTIONW keywords, as the ACTIONX keyword implements their functionality with greater flexibility.

This keyword starts the definition of a PYACTION section that stipulates the name of the action and a string indicating the number of times the action should be run; this is then followed file containing the Python script. Noted that unlike the commercial simulator's ACTIONX keyword there is no terminating keyword like the commercial simulator's ENDACTION keyword.

Although this keyword is read by OPM Flow and the script processing has been implemented, one should use caution when using this facility as it may result in OPM Flow aborting. This is because the PYACTION facility allows the user to implement complex functionality and the implementation is new for the 2020-04 release. Users should therefore use caution when using this facility.

Note

This is an OPM Flow specific keyword for the simulator's scripting facility using the standard Python interpreter, as such it gives more flexibility than the commercial simulator's ACTIONX keyword, although OPM Flow also supports this as well.

The keyword should be considered experimental as details of the OPM Flow - Python interface might change for future releases. In particular, the current implementation is quite minimal; however, future releases are expected to add more entry points in the Schedule class which can be used to manipulate the reservoir model as the simulation progresses. As a user you are encouraged to come with wishes in this regard.

The PYACTION keyword is a very powerful keyword and allows for any piece of Python code to be included and run, including potentially malicious code. The important point is to scrutinize any PYACTION keyword in a deck you receive from other parties.

No.	Name	Description	Default
	PYACTION	PYACTION declares the start of a PYACTION Definition Section. This is then followed by one record that defines the name of the action and a string indicating the number of times the action should be run; this is then followed by a second record indicating the file containing the Python script.	Not Applicable
I-I	ACTNAME	ACTNAME is a character sting of any length enclose in quotes that defines the name of this action definition.	Not Applicable

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description	Default
1-2	ACTNSTEP	ACTNSTEP is a defined character string enclosed in quotes that indicates the number of times the action should be performed, and should be set to one of the following: 1) FIRST_TRUE: This option forces the action to be run at the end of every time step until the script returns a value of True. 2) SINGLE: Here the action script is run only once. 3) UNLIMITED: If this option is selected then the action is run at the end of every time step.	Not Applicable
1-4	/	Record terminated by a "/"	Not Applicable
2-1	FILENAME	A character string enclosed in quotes that defines the Python module/script file to read in and to be processed by OPM Flow.	None
2-2	/	Record terminated by a "/"	Not Applicable
Notes: 1) There is no terminating "/" for this keyword.			

Table 12.57: PYACTION Keyword Description

The PYACTION keyword is a result of combining two programming languages, the interactive Python interpreter and OPM Flow's source code language C++. When combining two languages one extends and embeds one into the other. When extending Python with C++ the functionality implemented in C++ is made available to Python applications, when embedding Python in C++ one can call Python functions from within C++. The PYACTION keyword is based on embedding a Python interpreter in the C++ OPM Flow simulator, but the Python code actually runs as part of the PYACTION keyword is based on wrapping C++ objects in Python, that is extending Python.

In order to fully benefit from the power of the PYACTION keyword one should familiarize oneself with the Python wrapper classes for the various OPM Flow C++ classes. These classes are essential to share the simulator state with the PYACTION run() function. That is, the function provides the interface between the two programming languages.

To learn more about these classes you can use the pydoc utility, for example, to learn more about the SummaryState class, in a Linux terminal one would issue the following bash command:

```
bash% pydoc opm.io.sim.SummaryState
```

The Python script file (FILENAME in the PYACTION keyword) should be a standard Python module¹⁸⁷ that defines the run() function with a pre-defined argument definition and should consist of 100% pure Python. The PYACTION Python module (FILENAME) is imported during processing of the input deck and as such this implies:

- 1) Basic Python syntax checking is performed during reading the FILENAME script file.
- 2) It is verified that the module has the required run() function with the correct format.
- 3) Code which is at module level, that is outside of any function call is run immediately at the time import time – this is probably not one wants and should therefore be avoided.

The syntax of the run() command is given in Table 12.58 together with a description of the function's call variables.

¹⁸⁷ A Python module is a file containing Python definitions and statements. The file name is the module name with the suffix .py appended. Within a module, the module's name (as a string) is available as the value of the global variable __name__.

RUN() Function Definition		
<pre>def run(ecl_state, schedule, report_step, summary_state): # # OPM Flow PYACTION Module Script # return</pre>		
No.	Name	Description
1	ecl_state	<p>The ecl_state argument is a opm.io.ecl_state.EclipseState instance which is initialized with all the static information in the simulation, for example the 3D grid properties and the PVT and saturation tables</p> <p>This object is read by the run() function and the available data should not be modified as any updates will not be passed back to the simulator.</p>
2	schedule	<p>The schedule argument is a opm.io.sched.Schedule instance which has all the SCHEDULE information internalized (Schedule object). Currently, there are only a few call points in opm.io.sched.Schedule which can be used to update the state of the simulation, most notably:</p> <pre>schedule.shut_well(well_name, report_step)</pre> <p>Which can be used to shut a well at a particular report step.</p> <p>Having additional call points to the opm.io.ecl_state.EclipseState instance in order to update the Schedule object in more ways is an obvious candidate for improving the PYACTION functionality.</p>
3	report_step	The current report step.
4	summary_state	<p>The summary_state argument is an instance of the opm.io.sim.SummaryState class, the purpose of this class is to serve as a container for SUMMARY variables that contain the simulation results; for example, the Field Oil Rate (FOPR) or a well's Water CuT (WWCT). See the SUMMARY SECTION for a detailed description of the variables available.</p> <p>The summary_state variable will typically be the variable one will use to access the state of the simulation. For example, to check if the water cut in well OP01 exceeds 0.50 one would use the following statement:</p> <pre>if summary_state["WWCT:OP01"] > 0.50: ... </pre> <p>The summary_state variable can also be use to update variables including UDQ variables, i.e:</p> <pre>summary_state.update_well_var("OP01", "WUXX", 0.25)</pre> <p>The above assigns a value of 0.25 to the well UDQ variable WUXX for well OP01.</p>

Table I 2.58: PYACTION Module Script Definition

See also the PYINPUT and PYEND keywords in the GRID¹⁸⁸ section which are also part of OPM Flow's Python scripting facility, that process standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords.

¹⁸⁸ Note PYINPUT and PYEND can be used in the GRID, EDIT, PROPS, SOLUTION, SUMMARY and SCHEDULE sections, but is described in the GRID section.

Examples

The first example checks if well OP01 has a water cut greater than 0.80 and if so then the well is just in. In the input deck we would have:

```
--
--      START OF PYACTION SECTION
--
--      ACTNAME      ACTNSTEP
PYACTION
      'MAXWCUT'      'FIRST_TRUE'      /
      'pthon/script/MAXWCUT.py'      /
--
--      END OF PYACTION SECTION
--
```

And then in the Python module file 'pthon/script/MAXWCUT.py' one would have:

```
#
# OPM Flow PYACTION Module Script
#
def run(ecl_state, schedule, report_step, summary_state):
    if summary_state.get_well_var("OP1", "WWCT") > 0.80:
        schedule.shut_well("OP1", report_step)
        print("Well OP01 has been shut-in due to WWCT > 0.80")
    return
```

The next example is based on the first example from the ACTIONX keyword ([ACTIONX – Define Action Conditions and Command Processing](#)). The Python script first checks if the field's water production is greater than 30,000 stb/d, and if not returns control back to the simulator. If the field water production is greater than 30,000 stb/d then the script uses a Python variable *count* to keep track of the number of times the script has been executed, and then sorts the wells from high water cut to low, via the *wct_list* variable, and then shuts in the worst offending well. If a well is shut-in the *count* variable is increase by one and control is passed back to the simulator.

```
--
--      START OF PYACTION SECTION
--
--      ACTNAME      ACTNSTEP
PYACTION
      'WSHUTIN'      'FIRST_TRUE'      /
      'pthon/script/WSHUTIN.py'      /
--
--      END OF PYACTION SECTION
--
```

And then in the Python module file 'pthon/script/WSHUTIN.py' one would have:

```
#
# OPM Flow PYACTION Module Script
#
def run(ecl_state, schedule, report_step, summary_state):
    if summary_state["FWPR"] < 3000:
        return False
    #
    # Define Counter and Check Value
    #
    count = storage.get("COUNT", 0)
    if count == 10:
        return True
    #
    # Get Sorted Well List
    #
    wct_list = sorted( [ (well, summary_state.well_var(well, "WWCT")) for
```

```

        well in summary_state.wells] )
    well, wwct = wct_list[0]
    #
    # Shut-in Wells
    #
    if wwct > 0:
        schedule.shut_well( well, report_step )
        storage["COUNT"] = count +1
    else:
        return False

```

Note that by using PYACTION it makes sense to combine the UDQ variable into the PYACTION statement, like shown in the example, although this is not necessary, as one could in principle use a normal UDQ statement and then access the variables in the PYACTION script using the summary_state variable.

The final example checks to see if the field's gas rates is below 600 MMscf/d and if the simulation time is greater than January 1, 2030. If it is, then compression is installed by re-setting all the gas producing well's THP and BHP pressures to 450 psia and 300 psia respectively. In addition all gas wells currently shut-in are tested to see if they can be opened up under the new THP and BHP constraints.

```

--
--      START OF PYACTION SECTION
--
--      ACTNAME      ACTNSTEP
PYACTION      'WSHUTIN'      'FIRST_TRUE'      /
              'pthon/script/PHASE3.py'          /
--
--      END OF PYACTION SECTION
--

```

And then in the Python module file 'pthon/script/PHASE3.py' one would have:

```

#
# OPM Flow PYACTION Module Script
#
# Import Python Modules
#
import datetime
#
# Start of Routine
#
def run(ecl_state, schedule, report_step, summary_state):
    #
    # Check Field Rate
    #
    if summary_state["FGPR"] >= 600000:
        return False
    #
    # Check Date
    #
    sim_time = schedule.start +
                datetime.timedelta( seconds = summary_state.elapsed() )
    if sim_time > datetime.datetime(2030, 1, 1):
        #
        # Do WELTARG and WTEST action - Currently Not Supported
        #
        .....
        #
        # Return
        #
        return True

```

12.3.188 PYEND – END THE DEFINITION OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow's Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords. A PYINPUT Definition Section is terminated by a PYEND keyword on a separate single line.

See [PYEND – End the Definition of a PYINPUT Section](#) in the GRID section for a full description.

12.3.189 PYINPUT – DEFINE THE START OF A PYINPUT SECTION

The PYINPUT and PYEND keywords are a part of OPM Flow's Python scripting facility that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords used by the simulator. PYINPUT declares the start of a PYINPUT Definition Section on a single separate line, which is then followed by various standard Python commands, with one command per line.

See [PYINPUT – Define the Start of a PYINPUT Section](#) in the GRID section for a full description.

12.3.190 QDRILL – DEFINE SEQUENTIAL DRILLING QUEUE WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The QDRILL keyword places previously defined wells in the Sequential Drilling Queue. Wells in this type of queue will be automatically drilled and completed in the sequence entered in order to satisfy group targets, as defined by the GCONPROD, GCONINJE and GCONSALE keywords. or a group's production potential as per the GDRILLPOT keyword. All the previously mentioned keywords are in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.191 RAINFALL – CONSTANT FLUX AQUIFER RAINFALL FLUX BY MONTH

This keyword, RAINFALL, defines the month by month rainfall flux for constant flux aquifers.

See [RAINFALL – Constant Flux Aquifer Rainfall Flux by Month](#) in the GRID section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.192 RCMASTS – RESERVOIR COUPLING GROUP MINIMUM TIME STEP FOR FLOW RESTRICTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

RCMASTS is used when reservoir coupling is invoked by the GRUPMAST and SLAVES keywords in the SCHEDULE section. The keyword should be placed within the master file and it sets the minimum time step size for groups for when a group is being restricted by a group's limiting flow rate fractional change (see the GRUPMAST keyword in the SCHEDULE section).

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.193 REACHES – DEFINE RIVER REACHES STRUCTURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The REACHES keyword defines the reach structure of a previously characterized river system using the RIVERSYS keyword in the SCHEDULE section. The River option must be activated via the RIVRDIMS keyword in the RUNSPEC section in order to use these keywords.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.194 READDATA – READ SCHEDULE DATA BASED ON CURRENT TIME STEP

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The READDATA keyword enables the simulator to read SCHEDULE data files generated by external programs on the fly, that is as the run is progressing. The external program can “hold” the simulation by using a file lock, in order for the external program to evaluate the current simulation results, then write out a SCHEDULE data file for the next time step, and finally releasing the “hold” by deleting the file lock and continuing with newly written SCHEDULE data file. The mechanism can be repeated so that the external program is dictating how the simulation progresses through time,

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.195 REFINE – START THE DEFINITION OF A LOCAL GRID REFINEMENT

The REFINE keyword defines the start of a Cartesian or radial local grid refinement (“LGR”) definition that sets the properties of the selected LGR. The keyword is then followed by the property keywords associated with the section where the keyword is being invoked. For example, if the REFINE keyword is used in the GRID section then most of the keywords in that section can be used to set the grid properties for the LGR.

See [REFINE – Start the Definition of a Local Grid Refinement](#) in the GRID section for a full description.

12.3.196 RIVDEBUG – DEFINE THE DEBUG DATA TO BE PRINTED TO FILE (RIVERS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the debug data associated with rivers to be written to the debug file (*.DBG), for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.197 RIVERSYS - DEFINE RIVER SYSTEM (BRANCH STRUCTURE AND BOUNDARY CONDITIONS)

RIVERSYS defines a river system by specifying the branch structure of the river together with the branch's associated boundary conditions, for when the River option has been activated via the RIVRDIMS keyword in the RUNSPEC section.

See [RIVERSYS - Define River System \(Branch Structure and Boundary Conditions\)](#) in the SOLUTION section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.198 RIVRPROP – MODIFY RIVER REACHES PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RIVRPROP keyword modifies the individual reaches in a river structure of a previously characterized river system using the RIVERSYS and the REACHES keywords in the SCHEDULE section. The River option must be activated via the RIVRDIMS keyword in the RUNSPEC section in order to use this keyword. RIVRPROP is an alternative and a more concise way to changing the individual reaches in a river structure than the REACHES keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.199 RIVSALT – DEFINE RIVER UPSTREAM FLOW SALT CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RIVSALT keyword defines the injected salt concentration in individual river branches in a previously characterized river system using the RIVERSYS and the REACHES keywords in the SCHEDULE section. The River option must be activated via the RIVRDIMS keyword in the RUNSPEC section in order to use this keyword. In addition, the Brine option must also be enabled via the BRINE keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.200 RIVTRACE – DEFINE RIVER UPSTREAM FLOW TRACER CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The RIVTRACE keyword defines the injected tracer concentration in individual river branches in a previously characterized river system using the RIVERSYS and the REACHES keywords in the SCHEDULE section. The River option must be activated via the RIVRDIMS keyword in the RUNSPEC section in order to use this keyword. In addition, the Tracer option must also be enabled by the TRACER keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.201 RPTHMG - DEFINE WELL HISTORY MATCH GRADIENT REPORTING (GROUPS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, RPTHMG, either enables or disables history match output reporting to the history match file (*.HMD) for the named group, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.202 RPTHMW - DEFINE WELL HISTORY MATCH GRADIENT REPORTING (WELLS)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, RPTHMG, either enables or disables history match output reporting to the history match file (*.HMD) for the named well, for when the History Match Gradient option has been activated by the HMDIMS keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.203 RPTONLY - ACTIVATE THE REPORT TIME STEPS ONLY OPTION FOR THE SUMMARY FILE

This keyword activates the writing out of the SUMMARY file and RSM file data, if the RSM file option has been requested by the RUNSUM keyword in the SUMMARY section, at report time steps only. The default is for all time steps to be written out to the files. This keyword reduces the file size at the expense of lower resolution in the time domain. There is no data required for this keyword.

See [RPTONLY - Activate the Report Time Steps Only Option for the SUMMARY File](#) in the SUMMARY section for a full description.

12.3.204 RPTONLYO - DEACTIVATE THE REPORT TIME STEPS ONLY OPTION FOR THE SUMMARY FILE

This keyword deactivates the writing out of the SUMMARY file and RSM file data, if the RSM file option has been requested by the RUNSUM keyword in the SUMMARY section, at report time steps only, and switches on writing out all the time steps to the files. This option is the default behavior for when RPTONLY has not been activated. There is no data required for this keyword.

See [RPTONLYO - Deactivate the Report Time Steps Only Option for the SUMMARY File](#) in the SUMMARY section for a full description.

12.3.205 RPTRST – DEFINE DATA TO BE WRITTEN TO THE RESTART FILE

This keyword defines the data to be written to the RESTART file at each requested restart point.

See [RPTRST – Define Data to be Written to the RESTART File](#) in the SOLUTION section for a full description.

12.3.206 RPTSCHED – DEFINE SCHEDULE SECTION REPORTING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	-----------------

Description

This keyword defines the data in the SCHEDULE section that is to be printed to the output print file in human readable format. The keyword has two distinct forms, the first of which consists of the keyword followed by a series of integers on the next line indicating the data to be printed (see the first example). This is the original format in the commercial simulator and was subsequently superseded by the second format. The second format consists of the keyword followed by a series of character strings that indicate the data to be printed. In most cases the character string is the keyword used to define the data in the OPM Flow input deck, for example WELSPEDS to defined the basic well definitions. OPM Flow only supports the functionality of the second format, the first format although recognized will be completely ignored.

No.	Name	Description	Default
1	FIP	Print the fluid in-place report. The parameter is assigned a value, OPTION, using the form FIP = OPTION, where OPTION is an integer variable set to: 1) OPTION = 1 then the report is for the field only. 2) OPTION = 2 then in addition to the field report, a report is produced for each FIPNUM region, as defined by the FIPNUM keyword in the REGIONS section. Note the commercial simulator also prints the flows to other regions as well as the flows from the wells. This additional reporting option has not been implemented in OPM Flow. 3) OPTION = 3 then in addition to the above, a balance report is also produced for fluid in-place regions defined by the FIP keyword in the REGIONS section.	FIP=2
2	FIPRESV	Print the reservoir volumes in-place report.	None
3	NOTHING	Switches off all printed reports in the SCHEDULE section.	N/A
4	SALT	Print grid block salt concentration values. Note this is an OPM Flow sub keyword.	N/A
5	SALTD PST	Print the amount of salt deposited for each grid block. Note this is an OPM Flow sub keyword.	N/A
6	RESTART	RESTART defines the frequency at which the restart data for restarting a run is written to the RESTART file. The parameter is assigned a value, OPTION, using the form RESTART = OPTION, where OPTION is an integer variable set to: 1) OPTION = 1 then the restart files are written at every report time, but only the last one in the run is kept. This minimizes the restart file size but only the final results are stored, limiting the visualization in OPM ResInsight. 2) OPTION = 2 then the phase inter-blocks are written to the restart files, in addition to the standard data. 3) OPTION = 3 then the fluid in-place and phase potentials are also written to the restart file. 4) OPTION = 6 then the restart files are written at every time step. See the RPTRST keyword in the SOLUTION section for a more flexible way to write out restart files.	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

7	WELLS	<p>The WELLS option turns on production and injection rate and cumulative volume reporting for produced and injected fluids. The parameter has several levels of reporting details set by the assigned OPTION value, using the form WELLS = OPTION, where OPTION is an integer variable set to:</p> <ol style="list-style-type: none"> 1) OPTION = 1 report at the volumes at the well level. 2) OPTION = 2 report volumes at the well and the well connection levels. 3) OPTION = 3 report volumes for layer totals. 4) OPTION = 4 report volumes for layer totals and for wells. 5) OPTION = 5 report volumes for layer totals and for wells and well connections. <p>Only OPTION equal to one is supported by OPM Flow.</p>	WELLS=1
8	WELSPECS	<p>WELSPECS switches on reporting of the well connections, wells and groups at each report time step. There are numerous reports associated with this option.</p> <p>Unlike the other reporting parameters that produce a report for each reporting time step, the WELSPECS report option only produces a report if an associated keyword has been activated at the current reporting time step.</p> <p>For example, if the reporting time steps are January, February, and March 2020, and the RPTSCHED WELSPECS option is activated in January, with wells OP01 and OP02 being declared via the WELSPECS and COMPDAT keywords, then a report will be printed for January for these two wells. If there are no further well activations until March, with well OP03 being declared, then there will be no report for February, and only well OP03 will reported at the March reporting time step.</p>	
....		
<p>Notes:</p> <ol style="list-style-type: none"> 1) The keyword is terminated by a “/”. 			

Table 12.59: RPTSCHED Keyword Description

Development is current progressing on developing reports in a similar format to the commercial simulator and this section will be updated as additional reports are added to OPM Flow's functionality.

Note

Unlike the other reporting keywords in the RUNSPEC, GRID, EDIT, PROPS and SOLUTION keywords, the requested reports on the this keyword remain in effect until they are switch off by this keyword, that is, the reports are written out every report time step until requested to stop. Use the 'NOTHING' parameter to switch off all reporting.

An example FIP report is shown in Figure 12.6 from the Norne field, note only the field and the first two region reports are shown.

=====									
: Field Totals :									
: PAV = 268.423 BARSA :									
: PORV = 673813759 RM3 :									
: Pressure is weighted by hydrocarbon pore volume :									
: Porv volumes are taken at reference conditions :									
=====									
	Liquid	Oil	SM3		Wat	SM3		Gas	SM3
		Vapour		Total	Total		Free	Dissolved	Total
:Currently in place	92852273	506017	93358290	480610201	11202115432	9841722029	21043837461		
:Originally in place	160196505	559893	160756399	402039147	9744843573	17311090896	27055934469		
=====									
: FIPNUM report region 1 :									
: PAV = 269.913 BARSA :									
: PORV = 44729956 RM3 :									
: Pressure is weighted by hydrocarbon pore volume :									
: Porv volumes are taken at reference conditions :									
=====									
	Liquid	Oil	SM3		Wat	SM3		Gas	SM3
		Vapour		Total	Total		Free	Dissolved	Total
:Currently in place	5398282	259439	5567722	12179015	5263878362	594212703	5858991065		
:Originally in place	5358346	311293	5669639	11497281	5426018016	591714035	6017732051		
=====									
: FIPNUM report region 2 :									
: PAV = 266.851 BARSA :									
: PORV = 14745585 RM3 :									
: Pressure is weighted by hydrocarbon pore volume :									
: Porv volumes are taken at reference conditions :									
=====									
	Liquid	Oil	SM3		Wat	SM3		Gas	SM3
		Vapour		Total	Total		Free	Dissolved	Total
:Currently in place	2744221	88023	2832244	3078782	1655632008	318616757	1974248764		
:Originally in place	3229038	88236	3317274	3087870	1535013525	362544609	1897558134		
=====									

Figure 12.6: RPTSCHED: FIP (Balance) Report

Figure 12.7 illustrates the reservoir volumes in-place report for the first two regions from the Norne field.

=====					
: RESERVOIR VOLUMES M3 :					
: REGION :	: TOTAL PORE :	: PORE VOLUME :	: PORE VOLUME :	: PORE VOLUME :	: PORE VOLUME :
:	: VOLUME :	: CONTAINING :	: CONTAINING :	: CONTAINING :	: CONTAINING :
:	:	: OIL :	: WATER :	: GAS :	: HYDRO-CARBON :
=====					
: 1:	44719142:	7048934:	11937133:	25733075:	32782009:
=====					
: 2:	14747585:	4266286:	3206400:	7274899:	11541185:
=====					

Figure 12.7: RPTSCHED: FIPRESV (Reservoir Volumes) Report

Note

Note that the “PORV” quantity in the FIP (Balance) Report, as shown in Figure 12.6, is reported at reference conditions, meaning there is no pressure dependence involved. However, the “TOTAL PORE VOLUME” values in the Reservoir Volumes Report (Figure 12.7) are pressure dependent pore volumes. Thus, for region one the “PORV” value is 44,729,956 rm^3 (Figure 12.6) and the “TOTAL PORE VOLUME” (Figure 12.7) is 44,719,142 rm^3 .

This is the same as the commercial simulator.

The WELLS report consists of several sub-reports depending on the selected option for this report type. Figure 12.8 and Figure 12.9 show example Injection and Production sub-reports

INJECTION REPORT											
WELL NAME	LOCATION (I, J, K)	CTRL MODE OIL	CTRL MODE WAT	CTRL MODE GAS	OIL RATE SCM/DAY	WATER RATE SCM/DAY	GAS RATE SCM/DAY	FLUID RES. VOL. RCM/DAY	BHP OR CON. PR. BARSA	THP OR BLK. PR. BARSA	
FIELD:					0.0:	0.0:	0.0:	0.0:			
INJE:					0.0:	14237.0:	208381.1:	15761.8:			
PROD:					0.0:	0.0:	0.0:	0.0:			
C-4H:	11, 35:			WRAT:	0.0:	0.0:	0.0:	0.0:	0.0:	0.0:	
C-1H:	26, 44:			GRAT:	0.0:	0.0:	56404.2:	265.3:	279.2:	0.0:	
C-2H:	23, 15:			WRAT:	0.0:	0.0:	0.0:	0.0:	259.8:	0.0:	
C-3H:	9, 13:			GRAT:	0.0:	0.0:	143344.6:	674.3:	266.2:	0.0:	
F-1H:	12, 85:			WRAT:	0.0:	9662.4:	0.0:	10031.9:	493.3:	0.0:	
F-2H:	18, 83:			WRAT:	0.0:	4574.6:	0.0:	4749.6:	474.3:	0.0:	
F-3H:	6, 57:			WRAT:	0.0:	0.0:	0.0:	0.0:	307.7:	0.0:	
F-4H:	36, 68:			WRAT:	0.0:	0.0:	0.0:	0.0:	515.1:	0.0:	
C-4AH:	29, 51:			GRAT:	0.0:	0.0:	8632.4:	40.6:	283.1:	0.0:	

Figure 12.8: RPTSCHED: WELLS - Injection Sub-Report

PRODUCTION REPORT											
WELL NAME	LOCATION (I, J, K)	CTRL MODE	OIL RATE SCM/DAY	WATER RATE SCM/DAY	GAS RATE SCM/DAY	FLUID RES. VOL. RCM/DAY	WATER CUT SCM/SCM	GAS/OIL RATIO SCM/SCM	WAT/GAS RATIO SCM/SCM	BHP OR CON. PR. BARSA	THP OR BLK. PR. BARSA
FIELD:			0.0:	0.0:	0.0:	0.0:	0.000:	0.00:	-nan:		
INJE:			-0.0:	-0.0:	-0.0:	-0.0:	0.000:	0.00:	-nan:		
PROD:			7271.6:	16679.8:	2297808.0:	33835.4:	0.696:	316.00:	0.0073:		
B-2H:	15, 31:RESV:		765.8:	1986.1:	107032.1:	3174.3:	0.722:	139.77:	0.0186:	169.7:	0.0:
D-1H:	22, 22:ORAT:		-0.0:	-0.0:	-0.0:	-0.0:	0.000:	0.00:	-nan:	0.0:	0.0:
D-2H:	14, 28:RESV:		1020.6:	2130.4:	344837.0:	4633.7:	0.676:	337.87:	0.0062:	165.3:	0.0:
B-4H:	10, 32:ORAT:		-0.0:	-0.0:	-0.0:	-0.0:	0.000:	0.00:	-nan:	0.0:	0.0:
D-4H:	19, 38:ORAT:		-0.0:	-0.0:	-0.0:	-0.0:	0.000:	0.00:	-nan:	0.0:	0.0:
E-3H:	12, 72:ORAT:		-0.0:	-0.0:	-0.0:	-0.0:	0.000:	0.00:	-nan:	0.0:	0.0:
B-1H:	14, 34:ORAT:		-0.0:	-0.0:	-0.0:	-0.0:	0.000:	0.00:	-nan:	239.2:	0.0:
B-3H:	9, 37:RESV:		8.7:	77.0:	935.2:	91.3:	0.898:	107.22:	0.0823:	243.2:	0.0:
E-1H:	18, 68:RESV:		611.5:	6251.1:	66608.1:	7292.1:	0.911:	108.92:	0.0938:	185.4:	0.0:
E-2H:	13, 67:ORAT:		-0.0:	-0.0:	-0.0:	-0.0:	0.000:	0.00:	-nan:	0.0:	0.0:

Figure 12.9: RPTSCHED: WELLS - Production Sub-Report

The third and final report is the Cumulative Production and Injection sub-report, shown in Figure 12.10.

CUMULATIVE PRODUCTION/INJECTION REPORT												
WELL NAME	LOCATION (I, J, K)	WELL TYPE	CTRL: MODE	OIL PROD MSCM	WATER PROD MSCM	GAS PROD MMSCH	Prod RES. VOL. MRCH	OIL INJ MSCM	WATER INJ MSCM	GAS INJ MMSCH	INJ RES. VOL. MRCH	
FIELD:				0.0:	0.0:	0.0:	0.0:	0.0:	0.0:	0.0:	0.0:	
INJE:				0.0:	0.0:	0.0:	0.0:	0.0:	102009.2:	8684539.9:	149857.6:	
PROD:				67225.0:	23347.5:	14642253.8:	148932.4:	0.0:	0.0:	0.0:	0.0:	
C-4H:	11, 35:	INJ:WRAT:		0.0:	0.0:	0.0:	0.0:	0.0:	5468.3:	2927677.5:	20657.3:	
B-2H:	15, 31:	PROD:RESV:		10801.8:	1775.7:	1839025.6:	19365.0:	0.0:	0.0:	0.0:	0.0:	
D-1H:	22, 22:	PROD:ORAT:		5497.3:	509.8:	907510.3:	9404.6:	0.0:	0.0:	0.0:	0.0:	
D-2H:	14, 28:	PROD:RESV:		7539.3:	1242.3:	2698209.2:	20259.7:	0.0:	0.0:	0.0:	0.0:	
B-4H:	10, 32:	PROD:ORAT:		1306.9:	0.6:	269383.9:	2382.8:	0.0:	0.0:	0.0:	0.0:	
D-4H:	19, 38:	PROD:ORAT:		3187.4:	85.6:	678870.9:	6035.6:	0.0:	0.0:	0.0:	0.0:	
C-1H:	26, 44:	INJ:GRAT:		0.0:	0.0:	0.0:	0.0:	0.0:	12768.5:	2186307.0:	24239.9:	
E-3H:	12, 72:	PROD:ORAT:		1686.9:	200.6:	179036.0:	2441.1:	0.0:	0.0:	0.0:	0.0:	
C-2H:	23, 15:	INJ:WRAT:		0.0:	0.0:	0.0:	0.0:	0.0:	21661.2:	0.0:	22503.8:	
B-1H:	14, 34:	PROD:ORAT:		3588.9:	473.2:	1413263.2:	10322.4:	0.0:	0.0:	0.0:	0.0:	

Figure 12.10: RPTSCHED: WELLS - Cumulative Production and Injection Sub-Report

Similarly as for the WELLS report, the WELSPECS report consists of several sub-reports, including the Well Production Control report shown in Figure 12.11 for the Volve field.

WELSPECS AT0.00 DAYS *FLOW

REPORT 031 DEC 2007 *RUN AT 12:41 ON 12 SEP 2016

WELL SPECIFICATION DATA

WELL	GROUP	WELLHEAD	B.H. REF	PREF-	DRAINAGE	GAS	SHUT-IN	CROSS	PVT	WELL	FIP	WELL
NAME	NAME	LOCATION	DEPTH	ERRED	RADIUS	INFL	INSTRCT	FLOW	TAB	DENS	REG	D-FACTOR 1
		(I, J)	METRES	PHASE	METRES	EQU		ABLT		CALC		DAY/SM3
I-F-5	AAR	84, 41	2997.3	WAT	P.EQUIV.R:	STD	OPEN	YES	4	SEG	0	0
P-F-14	AAR	65, 48	2476.1	OIL	P.EQUIV.R:	STD	OPEN	YES	2	SEG	0	0
I-F-4	SRAR	73, 28	2931.0	WAT	P.EQUIV.R:	STD	OPEN	YES	3	SEG	0	0
I-F-46	SRAR	73, 28	2931.0	GAS	P.EQUIV.R:	STD	OPEN	YES	3	SEG	0	0
P-F-12	SRAR	58, 37	2705.0	OIL	P.EQUIV.R:	STD	OPEN	YES	1	SEG	0	0
P-F-15C	SRAR	55, 28	2551.0	OIL	P.EQUIV.R:	STD	OPEN	YES	11	SEG	0	0
P-F-11B	SRAR	66, 42	2451.0	OIL	P.EQUIV.R:	STD	SHUT	YES	2	SEG	0	0
I-F-1B	P_NW	66, 58	2988.5	WAT	P.EQUIV.R:	STD	SHUT	YES	6	SEG	0	0
P-F-15D	AAR	63, 47	2844.9	OIL	P.EQUIV.R:	STD	SHUT	YES	2	SEG	0	0
P-F-1C	P_NW	57, 51	2889.1	OIL	P.EQUIV.R:	STD	SHUT	YES	10	SEG	0	0
PIL-N	P_NORTH	80, 54	3153.9	OIL	P.EQUIV.R:	STD	OPEN	YES	5	SEG	0	0
PIL-NW	P_NW	64, 59	2959.5	OIL	P.EQUIV.R:	STD	SHUT	YES	6	SEG	0	0

1: The WELL D-FACTOR is not implemented - and the report will always show the default value 0.

1: The WELL D-FACTOR is not implemented - and the report will always show the default value 0.

Figure 12.11: RPTSCHED: WELSPECS - Production Well Control Sub-Report

The COMPDAT keyword data is listed on the Well Connection Data sub-report as depicted in Figure 12.12 for the I-F-5 well. Note that the data is repeated for all connections and for all wells declared at the reporting time step.

WELL CONNECTION DATA													
WELL NAME	GRID BLOCK	CMPL NO#	CENTRE DEPTH METRES	OPEN SHUT	SAT TAB	CONNECTION FACTOR* CPM3/D/B	INT DIAM METRES	K H VALUE MD,METRE	SKIN FACTOR	CONNECTION D-FACTOR 1 DAY/SM3	SATURATION SCALING DATA		
											SWMIN	SWMAX	SGMIN SGMAX 2
I-F-5	84, 41,	1	1	2997.3	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	2	2	2998.3	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	3	3	2999.4	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	4	4	3000.4	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	5	5	3001.5	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	6	6	3002.5	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	7	7	3003.6	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	8	8	3004.6	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	9	9	3005.6	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	10	10	3006.6	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	11	11	3007.7	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	12	12	3008.8	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	13	13	3009.8	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	14	14	3010.9	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	84, 41,	15	15	3012.0	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 41,	17	18	3035.9	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 41,	19	19	3038.6	SHUT	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 41,	20	20	3040.0	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	20	21	3050.7	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	21	22	3051.9	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	22	23	3053.0	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	23	24	3054.2	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	24	25	3055.4	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	25	26	3056.6	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	26	27	3058.1	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	27	28	3059.9	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	28	29	3061.7	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	29	30	3063.6	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			
I-F-5	85, 42,	30	31	3065.4	OPEN	1	0.000000	0.216000	0.000000:0.000000	0			

1: The well connection D-FACTOR is not implemented in opm and the report will always show 0.
2: The saturation scaling data has not been implemented in the report and will show blank

Figure 12.12: RPTSCHED: WELSPECS -Well Connection Data Sub-Report

For multi-segment wells both the Production Well Control and Well Connection sub-reports are printed as per Figure 12.11 and Figure 12.12, and in addition the equivalent multi-segment well data is printed as well, as shown in Figure 12.13 and Figure 12.14, as shown on the following page.

Figure 12.13 shows the Multi-Segment Well Segment Structure sub-report for a single multi-segment well, OP01. See the WELSEGS keyword [Example](#) in the SCHEDULE section to see how the OP01 well is defined.

MULTI-SEGMENT WELL: SEGMENT STRUCTURE														
WELLNAME AND SEG TYPE	SEG NO	BRN NO	MAIN INLET SEGMENT	OUTLET SEGMENT	SEGMENT LENGTH METRES	TOT LENGTH TO END METRES	DEPTH CHANGE METRES	T.V. DEPTH AT END METRES	DEPTH:DIA OR F SCALING:ABS ROUGHN: X-SECTN METRES	VFP TAB OR METRES	AREA M**2	VOLUME M3	P DROP MULT FACTOR	
OP01	1	1	2	0	2512.5	2512.5	2512.5	0	0	0	0.000	0.000		
HFA	2		3	1	2537.5	2537.5	2534.5	0.3000	0.000100	0.07068	1.767	1.767		
	3		4	2	2562.5	2562.5	2560.5	0.3000	0.000100	0.07068	1.767	1.767		
	4		5	3	2587.5	2587.5	2593.5	0.3000	0.000100	0.07068	1.767	1.767		
	5		6	4	2612.5	2612.5	2614.5	0.3000	0.000100	0.07068	1.767	1.767		
	6		22	5	2637.5	2637.5	2635.5	0.3000	0.000100	0.07068	1.767	1.767		
	7	2	8	2	2737.5	2737.5	2538.5	0.2000	0.000100	0.03141	6.283	6.283		
	8		9	7	2937.5	2937.5	2537.5	0.2000	0.000100	0.03141	6.283	6.283		
	9		10	8	3137.5	3137.5	2539.5	0.2000	0.000100	0.03141	6.283	6.283		
	10		11	9	3337.5	3337.5	2535.5	0.2000	0.000100	0.03141	6.283	6.283		
	11		0	10	3537.5	3537.5	2536.5	0.2000	0.000100	0.03141	6.283	6.283		
	12	3	13	3	2762.5	2762.5	2563.5	0.2000	0.000100	0.03141	6.283	6.283		
	13		14	12	2962.5	2962.5	2562.5	0.1000	0.000100	0.00785	1.570	1.570		
	14		15	13	3162.5	3162.5	2562.5	0.1000	0.000100	0.00785	1.570	1.570		
	15		16	14	3362.5	3362.5	2564.5	0.1000	0.000100	0.00785	1.570	1.570		
	16		0	15	3562.5	3562.5	2562.5	0.1000	0.000100	0.00785	1.570	1.570		
	17	4	18	5	2812.5	2812.5	2613.5	0.2000	0.000100	0.03141	6.283	6.283		
	18		19	17	3012.5	3012.5	2612.5	0.1000	0.000100	0.00785	1.570	1.570		
	19		20	18	3212.5	3212.5	2612.5	0.1000	0.000100	0.00785	1.570	1.570		
	20		21	19	3412.5	3412.5	2612.5	0.1000	0.000100	0.00785	1.570	1.570		
	21		0	20	3612.5	3612.5	2613.5	0.1000	0.000100	0.00785	1.570	1.570		
	22	5	23	6	2837.5	2837.5	2634.5	0.2000	0.000100	0.03141	6.283	6.283		
	23		24	22	3037.5	3037.5	2637.5	0.2000	0.000100	0.03141	6.283	6.283		
	24		25	23	3237.5	3237.5	2638.5	0.2000	0.000100	0.03141	6.283	6.283		
	25		26	24	3437.5	3437.5	2639.5	0.1000	0.000100	0.00785	1.570	1.570		
	26		0	25	3637.5	3637.5	2639.5	0.1000	0.000100	0.00785	1.570	1.570		

Figure 12.13: RPTSCHED: WELSEGS - Multi Segment Well Structure Sub-Report

And Figure 12.14 depicts Multi-Segment Well Connection Data sub-report for the same well.

MULTI-SEGMENT WELL: CONNECTION DATA												
WELL NAME	CONNECTION NUMBER	SEGMENT NUMBER	BRANCH ID	TUB LENGTH START PERFS METRES	TUB LENGTH END PERFS METRES	TUB LENGTH CENTR PERFS METRES	TUB LENGTH END SEGMT METRES	CONNECTION DEPTH METRES	SEGMENT DEPTH METRES	GRID BLOCK DEPTH METRES		
OP01	10	10	1	1	1		2512.5	2512.5	2512.5	2512.5		
	10	10	2	2	1		2537.5	2534.5	2534.5	2537.5		
	10	10	3	3	1		2562.5	2560.5	2560.5	2562.5		
	10	10	4	4	1		2587.5	2593.5	2593.5	2587.5		
	10	10	5	5	1		2612.5	2614.5	2614.5	2612.5		
	10	10	6	6	1		2637.5	2635.5	2635.5	2637.5		
	9	10	2	7	2		2737.5	2538.5	2538.5	2537.5		
	8	10	2	8	2		2937.5	2537.5	2537.5	2537.5		
	7	10	2	9	2		3137.5	2539.5	2539.5	2537.5		
	6	10	2	10	2		3337.5	2535.5	2535.5	2537.5		
	5	10	2	11	2		3537.5	2536.5	2536.5	2537.5		
	10	9	3	12	3		2762.5	2563.5	2563.5	2562.5		
	10	8	3	13	3		2962.5	2562.5	2562.5	2562.5		
	10	7	3	14	3		3162.5	2562.5	2562.5	2562.5		
	10	6	3	15	3		3362.5	2564.5	2564.5	2562.5		
	10	5	3	16	3		3562.5	2562.5	2562.5	2562.5		
	9	10	5	17	4		2812.5	2613.5	2613.5	2612.5		
	8	10	5	18	4		3012.5	2612.5	2612.5	2612.5		
	7	10	5	19	4		3212.5	2612.5	2612.5	2612.5		
	6	10	5	20	4		3412.5	2612.5	2612.5	2612.5		
	5	10	5	21	4		3612.5	2613.5	2613.5	2612.5		
	10	9	6	22	5		2837.5	2634.5	2634.5	2637.5		
	10	8	6	23	5		3037.5	2637.5	2637.5	2637.5		
	10	7	6	24	5		3237.5	2638.5	2638.5	2637.5		
	10	6	6	25	5		3437.5	2639.5	2639.5	2637.5		
	10	5	6	26	5		3637.5	2639.5	2639.5	2637.5		

Figure 12.14: RPTSCHED: WELSEGS - Multi Segment Well Connection Sub-Report

Example

The first example shows the original format of this keyword; although the keyword and format are recognized by OPM Flow, the format is ignored and is unlikely to be implemented in the simulator.

```
--
--      DEFINE SCHEDULE SECTION REPORT OPTION (ORIGINAL FORMAT)
--
RPTSCHED      1          2*0          1          3*1          /
```

The next example shows the second format of the keyword which is supported by OPM Flow.

```
-- =====
--
-- SCHEDULE SECTION
-- =====
SCHEDULE

-- -----
-- SCHEDULE SECTION - 2000-01-01
-- -----
RPTSCHED      'WELLS=2'      'WEL SPECS'      'CPU=2'      'FIP=2'      /

DATES
1 JAN 2000 /
/

RPTSCHED      'NOTHING'      /

DATES
1 FEB 2000 /
1 MAR 2000 /
1 APR 2000 /
1 MAY 2000 /
1 JUN 2000 /
1 JULY 2000 /
1 AUG 2000 /
1 SEP 2000 /
1 OCT 2000 /
1 NOV 2000 /
1 DEC 2000 /
/
```

In the above example monthly reporting time steps have been used with a SCHEDULE section report on the January 1, 2000; after which all reports are switch off for the subsequent reporting time steps.

12.3.207 SAVE – ACTIVATE OUTPUT OF A SAVE FILE FOR FAST RESTARTS

This keyword activates output of a SAVE file for fast restarts. There is no data required for this keyword.

See [SAVE – Activate Output of a SAVE File for Fast Restarts](#) in the RUNSPEC section for a full description.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

12.3.208 SCDATAB – WELL CONNECTION PI MULTIPLIERS VERSUS SCALE DEPOSIT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SCDATAB defines well connection Productivity Index (“PI”) reduction multipliers versus scale deposited per unit length of the perforated interval tables, for when the Scale Deposition option has been activated by declaring the dimensions of the scaling deposition tables using the SCDPDIMS keyword in the RUNSPEC section. The SCDATAB tables are allocated to individual wells using the WSCTAB keyword and the rate of scale accumulation around the well connections is given by the SCDPTAB keyword; both keywords are in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.209 SCDETAB – WELL CONNECTION KARST AQUIFER PROPERTIES FOR SCALE DEPOSIT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SCDETAB defines well connection karst¹⁸⁹ aquifer properties for modeling scale deposited by dissolution of calcite from the aquifer water, for when the Scale Deposition option has been activated by declaring the dimensions of the scaling deposition tables using the SCDPDIMS keyword in the RUNSPEC section. The SCDETAB tables are allocated to individual wells using the WSCTAB keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁸⁹ Karst is a topography formed from the dissolution of soluble rocks such as limestone, dolomite, and gypsum. Karst aquifers are characterized by a network of conduits and caves, with the conduits and caves draining the pore space between the limestone grains (intergranular or primary porosity) and the fractures (secondary porosity) formed by joints, bedding planes, and faults.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.210 SCDPTAB – WELL CONNECTION SCALE DEPOSITION TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SCDATAB defines the well connection scale deposition rate as a function of sea water flow rate, for when the Scale Deposition option has been activated by declaring the dimensions of the scaling deposition tables using the SCDPDIMS keyword in the RUNSPEC section. The SCDATAB tables are allocated to individual wells using the WSCTAB keyword and the sea water fraction is based on a water tracer entered via the SCDPTRAC keyword; both keywords are in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.211 SCDPTRAC – ALLOCATE SEA WATER TRACER FOR SCALE DEPOSITION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SCDPTRAC keyword is used to allocate an existing passive water tracer defined by the TRACER keyword in the PROPS section, to represent the sea water flowing into a well connection as a fraction of the total water influx. The keyword is used together with the SCDPTAB keyword in the SCHEDULE section to calculate the volume of scale deposited around the well connections.

This keyword is ignored by OPM Flow and has no effect on the simulation, but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	NAME	A three letter character string defining the tracer's name that has previously been defined by the TRACER keyword in the PROPS section			None
Notes: I) The keyword is terminated by a “/”.					

Table 12.60: SCDPTRAC Keyword Description

Example

In the PROPS section define a tracer in the water phase, for example:

```
--
--      DEFINE TRACER NAMES
--
--      TRACER    TRACER
--      NAME      PHASE
--      -----
TRACER      'SEA'      'WAT' / SEA WATER TRACER
/
```

Then in the SCHEDULE section allocate the previously defined water tracer as a sea water tracer to be used with the scale deposition facility, that is:

```
--
--      ALLOCATE SEA WATER TRACER FOR SCALE DEPOSITION
--
--      TRACER
--      NAME
--      -----
SCDPTRAC    'SEA' / SEA WATER TRACER
/
```

12.3.212 SCHEDULE - DEFINE THE START OF THE SCHEDULE SECTION OF KEYWORDS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The SCHEDULE activation keyword marks the end of the SUMMARY section and the start of the SCHEDULE section that defines the group and well definitions, operating and economic constraints, as well as how OPM Flow should advance through time. Numerical controls are also defined in this section and all parameters can be varied through time.

There is no data required for this keyword.

Example

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
```

The above example marks the end of the SUMMARY section and the start of the SCHEDULE section in the OPM Flow data input file.

12.3.213 SEPVALS – DEFINE SEPARATOR OIL FORMATION VOLUME FACTOR AND GOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The SEPVALS keyword defines the initial and subsequent separator oil formation volume factor (B_o) and Gas Oil Ratio (“GOR” or R_s). The facility is used in black-oil modeling to re-scale the PVT data entered via the PROPS section, based on the saturation point oil formation volume factor (B_{ob}) and the initial saturated gas-oil ratio (R_{si}) entered on the SEVPALS keyword. The first occurrence of this keyword sets the initial conditions and must be followed by the GSEPCOND keyword that assigns previously defined separators to a group.

Note that the keyword can only be used in runs with oil and dissolve gas only, with no vaporized oil (condensate) in the gas phase.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.214 SHRATE - ACTIVATE AND DEFINE THE POLYMER SHEARING LOGARITHMIC PARAMETERS

This keyword activates the logarithm-based polymer shear thinning/thickening option and defines the shear rate constant. This keyword can only be used in conjunction with the PLYSHLOG in the PROPS section

See [SHRATE - Activate and Define the Polymer Shearing Logarithmic Parameters](#) in the PROPS section for a full description.

12.3.215 SIMULATE - ACTIVATE THE SIMULATION MODE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

SIMULATE switches the mode of the simulation to run simulation mode from the data input checking mode activated by the NOSIM keyword in the SCHEDULE section. Note that if NOSIM has been used in the RUNSPEC section then SIMULATE will have no effect.

There is no data required for this keyword and there is no terminating "/" for this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

Example

The example below switches OPM Flow to no simulation mode for data checking of the input deck.

```
--
--      ACTIVATE SIMULATION MODE TO RUN THE MODEL
--
SIMULATE
```

12.3.216 SKIP – ACTIVATE SKIPPING OF ALL KEYWORDS AND INPUT DATA

The SKIP keyword turns on skipping of keywords until the ENDSKIP activation keyword is encountered. All keywords and between the SKIP and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP – Activate Skipping of All Keywords and Input Data](#) in the GLOBAL section for a full description.

12.3.217 SKIP100 – ACTIVATE SKIPPING OF BLACK-OIL KEYWORDS AND INPUT DATA

This keyword turns on skipping of black-oil keywords until the ENDSKIP activation keyword is encountered. All black-oil keywords between the SKIP100 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data](#) in the GLOBAL section for a full description.

12.3.218 SKIP300 – ACTIVATE SKIPPING OF “COMPOSITIONAL” KEYWORDS AND INPUT DATA

Turns on skipping of “compositional” keywords until the ENDSKIP activation keyword is encountered. All “compositional” keywords between the SKIP300 and ENDSKIP keywords are ignored by OPM Flow.

See [SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data](#) in the GLOBAL section for a full description.

12.3.219 SKIPREST – ACTIVATE SKIPPING OF RESTART SCHEDULE DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	-----------------

Description

This keyword turns on skipping of keywords up to the start of the restart point, as defined on the RESTART keyword in the RUNSPEC section. The RESTART keyword defines the parameters to restart the simulation from a previous run that has written a RESTART file out to disk. Activating the SKIPREST keyword causes the simulator to only read in data it requires for restarting the run up to the RESTART point (RSNUM on the RESTART keyword in the SOLUTION section). Note that certain keywords always need to be present in a restart run in the SCHEDULE section as the data is not stored on the RESTART file, for example the VFP tables (VFPPROD and VFPINJ keywords). The SKIPREST keyword automatically processes the input deck and reads the required data.

There is no data required for this keyword.

Example

The example below defines a restart from the previously run NOR-OPM-A01 case at time step number 40.

```
-- =====
--
-- SOLUTION SECTION
--
-- =====
SOLUTION
--
-- FLEXIBLE RESTART FROM PREVIOUS SIMULATION RUN
--
-- FILE          RESTART  RESTART  FILE
-- NAME          NUMBER   TYPE     FORMAT
RESTART
    'NOR-OPM-A01'    40      1*      1*      /
```

Then in the SCHEDULE section the SKIPREST keyword is used to correctly read in the schedule data up to the RESTART point.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
-- ACTIVATE SKIPREST OPTION TO AVOID MODIFYING SCHEDULE SECTION
--
SKIPREST
```

12.3.220 SLAVES – DEFINE SLAVE RESERVOIR SIMULATION PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, SLAVES, defines the name of the slave reservoirs and their associated simulation input files, for when the Reservoir Coupling option has been declared active by the GRUPMAST and SLAVES keywords in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.221 SUMTHIN – DEFINE SUMMARY DATA REPORTING TIME STEPS

This keyword defines a time interval for writing out the SUMMARY data to the SUMMARY file and the RSM file, if the RUNSUM keyword has been has also been activated in the SUMMARY section. Only the data for the first time step in the time interval is written out and the other time steps are skipped until the next time interval. This enable the size of the SUMMARY files to be reduced depending on the size of the time interval. However, the keyword will produce irregular time steps reports of the SUMMARY data.

See [SUMTHIN – Define SUMMARY Data Reporting Time Steps](#) in the SUMMARY section for a full description.

12.3.222 SURFVISC – SURFACTANT SOLUTION VISCOSITY VERSUS CONCENTRATION

SURFSVISC defines the surfactant viscosity relationship of solution water viscosity with respect to increasing surfactant concentration within a grid block. The surfactant option must be activated by the SURFACT keyword in the RUNSPEC section in order to use this keyword.

See [SURFVISC – Surfactant Solution Viscosity versus Concentration](#) in the PROPS section for a full description.

12.3.223 SWINGFAC – DEFINE FIELD GAS CONTRACT PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, SWINGFAC, defines the gas contract parameters, swing factor and the monthly seasonal profile factor, for when there is a single gas contract being used in the model. The keyword is used with the Gas Field Operations option which is activated by the GASFIELD keyword in the RUNSPEC section. Gas contracts are commonly based on a Daily Contract Quantity (“DCQ”) that determines the gas rate that the field should be produced at, which is normally expressed as a multiple of the DCQ, for example 1.33, and is often referred to as the “swing factor”. Some gas contracts also define a maximum DCQ (“Max DCQ”) and/or a minimum take or pay DCQ (“Min DCQ”), as well as seasonal demand characteristics. For example, gas rates may be set higher in the winter months in order to meet heating demand compared with summer months in colder climates, and the opposite in warmer climates where air conditioning demand is high.

Thus, the DCQ must be calculated first over a contract period, where the contract period is commonly contract years, or in some instances contract quarters. This is performed by the simulator using the current DCQ and checking to see if the (DCQ × Swing Factor) can be satisfied throughout the current contract period, if not the DCQ is re-calculated so that the (DCQ × Swing Factor) condition is satisfied. Once this condition is met, the second and final pass uses the calculated DCQ in conjunction with the monthly scaling profile data to set the monthly gas rate for the field:

$$Q_{month} = DCQ \times SWINGFAC_{month} \quad (12.32)$$

Where:

Q_{month} = the monthly gas production target

DCQ = Daily Contract Quantity

SWINGFAC_{month} = monthly rate scaling factor that takes into account seasonal demand, etc.

Here the SWINGFAC keyword sets the gas contract parameters for a single contract at the FIELD group level and is mutually exclusive to GSWINGF keyword in the SCHEDULE section that allows for different gas contract parameters to be assign to different groups.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.224 TIGHTEN – TIGHTEN AND RELAX NUMERICAL CONTROLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The TIGHTEN keyword tightens up or slackens the numerical controls for the linear, non-linear and material balance convergence targets and also tightens or relaxes the maximum values for the aforementioned parameters. The keyword should be used with caution as it may result in significantly increasing the run times.

Note that any subsequent use of the TUNING keyword in the SCHEDULE section will result in resetting the numerical controls. See also the TIGHTENP in the SCHEDULE section that allows for greater flexibility in modifying the numerical controls.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.225 TIGHTENP – TIGHTEN AND RELAX NUMERICAL CONTROLS INDIVIDUALLY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The TIGHTENP keyword is similar to the TIGHTEN keyword in the SCHEDULE section, in that it tightens up or slackens the numerical controls for the linear, non-linear and material balance convergence targets and also tightens or relaxes the maximum values for the aforementioned parameters. However, TIGHTENP allows for greater flexibility as there are four parameters on this keyword, as opposed to just one on the TIGHTEN keyword, that can be used to modify the numerical controls. The keyword should be used with caution as it may result in significantly increasing the run times.

Note that any subsequent use of the TUNING keyword in the SCHEDULE section will result in resetting the numerical controls. See also the TIGHTEN keyword in the SCHEDULE section that has more limited flexibility in modifying the numerical controls.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.226 TIME – ADVANCE SIMULATION BY CUMULATIVE REPORTING TIME

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword advances the simulation to a given cumulative report time after which additional keywords may be entered to instruct OPM Flow to perform additional functions via the SCHEDULE section keywords, or further TIME keywords may be entered to advance the simulator to the next report time.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TIME	A vector of real positive numbers that define the cumulative length of the of report times.			None
		days	days	hours	
Notes: I) The keyword is followed by a vector of numbers separated by a space and the keyword is terminated by a “/”.					

Table 12.61: TIME Keyword Description

See also the DATES and TSTEP keyword in the SCHEDULE section. Note that since OPM Flow uses the standard Gregorian calendar and therefore leap years are accounted for in the DATES keyword. Thus, it is more accurate to use the DATES keyword to progress the simulator through time if one is matching actual production data.

Whenever possible it is a good idea to always set the start date to be at the beginning of the year, as like most simulators, OPM Flow reports are always stated at the number of days from the start date (and sometimes at a given date). If the start date is at the beginning of the year, then calculating the actual date is relatively straight forward and simple.

Examples

The first example shows how to advance the simulation three years using the TIME keyword, from the given start date of January 1, 2022 set via the START keyword in the RUNSPEC section.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE

-- -----
-- SCHEDULE SECTION - 2022-01-01
-- -----
--
-- ADVANCE SIMULATION BY REPORTING TIME
--
TIME
    365.25  730.50  1095.75
/
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

The second example shows the same advance but using the TSTEP keyword instead.

```
-- =====  
--  
-- SCHEDULE SECTION  
--  
-- =====  
SCHEDULE  
  
-- -----  
-- SCHEDULE SECTION - 2022-01-01  
-- -----  
RPTSCHED  
      'WELLS=2'      'WELSPECS'      'CPU=2'      FIP=2'      /  
--  
-- ADVANCE SIMULATION BY REPORTING TIME  
--  
TSTEP  
      3*365.25  
/
```

Again, if the simulated production targets are actual production data or the results are going to be used in economic evaluations then the DATES keyword may be more useful in advancing the simulation via the reporting time steps, as the exact dates will be honored.

12.3.227 TSTEP – ADVANCE SIMULATION BY REPORTING TIME

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword advances the simulation to a given report time after which additional keywords may be entered to instruct OPM Flow to perform additional functions via the SCHEDULE section keywords, or further TSTEP keywords may be entered to advance the simulator to the next report time.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	TSTEP	A vector of real positive numbers that define the length of the time intervals to subsequent report steps.			None
		days	days	hours	
Notes: 1) The keyword is followed by a vector of numbers separated by a space and the keyword is terminated by a “/”.					

Table 12.62: TSTEP Keyword Description

See also the DATES and TIME keywords in the SCHEDULE section. Note that since OPM Flow uses the standard Gregorian calendar and therefore leap years are accounted for in the DATES keyword. Thus, it is more accurate to use the DATES keyword to progress the simulator through time if one is matching actual production data.

Whenever possible it is a good idea to always set the start date to be at the beginning of the year, as like most simulators, OPM Flow reports are always stated at the number of days from the start date (and sometimes at a given date). If the start date is at the beginning of the year, then calculating the actual date is relatively straight forward and simple.

Examples

The first example shows how to advance the simulation via the reporting time steps from the given start date of January 1, 2022 set via the START keyword in the RUNSPEC section, to the next year, without any actions or reporting taking place.

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE
--
-- SCHEDULE SECTION - 2022-01-01
--
--
-- ADVANCE SIMULATION BY REPORTING TIME
--
-- JAN FEB MAR APR MAY JUN JLY AUG SEP OCT NOV DEC
TSTEP 31 28 31 30 31 30 31 31 30 31 30 31
/
```

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

The second example is similar to the previous example but with quarterly reporting time steps used instead based on $\frac{365.25}{4}=91.3125$ days per quarter

```
-- =====
--
-- SCHEDULE SECTION
--
-- =====
SCHEDULE

--
-- SCHEDULE SECTION - 2022-01-01
--
RPTSCHED      'WELLS=2'      'WELSPECS'      'CPU=2'      FIP=2'      /

--
-- ADVANCE SIMULATION BY REPORTING TIME
--
-- QUARTERLY
TSTEP
4*91.3125
/
```

Again, if the simulated production targets are actual production data or the results are going to be used in economic evaluations then the DATES keyword may be more useful in advancing the simulation via the reporting time steps, as the exact dates will be honored.

12.3.228 TUNING - NUMERICAL TUNING CONTROL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

TUNING defines the parameters used for controlling the commercial simulator's numerical convergence parameters for the global grid. The keyword is similar to the TUNINGDP keyword in the SCHEDULE section that is optimized for high throughput runs. The keyword is mostly ignored by OPM Flow; however, the simulator can be instructed to read the first record of the TUNING keyword if the appropriate command line parameter has been activated (see section [2.2 Running OPM Flow 2021-10 From The Command Line](#)).

No.	Name	Description			Default
		Field	Metric	Laboratory	
I-1	TSINIT	TSINIT is a real positive value that defines the maximum length of the next time step. Note that whenever the keyword is used TSINIT is always set back to the default value of one, unless explicitly over written.			1.0
		days	days	hours	
I-2	TSMAXZ	TSMAXZ is a real positive value that defines the maximum length of the next time step following TSINIT.			365.0
		days	days	hours	
I-3	TSMINZ	TSMINZ is a real positive value that defines the minimum length of all time steps.			0.1
		days	days	hours	
I-4	TSMCHP	TSMCHP is a real positive values that sets the minimum length of all chopped time steps.			0.15
		days	days	hours	
I-5	TSFMAX	TSFMAX is a real positive value that specifies the maximum growth rate a time step can be increased by, subject to the maximum allowable time step size set by TSMAXZ. For example, if the current time step has converged at 10 days and TSFMAX is set to the default value, then the next time step will be 3.0 x 10 days, that is 30 days provided it is less than TSMAXZ.			3.0
		dimensionless	dimensionless	dimensionless	
I-6	TSFMIN	TSFMIN is a real positive value that specifies the minimum decay rate a time step can be decreased by, subject to the minimum allowable time step size set by TSMINZ. For example, if the current time step has not converged at 10 days and TSFMAX is set to the default value, then the next time step will be 0.3 x 10 days, that is the maximum of 0.3 days and TSMINZ.			0.3
		dimensionless	dimensionless	dimensionless	
I-7	TSFCNV	TSFCNV real positive value that specifies the decay rate a time step can be decreased by after the number of target iterations has been exceeded.			0.1
		dimensionless	dimensionless	dimensionless	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-8	TFDIFF	TFDIFFA is a real positive value that sets the time step growth factor of the time step after a convergence failure. For example, if the chopped current convergent time step is 10 days and TFDIFF is set to the default value, then the time step will be increased to 1.25×10 days, that is the minimum of 11.25 days and TSMAXZ.			1.25
		dimensionless	dimensionless	dimensionless	
1-9	THRURPT	THRURPT is a real positive value that specifies the maximum throughput ratio over a time step.			1.0×10^{20}
		dimensionless	dimensionless	dimensionless	
1-10	TMAXWC	TMAXWC is a real double precision value that defines maximum allowed time step after a well event; for example, when a well is opened or closed, etc.			None
		days	days	hours	
1-11	/	Record terminated by a "/"			Not Applicable
2-1	TRGTTE	TRGTTE is a real positive value that sets the time truncation error target.			0.1
		dimensionless	dimensionless	dimensionless	
2-2	TRGCNV	TRGCNV a real positive value that defines the non-linear convergence error.			0.001
		dimensionless	dimensionless	dimensionless	
2-3	TRGMBE	TRGMBE is a real positive value that specifies the target material balance error.			1.0×10^{-7}
		dimensionless	dimensionless	dimensionless	
2-4	TRGLCV	TRGLCV is a real positive value that specifies the linear convergence error target.			0.00001
		dimensionless	dimensionless	dimensionless	
2-5	XXXTTE	XXXTTE is a real positive value that sets the maximum time truncation error.			10.0
		dimensionless	dimensionless	dimensionless	
2-6	XXXCNV	XXXCNV is a real positive value that defines the maximum non-linear convergence error.			0.01
		dimensionless	dimensionless	dimensionless	
2-7	XXXMBE	XXXMBE is a real positive value that specifies the maximum mass balance error; that is the tolerated mass balance error relative to total mass present.			1.0×10^{-6}
		dimensionless	dimensionless	dimensionless	
2-8	XXXLCV	XXXLCV is a real positive values that sets the maximum linear convergence error.			0.0001
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
2-9	XXXWFL	XXXWFL is a real positive values that fixes the maximum well flow convergence error.			0.001
		dimensionless	dimensionless	dimensionless	
2-10	TRGFIP	TRGFIP is a real positive value that stipulates the target fluid in-place error in Local Grid Refinements.			0.025
		dimensionless	dimensionless	dimensionless	
2-11	TRGSFT	TRGSFT is a real positive values that defines the target surfactant change when the Surfactant Model is active in the run.			None
		dimensionless	dimensionless	dimensionless	
2-12	THIONX	THIONX is a positive real value used to set the threshold for damping in the ion exchange calculation for when the Brine Model is active in the run.			0.01
		dimensionless	dimensionless	dimensionless	
2-13	TRWGHT	TRWGHT is a positive integer that stipulates the implicitness for active tracer updates within the Newtonian iterations, and should be set to: 1) 1:The calculation is explicit, that is fully decoupled. 2) 2:The calculation is implicit, that is fully coupled.			1
		dimensionless	dimensionless	dimensionless	
2-14	/	Record terminated by a "/"			Not Applicable
3-1	NEWTMX	NEWTMX is a positive integer greater or equal to NEWTMN that stipulates the maximum number of Newtonian iterations for a time step.			12
		dimensionless	dimensionless	dimensionless	
3-2	NEWTMN	NEWTMN is a positive integer that is less or equal to NEWTMX that defines the minimum number of Newtonian iterations for a time step.			1
		dimensionless	dimensionless	dimensionless	
3-3	LITMAX	LITMAX is a positive integer greater or equal to LITMIN that sets the maximum number of linear iterations within a Newtonian iteration.			25
		dimensionless	dimensionless	dimensionless	
3-4	LITMIN	LITMIN is a positive integer less or equal to LITMAX that sets the minimum number of linear iterations within a Newtonian iteration.			1
		dimensionless	dimensionless	dimensionless	
3-5	MXWSIT	MXWSIT is a positive integer that defines the maximum number of iterations within a well flow calculation.			8
		dimensionless	dimensionless	dimensionless	
3-6	MXWPIT	MXWPIT is a positive integer that stipulates the maximum number of iterations for solving the bottom-hole pressure for wells under tubing head pressure control within a well flow calculation.			8
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
3-7	DDPLIM	DDPLIM a real positive value that stipulates the maximum pressure change at the last Newtonian iteration.			1.0 x 10 ⁻⁶
		psia	barsa	atma	
3-8	DDSLIM	DDSLIM a real positive value that sets the maximum saturation change at the last Newtonian iteration.			1.0 x 10 ⁻⁶
		dimensionless	dimensionless	dimensionless	
3-9	TRGDP	TRGDP is a real positive value that defines the target pressure change within a time step.			1.0 x 10 ⁻⁶
		psia	barsa	atma	
3-10	XXXDPR	XXXDPR is a real positive value that stipulates the maximum tolerable pressure change within a time step.			1.0 x 10 ⁻⁶
		psia	barsa	atma	
3-11	MNWRFP	MNWRFP is a positive integer greater than one and less than NEWTMX that defines the minimum number of Newtonian iterations before invoking the bisection algorithm for when the polymer phase is active in the model via the POLYMER keyword in the RUNSPEC section.			4
		dimensionless	dimensionless	dimensionless	
3-12	/	Record terminated by a “/”			Not Applicable

Notes:

1) The keyword consists of three records, with items 1-1 to 1-11 representing record one items, 2-1 to 2-14 record two and 3-1 to 3-12 representing record number three. Each of the records are terminated by a “/” and is explicitly shown in the above rows.

2) There is no keyword terminating “/”.

Table 12.63: TUNING Keyword Description

Note that for record number two (items 2-1 to 2-13) the maximum values should always be greater than the associated target value; for example, XXXCNV should be greater than TRGCNV. Also note that the TUNING keyword is stored on the restart files (see [RPTRST – Define Data to be Written to the RESTART File](#)) enabling the parameters to be utilized in a restart run without re-specifying the keyword.

Example

```
--
--      DEFAULT TUNING PARAMETERS
--
TUNING
      1.0      365.0      0.1      0.15      3      0.3      0.1      1.25  1E20  1*  /
                                          /

/
```

The above example explicitly sets the default parameters for OPM Flow for when the appropriate command line parameter has been activated (see section [2.2 Running OPM Flow 2021-10 From The Command Line](#)) to instruct the simulator to read the first record of the TUNING keyword. Alternatively one could just use:

```
TUNING
/
/
/
```

12.3.229 TUNINGDP – NUMERICAL TUNING CONTROL FOR HIGH THROUGHPUT CASES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Defines the parameters used for controlling the commercial simulator's numerical convergence parameters. The keyword is similar to the TUNING keyword in the SCHEDULE section, but the defaults on this keyword are optimized for high throughput runs. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TRGLCV	TRGLCV is a real positive value that specifies the linear convergence error target. The default value is ten times greater than the default value on the TUNING keyword.			0.0001
		dimensionless	dimensionless	dimensionless	
2	XXXLCV	XXXLCV is a real positive values that sets the maximum linear convergence error. The default value is ten times greater than the default value on the TUNING keyword.			0.001
		dimensionless	dimensionless	dimensionless	
3	TRGDDP	TRGDDP a real positive value that stipulates the maximum pressure change during a Newtonian iteration that enables the solution to be accepted when the residual pressure is still outside its convergence criteria.			1.0
		psia	barsa	atma	
4	TRGDDS	TRGDDS a real positive value that sets the maximum saturation change during a Newtonian iteration that enables the solution to be accepted when the residual saturation is still outside its convergence criteria.			0.001
		dimensionless	dimensionless	dimensionless	

Notes:

1) There is no keyword terminating “/”.

Table 12.64: TUNINGDP Keyword Description

Note that the TUNING keyword is stored on the restart files (see [RPTREST – Define Data to be Written to the RESTART File](#)) enabling the parameters to be utilized in a restart run without re-specifying the keyword.

Example

```
--
--      DEFAULT TUNINGDP PARAMETERS
--
TUNINGDP
/
```

The above example explicitly sets the default parameters.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.230 TUNINGH – NUMERICAL TUNING CONTROL FOR HISTORY MATCH GRADIENT CALCULATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Defines the parameters used for controlling the commercial simulator's numerical convergence parameters. The keyword is similar to the TUNING keyword in the SCHEDULE section, but the defaults on this keyword are optimized for high throughput runs. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	GRGLCV	GRGLCV is a real positive value that specifies the linear convergence error target.			0.0001
		dimensionless	dimensionless	dimensionless	
2	GXXLCV	GXXLCV is a real positive values that sets the maximum linear convergence error.			0.001
		dimensionless	dimensionless	dimensionless	
3	GMSLCV	GMSLCV is a real positive value that specifies the linear convergence residual reduction.			1.0×10^{-20}
		dimensionless	dimensionless	dimensionless	
4	LGTMIN	LGTMIN is a positive integer less or equal to LGTMAX that sets the minimum number of linear iterations within a Newtonian iteration.			1
		dimensionless	dimensionless	dimensionless	
5	LGTMAX	LGTMAX is a positive integer greater or equal to LGTMIN that sets the maximum number of linear iterations within a Newtonian iteration.			25
		dimensionless	dimensionless	dimensionless	

Notes:
1) There is no keyword terminating “/”.

Table 12.65: TUNINGH Keyword Description

Example

```
--
--      DEFAULT TUNINGH PARAMETERS
--
TUNINGH
/
```

The above example explicitly sets the default parameters.

12.3.231 TUNINGL - NUMERICAL TUNING CONTROL FOR ALL LGRs

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

TUNINGL defines the parameters used for controlling the commercial simulator's numerical convergence parameters for all Local Grid Refinements (LGRs). The keyword is the same as the TUNING keyword in the SCHEDULE section that applies the tuning parameters to the global grid. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I-1	TSINIT	TSINIT is a real positive value that defines the maximum length of the next time step. Note that whenever the keyword is used TSINIT is always set back to the default value of one, unless explicitly over written.			1.0
		days	days	hours	
I-2	TSMAXZ	TSMAXZ is a real positive value that defines the maximum length of the next time step following TSINIT.			365.0
		days	days	hours	
I-3	TSMINZ	TSMINZ is a real positive value that defines the minimum length of all time steps.			0.1
		days	days	hours	
I-4	TSMCHP	TSMCHP is a real positive values that sets the minimum length of all chopped time steps.			0.15
		days	days	hours	
I-5	TSFMAX	TSFMAX is a real positive value that specifies the maximum growth rate a time step can be increased by, subject to the maximum allowable time step size set by TSMAXZ. For example, if the current time step has converged at 10 days and TSFMAX is set to the default value, then the next time step will be 3.0 x 10 days, that is 30 days provided it is less than TSMAXZ.			3.0
		dimensionless	dimensionless	dimensionless	
I-6	TSFMIN	TSFMIN is a real positive value that specifies the minimum decay rate a time step can be decreased by, subject to the minimum allowable time step size set by TSMINZ. For example, if the current time step has not converged at 10 days and TSFMAX is set to the default value, then the next time step will be 0.3 x 10 days, that is the maximum of 0.3 days and TSMINZ.			0.3
		dimensionless	dimensionless	dimensionless	
I-7	TSFCNV	TSFCNV real positive value that specifies the decay rate a time step can be decreased by after the number of target iterations has been exceeded.			0.1

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
		dimensionless	dimensionless	dimensionless	
1-8	TFDIFF	TFDIFF is a real positive value that sets the time step growth factor of the time step after a convergence failure. For example, if the chopped current convergent time step is 10 days and TFDIFF is set to the default value, then the time step will be increased to 1.25×10 days, that is the minimum of 11.25 days and TSMAXZ.			1.25
		dimensionless	dimensionless	dimensionless	
1-9	THRURPT	THRURPT is a real positive value that specifies the maximum throughput ratio over a time step.			1.0×10^{20}
		dimensionless	dimensionless	dimensionless	
1-10	TMAXWC	TMAXWC is a real double precision value that defines maximum allowed time step after a well event; for example, when a well is opened or closed, etc.			None
		days	days	hours	
1-11	/	Record terminated by a "/"			Not Applicable
2-1	TRGTTE	TRGTTE is a real positive value that sets the time truncation error target.			0.1
		dimensionless	dimensionless	dimensionless	
2-2	TRGCNV	TRGCNV a real positive value that defines the non-linear convergence error.			0.001
		dimensionless	dimensionless	dimensionless	
2-3	TRGMBE	TRGMBE is a real positive value that specifies then target material balance error.			1.0×10^{-7}
		dimensionless	dimensionless	dimensionless	
2-4	TRGLCV	TRGLCV is a real positive value that specifies the linear convergence error target.			0.00001
		dimensionless	dimensionless	dimensionless	
2-5	XXXTTE	XXXTTE is a real positive value that sets the maximum time truncation error.			10.0
		dimensionless	dimensionless	dimensionless	
2-6	XXXCNV	XXXCNV is a real positive value that defines the maximum non-linear convergence error.			0.01
		dimensionless	dimensionless	dimensionless	
2-7	XXXMBE	XXXMBE is a real positive value that specifies the maximum mass balance error; that is the tolerated mass balance error relative to total mass present.			1.0×10^{-6}
		dimensionless	dimensionless	dimensionless	
2-8	XXXLCV	XXXLCV is a real positive values that sets the maximum linear convergence error.			0.0001

No.	Name	Description			Default
		Field	Metric	Laboratory	
		dimensionless	dimensionless	dimensionless	
2-9	XXXWFL	XXXWFL is a real positive values that fixes the maximum well flow convergence error.			0.001
		dimensionless	dimensionless	dimensionless	
2-10	TRGFIP	TRGFIP is a real positive value that stipulates the target fluid in-place error in Local Grid Refinements.			0.025
		dimensionless	dimensionless	dimensionless	
2-11	TRGSFT	TRGSFT is a real positive values that defines the target surfactant change when the Surfactant Model is active in the run.			None
		dimensionless	dimensionless	dimensionless	
2-12	THIONX	THIONX is a positive real value used to set the threshold for damping in the ion echange calculation for when the Brine Model is active in the run.			0.01
		dimensionless	dimensionless	dimensionless	
2-13	TRWGHT	TRWGHT is a positive integer that stipulates the implicitness for active tracer updates within the Newtonian iterations, and should be set to: 1) 1:The calculation is explicit, that is fully decoupled. 2) 2:The calculation is implicit, that is fully coupled.			1
		dimensionless	dimensionless	dimensionless	
2-14	/	Record terminated by a "/"			Not Applicable
3-1	NEWTMX	NEWTMX is a positive integer greater or equal to NEWTMN that stipulates the maximum number of Newtonian iterations for a time step.			12
		dimensionless	dimensionless	dimensionless	
3-2	NEWTMN	NEWTMN is a positive integer that is less or equal to NEWTMX that defines the minimum number of Newtonian iterations for a time step.			1
		dimensionless	dimensionless	dimensionless	
3-3	LITMAX	LITMAX is a positive integer greater or equal to LITMIN that sets the maximum number of linear iterations within a Newtonian iteration.			25
		dimensionless	dimensionless	dimensionless	
3-4	LITMIN	LITMIN is a positive integer less or equal to LITMAX that sets the minimum number of linear iterations within a Newtonian iteration.			1
		dimensionless	dimensionless	dimensionless	
3-5	MXWSIT	MXWSIT is a positive integer that defines the maximum number of iterations within a well flow calculation.			8
		dimensionless	dimensionless	dimensionless	
3-6	MXWPIT	MXWPIT is a positive integer that stipulates the maximum number of iterations for solving the bottom-hole pressure for wells under tubing head pressure control within a well flow calculation.			8

No.	Name	Description			Default
		Field	Metric	Laboratory	
		dimensionless	dimensionless	dimensionless	
3-7	DDPLIM	DDPLIM a real positive value that stipulates the maximum pressure change at the last Newtonian iteration.			1.0 × 10 ⁻⁶
		psia	barsa	atma	
3-8	DDSLIM	DDSLIM a real positive value that sets the maximum saturation change at the last Newtonian iteration.			1.0 × 10 ⁻⁶
		dimensionless	dimensionless	dimensionless	
3-9	TRGDPR	TRGDP is a real positive value that defines the target pressure change within a time step.			1.0 × 10 ⁻⁶
		psia	barsa	atma	
3-10	XXXDPR	XXXDPR is a real positive value that stipulates the maximum tolerable pressure change within a time step.			1.0 × 10 ⁻⁶
		psia	barsa	atma	
3-11	MNWRFP	MNWRFP is a positive integer greater than one and less than NEWTMX that defines the minimum number of Newtonian iterations before invoking the bisection algorithm for when the polymer phase is active in the model via the POLYMER keyword in the RUNSPEC section.			4
		dimensionless	dimensionless	dimensionless	
3-12	/	Record terminated by a “/”			Not Applicable

Notes:

- The keyword consists of three records, with items 1-1 to 1-11 representing record one items, 2-1 to 2-14 record two and 3-1 to 3-12 representing record number three. Each of the records are terminated by a “/” and is explicitly shown in the above rows.
- There is no keyword terminating “/”.

Table 12.66: TUNINGL Keyword Description

Note that for record number two (items 2-1 to 2-13) the maximum values should always be greater than the associated target value; for example, XXXCNV should be greater than TRGCNV. Also note that the TUNINGS keyword is stored on the restart files (see [RPTRST – Define Data to be Written to the RESTART File](#)) enabling the parameters to be utilized in a restart run without re-specifying the keyword.

See also the TUNINGS keyword in the SCHEDULE section that sets the tuning parameters for individual LGRs.

Example

```
--
--      DEFAULT TUNINGL PARAMETERS
--
TUNINGL
/
/
/
```

The above example explicitly sets the default parameters for all LGRs.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.232 TUNINGS - NUMERICAL TUNING CONTROL FOR INDIVIDUAL LGRs

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

TUNINGS defines the parameters used for controlling the commercial simulator's numerical convergence parameters for individual Local Grid Refinements (LGR). The keyword is similar to the TUNINGL keyword in the SCHEDULE section that applies the tuning parameters to the all LGRs, except for an additional first record that includes the LGR name.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to invoke various numerical schemes via the OPM Flow command line interface.

No.	Name	Description			Default
		Field	Metric	Laboratory	
0-1	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which the tuning data is being defined.			None
0-2	/	Record terminated by a "/"			Not Applicable
1-1	TSINIT	TSINIT is a real positive value that defines the maximum length of the next time step. Note that whenever the keyword is used TSINIT is always set back to the default value of one, unless explicitly over written.			1.0
		days	days	hours	
1-2	TSMAXZ	TSMAXZ is a real positive value that defines the maximum length of the next time step following TSINIT.			365.0
		days	days	hours	
1-3	TSMINZ	TSMINZ is a real positive value that defines the minimum length of all time steps.			0.1
		days	days	hours	
1-4	TSMCHP	TSMCHP is a real positive values that sets the minimum length of all chopped time steps.			0.15
		days	days	hours	
1-5	TSFMAX	TSFMAX is a real positive value that specifies the maximum growth rate a time step can be increased by, subject to the maximum allowable time step size set by TSMAXZ. For example, if the current time step has converged at 10 days and TSFMAX is set to the default value, then the next time step will be 3.0 x 10 days, that is 30 days provided it is less than TSMAXZ.			3.0
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-6	TSFMIN	TSFMIN is a real positive value that specifies the minimum decay rate a time step can be decreased by, subject to the minimum allowable time step size set by TSMINZ. For example, if the current time step has not converged at 10 days and TSFMAX is set to the default value, then the next time step will be 0.3×10 days, that is the maximum of 0.3 days and TSMINZ.			0.3
		dimensionless	dimensionless	dimensionless	
1-7	TSFCNV	TSFCNV real positive value that specifies the decay rate a time step can be decreased by after the number of target iterations has been exceeded.			0.1
		dimensionless	dimensionless	dimensionless	
1-8	TFDIFF	TFDIFFA is a real positive value that sets the time step growth factor of the time step after a convergence failure. For example, if the chopped current convergent time step is 10 days and TFDIFF is set to the default value, then the time step will be increased to 1.25×10 days, that is the minimum of 11.25 days and TSMAXZ.			1.25
		dimensionless	dimensionless	dimensionless	
1-9	THRURPT	THRURPT is a real positive value that specifies the maximum throughput ratio over a time step.			1.0×10^{20}
		dimensionless	dimensionless	dimensionless	
1-10	TMAXWC	TMAXWC is a real double precision value that defines maximum allowed time step after a well event; for example, when a well is opened or closed, etc.			None
		days	days	hours	
1-11	/	Record terminated by a "/"			Not Applicable
2-1	TRGTTE	TRGTTE is a real positive value that sets the time truncation error target.			0.1
		dimensionless	dimensionless	dimensionless	
2-2	TRGCNV	TRGCNV a real positive value that defines the non-linear convergence error.			0.001
		dimensionless	dimensionless	dimensionless	
2-3	TRGMBE	TRGMBE is a real positive value that specifies then target material balance error.			1.0×10^{-7}
		dimensionless	dimensionless	dimensionless	
2-4	TRGLCV	TRGLCV is a real positive value that specifies the linear convergence error target.			0.00001
		dimensionless	dimensionless	dimensionless	
2-5	XXXTTE	XXXTTE is a real positive value that sets the maximum time truncation error.			10.0
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
2-6	XXXCNV	XXXCNV is a real positive value that defines the maximum non-linear convergence error.			0.01
		dimensionless	dimensionless	dimensionless	
2-7	XXXMBE	XXXMBE is a real positive value that specifies the maximum mass balance error; that is the tolerated mass balance error relative to total mass present.			1.0 x 10 ⁻⁶
		dimensionless	dimensionless	dimensionless	
2-8	XXXLCV	XXXLCV is a real positive values that sets the maximum linear convergence error.			0.0001
		dimensionless	dimensionless	dimensionless	
2-9	XXXWFL	XXXWFL is a real positive values that fixes the maximum well flow convergence error.			0.001
		dimensionless	dimensionless	dimensionless	
2-10	TRGFIP	TRGFIP is a real positive value that stipulates the target fluid in-place error in Local Grid Refinements.			0.025
		dimensionless	dimensionless	dimensionless	
2-11	TRGSFT	TRGSFT is a real positive values that defines the target surfactant change when the Surfactant Model is active in the run.			None
		dimensionless	dimensionless	dimensionless	
2-12	THIONX	THIONX is a positive real value used to set the threshold for damping in the ion echange calculation for when the Brine Model is active in the run.			0.01
		dimensionless	dimensionless	dimensionless	
2-13	TRWGHT	TRWGHT is a positive integer that stipulates the implicitness for active tracer updates within the Newtonian iterations, and should be set to: 1) 1: The calculation is explicit, that is fully decoupled. 2) 2: The calculation is implicit, that is fully coupled.			1
		dimensionless	dimensionless	dimensionless	
2-14	/	Record terminated by a "/"			Not Applicable
3-1	NEWTMX	NEWTMX is a positive integer greater or equal to NEWTMN that stipulates the maximum number of Newtonian iterations for a time step.			12
		dimensionless	dimensionless	dimensionless	
3-2	NEWTMN	NEWTMN is a positive integer that is less or equal to NEWTMX that defines the minimum number of Newtonian iterations for a time step.			1
		dimensionless	dimensionless	dimensionless	
3-3	LITMAX	LITMAX is a positive integer greater or equal to LITMIN that sets the maximum number of linear iterations within a Newtonian iteration.			25
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
3-4	LITMIN	LITMIN is a positive integer less or equal to LITMAX that sets the minimum number of linear iterations within a Newtonian iteration.			1
		dimensionless	dimensionless	dimensionless	
3-5	MXWSIT	MXWSIT is a positive integer that defines the maximum number of iterations within a well flow calculation.			8
		dimensionless	dimensionless	dimensionless	
3-6	MXWPIT	MXWPIT is a positive integer that stipulates the maximum number of iterations for solving the bottom-hole pressure for wells under tubing head pressure control within a well flow calculation.			8
		dimensionless	dimensionless	dimensionless	
3-7	DDPLIM	DDPLIM a real positive value that stipulates the maximum pressure change at the last Newtonian iteration.			1.0 x 10 ⁻⁶
		psia	barsa	atma	
3-8	DDSLIM	DDSLIM a real positive value that sets the maximum saturation change at the last Newtonian iteration.			1.0 x 10 ⁻⁶
		dimensionless	dimensionless	dimensionless	
3-9	TRGDPR	TRGDP is a real positive value that defines the target pressure change within a time step.			1.0 x 10 ⁻⁶
		psia	barsa	atma	
3-10	XXXDPR	XXXDPR is a real positive value that stipulates the maximum tolerable pressure change within a time step.			1.0 x 10 ⁻⁶
		psia	barsa	atma	
3-11	MNWRFP	MNWRFP is a positive integer greater than one and less than NEWTMX that defines the minimum number of Newtonian iterations before invoking the bisection algorithm for when the polymer phase is active in the model via the POLYMER keyword in the RUNSPEC section.			4
		dimensionless	dimensionless	dimensionless	
3-12	/	Record terminated by a “/”			Not Applicable

Notes:

1) The keyword consists of three records, with items 1-1 to 1-11 representing record one items, 2-1 to 2-14 record two and 3-1 to 3-12 representing record number three. Each of the records are terminated by a “/” and is explicitly shown in the above rows.

2) There is no keyword terminating “/”.

Table 12.67:TUNINGS Keyword Description

Note that for record number two (items 2-1 to 2-13) the maximum values should always be greater than the associated target value; for example, XXXCNV should be greater than TRGCNV. Also note that the TUNING keyword is stored on the restart files (see [RPTST – Define Data to be Written to the RESTART File](#)) enabling the parameters to be utilized in a restart run without re-specifying the keyword.

See also the TUNINGL keyword in the SCHEDULE section that sets the tuning parameters for all LGRs.

Example

```
--
--      DEFAULT TUNINGS PARAMETERS
--
TUNINGS
OP01-LGR
/
/
/
```

The above example explicitly sets the default parameters for the LGR named OP01-LGR

12.3.233 UDQ - DECLARE USER DEFINE QUANTITIES (“UDQ”)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword starts the definition of a UDQ section that stipulates the variables and operations used to access the User Defined Quantities features in OPM Flow. UDQ variables can be constants, SUMMARY variables, as defined in the SUMMARY section, or a formula using various mathematical functions together with constants and SUMMARY variables. Available operation commands include the ASSIGN, DEFINE UNITS and UPDATE that are sub-keywords to the UDQ section keyword. An UDQ definition section is terminated by a “/” on a single line.

User Defined Quantities and also be used as User Defined Arguments (“UDA”) in the SCHEDULE section with various group, well, and connection keywords. In this case, the UDA variables are used to replace numerical values on these keywords by UDA variables that have been defined by the UDQ keyword. For example, if we wish to make the oil rate for certain wells to be a function of their GOR, then one can define the function using the UDQ keyword that results in a UDQ variable, WU_MXOIL say, and then use WU_MXOIL as a UDA variable on the WCONPROD keyword for the ORAT parameter. See the [ACTIONX – Define Action Conditions and Command Processing](#) in the SCHEDULE section for the list of keywords that can use UDA variables.

Although this keyword is read by OPM Flow and the ACTION and UDQ computational logic and calculations have been implemented, one should used caution using this facility as it may result in OPM Flow aborting.

No.	Name	Description	Default
UDQ		Define the start of UDQ Definition Section. This is then followed on a new line by any number of UDQ records that define the various operations to be performed using the ASSIGN, DEFINE UNITS and UPDATE sub-keywords for the OPERATOR.	
I	OPERATOR	<p>OPERATOR is a character sting that that defines the type of operations to perform, and should be one of the following:</p> <ol style="list-style-type: none"> 1) ASSIGN: This option assigns a value to a variable and sets the UPDATE status to OFF. 2) DEFINE: In this case a mathematical formula is defined and assigned to a variable. The variable is initialized with the formula and the UPDATE status is set to ON. 3) UNITS: This option sets the reporting units for a defined variable and has no effect on the calculations. The variable must already have been defined prior to using this option. 4) UPDATE: Stipulates when the defined variable should be re-calculated. 	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description	Default
2	VARIABLE	<p>VARIABLE is a character string of length eight that stipulates the name of the user defined variable that will be processed by the OPERATOR command. The first two characters of VARIABLE must be set based on the type of variable being defined, that is:</p> <ol style="list-style-type: none"> 1) CU: For variables that are associated with connections, for example SUMMARY variable COFR (Connection Oil Flow Rate). 2) FU: For variables that are associated with field data, for example SUMMARY variable FOPR (Field Oil Production Rate). 3) GU: For variables that are associated with groups, for example SUMMARY variable GLPR (Group Liquid Production Rate). 4) RU: For variables that are associated with regions, for example SUMMARY variable RPR (Region Pressure). 5) SU: For variables that are associated with multi-segment wells, for example SUMMARY variable SOFR (Segment Oil Flow Rate). 6) WU: For variables that are associated with wells, for example SUMMARY variable WWCT (Well Water Cut). 7) AU: For variables that are associated with aquifers, for example SUMMARY variable AAQP (Analytical Aquifer Pressure). 8) BU: For variables that are associated with blocks, for example SUMMARY variable BPR (Block oil phase Pressure). 	
3	EXPRESSION	<p>The data type for EXPRESSION is based on the OPERATOR option above, namely if OPERATOR is set to:</p> <ol style="list-style-type: none"> 1) ASSIGN: Then EXPRESSION should be a numerical value. 2) DEFINE: In this case a mathematical formula is defined and assigned to a variable. The variable is initialized with the formula and the UPDATE status is set to ON. 3) UNITS: Then EXPRESSION should be a character string enclosed in quotes if it contains blanks, with a maximum length of eight characters, that declares the units for VARIABLE that will be used for reporting. 4) UPDATE: In this case EXPRESSION can have the value ON to evaluate VARIABLE at all time steps, OFF to not evaluate VARIABLE, or NEXT to evaluate VARIABLE at the next time step. 	
	/	Termination of a UDQ record. Note that multiple numbers of records can be entered within a UDQ section with each record terminated by a "/".	
	/	Define the end of UDQ Definition Section	
Notes: <ol style="list-style-type: none"> 1) The keyword is terminated by a "/". 			

Table I 2.68: UDQ Keyword Description

Currently, the simulator only supports field and well variable names (FU and WU) type variables and simple mathematical formula consisting of opening and closing brackets (()), and the plus, minus, multiply and divide operators, as illustrated in the examples below.

See also the UDADIMS, UDQDIMS and UDQPARAM keywords in the RUNSPEC section to define the dimensions for the UDQ keyword and associated variables.

Note

UDQ variables utilizing group and well variables, must have their associated groups and wells previously fully defined in the [commercial simulator](#), otherwise an error will occur. For example, if a well's GOR is being used as part of a UDQ definition, then the well must be fully characterized prior to declaring the UDQ definition.

This restriction does not apply to OPM Flow; however, it should be considered if the same deck is to be run with both simulators.

Note

Note that after the terminating "/" for the ASSIGN operator normally any comments can be entered; however, if there is "/" within the comment field, as per:

```
ASSIGN FUNGLYLD 1.196 / Condensate Yield (63.5/56.7)/(1.0 - 0.065)
```

then the simulator will abort. The work around is to manually place the comment characters "--" after the ASSIGN terminating "/", like so:

```
ASSIGN FUNGLYLD 1.196 / -- Condensate Yield (63.5/56.7)/(1.0 - 0.065)
```

User Defined Quantities and also be used as User Defined Arguments ("UDA") in the SCHEDULE section with various group, well, and connection keywords. In this case, the UDA variables are used to replace numerical values on these keywords by UDA variables that have been defined by the UDQ keyword. For example, if we wish to make the oil rate for certain wells to be a function of their water cut, then one can define the function using the UDQ keyword that results in a UDQ variable, WU_WCUT say, and then use WU_WCUT as a UDA variable on the WCONPROD keyword for the ORAT parameter. Table 12.69 list the keywords that can be used with UDA variables.

ACTIONX - User Defined Argument Keywords					
Schedule Section Keywords Status					
Number	Group Keywords	Well Keywords		Connection Keywords	Miscellaneous Keywords
1	GCONINJE	WALKALIN	WINJEDET	CECON	LINCOM
2	GCONPRI	WAPI	WINJTEMP	CPIFACT	
3	GCONPROD	WCONINJE	WPOLYMER	CPIFACTL	
4	GCONSALE	WCONPROD	WSALT		
5	GCONSUMP	WECON	WSOLVENT		
6	GECON	WECONCMF	WSURFACT		
7	GRUPFUEL	WELDRAW	WTADD		
8	GRUPSALE	WELLSTRE	WTMULT		
9	GTADD	WELTARG	WTRACER		
10	GTMULT	WFOAM			

ACTIONX - User Defined Argument Keywords				
Schedule Section Keywords Status				
Number	Group Keywords	Well Keywords	Connection Keywords	Miscellaneous Keywords
		Multi-Segment Well Keywords		
I		WSEGTABL		
Notes: <ol style="list-style-type: none"> 1) Cells not colored show that the keyword has been tested and is functional within an ACTIONX block using a User Defined Argument. 2) Cells colored in gray indicate that the keyword has not been tested in OPM Flow. 3) Cells colored orange show keywords currently unavailable in OPM Flow because the underlying feature is not available; either because the keyword is a compositional keyword in the commercial simulator, or the keyword has not been implemented in OPM Flow. 				

Table 12.69: ACTIONX User Defined Argument Supported Keywords

Examples

The first example shows how to define some constant field variables used for calculating facilities corrected condensate and Liquefied Petroleum Gas¹⁹⁰ ("LPG") yields in a wet gas model:

```
--
-- DEFINE START OF USER DEFINED QUANTITY SECTION
--
UDQ
--
-- OPERATOR VARIABLE  EXPRESSION
--
ASSIGN      FUNGLYLD  1.100000      / -- Condensate Yield (stb/Mscf)
ASSIGN      FUNGLSHK  0.000000      /  Condensate Shrinkage Factor to Zero
ASSIGN      FULPGYLD  0.065775      / -- LPG Sep Gas Yield (stb/Mscf)
ASSIGN      FULPGSHK  0.080410      /  LPG Shrinkage Factor
ASSIGN      FUFACSHK  0.000935      /  Facilities Shrinkage Factor
ASSIGN      FUFULSHK  0.052924      /  Fuel Utilization
ASSIGN      FUDELTA   1E-10         /  Value to avoid diving by zero errors

/  DEFINE END OF USER DEFINED QUANTITY SECTION
```

¹⁹⁰ Liquefied Petroleum Gas or LPG consists mainly of propane, propylene, butane, and butylene in various mixtures. It is produced as a by-product of natural gas processing and petroleum refining. The components of LPG are gases at standard conditions.

The next example is a continuation of this example by showing how one can calculate the adjusted field condensate and LPG rates. Note both examples could be merged into a single UDQ definition but have been stated separately for ease of reference.

```
--
-- DEFINE START OF USER DEFINED QUANTITY SECTION
--
UDQ
--
-- OPERATOR VARIABLE EXPRESSION
--
DEFINE      FU_FNGLR  FGPR *(FOGR * FUNGLYLD) / Calculate Condensate Rate Field
UPDATE      FU_FNGLR  ON /
UNITS       FU_FNGLR  STBD /

DEFINE      FU_FLPGR  FU_FWGPR * FULPGYLD / Calculate LPG Rate Field
UPDATE      FU_FLPGR  ON /
UNITS       FU_FLPGR  STBD /

/ DEFINE END OF USER DEFINED QUANTITY SECTION
```

In the above the DEFINE operator is use to define the equations to calculate the corrected condensate (FU_FNGLR) and LPG rates (FU_FLPGR) with the UPDATE operator set to ON so that the rates are calculate at every time step, and finally, the UNITS operator is used to set the units of the calculated rates.

The final example show the use of the UDADIMS and UDQDIMS keywords in the RUNSPEC section, followed by the keywords in the SCHEDULE section that define a UDQ definition that uses the DEFINE operator to calculate adjusted well rates based on an expression. The final set of keywords show how the UDQ defined variables are employed on the WCONPROD keyword to control the production constraints for several wells.

RUNSPEC SECTION KEYWORDS

```
--
-- USER DEFINED ARGUMENT DIMENSIONS
-- NO. NOT TOTAL
-- ARGS USED UDQ
UDADIMS
10      1*      10 /

--
-- USER DEFINED ARGUMENT DIMENSIONS FACILITY
-- MAX MAX MAX MAX MAX MAX MAX MAX MAX MAX MAX RAND
-- FUNCS ITEMS CONNS FIELD GROUP REGS SEGTM WELL AQUF BLCKS OPT
UDQDIMS
50      25      0      50      50      0      0      0      0      0      0      N /
```

And the SCHEDULE section part of the example is shown on the following page.

SCHEDULE SECTION KEYWORDS

```
--
-- DEFINE START OF USER DEFINED QUANTITY SECTION
--
UDQ
--
-- OPERATOR VARIABLE EXPRESSION
--
DEFINE      WUOPRL (WOPR OPL01 - 150) * 0.90 / OIL & LIQ CAPACITIES
DEFINE      WULPRL (WLPR OPL01 - 200) * 0.90 / at GEFAC = 0.8995
DEFINE      WUOPRU (WOPR OPU01 - 250) * 0.80 /
DEFINE      WULPRU (WLPR OPU01 - 300) * 0.80 /
--
UNITS      WUOPRL SM3/DAY / DEFINE REPORTING UNITS
UNITS      WULPRL SM3/DAY / FOR UDQ VARIABLES
UNITS      WUOPRU SM3/DAY /
UNITS      WULPRU SM3/DAY /
/ DEFINE END OF USER DEFINED QUANTITY SECTION
--
-- WELL PRODUCTION WELL CONTROLS
--
-- WELL OPEN/ CNTL OIL WAT GAS LIQ RES BHP THP VFP VFP
-- NAME SHUT MODE RATE RATE RATE RATE RATE PRES PRES TABLE ALFQ
WCONPROD
OP01 SHUT GRUP 1* 1* 1* 1* 1* 200.0 /
OP02 SHUT GRUP 1* 1* 1* 1* 1* 200.0 /
/
DATES
1 FEB 2020 /
--
-- WELL PRODUCTION WELL CONTROLS
--
-- WELL OPEN/ CNTL OIL WAT GAS LIQ RES BHP THP VFP VFP
-- NAME SHUT MODE RATE RATE RATE RATE RATE PRES PRES TABLE ALFQ
WCONPROD
OP01 OPEN GRUP WUOPRL 1* 1* WULPRL 1* 60.0 /
OP02 OPEN GRUP WUOPRL 1* 1* WULPRL 1* 00.0 /
/
DATES
1 MAR 2020 /
1 APR 2020 /
1 MAY 2020 /
1 JUN 2020 /
1 JUL 2020 /
1 AUG 2020 /
1 SEP 2020 /
/
```

12.3.234 UDT - DECLARE USER DEFINE TABLES (“UDT”)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword starts the definition of a UDT table that defines a multi-dimensional table that can be used to assign User Defined Quantities (“UDQ”) via the UDQ keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.235 USECUPL – LOAD A RESERVOIR COUPLING FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The USECUPL keyword causes the simulator to read a Reservoir Coupling file that has been previously created in a master run using the DUMPCUPL keyword in the SCHEDULE section, for when reservoir coupling is invoked by the GRUPMAST and SLAVES keywords in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.236 VAPPARS – OIL VAPORIZATION PARAMETERS

VAPPARS defines the rate of oil vaporization in the presence of undersaturated gas and the rate at which the remaining oil gets “heavier” via the reduction in the solution gas-oil ratio (“Rs”). This keyword should only be used if the OIL, GAS, DISGAS and VAPOIL keywords in the RUNSPEC section have been invoked to allow oil, gas, dissolved gas and vaporized oil to be present in the model.

In OPM Flow, VAPPARS can only be set once, and not changed multiple times in the SCHEDULE section.

See [VAPPARS – Oil Vaporization Parameters](#) in the SOLUTION section for a full description.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.237 VFPCHK – DEFINE PRODUCTION VERTICAL FLOW PERFORMANCE BHP CHECK

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The VFPPROD keyword defines production Vertical Flow Performance (“VFP”) tables that are used to determine the outflow or downstream pressure based on the inlet or upstream pressure and the phases flowing through the system. For a well this means the table relates the flowing bottom-hole pressure (“BHP”) to the well’s tubing head pressure (“THP”) based on the oil, gas and water rates (and any artificial lift quantities like gas lift gas), or phases ratios, flowing up the wellbore.

The VFP tables are generated by external programs and may result in some inconsistencies. A common inconsistency is that the curves of BHP versus flow rate at adjacent THP values cross, that is the BHP is increasing with decreasing THP. This will result in numerical convergence problems and should therefore be avoided; which is why the simulator checks for this particular inconsistency. However, there are cases when the external software generating the VFP table outputs “valid” high BHP values, for example, when the flow exceeds the erosion velocity limits, or the flow is supersonic, indicating a no flow condition. The VFPCHK keyword sets the BHP check pressure (VFPCHK) for subsequent VFPPROD tables, so that crossing BHP values above VFPCHK will be ignored.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	VFPCHK	VFPCHK is a real positive value that defines the BHP pressure above which crossing VFP curves will be ignored. Setting VFPCHK to a large number like the default value number will cause all crossing curves to be checked. Also if the keyword is omitted from the input deck then the check is performed using the default value.			1.0 ¹⁰
		psia	barsa	atma	
Notes: I) The keyword is terminated by a “/”.					

Table 12.70: VFPCHK Keyword Description

Note

One reason for external programs generating crossing VFP curves is that the curves have been generated with too much resolution. For example, if the GOR entries has been generated with values of 100, 150, 200, 250, 300, 350, 400, 450 and 500, then use a geometric spacing instead to generated the VFP table, that is: 100, 300, 900. This will enable the simulator to interpolate the curves consistently and avoid crossing VFP curves.

Example

Here the example sets the maximum BHP to be 1.0×10^6 above which crossing VFP curves will be ignored.

```
--  
--      DEFINE PRODUCTION VFP CHECK MAX BHP  
--  
--      MXBHP  
VFPCHK      1.0E6  
/
```

12.3.238 VFPIJ – DEFINE INJECTION VERTICAL FLOW PERFORMANCE TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The VFPIJ keyword defines injection Vertical Flow Performance (“VFP”) tables that are used to determine the outflow or downstream pressure based on the inlet or upstream pressure and the phases being injected into the system. For a well this means the table relates the flowing bottom-hole pressure (“BHP”) to the well’s tubing head pressure (“THP”) based on the oil, gas or water injection rates. The table is also used to describe the pressure relationship when the network option is being used, although the Network option is not currently implemented in OPM Flow. In this case the table describes the pipeline pressure behavior from the HIGHER group (inlet node) to the LOWER group (outlet node) given the current flowing conditions (the group relationship is defined by the GRUPTREE keyword in SCHEDULE section).

The data for this keyword is generated by an external program and is normally included into the input deck using the INCLUDE keyword as described in section [CHAPTER 4: GLOBAL SECTION KEYWORDS](#), as the data can be quite voluminous.

Each VFPIJ table must be entered with a separate VFPIJ keyword that consists of four records, with 1-1, 1-2 representing record one items (1) and (2) and 2-1, 2-2 representing record number two items (1) and (2) and so on in the “No.” column in Table 12.71. Each record is terminated by a “/”. The fourth record must be repeated to give BHP data as a function of FLO for all THP values.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-1	VFPTAB	A positive integer greater than zero and less than or equal to the MXVFPTAB variable as defined on the VFPIDIMS keyword in the RUNSPEC section, that defines the vertical flow performance table number.			None
1-2	VFPREF	A real positive value that defines the reference depth used to generate this VFPIJ table data set. OPM Flow automatically corrects any difference between VFPREF and the BHPREF on the WELSPECS and WPAVDEP keywords in the SCHEDULE section, using the current hydrostatic head.			None
1-3	FLO	A defined character string that defines the injection phases, and should be set to one of the following character strings: 1) OIL: for injecting phase being oil. 2) GAS: for injecting phase being gas. 3) WAT: for injecting phase being water.			None
1-4	VFPTYPE	A defined character string that should be defaulted or set equal to THP.			THP
1-5	VFPUNITS	Units used for the BHP-DATA on this keyword. This variable is ignored by OPM Flow and should be defaulted with I*.			I*
		FIELD	METRIC	LAB	
1-6	VFPVALUE	A defined character string that should be defaulted or set equal to BHP. This variable is ignored by OPM Flow and should be defaulted with I*.			BHP
1-7	/	Record terminated by a “/”			Not Applicable

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
2-1	FLO-DATA	A real positive monotonically increasing vector that defines the numerical values of the injection phase declared by the FLO variable. The number of entries must greater than two and less than or equal to MXMFLO as defined on the VFPIDIMS keyword in the RUNSPEC section.			None
		Liquid: stb Gas: Mscf	Liquid: sm ³ Gas: sm ³	Liquid: scc Gas: scc	
2-2	/	Record terminated by a “/”			Not Applicable
3-1	THP-DATA	A real positive monotonically increasing vector that defines the numerical values of the tubing head pressure values. The number of entries must be greater than two and less than or equal to MXMTHP as defined on the VFPIDIMS keyword in the RUNSPEC section.			None
		psia	barsa	atma	
3-2	/	Record terminated by a “/”			Not Applicable
4-1	NTHP	This data record consists of an integer value that defines the index of THP values entered via the THP-DATA records on this keyword. For example, if THP-DATA is equal to 1000, 2000, 3000 and 3500 and NTHP is equal to three then NTHP refers to third entry, that is THP equal to 3000.			
	BHP-DATA	NTHP is then followed by a real vector of BHP values for each FLO injection rate for the corresponding index value (NTHP) and is then terminated with a”/” The (4-1) record, which consists of both NTHP and BHP-DATA data, is then repeated, until all combinations of (NTHP and FLO) and the associate BHP data has been entered.			
		psia	barsa	atma	None
4-2	/	Each Index (NTHP, BHP-DATA) data set is terminated by a “/”			Not Applicable
Notes:					
1) Each VFPINJ table must be entered with a separate VFINJ keyword that consists of four records, with items 1-1 to 1-7 representing record one items and 2-1 to 2-2 representing record number two items, etc., in the “No.” column in this table.					
2) Each of the records are terminated by a “/” and is explicitly shown in the above rows.					
3) There is no keyword terminating “/”.					

Table 12.71: VFPINJ Keyword Description

See also the WELSPEDS keyword to define wells and the WCONINJE keyword that is used to allocate the VFPINJ tables to specific wells. Note that one VFPINJ table can be allocated to one or more wells, provided the wells in question have a similar trajectory and similar flow characteristics, for example vertical water injection wells injecting into the same reservoir.

The VFPPROD keyword is used to enter VFP tables for production wells or to describe the pressure relationship when the network option is being used. In this case the table describes the pipeline pressure behavior from the LOWER group (inlet node) to the HIGHER group (outlet node) given the current production conditions.

All the aforementioned keywords are described in the SCHEDULE section.

Examples

The following example shows the VFPINJ table for a water injection well and is taken from the Norne OPM Flow model.

VFPINJ

```
-- Table      Datum Depth      Rate Type
-----
      12      2718.07      'WAT' /

-- 'WAT' units - SM3/DAY
  500.0  1263.2  2026.3  2789.5  3552.6
 4315.8  5078.9  5842.1  6605.3  7368.4
 8131.6  8894.7  9657.9 10421.1 11184.2
11947.4 12710.5 13473.7 14236.8 15000.0 /

-- 'THP' units - BARSA
  21.01   63.24  105.46  147.68  189.90
 232.12  274.35  316.57  358.79  401.01 /

1  254.51  253.95  252.27  249.83  246.69
   242.88  238.42  233.32  227.59  221.22
   214.23  206.62  198.38  189.53  180.06
   169.97  159.26  147.95  136.00  123.46
/
2  297.02  296.49  294.82  292.39  289.26
   285.47  281.01  275.92  270.20  263.84
   256.87  249.28  241.05  232.22  222.76
   212.70  202.01  190.71  178.79  166.27
/

.....
.....

9  594.67  594.29  592.70  590.34  587.29
   583.57  579.16  574.17  568.55  562.25
   555.40  547.92  539.79  531.09  521.74
   511.82  501.25  490.13  478.34  466.01
/
10 637.19  636.83  635.26  632.91  629.86
   626.16  621.76  616.78  611.17  604.89
   598.05  590.59  582.47  573.79  564.45
   554.56  544.01  532.91  521.14  508.83
/
```

The example shows the first two and the last two records of the fourth kind, as the data is too voluminous to be included.

Note

The VFPTAB variable defines the table number of the VFPINJ data set; if more than one VFPINJ keyword is entered with the same VFPTAB number then the VFPINJ data set will be overwritten by the last VFPINJ keyword with the same VFPTAB number.

The same comment is also applicable to the VFPPROD keyword.

12.3.239 VFPPROD – DEFINE PRODUCTION VERTICAL FLOW PERFORMANCE TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The VFPPROD keyword defines production Vertical Flow Performance (“VFP”) tables that are used to determine the outflow or downstream pressure based on the inlet or upstream pressure and the phases flowing through the system. For a well this means the table relates the flowing bottom-hole pressure (“BHP”) to the well’s tubing head pressure (“THP”) based on the oil, gas and water rates (and any artificial lift quantities like gas lift gas), or phases ratios, flowing up the wellbore. The table is also used to describe the pressure relationship when the network option is being used, although the Network option is not currently implemented in OPM Flow. In this case the table describes the pipeline pressure behavior from the LOWER group (inlet node) to the HIGHER group (outlet node) given the current flowing conditions (the group relationship is defined by the GRUPTREE keyword in SCHEDULE section).

Each VFPPROD table must be entered with a separate VFPPROD keyword that consists of seven records, with 1-1, 1-2 representing record one items (1) and (2) and 2-1, 2-2 representing record number two items (1) and (2) in the “No.” column in Table 12.72. Each record is terminated by a “/”. The seventh record must be repeated to give BHP data as a function of FLO for all THP values.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-1	VFPTAB	A positive integer greater than zero and less than or equal to the MXVFPTAB variable as defined on the VFPPDIMS keyword in the RUNSPEC section, that defines the vertical lift performance table number.			None
1-2	VFPREF	A real positive value that defines the reference depth used to generate this VFPPROD table data set. OPM Flow automatically corrects any difference between VFPREF and the BHPREF on the WELSPECS and WPAVDEP keywords in the SCHEDULE section, using the current hydrostatic head.			None
1-3	FLO	A defined character string that defines the flowing phases, and should be set to one of the following character strings: 1) GAS: for flowing phase being the gas rate. 2) OIL: for flowing phase being the oil rate. 3) LIQ: for flowing phase being the liquid (oil plus water) rate.			None
1-4	WFR	A defined character string that defines the flowing water fraction and should be set to one of the following character strings: 1) WOR: for the water fraction being the water-oil ratio $\frac{q_w}{q_o}$ and should be used if FLOW is set to OIL or LIQ’ 2) WCT: for the water fraction being the water cut $\frac{q_w}{q_o + q_w}$ and should be used if FLOW is set to OIL or LIQ 3) WGR: for the water fraction being the water-gas ratio $\frac{q_w}{q_g}$ and should be used if FLOW is set to GAS.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
I-5	GFR	<p>A defined character string that defines the flowing gas fraction and should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) GOR: for the gas fraction being the gas-oil ratio $\frac{q_w}{q_o}$ and should be used if FLOW is set to OIL or LIQ' 2) GLR: for the gas fraction being the gas-liquid ratio $\frac{q_g}{q_o+q_w}$ and should be used if FLOW is set to OIL or LIQ 3) OGR: for the gas fraction being the oil-gas ratio $\frac{q_o}{q_g}$ and should be used if FLOW is set to GAS. 			None
I-6	VFPTYPE	A defined character string that should be defaulted or set equal to THP.			THP
I-7	ALQ	<p>A defined character string that defines the artificial lift quantity and should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) GRAT: for the artificial lift quantity being the gas lift gas injection rate. 2) IGLR: for the artificial lift quantity being the gas lift gas, injection gas-liquid ratio. 3) TGLR: for the artificial lift quantity being the gas lift gas, injection total gas-liquid ratio. 4) COMP: for the artificial lift quantity being the compressor power, for a compressor. 5) PUMP: for the artificial lift quantity being the pump rating for a pump. 6) DENO: for oil surface density. 7) DENG: for gas surface density. <p>The default value of I* is " " or undefined that covers the case when the ALQ variable is not entered.</p>			I*
I-8	VFPUNITS	<p>Units used for the BHP-DATA on this keyword.</p> <p>This variable is ignored by OPM Flow and should be defaulted with I*.</p>			I*
		FIELD	METRIC	LAB	
I-9	VFPVALUE	<p>A defined character string that should be defaulted or set equal to BHP.</p> <p>This variable is ignored by OPM Flow and should be defaulted with I*.</p>			BHP
I-10	/	Record terminated by a "/"			Not Applicable
2-1	FLO-DATA	<p>A real positive monotonically increasing vector that defines the numerical values of the flowing phase declared by the FLOW variable.</p> <p>The number of entries must greater than two and less than or equal to MXMFLO as defined on the VFPPDIMS keyword in the RUNSPEC section.</p>			None
		<p>Liquid: stb</p> <p>Gas: Mscf</p>	<p>Liquid: sm³</p> <p>Gas: sm³</p>	<p>Liquid: scc</p> <p>Gas: scc</p>	

No.	Name	Description			Default
		Field	Metric	Laboratory	
2-2	/	Record terminated by a "/"			Not Applicable
3-1	THP-DATA	A real positive monotonically increasing vector that defines the numerical values of the tubing head pressure values. The number of entries must greater than two and less than or equal to MXMTHP as defined on the VFPPDIMS keyword in the RUNSPEC section.			None
		psia	barsa	atma	
3-2	/	Record terminated by a "/"			Not Applicable
4-1	WFR-DATA	A real positive monotonically increasing vector that defines the numerical values of the flowing water fraction declared by the WFR variable. The number of entries must greater than two and less than or equal to MXMWFR as defined on the VFPPDIMS keyword in the RUNSPEC section.			None
		WOR: dimensionless WCT: dimensionless WGR: stb/Mscf	dimensionless dimensionless dimensionless	dimensionless dimensionless dimensionless	
4-2	/	Record terminated by a "/"			Not Applicable
5-1	GFR-DATA	A real positive monotonically increasing vector that defines the numerical values of the flowing gas fraction declared by the GFR variable. The number of entries must greater than two and less than or equal to MXMGFR as defined on the VFPPDIMS keyword in the RUNSPEC section.			None
		GOR: Mscf/stb GLR: Mscf/stb OGR: stb/Mscf	dimensionless dimensionless dimensionless	dimensionless dimensionless dimensionless	
5-2	/	Record terminated by a "/"			Not Applicable
6-1	ALQ-DATA	A real positive monotonically increasing vector that defines the numerical values of the artificial lift quantity declared by the ALQ variable. The number of entries must greater than two and less than or equal to MXMALQ as defined on the VFPPDIMS keyword in the RUNSPEC section.			None
		GRAT: Mscf/d IGLR: Mscf/stb TGLR: Mscf/d DENO: lb/ft ³ DENG: lb/ft	sm ³ /day dimensionless dimensionless kg/m ³ kg/m ³	scc/hour dimensionless dimensionless gm/cc gm/cc	
6-2	/	Record terminated by a "/"			Not Applicable

No.	Name	Description			Default
		Field	Metric	Laboratory	
7-1	NTHP	This data record consists of a series of integer values that defines the index of THP, WFR, GFR, ALQ entered via the those records on this keyword. The first index, NTHP, is an integer value that defines the index of THP values entered via the THP-DATA records on this keyword. For example, if THP-DATA is equal to 100, 200, 300 and 350 and NTHP is equal to three then NTHP refers to third entry, that is THP equal to 300.			None
	NWFR	The second index, NWFR, is an integer value that defines the index of the water fraction values entered via the WFR-DATA records on this keyword. For example, if WFR-DATA is equal to 0.00, 0.25, 0.50 and 0.75 and NWFR is equal to two then NWFR refers to second entry, that is WFR equal to 0.25.			None
	NGFR	The third index, NGFR, is an integer value that defines the index of the gas fraction values entered via the GFR-DATA records on this keyword. For example, if GFR-DATA is equal to 100.0, 200.0, 500.0 and 750.0 and NGFR is equal to three then NGFR refers to third entry, that is GFR equal to 500.0.			None
	NALQ	The fourth and final index entry, NALQ, is an integer value that defines the index of artificial lift values via the ALQ-DATA records on this keyword. For example, if ALQ-DATA is equal to 50, 100, 200 and 300 and NALQ is equal to one then NALQ refers to first entry, that is ALQ equal to 50. The fourth index is then followed by the BHP values.			None
	BHP-DATA	BHP-DATA is a real vector of BHP values for each FLO production rate for the corresponding index value (NTHP, NWFR, NGFR, NALQ) and is then terminated with a "/" The (7-1) record, which consists of the four indices and BHP data, is then repeated until all combinations of (NTHP, NWFR, NGFR, NALQ) and the associate BHP data has been entered.			None
	psia	barsa	atma		
7-2	/	Each Index (NTHP, NWFR, NGFR, NALQ, BHP-DATA) data set is terminated by a "/"			Not Applicable

Notes:

- Each VFPPROD table must be entered with a separate VFPPROD keyword that consists of seven records, with entries 1-1 to 1-10 representing record one items and 2-1 to 2-2 representing record number two items, etc., in the "No." column in this table.
- Each of the records are terminated by a "/" and is explicitly shown in the above rows.
- There is no keyword terminating "/".

Table 12.72:VFPPROD Keyword Description

The data for this keyword is generated by an external program and is normally included into the input deck using the INCLUDE keyword as described in section [CHAPTER 4: GLOBAL SECTION KEYWORDS](#), as the data can be quite voluminous.

See also the WELSPECS keyword to define wells and the WCONPROD keyword that is used to allocate the VFPPROD tables to specific wells. Note that one VFPPROD table can be allocated to one or more wells, provided the wells in question have a similar trajectory and similar flow characteristics, for example vertical oil wells producing from the same reservoir, or different reservoirs with similar PVT properties.

The VFPIIJ keyword is used to enter VFP tables for injection wells or to describe the pressure relationship when the network option is being used. In this case the table describes the pipeline pressure behavior from the HIGHER group (inlet node) to the LOWER group (outlet node) given the current injection conditions.

All the aforementioned keywords are described in the SCHEDULE section.

Examples

The following example shows the VFPPROD table for a production gas well and is taken from the Norne OPM Flow model. Here WFR has been set to water-gas ratio and GFR has been set to the oil-gas ratio, and the ALQ value is defaulted.

VFPPROD

```
-- Table      Datum Depth      Rate Type      WFR Type      GFR Type
-----
          5          2623.39          'GAS'          'WGR'          'OGR' /

-- 'GAS' units - SM3/DAY
500000.0 1000000.0 2000000.0 4000000.0 8000000.0
1200000.0 1600000.0 1999999.9 3000000.0 3999999.8
5000000.5 /

-- 'THP' units - BARSA
10.00 20.00 40.00 80.00 120.00
150.00 200.00 250.00 /

-- 'WGR' units - SM3/SM3
0 1e-9 1e-6 1e-5 0.0001
0.001 0.01 0.1 /

-- 'OGR' units - SM3/SM3
1e-7 1e-6 1e-5 0.0001 0.001
0.01 /

-- 'ALQ' units -
0 /

1 1 1 1 11.93 12.22 13.35 17.24 27.93
39.83 52.06 64.38 95.20 125.89
156.52
/
1 1 2 1 11.93 12.22 13.35 17.24 27.94
39.84 52.07 64.39 95.21 125.91
156.55
/

.....
8 8 5 1 483.75 511.15 614.09 1044.78 2757.56
5592.55 9528.36 14567.24 32005.79 56375.24
87684
/
8 8 6 1 487.68 516.24 624.74 1075.40 2860.16
5803.92 9880.58 15093.76 33119.59 58297.57
90639
/
```

The example shows the first two and the last two records of type seven, as the data is too voluminous to be included.

The next example below shows an example oil producing well VFPPROD, again taken from Norne OPM Flow model. Here WFR has been set to water cut and GFR has been set to the gas-oil ratio, and the ALQ value is defaulted.

VFPPROD

```
-- Table      Datum Depth      Rate Type      WFR Type      GFR Type      TAB Type
-- -----
--      37      2641.02      'LIQ'          'WCT'          'GOR'          /

-- Prosper files are corrected from RKB to MSL depth. lmarr

-- Table      Datum Depth      Rate Type      WFR Type      GFR Type      TAB Type
-- -----
--      37      2617.02      'LIQ'          'WCT'          'GOR'          /

-- 'LIQ' units - SM3/DAY
200.0  500.0  1000.0  1500.0  2000.0
2500.0 3000.0 3500.0 4000.0 4500.0
5000.0 5500.0 6000.0 6500.0 7000.0
7500.0 8000.0 10000.0 14000.0 /

-- 'THP' units - BARSA
21.01  51.01  61.01  81.01  101.01
121.01 141.01 161.01 181.01 201.01 /

-- 'WCT' units - FRACTION
0      0.1      0.2      0.3      0.4
0.5    0.6    0.7    0.8      1 /

-- 'GOR' units - SM3/SM3
90      100      150      200      500
1000    2000 /

-- 'ALQ' units -
0 /

1  1  1  1  160.82  136.70  119.79  115.86  117.38
      121.16  126.08  131.56  137.48  143.74
      150.29  157.07  164.02  171.07  178.13
      185.11  192.09  220.38  280.86
/
1  1  2  1  155.63  129.40  112.32  108.64  110.44
      114.74  120.15  126.09  132.47  139.05
      146.02  153.41  160.67  167.91  175.13
      182.34  189.55  218.81  281.02
/

.....
.....

10 10  6  1  439.30  437.95  437.53  437.79  438.39
      439.26  440.36  441.67  443.19  444.92
      446.85  448.99  451.32  453.85  456.58
      459.51  462.64  477.11  515.47
/
10 10  7  1  439.30  437.95  437.53  437.79  438.39
      439.26  440.36  441.67  443.19  444.92
      446.85  448.99  451.32  453.85  456.58
      459.51  462.64  477.11  515.47
/
```

The example shows the first two and the last two records of type seven, as the data is too voluminous to be included.

12.3.240 VFPTABL – DEFINE PRODUCTION VERTICAL FLOW PERFORMANCE ALQ INTERPOLATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The VFPTABL keyword defines the interpolation method for production Vertical Flow Performance (“VFP”) tables for the Artificial Lift Quantity (“ALQ”). Production VFP data is entered via the VFPPROD keyword in the SCHEDULE section. By default the simulator interpolates all the variables in the VFP tables using linear interpolation, including the ALQ quantity. However, if the ALQ values represent gas lift, then linear interpolation may not be sufficient, as the gradient change between the tabulated ALQ values may result in sudden changes. This is particularly important in gas lift optimization studies where the available gas lift gas is being allocated to a group of wells in order to maximize oil production rates. To overcome this issue the VFPTABL keyword allows the ALQ values to be interpolated using cubic spline interpolation, and results in a smoother transition between the various ALQ entries.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	VFPTABL	VFPTABL is a defined positive integer that specifies the interpolation method to be used with the ALQ quantity in the VFP production tables, and should be set to one of the following: 1) Apply linear interpolation to all VFPPROD variables. 2) Apply linear interpolation to all VFPPROD variables, except for the ALQ variable, for which cubic spline interpolation should be used. If the keyword is absent from the input deck then linear interpolation will be used for all variables.			I
		dimensionless	dimensionless	dimensionless	

Notes:

1) The keyword is followed by a vector of numbers separated by a space and the keyword is terminated by a “/”.

Table 12.73: VFPTABL Keyword Description

Example

The example sets cubic spline interpolation for the ALQ quantity in the VFPPROD tables, with linear interpolation used for all the variables.

```
--
--      ALQ INTERPOLATION OPTION
--
--      OPTION
VFPTABL
      2
/
```

12.3.241 WAITBAL – WAIT ON NETWORK BALANCE BEFORE ALLOWING FURTHER ACTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword sets the network balance option for all networks when networks are active in the model. Basically, the keyword either activates the PROORDER and GDRILPOT stipulated actions before or after the network has been balanced

The network option is normally used to ensure that the tubing head pressure (“THP”) of a group of wells flowing into a common network node is consistent with a group’s flow rates, that is each well’s THP is flowing at the same THP and at the same time satisfying well and group targets and constraints. This is accomplished by calculating the well THP limits dynamically by balancing the flow rates and pressure losses in the network.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.242 WALKALIN – DEFINE WATER INJECTION ALKALINE CONCENTRATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WAKALIN keyword defines the water injection alkaline concentration for water injection wells for when the surfactant and/or polymer models have been activated by the SURFACT, SURFACTW, or the POLYMER keywords in the RUNSPEC section, combined with the ALKALINE keyword which is also in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.243 WALQCALC – DEFINE WELL VFP SURFACE ALQ PHASE DENSITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WALQCALC keyword defines the well VFP surface ALQ phase density use in the VFP table lookup and interpolation to be gas surface density, oil surface density, or neither. Note that the user should ensure that generated VFP tables have been generated consistent with the setting on this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.244 WAPI – DEFINE OIL WELL INJECTION API GRAVITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines an oil injection well's API gravity for when API tracking has been made active via the API keyword in the RUNSPEC section. The American Petroleum Institute (API) classifies oils based on an API gravity (γ_{API}), or degrees API ($^{\circ}API$), the relationship between relative density (γ_o) of oil and API gravity (γ_{API}) is given by:

$$\gamma_{API} = \frac{141.5}{\gamma_o} - 131.5 \quad (12.33)$$

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.245 WARN – ACTIVATE WARNING MESSAGES

Turns on warning messages to be printed to the print file (*.PRT); note that this keyword is activated by default and can subsequently be switched off by the NOWARN activation keyword. The warning messages may be turned on and off using keywords WARN and NOWARN. OPM Flow always prints error messages.

See [WARN – Activate Warning Messages](#) in the GLOBAL section for a full description.

12.3.246 WBHGLR – DEFINE WELL BOTTOM-HOLE GLR CONSTRAINT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WBHGLR, defines a well's bottom-hole Gas Liquid Ratio ("GLR") constraint, where the GLR is the ratio of the "free" gas rate and liquid rate at bottom-hole conditions. The reference depth for bottom-hole conditions is given by the BHPREF variable on the WELSPECS keyword in the SCHEDULE section.

Normally this type of well control is applied to pumping wells to avoid the well "pumping off", that is when the liquid column above the pump is low, resulting in an increase in gas intake and an associated loss in pump efficiency.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.247 WBOREVOL – DEFINE EFFECTIVE WELLBORE STORAGE VOLUME

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WBOREVOL defines a well's effective wellbore storage volume. The primary purpose of the keyword is to enable matching of the wellbore storage effects in well tests and the corresponding pressure response observed in the test. Normally, as part of well test interpretation, the pressure, permeability, effective wellbore storage, etc., are derived from the analytical interpretation of the test. This keyword therefore allows the engineer to enter the analytical derived effective wellbore storage.

Wellbore storage, in terms of well testing, is an important variable when the well is shut-in at the surface, as the well continues to flow down-hole until the fluids obtain equilibrium. Most well tests are now conducted using specialized tools that shut-in the well down-hole, thus eliminating, or mostly eliminating, wellbore storage effects.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.248 WCALCVAL – DEFINE GAS WELL CALORIFIC VALUE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines a gas well's calorific value for when the Gas Calorific Value option has been activated by specifying a target calorific value for a group via the GCONCAL keyword in the SCHEDULE section. If this option is invoked then the gas calorific value must be set either by this keyword for a well by well allocation of the calorific value, or by using the Tracer Tracking option (activated by the TRACER keyword in the RUNSPEC section) combined with CALTRAC keyword in the SCHEDULE section that defines the tracer for the calorific value.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.249 WCONHIST – DEFINE WELL HISTORICAL PRODUCTION RATES AND PRESSURES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WCONHIST keyword defines production rates and pressures for wells that have been declared history matching wells by the use of this keyword. History matching wells are handled differently than ordinary wells that use the WCONPROD keyword for controlling their production targets and constraints. However, the wells still need to be defined like ordinary production wells using the WELSPECS keyword in the SCHEDULE section.

Note that although wells can be allocated to a group when they are specified by the WELSPECS keyword, history matching wells cannot operate under group control. Field and group reporting is still consistent for all wells allocated to a group, but history matching wells cannot be under group control.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the wells observed production rates and pressures are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	STATUS	A defined character string that declares the status of the well. STATUS should be set to one of the following character strings: 1) OPEN: the well is open to flow and will attempt to produce the required production volumes. 2) STOP: the well is “stopped” at the surface and will not produce any fluids to surface; however, if there are any open connections then flow may occur within the wellbore and between the open connections depending on a connection’s potential with respect to all the other connections. Inter-connection flow (cross flow) can be prevented by setting the XFLOW variable on the WELSPECS keyword to NO. In this case the well’s behavior will be similar to the SHUT option described below. 3) SHUT: the well is shut at the surface and downhole, this results in no flow at the surface and no cross flow downhole. Note a well’s STATUS should always be set either STOP or SHUT if the well’s production is to be set to zero. Just setting a well’s production rate to zero means that the well is open to flow with a zero rate.			OPEN

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	TARGET	<p>A defined character string that sets the observed target production phase for the well, all the other phases are calculated unconstrained and used for reporting only. The simulator will attempt to meet the TARGET based on the phase rate stated in items (4) to (6) and (10) on this keyword. TARGET should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) ORAT: the target is set to the surface oil production rate as defined by item (4). 2) WRAT: the target is set to the surface water production rate as defined by item (5). 3) GRAT: the target is set to the surface gas production rate as defined by item (6). 4) LRAT: the target is set to the surface liquid (oil plus water) production rate and is calculated by the simulator using (4) and (5). 5) RESV: the target is set to the in situ reservoir volume rate and is calculated by the simulator using items (4), (5) and (6). 6) BHP: the target rate is set to the bottom-hole pressure as defined by item (10). <p>Note the TARGET control mode may be reset using the WHISTCNTL keyword in the SCHEDULE section, from the time the WHISTCNTL is invoked, thus avoiding changing the control mode on all subsequent WCONHIST keywords.</p>			None
4	ORAT	A real positive value that defines the observed surface oil production rate target or constraint.			Defined
		stb/d 0.0	sm ³ /day 0.0	scc/hour 0.0	
5	WRAT	A real positive value that defines the observed surface water production rate target or constraint.			Defined
		stb/d 0.0	sm ³ /day 0.0	scc/hour 0.0	
6	GRAT	A real positive value that defines the observed surface gas production rate target or constraint			Defined
		Mscf/d 0.0	sm ³ /day 0.0	scc/hour 0.0	
7	VFPTAB	<p>A positive integer greater than or equal to zero that defines the vertical lift performance tables to be used for calculating the tubing head pressure for the well.</p> <p>If a non-zero value is entered then the vertical lift performance tables must be entered via the VFPPROD keyword in the SCHEDULE section and allocated to the well via this item.</p> <p>The default value of zero implies no vertical lift performance table initially. If this value is then reset to be greater than zero then the table will be used to calculate the well's tubing head pressure. Subsequently, the default is to use the previously declared table number.</p>			None

No.	Name	Description			Default
		Field	Metric	Laboratory	
8	ALQ-WELL	A real positive value that defines the artificial lift quantity to be used in conjunction with the VFPPROD assigned to the well via VPFTAB variable. VFPTAB vertical lift performance table and the artificial lift quantity ALQ-WELL are used with the well fluid rates to calculate the well's tubing head pressures values from the bottom-hole pressure. Note that the units for ALQ-WELL is dependent on the associated variable on the VFPPROD keyword.			None
9	THP	A real positive value that defines the observed tubing head pressure. This parameter is only used for comparing the actual tubing head pressure given here with those calculated by the simulator, that is history marching wells can only controlled by either the surface injection rate or their bottom-hole pressure.			Defined
		psia 0.0	barsa 0.0	atma 0.0	
10	BHP	A real positive value that defines the observed bottom-hole pressure.			Defined
		psia 0.0	barsa 0.0	atma 0.0	
11	WGRA	A real positive value that defines the observed wet gas rate in the commercial compositional simulator. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
12	NGL	A real positive value that defines the observed Natural Gas Liquid ("NGL") rate in the commercial compositional simulator. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.74: WCONHIST Keyword Description

See also the WHISTCNTL that can be used to reset the TARGET phase, the GCONPROD and GCONINJ keywords to define a group's production and injection targets and constraints, and the WCONPROD keyword to define a production well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Note

One can use TARGET set to RESV in the initial history matching runs to get a "reasonable" pressure match, this ensures that the total reservoir withdrawals are correct, although the individual phase withdrawals will not match. Once a reasonable pressure match is achieved for the reservoir then one can reset TARGET to the sales phase, OIL or GAS, and continue with the matching of all the phases.

In oil reservoirs some engineers prefer to use LIQ rather than OIL as the TARGET phase, although one should consider that as the water phase has no commercial value, the measurement accuracy is significantly less than the oil sales phase.

History matching wells are converted to ordinary wells by restating a well's control mode using either the WCONPROD or WELTARG keywords in the SCHEDULE section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Examples

The following example below shows the observed gas rates for the OP01 oil producer for the first quarter of 2000.

```
-----
-- 01 JAN 2000 START OF SCHEDULE SECTION
-----
--
--          WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    VFP    VFP    THP    BHP
-- NAME  SHUT   MODE   RATE   RATE   RATE   TABLE  ALFQ   PRES  PRES
WCONHIST
OP01     OPEN   ORAT   15.5E3  100.0  1550   10      1*    900.0  1*    /
/
DATES
01 FEB 2000 /
/
--
--          WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    VFP    VFP    THP    BHP
-- NAME  SHUT   MODE   RATE   RATE   RATE   TABLE  ALFQ   PRES  PRES
WCONHIST
OP01     OPEN   ORAT   15.2E3  150.0  1520   1*      1*    875.0  3250.0 /
/
DATES
01 MAR 2000 /
/
--
--          WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    VFP    VFP    THP    BHP
-- NAME  SHUT   MODE   RATE   RATE   RATE   TABLE  ALFQ   PRES  PRES
WCONHIST
OP01     OPEN   ORAT   15.0E3  200.0  1500   1*      1*    850.0  1*    /
/
```

From January 1, 2000 well OP01 is open and is on oil rate control, and produces 15,500 stb/d oil, with the observed rates of 100 stb/d of water and 15.5 MMscf/d of gas. The well uses VFPPROD vertical lift table number 10 so that OPM Flow can calculate the tubing head pressures based on the fluids produced and the calculated pressures in the simulator.

The next example illustrates how to convert OP01 from a history match well to a normal production well at the start for the forecast run at August 1, 2017 using the WELTARG keyword.

```
DATES
01 AUG 2017 /
/
--
--          WELL PRODUCTION AND INJECTION TARGETS
--
-- WELL  WELL  TARGET
-- NAME  TARG  VALUE
WELTARG
OP01    THP   1*    /
/
```

Here by defaulting the bottom-hole pressure via 1* OPM Flow automatically applies the last bottom-hole pressure from the previous time step as the “constraining phase” together with the last historical rates as constraints. This ensures a smooth transition between history and prediction without having to resort to unreasonable changes to the model. This option is currently not implemented in OPM Flow but is expected to be incorporated in a future release.

12.3.250 WCONINJ – WELL INJECTION TARGETS AND CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WCONINJ is a legacy keyword that is no longer used in the commercial simulator and is not supported by OPM Flow. Instead well injection targets and constraints should be defined using the WCONINJE keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.251 WCONINJE – WELL INJECTION TARGETS AND CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WCONINJE keyword defines injection targets and constraints for wells that have previously been defined by the WELSPECS keyword in the SCHEDULE section. Note that wells can be allocated to a group when they are specified by the WELSPECS keyword. Wells defined to be under group control will have their injection rates controlled by the group to which they belong, in addition to any well constraints defined for the wells using this keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well injection targets and constraints data are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	TYPE	A defined character string that defines the type of injection well. TYPE should be set to one of the following character strings: 1) GAS: for a gas injection well. 2) OIL: for an oil injection well. 3) WAT: for a water injection well.			None
3	STATUS	A defined character string that declares the status of the well. STATUS should be set to one of the following character strings: 1) OPEN: the well is open for injection and will attempt to inject the required injection volumes. 2) STOP: the well is “stopped” at the surface and will not inject any fluids; however, if there any open connections then flow may occur within the wellbore and between the open connections depending on a connection’s potential with respect to all the other connections. Inter-connection flow (cross flow) can be prevented by setting the XFLOW variable on the WELSPECS keyword to NO. In this case the well’s behavior will be similar to the SHUT option described below. 3) SHUT: the well is shut at the surface and downhole, this results in no injection and no cross flow downhole. 4) AUTO: the well is initially SHUT, but may be opened automatically if an economic limit is violated. This option is currently not supported by OPM Flow. Note a well’s STATUS should always be set either STOP or SHUT if the well’s production is to be set to zero. Just setting a well’s injection rate to zero means that the well is open for injection with a zero rate, this will cause numerical issues especially for wells under THP control.			OPEN

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	TARGET	<p>A defined character string that sets the target injection control mode for the well. TARGET should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) RATE: the injection phase will be control by the surface fluid rate for the given well type as defined by the TYPE variable. For example, if TYPE has been set to WAT then this would mean the surface water injection rate as defined by item (5). 2) RESV: the injection phase will be control by the in situ reservoir volume fluid rate for the given well type as defined by the TYPE variable. For example, if TYPE has been set to GAS then this would mean the gas reservoir volume injection rate as defined by item (6). 3) BHP: the target rate is set to the bottom-hole pressure as defined by item (7). 4) THP: the target rate is set to the tubing head pressure as defined by item (8). If this option is selected then the vertical lift performance tables must be entered via the VFPINJ keyword in the SCHEDULE section and allocated to the well via item (9). 5) GRUP: the well is under group control and injects its share of the group's target as set using the GCONINJ keyword in the SCHEDULE. Section. 			None
5	RATE	A real positive value that defines the maximum surface injection rate target or constraint.			None
		Liquid stb/d Gas Mscf/d	Liquid sm ³ /day Gas sm ³ /day	Liquid scc/hour Gas scc/hour	
6	RESV	A real positive value that defines the maximum reservoir volume injection rate target or constraint.			None
		rtb/d	rm ³ /day	rcc/hour	
7	BHP	<p>A real positive value that defines the maximum bottom-hole pressure target or constraint.</p> <p>Note the default value of basically means unlimited injection or no constraint and should therefore be avoided as the BHP will result in unrealistic well potentials as well as optimistic injection forecasts for the well.</p>			Defined
		psia 10,000	barsa 6,895	atma 6,803	
8	THP	A real positive value that defines the maximum tubing head pressure target or constraint.			None
		psia	barsa	atma	

No.	Name	Description			Default
		Field	Metric	Laboratory	
9	VFPTAB	A positive integer greater than or equal to zero that defines the vertical lift performance tables to be used for calculating the tubing head pressure for the well. If a non-zero value is entered then the vertical lift performance tables must be entered via the VFPINJ keyword in the SCHEDULE section and allocated to the well via this item. The default value of zero implies no vertical lift performance tables and in this case TARGET cannot be set to THP and in addition item (10) should be defaulted or set to zero.			0
10	RSRVINJ	Dissolved gas ratio in injected oil or vaporized oil ratio in injected gas. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
11	RSSTEAM	Thermal/Temperature gas-steam ratio for steam-gas injectors. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
12	OILFRAC	Surface oil fraction in a multi-phase injector. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
13	WATFRAC	Surface water fraction in a multi-phase injector. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
14	GASFRAC	Surface gas fraction in a multi-phase injector. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
15	OILSTEAM	Surface oil volume to steam volume ratio in a steam-oil injector. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.75: WCONINJE Keyword Description

See also the GCONPROD the GCONINJ keywords to define a group's production and injection targets and constraints, and the WCONPROD keyword to define a production well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the injection targets and constraints for one gas injection well and one water injection well as follows:

```
--
--      WELL INJECTION CONTROLS
--
-- WELL  FLUID  OPEN/  CNTL  SURF  RESV  BHP   THP   VFP
-- NAME  TYPE   SHUT   MODE  RATE  RATE  PRSES PRES  TABLE
WCONINJE
GI01     GAS    OPEN   GRUP  50E3  1*    1*    1*    1*  /
WI01     WAT    OPEN   RATE  25E3  1*    5000.  1*    1*  /
/
```

Well GI01 is a gas injection well directly under group control constrained by a maximum surface gas injection rate of 50 MMscf/d and well WI01 is an open water injection well with a surface water injection rate target of 25,000 stb/d, subject to a maximum bottom-hole pressure constraint 5,000 psia.

12.3.252 WCONINJH – WELL HISTORICAL OBSERVED INJECTION RATES AND PRESSURES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WCONINJH keyword defines injection rates and pressures for wells that have been declared history matching wells by the use of this keyword. History matching wells are handled differently than ordinary wells that use the WCONINJE keyword for controlling their injection targets and constraints. However, the wells still need to be defined like ordinary injection wells using the WELSPECS keyword in the SCHEDULE section.

Note that although wells can be allocated to a group when they are specified by the WELSPECS keyword, history matching wells cannot operate under group control. Field and group reporting is still consistent for all wells allocated to a group, but history matching wells cannot be under group control.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the wells observed injection rates and pressures are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	TYPE	A defined character string that defines the type of injection well. TYPE should be set to one of the following character strings: 1) GAS: for a gas injection well. 2) OIL: for a water injection well. 3) WAT: for a water injection well.			None
3	STATUS	A defined character string that declares the status of the well. STATUS should be set to one of the following character strings: 1) OPEN: the well is open for injection and will attempt to inject the observed injection volumes. 2) STOP: the well is “stopped” at the surface and will not inject fluids; however, if there are any open connections then flow may occur within the wellbore and between the open connections depending on a connection’s potential with respect to all the other connections. Inter-connection flow (cross flow) can be prevented by setting the XFLOW variable on the WELSPECS keyword to NO. In this case the well’s behavior will be similar to the SHUT option described below. 3) SHUT: the well is shut at the surface and downhole, this results in no injection and no cross flow downhole. Note a well’s STATUS should always be set either STOP or SHUT if the well’s injection is to be set to zero. Just setting a well’s inject rate to zero means that the well is open to flow with a zero injection rate, this may cause numerical issues.			OPEN
4	RATE	A real positive value that defines the observed surface injection rate.			0.0

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
		Liquid stb/d Gas Mscf/d	Liquid sm ³ /day Gas sm ³ /day	Liquid scc/hour Gas scc/hour	
5	BHP	A real positive value that defines the observed bottom-hole pressure.			0.0
		psia	barsa	atma	
6	THP	A real positive value that defines the observed tubing head pressure. This parameter is only used for comparing the actual tubing head pressure given here with those calculated by the simulator, that is history marching wells can only controlled by either the surface injection rate or their bottom-hole pressure.			None
		psia	barsa	atma	
7	VFPTAB	A positive integer greater than or equal to zero that defines the vertical lift performance tables to be used for calculating the tubing head pressure for the well. If a non-zero value is entered then the vertical lift performance tables must be entered via the VFPINJ keyword in the SCHEDULE section and allocated to the well via this item. The default value of zero implies no vertical lift performance table initially. If this value is then reset to be greater than zero then the table will be used to calculate the well's tubing head pressure. Subsequently, the default is to use the previously declared table number.			0
8	RSRVINJ	Dissolved gas fraction in injected oil or vaporized oil fraction in injected gas. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
9	OILFRAC	Surface oil fraction in a multi-phase injector. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
10	WATFRAC	Surface water fraction in a multi-phase injector. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
11	GASFRAC	Surface gas fraction in a multi-phase injector. The parameter is ignored by OPM Flow and should be defaulted or set to the default value of zero.			0.0
12	TARGET	A defined character string that sets the target injection control mode for the well. TARGET should be set to one of the following character strings: 1) RATE: the injection well will be controlled by the surface injection rate for the given well type as defined by the TYPE variable. For example, if TYPE has been set to WAT then this would mean the surface water injection rate as defined by item (4). 2) BHP: the injection well will be controlled by the bottom-hole pressure as defined by item (5).			RATE

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.76:WCONINJH Keyword Description

This keyword should be repeated at various time steps to fully describe the historical injection performance of the wells. For example, as most production and injection data is reconciled on a monthly basis, then monthly time steps covering the injection history of the wells should be used with WCONINJH keyword entered on a monthly basis.

History matching well are converted to ordinary wells by restating a well's control mode using either the WCONINJE or WELTARG keywords in the SCHEDULE section.

Example

The following example below shows the observed gas rates for the GI01 gas injector for the first quarter of 2000.

```

-----
-- 01 JAN 2000 START OF SCHEDULE SECTION
-----
--
--          WELL HISTORICAL INJECTION CONTROLS
--
-- WELL  FLUID  OPEN/  SURF  BHP  THP  VFP  NOT  CNTL
-- NAME  TYPE   SHUT   RATE  PRES PRES TABLE USED  MODE
WCONINJH
GI01     GAS    OPEN   15.5E3  1*   5462  12   4*   1*  /
/
DATES
01 FEB 2000 /
/
--
--          WELL HISTORICAL INJECTION CONTROLS
--
-- WELL  FLUID  OPEN/  SURF  BHP  THP  VFP  NOT  CNTL
-- NAME  TYPE   SHUT   RATE  PRES PRES TABLE USED  MODE
WCONINJH
GI01     GAS    OPEN   15.9E3  1*   5468  1*   4*   1*  /
/
DATES
01 MAR 2000 /
/
--
--          WELL HISTORICAL INJECTION CONTROLS
--
-- WELL  FLUID  OPEN/  SURF  BHP  THP  VFP  NOT  CNTL
-- NAME  TYPE   SHUT   RATE  PRES PRES TABLE USED  MODE
WCONINJH
GI01     GAS    OPEN   17.2E3  1*   5489  1*   4*   1*  /
/

```

Well GI01 is declared as a gas injection well under gas rate control as TARGET variable is defaulted to rate control by using 1* (the last entry on the record). In addition, the well uses vertical lift table VFPINJ number

12 (as shown at January 1, 2000) to calculate the tubing head pressures for the well. Note that it is not necessary to declare the VFPINJ table number if it remains the same for subsequent time steps and thus the default I* is used to indicate the last entry should be used.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.253 WCONINJP – DEFINE WELL INJECTION TARGETS AND CONSTRAINTS FOR PATTERN FLOOD WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WCONINJP, defines well injection targets and constraints for pattern flood wells. The keyword is similar to the WCONINJE keyword in the SCHEDULE section except that the injection control is applied to a group of wells defined by the first record of this keyword, combined with a second record that defines the wells in the pattern and their contribution to the pattern.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.254 WCONPROD – DEFINE WELL PRODUCTION TARGETS AND CONSTRAINTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WCONPROD keyword defines production targets and constraints for wells that have previously been defined by the WELSPECS keyword in the SCHEDULE section. Note that wells can be allocated to a group when they are specified by the WELSPECS keyword. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells using this keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	<p>A character string of up to eight characters in length that defines the well name for which the well production targets and constraints data are being defined.</p> <p>Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.</p>			None
2	STATUS	<p>A defined character string that declares the status of the well. STATUS should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) OPEN: the well is open to flow and will attempt to produce the required production volumes. 2) STOP: the well is “stopped” at the surface and will not produce any fluids to surface; however, if there any open connections then flow may occur within the wellbore and between the open connections depending on a connection’s potential with respect to all the other connections. Inter-connection flow (cross flow) can be prevented by setting the XFLOW variable on the WELSPECS keyword to NO. In this case the well’s behavior will be similar to the SHUT option described below. 3) SHUT: the well is shut at the surface and downhole, this results in no flow at the surface and no cross flow downhole. 4) AUTO: the well is initially SHUT, but may be opened automatically if an economic limit is violated. This option is currently not supported by OPM Flow. <p>Note a well’s STATUS should always be set either STOP or SHUT if the well’s production is to be set to zero. Just setting a well’s production rate to zero means that the well is open to flow with a zero rate, this will cause numerical issues especially for wells under THP control.</p>			OPEN

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	TARGET	<p>A defined character string that sets the target production phase for the well, all the other phases will therefore act as constraints. The simulator will attempt to meet the TARGET based on the phase rate stated in items (3) to (10) on this keyword. TARGET should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) ORAT: the target is set to the surface oil production rate as defined by item (4). 2) WRAT: the target is set to the surface water production rate as defined by item (5). 3) GRAT: the target is set to the surface gas production rate as defined by item (6). 4) LRAT: the target is set to the surface liquid (oil plus water) production rate as defined by item (7). 5) RESV: the target is set to the in situ reservoir volume rate as defined by item (8). 6) BHP: the target rate is set to the bottom-hole pressure as defined by item (9). 7) THP: the target rate is set to the tubing head pressure as defined by item (10). If this option is selected then the vertical lift performance tables must be entered via the VFPPROD keyword in the SCHEDULE section and allocated to the well via item (11). 8) GRUP: the well is under group control and produces its share of the group's target as set using the GCONPROD keyword in the SCHEDULE section. 			None
4	ORAT	A real positive value that defines the maximum surface oil production rate target or constraint.			None
		stb/d	sm ³ /day	scc/hour	
5	WRAT	A real positive value that defines the maximum surface water production rate target or constraint.			None
		stb/d	sm ³ /day	scc/hour	
6	GRAT	A real positive value that defines the maximum surface gas production rate target or constraint			None
		Mscf/d	sm ³ /day	scc/hour	
7	LRAT	A real positive value that defines the maximum surface liquid (oil plus water) production rate target or constraint.			None
		stb/d	sm ³ /day	scc/hour	
8	RESV	A real positive value that defines the maximum reservoir volume production rate target or constraint.			None
		rtb/d	rm ³ /day	rcc/hour	
9	BHP	<p>A real positive value that defines the minimum bottom-hole pressure target or constraint.</p> <p>Note the default value of one atmosphere should be avoided as the BHP will result in unrealistic well potentials as well as optimistic production forecasts for the well.</p>			Defined

No.	Name	Description			Default
		Field	Metric	Laboratory	
		psia 14.70	barsa 1.01325.	atma 1.0	
10	THP	<p>A real positive value that defines the minimum tubing head pressure target or constraint.</p> <p>Note the default value of zero should be avoided if the well's control TARGET has been set to THP, as this will result in optimistic production forecasts for a well, since a well must flow against a back pressure imposed by the surface facilities.</p>			Defined
		psia 0.0	barsa 0.0	atma 0.0	
11	VFPTAB	<p>A positive integer greater than or equal to zero that defines the vertical lift performance tables to be used for calculating the tubing head pressure for the well.</p> <p>If a non-zero value is entered then the vertical lift performance tables must be entered via the VFPPROD keyword in the SCHEDULE section and allocated to the well via this item.</p> <p>The default value of zero implies no vertical lift performance tables and in this case TARGET cannot be set to THP and in addition item (10) should be defaulted or set to zero.</p>			0
12	ALQ-WELL	<p>A real positive value that defines the artificial lift quantity to be used in conjunction with the VFPPROD assigned to the well via the VFPTAB variable.</p> <p>VFPTAB vertical lift performance table and the artificial lift quantity ALQ-WELL are used with the well fluid rates to calculate the well's tubing head pressures values from the bottom-hole pressure.</p> <p>Note that the units for ALQ-WELL are dependent on the associated variable on the VFPPROD keyword.</p>			0.0
13	WGASRATE	<p>Wet gas production rate used in the commercial compositional simulator.</p> <p>Not used and should be defaulted with I*.</p>			I*
14	MOLARATE	<p>Total molar rate used in the commercial compositional simulator.</p> <p>Not used and should be defaulted with I*.</p>			I*
15	STEAMRAT	<p>Thermal/Temperature steam rate (Cold Water Equivalent) for steam producers used in the commercial compositional simulator.</p> <p>Not used and should be defaulted with I*.</p>			I*
16	DELTAP	<p>Thermal/Temperature delta pressure offset for steam producers used in the commercial compositional simulator.</p> <p>Not used and should be defaulted with I*.</p>			I*
17	DELTAT	<p>Thermal/Temperature delta temperature offset for steam producer used in the commercial compositional simulator.</p> <p>Not used and should be defaulted with I*.</p>			I*
18	CALRATE	<p>Calorific production rate used in the commercial compositional simulator.</p> <p>Not used and should be defaulted with I*.</p>			I*

No.	Name	Description			Default
		Field	Metric	Laboratory	
19	COMBPROC	Linearly combined procedure for when exceeding COMBRATE, used in the commercial compositional simulator. Not used and should be defaulted with I*.			I*
20	NGL	A real positive value that defines the observed Natural Gas Liquid (“NGL”) rate in the commercial compositional simulator. Not used and should be defaulted with I*.			I*
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.77: WCONPROD Keyword Description

See also the GCONPROD and GCONINJ keywords to define a group's production and injection targets and constraints, and the WCONINJE keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the production targets and constraints for five wells as follows:

```
--
--          WELL PRODUCTION WELL CONTROLS
--
-- WELL  OPEN/  CNTL  OIL   WAT   GAS   LIQ   RES   BHP   THP   VFP   VFP
-- NAME  SHUT   MODE  RATE  RATE  RATE  RATE  RATE  PRES  PRES  TABLE  ALFQ
WCONPROD
OP01     OPEN   GRUP   5E3   1*    1*    1*    1*    500.0
OP02     OPEN   GRUP  10E3   1*    1*    1*    1*    200.0  500.0  2      0.0  /
OP03     OPEN   GRUP  15E3   1*    1*    1*    1*    200.0  500.0  3     10.0  /
OP04     OPEN   ORAT  20E3   1*    1*    1*    1*    500.0
OP05     SHUT   GRUP  20E3   1*    1*    1*    1*    500.0
/
```

Well OP01 is open and is on group control, subject to a maximum oil rate constraint of 5,000 stb/d and a minimum bottom-hole pressure of 500 psia. OP02 is also open and on group control but its maximum oil rate constraint has been set 10,000 stb/d, and is subject to a minimum bottom-hole pressure limit of 200 psia and a minimum tubing head pressure limit of 500 psia using VFPPROD vertical lift table number two. Well OP03 is very similar to OP02, but with a 15,000 stb/d maximum oil constraint and using VFPPROD vertical lift table number three with an artificial lift parameter of 10. The next three wells are not on group control, for example, well OP04 is open and has an oil rate target of 20,000 stb/d, subject to a minimum bottom-hole pressure of 500 psia. Finally, well OP05 is shut and will not be brought back on production despite being put under group control, as the well has been declared shut.

12.3.255 WCUTBACK – DEFINE WELL CUTBACK LIMITS AND PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WCUTBACK, defines a well's cutback limits and parameters for both production and injection wells. See also the GCUTBACK keyword in the SCHEDULE section that provides similar functionality for groups.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.256 WCUTBACT – DEFINE WELL TRACER CUTBACK LIMITS AND PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WCUTBACT, defines a production well’s cutback limits and parameters based on the named produced tracer from the well. See also the GCUTBACT keyword in the SCHEDULE section that provides similar functionality for groups.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.257 WCYCLE – DEFINE AUTOMATIC WELL OPENING AND CLOSING CYCLING PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WCYCLE keyword defines automatic well opening and closing cycling parameters used to model “huff-and puff” cyclic steam injection in heavy oil reservoirs or Water-Alternating-Gas (“WAG”) processes in enhanced oil recovery modeling. The keyword defines specific time periods for automatically cycling wells on and off. For example in a WAG scheme the water injection wells would have one set of cycling parameters and the gas injection wells another, such that only one type of well is active at a time.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.258 WDFAC – DEFINE GAS FLOW DEPENDENT SKIN FACTOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WDFAC keyword defines a gas well's connection D-factor, which is normally derived from well tests or calculated analytically based on the coefficient of inertial resistance, usually known as β , in Forchheimer's flow equation¹⁹¹,¹⁹² and ¹⁹³.

See also the WDFACCOR keyword in the SCHEDULE section that uses Dake's¹⁹⁴ correlation to calculate the D-factor.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁹¹ Geertsma, J., 1974. Estimating the Coefficient of Inertial Resistance in Fluid Flow Through Porous Media. Soc.Pet.Eng.J., October: 445-450.

¹⁹² Gewers, C.W.W. and Nichol, L.R., 1969. Gas Turbulence Factor in a Microvugular Carbonate. J.Can.Pet.Tech., April.

¹⁹³ Wong, S.W., 1970. Effects of Liquid Saturation on Turbulence Factors for Gas Liquid Systems. J.Can.Pet.Tech., October

¹⁹⁴ Dake, L.P. Fundamentals of Reservoir Engineering, Amsterdam, The Netherlands, Elsevier Science BV (1978) Chapter 8.6, pages 252-257.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.259 WDFACCOR – GAS FLOW DEPENDENT SKIN FACTOR (CORRELATION)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

WDFACCOR keyword defines the parameters to calculate a gas well's connection D-factor based on a correlation for the coefficient of inertial resistance, usually known as β , in Forchheimer's flow equation ¹⁹⁵¹⁹⁶¹⁹⁷ and ¹⁹⁸. This keyword uses Dake's correlation to calculate the D-factor.

This keyword is ignored by OPM Flow and has no effect on the simulation.

¹⁹⁵ Dake, L.P. *Fundamentals of Reservoir Engineering*, Amsterdam, The Netherlands, Elsevier Science BV (1978) Chapter 8.6, pages 252-257.

¹⁹⁶ Geertsma, J., 1974. Estimating the Coefficient of Inertial Resistance in Fluid Flow Through Porous Media. *Soc. Pet. Eng. J.*, October: 445-450.

¹⁹⁷ Gewers, C.W.W. and Nichol, L.R., 1969. Gas Turbulence Factor in a Microvugular Carbonate. *J. Can. Pet. Tech.*, April.

¹⁹⁸ Wong, S.W., 1970. Effects of Liquid Saturation on Turbulence Factors for Gas Liquid Systems. *J. Can. Pet. Tech.*, October

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.260 WDRILPRI – Add Wells to the Drilling Priority Drilling Queue

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WDRILPRI, adds wells to the Drilling Priority Drilling Queue and defines the well priority and drilling unit number or batch queue sequence for the well. The batch queue sequence number enables all wells with the same sequence number to drilled at the same time.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.261 WDRILRES – ACTIVATE PREVENTION OF MULTI-COMPLETIONS IN THE SAME CELL FOR QUEUED WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WDRILRES keyword activates the prevention of multi-completions being completed in the same cell for wells in a drilling queue. Setting this option stops any well defined as a queued well via the QDRILL and WDRILLPRI keywords in the SCHEDULE section, or any wells set to automatic opening by setting the STATUS variable to AUTO on the WCONPROD keyword in the RUNSPEC section, from opening if there is an already existing active well connection to a cell.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.262 WDRILTIM – DEFINE DRILLING PARAMETERS FOR AUTOMATIC DRILLING OF NEW WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WDRILTIM defines the automatic drilling parameters used to describe the numbers of days taken to drill a well, the drilling status of the well, and status of other wells when drilling an automatically drilled well.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.263 WECON – WELL ECONOMIC CRITERIA FOR PRODUCTION WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	-----------------

Description

The WECON keyword defines the economic criteria for production wells that have previously been defined by the WELSPECS and WCONPROD keywords in the SCHEDULE section.

Note that wells can be allocated to a group when they are specified by the WELSPECS keyword and groups can also have economic controls. Wells under group control are therefore subject to the economic criteria set via the GCONPROD and GECON keywords in the SCHEDULE section and the controls specified by the WECON keyword. Note that GECON is not supported by OPM Flow in the current release.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well economic criteria data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	ORAT	A real positive value that defines the minimum economic surface oil production rate, below which an economic action will take place, as outlined below: 1) If there are any remaining connections in the well with the STATUS variable set to AUTO on the COMPDAT keyword in the SCHEDULE section, then one of these connections (or completion) will be opened. 2) If there are no remaining connections in the well with the STATUS variable set to AUTO on the COMPDAT keyword, then the well will be shut or stopped as requested by item (9) of the WELSPECS keyword. Only option (2) is supported by OPM Flow as STATUS equals AUTO on the COMPDAT keyword is currently not supported by the simulator. Hence, the well be either shut or stopped. A value less than or equal to zero switches off this criterion.			0.0
		stb/d	sm ³ /day	scc/hour	

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	GAS	<p>A real positive value that defines the minimum economic surface gas production rate, below which an economic action will take place, as outlined below:</p> <ol style="list-style-type: none"> 1) If there are any remaining connections in the well with the STATUS variable set to AUTO on the COMPDAT keyword in the SCHEDULE section, then one of these connections (or completion) will be opened. 2) If there are no remaining connections in the well with the STATUS variable set to AUTO on the COMPDAT keyword, then the well will be shut or stopped as requested by item (9) of the WELSPECS keyword. <p>Only option (2) is supported by OPM Flow as STATUS equals AUTO on the COMPDAT keyword is currently not supported by the simulator. Hence, the well be either shut or stopped.</p> <p>A value less than or equal to zero switches off this criterion.</p>			0.0
		Mscf/d	sm ³ /day	scc/hour	
4	WCUT	<p>A real positive value that defines the maximum economic surface water cut, above which an economic action will take place.</p> <p>Water cut is defined as: $f_w = \frac{q_w}{q_w + q_o}$, and the various actions that are available if the water cut limit is exceeded are described in item (7).</p> <p>A value less than or equal to zero switches off this criterion.</p>			0.0
		dimensionless	dimensionless	dimensionless	
5	GOR	<p>A real positive value that defines the maximum economic surface gas-oil ratio, above which an economic action will take place, as defined by item (7).</p> <p>A value less than or equal to zero switches off this criterion.</p>			0.0
		Mscf/stb	sm ³ /sm ³	scc/scc	
6	WGR	<p>A real positive value that defines the maximum economic surface water-gas ratio, above which an economic action will take place, as defined by item (7).</p> <p>A value less than or equal to zero switches off this criterion.</p> <p>Note that this feature is currently not supported in OPM Flow and should be defaulted.</p>			0.0
		stb/Mscf	sm ³ /sm ³	scc/scc	

No.	Name	Description			Default
		Field	Metric	Laboratory	
7	ACTION	<p>A defined character string that defines the action to be taken if the economic WCUT, GOR, or WGR limits are violated. ACTION should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) NONE: no action is taken. 2) CON: close the worst offending connection. If connections have been grouped as completions then the worst offending completion will be closed. 3) +CON: close the worst offending connection and all below it. If connections have been grouped as completions then the worst offending completion and all below it will be closed. 4) WELL: shut or stop the well as per the AUTO variable on the WELSPECS keyword. <p>The corrective action takes places at the end of the time step in which the constraint is violated.</p> <p>Only ACTION equal to CON and NONE are currently supported by OPM Flow.</p>			NONE
8	END	<p>A defined character string that defines if the simulation should terminate if the well is shut or stopped. END should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) NO: no action is taken and the run continues. 2) YES: terminate the run at the next report time step. <p>Only the default value of NO is supported in OPM Flow.</p>			NO
9	WELOPEN	<p>A character string of up to eight characters in length that defines the well name for the well which will be opened when WELNAME has been <u>automatically closed/shut by the simulator</u>. Wells closed manually do not invoke this option.</p> <p>The well name (WELOPEN) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.</p> <p>Note that this feature is currently not supported in OPM Flow and should be defaulted.</p>			None

No.	Name	Description			Default
		Field	Metric	Laboratory	
10	ELTOPT	<p>A defined character string that defines the type of quantity used to test the economic limit, and should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) POTN: The Economic Limit Test ("ELT") is based on a well's potential rate. A well's potential rate is calculated using only the flowing bottom-hole pressure and tubing head pressure constraints, all other constraints are ignored, including group constraints. However, if the WELDRAW keyword in the SCHEDULE section has been used to limit a well's pressure draw down, then this will also be considered in the potential calculation, as it influences the bottom-hole pressure constraint. 2) RATE: The economic limit is based a well's surface production rate as oppose to the potential rate, this is the default behavior. <p>Wells under group control via the GCONPROD keyword in the SCHEDULE section will be subject to the ELT, except for when the group's production target rate is set to zero.</p> <p>Wells under group control via the GCONPRI keyword in the SCHEDULE section will be subject to the ELT, except for when the group has curtailed a well's production.</p> <p>Both options are supported in OPM Flow.</p>			RATE
11	WCUT2	<p>A real positive value that defines the <u>secondary</u> maximum economic surface water cut, above which an economic action will take place.</p> <p>A value less than or equal to zero switches off this criterion.</p> <p>Note that this feature is currently not supported in OPM Flow and should be defaulted.</p>			0.0
12	ACTION2	<p>A defined character string that defines the action to be taken if the <u>secondary</u> economic WCUT2 limits is violated.</p> <p>Note that this feature is currently not supported in OPM Flow and should be defaulted with I*.</p>			I*
13	GLR	<p>A real positive value that defines the maximum economic surface gas-liquid ratio, above which an economic action will take place, as defined by item (7).</p> <p>A value less than or equal to zero switches off this criterion.</p> <p>Note that this feature is currently not supported in OPM Flow and should be defaulted.</p>			None
14	LRAT	<p>A real positive value that defines the <u>minimum</u> liquid rate, below which the well (WELNAME) is shut-in.</p> <p>Note that this feature is currently not supported in OPM Flow and should be defaulted.</p>			0.0
15	TEMP	<p>A real positive value that defines the maximum economic temperature in the commercial compositional Thermal/Temperature model for a well.</p> <p>Note that this feature is not supported in OPM Flow and should be defaulted.</p>			None
16	RESV	<p>A real positive value that defines the <u>minimum</u> reservoir volume rate, below which the well (WELNAME) is shut-in.</p> <p>Note that this feature is currently not supported in OPM Flow and should be defaulted.</p>			0.0

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table I 2.78: WECON Keyword Description

See also the WELSPEDS keyword to define a wells shut-in or stop options, GCONPROD for group controls, and GECON for setting a group's economic criteria. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines one oil well and one gas well using the WELSPEDS keyword, together with their economic criteria.

```
--
-- WELL SPECIFICATION DATA
--
-- WELL      GROUP      LOCATION  BHP    PHASE  DRAIN  INFLOW  SHUT  CROSS  PRESS
-- NAME      NAME        I      J    DEPTH  FLUID  AREA   EQUA.  IN    FLOW   TABLE
WELSPEDS
GP01        PLATFORM    14     13   1*      GAS    1*      GPP    SHUT   NO     1* /
OP01        PLATFORM    28     96   1*      OIL    1*      STD    SHUT   NO     1* /
/
--
-- WELL ECONOMIC CRITERIA FOR PRODUCTION WELLS
-- WELL      MIN      MIN      MAX      MAX      MAX      CNTL    END
-- NAME      ORAT     GRAT     WCUT     GOR      WGR      MODE    RUN
WECON
GP01        1*      5.0E3   1*      1*      1*      'WELL'  'NO'
OP01        500     1*      0.95    15E3    1*      'WELL'  'YES'
/
```

Well GP01 has a minimum economic gas rate of 5 MMscf/d and will shut-in if the gas rate falls below this rate, but the simulation will continue even if this occurs. Well OP02 as a minimum economic oil rate of 500 stb/d, a maximum water cut limit of 95%, and a maximum GOR of 15 MMscf/d, if any any of these limits are violated the well will be shut-in and the run terminated at the next reporting time step.

12.3.264 WECONINJ – WELL ECONOMIC CRITERIA FOR INJECTION WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WECONINJ keyword defines economic criteria for injection wells that have previously been defined by the WELSPECS and WCONINJE keywords in the SCHEDULE section.

Note that wells can be allocated to a group when they are specified by the WELSPECS keyword and groups can also have economic controls. Wells under group control are therefore subject to the economic criteria set via the GCONINJ keyword in the SCHEDULE section and the controls specified by this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well economic injection criteria data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	MINVALUE	A real positive value that defines the minimum economic injection value, below which an economic action will take place, as defined by the AUTO parameter on the WELSPECS keyword (SHUT or STOP). Note that TYPE determines if the minimum value is applied to the well's actual injection rate or the well's potential. A value less than or equal to zero switches off this criterion.			0.0
		Liquid stb/d Gas Mscf/d	Liquid sm ³ /day Gas sm ³ /day	Liquid scc/hour Gas scc/hour	
3	TYPE	A defined character string that determines if MINVALUE is applied to a well's actual rate or potential, and should be set to one of the following: 1) RATE: In this case the MINVALUE is applied to a well's actual rate. 2) POTN: Here, MINVALUE is applied to the well's potential with only the BHP and THP constraints applied. The default value is RATE.			RATE
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.79: WECONINJ Keyword Description

See also the WELSPECS keyword to define a wells shut-in or stop options and GCONINJ for group controls in the SCHEDULE section.

Example

The following example defines the economic injection parameters for all gas and water injection wells.

```
--
--      WELL ECONOMIC LIMIT DATA FOR INJECTION WELLS
--
-- WELL  MIN    RATE
-- NAME  VALUE  POTN
WECONINJ
GI*      2.0E3  RATE
WI*      5.0E3  POTN
/
```

Here all the gas injection wells have a minimum economic gas injection rate of 2 MMscf/d and the water injection wells have a minimum water potential rate of 5,000 stb/d. The AUTO parameter on the WELSPECS keyword will determine if the wells will be shut-in or stopped.

12.3.265 WECONT – WELL ECONOMIC TRACER CRITERIA FOR PRODUCTION WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WECONT keyword defines the tracer economic criteria for production wells that have previously been defined by the WELSPECS and WCONPROD keywords in the SCHEDULE section, for tracers defined by the TRACER keyword in the PROPS section.

Note that wells can be allocated to a group when they are specified by the WELSPECS keyword and groups can also have economic controls. Wells under group control are therefore subject to the economic criteria set via the GECONT keyword in the SCHEDULE section and the controls specified by this keyword. Note that GECONT is not supported by OPM Flow in the current release.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I-1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well target and constraints are being defined.			None
I-2	ACTION	A defined character string that defines the action to be taken if the economic WCUT, GOR, or WGR limits are violated. ACTION should be set to one of the following character strings: <ol style="list-style-type: none"> 1) NONE: no action is taken. 2) CON: close the worst offending connection in the worst offending. If connections have been wellbore completions then the worst offending completion will be closed. 3) +CON: close the worst offending connection and all below it in the worst offending well. If connections have been wellbore completions then the worst offending completion and all below it in the worst offending well will be closed. 4) WELL: shut or stop the well as per the AUTO variable on the WELSPECS keyword. 5) PLUG: plug back the worst offending well based on the plug back length and options defined on the WPLUG keyword in the SCHEDULE. The corrective action takes place at the end of the time step in which the constraint is violated.			None
I-3	END	A defined character string that defines if the simulation should terminate if the well is shut or stopped. END should be set to one of the following character strings: <ol style="list-style-type: none"> 1) NO: no action is taken and the run continues. 2) YES: terminate the run at the next report time step. 			NO
I-4	WELL	A character string of up to eight characters in length that defines the well name of a fully defined well that will be "opened" when the well WELNAME is shut-in or stopped.			None
I-5	/	Record one terminated by a "/"			Not Applicable

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
2-1	NAME	A three letter character string defining the tracer's name. Note it is best to void names beginning with the letters F, S, and T as these names may create naming issues in post-processing software.			None
2-2	MXTOTAL	A real positive value that defines the maximum total (free plus solution) tracer rate. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-3	MXFREET	A real positive value that defines the maximum total (free plus solution) tracer concentration. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-4	MXFREEQ	A real positive value that defines the maximum free tracer rate. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-5	MXCONC	A real positive value that defines the maximum free tracer concentration. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-6	MXSOLNQ	A real positive value that defines the maximum solution rate. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			None
2-7	MXSOLNC	A real positive value that defines the maximum solution concentration. Tracer units are per those defined by the carrying fluid, oil, gas, water, etc.			
2-8	/	Record two terminated by a "/"			Not Applicable
3-1	/	well terminated by a "/"			Not Applicable
Notes:					
1) WECONT keyword consists of two records, with entries 1-1 to 1-5 representing record one items and 2-1 to 2-8 representing record number two items, in the "No." column in this table. A maximum of three type two records can be entered following a type one record.					
2) Each type one and type two records are terminate by a "/" as indicated in the table, and a well data set is terminated by a further "/", after which additional well data sets can be entered stating with a record of type one followed by type two.					
3) The keyword the keyword should be terminated by an additional "/" after the well data set termination "/" character.					

Table 12.80: WECONT Keyword Description

See also the WELSPEDS keyword to define a wells shut-in or stop options, and WECON for setting a well's economic criteria. Both the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the tracer economic criteria for the field and two wells, OP01 and OP02.

```
--
--      WELL TRACER ECONOMIC CRITERIA FOR PRODUCTION WELLS
--
-- WELL  WORK   END   MAX
-- NAME  OVER   RUN   WELLS
WECONT
OP01    +CON   'YES'  1*                               / START OF WELL
--
--      TRACER  TRACER  TRACER  TRACER  TRACER  TRACER  TRACER
--      NAME    TOTAL  TOTAL  FREE   FREE   SOLN   SOLN
--      PLY     800.0  CONCEN RATE   CONCEN RATE   CONCEN
--      BRI     800.0
--
OP02    +CON   'YES'  1*                               / START OF WELL
--
--      TRACER  TRACER  TRACER  TRACER  TRACER  TRACER  TRACER
--      NAME    TOTAL  TOTAL  FREE   FREE   SOLN   SOLN
--      PLY     800.0  CONCEN RATE   CONCEN RATE   CONCEN
--      BRI     800.0
--
--      / END OF WELL
--      / END OF KEYWORD
```

If the economic limits are violated then the worst offending connection and all below it in the worst offending well will be closed, If connections have been grouped as completions then the worst offending completion and all below it in the worst offending well will be closed

12.3.266 WEFAC – DEFINE WELL EFFICIENCY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

Defines a well's efficiency or up-time as opposed to setting the efficiency at the group level. Note that wells are allocated to a group when they are specified by the WELSPECS keyword and groups can also have efficient factors.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well efficient factor is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	FACTOR	A real positive value greater than zero and less than or equal to one that defines the efficiency factor for the well. If a well's down time is 5% then FACTOR should be set to 0.95 (1.0 – 0.05). Noted that well pressures and rates are calculated at their full flowing conditions but subject to any operating constraints, that is <u>without</u> the well efficiency being applied (FACTOR), in order to represent the actual flowing conditions in the field. The effective rates and volumes are calculated by applying FACTOR when summing individual well rates to their group level and up, including summing to the top most group FIELD. In terms of a well's cumulative production, FACTOR is applied to the well rate times the time interval for the time step. This ensures that correct effective volume is withdrawn (or injected) from (or to) the reservoir. This approach means that wells are effectively arbitrarily offline for a small period during a time step, as oppose to all wells going offline concurrently. And thus the group and field rates and volumes are the effective rates and volumes for the field.			1.0
3	WELNETWK	A defined character string that determines if the WELNAME efficiency factor should be transferred to the equivalent Extended Network Model node, and should be set to either: 1) NO: The well's equivalent Extended Network Model node flow rates are <u>not reduced</u> by the efficiency factor FACTOR. 2) YES: The well's equivalent Extended Network Model node flow rates <u>are reduced</u> by the efficiency factor FACTOR This option is only applicable for the Extended Network Model, as in the Standard Network Model groups flow rates are always used in the calculation of pressure drops.			I*

Notes:

1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.81: WEFAC Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

See also the GEFAC keyword in the SCHEDULE section to set the efficiency at the group level, as oppose to applying the efficiency to individual wells.

Note

One can also apply plant efficiencies through the GEFAC keyword in the SCHEDULE. section. If all the wells in a group are flowing through a facility that has an overall efficiency factor, then it is more appropriate to apply the efficiency factor at the group level. This of course does not preclude applying additional well efficiencies to individual wells. For example, subsea wells (wet trees) may have additional down time compared to platform wells (dry trees) even though both sets of well are flowing through the same platform. Another example would be gas lift wells and wells using electrical submersible pumps, as their artificial lift mechanisms.

Example

```
--
--      WELL EFFICIENCY FACTORS
--
-- WELL  EFF      NETWK
-- NAME  FACT      OPTN
WEFAC
'GP*   ' 0.950
'OP*   ' 0.862
/
```

In the above example the all the gas wells are defined as having a well efficiency factor (up time) of 0.950 and all the oil wells have a lower efficiency factor of 0.862.

12.3.267 WELCNTL – MODIFY WELL CONTROL AND TARGETS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WELCNTL keyword modifies a well's target control and value, both rates and pressures, for previously defined wells without having to define all the variables on the well control keywords: WCONPROD, WCONHIST, WCONDINJE, or WCONDINJH keywords. Variables not changed by the WELCNTL keyword remain the same as those previously entered via the well control keywords or previously entered WELCNTL keywords. Note that the well must still be initially be fully defined using the WCONPROD or WCONINJE keywords. All the aforementioned keywords are described in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well production rates and pressures data are being redefined. Note that the well name (WELNAME) must have been declared previously using the WELSPCE and WCONPROD (or WELCONINJE) keywords in the SCHEDULE section, otherwise an error may occur.			None
2	TARGET	A defined character string that sets the item to be changed for the well the value of the item is set by item (3). 1) ORAT: reset the surface oil production rate value as defined by item (3). 2) WRAT: reset the surface water production rate value as defined by item (3). 3) GRAT: reset the surface gas production rate value as defined by item (3). 4) LRAT: reset the surface liquid (oil plus water) production rate value as defined by (3). 5) RESV: reset the in situ reservoir volume rate value as defined by (3). 6) BHP: reset the bottom-hole pressure value as defined by item (3). 7) THP: reset the tubing head pressure value for the well as defined by item (3). 8) VFP: reset the vertical lift performance table number as defined by (3). 9) LIFT: reset the artificial lift quantity for use with vertical lift performance tables. 10) GUID: reset the guide rate value for wells operating under group control. Note TARGET redefines the target controlled for a well and the control value on item (4). For example, if a well is operating on ORAT control, as defined by the previously entered WCONPROD keyword, entering TARGET equal to LRAT with a value, sets the TARGET to liquid rate with the given value. That is the well will be targeting a liquid rate not the previously requested oil rate. Use the WELTARG keyword in the SCHEDULE section to change the target and constraint values for a well.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	VALUE	A real positive value that defines the value of the variable declared by TARGET			None
	Liquid	stb/d	sm ³ /day	scc/hour	
	Gas	Mscf/d	sm ³ /day	scc/hour	
	Res Vol	rb/d	rm ³ /day	rcc/hour	
	Pressure	psia	barsa	atma	
	VFP	dimensionless	dimensionless	dimensionless	
	LIFT	same as	same as	same as	
		VFPPROD or VFPINJ	VFPPROD or VFPINJ	VFPPROD or VFPINJ	
Notes:					
1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.82:WELCNTL Keyword Description

If a well is currently a history matching well, then WELCNTL can be used to change the well to a standard well.

See also the WELTARG keyword, in the SCHEDULE section that can be used to reset a well's target and constraints of both rates and pressures.

Example

The following example below shows the oil rates for the OP01 oil producer at the start of the schedule section (January 1, 2000).

```

-----
-- 01 JAN 2000 START OF SCHEDULE SECTION
-----
--
--      WELL PRODUCTION WELL CONTROLS
--
-- WELL  OPEN/  CNTL  OIL   WAT   GAS  LIQ   RES   BHP   THP   VFP   VFP
-- NAME  SHUT   MODE  RATE  RATE  RATE RATE  RATE  PRES  PRES  TABLE ALFQ
WCONPROD
OP01    OPEN   ORAT   3000  1*   1*   1*   1*   750.0  500.  9     1* /
/
DATES
01 FEB 2000 /
/
--
--      WELL CONTROL MODE AND OPERATING TARGET
--
-- WELL  WELL  TARGET
-- NAME CNTL  VALUE
WELCNTL
OP01    LRAT   5000
/

```

From January 1, 2000 to February 1, 2000 well OP01 is open and is on oil rate control and has a target oil rate of 3,000 stb/d and uses VFPPROD vertical lift table number 9 with a minimum tubing head pressure constraint of 500 psia. After February 1, 2000 the well is changed to liquid control with a target rate of 5,000 stb/d of liquid and all the other parameters remain unchanged.

12.3.268 WELDEBUG – DEFINE THE WELL DEBUG DATA TO BE PRINTED TO FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword defines the well debug data to be written to the debug file (*.DBG), it is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.269 WELDRAW – DEFINE MAXIMUM DRAW DOWN FOR PRODUCTION WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WELDRAW, defines the maximum draw down for production wells. The keyword may be useful in wells that are subject to fines or sand production to limit the draw down between the sand face and the well in order to limit or avoid sand production.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.270 WELEVNT – DEFINE WELL WPWEM SUMMARY MNEMONIC OUTPUT VALUE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WELEVNT, defines an integer value to be assigned to an individual well's WPWEM summary variable that is written to the SUMMARY file. The value is set to zero after the current time step.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.271 WELMOVE – Move Global Well into an LGR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WELMOVE, moves a previously defined global well into a previously declared Local Grid Refinement ("LGR"), in a RESTART run. The keyword should only be used in RESTART runs.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.272 WELOPEN – DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WELOPEN keyword defines the status of wells and well connections, and is used to open and shut previously defined well and well connections without having to re-specify all the data on the well control keywords: WCONPROD, WCONHIST, WCONINJE, or WCONINJH keywords. Note that the well must still be initially be fully defined using the WCONPROD or WCONINJE keywords. All the aforementioned keywords are described in the SCHEDULE section

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well and well connection status data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	STATUS	A character string of length four that defines the well and a well's connections' operational status, STATUS should be set to one of the following character strings: 1) OPEN: the connections are open to flow. 2) SHUT: the connections are closed to flow (shut-in). 3) AUTO: the connection are initially closed, but may be opened automatically if an economic limit is violated.			OPEN
3	I	An integer less than or equal to NX that defines the connection location in the I-direction.			I*
4	J	An integer less than or equal to NY that defines the connection location in the J-direction.			I*
5	K	An integer less than or equal to NZ that defines the connection location in the K-direction.			I*
6	K1	An integer less than or equal to NZ that defines the UPPER completion location in the K-direction. Connections are lumped into completions via the COMPLUMP keyword, and K1 refers to the first completion number, as defined by the COMPLUMP keyword, and all the connections contained within the K1 completion.			I*
7	K2	An integer less than or equal to NZ that defines the LOWER completion location in the K-direction. Connections are lumped into completions via the COMPLUMP keyword, and K2 refers to the last completion number, as defined by the COMPLUMP keyword, and all the connections contained within the K2 completion.			I*
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.83: WELOPEN Keyword Description

If variables I, J, K, K1 and K2 are all set to a negative number or defaulted with I* then STATUS is applied to the well and the well connection remain unchanged.

If variables I, J, K, K1 and K2 are all set to zero or a positive value then STATUS is applied to the defined connections and the well status remains unchanged. The defined connections are those values with the I, J, K specified locations and connections within the completion number range specified by K1 and K2.

See also the COMPDAT keyword to define a well's connections, the COMPLUMP keyword to group well connections into well completions, the WCONPROD and WCONDINJE keywords to define a well's production and injections targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Examples

The following example defines two vertical oil wells using the WELSPECS keyword and their associated connection data.

```
-- WELL SPECIFICATION DATA
--
-- WELL      GROUP      LOCATION  BHP      PHASE  DRAIN  INFLOW  SHUT  CROSS  PRESS
-- NAME      NAME        I      J  DEPTH  FLUID   AREA    EQUA.  IN    FLOW   TABLE
WELSPECS
OP01        PLATFORM    14    13   1*      OIL     1*      STD    OPEN   NO     1*  /
OP02        PLATFORM    28    96   1*      OIL     1*      STD    OPEN   NO     1*  /
/
--
--          WELL PRODUCTION WELL CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    LIQ    RES    BHP    THP    VFP    VFP
-- NAME  SHUT   MODE  RATE   RATE  RATE   RATE  RATE  PRES  PRES  TABLE  ALFQ
WCONPROD
'*'     SHUT   GRUP   1*     1*     1*     1*     1*     200.0                /
/
--
--          WELL CONNECTION DATA
--
-- WELL  --- LOCATION ---  OPEN  SAT  CONN  WELL  KH  SKIN  D  DIR
-- NAME  II JJ K1 K2  SHUT  TAB  FACT DIA  FACT FACT FACT  PEN
COMPDAT
OP01    1* 1* 1 10  SHUT  1*  1*  0.708 1*  0.0  1*  'Z' /
OP01    1* 1* 15 30 SHUT  1*  1*  0.708 1*  0.0  1*  'Z' /
OP01    1* 1* 35 90 SHUT  1*  1*  0.708 1*  0.0  1*  'Z' /
OP02    1* 1* 1 10  SHUT  1*  1*  0.708 1*  0.0  1*  'Z' /
/
--
--          DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
-- WELL  WELL  --LOCATION--  COMPLETION
-- NAME  STAT   I  J  K  FIRST LAST
WELOPEN
OP01    OPEN                                /
OP01    OPEN      0  0  1                                /
OP01    OPEN      0  0  2                                /
OP01    OPEN      0  0  3                                /
OP01    OPEN      0  0  4                                /
OP02    OPEN                                /
OP02    OPEN      0  0  0                                /
/
```

In this example the first record of each well WELOPEN keyword changes the well status from shut (as per the WCONPROD keyword) to open. Then for well OP01 well connections one to four are opened for flow and all the connections for well OP02 are opened, that is connections one to ten.

The next example shows the use of the COMPLUMP keyword to group the well connections into well completions for wells OP01, OP02 and OP03, and then use the WELOPEN keyword to open the well and the well completions.

```
--
--          ASSIGN WELL CONNECTIONS TO COMPLETIONS
--
-- WELL    --- LOCATION --- COMPL
-- NAME    II  JJ  K1  K2    NO.
COMPLUMP
OP01      0   0   1  10    1          / COMPLETION NO. 01
OP01      0   0  15  30    2          / COMPLETION NO. 02
OP01      0   0  35  90    3          / COMPLETION NO. 03
OP02      0   0  15  30    2          / COMPLETION NO. 02
OP02      0   0  35  90    3          / COMPLETION NO. 03
OP03      0   0   1  10    1          / COMPLETION NO. 01
OP03      0   0  35  90    3          / COMPLETION NO. 03
/
--
--          DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
-- WELL WELL  --LOCATION--  COMPLETION
-- NAME STAT   I   J   K   FIRST LAST
WELOPEN
OP01      OPEN                      /
OP01      OPEN      0   0   0       3   3    /
OP02      OPEN                      /
OP02      OPEN      0   0   0       2   2    /
OP03      OPEN                      /
OP03      OPEN      0   0   0       0   0    /
/
```

Again, the first record of each well WELOPEN keyword changes the well status from shut (as per the WCONPROD keyword) to open. Then for well OP01 well completion number three is opened (connections 35 to 90), completion two (connections 15 to 30) for well OP02 and completion numbers one to three (all the connections) for well OP03. Note that there is no completion number two for OP03 so connections 15 to 30 will not be opened.

Note the last completion number for well OP03 was named completion number three, but it could have been named number two as well. The reason why it was named number three instead of two was because it was assumed (for the example) that layers 35 to 90 represent a particular reservoir, and therefore allowing for the tracking of completions for individual reservoirs, as shown in the example.

This example shows how one can open all the wells and well completions for a given reservoir.

```
--
--          DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
-- WELL WELL  --LOCATION--  COMPLETION
-- NAME STAT   I   J   K   FIRST LAST
WELOPEN
' * '      OPEN                      /
' * '      OPEN      0   0   0       3   3    /
OP02      SHUT      0   0   0       0   0    /
OP02      OPEN      0   0   0       2   2    /
/
```

In this case well OP01, OP02 and OP03 are opened via completion number three – which we do not want. Hence, all the connection for OP02 are shut, and then connections associated with completion two are opened instead for this well.

12.3.273 WELOPENL – DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS (LGR)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WELOPENL keyword defines the status of wells and well connection in Local Grid Refinement Grids (“LGR”) and is used to open and shut previously defined well and well connections without having to re-specify all the data on the well control keywords: WCONPROD, WCONHIST, WCONINJE, or WCONINJH keywords. Note that the well must still be initially be fully defined using the WCONPROD or WCONINJE keywords. All the aforementioned keywords are described in the SCHEDULE section

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well and well connection status data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which the well LGR connection data are being defined. Note that the well name (LGRNAME) must have been declared previously using the WELSPECL keyword in the SCHEDULE section, otherwise an error may occur. If defaulted with I* the LGR on the WELSPECL keyword will be utilized.			Defined
3	STATUS	A character string of length four that defines the well and a well's connections' operational status, STATUS should be set to one of the following character strings: 4) OPEN: the connections are open to flow. 5) SHUT: the connections are closed to flow (shut-in). 6) AUTO: the connection are initially closed, but may be opened automatically if an economic limit is violated.			OPEN
4	I	An integer less than or equal to NX that defines the connection location in the I-direction.			I*
5	J	An integer less than or equal to NY that defines the connection location in the J-direction.			I*
6	K	An integer less than or equal to NZ that defines the connection location in the K-direction.			I*
7	KI	An integer less than or equal to NZ that defines the UPPER completion location in the K-direction. Connections are lumped into completions via the COMPLUMP keyword, and KI refers to the first completion number, as defined by the COMPLUMP keyword, and all the connections contained within the KI completion.			I*

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
8	K2	An integer less than or equal to NZ that defines the LOWER completion location in the K-direction. Connections are lumped into completions via the COMPLUMP keyword, and K2 refers to the last completion number, as defined by the COMPLUMP keyword, and all the connections contained within the K2 completion.			I*
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.84: WEOPENL Keyword Description

If variables I, J, K, K1 and K2 are all set to a negative number or defaulted with I* then STATUS is applied to the well and the well connection remain unchanged.

If variables I, J, K, K1 and K2 are all set to zero or a positive value then STATUS is applied to the defined connections and the well status remains unchanged. The defined connections are those values with the I, J, K specified locations and connections within the completion number range specified by K1 and K2.

See also the COMPDAT keyword to define a well's connections, the COMPLUMP keyword to group well connections into well completions, the WCONPROD and WCONDINJE keywords to define a well's production and injections targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example shows the use of the COMPLMPL keyword to group the well connections into well completions for well OP01 and then use the WEOPEN keyword to open the well and the well connections.

```
--
--      ASSIGN WELL LGR CONNECTIONS TO COMPLETIONS
--
--      WELL      LGR      ---LOCATION---      COMPL
--      NAME      NAME      II  JJ  K1  K2      NO.
COMPLMPL
      OP01  LGR1      26  58   1   3       1
      OP01  LGR1      26  58   4  10       2
      OP01  LGR1      26  58  11  12       3
/
--
--      WELL PRODUCTION STATUS FOR LGR WELLS
--
--      WELL      LGR      WELL      --LOCATION--      COMPLETION
--      NAME      NAME      STAT      I   J   K      FIRST LAST
WEOPENL
      OP01      LGR1      OPEN
      OP01      LGR1      OPEN      0   0   0       1   2
      OP01      LGR2      SHUT      0   0   0       3   3
/
```

The first record of the WEOPENL keyword changes the well status from shut (as per the WCONPROD keyword) to open, in case it has been shut-in. Then well completion number one and two are opened (connections 1 to 10), and completion number three shut-in (connections 11 to 12).

12.3.274 WELPI – DEFINE WELL PRODUCTIVITY AND INJECTIVITY INDICES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WELPI keyword is used to define a well's productivity or injectivity index at the time the keyword is activated. Productivity and injectivity indices are a function of both bottom-hole pressure and mobility and thus will vary in time as the bottom-hole pressure and fluids produce by the well are changing. Thus, the values enter on this keyword for a given well will override any previously calculated values, or values previously entered, using this keyword. This keyword should only be invoked after a well's connection factors have been declared via the COMPDAT keyword in the SCHEDULE section.

No.	Name	Description			Default		
		Field	Metric	Laboratory			
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well productivity index is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None		
2	WELPI	A real positive value that defines the productivity or injectivity of a well at the time the keyword is activated in the input deck. Subsequent use of the keyword for a given well will override all previously entered data, including the original productivity index calculated from the well's COMPDAT connection data. Note that: 1) Only the connections currently <u>opened</u> will have their connection factors re-scaled to honor the productivity and injectivity index. Connections not opened will remain unchanged. 2) Additional, previously defined connections added to the well at a later time, will not be influenced by a previous WELPI keyword. It may therefore be necessary to add another WELPI keyword at the time the new connections are opened, if desired. 3) However, re-defining connections via the COMPDAT keyword resets the calculated productivity and injectivity index for those re-defined connections in the well. Subsequent usage of the keyword for the same well may lead to unintended values; use the WPI series of variables in the SUMMARY section to output and verify that the values are consistent with the desired results.					
		Liquid stb/d/psia Gas Mscf/d/psia	Liquid sm ³ /day/bars Gas sm ³ /day/bars	Liquid scc/hour/atm Gas scc/hour/atm	1.0		

Notes:

1)

The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.85: WELPI Keyword Description

Note that only a well's currently opened connection factors, as entered via the COMPDAT keyword, are re-scaled to match the required productivity and injectivity index. See section [Well Productivity](#) on well productivity for further information on well productivity.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Note

One should not modify the productivity and injectivity index of gas wells that use:

- 1) Russell Goodrich¹⁹⁹ pressure square inflow equation,
- 2) the general dry gas pseudo pressure inflow equation, or
- 3) the generalized gas pseudo pressure inflow equation, as declared via the INFLOW property on the WELSPECS keyword in the SCHEDULE section, or
- 4) those gas wells that use the non-Darcy D factor coefficient, as declared by the DFACT property on the COMPDAT and WDFAC keywords in the SCHEDULE section.

See also the WPIMULT keyword in the SCHEDULE section to set the productivity and injectivity index for a well by scaling the current index by a scaling factor.

Example

```
--
--      DEFINE WELL PRODUCTIVITY/INJECTIVITY INDEX
--
-- WELL  PI
-- NAME  MULT
WELPI
OP01    1.250
OP02    2.750
OP03    1.100
/
```

In the above example the oil wells are defined as having a well productivity indices of 1.250, 2.750 and 1.100 for the OP01, OP02 and OP03 wells, respectively.

¹⁹⁹ Russell, D.G., Goodrich, J.H., Perry, G.E and Bruskotter, J.F "Methods of Predicting Gas Well Performance", Transactions of the ASME, Journal of Petroleum Technology (1966) 99-108.

12.3.275 WELPRI – ASSIGN WELL PRIORITY

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WELPRI keyword is used to re-assign a priority number to a well for when the PRIORITY keyword has been used in the SCHEDULE section. The PRIORITY keyword activates the Well Priority option and defines the coefficients in the well priority equation; WELPRI keyword can be used to over write these calculated priority numbers

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.276 WELSEGS – DEFINE MULTI-SEGMENT WELLS AND THEIR SEGMENT STRUCTURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WELSEGS keyword defines a well to be a multi-segment well and defines the well's segment structure. Note that the well must have been previously define by the WELSPECS keyword in the SCHEDULE section and that the WELSEGS keyword should be repeated for each multi-segment well in the model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
I-1	WELNAME	A character string of up to eight characters in length that defines the well name for which a multi-segment well is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
I-2	BHPREF	A real value that must be entered that defines the reference depth for reporting the bottom-hole pressure for the multi-segment well. Ideally this value should be set to the nodal point of the top segment. If the keyword is entered multiple times for the same well, due to for example the well configuration changing through time, then it is only necessary to enter this data the first time the keyword is used for a well.			None
		feet	m	cm	
I-3	TUBDZ	TUBDZ is a real positive value that defines the length of the tubing from the tubing head or wellhead at the surface to the nodal point of the top segment (BHPREF). Tubing pressures from BHREF up to the tubing length of TUBDZ to the surface are not calculated by the multi-segment well option as these are taken into account by the VFP tables allocated to well and entered via the VFPROD and VPINJ keywords in the SCHEDULE section. If TUBDZ is set to zero or defaulted then the tubing length is measured from the nodal point of the top segment, that is BHPREF.			0
		feet	m	cm	
I-4	WBORVOL	WBORVOL is a real positive value that defines the effective wellbore volume for the top segment, that is from the tubing head or wellhead at the surface to the nodal point of the top segment (BHPREF). The default value of 1.0×10^{-5} results in minimal wellbore storage.			1.0E-5
		ft ³	m ³	cm ³	
I-5	TUBOPT	TUBOPT is a character string that defines the type of length and depth data entered for DEPTH1 and DEPTH2 on the second record and should be set to one of the following: 1) INC: Incremental values, that is the length of each segment. 2) ABS: Absolute values, that si the depth of each segment. There is no default value for TUBOPT one of the above options must be explicitly defined.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
I-6	PRESOPT	<p>PRESOPT is a character string that defines the pressure drop calculation used for each well segment and should be set to one of the following:</p> <ol style="list-style-type: none"> 1) HFA: Sets the pressure calculation to include the hydrostatic, friction and acceleration terms. 2) HF-: Sets the pressure calculation to include the hydrostatic and friction terms only. 3) H--: Sets the pressure calculation to include the hydrostatic pressure drop term only. <p>The default value for PRESOPT of HFA sets the pressure calculation to include the hydrostatic, friction and acceleration terms.</p>			HFA
I-7	FLOWOPT	<p>FLOWOPT is a character string that defines the type of multi-phase calculation used for each well segment and should be set to one of the following:</p> <ol style="list-style-type: none"> 1) HO: Sets the multi-phase calculation to the homogeneous model, that is all phases flow at the same velocity. 2) DF-: Sets the multi-phase calculation to the <i>Drift Flux Slip</i> model. <p>OPM Flow only supports the default value of HO.</p>			HO
I-8	XCORD	<p>A real positive values equal to or greater than zero that defines the coordinate in the x-direction of the nodal point of the top segment that is used for display purposes only.</p> <p>Currently this option is not supported by OPM Flow.</p>			None
		feet	m	cm	
I-9	YCORD	<p>A real positive value equal to or greater than zero that defines the coordinate in the y-direction of the nodal point of the top segment that is used for display purposes only.</p> <p>Currently this option is not supported by OPM Flow.</p>			None
		feet	m	cm	
I-10	XAREATH	<p>XAREATH is real positive value equal to or greater than zero that defines the cross sectional area of the pipe wall used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section.</p> <p>Currently this option is not supported by OPM Flow.</p>			None
		ft ²	m ²	cm ²	
I-11	VHEATCAP	<p>VHEATCAP is real positive value equal to or greater than zero that defines the volumetric heat capacity of the pipe wall used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section.</p> <p>Currently this option is not supported by OPM Flow.</p>			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	

No.	Name	Description			Default
		Field	Metric	Laboratory	
1-12	THCON	THCON is real positive value equal to or greater than zero that defines the thermal conductivity of the pipe wall used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section. Currently this option is not supported by OPM Flow.			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	
1-13	/	Record terminated by a "/"			Not Applicable
2-1	ISEG1	A positive integer greater than or equal to two and less than or equal to MXSEGS on WSEGDIMS keyword in the RUNSPEC section that defines the start of a segment			None
2-2	ISEG2	A positive integer greater than or equal to two and less than or equal to ISEG1 on this record and MXSEGS on the WSEGDIMS keyword in the RUNSPEC section that defines the end of a segment.			None
2-3	IBRANCH	A positive integer greater than or equal to one and less than or equal to MXBRAN on WSEGDIMS keyword in the RUNSPEC section that defines the branch number of a segment. All segments on the main stem must have IBRANCH set to one and lateral branches should have values between two and MXSEGS on the WSEGDIMS keyword in the RUNSPEC section.			None
2-4	ISEG3	A positive integer greater than or equal to two and less than or equal to MXSEGS on the WSEGDIMS keyword in the RUNSPEC section that defines the outlet segment.			None
2-5	DEPTH1	DEPTH1 is a real positive value that: 1) If TUBOPT is set to INC then DEPTH1 is the total length of the tubing for this segment. 2) If TUBOPT is set to ABS then DEPTH is the length of the tubing from the tubing head or wellhead at the surface to the last segment in the range.			None
		feet	m	cm	
2-6	DEPTH2	DEPTH2 is a real positive value that: 1) If TUBOPT is set to INC then DEPTH2 is the total incremental depth change of the tubing for this segment. 2) If TUBOPT is set to ABS then DEPTH defines the depth of the tubing at the last nodal point of this segment. in this range.			None
		feet	m	cm	
2-7	ID	A real positive value that defines the tubing internal <u>diameter</u> of the segment for the well.			None
		feet	m	cm	
2-8	EPSILON	A real positive value that defines the tubing absolute roughness of the segment for the well.			None

No.	Name	Description			Default
		Field	Metric	Laboratory	
		feet	m	cm	
2-9	XAREA	XAREA is real positive value equal to or greater than zero that defines the cross sectional area for fluid flow. Currently this option is not supported by OPM Flow.			None
		ft ²	m ²	cm ²	
2-10	VOLSEG	VOLSEG is a real positive value that defines the effective segment volume for the this segment. Currently this option is not supported by OPM Flow.			None
		ft ³	m ³	cm ³	
2-11	XCORDS	A real positive values equal to or greater than zero that defines the coordinate in the x-direction of the nodal point of this segment that is used for display purposes only. Currently this option is not supported by OPM Flow.			None
		feet	m	cm	
12-2	YCORDS	A real positive value equal to or greater than zero that defines the coordinate in the y-direction of the nodal point of this top segment that is used for display purposes only. Currently this option is not supported by OPM Flow.			None
		feet	m	cm	
2-13	XAREAS	XAREAS is real positive value equal to or greater than zero that defines the cross sectional area of the pipe wall for this segment, that is used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section. Currently this option is not supported by OPM Flow.			None
		ft ²	m ²	cm ²	
2-14	VHEATSEG	VHEATCAP is real positive value equal to or greater than zero that defines the volumetric heat capacity of the pipe wall for this segment, that is used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section. Currently this option is not supported by OPM Flow.			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	
2.15	THCSEG	THCON is real positive value equal to or greater than zero that defines the thermal conductivity of the pipe wall for this segment, that is used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section. Currently this option is not supported by OPM Flow.			None
		Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K	
2-16	/	Record terminated by a "/"			Not Applicable

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) Each multi-segment wells must be defined by a separate WELSEGS keyword that consists of two records, with entries 1-1 to 1-12 representing record one items and 2-1 to 2-15 representing record number two items in the “No.” column in this table. 2) Record number two of the keyword, items 2-1 to 2-15, is followed by up to MXCONS records as declared on the WSEGDIMS keyword in the RUNSPEC section. 3) Each of the records are terminated by a “/” and is explicitly shown in the above rows and the keyword should be terminated by a “/”.					

Table 12.86: WELSEGS Keyword Description

The total number of wells should be defined via the WELLSDIMS keyword and the number of multi-segment wells should be declared on the WSEGDIMS keyword, both keywords are in the RUNSPEC section.

See also the WELSPECS keyword to define wells, the COMPDAT keyword to define the well completions for both ordinary wells and multi-segment wells, and the COMPSEGS keyword to define a multi-segment well segment completions. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines one producing well segment oil well (OP01) using the WELSPECS, WELSEGS COMPDAT and COMPSEGS keywords, and one water injection well (WI01) using the WELSPECS and COMPDAT keywords.

```
--
--      WELL SPECIFICATION DATA
--
-- WELL  GROUP      LOCATION  BHP    PHASE  DRAIN  INFLOW  OPEN  CROSS  PVT
-- NAME  NAME        I      J  DEPTH  FLUID   AREA   EQUANS  SHUT  FLOW  TABLE
WELSPECS
OP01    PLATFORM    10    10   1*     OIL                      /
WI01    PLATFORM     1     1   1*     WATER                     /
/
--
--      WELL CONNECTION DATA
--
-- WELL  --- LOCATION ---  OPEN  SAT  CONN  WELL  KH  SKIN  D  DIR
-- NAME  II  JJ  K1  K2  SHUT  TAB  FACT  DIA  FACT  FACT  FACT  PEN
COMPDAT
OP01    10  10    1    1  OPEN  1*   200.  0.5                      /
OP01    10  10    2    2  OPEN  1*   200.  0.5                      /
OP01    10  10    3    3  OPEN  1*   200.  0.4                      /
OP01    10  10    4    4  OPEN  1*   200.  0.4                      /
OP01    10  10    5    5  OPEN  1*   200.  0.4                      /
OP01    10  10    6    6  OPEN  1*   200.  0.4                      /

OP01     9  10    2    2  OPEN  1*   200.  0.4                      /
OP01     8  10    2    2  OPEN  1*   200.  0.4                      /
OP01     7  10    2    2  OPEN  1*   200.  0.4                      /
OP01     6  10    2    2  OPEN  1*   200.  0.4                      /
OP01     5  10    2    2  OPEN  1*   200.  0.4                      /

OP01    10   9    3    3  OPEN  1*   200.  0.4                      /
OP01    10   8    3    3  OPEN  1*   200.  0.4                      /
OP01    10   7    3    3  OPEN  1*   200.  0.4                      /
```

OPM OPEN POROUS MEDIA

OPM FLOW REFERENCE MANUAL (2021-10)

Revision: Rev-0

OP01	10	6	3	3	OPEN	1*	200.	0.4	/
OP01	10	5	3	3	OPEN	1*	200.	0.4	/
OP01	9	10	5	5	OPEN	1*	200.	0.4	/
OP01	8	10	5	5	OPEN	1*	200.	0.4	/
OP01	7	10	5	5	OPEN	1*	200.	0.4	/
OP01	6	10	5	5	OPEN	1*	200.	0.4	/
OP01	5	10	5	5	OPEN	1*	200.	0.4	/
OP01	10	9	6	6	OPEN	1*	200.	0.4	/
OP01	10	8	6	6	OPEN	1*	200.	0.4	/
OP01	10	7	6	6	OPEN	1*	200.	0.4	/
OP01	10	6	6	6	OPEN	1*	200.	0.4	/
OP01	10	5	6	6	OPEN	1*	200.	0.4	/
WI01	1	1	7	9	OPEN	1*	200.	0.5	/
/									
--									
--									
--									
--	WELL	NODAL	LEN	WELL	DEPH	PRESS	FLOW		
--	NAME	DEPTH	TUBING	VOLM	OPTN	CALC	MODEL		
WELSEGS									
OP01	2512.5		2512.5	1.0E-5	ABS	HFA	H0		/
--									
--	SEG	SEG	BRAN	SEG	TUBING	NODAL	TUBE	TUBE	XSEC
--	ISTR	IEND	NO	NO	LENGTH	DEPTH	ID	ROUGH	AREA
									VOL
									SEG
	2	2	1	1	2537.5	2534.5	0.3	0.00010	/
	3	3	1	2	2562.5	2560.5	0.3	0.00010	/
	4	4	1	3	2587.5	2593.5	0.3	0.00010	/
	5	5	1	4	2612.5	2614.5	0.3	0.00010	/
	6	6	1	5	2637.5	2635.5	0.3	0.00010	/
	7	7	2	2	2737.5	2538.5	0.2	0.00010	/
	8	8	2	7	2937.5	2537.5	0.2	0.00010	/
	9	9	2	8	3137.5	2539.5	0.2	0.00010	/
	10	10	2	9	3337.5	2535.5	0.2	0.00010	/
	11	11	2	10	3537.5	2536.5	0.2	0.00010	/
	12	12	3	3	2762.5	2563.5	0.2	0.00010	/
	13	13	3	12	2962.5	2562.5	0.1	0.00010	/
	14	14	3	13	3162.5	2562.5	0.1	0.00010	/
	15	15	3	14	3362.5	2564.5	0.1	0.00010	/
	16	16	3	15	3562.5	2562.5	0.1	0.00010	/
	17	17	4	5	2812.5	2613.5	0.2	0.00010	/
	18	18	4	17	3012.5	2612.5	0.1	0.00010	/
	19	19	4	18	3212.5	2612.5	0.1	0.00010	/
	20	20	4	19	3412.5	2612.5	0.1	0.00010	/
	21	21	4	20	3612.5	2613.5	0.1	0.00010	/
	22	22	5	6	2837.5	2634.5	0.2	0.00010	/
	23	23	5	22	3037.5	2637.5	0.2	0.00010	/
	24	24	5	23	3237.5	2638.5	0.2	0.00010	/
	25	25	5	24	3437.5	2639.5	0.1	0.00010	/
	26	26	5	25	3637.5	2639.5	0.1	0.00010	/
/									

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

```
--
--      COMPLETION SEGMENT SPECIFICATION DATA
--
-- WELL
-- NAME
COMPSEGS
OP01
--
--      --LOCATION--  BRAN  TUBING  NODAL  DIR  LOC  MID  COMP  ISEG
--      II  JJ  K1  NO  LENGTH  DEPTH  PEN  I, J, K  PERFS  LENGTH  NO.
--
--      10  10  1  1  2512.5  2525.0
--      10  10  2  1  2525.0  2550.0
--      10  10  3  1  2550.0  2575.0
--      10  10  4  1  2575.0  2600.0
--      10  10  5  1  2600.0  2625.0
--      10  10  6  1  2625.0  2650.0
--
--      9  10  2  2  2637.5  2837.5
--      8  10  2  2  2837.5  3037.5
--      7  10  2  2  3037.5  3237.5
--      6  10  2  2  3237.5  3437.5
--      5  10  2  2  3437.5  3637.5
--
--      10  9  3  3  2662.5  2862.5
--      10  8  3  3  2862.5  3062.5
--      10  7  3  3  3062.5  3262.5
--      10  6  3  3  3262.5  3462.5
--      10  5  3  3  3462.5  3662.5
--
--      9  10  5  4  2712.5  2912.5
--      8  10  5  4  2912.5  3112.5
--      7  10  5  4  3112.5  3312.5
--      6  10  5  4  3312.5  3512.5
--      5  10  5  4  3512.5  3712.5
--
--      10  9  6  5  2737.5  2937.5
--      10  8  6  5  2937.5  3137.5
--      10  7  6  5  3137.5  3337.5
--      10  6  6  5  3337.5  3537.5
--      10  5  6  5  3537.5  3737.5
/
```

Note the use of both the COMPDAT and COMPSEGS keywords to fully define a multi-segment well's completion.

Finally, Figure 12.15 depicts the resulting well configuration for both wells, with the conventional water injection well shown in blue and the multi-segment oil producer shown in green.

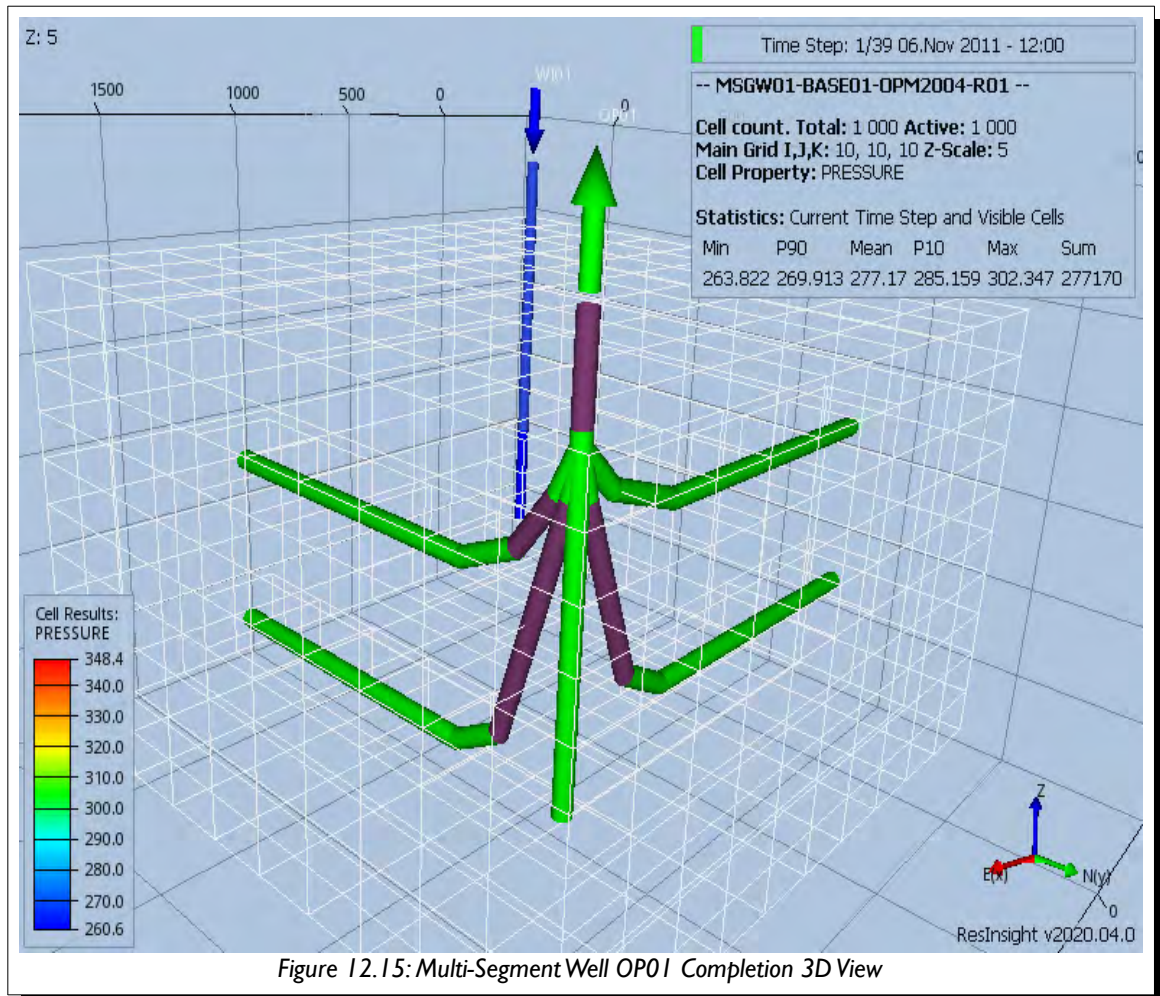


Figure 12.15: Multi-Segment Well OP01 Completion 3D View

12.3.277 WELSOMIN – DEFINE WELL CONNECTION MINIMUM OIL SATURATION FOR OPENING

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WELSOMIN defines a minimum oil saturation for a well connection above which the connection will be opened automatically. If the grid block connection is below WELSOMIN then connection will not be automatically opened. Automatic opening of connection is controlled by the STATUS parameter on the COMPDAT keyword in the SCHEDULE section. Note that if the COMPLUMP keyword in the SCHEDULE section has been used to lump connections into completions then WELSOMIN is compared to the average oil saturation of the completion.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.278 WELSPECL – DEFINE WELL SPECIFICATIONS FOR LOCAL GRID REFINEMENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WELSPECL keyword defines the general well specification data for all well types and must be used for all wells contained within a Local Grid Refinement (“LGR”) instead of the WELSPECS keyword. WELSPECL must declare wells first before any other LGR well specification keywords are used in the input file. The keyword declares the name of well, the group the well belongs to, the LGR the well is incorporated into, the wellhead location and other key parameters.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data is being defined.			None
2	GRPNAME	A character string of up to eight characters in length that defines the group name for which the well is assigned to. The group named FIELD is the top most group. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
3	LGRNAME	A character string of up to eight characters in length that defines the name of the local grid refinement for which the well is assigned to.			None
4	I	A positive integer greater than or equal to zero and less than or equal to NX on the CARFIN keyword for Cartesian grids, that defines the wellhead location for a vertical or deviated well, or the heel for a horizontal well in the I-direction within the LGR. For radial LGRs this parameter should be set to one.			None
5	J	A positive integer greater than or equal to zero and less than or equal to NY on the CARFIN keyword for Cartesian grids, that defines the wellhead location for a vertical or deviated well, or the heel for a horizontal well in the J-direction within the LGR. For radial LGRs this parameter should be set to one.			None
6	BHPREF	A real value that defines the reference depth for reporting the bottom-hole pressure for the well. Ideally this value should be set to the midpoint of the perforations as defined by the COMPDATL keyword in the SCHEDULE section. If defaulted by I* or set to a value less than or equal to zero, then the mid-point of shallowest connection defined by the COMPDATL keyword will be used.			Mid-point of shallowest connection defined by the COMPDAT keyword
		feet	m	cm	

No.	Name	Description			Default
		Field	Metric	Laboratory	
7	TYPE	<p>A defined character that defines the “main” phase for the well, and should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) GAS: for a gas well. 2) OIL: for an oil well. 3) WAT: for a water injection well. 4) LIQ: for an oil well when the liquid productivity index is required for the well. <p>This parameter defines the phase used to calculate a well’s productivity or injectivity index and the type of well, or a well’s connection, to close when a group’s production constraints, as defined on the GCONPROD keyword in the SCHEDULE section, have been violated. For example, if the well is declared as an oil well, then excessive gas and water connections will be subject to closure.</p>			None
8	DRADIUS	<p>A real value that defines the well drainage radius for the well used to calculate a well’s productivity or injectivity index.</p> <p>A default of zero results in the pressure equivalent radius of the grid blocks containing the well connections are used.</p>			0.0
		feet	m	cm	
9	INFLOW	<p>A defined character string that defines the inflow equation to be used for the well in calculating the well’s flow rates. INFLOW should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) STD: the standard inflow equation will be used. This is normally used for wells that are primary oil or water wells. 2) NO: an alias for STD. 3) R-G: the Russell Goodrich²⁰⁰ pressure square inflow equation will used. This option can be used for dry gas wells. 4) YES: an alias for R-G. 5) P-P: the general dry gas pseudo pressure inflow equation will be used. Normally used for dry gas wells. 6) GPP: the generalized gas pseudo pressure inflow equation used with wet gas wells, that is condensate gas wells. This inflow equation is based on the formulation of Whitson et. al.²⁰¹ <p>For oil and water wells the INFLOW should be set to STD, why for dry gas wells INFLOW can be set to either R-G or P-P; however, the P-P option is preferred for dry gas wells due to the more rigorous treatment of gas flow. For wet gas wells, that is gas condensate wells, INFLOW should be set to GPP.</p> <p>Only INFLOW equal to STD and NO are currently implemented in OPM Flow.</p>			STD

²⁰⁰ Russell, D.G., Goodrich, J.H., Perry, G.E and Bruskotter, J.F "Methods of Predicting Gas Well Performance", Transactions of the ASME, Journal of Petroleum Technology (1966) 99-108.

²⁰¹ Whitson, C. H. and Fevang, Ø. "Generalised Pseudopressure Well Treatment in Reservoir Simulation," Presented at the IBC Technical Services Conference on Optimisation of Gas Condensate Fields, Aberdeen, UK (June 26-27, 1997).

No.	Name	Description			Default
		Field	Metric	Laboratory	
10	AUTO	<p>A defined character string that defines the automatic action to be taken if the economic WCUT, GOR, or WGR limits are violated and the well is to cease production. AUTO should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) STOP: the well is “stopped” at the surface and will not produce any fluids to surface; however, if there any open connections then flow may occur within the wellbore and between the open connections depending on a connection’s potential with respect to all the other connections. Inter-connection flow (cross flow) can be prevented by setting the XFLOW variable to NO. In this case the well’s behavior will be similar to the SHUT option described below. 2) SHUT: the well is shut at the surface and downhole, this results in no flow at the surface and no cross flow downhole. <p>The corrective action takes places at the end of the time step in which the constraint is violated.</p>			SHUT
11	XFLOW	<p>A defined character string that defines the if cross flow should occur within the wellbore, and should be set to either:</p> <ol style="list-style-type: none"> 1) YES: to allow cross flow in the wellbore through well connections. 2) NO: to disallow cross flow within the wellbore, even if the flow potentials in the well connections would allow such flow to occur. <p>In some cases numerical issues can occur if this variable is set to YES, and resetting it to NO may resolve the issue; however the results may not represent the physical process in this case.</p>			YES
12	PVTNUM	<p>A positive integer greater than or equal to zero that defines the PVT table used to calculate the wellbore fluid properties that define the relationship between reservoir and surface volume rates.</p> <p>The default value of zero sets PVTNUM to be the PVT table of the deepest connection in the well.</p>			0
13	DENOPT	<p>A defined character string that sets the type of density calculation used in calculating the wellbore hydrostatic head, and should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) SEG: sets the hydrostatic head density calculation to segmented. In this cases the density is calculated between neighboring well connections and the volumes flowing from the connections. This is the more accurate calculation if the fluid properties flowing from the well connections are variable. The density calculation itself is explicit, i.e. uses the flowing volumes of the last time step. 2) AVG: sets the hydrostatic head density calculation to the average density calculation. Here the density is considered uniform across a given reservoir and is dependent on total inflow rates of each phase and the well’s bottom-hole pressure <p>The default option of I* invokes the SEG option and is the only option implemented in OPM Flow.</p>			SEG

No.	Name	Description			Default
		Field	Metric	Laboratory	
14	FIPNUM	An integer value defines the FIPNUM region used to determine the reservoir conditions in calculating the well's reservoir volumes. If set to a negative integer value then the FIPNUM region of the deepest connection in the well will be used. If set to zero, the default value, then the average properties for the field will be used. If set to an integer value greater than zero, then the FIPNUM indicated by this value will be used.			0
15		Not used.			
16		Not used.			
17		Not used.			
18		Not used.			

Notes:

- 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".
- 2) Note that the total number of individual wells declared by the WELSPECS cannot exceed the valued entered via the MXWELS variable on the WELLDIMS keyword in the RUNSPEC section.

Table 12.87: WELSPECL Keyword Description

See also the COMPDATL keyword to define a well's connections in a LGR, the WCONPROD and WCONDINJE keywords to define a well's production and injections targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines three wells using the WELSPECL keyword

```
--
-- WELL SPECIFICATION DATA FOR LGR WELLS
--
-- WELL  GROUP   LGR    LOCATION  BHP    PHASE  DRAIN  INFLOW  SHUT   CROSS  PVT
-- NAME  NAME     NAME     I      J    DEPTH  FLUID   AREA   EQUA.  IN     FLOW  TABLE
WELSPECL
GI01    PLATFORM  LGR01   14    13   1*    GAS    1*     P-P    SHUT   NO    1* /
GP01    PLATFORM  LGR01   64    80   1*    GAS    1*     GPP    SHUT   NO    1* /
OP01    PLATFORM  LGR02   24    10   1*    OIL    1*     STD    SHUT   NO    1* /
/
```

Here, well GI01 and GP01 are in the same LGR named LGR01 and OP01 is in a separate LGR named LGR02. GI01 is a dry gas injection well that uses the dry gas pseudo inflow equation, GP01 is a gas condensate well that uses the generalized gas pseudo pressure inflow equation, and finally, OP01 is an oil well that uses the standard inflow equation. All wells: will be shut if they are required to cease production, all wells disallow cross flow, and the hydrostatic head calculation is defaulted to the segment option for all wells.

12.3.279 WELSPECS – DEFINE WELL SPECIFICATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WELSPECS keyword defines the general well specification data for all well types, and must be used for all wells before any other well specification keywords are used in the input file. The keyword declares the name of well, the group the well initial belongs to, the wellhead location and other key parameters.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data is being defined.			None
2	GRPNAME	A character string of up to eight characters in length that defines the group name for which the well is assigned to. The group named FIELD is the top most group. Note that the group hierarchy should be defined by the GRUPTREE keyword when there is more than one level of groups, otherwise all the groups will sit directly under the FIELD group in the group tree hierarchy.			None
3	I	A positive integer greater than or equal to zero and less than or equal to NX that defines the wellhead location for a vertical or deviated well, or the heel for a horizontal well in the I-direction.			None
4	J	A positive integer greater than or equal to zero and less than or equal to NY that defines the wellhead location for a vertical or deviated well, or the heel for a horizontal well in the J-direction..			None
5	BHPREF	A real value that defines the reference depth for reporting the bottom-hole pressure for the well. Ideally this value should be set to the midpoint of the perforations as defined by the COMPDAT keyword in the SCHEDULE section. If defaulted by I* or set to a value less than or equal to zero, then the mid-point of shallowest connection defined by the COMPDAT keyword will be used.			Mid-point of shallowest connection defined by the COMPDAT keyword
		feet	m	cm	
6	TYPE	A defined character that defines the “main” phase for the well, and should be set to one of the following character strings: 1) GAS: for a gas well. 2) OIL: for an oil well. 3) WAT: for a water injection well. 4) LIQ: for an oil well when the liquid productivity index is required for the well. This parameter defines the phase used to calculate a well's productivity or injectivity index and the type of well, or a well's connection, to close when a group's production constraints, as defined on the GCONPROD keyword in the SCHEDULE section, have been violated. For example, if the well is declared as an oil well, then excessive gas and water connections will be subject to closure.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
7	DRADIUS	<p>A real value that defines the well drainage radius for the well used to calculate a well's productivity or injectivity index.</p> <p>A default of zero results in the pressure equivalent radius of the grid blocks containing the well connections are used.</p>			0.0
		feet	m	cm	
8	INFLOW	<p>A defined character string that defines the inflow equation to be used for the well in calculating the well's flow rates. INFLOW should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) STD: the standard inflow equation will be used. This is normally used for wells that are primary oil or water wells. 2) NO: an alias for STD. 3) R-G: the Russell Goodrich²⁰² pressure square inflow equation will be used. This option can be used for dry gas wells. 4) YES: an alias for R-G. 5) P-P: the general dry gas pseudo pressure inflow equation will be used. Normally used for dry gas wells. 6) GPP: the generalized gas pseudo pressure inflow equation used with wet gas wells, that is condensate gas wells. This inflow equation is based on the formulation of Whitson et. al.²⁰³ <p>For oil and water wells the INFLOW should be set to STD, whereas for dry gas wells INFLOW can be set to either R-G or P-P; however, the P-P option is preferred for dry gas wells due to the more rigorous treatment of gas flow. For wet gas wells, that is gas condensate wells, INFLOW should be set to GPP.</p> <p>Only INFLOW equal to STD and NO are currently implemented in OPM Flow.</p>			STD
9	AUTO	<p>A defined character string that defines the automatic action to be taken if the economic WCUT, GOR, or WGR limits are violated and the well is to cease production. AUTO should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) STOP: the well is "stopped" at the surface and will not produce any fluids to surface; however, if there any open connections then flow may occur within the wellbore and between the open connections depending on a connection's potential with respect to all the other connections. Inter-connection flow (cross flow) can be prevented by setting the XFLOW variable to NO. In this case the well's behavior will be similar to the SHUT option described below. 2) SHUT: the well is shut at the surface and downhole, this results in no flow at the surface and no cross flow downhole. <p>The corrective action takes places at the end of the time step in which the constraint is violated.</p>			SHUT

²⁰² Russell, D.G., Goodrich, J.H., Perry, G.E and Bruskotter, J.F "Methods of Predicting Gas Well Performance", Transactions of the ASME, Journal of Petroleum Technology (1966) 99-108.

²⁰³ Whitson, C. H. and Fevang, Ø. "Generalised Pseudopressure Well Treatment in Reservoir Simulation," Presented at the IBC Technical Services Conference on Optimisation of Gas Condensate Fields, Aberdeen, UK (June 26-27, 1997).

No.	Name	Description			Default
		Field	Metric	Laboratory	
10	XFLOW	<p>A defined character string that defines the if cross flow should occur within the wellbore, and should be set to either:</p> <ol style="list-style-type: none"> 1) YES: to allow cross flow in the wellbore through well connections. 2) NO: to disallow cross flow within the wellbore, even if the flow potentials in the well connections would allow such flow to occur. <p>In some cases numerical issues can occur if this variable is set to YES, and resetting it to NO may resolve the issue; however, the results may not represent the physical down hole process in this case.</p>			YES
11	PVTNUM	<p>A positive integer greater than or equal to zero that defines the PVT table used to calculate the wellbore fluid properties that define the relationship between reservoir and surface volume rates.</p> <p>The default value of zero sets PVTNUM to be the PVT table of the deepest connection in the well.</p>			0
12	DENOPT	<p>A defined character string that sets the type of density calculation used in calculating the wellbore hydrostatic head, and should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) SEG: sets the hydrostatic head density calculation to segmented. In this cases the density is calculated between neighboring well connections and the volumes flowing from the connections. This is the more accurate calculation if the fluid properties flowing from the well connections are variable. The density calculation itself is explicit, i.e. uses the flowing volumes of the last time step. 2) AVG: sets the hydrostatic head density calculation to the average density calculation. Here the density is considered uniform across a given reservoir and is dependent on total inflow rates of each phase and the well's bottom-hole pressure <p>The default option of I* invokes the SEG option and is the only option implemented in OPM Flow.</p>			SEG
13	FIPNUM	<p>An integer value defines the FIPNUM region used to determine the reservoir conditions in calculating the well's reservoir volumes and is determined by:</p> <ol style="list-style-type: none"> 1) If set to a negative integer value then the FIPNUM region of the deepest connection in the well will be used. 2) If set to zero, the default value, then the average properties for the field will be used. 3) If set to an integer value greater than zero, then the FIPNUM indicated by this value will be used. 			0
14	STRMLIN1	Not used and should be defaulted with I*.			I*
15	STRMLIN2	Not used and should be defaulted with I*.			I*
16	TYPECOMP	Commercial compositional simulator well type model option that is not used and should be defaulted with either STD or I*.			STD
17	POLYTAB	<p>A positive integer greater than or equal to zero that defines the polymer mixing table, as defined by the PLMIXPAR and PLYMAX keywords, to be used in calculating the well's well bore properties. The default value of zero means the table allocated via the PLMIXNUM array for the deepest connection in the well bore is utilized.</p> <p>Only the default value of zero is supported by OPM Flow.</p>			0

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by any number records with each record terminated by a “/” and the keyword should be terminated by a “/”. 2) Note that the total number of individual wells declared by the WELSPECS cannot exceed the valued entered via the MXWELS variable on the WELLDIMS keyword in the RUNSPEC section.					

Table 12.88: WELSPECS Keyword Description

See also the COMPDAT keyword to define a well's connections, the WCONPROD and WCONDINJE keywords to define a well's production and injections targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines three wells using the WELSPECS keyword

```
--
--      WELL SPECIFICATION DATA
--
-- WELL  GROUP      LOCATION  BHP    PHASE  DRAIN  INFLOW  OPEN  CROSS  PVT
-- NAME  NAME        I      J  DEPTH  FLUID   AREA   EQUANS  SHUT  FLOW  TABLE
WELSPECS
GI01     PLATFORM    14    13   1*     GAS    1*     P-P    SHUT   NO    1*    /
GP01     PLATFORM    64    80   1*     GAS    1*     GPP    SHUT   NO    1*    /
OP01     PLATFORM    24   110   1*     OIL    1*     STD    SHUT   NO    1*    /
/
```

Here, well GI01 is a dry gas injection well that uses the dry gas pseudo inflow equation, GP01 is a gas condensate well that uses the generalized gas pseudo pressure inflow equation, and finally, OP01 is an oil well that uses the standard inflow equation. All wells: will be shut if they are required to cease production, all wells disallow cross flow, and the hydrostatic head calculation is defaulted to the segment option for all wells.

12.3.280 WELTARG – MODIFY WELL TARGET AND CONSTRAINT VALUES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WELTARG keyword modifies the target and constraints values of both rates and pressures for previously defined wells without having to define all the variables on the well control keywords: WCONPROD, WCONHIST, WCONINJE, or WCONINJH. Variables not changed by the WELTARG keyword remain the same as those previously entered via the well control keywords or previously entered WELTARG keywords. Note that the well must still be initially be fully defined using the WCONPROD or WCONINJE keywords. All the aforementioned keywords are described in the SCHEDULE section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well production rates and pressures data are being redefined. Note that the well name (WELNAME) must have been declared previously using the WELSPCS and WCONPROD (or WCONINJE) keywords in the SCHEDULE section, otherwise an error may occur.			None
2	TARGET	A defined character string that sets the item to be changed for the well the value of the item is set by item (3). 1) ORAT: reset the surface oil production rate value as defined by item (3). 2) WRAT: reset the surface water production rate value as defined by item (3). 3) GRAT: reset the surface gas production rate value as defined by item (3). 4) LRAT: reset the surface liquid (oil plus water) production rate value as defined by (3). 5) CRAT: reset the linearly combined calculated rate value as defined by (3). <u>This option is not supported.</u> 6) RESV: reset the in situ reservoir volume rate value as defined by (3). 7) BHP: reset the bottom-hole pressure value as defined by item (3). 8) THP: reset the tubing head pressure value for the well as defined by item (3). 9) VFP: reset the vertical lift performance table number as defined by (3). 10) LIFT: reset the artificial lift quantity for use with vertical lift performance tables. 11) GUID: reset the guide rate value for wells operating under group control. The commercial compositional simulator options: WGRA, NGL, CVAL, REIN, STRA, SATP and SATT are not applicable. Note that TARGET only defines the variable to be changed, it does not change how a well is controlled. For example, if a well is operating on ORAT control, as defined by the previously entered WCONPROD keyword, entering TARGET equal to LRAT with a value, changes the liquid constraint but the well still remains on ORAT control. Use the WELCNTL keyword in the SCHEDULE section to change the control mode of a well.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	VALUE	A real positive value that defines the value of the variable declared by TARGET			None
	Liquid	stb/d	sm ³ /day	scc/hour	
	Gas	Mscf/d	sm ³ /day	scc/hour	
	Res Vol	rb/d	rm ³ /day	rcc/hour	
	Pressure	psia	barsa	atma	
	VFP	dimensionless	dimensionless	dimensionless	
	LIFT	same as VFPPROD or VFPINJ	same as VFPPROD or VFPINJ	same as VFPPROD or VFPINJ	
Notes:					
1) The keyword is followed by any number records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.89: WELTARG Keyword Description

If a well is currently a history matching well, then WELTARG should only be used to change a wells bottom-hole pressure limit, vertical flow performance table number or the artificial lift quantity.

See also the WELCNTL keyword, in the SCHEDULE section that can be used to reset the control mode, as well as a well's target and constraints of both rates and pressures.

Example

The following example below shows the oil rates for the OP01 oil producer at the start of the schedule section (January 1, 2000).

```

-----
-- 01 JAN 2000 START OF SCHEDULE SECTION
-----
--
--      WELL PRODUCTION WELL CONTROLS
--
-- WELL  OPEN/  CNTL  OIL    WAT    GAS    LIQ    RES    BHP    THP    VFP    VFP
-- NAME  SHUT   MODE  RATE   RATE   RATE   RATE   RATE   PRES  PRES  TABLE ALFQ
WCONPROD
OP01     OPEN   ORAT   3000   1*    1*    1*    1*    750.0  500.  9      1* /
/
DATES
01 FEB 2000 /
/
--
--      WELL PRODUCTION AND INJECTION TARGETS
--
-- WELL  WELL  TARGET
-- NAME  TARG  VALUE
WELTARG
OP01     ORAT   2000
/

```

From January 1, 2000 to February 1, 2000 well OP01 is open and is on oil rate control and has a target oil rate of 3,000 stb/d, and uses VFPPROD vertical lift table number 9 with a minimum tubing head pressure constraint of 500 psia. After February 1, 2000 the well's oil rate is reduced to 2,000 stb/d and all the other parameters remain unchanged.

12.3.281 WFOAM - DEFINE WELL FOAM INJECTION CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WFOAM keyword defines an injection wells foam concentration. The foam option must be activated by the FOAM keyword in the RUNSPEC section in order to use this keyword. Note if a well's foam concentration is not set with this keyword then default value of zero is assigned to a well.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well injection foam concentration is being defined.			None
2	FOAMCON	A real positive value that defines the well's injection foam concentration. Units are dependent on the transport phase specified via the FOAMOPT I variable on the FOAMOPTS keyword in the PROPS section. FOAMOPT I should be set to either GAS or WATER. Currently OPM Flow only supports injecting foam via the GAS phase.			None
		Gas: lb/Mscf Water: lb/stb	Gas: kg/sm ³ Water: kg/sm ³	Gas: gm/scc Water: gm/scc	
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/". 2) Note that the total number of individual wells declared by the WELSPECS cannot exceed the valued entered via the MXWELS variable on the WELLDIMS keyword in the RUNSPEC section.					

Table 12.90: WFOAM Keyword Description

See also the FOAM keyword in the RUNSPEC section, the FOAMADS, FOAMOPTS and FOAMROCK keywords in the PROPS section.

Example

```
--
--      WELL INJECTION FOAM CONCENTRATION
--
-- WELL   FOAM
-- NAME   FOAMCON
WFOAM
GI01     0.020 /
GI02     0.020 /
GI03     0.020 /
/
```

Here three gas wells are given an injection foam concentration of 0.020 lb/Mscf, assuming field units.

12.3.282 WFRICSEG – CONVERT FRICTION WELL TO MULTI-SEGMENT WELL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WFRICSEG converts a previously defined friction well, as per the WFRICTN keyword in the SCHEDULE section, to a multi-segment well. The keyword thus acts as a replacement for the WELSEGS and COMPSEGS keywords for multi-segment wells. See also the WFRICSG keyword in the SCHEDULE section that performs similar functionality for wells in Local Grid Refinements.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.283 WFRICSGL – CONVERT FRICTION WELL TO MULTI-SEGMENT WELL (LGR)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WFRICSGL converts a previously defined Local Grid Refinement (“LGR”) friction well, as per the WFRICTNL keyword in the SCHEDULE section, to a multi-segment LGR well. The keyword thus acts as a replacement for the WELSEGS and COMPSEGL keywords for LGR multi-segment wells. See also the WFRICSEG keyword in the SCHEDULE section that performs similar functionality for wells in the global grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.284 WFRICTN – DEFINE WELL AS A FRICTION WELL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WFRICTN keyword is used to declare a previously defined well as a friction well and to set the characteristics for this type of well including: tubing size, pipe roughness, and the connections to the grid. Wellbore friction is important in horizontal and multi-lateral wells where the pressure loss along the pipe can effect a well's performance. Note that unlike other SCHEDULE section well keywords, multiple wells cannot be entered with one WFRICTN keyword, that is, the keyword must be repeated for each well.

See also the WFRICTNL keyword in the SCHEDULE section that performs similar functionality for wells in Local Grid Refinements.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.285 WFRICTNL – DEFINE WELL AS A FRICTION WELL (LGR)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WFRICTNL keyword is used to declare a previously defined Local Grid Refinement (“LGR”) well as a LGR friction well and to set the characteristics for this type of well including: tubing size, pipe roughness, and the connections to the grid. Wellbore friction is important in horizontal and multi-lateral wells where the pressure loss along the pipe can effect a well’s performance. Note that unlike other SCHEDULE section well keywords, multiple wells cannot be entered with one WFRICTNL keyword, that is, the keyword must be repeated for each well.

See also the WFRICTN keyword in the SCHEDULE section that performs similar functionality for wells in the global grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.286 WGASPROD – DEFINE SALE GAS WELL PRODUCTION TARGETS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WGASPROD keyword declares wells to be Sales Gas producers and sets the incremental gas rate for a well and the maximum number of increments that this rate can be increased. Wells must have been previously been defined via the WELSPECS and WCONPROD keywords in the SCHEDULE section and are subject to any targets or constraints on WCONPROD keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.287 WGORPEN – DEFINE WELL GOR PENALTY PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WGORPEN keyword defines a well's Gas-Oil Ratio ("GOR") penalty parameters used to calculate a well's oil production target for the current month, as a function of the well's previous month's average GOR. The WGORPEN calculated oil rate overwrites any oil targets set by the WCONPROD and WELTARG keywords in the SCHEDULE section. In North American, it is common practice for the regulator to enforce GOR penalties, in order to control gas production in depletion drive oil reservoirs, with the stated intention to maximize oil recovery by limiting the energy loss from the reservoir by excessive gas production.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.288 WGRUPCON – DEFINE WELL GUIDE RATES FOR GROUP CONTROL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WGRUPCON keyword defines a well's production or injection guide rate for when a well is under group control. The guide rate is used to determine a well's production target under group control in order to satisfy a group's targets and constraints, including any higher level related groups as well as the FIELD group.

Wells must have been previously defined and allocated to a group by the WELSPECS keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates controlled by the group to which they belong, in addition to any well constraints defined for the wells via the WCONPROD and WCONINJE keywords in the SCHEDULE section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well production targets and constraints data are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	STATUS	A defined character string that declares the status of the well to be under group control or not under group control. STATUS should be set to one of the following character strings: 1) YES: the well is under group control and its production behavior will be influenced by its assigned group, including connecting higher level groups as well as the FIELD group. 2) NO: the well is NOT under group control and its production behavior will only be influenced by its own targets and constraints. Note the default value of YES puts all wells under group control unless specified otherwise by the STATUS variable, or the TARGET variable on the WCONPROD and WCONINJE keywords in the SCHEDULE section.			YES
3	GUIDERAT	A dimensionless real number that determines the well's share of its group production (or injection) target rate. If GUIDERAT is a positive number then the guide rate for the well is fixed until modified by this keyword at a subsequent time. If TARGET variable on this keyword is not equal to the group's controlling phase, then the GUIDERAT is converted into the groups' controlling phase and is updated every time step. If GUIDERAT is less than or equal to zero then the well's guide rate is based on the well's potential (unrestricted flow) and the potential is calculated every time step.			-1.0
		dimensionless	dimensionless	dimensionless	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	TARGET	A defined character string that sets the well's guide rate phase that the GUIDERAT value should be applied to. TARGET should be set to one of the following character strings: 1) OIL: the well's guide rate applies to the surface oil production rate. 2) WAT: the well's guide rate applies to the surface water production rate. 3) GAS: the well's guide rate applies to the surface gas production rate. 4) LIQ: the well's guide rate applies to the surface liquid (oil plus water) production rate. 5) RES: the well's guide rate applies to the in situ reservoir volume rate. 6) RAT: the well's guide rate applies to the injection phase. <u>This should only be used if the well has been declared an injection via the WCONINJE keyword in the SCHEDULE section.</u> 7) COMB: the well's guide rate applies to the linearly combined calculated rate. This option is not supported by OPM Flow. TARGET may be defaulted if GUIDERAT has been defaulted, either by 1* or a value less than or equal to zero.			None
5	SCALE	A real value that is used to multiple the GUIDERAT or the calculated well potentials to determine the final GUIDERAT for the well. dimensionless dimensionless dimensionless			1.0
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.91: WGRUPCON Keyword Description

See also the GCONPROD the GCONINJ keywords to define a group's production and injection targets and constraints, and the WCONPROD and WCONINJE keyword to define a well's production and injection characteristics. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the guides rates all oil and gas producers and the gas injectors as follows:

```
--
--      DEFINE WELL GUIDES FOR GROUP CONTROL
--
-- WELL  GRUP  GUIDE  GUIDE  SCALE
-- NAME  CNTL  RATE   PHASE  FACT
WGRUPCON
'GI*'   YES   0       RAT    1.0      /
'GP*'   YES   0       GAS    1.0      /
'OP*'   NO    2       OIL    1.0      /
/
```

Both the gas producers ('GP*') and injectors ('GI*') are under group control with their guide rates based on their potentials. The gas injector wells are controlled based on their reservoir potential volumes and the producers on their potential gas rates. In comparison, all the oil wells controlled by their oil rates.

12.3.289 WHEDREFD – DEFINE WELL HYDRAULIC HEAD REFERENCE DEPTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WHEDREFD keyword sets the hydraulic head reference depth for reporting the hydraulic head pressure for the well, for wells that have previously been defined by the WELSPECS keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well hydraulic head reference depth data is being defined.			None
2	HYDREF	A real value that defines the hydraulic head reference depth for reporting the hydraulic head pressure for the well. HYDREF cannot be defaulted on the keyword; however if a well has not been set by this keyword HYDREF is set equal to the value on the HYDRAHEAD keyword.			None
		feet	m	cm	

Notes:

1) The keyword is followed by any number records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.92: WHEDREFD Keyword Description

See also the HYDRAHEAD in the PROPS section.

Example

The following example defines three wells hydraulic head reference depths for reporting, using the WHEDREFD keyword

```
--
--      WELL HYDRAULIC HEAD REFERENCE DEPTH
--
-- WELL  HYDREF
-- NAME  DEPTH
WHEDREFD
OP01    150.0
OP02    175.0
OP03    150.0
/
```

Here, well OP01 and OP03 have their hydraulic head reference depths set to 150.0 ft and well OP02's hydraulic head reference depth is set to 175.0 ft.

12.3.290 WHISTCTL - DEFINE WELL HISTORICAL TARGET PHASE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WHISTCTL keyword changes the target control for wells declared as history match wells via the WCONHIST keyword in the SCHEDULE section. The target phase is set on the WCONHIST keyword and WHISTCTL overrides this value for all subsequent entries on the WCONHIST keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	TARGET	<p>A defined character string that sets the observed target production phase for the well, all the other phases are calculated unconstrained and used for reporting only. The simulator will attempt to meet the TARGET based on the phase rate stated in items (4) to (6) and (10) on the WCONHIST keyword.</p> <p>TARGET should be set to one of the following character strings:</p> <ul style="list-style-type: none">1) ORAT: the target is set to the surface oil production rate as defined by item (4) on the WCONHIST keyword.2) WRAT: the target is set to the surface water production rate as defined by item (5) on the WCONHIST keyword.3) GRAT: the target is set to the surface gas production rate as defined by item (6) on the WCONHIST keyword.4) LRAT: the target is set to the surface liquid (oil plus water) production rate and is calculated by the simulator using (4) and (5) on the WCONHIST keyword.5) RESV: the target is set to the in situ reservoir volume rate and is calculated by the simulator using items (4), (5) and (6) on the WCONHIST keyword.6) BHP: the target rate is set to the bottom-hole pressure as defined by item (10) on the WCONHIST keyword.7) NONE: revert back to the TARGET control mode on the WCONHIST keyword. <p>The TARGET control mode defined on this keyword resets the TARGET control mode on the WCONHIST keyword in the SCHEDULE section, from the time the WHISTCNTL is invoked, thus avoiding changing the control model on all subsequent WCONHIST keywords.</p>			None
2	END	<p>A defined character string that defines if the simulation should terminate if the well has switch to BHP control by the simulator, and should be set to one of the following character strings:</p> <ul style="list-style-type: none">1) NO: no action is taken and the run continues.2) YES: terminate the run at the next report time step. <p>Wells set to BHP control via the WCONHIST or WHISCTL keywords are ignored. Only END equal to NO is currently supported in OPM Flow.</p>			NO

Notes:

- 1) The keyword is terminated by a “/”.

Table 12.93: WHISTCTL Keyword Description

History matching wells are handled differently than ordinary wells that use the WCONPROD keyword for controlling their production targets and constraints. However, the wells still need to be defined like ordinary

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

production wells using the WELSPECS keyword in the SCHEDULE section. History matching well are converted to ordinary wells by restating a well's control mode using either the WCONPROD or WELTARG keywords in the SCHEDULE section.

See also the WCONHIST and WCONINJH keywords that are used to define the historical production and injection data. All the aforementioned keywords are described in the SCHEDULE section.

Example

The example below shows the observed gas rates for the OP01 oil producer for the first quarter of 2000.

```

-----
-- 01 JAN 2000 START OF SCHEDULE SECTION
-----
--
--      DEFINE WELL HISTORICAL TARGET PHASE
--
--      CNTL      BHP
--      MODE      STOP
WHISTCTL
--      RESV      NO
--
--      WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL  OIL   WAT   GAS   VFP   VFP   THP   BHP
-- NAME  SHUT   MODE  RATE  RATE  RATE  TABLE ALFQ  PRES PRES
WCONHIST
OP01    OPEN   ORAT   15.5E3  100.0  1550   10     1*    900.0  1*    /
/
DATES
01 FEB 2000 /
/
--
--      WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL  OIL   WAT   GAS   VFP   VFP   THP   BHP
-- NAME  SHUT   MODE  RATE  RATE  RATE  TABLE ALFQ  PRES PRES
WCONHIST
OP01    OPEN   ORAT   15.2E3  150.0  1520   1*     1*    875.0  3250.0 /
/
DATES
01 MAR 2000 /
/
--
--      WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL  OIL   WAT   GAS   VFP   VFP   THP   BHP
-- NAME  SHUT   MODE  RATE  RATE  RATE  TABLE ALFQ  PRES PRES
WCONHIST
OP01    OPEN   ORAT   15.0E3  200.0  1500   1*     1*    850.0  1*    /
/

```

From January 1, 2000 the WCONHIST keyword defines well OP01, which is open and is on oil rate control, to produce 15,500 stb/d oil, with the observed rates of 100 stb/d of water and 15.5 MMscf/d of gas. However the WHISTCTL keyword resets the target control to reservoir voidage from January 1, 2000 and onward. This is useful in initial history matching runs to get a “reasonable” pressure match, by ensuring that the total reservoir withdrawals are correct, although the individual phase withdrawals will not match. Once a reasonable pressure match is achieved for the reservoir then one can reset TARGET to the sales phase, OIL or GAS, and continue with the matching of all the phases.

12.3.291 WHTEMP – DEFINE WELL TUBING HEAD TEMPERATURE PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, WHTEMP, sets the parameters for the Tubing Head Temperature calculation, which can either be a constant value, or from a table lookup using a VFPPROD table, via the VFPPROD keyword in the SCHEDULE section, containing tubing head temperature data.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the data is being defined.			None
2		A positive integer greater than or equal to zero that references the production vertical lift performance table (VFPPROD) containing the tubing head temperature data for the well. Note a well must have both a VFPPROD pressure and VFPPROD temperature table.			None
		dimensionless	dimensionless	dimensionless	
3	TEMP	A real positive value greater than zero that defines a constant tubing head temperature for a production well.			None
		°F	°C	°C	

Notes:

1) Note either VFPTAB or TEMP must be supplies, that is one can specify both.

2) The keyword is followed by any number records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.94: WHTEMP Keyword Description

See also the VFPPROD keyword in the SCHEDULE section.

Example

The following example defines three wells tubing head temperature parameters using the WHTEMP keyword

```
--
--      DEFINE WELL TUBING HEAD TEMPERATURE PARAMETERS
--
-- WELL  VFP    TUB
-- NAME  TABLE TEMP
WHTEMP
OP01    5                               /
OP02    1*      150                      /
OP03    5                               /
/
```

Here, well OP01 and OP03 used VFPPROD table number five to calculate the tubing head temperature, and well OP02's uses a constant 150° tubing head temperature.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.292 WINJMULT – DEFINE WELL PRESSURE DEPENDENT INJECTIVITY MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WINJMULT keyword defines pressure dependent injectivity multipliers for injection wells and can be used to approximate the increase or decrease in a well's injectivity due to hydraulic fracturing in water injection wells. Only injection wells are processed by this keyword, even if production wells have been entered by the keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	FRACPRES	FRACPRES is the fracture opening pressure ($P_{fracture}$) used in equation 12.34.			None
		psia	barsa	atma	
3	ALPHA	ALPHA is the multiplier applied to the selected connections, α in equation 12.34.			Defined
		1/psia 0.0	1/barsa 0.0	1/atma 0.0	
4	OPTION	<p>A defined character string that determines how the data on this keyword is applied, and should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) CIRR: This option makes the injectivity multiplier (ALPHA) as applied to the selected connections (I, J, K) is <u>irreversible</u>, and the pressure at the <u>connection's sand face</u> (P_{wbhp}) is used in equation 12.34, instead of the well's flowing bottom-hole pressure. This option means that even if the pressures in the wellbore, and therefore the sand face pressures, later declines, injectivity remains unchanged for <u>all</u> the connections. 2) CREV: Again, the injectivity multiplier (ALPHA) as applied to the selected connections (I, J, K) is <u>reversible</u>, and the pressure at the <u>connection's sand face</u> is used in equation 12.34. The reversibility of this option means that if the pressures in the wellbore, and therefore the sand face pressures, later declines, injectivity will also decline for <u>all</u> the connections. 3) WREV: Here, the wells' <u>flowing bottom-hole pressure</u> (P_{wbhp}) is used in 12.34, instead of the pressure at the connection's sand face. ALPHA is applied to <u>all</u> connections in the well and therefore the connections stipulated by (I, J, K) are ignored. The reversibility of this option means that if the pressures in the wellbore, later declines, injectivity will also decline for <u>all</u> the connections. 			WREV

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	I	An integer value less than or equal to NX that defines the connection location in the I-direction. If set to zero, a negative value, or defaulted with I* then all connections in the I-direction will be multiplied by ALPHA, depending on the selected OPTION value.			I*
6	J	An integer value less than or equal to NY that defines the connection location in the J-direction. If set to zero, a negative value, or defaulted with I* then all connections in the J-direction will be multiplied by ALPHA, depending on the selected OPTION value.			I*
7	K	An integer value less than or equal to NZ that defines the connection location in the K-direction. If set to zero, a negative value, or defaulted with I* then all connections in the K-direction will be multiplied by ALPHA, depending on the selected OPTION value.			I*
Notes: 1) The keyword is followed by any number of records. 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.95:WINJMULT Keyword Description

The methodology for applying the well pressure dependent injectivity multipliers is outlined in equation 12.34.

$$\begin{aligned}
 \text{Multiplier} &= 1.0 + \alpha (P_{WBHP} - P_{fracture}) && \text{for } P_{WBHP} > P_{fracture} \\
 \text{Multiplier} &= 1.0 && \text{for } P_{WBHP} < P_{fracture}
 \end{aligned}
 \tag{12.34}$$

where:

- Multiplier = the resulting multiplier to be applied to the selected connections.
- α = the ALPHA multiplier in Table 12.95, that is applied to the selected connections.
- P_{WBHP} = either the well's current flowing bottom-hole pressure, or the selected individual connection's sand face pressure.
- $P_{fracture}$ = the effective fracture opening pressure, FRACPRES in Table 12.95.

The equation is applied every time there is a calculation to determine a well's flow rate, this results in the calculated mobility rates being scaled up by the *Multiplier* value in equation 12.34. Note also that since the scaling is performed on the connection fluid mobility values, then the reported connection transmissibilities on the print file etc., remain unchanged.

Note

If all the connection parameters (I, J, K) are defaulted, or OPTION is set equal to WREV, then ALPHA is applied to all connections in the well.

If any of the connection parameters (I, J, K) have positive values and OPTION is set equal to CIRR or CREV, then ALPHA is applied to the selected connections as determined by the (I, J, K) parameters.

Example

The example below show the WINJMULT keyword for three water injection wells.

```
--
--      DEFINE WELL CONNECTION MULTIPLIERS
--
-- WELL  FRAC  MULT   FRAC  --LOCATION--
-- NAME  PRES  VALUE  OPTN   I    J    K
WINJMULT
WI01    4200  0.0250  1*     1*  1*  1*      /
WI02    4250  0.0025  CIRR   1*  1* 145      /
WI02    4250  0.0025  CIRR   1*  1* 146      /
WI02    4250  0.0025  CIRR   1*  1* 147      /
WI03    4400  0.0055  CREV   1*  1* 160      /
WI03    4400  0.0055  CREV   1*  1* 165      /
/
```

The first well, WI01, uses the default value for OPTION, that is WREV, which means that the 0.0250 multiplier will be applied to all the connections in the well and the well's bottom-hole pressure is used in the calculation. In this case the process is reversible. The second well, WI02, applies the multiplier 0.0025 to all connections in layers 145 to 147 using the sand face pressures in the calculation, and the process is irreversible. Finally for well WI03, the multiplier is applied to all connections in layers 160 and 165 using the sand face pressures in the calculation, and in this case the process is reversible.

12.3.293 WINJTEMP – DEFINE INJECTION FLUID THERMAL PROPERTIES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WINJTEMP defines the injection fluid thermal properties for when the thermal option has been activated by the THERMAL keywords in the RUNSPEC. Only water and gas injection is supported.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well injection fluid thermal properties are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	STEAMQAL	STEAMQAL is a real positive value greater than or equal to zero and less than or equal to one that defines the steam quality of the injected fluid for the defined well. This parameter should be defaulted using I* as STEAMQUAL is not used by OPM FLOW, as only water and gas injection is supported. This data is used by the commercial simulator's THERMAL option and is not supported by OPM Flow's THERMAL option.			I*
		dimensionless	dimensionless	dimensionless	
3	TEMP	TEMP is a real positive value that defines the temperature of the injected fluid for the defined well.			None
		°F	°C	°C	
4	PRES	PRES is a real positive value that defines the pressure of the injected fluid for the defined well.			None
		psia	barsa	atma	
5	ENTHALPY	ENTHALPY is a real positive value that defines the specific enthalpy of the injected fluid for the defined well. This is data is used by the commercial simulator's THERMAL option and is not supported by OPM Flow's THERMAL option.			None
		Btu/lbs-M	kJ/kg-M	J/gm-M	
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.96: WINJTEMP Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Example

The following example shows the WINJTEMP keyword for when OPM Flow's temperature option has been activated by the THERMAL keyword in the RUNSPEC section.

```
--
--      INJECTION FLUID THERMAL PROPERTIES
--
-- WELL  STEAM  INJ    INJ    SPEC
-- NAME  QUAL   TEMP   PRES   ENTH
WINJTEMP
WI01    1*     68.0   220.0   1*      /
WI02    1*     70.0   230.0   1*      /
/
```

Here the water injection fluid's temperature and pressure, in field units, for two water injections well are defined. Notice that both the steam quality and the specific enthalpy of the injected fluid for the defined wells are defaulted (or skipped), as OPM Flow's THERMAL option does not support this data.

12.3.294 WLIFT – DEFINE WELL RE-TUBING, THP AND LIFT SWITCHING WORKOVER OPERATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WLIFT defines the automatic workovers parameters for changing out wellbore tubing, changing the THP limit (for example switching from the high stage pressure separator to the low stage pressure separator), or changing the artificial lift parameters, for wells.

OPM Flow does not have this feature and hence this keyword is ignored by OPM Flow and the WLIFT keyword has no effect on the simulation.

12.3.295 WLIFTOPT – DEFINE WELL GAS LIFT OPTIMIZATION PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WLIFTOPT defines which wells should use the Gas Lift Optimization facility in order to maximize oil production, as well as defining the associated gas lift optimization parameters for a given well. The keyword can also be used to switch off gas lift optimization for a well. Gas lift optimization is invoked via the LIFTOPT keyword in the SCHEDULE section. Note that the LIFTOPT keyword should precede the WLIFTOPT keyword in the SCHEDULE section in order to activate the gas lift optimization facility.

Wells are allocated to groups when the wells are specified by the WELSPCES keyword in the SCHEDULE section. Wells defined to be under group control will have their production rates and gas lift gas constraints (GLIFTOPT keyword in the SCHEDULE section) controlled by the group to which they belong, in addition to any well constraints defined for the wells, including the gas optimization parameters on the WLIFTOPT keyword.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well gas lift optimization parameters are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPCES keyword in the SCHEDULE section, otherwise an error may occur.			None
2	OPTLIFT	A defined character string that sets if a well's gas lift gas rate should be calculated by the gas lift optimization facility or not, and should be set to: 1) NO: In this case the gas lift gas is a constant determined from the MXLIFT variable on this keyword, the ALQ-WELL variable on the WCONPROD keyword, or the TARGET and VALUE variables on the WELTARG keyword. 2) YES: Activates the gas lift optimization for the given well.			None
3	MXLIFT	A real value that defines the total amount of gas lift gas available for this well, multiplied by the well's efficiency factor. 1) If OPTLIFT is defined as NO then MXLIFT is considered a fix gas lift gas rate. However, if MXLIFT is defaulted (I*) then MXLIFT is unchanged from the previous entered value. 2) If OPTLIFT equals YES and MXLIFT is defaulted (I*), then MAXLIFT is taken from the largest value of the ALQ variable on the well's associated VFPPROD table. Note that the value entered here should be in the range entered in the VFPPROD table allocated to the well, otherwise errors may occur when optimizing the gas lift gas injection rate for the well.			I*
		Mscf/d	sm ³ /day	scc/hour	

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	OPTWGT	<p>OPTWGT (β_w) is real positive value that defines a weighting factor for allocating the available gas lift gas to a well. An increment of gas lift gas supply is allocated to a well based on the well's current incremental gradient multiplied by OPTWGT using the following formulae:</p> $Gradient = \left(\frac{(\beta_w \times \Delta Q_{Oil})}{(\Delta Q_{GasLift} + \beta_g \times \Delta Q_{Gas})} \right)$ <p>Where:</p> <p>β is OPTWGT, the weighting factor for the preferential allocation of lift gas,</p> <p>β is the gas production rate weighting factor,</p> <p>Δ is the increment/decrement in oil production rate,</p> <p>Δ is the increment/decrement in gas production rate, and</p> <p>Δ is the increment/decrement in gas lift gas rate</p> <p>Note by default β_g, the gas production rate weighting factor, is set to zero, and therefore the gradient equation simplifies to:</p> $Gradient = \left(\frac{(\beta_w \times \Delta Q_{Oil})}{\Delta Q_{GasLift}} \right)$ <p>OPTWGT is ignored if OPTLIFT equal NO.</p>			1.0
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	MINGAS	<p>A real value that defines the minimum amount of gas lift gas available to the well, multiplied by the well's efficiency factor. The allocation of the gas lift gas is determined by:</p> <ol style="list-style-type: none"> 1) If MINGAS is a positive value then this value is allocated to the well unless the well is unable flow with this quantity of gas lift gas. Alternatively, if the well is able to meet it's target rate without applying MINGAS, then the MINGAS rate is <u>not applied</u> to the well. 2) If MINGAS is a negative value, then the well is supplied with sufficient gas lift gas to allow the well to flow, subject to the maximum allowed gas lift quantity, as per MXLIFT variable on this keyword. The negative value itself is not used in any calculations. 3) If there is insufficient available gas lift gas, the wells are assigned values of MINGAS based on the decreasing order of their weighting factors as calculated per OPTWGT variable. 4) Wells belonging to groups that can meet their production targets without gas lift, will have their MINGAS values <u>not applied</u>, that is no gas lift is applied. The exception is that if OPTWGT has been set to a value greater than or equal to one, then the well will use the MINGAS value for it's gas lift gas, even if the group's target can be satisfied without gas lift. However, if both the well's group and the well can meet their production targets, then MINGAS will not be applied. <p>This parameter is ignored if OPTLIFT is defined as NO.</p>			0.0
		Mscf/d	sm ³ /day	scc/hour	
6	OPTGAS	<p>OPTGAS is real positive value that defines the incremental gas weighting factor for allocating the available gas lift gas to a well. An increment of gas lift gas supply is allocated to a well based on the well's current incremental gradient as described by the definition of the OPTWGT (β_g) variable above, that is by the following formulae:</p> $Gradient = \left(\frac{(\beta_w \times \Delta Q_{Oil})}{(\Delta Q_{GasLift} + \beta_g \times \Delta Q_{Gas})} \right)$ <p>See OPTWGT for a definition of the variables in the equation.</p> <p>This parameter is ignored if OPTLIFT is defined as NO.</p>			0.0
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
7	OPTLIMIT	<p>A defined character string that defines if additional gas lift gas should be applied to the well, if the well's group gas target has been satisfied but the group's oil rate limit has not been achieved.</p> <p>1) NO: Additional gas lift gas is <u>not</u> available for the given well.</p> <p>2) YES: Additional gas lift gas <u>is available</u> for the given well. In cases where a well receiving additional gas lift may cause the well's group to exceed the group's gas target, normally the well will not be assigned the additional gas lift gas. However, if OPTLIMIT is set to YES, then this constraint is removed. This results in the gas lift optimization procedure continuing to maximize the oil rate, subject to available constraints. However, upon completion of the optimization process, applying the group controls may negate the gain from the gas lift optimization process.</p> <p>This parameter is ignored if OPTLIFT is defined as NO.</p>			NO
Notes:					
1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.97: WLIFTOPT Keyword Description

See also the LIFTOPT keyword to activate gas lift optimization, the GLIFTOPT keyword to define the group gas lift optimization controls, GRUPTREE keyword to define the hierarchy of the groups below the FIELD level, the WCONPROD and WCONINJE keywords to define a well's production and injection rate targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example first switches on gas lift optimization via the LIFTOPT keyword and then defines the artificial lift constraints for PLAT-A, using the GLIFTOPT keyword and sets the well gas lift parameters using the WLIFTOPT keyword.

```
--      ACTIVATE GAS LIFT OPTIMIZATION AND PARAMETERS
--
-- INCR   INCR   TSTEP   NEWTON
-- GAS    OIL    INTVAL   OPTN
LIFTOPT
12.5E3    5E-3    0.0      YES                               /
/
--
--      GROUP GAS LIFT OPTIMIZATION CONSTRAINTS
--
-- GRUP   MAX      MAX
-- NAME   GAS ALQ   TOTAL GAS
GLIFTOPT
PLAT-A    200E3    1*                               /
/
--
--      WELL GAS LIFT OPTIMIZATION PARAMETERS
--
-- WELL   OPTN   MAX   WEIGHT   MIN   GAS   OPTN
-- NAME   LIFT   LIFT   FACTOR   LIFT   FACTOR  LIMIT
WLIFTOPT
OP01     YES    150E3  1.01   -1.0                               /
OP02     YES    150E3  1.01   -1.0                               /
OP03     YES    150E3  1.01   -1.0                               /
OP04     YES    150E3  1.01   -1.0                               /
OP05     YES    150E3  1.01   -1.0                               /
/
```

Here the LIFTOPT keyword defines the maximum incremental gas lift gas quantity to be $12.5 \times 10^3 \text{ m}^3$, the minimum incremental oil gain per m^3 of gas lift gas is set to $5.0 \times 10^{-3} \text{ m}^3$, the time step interval is set to zero to perform the gas optimization every time step, and finally the gas lift optimization will be performed NUPCOL Newtonian iterations for the time step.

The GLIFTOPT keyword sets the maximum amount of gas lift gas for PLAT-A to 200,000 m^3 and there is no maximum limit for the total maximum amount of gas that the group can process. In addition, WLIFTOPT sets all five wells to have gas lift gas optimization implemented with a maximum gas lift gas value of 150,000 m^3 per well, with equal weighting factors and all wells are supplied with sufficient gas lift gas to allow the wells to flow, (minimum lift set to a negative value) subject to the maximum allowed gas lift quantity for the well (150,000 m^3).

12.3.296 WLIMTOL – DEFINE WELL CONSTRAINT TOLERANCE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WLIMTOL keyword defines the tolerance to be used for various constraints applied to connections, completions (if connections have been lumped via the COMPLUMP keyword in the SCHEDULE section), wells, and groups, including the field group. See also the GCONTOL keyword in the SCHEDULE section that sets the tolerance parameters for groups.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.297 WLIST – DEFINE WELL LISTS (STATIC)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

WLIST declares a group of wells to belong to a named static well list. Wells in a named well list are treated as a group of wells for which the standard well keywords can be applied. For example, instead of repeating a well keyword for each well, the keyword only needs to have the named well list instead, for the action to be applied to all wells in the named well list. In general any well keyword that allows well name roots as a well name, for example, PROD*, can use a named well list.

No.	Name	Description	Default
1	WLIST	A character string of up to eight characters in length, enclosed in quotes, that defines the well list name for the WELLNAMES declared by this record. Note the first character must be asterisk ("*") and the second character must be a letter; for example, *PROD.	None
2	ACTION	A defined character string that determines how the WELLNAMES should be handled with respect to the named well list (WLIST). ACTION should be set to one of the following: 1) ADD: Add the WELLNAMES to an existing WLIST. 2) DEL; Delete WELLNAMES from an existing WLIST. 3) MOV: WELLNAMES from another existing named well list and ADD them to WLIST. 4) NEW: Define a new named well list and add the WELLNAMES to WLIST.	
3-52	WELNAMES	A character string of up to eight characters in length that defines the well name that belongs to the named well list (WLIST). A total of 50 well names can be added to WLIST at a time. If additional wells are needed to added then use the ADD option of ACTION to add additional wells. Well names roots may all be used in WELLNAMES as long as they are enclosed in quotes and end with an asterisk ("*"). In this case all wells that match the specification will be added to the list. For example, wells named OP01, OP02 and OP03, can be added as group by using "OP*" as the well name. Note that the well names must have been declared previously using the WELSPecs keyword in the SCHEDULE section, otherwise an error may occur	
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".			

Table 12.98:WLIST Keyword Description

Note that named well list production data in the SUMMARY file is well dependent, that is, if the wells belonging to a named well list is changed through time, the SUMMARY data will be based on the wells in the named well list group at the end of the run. Thus, if there are three wells in a named well list called *PROD1 at the beginning of a run; OP01, OP02 and OP03, and during the run OP03 is moved to a well named list called *PROD2, then the SUMMARY data for *PROD1 will only contain the production data for wells OP01 and OP02 and *PROD2 will only contain the SUMMARY data for OP03 from the start to the end of the run.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

The following example defines two named well lists using the WLIST keyword.

```
--
--          WELL LIST SPECIFICATION
--
-- LIST      OPER      WELL NAME LIST
-- NAME
WLIST
'*BLK-1'    NEW      WEL-01M WEL-02M WEL-03M WEL-04M WEL-05M WEL-06M WEL-07M /
'*BLK-1'    ADD      WEL-08M WEL-09M WEL-10M WEL-11M WEL-12M WEL-13M WEL-14M /
'*BLK-1'    ADD      WEL-15M WEL-16M WEL-17M WEL-18M WEL-19M WEL-20M WEL-23M /
'*BLK-1'    ADD      WEL-24M WEL-25M WEL-26M WEL-28M /

'*BLK-2'    NEW      WEL-03U WEL-05U WEL-06U WEL-10U WEL-11U WEL-13U WEL-14U /
'*BLK-2'    ADD      WEL-15U WEL-16U WEL-17U WEL-18U WEL-19U WEL-25U WEL-27U /
/
DATES
      1  JAN   2020  /
/
--
--          DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
-- WELL WELL  --LOCATION--  COMPLETION
-- NAME STAT   I   J   K   FIRST LAST
WEOPEN
'*BLK-1' OPEN           0   0   0           0   0 /
'*BLK-1' OPEN           0   0   0           0   0 /
/
DATES
      1  JAN   2021  /
      1  JUL   2021  /
      1  OCT   2021  /
/
--
--          DEFINE WELL AND WELL CONNECTIONS FLOWING STATUS
--
-- WELL WELL  --LOCATION--  COMPLETION
-- NAME STAT   I   J   K   FIRST LAST
WEOPEN
'*BLK-2' OPEN           0   0   0           0   0 /
'*BLK-2' OPEN           0   0   0           0   0 /
/
```

In this example the wells in named well list "*BLK-1" are opened on January 1, 2020 and wells in named well list "*BLK-2" are opened October 1, 2021.

12.3.298 WLISTARG – MODIFY WELL LIST TARGET AND CONSTRAINT VALUES (STATIC)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WLISTARG keyword modifies the target and constraint values of both rates and pressures for wells previously defined in a well list by the WLIST or WLISTNAM keywords. WLISTARG is similar to the WELTARG keyword in it that allows for modifying targets and constraints without having to define all the variables on the well control keywords: WCONPROD, WCONHIST, WCONINJE, or WCONINJH keywords. Variables not changed by the WLISTARG keyword remain the same as those previously entered via the well control keywords or previously entered WLISTARG keywords. Note that the well must still be initially be fully defined using the WCONPROD or WCONINJE keywords. All the aforementioned keywords are described in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WLIST	A character string of up to eight characters in length, enclosed in quotes, that defines the well list name declared by the WLIST keyword. Note the first character must be asterisk ("*") and the second character must be a letter, for example, *PROD.			None
2	TARGET	A defined character string that sets the item to be changed for the well the value of the item is set by item (3). <ol style="list-style-type: none"> 1) ORAT: reset the surface oil production rate value as defined by item (3). 2) WRAT: reset the surface water production rate value as defined by item (3). 3) GRAT: reset the surface gas production rate value as defined by item (3). 4) LRAT: reset the surface liquid (oil plus water) production rate value as defined by (3). 5) RESV: reset the in situ reservoir volume rate value as defined by (3). 6) BHP: reset the bottom-hole pressure value as defined by item (3). 7) THP: reset the tubing head pressure value for the well as defined by item (3). 8) VFP: reset the vertical lift performance table number as defined by (3). 9) LIFT: reset the artificial lift quantity for use with vertical lift performance tables. 10) GUID: reset the guide rate value for wells operating under group control. Note TARGET only defines the variable to be changed, it does not change how a well is controlled. For example, if a well is operating on ORAT control, as defined by the previously entered WCONPROD keyword, entering TARGET equal to LRAT with a value, changes the liquid constraint but the well still remains on ORAT control. Use the WELCNTL keyword in the SCHEDULE section to change the control mode of a well.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	VALUE	A real positive vector of values that defines the value of the variable declared by TARGET for all the wells contained in WLIST. For example if there are four wells in WLIST then there must four real numbers for VALUE. The vector should be terminated by a "/" as indicated in the notes below.			None
	Liquid				
	Gas				
	Res Vol	stb/d	sm ³ /day	scc/hour	
	Pressure	Mscf/d	sm ³ /day	scc/hour	
	VFP	rb/d	rm ³ /day	rcc/hour	
	LIFT	psia	barsa	atma	
		dimensionless	dimensionless	dimensionless	
		same as	same as	same as	
		VFPPROD or VFPIJ	VFPPROD or VFPIJ	VFPPROD or VFPIJ	
Notes: 1) The keyword is followed by any number records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.99: WLISTARG Keyword Description

If a well is currently a history matching well, then WLISELTARG should only be used to change a wells bottom-hole pressure limit, vertical flow performance table number or the artificial lift quantity.

See also the WELCNTL keyword, in the SCHEDULE section that can be used to reset the control mode, as well as a well's target and constraints of both rates and pressures.

Example

The following example defines two named well lists using the WLIST keyword.

```
--
--      WELL LIST SPECIFICATION
--
-- LIST  OPER      WELL NAME LIST
-- NAME
WLIST
'*BLK-1' NEW      WEL-01M WEL-02M WEL-03M /
'*BLK-2' NEW      WEL-03U WEL-05U WEL-06U WEL-10U /
/
--
--      WELL PRODUCTION AND INJECTION TARGETS
--
-- WELL WELL  TARGET
-- NAME TARG  VALUE
WLISTARG
'*BLK-1' ORAT  2000.0  2000.00  2000.0 /
'*BLK-2' ORAT  3000.0  3500.00  4000.0  2000.0 /
/
```

The wells in the '*BLK-1' well list are all given an oil rate of 2,000 stb/d and wells in the '*BLK-2' well list are given rates of 3,000, 3,500, 4,000 and 2,000 stb/d.

12.3.299 WLISTNAM – DEFINE WELL LISTS (WLISTARG)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

WLISTNAM declares a group of wells to belong to a named WLISTARG well list for use with the WLISTARG keyword. Only the WLISTARG keyword can be used with this type of well list, and therefore it is better to use the WLIST keyword instead, that defines a static well list but offers more flexibility than a WLISTNAM well list.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description	Default
I	WLIST	A character string of up to eight characters in length, enclosed in quotes, that defines the well list name for the WELLNAMES declared by this record. Note the first character must be asterisk ("*") and the second character must be a letter, for example, *PROD.	None
2-51	WELNAMES	A character string of up to eight characters in length that defines the well name that belongs to the named well list (WLIST). A total of 50 well names can be added to WLISTNAM at a time. If the first well name in the list is the default value ("*I"), then the list is first cleared of all wells, before adding the subsequent wells in WELLNAMES. Well names roots may all be used in WELLNAMES as long as they are enclosed in quotes and end with an asterisk ("*"). In this case all wells that match the specification will be added to the list. For example, wells named OP01, OP02 and OP03, can be added as group by using "OP*" as the well name. Note that the well names must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.	I*
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".			

Table 12.100:WLISTNAM Keyword Description

Note that named well list production data in the SUMMARY file is well dependent, that is, if the wells belonging to a named well list is changed through time, the SUMMARY data will be based on the wells in the named well list group at the end of the run. Thus, if there are three wells in a named well list called *PROD1 at the beginning of a run; OP01, OP02 and OP03, and during the run OP03 is moved to a well named list called *PROD2, then the SUMMARY data for *PROD1 will only contain the production data for wells OP01 and OP02 and *PROD2 will only contain the SUMMARY data for OP03 from the start to the end of the run.

Example

The following example defines two named well lists using the WLISTNAM keyword.

```
--
--      WELL LIST SPECIFICATION
--
-- LIST      WELL NAME LIST
-- NAME
WLISTNAM
'*BLK-1'    WEL-01M WEL-02M WEL-03M WEL-04M WEL-05M WEL-06M WEL-07M      /
'*BLK-1'    WEL-08M WEL-09M WEL-10M WEL-11M WEL-12M WEL-13M WEL-14M      /
'*BLK-1'    WEL-15M WEL-16M WEL-17M WEL-18M WEL-19M WEL-20M WEL-23M      /
'*BLK-1'    WEL-24M WEL-25M WEL-26M WEL-28M                                /

'*BLK-2'    1*      WEL-03U WEL-05U WEL-06U WEL-10U WEL-11U WEL-13U WEL-14U  /
'*BLK-2'    WEL-15U WEL-16U WEL-17U WEL-18U WEL-19U WEL-25U WEL-27U      /
/
```

Here well list '*BLK-1' contains 28 wells, that is wells WEL-01M to WEL-28M. For the '*BLK-2' well list all wells are first deleted due to the "1*" default value and then wells WEL-03U to WEL-27U are added to the list.

12.3.300 WMICP – DEFINE WATER INJECTION WELL'S MICROBIAL, OXYGEN, AND UREA CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WMICP keyword defines a water injection well's microbial, growth, and cementation injection stream solutions, where the rate-limiting components are suspended microbes, oxygen, and urea concentrations respectively. These concentrations are used when the MICP keyword in the RUNSPEC section has been used to activate OPM Flow's Microbially Induced Calcite Precipitation model. See Landa-Marbán et al²⁰⁴ and ²⁰⁵ for a description of the model.

Note the keyword should only be used for wells declared as water injection wells via the WCONINJE keyword in the RUNSPRC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	MICRCON	MICRCON is a real positive value that defines the microbial concentration of the well's injection stream.			None
		lb/stb	kg/sm ³	gm/scc	
3	OXYGCON	A real positive value that defines the oxygen concentration of the well's injection stream.			None
		lb/stb	kg/sm ³	gm/scc	
4	UREACON	UREACON is a real positive value that defines the urea concentration of the well's injection stream.			None
		lb/stb	kg/sm ³	gm/scc	

Notes:
1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.101: WMICP Keyword Description

Water injection wells that are not declared via this keyword have their concentrations defaulted to zero.

²⁰⁴ Landa-Marbán, D., Tveit, S., Kumar, K., Gasda, S.E., 2021. Practical approaches to study microbially induced calcite precipitation at the eld scale. *Int. J. Greenh. Gas Control* 106, 103256. <https://doi.org/10.1016/j.jggc.2021.103256>.

²⁰⁵ Landa-Marbán, D., Kumar, K., Tveit, S., Gasda, S.E., 2021. Numerical studies of CO₂ leakage remediation by micp-based plugging technology. In: Røkke, N.A. and Knuutila, H.K. (Eds) *Short Papers from the 11th International Trondheim CCS conference*, ISBN: 978-82-536-1714-5, 284-290.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

```
--
--      DEFINE WATER INJECTION WELL MICROBIAL, OXYGEN, AND UREA CONCENTRATIONS
--
-- WELL  MICROBIAL  OXYGEN  UREA
-- NAME  MICRCON    OXYGCON  UREA CON
--
WMICP
WI01    0.01
WI02    1*          0.04
WI03    1*          1*          60.0
WI04    1*          0.04          60.0
/
```

Here the microbial concentration for well WI01 is set to 0.01, the oxygen concentration for well WI02 is set to 0.04, the urea concentration for well WI03 is set to 60, and the oxygen and urea concentrations for well WI04 are set to 0.04 and 60 respectively.

12.3.301 WNETCTRL – DEFINE WELL CONTROL FOR NETWORK CONTROL OPTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WNETCNTL keyword sets a well's control mode that should remain fixed after each network balancing calculation, for when the either the Standard Network or the Extended Network options have been activated, and the well is part of a network. The keyword allows for a well's Tubing Head Pressure ("THP"), oil, gas, liquid, or water rate to be selected as fixed after each network balance calculation. Normally this should be the THP, and if the keyword is absent from the input deck then THP will be used as the default value. The Standard Network option is invoked if the GRUPTREE, GRUPNET, GNETINJE, GNETPUMP, etc. series of keywords have been used in the SCHEDULE section. Whereas, the Extended Network option is activated by the NETWORK keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.302 WNETDP – DEFINE WELL THP TO NETWORK PRESSURE DROP

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WNETDP keyword allows for a constant pressure drop between a well's Tubing Head Pressure ("THP") and the well's connecting network node, for when the either the Standard Network or the Extended Network options have been activated, and the well is part of a network. For production wells in a production network, WNETDP is added to the well's connecting network node pressure to arrive at the well's THP value. Whereas for injection wells in an injection network, WNETDP is subtracted from the well's connecting network node pressure to arrive at the well's THP value. The Standard Network option is invoked if the GRUPTREE, GRUPNET, GNETINJE, GNETPUMP, etc. series of keywords have been used in the SCHEDULE section. The Extended Network option is activated by the NETWORK keyword in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.303 WORKLIM – DEFINE WELL WORKOVER TIME

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WORKLIM sets the numbers of days taken to complete a workover.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.304 WORKTHP – DEFINE WELL WORKOVER OPTIONS FOR THP KILLED WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WORKTHP keyword defines workover options for when a well dies, that is unable to produce at the current operating conditions, when under Tubing Head Pressure (“THP”) control. For example, if a well is producing to the high pressure separator and therefore has a high THP constraint, then the WORKTHP keyword can be used to switch the well to the lower pressure separator via re-setting the THP constraint.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.305 WPAVE – WELL BLOCK AVERAGE PRESSURE CALCULATION PARAMETERS FOR ALL WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WPAVE keyword defines the method and parameters for calculating a well's block average pressures for all wells in the model. The resulting average pressure can be written out to the SUMMARY and RSM files in order to compared with field observed data via the WBP, WBP4, WBP5 and WBP9 vectors in the SUMMARY section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WPAVE1	<p>A real dimensionless value that defines the weighting factor between the inner block and the surrounding blocks used to calculate the connection factor weighted average pressures.</p> <p>If WPAVE1 is greater than or equal to zero and less than or equal to one, then the average pressures are calculate based on the connection factors. A value of zero indicates only the surrounding blocks should be used in the calculation and a value of one indicates only the inner blocks.</p> <p>If WPAVE1 is equal to zero, then average pressure is calculate based on the pore volumes of the blocks.</p>			0.5
2	WPAVE2	<p>A real dimensionless value greater than or equal to zero and less than or equal to one, that defines the weighting factor between the connection weighted average pressures and the pore volume weighted average pressures.</p> <p>If WPAVE2 is equal to one, then the average pressures are calculate based only using the connection factor calculated pressures.</p> <p>If WPAVE2 is equal to zero, then average pressures are calculate based on only using the pore volumes calculated pressures.</p>			1.0
3	WPAVE3	<p>A defined character string that determines how the hydrostatic head calculation is performed in correcting the pressures to the BHP reference depth on the WELSPECS or WPAVEDEP keywords in the SCHEDULE section. WPAVE3 should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) WELL: the hydrostatic head is calculated using the density of the fluid in the wellbore at the well connections. 2) RES: he hydrostatic head is calculated using the density of the fluid in the reservoir with well connections and averaged over the connections. 3) NONE: no hydrostatic correction is applied to the pressures. 			WELL

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	WPAVE4	<p>A defined character string that determines which connections should be used in the calculations, WPAVE4 should be set to one of the following character strings:</p> <ul style="list-style-type: none">1) OPEN: only open connections and associated grid blocks should be used in the calculations. This option may result in pressure discontinuities if connections are opened and closed during the run.2) ALL: all currently defined open and closed connections and associated grid blocks are used in the calculations. The pressure discontinuities issue mentioned above can be avoided with this option and defining all the well connections for a well at the beginning of the run.			OPEN
<p>Notes:</p> <ul style="list-style-type: none">1) The keyword should be terminated by a “/”.					

Table 12.102:WPAVE Keyword Description

The keyword is not applicable and should not be used with radial and spider grid geometries.

See also the WELSPECS keyword that defines a well and a well's bottom-hole pressure reference depth, the WPAVEDEP keyword that also defines a well's bottom-hole pressure reference depth, and the COMPDAT keyword to define a well's connections. All the aforementioned keywords are described in the SCHEDULE section.

Examples

The following example defines the default well block average pressure calculation parameters

```
--
--      DEFINE WELL BLOCK AVERAGE PRESSURE CALCULATION PARAMETERS
--
--      INNER  PORV  WELL  OPEN
--      OUTER  CONN  RES   ALL
WPAVE
      0.5      1.0      WELL  ALL
```

And the next example shows the parameters used in the Norne model.

```
--
--      DEFINE WELL BLOCK AVERAGE PRESSURE CALCULATION PARAMETERS
--
--      INNER  PORV  WELL  OPEN
--      OUTER  CONN  RES   ALL
WPAVE
      1*      0.0      WELL  ALL
```

Here only pore volume weighting is used instead of connection weighting.

12.3.306 WPAVEDEP – DEFINE WELL REFERENCE DEPTH FOR PRESSURE CALCULATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WPAVEDEP keyword defines the reference depth to be used to calculate and report grid block average bottom-hole pressures for a well. This keyword can be used to override the values entered or defaulted on the WELPSPECS keyword in the SCHEDULE section. The simulator corrects the grid block calculated pressures to a well's reference depth using the hydrostatic well of the producing fluids.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well and well connection status data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	BHPREF	A real value that defines the reference depth for reporting the bottom-hole pressure for the well. Ideally this value should be set to the midpoint of the perforations as defined by the COMPDAT keyword in the SCHEDULE section. If defaulted by I* or set to a value less than or equal to zero, then the mid-point of shallowest connection defined by the COMPDAT keyword will be used.			Mid-point of shallowest connection defined by the COMPDAT keyword
		feet	m	cm	
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.103: WPAVEDEP Keyword Description

See also the WELPSPECS keyword that defines a well, the COMPDAT keyword to define a well's connections, and the WPAVE for defining how the average bottom-hole pressure should be calculated. All the aforementioned keywords are described in the SCHEDULE section.

Note

The keyword is normally used to reset a well's bottom-hole pressure depth to match the pressure gauge depth for when observed pressure is available, for example when conducting a history match for a well test, or when attempting to match static bottom-hole surveys conducted on a well.

Example

The following example illustrates how to set the bottom-hole reference depth for wells completed in different reservoirs that have different datum depths. Here it is assumed that all wells in a reservoir A have RES-A as part of their well name, and similarly for reservoirs B and C.

```
--
-- WELL SPECIFICATION DATA
--
-- WELL      GROUP      LOCATION  BHP    PHASE  DRAIN  INFLOW  SHUT  CROSS  PRESS
-- NAME      NAME        I        J    DEPTH FLUID  AREA   EQUA.  IN    FLOW   TABLE
WELSPEDS
RES-AOP1    PLATFORM    14      13    1*     OIL    1*     STD    OPEN   NO     1* /
RES-AOP2    PLATFORM    17      16    1*     OIL    1*     STD    OPEN   NO     1* /
RES-AOP3    PLATFORM    21      19    1*     OIL    1*     STD    OPEN   NO     1* /
RES-BOP4    PLATFORM    28      96    1*     OIL    1*     STD    OPEN   NO     1* /
RES-BOP5    PLATFORM    34      89    1*     OIL    1*     STD    OPEN   NO     1* /
RES-COP6    PLATFORM    128     52    1*     OIL    1*     STD    OPEN   NO     1* /
RES-COP7    PLATFORM    134     56    1*     OIL    1*     STD    OPEN   NO     1* /
RES-COP8    PLATFORM    138     50    1*     OIL    1*     STD    OPEN   NO     1* /
RES-COP9    PLATFORM    120     52    1*     OIL    1*     STD    OPEN   NO     1* /
/
--
--          DEFINE WELL REFERENCE DEPTH FOR PRESSURE CALCULATIONS
--
-- WELL  REF
-- NAME  DEPTH
-- ----  -----
WPAVEDEP
'RES-A*' 3100.0
'RES-B*' 3300.0
'RES-C*' 5909.0
/
```

In the example the all wells dedicated to RES-A will have their bottom-hole reference depth set to 3,000 ft. TVDSS, RES-B wells to 3,300 ft. TVDSS and well RES-C wells to 5909 ft. TVDSS.

12.3.307 WPIMULT – DEFINE WELL CONNECTION MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WPIMULT keyword defines a well connection multiplier factor that scales the existing well connection values. The resulting effect is to scale the well's productivity at the reporting time step the keyword is entered.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well and well connection status data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	PIMULT	A real positive value that will be used to scale the well connection factors defined by I, J, K, K1 and K2 below.			1.0
3	I	An integer less than or equal to NX that defines the connection location in the I-direction.			I*
4	J	An integer less than or equal to NY that defines the connection location in the J-direction.			I*
5	K	An integer less than or equal to NZ that defines the connection location in the K-direction.			I*
6	K1	An integer less than or equal to NZ that defines the UPPER connection location in the K-direction. If connections have been lumped into completions via the COMPLUMP keyword, then K1 refers to the completion number instead of the connection (layer) value.			I*
7	K2	An integer less than or equal to NZ that defines the LOWER connection location in the K-direction. If connections have been lumped into completions via the COMPLUMP keyword, then K2 refers to the completion number instead of the connection (layer) value.			I*
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.104: WPIMULT Keyword Description

If variables I, J, K, K1 and K2 are all defaulted with zero or I* then PIMULT is applied to all the well connections in the well. If variables I, J, K, K1 and K2 are set to zero (meaning any or all values), or a positive value then PIMULT is applied to the defined connections. The defined connections are those with the I, J, K variables in the specified location and a completion number in the range specified by K1 and K2.

Note that PIMULT variable is applied at the time the WPIMULT keyword is entered and is cumulative if there are intervening time steps between consecutive WPIMULT keywords.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

See also the WPIMULT keyword to set the productivity and injectivity index for a well by scaling the current index by a scaling factor, and also the PIMULTAB keyword that defines productivity index multiplier versus water cut tables that are used to scaled a well's connection factors based on a wells connection current producing water cut. Both keyword are documented in the SCHEDULE section.

Example

The following example defines three vertical oil wells using the WELSPecs keyword and their associated connection data.

```
--
-- WELL SPECIFICATION DATA
--
-- WELL      GROUP      LOCATION  BHP    PHASE  DRAIN  INFLOW  SHUT   CROSS  PRESS
-- NAME      NAME        I      J    DEPTH FLUID  AREA   EQUA.  IN     FLOW   TABLE
WELSPecs
OP01        PLATFORM    14     13   1*      OIL    1*      STD    OPEN   NO     1* /
OP02        PLATFORM    28     96   1*      OIL    1*      STD    OPEN   NO     1* /
OP03        PLATFORM    128    56   1*      OIL    1*      STD    OPEN   NO     1* /
/
--
-- WELL PRODUCTION WELL CONTROLS
--
-- WELL      OPEN/  CNTL   OIL    WAT    GAS    LIQ    RES    BHP    THP    VFP    VFP
-- NAME      SHUT   MODE   RATE   RATE   RATE   RATE   RATE   PRES  PRES  TABLE ALFQ
WCONPROD
'*'         SHUT   GRUP   1*     1*     1*     1*     1*     200.0                /
/
--
-- WELL CONNECTION DATA
--
-- WELL      --- LOCATION ---  OPEN  SAT  CONN  WELL  KH    SKIN  D    DIR
-- NAME      II  JJ  K1  K2  SHUT  TAB  FACT  DIA  FACT  FACT  FACT  PEN
COMPDAT
OP01        1*  1*   1  10  OPEN  1*   1*    0.708 1*    0.0   1*   'Z' /
OP01        1*  1*  15  30  OPEN  1*   1*    0.708 1*    0.0   1*   'Z' /
OP01        1*  1*  35  90  OPEN  1*   1*    0.708 1*    0.0   1*   'Z' /
OP02        1*  1*   1  10  OPEN  1*   1*    0.708 1*    0.0   1*   'Z' /
OP03        1*  1*  35  90  OPEN  1*   1*    0.708 1*    0.0   1*   'Z' /
/
--
-- ASSIGN WELL CONNECTIONS TO COMPLETIONS
--
-- WELL      --- LOCATION ---  COMPL
-- NAME      II  JJ  K1  K2  NO.
COMPLUMP
OP03        1*  1*  35  45   1                / COMPLETION NO. 01
OP03        1*  1*  50  90   2                / COMPLETION NO. 02
/--
--
-- DEFINE WELL CONNECTION MULTIPLIERS
--
-- WELL      PI      --LOCATION--  COMPLETION
-- NAME      MULT    I    J    K  FIRST LAST
WPIMULT
OP01        1.250    1*  1*   1*  1*   1*
OP02        0.750    1*  1*  10  1*   1*
OP03        1.100    1*  1*   1*  1    2
/
```

In this example the WPIMULT scales the well productivity of well OP01 by 1.25, scales all the well connection factors in layer 10 only by 0.75 for well OP02, and for OP03, scales all the connections in completions one and two by 1.100.

12.3.308 WPIMULTL – DEFINE WELL CONNECTION MULTIPLIERS (LGR)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WPIMULTL keyword defines a well connection multiplier factor that scales the existing well connection values, for a well in a Local Grid Refinement (“LGR”). The resulting effect is scale the well’s productivity at the reporting time step the keyword is entered.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well and well connection status data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	PIMULT	A real positive value that will be used to scale the well connection factors defined by I, J, K, K1 and K2 below.			1.0
3	LGRNAME	A character string of up to eight characters in length that defines the LGR name for which the well LGR connection multiplier factor (PIMULT) is being defined. Note that the well name (LGRNAME) must have been declared previously using the WELSPECL keyword in the SCHEDULE section, otherwise an error may occur. If defaulted with I* the LGR on the WELSPECL keyword will be utilized.			Defined
3	I	An integer less than or equal to NX that defines the connection location in the I-direction.			I*
4	J	An integer less than or equal to NY that defines the connection location in the J-direction.			I*
5	K	An integer less than or equal to NZ that defines the connection location in the K-direction.			I*
6	K1	An integer less than or equal to NZ that defines the UPPER connection location in the K-direction. If connections have been lumped into completions via the COMPLUMP keyword, then K1 refers to the completion number instead of the connection (layer) value.			I*
7	K2	An integer less than or equal to NZ that defines the LOWER connection location in the K-direction. If connections have been lumped into completions via the COMPLUMP keyword, then K2 refers to the completion number instead of the connection (layer) value.			I*
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.105:WPIMULT Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

If variables I, J, K, K1 and K2 are all defaulted with zero or 1* then PIMULT is applied to all the well connections in the well. If variables I, J, K, K1 and K2 are set to zero (meaning any or all values), or a positive value then PIMULT is applied to the defined connections. The defined connections are those with the I, J, K variables in the specified location and a completion number in the range specified by K1 and K2.

Note that PIMULT variable is applied at the time the WPIMULTL keyword is entered and is cumulative if there are intervening time steps between consecutive WPIMULTL keywords.

See also the PIMULTAB keyword that defines productivity index multiplier versus water cut tables that are used to scaled a well's connection factors based on a wells connection current producing water cut. The keyword is documented in the SCHEDULE section.

Example

The following example defines two vertical oil wells using the WELSPECS keyword and their associated connection data.

```
--
--      WELL LGR SPECIFICATION DATA
--
--      WELL GROUP  LGR    -LOCATION- BHP    PHASE DRAIN INFLOW SHUT CROSS PVT
--      NAME NAME    NAME      I      J  DEPTH FLUID AREA  EQUA.  IN   FLOW  TABLE
WELSPECL
  OP01  PLAT  OP01LGR  14    13    1*      OIL   1*    STD   SHUT  NO   1*  /
  OP02  PLAT  OP02LGR  28    96    1*      OIL   1*    STD   SHUT  NO   1*  /
/
--
--      WELL LGR CONNECTION DATA
--
--      WELL  LGR    ---LOCATION---  OPEN  SAT  CONN  WELL  KH  SKIN  D  DIR
--      NAME  NAME      II  JJ  K1  K2  SHUT  TAB  FACT  DIA  FACT  FACT  FACT  PEN
COMPDATL
  OP01  OP01LGR  1*  1*  20  56  OPEN  1*  1*  0.708  1*  1*  1*  Z  /
  OP01  OP01LGR  1*  1*  75 100  SHUT  1*  1*  0.708  1*  1*  1*  Z  /
  OP02  OP02LGR  1*  1*  75 100  OPEN  1*  1*  0.708  1*  1*  1*  Z  /
  OP03  OP02LGR  1*  1*  75 100  OPEN  1*  1*  0.708  1*  1*  1*  Z  /
/
--
--      ASSIGN WELL CONNECTIONS TO COMPLETIONS
--
--      WELL  LGR    --- LOCATION ---  COMPL
--      NAME  NAME      II  JJ  K1  K2  NO.
COMPLMPL
  OP03  OP02LGR  1*  1*  75  85  1  / COMPLETION NO. 01
  OP03  OP21LGR  1*  1*  86 100  2  / COMPLETION NO. 02
/
--
--      DEFINE WELL CONNECTION MULTIPLIERS
--
--      WELL  PI  LGR    --LOCATION--  COMPLETION
--      NAME  MULT  NAME      I  J  K  FIRST LAST
WPIMULTL
  OP01  1.250  OP01LGR  1*  1*  1*  1*  1*  /
  OP02  0.750  OP01LGR  1*  1*  10  1*  1*  /
  OP03  1.100  OP02LGR  1*  1*  1*  1  2  /
/
```

In this example the WPIMULT scales the well productivity of well OP01 by 1.25, scales all the well connection factors in layer 10 only by 0.75 for well OP02, and for OP03, scales all the connections in completions one and two by 1.100.

12.3.309 WPITAB - ASSIGN WELL PRODUCTIVITY INDEX VERSUS WATER CUT TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WPITAB keyword assigns the well productivity index multiplier versus water cut tables, that are used to scaled a well's connection factors based on the connection's current producing water cut, to a well. The tables are defined via the PIMULTAB keyword in the SCHEDULE section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well economic criteria data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	NTABLE	An integer positive value that defines the corresponding PIMULTAB table to be allocated to the well. A value less than or equal to zero means that no PIMULTAB table is allocated to the well			0

Notes:

1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.106: WPITAB Keyword Description

See also the PIMULTAB keyword that defines productivity index multiplier versus water cut tables and also the WPIMULT keyword that scales a well's productivity index by a constant value, both of which are in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

Example

Given NTPIMT equals two on the PIMTDIMS keyword in the RUNSPEC section, then:

```
--
--      ASSIGN WELL PRODUCTIVITY INDEX VS WATER CUT TABLE
--
-- WELL  PI
-- NAME  TABLE
WPITAB
OP01    1
OP02    1
OP03    2
/
```

Assigns PIMULTAB table one to wells OP01 and OP02 and table two to OP03.

12.3.310 WPLUG – DEFINE WELL PLUG BACK LENGTH

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

Various keywords in the SCHEDULE section (WECON, GECON etc.) allow for a well to be automatically plugged back if the well violates a constraint, that is to close existing perforations (well connections). For example if the water cut exceeds 90%, then plug back the well. The WPLUG keyword defines for automatic plug backs the length of the perforations (length of connections) to be closed each time an automatic plug back is performed, together with various options on how the workover should be performed, top down, bottom up, etc.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.311 WPOLYMER - DEFINE WATER INJECTION WELL POLYMER AND SALT CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WPOLYMER keyword defines a water injection well's polymer and salt injection stream concentrations that are to be used for when the polymer and salt options have been activated by the POLYMER and BRINE keywords in the RUNSPEC section.

Note that if the Brine option has not been activated by the BRINE keyword in the RUNSPEC section, then the salt concentrations in the third column are ignored. Secondly, if the brine phase is declared but the polymer phase has not been made active, then the WSALT keyword in the SCHEDULE section can be used to set the salt concentration.

Currently the Brine option is not implemented in OPM Flow and therefore both the SALTCON and GRPSALT variables on this keyword are ignored.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	POLCON	A real positive value that defines the polymer concentration of the well's injection stream.			None
		lb/stb	kg/sm ³	gm/scc	
3	SALTCON	A real positive value that defines the salt concentration of the well's injection stream. This variable is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.			None
		lb/stb	kg/sm ³	gm/scc	
4	GRPPOL	A character string of up to eight characters in length that defines the group name for which the group's produced polymer concentration should be used instead of the well's POLCON value stated on this keyword.			None
5	GRPSALT	A character string of up to eight characters in length that defines the group name for which the group's produced salt concentration should be used instead of the well's SALTCON value stated on this keyword. This variable is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.			None
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.107: WPOLYMER Keyword Description

Water injection wells that are not declared via this keyword have their concentrations defaulted to zero.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

See also the GCONPROD and GCONINJE keywords to define a group's production and injection targets and constraints, and the WCONINJE keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the polymer and salt injection stream concentrations for three water injection wells for when the polymer option has been activated by the POLYMER keyword in the RUNSPEC section.

```
--
--      DEFINE WATER INJECTION WELL POLYMER AND SALT CONCENTRATIONS
--
-- WELL  POLYMER      SALT      POLYMER      SALT
-- NAME  POLCON       SALTCON   GROUP       GROUP
--      -----
WPOLYMER
WI01    0.2500                /
WI02    1*              1*    GRPINJ1        /
WI03    0.2500          1*    GRPINJ1        /
/
```

The polymer concentration for well WI01 is set to 0.25 and the stated polymer concentration for well WI02 will be ignored, as both WI02 and WI03 will re-inject the produced polymer from the GRPINJ1 group.

12.3.312 WPOLYRED – DEFINE WELL POLYMER-WATER VISCOSITY REDUCTION FACTOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WPOLYRED keyword defines the polymer-water reduction factor for injection wells, for when the polymer phase has been activated by the POLYMER keyword in the RUNSPEC section. WPOLYRED should be set to a value greater than or equal to zero and less than or equal to one that determines the injection mixture's viscosity. A value of zero indicates for pure water injection and a value of one will use the simulator's valuated mixture viscosity. A value between zero and one will use an interpolated mixture viscosity.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.313 WREGROUP – AUTOMATIC RE-ASSIGNMENT OF WELLS TO GROUPS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WREGROUP defines the criteria to automatically re-assign wells to various other groups. This can be used, for example, to move wells on THP control flowing through a high pressure separator group to a low pressure separator group in order for the wells to be under different group controls for low pressure wells.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.314 WRFT – ACTIVATE WELL RFT REPORTING TO THE RFT FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	-----------------

Description

This keyword activates reporting of a well's depth pressure profile to the RFT file for the requested wells at the time the keyword is activated. Data written out by OPM Flow is used to match the field measured data collected from a Repeat Formation Tester ("RFT") tool.

The RFT tool is an open hole device which is an updated version of the Formation Interval Tester ("FIT"), both of which are run on wire line. Both tools take multiple pressure readings (at various depths) thus enabling a pressure depth profile to be obtained from the formation, and, in addition, they can also take fluid samples from the formation. The latest tool available from Schlumberger is the Modular Formation Dynamics Tester ("MDT"), which, as its name suggests, is a modular tool that can be assembled in different configurations depending on what are the objectives for running the tool. Note other vendors have similar wire line logging tools with alternative names for the tools. Throughout this section the term RFT applies to all tools that measure a pressure profile versus depth (RFT/FIT/MDT etc.).

No.	Name	Description			Default
		Field	Metric	Laboratory	
I	WELNAME	<p>A columnar vector of character strings of up to eight characters in length for each item, that defines the well name for which the RFT data should be written to the RFT file. Note that the WELNAME must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.</p> <p>If the WELNAME is left blank then the data is written out for all wells at the time they are first opened to flow.</p> <p>If the WELNAME is given, then the RFT data for the well at the time step the keyword is invoked is written out.</p>			None

Notes:

- 1) The keyword is followed by any number of records.
- 2) Each record is terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.108:WRFT Keyword Description

See also the WRFTPLT keyword in the SCHEDULE section that has more flexible reporting options.

Examples

The first example activates RFT reporting for all wells at the time a well is first opened to flow:

```
--
--      ACTIVATE WELL RFT REPORTING TO THE RFT FILE
--
-- WELL
-- NAME
WRFT
/
```

Ideally, this version of the keyword should be place at the beginning of the SCHEDULE section to obtain the data for the wells in the run before they are opened up through time.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

The next example shows how to use the keyword to request the output for several wells at different reporting time steps.

```

-----
-- 01 JAN 2000 START OF SCHEDULE SECTION
-----
DATES
15 JAN 2000 /
/
--
--          WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    VFP    VFP    THP    BHP
-- NAME  SHUT   MODE   RATE   RATE   RATE   TABLE  ALFQ   PRES  PRES
WCONHIST
OP01     OPEN   ORAT   15.5E3  0.0    1550    10      1*    900.0  1*    /
OP02     SHUT
/
--
--          ACTIVATE WELL RFT REPORTING TO THE RFT FILE
--
-- WELL
-- NAME
WRFT
OP01
OP02
/
DATES
01 FEB 2000 /
/
--
--          WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    VFP    VFP    THP    BHP
-- NAME  SHUT   MODE   RATE   RATE   RATE   TABLE  ALFQ   PRES  PRES
WCONHIST
OP01     OPEN   ORAT   15.5E3  0.0    1550    10      1*    900.0  1*    /
OP02     SHUT
/
--
--          ACTIVATE WELL RFT REPORTING TO THE RFT FILE
--
-- WELL
-- NAME
WRFT
OP01
OP02
/
DATES
01 MAR 2000 /
/
--
--          WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    VFP    VFP    THP    BHP
-- NAME  SHUT   MODE   RATE   RATE   RATE   TABLE  ALFQ   PRES  PRES
WCONHIST
OP01     OPEN   ORAT   15.5E3  0.0    1550    10      1*    900.0  1*    /
OP02     OPEN   ORAT   10.5E3  0.0    1000    10      1*    900.0  1*    /
/

```

In this example, both well's have their RFT written out on February 1 and March 1 2000.

12.3.315 WRFTPLT – ACTIVATE WELL RFT AND PLT REPORTING TO THE RFT FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword activates reporting of a well's depth pressure and fluid rates profile to the RFT file for the requested wells at the time the keyword is activated. Data written out by the simulator is used to match the field measured data collected from both the Repeat Formation Tester ("RFT") tool and various Production Logging Tools ("PLT").

See the WRFT keyword in the SCHEDULE section for a brief description of the RFT data set. This keyword also activates the writing out of each well connection's fluid rates, connection factors and KH data, etc., as the PLT data. The PLT data is used to compare with measured data from wire line production logging tools.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	<p>A columnar vector of character strings of up to eight characters in length for each item, that defines the well name for which the RFT data should be written to the RFT file. Note that the WELNAME must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.</p> <p>If the WELNAME is left blank then the data is written out for all wells at the time they are first opened to flow.</p> <p>If the WELNAME is given, then the RFT data for the well at the time step the keyword is invoked is written out.</p>			None
2	RFT	<p>A defined character string that sets the RFT data set output options and should be set to one of the following character strings.</p> <ol style="list-style-type: none"> 1) NO: do not write RFT data for the well. 2) YES: write out the RFT data at the current reporting time step. 3) REPT: write out the RFT data at the current reporting time step and all subsequent <u>reporting</u> time steps. 4) TIMESTEP: write out the RFT data at the current reporting time step and all subsequent time steps. 5) FOPN: write out the RFT data at the current reporting time step for the well if it is opened, otherwise write the RFT data out the first time the named well is opened. 			NO
3	PLT	<p>A defined character string that sets the PLT data set output options and should be set to one of the following character strings.</p> <ol style="list-style-type: none"> 1) NO: do not write PLT data for the well. 2) YES: write out the PLT data at the current reporting time step. 3) REPT: write out the PLT data at the current reporting time step and all subsequent <u>reporting</u> time steps. 4) TIMESTEP: write out the PLT data at the current reporting time step and all subsequent time steps. 			NO

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	MULTISEG	<p>A defined character string that sets the output options for multi-segment wells, that is the flow rates and pressures through each well segment, and should be set to one of the following character strings.</p> <ul style="list-style-type: none">1) NO: do not write multi-segment well data for the well.2) YES: write out the multi-segment well data at the current reporting time step.3) REPT: write out the multi-segment well data at the current reporting time step and all subsequent <u>reporting</u> time steps.4) TIMESTEP: write out the multi-segment well data at the current reporting time step and all subsequent time steps. <p>Note the commercial simulator also uses MULTISEG to control the output of “rivers” for when the RIVERS Model has been enabled via the RIVRDIMS keyword in the RUNSPEC section. OPM Flow does not support the RIVERS Model.</p>			NO
Notes: <ul style="list-style-type: none">1) The keyword is followed by any number of records terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.109: WRFTPLT Keyword Description

See also the WRFT keyword in the SCHEDULE section that has less flexible reporting options.

Examples

The first example activates RFT output at the current reporting time step for all the wells that are opened to flow, otherwise the RFT data is written out the first time a well is opened.

```
--
--      WELL RFT, PLT AND SEGMENT DATA
--
-- WELL  RFT   PLT   SEGMENT
-- NAME  DATA DATA DATA
WRFTPLT
' * '      FOPN                                     /
/
```

The next example writes out the RFT and PLT data for two wells at the current reporting time step.

```
--
--      WELL RFT, PLT AND SEGMENT DATA
--
-- WELL  RFT   PLT   SEGMENT
-- NAME  DATA DATA DATA
WRFTPLT
OP01    YES    YES
OP02    YES    YES                                     /
/
```

The final example is shown below:

```
--
--          WELL RFT, PLT AND SEGMENT DATA
--
-- WELL   RFT   PLT   SEGMENT
-- NAME   DATA DATA DATA
WRTPLT
OP01     REPT  NO
OP02     NO   YES
/
```

In this case the RFT data for well OP01 is written out at the current reporting time step and all subsequent reporting time steps. For well OP02, no RFT is written out but the PLT data is written out for the current report time step only.

12.3.316 WSALT - DEFINE WATER INJECTION WELL SALT CONCENTRATIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSALT keyword defines a water injection well's salt injection stream concentration that is to be used for when the salt option has been activated by the BRINE keywords in the RUNSPEC section. Note that if the Polymer option has also been activated by the POLYMER keyword in the RUNSPEC section, then the WPOLYMER keyword in the SCHEDULE section should be used to enter both the polymer and salt concentrations.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the injection salt concentrations are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	SALTCON	A real positive vector of values that defines the salt concentration of the well's injection stream and consists of: 1) If the Standard Brine model has been invoked by the BRINE keyword, then SALTCON consist of one value representing the injection salt concentration; 2) If OPM Flow's Water Vaporization and Salt Precipitation models have been activated by the VAPWAT and PRECSALT keywords in the RUNSPEC section, then SALTCON consist of one value representing the injection salt concentration; or, 3) If the Multi-Component Brine option has been activated by the BRINE and ECLMC keywords in the RUNSPEC section, then SALTCON consists of a vector of values representing the salt concentration of each brine within the injected brine mixture. Only options (1) and (2) are currently supported. Note if SALTCON is defaulted (I*) then the well's salt concentration will be use the well's group salt concentration.			I*
		lb/stb	kg/sm ³	gm/scc	

Notes:

1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".

Table 12.110: WSALT Keyword Description

Water injection wells that are not declared via this keyword have their concentrations defaulted to zero.

See also the GCONPROD and GCONINJE keywords to define a group's production and injection targets and constraints, and the WCONINJE keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

Examples

The following example defines the salt injection stream concentration for three water injection wells for when the brine phase has been activated by the BRINE keyword in the RUNSPEC section.

```
--
--      DEFINE WATER INJECTION WELL SALT CONCENTRATIONS (STANDARD)
--
-- WELL  SALT-1      SALT-2      SALT-3      SALT-4
-- NAME  SALTCON     SALTCON     SALTCON     SALTCON
--      -----
WSALT
WI01    0.2500
WI02    1*
WI03    0.2500
/
```

The salt concentration for both well WI01 and WI03 is set to 0.25, and for well WI02 the salt concentration will be taken from the well's group salt concentration.

The next example is based on using the Multi-Component Brine option, that is the BRINE and ECLMC keywords have been used in the RUNSPEC section, and assuming three salts.

```
--
--      DEFINE WATER INJECTION WELL SALT CONCENTRATIONS (MULTIPLE)
--
-- WELL  SALT-1      SALT-2      SALT-3      SALT-4
-- NAME  SALTCON     SALTCON     SALTCON     SALTCON
--      -----
WSALT
WI01    0.1500      0.0500      0.0500
WI02    0.1500      0.0500      0.0500
WI03    0.2000      0.0500      0.0600
/
```

Here the salt concentrations for both well WI01 and WI02 are set to 0.1500, 0.0500, 0.0500 for the three salts and for well WI03 the salt concentrations are 0.2000, 0.0500 and 0.0600.

Note that OPM Flow does not currently support the Multi-Component brine model.

12.3.317 WSCCLEAN – WELL DEPOSITED SCALE ADJUSTMENT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSCCLEAN keyword adjusts the amount of scale currently accumulated around a well's well connections for wells located in the global grid. For example, if a workover has been performed on a well to remove (or reduce) the deposited scale over the perforations, then this keyword can be used to implement the effects of the workover. Scale deposits reduce the productivity of well and this relationship is defined in the SCDPTAB and SCDATAB keywords in SCHEDULE section. The tables are allocated to a well via the WSCTAB keyword, which is also in the SCHEDULE section. Note that the Scale Deposition option must have been activated by declaring the dimensions of the scaling deposition tables using the SCDPDIMS keyword in the RUNSPEC section.

See also the WSSCLENL keyword in the SCHEDULE section that performs similar functionality for wells located in a Local Grid Refinement.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.318 WSCLENL – WELL DEPOSITED SCALE ADJUSTMENT (LGR)

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSCLENL keyword adjusts the amount of scale currently accumulated around a well's well connections for wells located in a Local Grid Refinement (LGR). For example, if a workover has been performed on a well to remove (or reduce) the deposited scale over the perforations, then this keyword can be used to implement the effects of the workover. Scale deposits reduce the productivity of well and this relationship is defined in the SCDPTAB and SCDATAB keywords in SCHEDULE section. The tables are allocated to a well via the WSCTAB keyword, which is also in the SCHEDULE section. Note that the Scale Deposition option must have been activated by declaring the dimensions of the scaling deposition tables using the SCDPDIMS keyword in the RUNSPEC section.

See also the WSSCLEAN keyword in the SCHEDULE section that performs similar functionality for wells located in the global grid.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.319 WSCTAB – ASSIGN WELL SCALE DEPOSITION AND SCALE DAMAGE TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WSCTAB assigns scale deposition and scale damage tables to a well, for when the Scale Deposition option has been activated by declaring the dimensions of the scaling deposition tables using the SCDPDIMS keyword in the RUNSPEC section. Scale deposits reduce the productivity of well and this relationship is defined in the SCDPTAB and SCDATAB keywords in the SCHEDULE section, and are allocated to a well by the WSCTAB keyword.

See also the WPIMULT keyword in the SCHEDULE section that adjusts a well's productivity index by a constant value.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.320 WSEGAICD – DEFINE MULTI-SEGMENT WELL AUTONOMOUS ICD CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WSEGAICD keyword defines a multi-segment well segment to be an autonomous Inflow Control Device. ("ICD") as part of a completion for a multi-segment well. Note that the well must have been previously define by the WELSPECS and WELSEGS keywords in the SCHEDULE section and that the data for the keyword should be repeated for each multi-segment completion that contains an autonomous ICD.

An ICD is a well completion component usually installed along the producing section of a well to minimize the unwanted water and gas breakthrough in an oil well, or early water production in a gas well, due to an uneven flow profile over the completed interval. Permeability variations over the producing interval cause the high permeability zones to produce higher quantities of fluids than the lower permeability zones and this uneven producing fluid profile may result in bypassed hydrocarbons. Secondly, for horizontal wells, the pressure loss from the "toe" to the "heel" of the well again results in an uneven fluid profile over the producing interval. In order to rectify this ICDs can be installed so that the well fluids have to flow through an ICD before entering the tubing; thus, creating an additional "designed" pressure loss.

An autonomous ICD inhibits the production of high-mobility fluids such as water and gas since the pressure drop in each unit is dependent on fluid properties and mobility, the device automatically increases the pressure differential across zones with high water or gas saturations, thus choking back production from these zones.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which a multi-segment well is being defined. Note that the well name (WELNAME) must have been declared previously using both the WELSPECS and WELSEGS keywords in the SCHEDULE section, otherwise an error may occur.			None
2	ISEG1	A positive integer greater than or equal to two and less than or equal to MXSEGS on the WSEGDIMS keyword in the RUNSPEC section that defines the start of a segment.			None
3	ISEG2	A positive integer greater than or equal to two and not less then ISEG1 on this record and less than or equal to MXSEGS on the WSEGDIMS keyword in the RUNSPEC section, that defines the end of a segment			None
4	ICDSTREN	A real positive value greater than zero that defines an empirical constant for the strength of the given ICD as determined from measurements using the calibrated fluid.			None
		psia/((lb /ft ³)/(rft ³ day) ²)	barsa/((kg/m ³)(rm ³ / day) ²)	atma/((gm/cc)(rcc/ hr) ²)	

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	ICDLEN	<p>A real value that defines the length of the ICD used in conjunction with NSCAFAC to calculate a scaling factor to be applied to the reservoir flow to adjust the flow through each ICD, that is:</p> <ol style="list-style-type: none"> 1) If NSCAFAC equals zero: then the scale factor is equal to the length of the ICD (ICDLEN) divided by the length of the tubing section, that is the parent of the ICDs, then this allows for the case when the ICD segment may represent a number of ICDs in parallel. 2) If NSCAFAC equals one: then the scale factor is equal to the absolute value of ICDLEN. 3) If NSCAFAC equals two: then the scale factor is equal to the length of ICDLEN, divided by the total length of the completions which supply the ICD. <p>NSCALFAC explicitly sets which of the above three options is used. If NSCALFAC is defaulted, then option 1) is used whenever ICDLEN is positive and option 2) when ICDLEN is negative.</p>			Defined
		feet 39.37	m 12.00	cm 1,2000	
6	CALDEN	<p>CALDEN is a real positive value greater than zero that defines the density of the calibrating fluid at surface conditions.</p>			Defined
		lb/ft ³ 62.416	kg/m ³ 1000.25	gm/cc 1.00025	
7	CALVISC	<p>CALVISC is a real positive value greater than zero that defines the viscosity of the calibrating fluid at surface conditions.</p>			1.45
		cP	cP	cP	
8	EMLCRT	<p>EMLCRT is a real positive value greater than zero that defines the “local water” in liquid fraction used to determine whether the “water-in-oil” or “oil-in-water” viscosity emulation equation should be applied.</p>			0.5
		dimensionless	dimensionless	dimensionless	
9	EMLTRANS	<p>EMLTRANS is a real positive value greater than zero that defines the width of the transition zone around EMLCRT and is used to ensure that the calculated viscosity forms a continuous function of water in liquid fraction. Within this region, the emulsion viscosity is a linear interpolation between the “water-in-oil” and “oil-in-water” viscosity values either side of the region.</p>			0.05
		dimensionless	dimensionless	dimensionless	
10	EMLMAX	<p>EMLMAX is a real positive value greater than zero that defines the maximum emulsion viscosity to continuous phase viscosity (oil or water) ratio.</p>			5.0
		dimensionless	dimensionless	dimensionless	

No.	Name	Description			Default
		Field	Metric	Laboratory	
11	NSCAFAC	<p>NSCALFAC is a positive integer value that is greater than or equal to zero, that sets the method to be used when applying the scaling factor and should be set to one of the following:</p> <p>1) If NSCAFAC equals zero: then the scale factor is equal to the length of the ICD (ICDLEN) divided by the length of the tubing section, that is the parent of the ICDs, then this allows for the case when the ICD segment may represent a number of ICDs in parallel.</p> <p>2) If NSCAFAC equals one: then the scale factor is equal to the absolute value of ICDLEN.</p> <p>3) If NSCAFAC equals two: then the scale factor is equal to the length of ICDLEN, divided by the total length of the completions which supply the ICD.</p> <p>NSCALFAC explicitly sets which of the above three options is used. If NSCALFAC is negative, then option 1) is used whenever ICDLEN is positive and option 2) when ICDLEN is negative.</p>			-1
		dimensionless	dimensionless	dimensionless	
12	CALRATE	<p>A real positive value that defines the maximum surface flow rate for which the ICD was calibrated. Values calculated greater than CALRATE will use linear extrapolation.</p>			None
		scf/d	sm ³ /day	scc/hour	
13	RATEXP	<p>A real positive number greater than or equal to zero that defines flow rate exponent in equation (12.35).</p>			None
		dimensionless	dimensionless	dimensionless	
14	VISCEXP	<p>A real positive number greater than or equal to zero that defines viscosity exponent in equation (12.35).</p>			None
		dimensionless	dimensionless	dimensionless	
15	STATUS	<p>A defined character string of length four that defines the ICD's operational status, STATUS should be set to one of the following character strings:</p> <p>1) OPEN: the ICD connection is are open to flow.</p> <p>2) SHUT: the ICD connections is closed to flow (shut-in).</p>			OPEN
16	A1	Density mixture OIL flowing exponent in equation (12.36)			1.0
17	A2	Density mixture WATER flowing exponent in equation (12.36)			1.0
18	A3	Density mixture GAS flowing exponent in equation (12.36)			1.0
19	B1	Viscosity mixture OIL flowing exponent in equation (12.37)			1.0
20	B2	Viscosity mixture WATER flowing exponent in equation (12.37)			1.0
21	B3	Viscosity mixture GAS flowing exponent in equation (12.37)			1.0
Notes:					
1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.111: WSEGAICD Keyword Description

The total number of wells should be defined via the WELSDIMS keyword and the number of multi-segment wells should be declared on the WSEGDIMS keyword, both keywords are in the RUNSPEC section. In addition, the WELSPECS keyword should be used to define wells, the COMPDAT keyword to define the well completions for both ordinary wells and multi-segment wells, and the COMPSEGS keyword to define a multi-segment segment completions. Finally, the WSEGSICD keyword can then be use to define ICD connections for the well. All the aforementioned keywords are described in the SCHEDULE section.

The equations used to calculate the pressure drop across the ICD are given below and illustrate how the pressure reduction is dependent on the density and viscosity of the fluid flowing through the device.

$$\Delta P = \left(\frac{\rho_{mixture}}{\rho_{calibrated}} \right) \cdot \left(\frac{\mu_{calibrated}}{\mu_{mixture}} \right)^{\mu_{exp}} \cdot \rho_{mixture} \cdot \beta \cdot \left(\frac{q}{q_{calibrated}} \right)^{(Q_{exp}-2)} \cdot q^2 \quad (12.35)$$

Where:

ΔP = the pressure drop across the device.
 $\rho_{mixture}$ = the density of the mixture, as per:

$$\rho_{mixture} = (\alpha_{oil}^{a_1} \cdot \rho_{oil}) + (\alpha_{wat}^{a_2} \cdot \rho_{wat}) + (\alpha_{gas}^{a_3} \cdot \rho_{gas}) \quad (12.36)$$

$\rho_{calibrated}$ = CALDEN, the density of the calibrating fluid at surface conditions.

$\mu_{calibrated}$ = CALVISC, the viscosity of the calibrating fluid at surface conditions.

$\mu_{mixture}$ = the viscosity of the mixture, as per:

$$\mu_{mixture} = (\alpha_{oil}^{b_1} \cdot \mu_{oil}) + (\alpha_{wat}^{b_2} \cdot \mu_{wat}) + (\alpha_{gas}^{b_3} \cdot \mu_{gas}) \quad (12.37)$$

β = ICDSTREN, the strength of the ICD as measured using the calibrated fluid.

q = the local flow rate through the ICD at local conditions adjusted for scaling based on ICDLEN and NSCAFAC parameters in Table 12.111.

$q_{calibrated}$ = CALRATE, the maximum surface flow rate for which the ICD was calibrated.

μ_{EXP} = VISCEXP, the viscosity exponent in Table 12.111.

Q_{EXP} = RATEXP, the flow rate exponent in Table 12.111.

In equation (12.8) α_i represents the volume fraction of oil, water and gas at local conditions and a_i the density exponents of the three phases (A1, A2 and A3 in Table 12.111). Similarity for equation (12.37), α_i represents the volume fraction of oil, water and gas at local conditions and B_i the viscosity exponents of the three phases (B1, B2 and B3 in Table 12.111).

See also the WSEGSICD keyword in the SCHEDULE section for spiral ICDs, that work in a similar fashion to how autonomous ICDs work.

Example

The following example defines one producing well segment oil well (OP01) using the WELSPEDS, WELSEGS COMPDAT and COMPSEGS keywords, followed by the WSEGAICD keyword to define the autonomous inflow control devices for the well.

```
--
--      WELL SPECIFICATION DATA
--
-- WELL  GROUP   LOCATION  BHP   PHASE  DRAIN  INFLOW  OPEN  CROSS  PVT   DEN  FIP
-- NAME  NAME      I      J  DEPTH FLUID  AREA  EQUANS  SHUT  FLOW  TABLE CAL  NUM
WELSPEDS
OP01    PLATFORM 14      8  1*    OIL    0.0    STD    SHUT  YES   0    SEG  0 /
/
--
--      WELL CONNECTION DATA
--
-- WELL  --- LOCATION --- OPEN  SAT  CONN      WELL  KH  SKIN  D  DIR
-- NAME  II  JJ  K1  K2  SHUT  TAB  FACT      DIA  FACT  FACT  FACT  PEN
COMPDAT
OP01    14    8    1    1  OPEN  1*   1.972960E+2 0.216 1*   0.00 1*   'Z' /
OP01    14    7    1    1  OPEN  1*   1.619450E+2 0.216 1*   0.00 1*   'Z' /
OP01    14    7    2    2  OPEN  1*   4.126449E+2 0.216 1*   0.00 1*   'Z' /
OP01    14    7    3    3  OPEN  1*   2.033290E+1 0.216 1*   0.00 1*   'Z' /
OP01    15    7    3    3  OPEN  1*   9.095613E+1 0.216 1*   0.00 1*   'Z' /
OP01    15    6    3    3  OPEN  1*   2.090607E+2 0.216 1*   0.00 1*   'Y' /
OP01    15    6    4    4  OPEN  1*   3.010669E+1 0.216 1*   0.00 1*   'Y' /
OP01    16    6    4    4  OPEN  1*   7.123814E+1 0.216 1*   0.00 1*   'Y' /
OP01    16    5    4    4  OPEN  1*   4.414386E+2 0.216 1*   0.00 1*   'Y' /
OP01    16    4    4    4  OPEN  1*   4.345126E+2 0.216 1*   0.00 1*   'Y' /
OP01    16    3    4    4  OPEN  1*   2.894573E+2 0.216 1*   0.00 1*   'Y' /
OP01    17    3    4    4  OPEN  1*   1.329523E+2 0.216 1*   0.00 1*   'Y' /
OP01    17    2    4    4  OPEN  1*   6.981252E+1 0.216 1*   0.00 1*   'Y' /
OP01    17    2    5    5  OPEN  1*   1.392382E+2 0.216 1*   0.00 1*   'Y' /
/
--
--      WELL SEGMENT SPECIFICATION DATA
--
-- WELL  NODAL      LEN      WELL  DEPH  PRESS  FLOW
-- NAME  DEPTH      TUBING  VOLM  OPTN  CALC  MODEL
WELSEGS
OP01    2041.56259  0.0000  1*    INC    'HF-'  /
--
--      SEG  SEG  BRAN  SEG  TUBING  NODAL  TUBE  TUBE  XSEC  VOL
--      ISTR  IEND NO    NO    LENGTH DEPTH  ID    ROUGH AREA  SEG
--
--      2    2    1    1    9.56005  0.61168 0.152 0.0000100 /
--      3    3    1    2    17.40714 1.11376 0.152 0.0000100 /
--      4    4    1    3    41.24996 2.38255 0.152 0.0000100 /
--      5    5    1    4    38.35922 2.06899 0.152 0.0000100 /
--      6    6    1    5    27.13029 1.02248 0.152 0.0000100 /
--      7    7    1    6    73.45099 2.40389 0.152 0.0000100 /
--      8    8    1    7    54.95304 1.64832 0.152 0.0000100 /
--      9    9    1    8    12.37381 0.23781 0.152 0.0000100 /
--     10   10    1    9    62.61459 0.73403 0.152 0.0000100 /
--     11   11    1   10   106.9805 1.37749 0.152 0.0000100 /
--     12   12    1   11   88.42739 0.90931 0.152 0.0000100 /
--     13   13    1   12   51.59899 0.27327 0.152 0.0000100 /
--     14   14    1   13   24.75582 0.30814 0.152 0.0000100 /
--     15   15    1   14   29.77334 0.49371 0.152 0.0000100 /
```

```
--
-- PERFORATION VALVE SEGMENTS
--
--      SEG      SEG      BRAN      SEG      TUBING      NODAL      TUBE      TUBE      XSEC      VOL
--      ISTR      IEND      NO        NO        LENGTH      DEPTH      ID        ROUGH      AREA      SEG
--      16        16        2          2          0.10000      0          0.152      0.0000100      /
--      17        17        3          3          0.10000      0          0.152      0.0000100      /
--      18        18        4          4          0.10000      0          0.152      0.0000100      /
--      19        19        5          5          0.10000      0          0.152      0.0000100      /
--      20        20        6          6          0.10000      0          0.152      0.0000100      /
--      21        21        7          7          0.10000      0          0.152      0.0000100      /
--      22        22        8          8          0.10000      0          0.152      0.0000100      /
--      23        23        9          9          0.10000      0          0.152      0.0000100      /
--      24        24        10         10         0.10000      0          0.152      0.0000100      /
--      25        25        11         11         0.10000      0          0.152      0.0000100      /
--      26        26        12         12         0.10000      0          0.152      0.0000100      /
--      27        27        13         13         0.10000      0          0.152      0.0000100      /
--      28        28        14         14         0.10000      0          0.152      0.0000100      /
--      29        29        15         15         0.10000      0          0.152      0.0000100      /
/
--
--      MULTISEGMENT WELL COMPLETION SEGMENT SPECIFICATION DATA
--
--      WELL
--      NAME
COMPSEGS
OP01
/
--
--      --LOCATION--      BRAN      TUBING      NODAL      DIR      LOC      MID      COMP      ISEG
--      II      JJ      K1      NO        LENGTH      DEPTH      PEN      I, J, K      PERFS      LENGTH      NO.
--      14      8      1      2          0.000000      0.10000      /
--      14      7      1      3          0.000000      0.10000      /
--      14      7      2      4          0.000000      0.10000      /
--      14      7      3      5          0.000000      0.10000      /
--      15      7      3      6          0.000000      0.10000      /
--      15      6      3      7          0.000000      0.10000      /
--      15      6      4      8          0.000000      0.10000      /
--      16      6      4      9          0.000000      0.10000      /
--      16      5      4      10         46.76168      46.86168      /
--      16      4      4      11         0.000000      0.10000      /
--      16      3      4      12         0.000000      0.10000      /
--      17      3      4      13         0.000000      0.10000      /
--      17      2      4      14         0.000000      0.10000      /
--      17      2      5      15         42.50573      42.60573      /
/
--
--      MULTI-SEGMENT WELL ICD SEGMENT SPECIFICATION DATA
--
--      WELL      SEG      ICD      ICD      CAL      CAL      EML      EML      EML      SCAL      CAL      RATE      VISC      OPEN
--      NAME      ISTR      IEND      STREN      LEN      DEN      VISC      CRIT      TRAN      MAX      FAC      RAT      EXP      EXP      CLOSE
WSEGAICD
OP01      16      16      7.5e-5      -0.028975      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      17      17      7.5e-5      -0.023783      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      18      18      7.5e-5      -0.101240      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      19      19      7.5e-5      -0.015022      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      20      20      7.5e-5      -0.067205      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      21      21      7.5e-5      -0.155410      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      22      22      7.5e-5      -0.011141      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      23      23      7.5e-5      -0.026362      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      24      24      7.5e-5      -0.163410      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      25      25      7.5e-5      -0.160830      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
OP01      26      26      7.5e-5      -0.107180      1020      0.48      0.7      1*      1*      1*      1*      2.2      0.5      7* /
```

```
--
-- WELL SEG SEG ICD ICD CAL CAL EML EML EML SCAL CAL RATE VISC OPEN
-- NAME ISTR IEND STREN LEN DEN VISC CRIT TRAN MAX FAC RAT EXP EXP CLOSE
OP01 27 27 7.5e-5 -0.049206 1020 0.48 0.7 1* 1* 1* 1* 2.2 0.5 7* /
OP01 28 28 7.5e-5 -0.025824 1020 0.48 0.7 1* 1* 1* 1* 2.2 0.5 7* /
OP01 29 29 7.5e-5 -0.064414 1020 0.48 0.7 1* 1* 1* 1* 2.2 0.5 7* /
/
```

The WSEGAICD keyword defines the autonomous ICD over segments 16 to 29 using the default value for NSCALFAC of -1, which sets the scale factor equal to the absolute value of ICDLEN, as all the ICDLEN values are negative. Note that the WSEGAICD should be repeated for each multi-segment well that has this type of ICD. So for example for two wells one would have:

```
--
-- MULTI-SEGMENT WELL ICD SEGMENT SPECIFICATION DATA
--
-- WELL SEG SEG ICD ICD CAL CAL EML EML EML SCAL CAL RATE VISC OPEN
-- NAME ISTR IEND STREN LEN DEN VISC CRIT TRAN MAX FAC RAT EXP EXP CLOSE
WSEGAICD
OP01 16 16 7.5e-5 -0.028975 1020 0.48 0.7 1* 1* 1* 1* 2.2 0.5 7* /
.....
OP01 28 28 7.5e-5 -0.025824 1020 0.48 0.7 1* 1* 1* 1* 2.2 0.5 7* /
/

-- WELL SEG SEG ICD ICD CAL CAL EML EML EML SCAL CAL RATE VISC OPEN
-- NAME ISTR IEND STREN LEN DEN VISC CRIT TRAN MAX FAC RAT EXP EXP CLOSE
WSEGAICD
OP02 17 17 1.75E-4 .0049945 1020 0.48 1* 1* 1* 1* 2.1 1.2 7* /
.....
OP02 31 31 1.75E-4 .0038583 1020 0.48 1* 1* 1* 1* 2.1 1.2 7* /
/
```

Figure 12.16 show the layout of the two example wells.

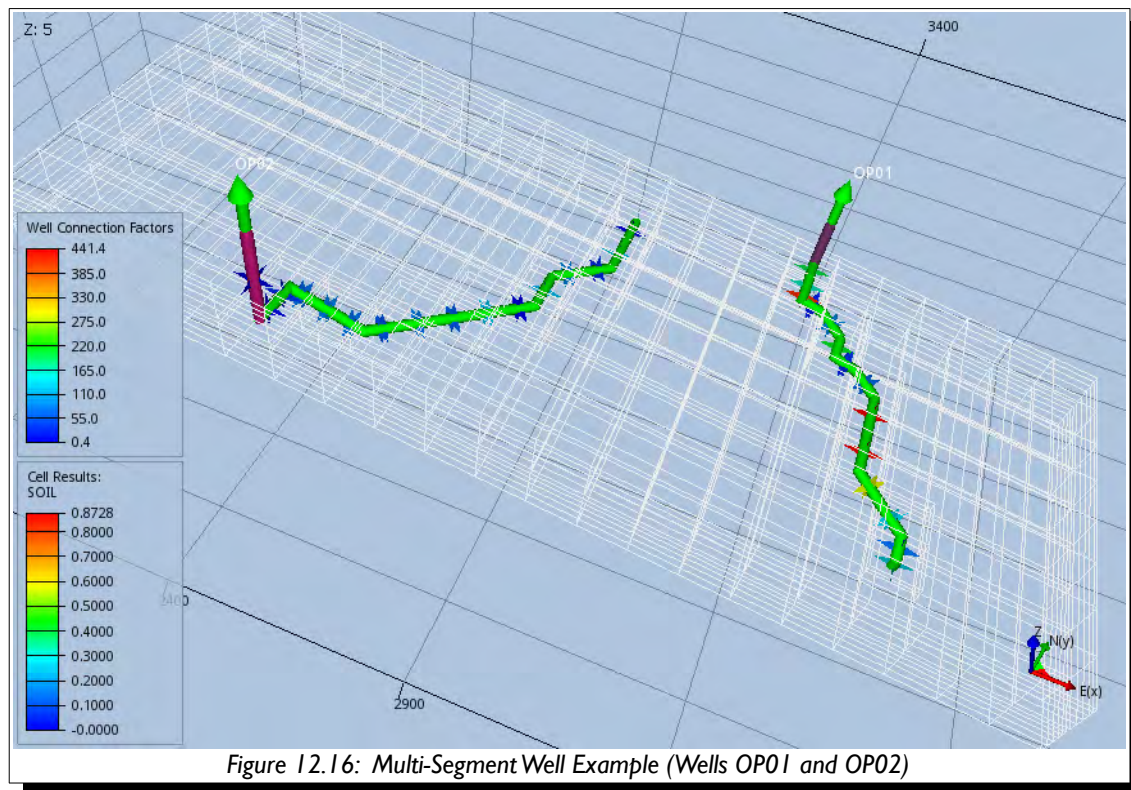


Figure 12.16: Multi-Segment Well Example (Wells OP01 and OP02)

12.3.321 WSEGDFIN – DEFINE MULTI-SEGMENT WELL DRIFT FLUX SLIP MODEL INPUT DATA

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSEGDFIN keyword defines a multi-segment well's drift flux slip model parameters. A slip model²⁰⁶ and ²⁰⁷ enables the different phases in the wellbore to flow at different velocities, for example gas will flow up the tubing at a higher velocity than oil and water. The option is activated by the FLOWOPT parameter on the WELSEGS keyword in the SCHEDULE section; however, the slip model flow calculation is not available in OPM Flow.

See also the WSEGFMD keyword in the SCHEDULE section that sets which type of slip model should be used.

This keyword is ignored by OPM Flow and has no effect on the simulation.

²⁰⁶ Shi, H., Holmes, J.A., Durlofsky, L. J., Aziz, K., Diaz, L. R., Alkaya, B., and Oddie, G. "Drift-Flux Modeling of Two-Phase Flow in Wellbores," paper SPE 84228, Society of Petroleum Engineers Journal (2005) 10, No. 1, 24-33; also presented as "Drift-Flux Modeling of Multiphase Flow in Wellbores," at the SPE Annual Technical Conference and Exhibition, Denver, Colorado, USA (October 5-8, 2003).

²⁰⁷ Shi, H., Holmes, J.A., Diaz, L. R., Durlofsky, L. J., and Aziz, K. "Drift-Flux Parameters for Three-Phase Steady-State Flow in Wellbores," paper SPE 89836, Society of Petroleum Engineers Journal (2005) 10, No. 2, 130-137; also presented at the SPE Annual Technical Conference and Exhibition, Houston, Texas, USA (September 26-29, 2004).

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.322 WSEGDFMD – DEFINE MULTI-SEGMENT WELL DRIFT FLUX SLIP MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSEGDFMD keyword defines a multi-segment well's drift flux slip model definition that sets the type of slip model to be used. A slip model²⁰⁸ and ²⁰⁹ enables the different phases in the wellbore to flow at different velocities, for example gas will flow up the tubing at a higher velocity than oil and water. The option is activated by the FLOWOPT parameter on the WELSEGS keyword in the SCHEDULE section; however, the slip model flow calculation is not available in OPM Flow.

See also the WSEGDFIN keyword that sets the slip model's input parameters and the WSEGDFPA keyword that allows the model default values employed by WSEGDFMD to be modified..

This keyword is ignored by OPM Flow and has no effect on the simulation.

²⁰⁸ Shi, H., Holmes, J.A., Durlofsky, L. J., Aziz, K., Diaz, L. R., Alkaya, B., and Oddie, G. "Drift-Flux Modeling of Two-Phase Flow in Wellbores," paper SPE 84228, Society of Petroleum Engineers Journal (2005) 10, No. 1, 24-33; also presented as "Drift-Flux Modeling of Multiphase Flow in Wellbores," at the SPE Annual Technical Conference and Exhibition, Denver, Colorado, USA (October 5-8, 2003).

²⁰⁹ Shi, H., Holmes, J.A., Diaz, L. R., Durlofsky, L. J., and Aziz, K. "Drift-Flux Parameters for Three-Phase Steady-State Flow in Wellbores," paper SPE 89836, Society of Petroleum Engineers Journal (2005) 10, No. 2, 130-137; also presented at the SPE Annual Technical Conference and Exhibition, Houston, Texas, USA (September 26-29, 2004).

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.323 WSEGDFPA – DEFINE MULTI-SEGMENT WELL DRIFT FLUX SLIP MODEL PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, WSEGDFPA, enables modification of a multi-segment well's drift flux slip model default parameters used by the WSEGDFMA keyword in the SCHEDULE section to define the model. A slip model²¹⁰ and ²¹¹ enables the different phases in the wellbore to flow at different velocities, for example gas will flow up the tubing at a higher velocity than oil and water. The option is activated by the FLOWOPT parameter on the WELSEGS keyword in the SCHEDULE section; however, the slip model flow calculation is not available in OPM Flow.

See also the WSEGDFIN keyword that sets the slip model's input parameters and the WSEGDFMD keyword that sets which drift flux slip model should be used. Note if the WSEGDFPA keyword is used than it must be placed after the WSEGDFMD keyword, but before the WELSEGS keyword that defines a multi-segment well. All the aforementioned keywords are in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

²¹⁰ Shi, H., Holmes, J.A., Durlofsky, L. J., Aziz, K., Diaz, L. R., Alkaya, B., and Oddie, G. "Drift-Flux Modeling of Two-Phase Flow in Wellbores," paper SPE 84228, Society of Petroleum Engineers Journal (2005) 10, No. 1, 24-33; also presented as "Drift-Flux Modeling of Multiphase Flow in Wellbores," at the SPE Annual Technical Conference and Exhibition, Denver, Colorado, USA (October 5-8, 2003).

²¹¹ Shi, H., Holmes, J.A., Diaz, L. R., Durlofsky, L. J., and Aziz, K. "Drift-Flux Parameters for Three-Phase Steady-State Flow in Wellbores," paper SPE 89836, Society of Petroleum Engineers Journal (2005) 10, No. 2, 130-137; also presented at the SPE Annual Technical Conference and Exhibition, Houston, Texas, USA (September 26-29, 2004).

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.324 WSEGEXSS – DEFINE MULTI-SEGMENT WELL IMPORT-EXPORT SEGMENT VOLUMES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WSEGEXSS, enables the import or export of fluids from a segment in a multi-segment well. This can be used to, for example, model gas lift injection for oil wells under artificial lift, or to approximate the behavior of a down-hole separator. The import-export fluid volumes can either be expressed as rates or defined as a function of a segment's pressure value.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.325 WSEGFLIM - DEFINE MULTI-SEGMENT WELL ARTIFICIAL CHOKE CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WSEGFLIMS enables an artificial choke that chokes a given phase flow rate for a segment in a multi-segment well. This can be used, for example, to constraint unwanted production phase through a section of tubing, or to model a down-hole choke. The keyword provides coefficients that are applied to the frictional pressure drop across a multi-segment well's segment in order to inhibit production from that particular zone or segment. As such, the keyword does not actually model a down-hole choke; hence, the term artificial.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.326 WSEGFMOD – DEFINE MULTI-SEGMENT WELL MODEL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSEGFMOD declares the multi-phase flow model to be used to calculate the pressure drop within an individual segment for multi-segment wells. The FLOWOPT parameter on the WELSEGS keyword in the SCHEDULE section sets the default multi-segment well model. FLOWOPT is a character string that can be set to HO that activates the homogeneous model, that is all phases flow at the same velocity, or DF that invokes the Drift Flux Slip model (note OPM Flow only supports the default value of HO for the homogeneous model). Here WSEGFMOD can be used to set the flow model for a segment to either the homogeneous model or the Drift Flux Slip model, and addition a:VLP table allocated via the WSEGTABLE keyword, or a specific model as defined by the WSEGVALV, WSEGFLIM and WSEGLABY keywords. All the aforementioned keywords are in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.327 WSEGINIT - DEFINE MULTI-SEGMENT WELL INITIAL CONDITIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

Normally the simulator calculates the initial conditions for multi-segment wells, that is the pressure and fluid distributions in each segment. However, there are occasions when manually setting the pressures and phase distributions for each segment to investigate certain flow conditions may be useful. In this case the WSEGINIT keyword may be used to specify the initial conditions manually. Note that segments not initialized by this keyword will be automatically initialized by the simulator

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.328 WSEGITER – DEFINE MULTI-SEGMENT WELLS ITERATION PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSEGITER keyword defines the multi-segment well solution iteration sequence and solution controls.

OPM Flow uses a different numerical scheme which makes this keyword redundant; hence, OPM Flow ignores this keyword. It is documented here for completeness. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to set the numerical control parameters for OPM Flow.

12.3.329 WSEGLABY - DEFINE MULTI-SEGMENT WELL LABYRINTH ICD CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSEGSICD keyword defines a multi-segment well segment to be a labyrinth Inflow Control Device. ("ICD") as part of a completion for a multi-segment well. Note that the well must have been previously defined by the WELSPECS and WELSEGS keywords in the SCHEDULE section and that the data for the keyword should be repeated for each multi-segment completion that contains a labyrinth ICD.

An ICD is a well completion component usually installed along the producing section of a well to minimize the unwanted water and gas breakthrough in an oil well, or early water production in a gas well, due to an uneven flow profile over the completed interval. Permeability variations over the producing interval cause the high permeability zones to produce higher quantities of fluids than the lower permeability zones and this uneven producing fluid profile may result in bypassed hydrocarbons. Secondly, for horizontal wells, the pressure loss from the "toe" to the "heel" of the well again results in an uneven fluid profile over the producing interval. In order to rectify this ICDs can be installed so that the well fluids have to flow through an ICD before entering the tubing; thus, creating an additional "designed" pressure loss.

A labyrinth ICD is a type of frictional ICD that adds an additional pressure loss by directing the fluid along a series of channels before entering the tubing. The channel flow path is designed in such a manner as to create the desired pressure loss for a given ICD. By placing various ICD's over the production interval one can design a completion that results in a more uniform producing fluid profile throughout the length of the producing interval. Although this type of ICD is not implemented in OPM Flow, it works in a similar fashion to how a spiral ICD works. Spiral ICDs are implemented in OPM Flow and the data is entered via the WSEGSICD keyword in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.330 WSEGLINK - DEFINE MULTI-SEGMENT WELL LOOPED FLOW PATHS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WSEGLINK, specifies multi-segment well looped flow paths as part of a completion for a multi-segment well. A looped segment results in the nodes of the two individual segments that are looped (or connected) having the same solution pressures and oil, water and gas flowing rates.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.331 WSEGMULT – DEFINE MULTI-SEGMENT WELL FRICTIONAL PRESSURE LOSS MULTIPLIERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WEGMULT supplies a set of constants used to modify (or scale) a multi-segment well's segment frictional pressure drop between connecting segments. The constants enable either a constant pressure to be applied, or for the pressure drop to vary as a function of the Gas-Oil Ratio ("GOR") or the Water-Oil Ratio ("WOR"). The simulator calculated pressure drop is multiplied by the following resulting value:

$$\text{Frictional Loss Multiplier} = \min \left(x_1 + x_2 (\text{WOR})^{x_3} + x_4 \left(\frac{\text{GOR}}{\text{GOR}_{\min}} \right)^{x_5}, 1.0 \right) \quad (12.38)$$

Where the constants x_1 to x_5 are defined by the values on this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.332 WSEGPROP – MODIFY MULTI-SEGMENT WELLS AND THEIR SEGMENT STRUCTURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WSEGPROP keyword allows for the editing of exiting multi-segment wells created by WELSEGS keyword in the SCHEDULE section without having to re-define all the information that is on the WELSEGS keyword. Note that the well must have been previously define by both the WELSPECS and WELSEGS keywords in the SCHEDULE section to use the WSEGPROP keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which a multi-segment well is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	ISEG1	A positive integer greater than or equal to two and less than or equal to MXSEGS on WSEGDIRS keyword in the RUNSPEC section that defines the start of a segment			None
3	ISEG2	A positive integer greater than or equal to two and less than or equal to ISEG1 on this record and MXSEGS on the WSEGDIRS keyword in the RUNSPEC section that defines the end of a segment.			None
4	ID	A real positive value that defines the tubing internal <u>diameter</u> of the segment for the well.			Previous Entered Value
		feet	m	cm	
5	EPSILON	A real positive value that defines the tubing absolute roughness of the segment for the well.			Previous Entered Value
		feet	m	cm	
6	XAREA	XAREA is real positive value equal to or greater than zero that defines the cross sectional area for fluid flow. Currently this option is not supported by OPM Flow.			Previous Entered Value
		ft ²	m ²	cm ²	
7	VOLSEG	VOLSEG is a real positive value that defines the effective segment volume for the this segment. Currently this option is not supported by OPM Flow.			Previous Entered Value
		ft ³	m ³	cm ³	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
8	XAREAS	XAREAS is real positive value equal to or greater than zero that defines the cross sectional area of the pipe wall for this segment, that is used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section. Currently this option is not supported by OPM Flow.			Previous Entered Value
	ft ²	m ²	cm ²		
9	VHEATCAP	VHEATCAP is real positive value equal to or greater than zero that defines the volumetric heat capacity of the pipe wall used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section. Currently this option is not supported by OPM Flow.			Previous Entered Value
	Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K		
10	THCON	THCON is real positive value equal to or greater than zero that defines the thermal conductivity of the pipe wall used in thermal conductivity calculations for when the temperature calculation is activated by the TEMP keyword in the RUNSPEC section. Currently this option is not supported by OPM Flow.			Previous Entered Value
	Btu/ft/day/°R	kJ/m/day/K	J/cm/hr/K		
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.112:WSEGPOR Keyword Description

The total number of wells should be defined via the WELLSDIMS keyword and the number of multi-segment wells should be declared on the WSEG DIMS keyword, both keywords are in the RUNSPEC section.

See also the WELSPERCS keyword to define wells, the COMPDAT keyword to define the well completions for both ordinary wells and multi-segment wells, and the COMPSEGS keyword to define a multi-segment well segment completions. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example modifies two segments in well OP01 and one segment in well OP02.

```
--
--      WELL SEGMENT SPECIFICATION DATA
--
-- WELL  SEG  SEG  TUBE  TUBE    XSEC  VOL
-- NAME  ISTR  IEND  ID    ROUGH   AREA  SEG
WSEGPOR
OP01      12   14   0.3    0.00010
OP01      13   15   0.275  0.00010
OP02      14   14   0.275  0.00010
/
```

Note that the two multi-segment wells and their respective segments must have been previously defined by the WELSEGS keyword.

12.3.333 WSEGPULL – DEFINE A MULTI-SEGMENT WELL DOWN-HOLE SEPARATOR PUMP

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WSEGPULL, specifies a multi-segment well segment to be a pull-through pump for a down-hole water separator, defined by the WSEGSEP keyword in the SCHEDULE section, and defines the various parameters for this type of pump. Down-hole separators are used to separate water or free gas from the in situ fluid entering the wellbore in order to increase hydrocarbon recovery.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.334 WSEGSEP – DEFINE A MULTI-SEGMENT WELL DOWN-HOLE SEPARATOR

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WSEGSEP specifies a multi-segment well segment to be a down-hole separator, that enables the separation of fluids down-hole. Down-hole separators are used to separate water or free gas from the in situ fluid entering the wellbore in order to increase hydrocarbon recovery. See also the WSEGPULL keyword in the SCHEDULE section that specifies a pull-through pump for a down-hole water separator.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.335 WSEGSICD – DEFINE MULTI-SEGMENT WELL SPIRAL ICD CONNECTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WSEGSICD keyword defines a multi-segment well segment to be a spiral Inflow Control Device. (“ICD”) as part of a completion for a multi-segment well. Note that the well must have been previously define by the WELSPECS and WELSEGS keywords in the SCHEDULE section and that the data for the keyword should be repeated for each multi-segment completion that contains a spiral ICD.

An ICD is a well completion component usually installed along the producing section of a well to minimize the unwanted water and gas breakthrough in an oil well, or early water production in a gas well, due to an uneven flow profile over the completed interval. Permeability variations over the producing interval cause the high permeability zones to produce higher quantities of fluids than the lower permeability zones and this uneven producing fluid profile may result in bypassed hydrocarbons. Secondly, for horizontal wells, the pressure loss from the “toe” to the “heel” of the well again results in an uneven fluid profile over the producing interval. In order to rectify this ICDs can be installed so that the well fluids have to flow through an ICD before entering the tubing; thus, creating an additional “designed” pressure loss.

A spiral ICD is a type of frictional ICD that adds an additional pressure loss by directing the fluid along a “channel” (spiral/helix) before entering the tubing. The channel flow path is designed in such a manner as to create the desired pressure loss for a given ICD. By placing various ICD’s over the production interval one can design a completion that results in a more uniform producing fluid profile throughout the length of the producing interval.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which a multi-segment well is being defined. Note that the well name (WELNAME) must have been declared previously using both the WELSPECS and WELSEGS keywords in the SCHEDULE section, otherwise an error may occur.			None
2	ISEG1	A positive integer greater than or equal to two and less than or equal to MXSEGS on the WSEGDIMS keyword in the RUNSPEC section that defines the start of a segment			None
3	ISEG2	A positive integer greater than or equal to two and not less then ISEG1 on this record and less than or equal to MXSEGS on the WSEGDIMS keyword in the RUNSPEC section, that defines the end of a segment			None
4	ICDSTREN	A real positive value greater than zero that defines an empirical constant for the strength of the given ICD as determined from measurements using the calibrated fluid.			None
		psia(rft ³ /day) ²	barsa/(rm ³ /day) ²	atma/(rcc/hr) ²	

No.	Name	Description			Default		
		Field	Metric	Laboratory			
5	ICDLEN	A real value that defines the length of the ICD used in conjunction with NSCAFAC to calculate a scaling factor to be applied to the reservoir flow to adjust the flow through each ICD, that is: 1) If NSCAFAC equals zero: then the scale factor is equal to the length of the ICD (ICDLEN) divided by the length of the tubing section, that is the parent of the ICDs, then this allows for the case when the ICD segment may represent a number of ICDs in parallel. 2) If NSCAFAC equals one: then the scale factor is equal to the absolute value of ICDLEN. 3) If NSCAFAC equals two: then the scale factor is equal to the length of ICDLEN, divided by the total length of the completions which supply the ICD. NSCALFAC explicitly sets which of the above three options is used. If NSCALFAC is defaulted, then option 1) is used whenever ICDLEN is positive and option 2) when ICDLEN is negative.					Defined
		feet 39.37	m 12.00	cm 1,2000			
6	CALDEN	CALDEN is a real positive value greater than zero that defines the density of the calibrating fluid at surface conditions.			Defined		
		lb/ft ³ 62.416	kg/m ³ 1000.25	gm/cc 1.00025			
7	CALVISC	CALVISC is a real positive value greater than zero that defines the viscosity of the calibrating fluid at surface conditions.			1.45		
		cP	cP	cP			
8	EMLCRT	EMLCRT is a real positive value greater than zero that defines the “local water” in liquid fraction used to determine whether the “water-in-oil” or “oil-in-water” viscosity emulation equation should be applied.			0.5		
		dimensionless	dimensionless	dimensionless			
9	EMLTRANS	EMLTRANS is a real positive value greater than zero that defines the width of the transition zone around EMLCRT and is used to ensure that the calculated viscosity forms a continuous function of water in liquid fraction. Within this region, the emulsion viscosity is a linear interpolation between the “water-in-oil” and “oil-in-water” viscosity values either side of the region.			0.05		
		dimensionless	dimensionless	dimensionless			
10	EMLMAX	EMLMAX is a real positive value greater than zero that defines the maximum emulsion viscosity to continuous phase viscosity (oil or water) ratio.			5.0		
		dimensionless	dimensionless	dimensionless			

No.	Name	Description			Default		
		Field	Metric	Laboratory			
11	NSCAFAC	NSCALFAC is a positive integer value that is greater than or equal to zero, that sets the method to be used when applying the scaling factor and should be set to one of the following: 1) If NSCAFAC equals zero: then the scale factor is equal to the length of the ICD (ICDLEN) divided by the length of the tubing section, that is the parent of the ICDs, then this allows for the case when the ICD segment may represent a number of ICDs in parallel. 2) If NSCAFAC equals one: then the scale factor is equal to the absolute value of ICDLEN. 3) If NSCAFAC equals two: then the scale factor is equal to the length of ICDLEN, divided by the total length of the completions which supply the ICD. NSCALFAC explicitly sets which of the above three options is used. If NSCALFAC is defaulted, then option 1) is used whenever ICDLEN is positive and option 2) when ICDLEN is negative.					
		dimensionless	dimensionless	dimensionless	-1		
		12	CALRATE	A real positive value that defines the maximum surface flow rate for which the ICD was calibrated.			
scf/d	sm ³ /day			scc/hour	None		
13	STATUS	A defined character string of length four that defines the ICD's operational status, STATUS should be set to one of the following character strings: 1) OPEN: the ICD connection is are open to flow. 2) SHUT: the ICD connections is closed to flow (shut-in).			OPEN		
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.							

Table 12.113:WSEGSICD Keyword Description

The total number of wells should be defined via the WELLSDIMS keyword and the number of multi-segment wells should be declared on the WSEGDIMS keyword, both keywords are in the RUNSPEC section. In addition, the WELSPECS keyword should be used to define wells, the COMPDAT keyword to define the well completions for both ordinary wells and multi-segment wells, and the COMPSEGS keyword to define a multi-segment segment completions. Finally, the WSEGSICD keyword can then be use to define ICD connections for the well. All the aforementioned keywords are described in the SCHEDULE section.

The equations used to calculate the pressure drop across the ICD are given below and illustrate how the pressure reduction is dependent on the density and viscosity of the fluid flowing through the device.

$$\Delta P = \left(\frac{\rho_{calibrated}}{\rho_{mixture}} \cdot \frac{\mu_{mixture}}{\mu_{calibrated}} \right)^{\frac{1}{4}} \cdot \frac{\rho_{mixture}}{\rho_{calibrated}} \cdot \beta \cdot q^2 \quad (12.39)$$

Where:

ΔP = the pressure drop across the device.

$\rho_{mixture}$ = the density of the mixture, as per:

$$\rho_{mixture} = (\alpha_{oil} \cdot \rho_{oil}) + (\alpha_{wat} \cdot \rho_{wat}) + (\alpha_{gas} \cdot \rho_{gas}) \quad (12.40)$$

$\rho_{calibrated}$ = CALDEN, the density of the calibrating fluid at surface conditions.

$\mu_{calibrated}$ = CALVISC, the viscosity of the calibrating fluid at surface conditions.

$\mu_{mixture}$ = the viscosity of the mixture, as per:

$$\mu_{mixture} = (\alpha_{oil} + \alpha_{wat}) \cdot \mu_{emulsion} + (\alpha_{gas} \cdot \mu_{gas}) \quad (12.41)$$

$\mu_{emulsion}$ = the viscosity of the oil-water emulsion at local conditions.

β = ICDSTREN, the strength of the ICD as measured using the calibrated fluid.

q = the local flow rate through the ICD at local conditions adjusted for scaling based on ICDLEN and NSCAFAC parameters in Table 12.113.

In equation (12.40), α_i represents the volume fraction of oil, water and gas at local conditions and ρ_i the density of the three phases. Similarity for equation (12.41), α_i represents the volume fraction of oil, water and gas at local conditions and μ_i the viscosity of the three phases.

See also the WSEGAICD keyword in the SCHEDULE section for autonomous ICDs, that work in a similar fashion to how sprial ICDs work.

Example

The following example defines one producing well segment oil well (OP01) using the WELSPEDS, WELSEGS COMPDAT and COMPSEGS keywords, followed by the WSEGSICD keyword to define the spiral inflow control devices for the well.

```
--
--      WELL SPECIFICATION DATA
--
-- WELL  GROUP      LOCATION  BHP    PHASE  DRAIN  INFLOW  OPEN  CROSS  PVT
-- NAME  NAME        I      J  DEPTH  FLUID   AREA   EQUANS SHUT  FLOW  TABLE
WELSPEDS
OP01    PLATFORM    10    10   1*     OIL                      /
/
--
--      WELL CONNECTION DATA
--
-- WELL  --- LOCATION ---  OPEN  SAT  CONN  WELL  KH  SKIN  D  DIR
-- NAME  II  JJ  K1  K2  SHUT  TAB  FACT DIA  FACT FACT FACT PEN
COMPDAT
OP01    10  10   1   1  OPEN  1*   200.  0.5                      /
OP01    10  10   2   2  OPEN  1*   200.  0.5                      /
OP01    10  10   3   6  OPEN  1*   200.  0.4                      /
OP01    10  10   4   4  OPEN  1*   200.  0.4                      /
OP01    10  10   5   5  OPEN  1*   200.  0.4                      /
OP01    10  10   6   6  OPEN  1*   200.  0.4                      /

OP01    9   10   2   2  OPEN  1*   200.  0.4                      /
OP01    8   10   2   2  OPEN  1*   200.  0.4                      /
OP01    7   10   2   2  OPEN  1*   200.  0.4                      /
OP01    6   10   2   2  OPEN  1*   200.  0.4                      /
OP01    5   10   2   2  OPEN  1*   200.  0.4                      /

OP01    10   9   3   3  OPEN  1*   200.  0.4                      /
OP01    10   8   3   3  OPEN  1*   200.  0.4                      /
OP01    10   7   3   3  OPEN  1*   200.  0.4                      /
OP01    10   6   3   3  OPEN  1*   200.  0.4                      /
OP01    10   5   3   3  OPEN  1*   200.  0.4                      /

OP01    9   10   5   5  OPEN  1*   200.  0.4                      /
OP01    8   10   5   5  OPEN  1*   200.  0.4                      /
OP01    7   10   5   5  OPEN  1*   200.  0.4                      /
OP01    6   10   5   5  OPEN  1*   200.  0.4                      /
OP01    5   10   5   5  OPEN  1*   200.  0.4                      /

OP01    10   9   6   6  OPEN  1*   200.  0.4                      /
OP01    10   8   6   6  OPEN  1*   200.  0.4                      /
OP01    10   7   6   6  OPEN  1*   200.  0.4                      /
OP01    10   6   6   6  OPEN  1*   200.  0.4                      /
OP01    10   5   6   6  OPEN  1*   200.  0.4                      /
/
--
--      WELL SEGMENT SPECIFICATION DATA
--
-- WELL  NODAL      LEN      WELL  DEPH  PRESS  FLOW
-- NAME  DEPTH      TUBING  VOLM  OPTN  CALC  MODEL
WELSEGS
OP01    2512.5      2512.5  1.0E-5  ABS   HFA   H0                      /
--
--      SEG  SEG  BRAN  SEG  TUBING  NODAL  TUBE  TUBE  XSEC  VOL
--      ISTR  IEND NO    NO    LENGTH  DEPTH  ID    ROUGH AREA SEG
--          2    2    1    1    2537.5  2534.5  0.3   0.00010 /
--          3    3    1    2    2562.5  2560.5  0.3   0.00010 /
```

4	4	1	3	2587.5	2593.5	0.3	0.00010	/
5	5	1	4	2612.5	2614.5	0.3	0.00010	/
6	6	1	5	2637.5	2635.5	0.3	0.00010	/
7	7	2	2	2737.5	2538.5	0.2	0.00010	/
8	8	2	7	2937.5	2537.5	0.2	0.00010	/
9	9	2	8	3137.5	2539.5	0.2	0.00010	/
10	10	2	9	3337.5	2535.5	0.2	0.00010	/
11	11	2	10	3537.5	2536.5	0.2	0.00010	/
12	12	3	3	2762.5	2563.5	0.2	0.00010	/
13	13	3	12	2962.5	2562.5	0.1	0.00010	/
14	14	3	13	3162.5	2562.5	0.1	0.00010	/
15	15	3	14	3362.5	2564.5	0.1	0.00010	/
16	16	3	15	3562.5	2562.5	0.1	0.00010	/
17	17	4	5	2812.5	2613.5	0.2	0.00010	/
18	18	4	17	3012.5	2612.5	0.1	0.00010	/
19	19	4	18	3212.5	2612.5	0.1	0.00010	/
20	20	4	19	3412.5	2612.5	0.1	0.00010	/
21	21	4	20	3612.5	2613.5	0.1	0.00010	/
22	22	5	6	2837.5	2634.5	0.2	0.00010	/
23	23	5	22	3037.5	2637.5	0.2	0.00010	/
24	24	5	23	3237.5	2638.5	0.2	0.00010	/
25	25	5	24	3437.5	2639.5	0.1	0.00010	/
26	26	5	25	3637.5	2639.5	0.1	0.00010	/

/

--

COMPLETION SEGMENT SPECIFICATION DATA

--

-- WELL

-- NAME

COMPSEGS

OP01

--

-- LOCATION --			BRAN	TUBING	NODAL	DIR	LOC	MID	COMP	ISEG
II	JJ	K1	NO	LENGTH	DEPTH	PEN	I, J, K	PERFS	LENGTH	NO.
10	10	1	1	2512.5	2525.0					/
10	10	2	1	2525.0	2550.0					/
10	10	3	1	2550.0	2575.0					/
10	10	4	1	2575.0	2600.0					/
10	10	5	1	2600.0	2625.0					/
10	10	6	1	2625.0	2650.0					/
9	10	2	2	2637.5	2837.5					/
8	10	2	2	2837.5	3037.5					/
7	10	2	2	3037.5	3237.5					/
6	10	2	2	3237.5	3437.5					/
5	10	2	2	3437.5	3637.5					/
10	9	3	3	2662.5	2862.5					/
10	8	3	3	2862.5	3062.5					/
10	7	3	3	3062.5	3262.5					/
10	6	3	3	3262.5	3462.5					/
10	5	3	3	3462.5	3662.5					/
9	10	5	4	2712.5	2912.5					/
8	10	5	4	2912.5	3112.5					/
7	10	5	4	3112.5	3312.5					/
6	10	5	4	3312.5	3512.5					/
5	10	5	4	3512.5	3712.5					/

```

10  9  6  5  2737.5 2937.5 /
10  8  6  5  2937.5 3137.5 /
10  7  6  5  3137.5 3337.5 /
10  6  6  5  3337.5 3537.5 /
10  5  6  5  3537.5 3737.5 /
--
--      MULTI-SEGMENT WELL ICD SEGMENT SPECIFICATION DATA
--
-- WELL  SEG  SEG  ICD  ICD  CAL  CAL  EML  EML  EML  SCAL  CAL  OPEN
-- NAME  ISTR  IEND STRNEN LEN  DEN  VISC CRIT  TRANS MAX  FAC  RATE CLOSE
WSEGSICD
OP01      7   10  0.00025  1*  1.0  0.45  0.50  0.05  5.0  2   1*  OPEN /
OP01     12   15  0.00025  1*  1.0  0.45  0.50  0.05  5.0  2   1*  OPEN /
OP01     17   20  0.00025  1*  1.0  0.45  0.50  0.05  5.0  2   1*  OPEN /
OP01     22   22  0.00025  1*  1.0  0.45  0.50  0.05  5.0  2   1*  OPEN /
OP01     23   23  0.00025  1*  1.0  0.45  0.50  0.05  5.0  2   1*  OPEN /
OP01     24   24  0.00025  1*  1.0  0.45  0.50  0.05  5.0  2   1*  OPEN /
OP01     25   25  0.00050 10.0  1.0  0.45  0.50  0.05  5.0  2   1*  OPEN /
/

```

Branch number two uses one ICD for segments seven to ten, branch number three again uses only one ICD for segments 12 to 15 and similarly branch number three uses one ICD. The fifth and final branch has a total of four ICDs with the last interval having a 10 foot length. Since NSCAFAC equals two for the ICDs, then the scale factor is equal to the length to ICDLEN, divided by the total length of the completions which supply the ICD. Where ICDLEN is defaulted, the default value of 39.37 ft will be used for field units and 12 m for SI units.

12.3.336 WSEGSOLV DEFINE MULTI-SEGMENT WELL ITERATIVE LINEAR SOLVER PARAMETERS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSEGSOLV keyword defines the numerical control parameters for the iterative linear solver for multi-segment well looped flow paths, as defined by the WSEGLINK keyword in the SCHEDULE section. A looped segment results in the nodes of the two individual segments that are looped (or connected) having the same solution pressures and oil, water and gas flowing rates.

This keyword is ignored by OPM Flow and has no effect on the simulation.

12.3.337 WSEGTABL – ASSIGN MULTI-SEGMENT WELL VLP TABLES TO SEGMENTS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WSEGTABL assigns previously defined Vertical Lift Performance (“VLP”) tables as specified by the VFPROD keyword in the SCHEDULE section, to multi-segment well segments, as well as stipulating how the tables are to be applied.

The FLOWOPT parameter on the WELSEGS keyword in the SCHEDULE section sets the default multi-segment well model. FLOWOPT either activates the homogeneous model, that is all phases flow at the same velocity, or the Drift Flux Slip model. However, the WSEGMOD keyword in the SCHEDULE section, can be used to set the flow model for a segment to either the homogeneous model or the Drift Flux Slip model, and addition a: VLP table allocated via the WSEGTABL keyword, or a specific model as defined by the WSEGVALV, WSEGFLIM and WSEGLABY keywords.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.338 WSEGVAlV – DEFINE MULTI-SEGMENT WELL SUB-CRITICAL VALVE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WSEGVAlV keyword defines a multi-segment well segment to be a sub-critical valve Inflow Control Device. (“ICD”) as part of a completion for a multi-segment well. Note that the well must have been previously define by the WELSPECS and WELSEGS keywords in the SCHEDULE section and that the data for the keyword should be repeated for each multi-segment completion that contains a sub-critical valve ICD.

An ICD is a well completion component usually installed along the producing section of a well to minimize the unwanted water and gas breakthrough in an oil well, or early water production in a gas well, due to an uneven flow profile over the completed interval. Permeability variations over the producing interval cause the high permeability zones to produce higher quantities of fluids than the lower permeability zones and this uneven producing fluid profile may result in bypassed hydrocarbons. Secondly, for horizontal wells, the pressure loss from the “toe” to the “heel” of the well again results in an uneven fluid profile over the producing interval. In order to rectify this ICDs can be installed so that the well fluids have to flow through an ICD before entering the tubing; thus, creating an additional “designed” pressure loss.

A sub-critical valve ICD is a type of frictional ICD that adds an additional pressure loss by directing the fluid through a constriction before entering the tubing. The pressure drop is a function of the fluid density, the volumetric flow rate, and the diameter of the constriction. By placing various ICD’s over the production interval one can design a completion that results in a more uniform producing fluid profile throughout the length of the producing interval.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which a multi-segment well is being defined. Note that the well name (WELNAME) must have been declared previously using both the WELSPECS and WELSEGS keywords in the SCHEDULE section, otherwise an error may occur.			None
2	ISEG1	A positive integer greater than or equal to two and less than or equal to MXSEGS on the WSEG DIMS keyword in the RUNSPEC section that defines the segment containing the sub-critical valve.			None
3	ICDCV	A real positive value greater than zero that defines the dimensionless flow coefficient for the valve (C_v). This a vendor specific value for a given vendor’s ICD.			None
		dimensionless	dimensionless	dimensionless	
4	AREAREST	A real positive value that defines the cross-sectional area of flow in the restricted section of the valve (A_r) and should have a minimum value of 1.0×10^{-10} . AREAREST is used to convert the segment volumetric flow rate into the flow velocity at the constriction (U_r).			None
		ft ²	m ²	cm ²	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

No.	Name	Description			Default
		Field	Metric	Laboratory	
5	SEGLEN	<p>A real positive value greater than or equal to zero that defines the additional pipe length for the frictional pressure drop (L).</p> <p>If set to zero then there is no additional pressure loss due to friction, whereas, if set to the default (1*), then the segment pipe length is calculated from the corresponding WELSEGS keyword.</p>			Defined
		ft	m	cm	
6	ID	<p>A real positive value that defines the pipe internal <u>diameter</u> of the segment used to calculate the pressure drop due to friction (D).</p> <p>The value is used to replace the segment pipe internal diameter defined on the WELSEGS keyword in record 2-7, also named ID. If ID is defaulted on this keyword then the equivalent value on the WELSEGS keyword will be used instead.</p> <p>Note for non-circular pipe segments use the equivalent diameter instead, that is:</p> $\text{Equivalent ID} = \frac{4.0 \times (\text{Cross-Sectional Area})}{\text{Perimeter}}$			Defined
		feet	m	cm	
7	EPSILON	<p>A real positive value that defines the pipe absolute roughness for this segment.</p> <p>The value is used to replace the segment pipe absolute roughness defined on the WELSEGS keyword in record 2-8, also named EPSILON. If EPSILON is defaulted on this keyword then the equivalent value on the WELSEGS keyword will be used instead.</p>			Defined
		feet	m	cm	
8	AREAPIPE	<p>A real positive value that defines the cross-sectional area of flow in the pipe (A_p), as opposed to the restricted section of the valve (A_r).</p> <p>AREAPIPE is used to convert the segment volumetric flow rate into the flow velocity through the pipe (U_p).</p> <p>The value is used to replace the segment pipe cross-sectional area of flow defined on the WELSEGS keyword in record 2-9, named XAREA. If AREAPIPE is defaulted on this keyword then the equivalent value on the WELSEGS keyword will be used instead.</p>			Defined
		ft ²	m ²	cm ²	
9	STATUS	<p>A character string of length four that defines the ICD's operational status, STATUS should be set to one of the following character strings:</p> <ol style="list-style-type: none"> 1) OPEN: the ICD connection is open to flow. 2) SHUT: the ICD connections is closed to flow (shut-in). 			OPEN
10	AREAMAX	<p>A real positive value that defines the maximum cross-sectional area of flow in the restricted section of the valve (A_{max}).</p> <p>AREAMAX is used to convert the segment volumetric flow rate into the maximum flow velocity at the constriction (U_r).</p> <p>If defaulted then AREAPIPE will be used if defined, otherwise XAREA (item 2-9) on the WELSEGS keyword will be used.</p>			Defined
		ft ²	m ²	cm ²	

No.	Name	Description			Default
		Field	Metric	Laboratory	
Notes: 1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.114: WSEGVAlV Keyword Description

The total number of wells should be defined via the WELSDIMS keyword and the number of multi-segment wells should be declared on the WSEGWDIMS keyword, both keywords are in the RUNSPEC section. In addition, the WELSPCS keyword should be used to define wells, the COMPDAT keyword to define the well completions for both ordinary wells and multi-segment wells, and the COMPSEGS keyword to define a multi-segment segment completions. Finally, the WSEGVAlV keyword can then be used to define ICD connections for the well. All the aforementioned keywords are described in the SCHEDULE section.

OPM flow calculates the pressure drop across the ICD using a homogeneous sub-critical flow through a constriction model. The model consists of two variables, the pressure drop due to the constriction, $\delta P_{restriction}$, and the pressure drop due to friction, $\delta P_{friction}$, as shown in equation (12.42).

$$\delta P = \delta P_{restriction} + \delta P_{friction}$$

where

$$\delta P_{restriction} = C_1 \frac{\rho v_r^2}{2 C_v^2} \quad (12.42)$$

$$\delta P_{friction} = 2 C_2 f \frac{L}{D} v_p^2$$

Where:

- C_1 and C_2 = Unit conversion constants as listed in Table 12.115.
- C_v = Vendor supplied dimensionless flow coefficient for the valve.
- D = Diameter of the pipe.
- f = Fanning friction factor.
- L = Segment pipe length.
- ρ = Fluid mixture density.
- v_r = The flow velocity of the mixture through the constriction.
- v_p = The flow velocity of the mixture through the segment pipe.

Conversion Factor Constants and Variable Units					
No.	Name	Field	Metric	Laboratory	Property
1	C_1	2.159×10^{-4}	1.0×10^{-5}	9.869×10^{-7}	Constant
2	C_2	2.892×10^{-14}	1.340×10^{-15}	7.615×10^{-14}	
3	Density	lb/ft ³	kg/m ³	gm/cc	Units
4	Pressure	psia	bars	atm	
5	Velocity	ft/s	m/s	cm/s	
6	Volumetric Flow	ft ³ /day	m ³ /day	cc/hour	

Table 12.115: WELVALV Conversion Factor Constants and Units

In addition as both v_r and v_p are dependent on their respective cross-section areas then the volumetric flow (q) through the device requires that:

$$q = v_r A_r = v_p A_p \quad (12.43)$$

Substituting equation (12.43) for $\delta P_{restriction}$ in equation (12.42) one obtains:

$$\delta P_{restriction} = C_2 \frac{\rho q^2}{2 C_v^2 A_r^2} \quad (12.44)$$

Where:

- A_r = Cross-sectional area of the constriction.
- C_2 = Unit conversion constants as listed in Table 12.115.
- C_v = Vendor supplied dimensionless flow coefficient for the valve.
- ρ = Fluid mixture density.
- q = Volumetric flow rate.

The base strength of the device, K is defined using equation (12.44) as follows:

$$K = \frac{C_2}{2 C_v^2 A_r^2} \quad (12.45)$$

Note if K is greater than 0.1 then the device will be shut.

The setting of the device, that is how open the device is; is related to the restricted area and the maximum restricted area of the device, that is:

$$Setting\ of\ Device = \frac{A_r}{A_{max}} \quad (12.46)$$

Where:

- A_r = Cross-sectional area of the constriction.
- A_{max} = Maximum cross-sectional area of the constriction.

Example

The following example is based on one producing well segment oil well (OP01) using the WELSPECS, WELSEGS COMPDAT and COMPSEGS keywords, as per the WSEGSICD keyword example ([Example](#)), and is therefore not repeated here.

```
--
--          MULTI-SEGMENT WELL ICD SEGMENT SPECIFICATION DATA
--
-- WELL   SEG  DEVICE  AREA   PIPE   PIPE   PIPE   PIPE   OPEN  MAX
-- NAME   NO   CV      REST   LENG   ID     EPSI   AREA  SHUT  AREA
WSEGVALLV
OP01      7  0.960   0.012  1*     1*     1*     1*     OPEN  1*  / DEFAULT VALUES
OP01     12  0.960   0.012  1*     1*     1*     1*     OPEN  1*  / TAKEN FROM
OP01     17  0.960   0.012  1*     1*     1*     1*     OPEN  1*  / WELSEGS KEYWORD

OP01     22  0.850   0.100  1*     1*     1*     1*     OPEN  1*  /
OP01     23  0.850   0.100  1*     1*     1*     1*     OPEN  1*  /
OP01     24  0.850   0.100  1*     1*     1*     1*     OPEN  1*  /
OP01     25  0.850   0.100  1*     1*     1*     1*     OPEN  1*  /
/
```

Here segments 7, 12 and 17 have the same type of sub-critical valves with their pipe properties taken from the WELSEGS keyword used to define well OP01 as a multi-segment well. Similarly, segments 22 to 25 have the same ICD properties, and again the pipe properties are taken from the WELSEGS keyword.

12.3.339 WSOLVENT - DEFINE GAS INJECTION WELL SOLVENT FRACTION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WSOLVENT defines a gas injection well's solvent fraction in the injection stream that is to be used when the Solvent option has been activated by the SOLVENT keyword in the RUNSPEC section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name of a gas injection well for which the solvent fraction data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
4	SOLFRA	A real positive value greater than or equal to zero and less than or equal to one that defines the fraction of solvent in the gas well's injection stream.			None
		fraction	fraction	fraction	
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.116: WSOLVENT Keyword Description

Gas injection wells that are not declared via this keyword have their solvent fractions set to zero.

See also the GCONINJE keyword to define a group's injection targets and constraints, and the WCONINJE keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the solvent fractions for three gas injection wells for when the solvent option has been activated by the SOLVENT keyword in the RUNSPEC section.

```
--
--      DEFINE GAS INJECTION WELL SOLVENT FRACTION
--
-- WELL  SOLVENT
-- NAME  FRACTION
--      -----
WSOLVENT
GI01    0.0000      /
GI02    0.5000      /
GI03    0.5000      /
/
```

The solvent fraction for the GI01 gas injector is set to zero and both GI02 and GI03 gas injectors have solvent fraction values of 0.5 for their injection streams.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.340 WSURFACT - DEFINE WATER INJECTION WELL SURFACTANT CONCENTRATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WSURFACT defines a water injection well's surfactant concentration in the injection stream that is to be used when the Surfactant phase has been activated by either the SURFACT or SURFACTW keywords in the RUNSPEC section.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name of a gas injection well for which the solvent fraction data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	SURCON	A real positive value that defines the surfactant concentration of the well's injection stream.			None
		lb/stb	kg/sm ³	gm/scc	
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.117: WSURFACT Keyword Description

Water injection wells that are not declared via this keyword have their surfactant concentrations set to zero.

See also the GCONINJE keyword to define a group's injection targets and constraints, and the WCONINJE keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the surfactant concentrations for three water injection wells for when the surfactant phase option has been activated by either the SURFACT or SURFACTW keywords in the RUNSPEC section.

```
--
--      DEFINE WATER INJECTION WELL SURFACTANT CONCENTRATION
--
-- WELL  SURFACT
-- NAME  SURCON
--      -----
WSURFACT
WI01    0.2000      /
WI02    0.2000      /
WI03    0.2000      /
/
```

Here the surfactant concentration has been set to 0.200 for all three wells.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.341 WTADD – ADD A CONSTANT TO A WELL TARGET OR CONSTRAINT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WTADD, adds a constant to a previously define well's target or constraint, as stated on the WCONPROD, WCONINJE, or WELTARG keywords, but not for the history matching wells using the WCONHIST or WCONINJH keywords. All the aforementioned keywords are in the SCHEDULE section. The constant can be positive or negative.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.342 WTEMP – DEFINE AN INJECTION WELL'S FLUID TEMPERATURE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WTEMP keyword defines the temperature of the injection fluid being injected by an injection well.

This keyword can only be used if OPM Flow's thermal option has been activated by the THERMAL keyword in the RUNSPEC section. Note this is different to the commercial simulator that uses the TEMP keyword in the RUNSPEC section to activate the black-oil thermal model.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for an injection well for which the injection well fluid's temperature data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	TEMP	A real positive value greater than zero that defines the temperature of the injected fluid.			None
		°F	°C	°C	
Notes: 1) Injection wells that are not declared via this keyword have their injection fluid temperatures set to zero degrees in the run's units. 2) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.118: WTEMP Keyword Description

See also the GCONINJE keyword to define a group's injection targets and constraints, and the WCONINJE keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the injected fluid temperatures for three water injection wells for when the thermal option has been activated by the THERMAL keyword in the RUNSPEC section.

```
--
--      DEFINE INJECTION WELL FLUID TEMPERATURE
--
-- WELL  FLUID
-- NAME  TEMP.
--      -----
WTEMP
WI01    39.00      /
WI02    37.00      /
WI03    39.00      /
/
```

Here wells WI01 and WI03 inject water with a water temperature of 39 °F and well WI02's injection water temperature is 37 °F.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.343 WTEMPQ – OUTPUT WELL NAMES AND WELL LISTS TO THE PRINT FILE

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WTEMPQ prints out a user defined selected list of currently defined wells and well lists to the print file (*.PRT). The keyword allows for sub-setting the well names etc., using the normal well and well list naming conventions. For example to list all wells beginning with the characters “OP” then one would use “OP*” as the well name on this keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

12.3.344 WTEST – WELL TESTING CRITERIA FOR RE-OPENING CLOSED WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WTEST keyword outlined the testing procedures to be applied to wells that are closed for various reason to see if the wells are capable flowing under the current operating conditions. The keyword can be applied to single wells or groups of wells.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well connection data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	TIME	A real value greater than to zero that defines the period before another test is performed, for example if TIME is set equal to 365.25 (days), the test is performed every year.			None
		days	days	hours	
3	TEST	<p>A character string of up to five characters that defines the reason the well was closed. If a well was closed for one of the criteria then the well is tested to see if it can be put back on production. The characters that can be used to define TEST are as follows:</p> <ol style="list-style-type: none"> 1) P: meaning the well was closed due to a bottom-hole or tubing head pressure limit, or other physical limit then the well is tested to see if it can flow, if it can then it is put back on production, otherwise it remains closed. 2) E: meaning the well was closed due to a well or a well connection economic constraint then the well is tested to see if it can flow, if it can then it is put back on production, otherwise it remains closed. Here, if the well has at least one connection open then the well is opened. If a well has no open connections, then those that have been closed due to economic limit test ("ELT"), then ALL such connections are individually tested and reopened if they meet the ELT criteria as defined by the WECON, CECON and WECONINJ keywords in the SCHEDULE section. And the well is opened if there is at least one open connection. Where the ELT applies to ORAT, GRAT, WCUT, GOR and WGR etc. 3) G: meaning the well was closed due to a group economic constraint, as per the GECON, GECONT, GCONCAL, GCONPRI, GCONPRPD, and GCONSALE, keywords in the SCHEDULE section, then the well is tested to see if it can flow, if it can then it is put back on production, otherwise it remains closed. 4) D: not used by OPM Flow. 5) C: not used by OPM Flow. <p>The default value is an empty string " " that switches off testing.</p> <p>Note that only the E option is currently supported in OPM Flow.</p>			" "

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	NTIME	A positive integer greater than or equal to zero that define the number of times a well can be tested. The default value of zero means an infinite number of times.			0
5	START	A real positive value that defines the start up time used to prorate the rate at which the well is put back on production. If START is large compared to the time step size, then the well is brought on gradually, if it is less than, then the well is opened faster. The rate is prorated based on the following: $Q_i = Q_{final} \times \left(\frac{T_{End\ of\ Time\ Step} - T_{opened}}{START} \right)$ The default value of 0.0 means the well is opened immediately.			0.0
		days	days	hours	
Notes: 1) The keyword is followed by any number of records and each record is terminated by a “/” and the keyword should be terminated by a “/”.					

Table 12.119: WTEST Keyword Description

See also the WELSPEDS keyword to define a wells shut-in or stop options, WECON for setting a well's economic criteria, GCONPROD and GCONINJE for group controls, and GECON for setting a group's economic criteria. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines test criteria for all gas wells ("GP*") and three oil wells (OP01, OP02, and OP03).

```
--
--
--      WELL TESTING CRITERIA FOR RE-OPENING CLOSED WELLS
--
-- WELL   TST   TST   NO.   STRT
-- NAME  INTV  TYPE  TSTS  TIME
-- ----  -
WTEST
'GP*'   365.25 P      5      0.0
OP01    30.0  PEG     0      0.0
OP02    30.0  PEG     0      0.0
OP03    30.0  PEG     0      0.0
/
```

All the gas wells are test annually if they have been shut-in due to a bottom-hole or tubing head pressure limit, are tested five times after they have been closed, and are opened up immediately. The oil wells are tested every 30 days if they have been closes due bottom-hole or tubing head pressure limit, a well economic limit or a group economic limit. All the oil wells are tested an infinite amount of times and are opened up immediately. **Note that only the E option is currently supported in OPM Flow.**

12.3.345 WTHPMAX – DEFINE A WELL’S MAXIMUM FLOWING THP FOR SHUT-IN

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

WTHPMAX stipulates a well’s maximum flowing Tubing Head Pressure (“THP”), above which the well will be shut-in. The facility is useful if the THP exceeds the wellhead maximum design pressure, which can occur if excessive gas invades the wellbore. In addition to setting the maximum THP, the keyword defines the criteria for re-testing the well to see if the THP has fallen below the maximum value.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.346 WTMULT – MULTIPLE A WELL TARGET OR CONSTRAINT BY A CONSTANT

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

This keyword, WTMULT, multiplies a defined well's target or constraint by a constant, for the target and constraints previously stipulated on the WCONPROD, WCONINJE, or WELTARG keywords, but not for the history matching wells using the WCONHIST or WCONINJH keywords. All the aforementioned keywords are in the SCHEDULE section. The constant should be positive value.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well production targets and constraints flow streams (TARGET) are being adjusted by the CONSTANT parameter. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	TARGET	A defined character string that declares the production or injection flow stream for the well, that will be adjusted by multiplying the current value by the CONSTANT parameter. TARGET should be set to one of the following character strings: 1) ORAT: the well's surface oil production rate will be adjusted. 2) WRAT: the well's surface water production rate will be adjusted. 3) GRAT: the well's surface gas production rate will be adjusted. 4) LRAT: the well's surface liquid (oil plus water) production rate will be adjusted. 5) CRAT: the well's linearly combined maximum surface rate, as per the LINCOM keyword in the SCHEDULE section, will be adjusted. 6) RESV: the well's in situ reservoir volume rate will be adjusted. 7) BHP: the well's bottom-hole pressure will be adjusted. 8) THP: the well's tubing head pressure will be adjusted. In this case a vertical performance table must have been previously assigned to the well via the WCONPROD or WCONINJE keywords. The tables are entered via the VFPINJ or the VPPROD keywords. All the keywords are in the SCHEDULE section. 9) LIFT: the well's artificial lift quantity will be adjusted. Again, as for the THP, a vertical performance table must have been assigned to the well. 10) GUID: the well's guide rate will be adjusted. Only wells under group control and have a guide rate stipulated by the WGRUPCON keyword in the SCHEDULE section, may use this option. 11) CVAL: the well's calorific rate will be adjusted. 12) NGL: the well's natural gas liquid rate will be adjusted. Note that the CRAT, CVAL and the NGL options are not available in OPM Flow and should not be used.			None

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

No.	Name	Description			Default
		Field	Metric	Laboratory	
3	CONSTANT	A real value that is used to multiply the current TARGET flow stream by to get the adjusted flow stream rate.			None
		dimensionless	dimensionless	dimensionless	
4	NTIME	A positive integer greater than or equal to one that defines the number of report time steps for User Defined Arguments (UDA) variables only, that the TARGET flow stream is multiplied by to get the adjusted flow stream. The default value of one means that the multiplication is applied only at the current time step for the UDA variable. This option is not supported by OPM Flow.			1.0
		dimensionless	dimensionless	dimensionless	

Notes:
1) The keyword is followed by any number of records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.120:WTMULT Keyword Description

See also the WELTARG and WELCNTL keywords in the SCHEDULE section, that can be used to reset the well's target and constraints of both rates and pressures, as well as the well's control mode.

Example

The example shows three oil wells having the flow streams adjusted.

```
--
-- WELL TARGET/LIMIT MULTIPLIER
--
-- WELL      WELL      TARGET      REPORT
-- NAME      TARG     MULTIPLIER  TIMES
WTMULT
OP01        ORAT      0.90              /
OP02        BHP       0.95              /
OP03        LIFT      1.25              /
/
```

Well OP01 has its current oil rate multiplied by 0.90, well OP02 has its bottom-hole pressure multiplied by 0.95, and well OP03 has its artificial lift quantity increased by 1.25 times.

12.3.347 WTRACER – DEFINE AN INJECTION WELL'S TRACER CONCENTRATION

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WTRACER keyword defines the tracer concentration of the injection fluid being injected by an injection well. This keyword should only be used if the Tracer option has been invoked by the TRACERS keyword in the RUNSPEC section and the tracers have been declared via the TRACER keyword in the PROPS section.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name of an injection well for which the tracer fraction data is being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	NAME	A three letter character string defining the tracer's name which has previously been defined via the TRACER keyword in the PROPS section. Note it is best to void names beginning with the letters F,S, and T as these names may create naming issues in post-processing software.			None
3	TRCON	A real positive value that defines the tracer concentration of the well's injection stream.			None
		Liquid: l/stb Gas: l/Mscf	Liquid: l/sm ³ Gas: l/sm ³	Liquid: l/scc Gas: l/scc	
4	TRCUM	A real positive value that defines the cumulative tracer concentration factor of the well's injection stream. <u>This feature is currently not supported by OPM Flow.</u>			None
		Liquid: l/stb Gas: l/Mscf	Liquid: l/sm ³ Gas: l/sm ³	Liquid: l/scc Gas: l/scc	
5	GRPNAME	A character string of up to eight characters in length that defines the group from which the produced tracer concentration should be used for the well's injection stream. GRPNAME must have been previously defined via the GCONPROD keyword in the SCHEDULE section, unless the FIELD group has been specified here. Note if GRPNAME is not defined then TRCON will be used for the tracer concentration of the well's injection stream. <u>This feature is currently not supported by OPM Flow.</u>			None
Notes: 1) The keyword is followed by any number of records with each record terminated by a "/" and the keyword should be terminated by a "/".					

Table 12.121: WTRACER Keyword Description

Injection wells that are not declared via this keyword have their tracer concentrations set to zero.

See also the GCONINJE keyword to define a group's injection targets and constraints, and the WCONINJE

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

keyword to define an injection well's targets and constraints. All the aforementioned keywords are described in the SCHEDULE section.

Example

The following example defines the tracer concentrations for two gas injectors and three water injection wells, with water injection well WI02 having no 'WAT' tracer injected in the water phase.

```
--
--      DEFINE CONCENTRATION OF TRACERS IN THE INJECTION STREAMS,
--      INJECTION TRACER CONCENTRATIONS NOT DEFINED USING THE WTRACER
--      KEYWORD ARE ASSUMED TO BE ZERO.
--
-- WELL  NAME      TRACER  TRACER  TRACER
-- NAME  TRACER    CONC    CUM      GROUP
WTRACER
GI01    'GAS'      1.0                /
GI02    'GAS'      1.0                /

WI01    'WAT'      1.0                /
WI02    'WAT'      0.0                /
WI03    'WAT'      1.0                /
/
```

Note the terminating “/” for the keyword.

12.3.348 WVFPDP – MODIFY WELL BHP OBTAINED FROM VFP TABLES

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Description

The WVFPDP keyword modifies a well's Bottom-Hole Pressure ("BHP") estimated by the simulator by interpolation of the Vertical Flow Performance ("VFP") tables. The production VFP tables are entered via the VFPPROD keyword and the injection tables by the VFPINJ keyword; both keywords are in the SCHEDULE section.

Note that simulator automatically adjusts the interpolated BHP to account for hydrostatic head using the density of the wellbore fluid and the difference between a well's BHP reference depth, as per the BHPREF parameter on the WELSPECS or WELSPECL keywords in the SCHEDULE section, and the VFPREF parameter reference depth on the VFPPROD and VFPINJ keywords. Thus, WVFPDP applies an additional adjustment in order to match a well's flow rate to a given tubing head pressure, by adjusting the BHP.

This keyword is ignored by OPM Flow and has no effect on the simulation but is documented here for completeness.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which VFP interpolated BHP adjustment is to be applied. Note that the well name (WELNAME) must have been declared previously using the WELSPECS and WCONPROD (or WCONINJE) keywords in the SCHEDULE section, otherwise an error may occur.			None
2	DELTAP	A real positive or negative value that is added to the VFP interpolated BHP value (BHP_{VFP}). A positive value of DELTAP increases the BHP and therefore makes a production well less productive; whereas, a negative value is subtracted from the BHP and therefore increases the productivity of a production well. Consequently, the opposite effect occurs for injection wells, that is, a positive value of BHP_{VFP} increases the BHP and therefore increases an injection well's injectivity; whereas, a negative value is subtracted from the BHP and therefore decreases the injectivity of an injection well.			0.0
		psia	barsa	atma	
3	MULTP	MULTP is a real positive or negative value that scales the tubing pressure loss by the following equation; $BHP_{Adjusted} = THP + MULTP(BHP_{VFP} - THP)$ Thus, a MULTP value greater than 1.0 increases the BHP and therefore makes a production well less productive; whereas, a value less than 1.0 increases the productivity of a production well. Consequently, the opposite effect occurs for injection wells			1.0
		dimensionless	dimensionless	dimensionless	

Notes:
1) The keyword is followed by any number records with each record terminated by a “/” and the keyword should be terminated by a “/”.

Table 12.122: WVFPDP Keyword Description

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Example

The following example below shows three oils operating under THP control.

```

-----
-- 01 JAN 2000 START OF SCHEDULE SECTION
-----
--
--          WELL PRODUCTION WELL CONTROLS
--
-- WELL  OPEN/  CNTL   OIL    WAT    GAS    LIQ    RES    BHP    THP    VFP    VFP
-- NAME  SHUT   MODE   RATE   RATE   RATE   RATE   RATE   PRES  PRES  TABLE  ALFQ
WCONPROD
OP01    OPEN   THP     1*     1*     1*     5000    1*     750.0  500.   9      1* /
OP02    OPEN   THP     1*     1*     1*     5000    1*     750.0  500.   9      1* /
OP03    OPEN   THP     1*     1*     1*     5000    1*     750.0  500.   9      1* /
/
--
--          WELL VFP BHP-THP CORRECTION DATA
--
-- WELL  BHP      BHP
-- NAME  DELTAP   MULTP
WVFPDPP
OP01    20.0     1*
OP01    -5.0     1*
OP01     0.0     1.10
/

```

Well OP01 has a delta pressure correction of 20 psia applied to it's BHP resulting in a reduction in the well's productivity for the given 500.0 psia THP operating target. For well OP02, the well's productivity is increased by subtracting 5.0 psia from the BHP. And finally for well OP03, the MULTP value of 1.10 decreases the well's productivity by increasing the pressure loss between the THP and BHP by 10%.

12.3.349 WVFPEXP – DEFINE WELL VFP INTERPOLATION OPTIONS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

This keyword, WVFPEXP, defines how Vertical Flow Performance (“VFP”) tables are interpolated and can be used to resolve certain issues with wells operating under tubing head pressure control. For example, setting the VFP table to interpolate explicitly, that is using the previous time step results of the gas and water ratios for an oil well, may improve convergence. The default is to use implicit interpolation that uses the current time step values and may result in solution convergence oscillations in solving the linear equations.

The WCONPROD keyword is used to allocate the VFPPROD tables to specific production wells and the WCONINJE keyword for assigning the VFPINJ tables for injection wells. Note that one VFP table can be allocated to one or more wells; however, WVFPEXP is applied to a well’s allocated VFP table, not to all wells that use the same table, unless specially requestd. All the aforementioned keywords are in the SCHEDULE section.

This keyword is ignored by OPM Flow and has no effect on the simulation.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

12.3.350 WWPAVE – WELL BLOCK AVERAGE PRESSURE CALCULATION PARAMETERS FOR INDIVIDUAL WELLS

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The WWPAVE keyword defines the method and parameters for calculating a well's block average pressures for individual wells that can be written to the SUMMARY and RSM files via the WBP, WBP4, WBP5 and WBP9 vectors in the SUMMARY section. The resulting average pressure can be written out to the summary file in order to compared with field observed data. The keyword is similar to the WPAVE keyword in the SCHEDULE section that has similar functionality, but is applied to all wells in the model.

Note that WWPAVE will overwrite any parameters on the WPAVE keyword for a given well, and that WWPAVE can also be overwritten by any subsequent WPAVE keyword.

This keyword is ignored by OPM Flow and has no effect on the simulation.

No.	Name	Description			Default
		Field	Metric	Laboratory	
1	WELNAME	A character string of up to eight characters in length that defines the well name for which the well Aaverage pressure calculation parameters are being defined. Note that the well name (WELNAME) must have been declared previously using the WELSPECS keyword in the SCHEDULE section, otherwise an error may occur.			None
2	WPAVE1	A real dimensionless value that defines the weighting factor between the inner block and the surrounding blocks used to calculated the connection factor weighted average pressures. If WPAVE1 is greater than or equal to zero and less than or equal to one, then the average pressures are calculate based on the connection factors. A value of zero indicates only the surrounding blocks should be used in the calculation and a value of one indicates only the inner blocks. If WPAVE1 is equal to zero, then average pressure is calculate based on the pore volumes of the blocks.			0.5
3	WPAVE2	A real dimensionless value greater than or equal to zero and less than or equal to one, that defines the weighting factor between the connection weighted average pressures and the pore volume weighted average pressures. If WPAVE2 is equal to one, then the average pressures are calculate based only using the connection factor calculated pressures. If WPAVE2 is equal to zero, then average pressures are calculate based on only using the pore volumes calculated pressures.			1.0

No.	Name	Description			Default
		Field	Metric	Laboratory	
4	WPAVE3	A defined character string that determines how the hydrostatic head calculation is performed in correcting the pressures to the BHP reference depth on the WELSPECS or WPAVEDEP keywords in the SCHEDULE section.WPAVE3 should be set to one of the following character strings: 1) WELL: the hydrostatic head is calculated using the density of the fluid in the wellbore at the well connections. 2) RES: he hydrostatic head is calculated using the density of the fluid in the reservoir with well connections and averaged over the connections. 3) NONE: no hydrostatic correction is applied to the pressures.			WELL
5	WPAVE4	A defined character string that determines which connections should be used in the calculations,WPAVE4 should be set to one of the following character strings: 1) OPEN: only open connections and associated grid blocks should be used in the calculations. This option may result in pressure discontinuities if connections are opened and closed during the run. 2) ALL: all currently defined open and closed connections and associated grid blocks are used in the calculations. The pressure discontinuities issue mentioned above can be avoided with this option and defining all the well connections for a well at the beginning of the run.			OPEN
Notes: 1) The keyword should be terminated by a “/”.					

Table 12.123:WWPAVE Keyword Description

The keyword is not applicable and should not be used with radial and spider grid geometries.

See also the WELSPECS keyword that defines a well and a well's bottom-hole pressure reference depth, the WPAVEDEP keyword that also defines a well's bottom-hole pressure reference depth, and the COMPDAT keyword to define a well's connections. All the aforementioned keywords are described in the SCHEDULE section.

Examples

The following example defines the default well block average pressure calculation parameters for three oil wells: OP01, OP02 and OP03.

```
--
--      DEFINE WELL BLOCK AVERAGE PRESSURE CALCULATION PARAMETERS
--
-- WELL  INNER  PORV  WELL  OPEN
-- NAME  OUTER  CONN  RES   ALL
WPAVE
OP01    0.5    1.0    WELL  ALL
OP02    0.5    1.0    WELL  ALL
OP03    0.5    1.0    1*    1*
```

And the next example shows the parameters used in the Norne model.

```
--
--          DEFINE WELL BLOCK AVERAGE PRESSURE CALCULATION PARAMETERS
--
-- WELL  INNER  PORV  WELL  OPEN
-- NAME  OUTER  CONN  RES   ALL
WPAVE
OP01    1*      0.0   WELL  ALL
OP02    1*      0.0   WELL  ALL
OP03    1*      0.0   WELL  ALL
```

Here only pore volume weighting is used instead of connection weighting.

12.3.351 ZIPP2OFF – DEACTIVATE AUTOMATIC TIME STEP CONTROL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ZIPP2OFF keyword deactivates the commercial simulator’s alternative automatic time step selection algorithm that assumes no prior knowledge of the problem, as opposed to the standard time step algorithm that is controlled via the TUNING keyword in the SCHEDULE section, combined with posterior knowledge gained from previous time steps.

This keyword is ignored by OPM Flow and has no effect on the simulation.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to control time stepping for OPM Flow.

12.3.352 ZIPPY2 – ACTIVATE AUTOMATIC TIME STEP CONTROL

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Description

The ZIPPY2 keyword activates the commercial simulator’s alternative automatic time step selection algorithm that assumes no prior knowledge of the problem, as opposed to the standard time step algorithm that is controlled via the TUNNING keyword in the SCHEDULE section, combined with posterior knowledge gained from previous time steps.

This keyword is ignored by OPM Flow and has no effect on the simulation.

See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) on how to control time stepping for OPM Flow.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

APPENDIX A: KEYWORD INDEX - ALPHABETIC LISTING

A

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter A	Status
ACTDIMS – ACTION Keyword Dimensions	
ACTION – Define Action Conditions and Command Processing (Field)	
ACTIONG – Define Action Conditions and Command Processing (Groups)	
ACTIONR – Define Action Conditions and Command Processing (Regions)	
ACTIONS – Define Action Conditions and Command Processing (Well Segments)	
ACTIONW – Define Action Conditions and Command Processing (Wells)	
ACTIONX – Define Action Conditions and Command Processing	
ACTNUM – Set the Status of a Grid Block To Active or Inactive	
ACTPARAM – Define Action Facility Target and Tolerance Parameters	
ADD – Add a Constant to a Specified Array	
ADDREG – Add a Constant to an Array based on a Region Number	
ADDZCORN – Add a Constant to the ZCORN Depth Array	
ADSALNOD – Salt Concentration Based on SATNUM Array	
ADSORP – Define Generalized Langmuir Adsorption Function	
AIT – Activate Intelligent Time Stepping	
AITSOFF – Deactivate Intelligent Time Stepping	
ALKADS – Define Alkaline Adsorption Functions	
ALKALINE – Activate the Alkaline Phase and Model	
ALKROCK – Define Rock Alkaline Properties	
ALL – Export Standard Summary Variable Vectors to File	
ALPOLADS – Polymer Adsorption versus Alkaline Concentration Multipliers	
ALSURFAD – Surfactant Adsorption versus Alkaline Concentration Multipliers	
ALSURFST – Water-Oil Surface Tension versus Alkaline Concentration Multipliers	
AMALGAM – Define LGR Amalgamations	
API – Activate API Tracking	
APIGROUP – Define API Tracking Number of Grouped Oil PVT Tables	
APILIM – Define API Tracking Grid Block Limits	
APIVD – Equilibration Oil API Gravity versus Depth Tables	
AQANCONL – Define Analytical Connections to a LGR Grid	

A

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter A	Status
AQANNC – Define Analytic Aquifer Non-Neighbor Connections	
AQANTRC - Define Analytic Aquifer Initial Tracer Concentrations	
AQUALIST – Define An Analytic Aquifer Name to Aquifer Numbers	
AQUANCON – Define Analytical Connections to the Grid	
AQUCHGAS – Define Constant Pressure Gas Analytical Aquifer Properties	
AQUCHWAT – Define Constant Pressure Water Analytical Aquifer Properties	
AQUCON – Define Numerical Aquifer Connections to the Grid	
AQUCT – Define Carter-Tracy Analytical Aquifers	
AQUCWFAC – Modify Constant Pressure Water Analytical Aquifer Properties	
AQUDIMS – Define Aquifer Dimensions	
AQUFET – Define Fetkovich Analytical Aquifer and Connections	
AQUFETP – Define Fetkovich Analytical Aquifers	
AQUFLUX - Define Constant Flux Analytical Aquifer	
AQUNNC – Define Numerical Aquifer Non-Neighbor Connections	
AQUNUM – Define Numerical Aquifer Properties	
AQUATAB – Define Carter-Tracy Aquifer Influence Functions	
AUTOCOAR - Define Auto Refinement Grid Coarsen Area	
AUTOREF - Define Auto Refinement Options	

B

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter B	Status
BDENSITY – Define the Surface Brine Density for the Fluid	
BGGI - Define Gi Gas Formation Volume Factor Pressure Tables	
BIGMODEL – Activate Big Model Option (Retired)	
BLACKOIL – Activate Black Oil Phases	
BOGI - Define Gi Oil Formation Volume Factor Pressure Tables	
BOUNDARY – Define a Boundary Box for Printing	
BOX - Define a Range of Grid Blocks to Enter Property Data	
BPARA – Activate Block Parallel License	
BPIDIMS – Define the Dimensions of the Interpolated Block Quantities	
BRANPROP – Define Network Branch Properties for Extended Network Option	
BRINE – Activate Brine Tracking Option	
BTBALFA – Dual Porosity Matrix to Fracture Multiplier (All Cells)	
BTBALFV – Dual Porosity Matrix to Fracture Multiplier (Individual Cells)	

C

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter C	Status
<i>CALTRAC – Define a Gas Calorific Value Tracer</i>	
<i>CARFIN – Define a Cartesian Local Grid Refinement</i>	
<i>CART – Activate Cartesian Geometry</i>	
<i>CBMOPTS – Define Coal Bed Methane Options</i>	
<i>CECON – Define Well Connections Economic Limit Criteria</i>	
<i>CECONT – Define Well Connections Tracer Economic Limit Criteria</i>	
<i>CO2STORE – Activate the CO2 Storage Model</i>	OPM Flow
<i>COAL – Activate the Coal Phase (CBM Model)</i>	
<i>COALADS – Define Gas and Solvent Relative Adsorption Tables</i>	
<i>COALNUM – Define the Coal Region Numbers</i>	
<i>COALPP – Define Gas and Solvent Partial Pressure Adsorption Tables</i>	
<i>COARSEN – Define Grid Coarsening Cells</i>	
<i>COLLAPSE – Define Compressed Vertical Equilibrium Cells</i>	
<i>COLUMNS – Define Input File Column Margins</i>	
<i>COMPDAT – Define Well Connections to the Grid</i>	
<i>COMPDATL – Define Well Connections to a LGR Grid</i>	
<i>COMPDATM – Define Well Connections to an Amalgamated LGR Grid</i>	
<i>COMPFLSH – Assign COMPDAT Differential-Flash Liberation Ratios</i>	
<i>COMPIMB – Assign Imbibition Saturation Tables to Well Connections</i>	
<i>COMPINJK – Assign Injection well Relative Permeability Values</i>	
<i>COMPLMPL – Assign Well LGR Connections to Completions</i>	
<i>COMPLUMP – Assign Well Connections to Completions</i>	
<i>COMPOFF – Deactivate Network Automatic Compressors</i>	
<i>COMPORD – Define Well Connection Ordering</i>	
<i>COMPRIV – Define Grid Cell Connections to a River</i>	
<i>COMPRP – Re-Scale Fluid Saturations of Well Connections</i>	
<i>COMPRPL – Re-Scale Fluid Saturations of Well LGR Connections</i>	
<i>COMPSEGL – Define Well Connections for Multi-Segment Wells in a LGR</i>	
<i>COMPSEGS – Define Well Connections for Multi-Segment Wells</i>	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

C

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter C	Status
COMPVE – Re-Define Well Connection Depths	
COMPVEL – Re-Define Well LGR Connection Depths	
COORD – Define a Set of Coordinates Lines for a Reservoir Grid	
COORDSYS – Define Coordinate Grid Options	
COPY – Copy Array Data to Another Array	
COPYBOX – Copy Array Data Defined by a Box	
COPYREG – Copy an Array to Another Array based on a Region Number	
CPIFACT – Define Well Connection Transmissibility Multipliers	
CPIFACTL – Define Well Connection Transmissibility Multipliers in a LGR	
CPR – Activate Constrained Pressure Residual ("CPR") Linear Solver	
CRITPERM – Define Minimum Permeability for Vertical Equilibrium Grid Cell Compression	
CSKIN – Re-Define Well Connection Skin Factors	

D

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter D	Status
<i>DATE - Activate the DATE Option for the SUMMARY File</i>	
<i>DATES – Advance Simulation by Reporting Date</i>	
<i>DATUM – Define the Datum Depth for the Model</i>	
<i>DATUMR – Define Datum Depths for the FIPNUM Regions</i>	
<i>DATUMRX – Define Datum Depths for the FIP Allocated Regions</i>	
<i>DCQDEFN – Define Gas DCQ Units as Rate or Energy</i>	
<i>DEBUG – Define the Debug Data to be Printed to File</i>	
<i>DELAYACT - Define Delayed Action Keywords</i>	
<i>DENSITY – Define the Surface Oil, Water Gas Densities for the Fluids</i>	
<i>DEPTH - Edits the Depth at the Center of Each Cell</i>	
<i>DEPTHTAB – River Time and Depth Tables</i>	
<i>DIAGDISP – Activate Alternate Form of Tracer Dispersion</i>	
<i>DIFFC – Define PVT Region Molecular Diffusion Tables</i>	
<i>DIFFCOAL – Define Coal Bed Methane Gas Diffusion Data</i>	
<i>DIFFDP – Activate Dual Porosity Molecular Diffusion for Matrix-Fracture Flow Only</i>	
<i>DIFFMMF – Define Diffusivity Multipliers for Matrix-Fractures</i>	
<i>DIFFMR – Define Grid Block Radial Direction Diffusivity Multipliers</i>	
<i>DIFFMR- – Define Grid Block Negative Radial Direction Diffusivity Multipliers</i>	
<i>DIFFMTH – Define Grid Block Theta Direction Diffusivity Multipliers</i>	
<i>DIFFMTH- – Define Grid Block Negative Theta Direction Diffusivity Multipliers</i>	
<i>DIFFMX – Define Grid Block X-Direction Diffusivity Multipliers</i>	
<i>DIFFMX- – Define Grid Block Negative X-Direction Diffusivity Multipliers</i>	
<i>DIFFMY – Define Grid Block Y-Direction Diffusivity Multipliers</i>	
<i>DIFFMY- – Define Grid Block Negative Y-Direction Diffusivity Multipliers</i>	
<i>DIFFMZ – Define Grid Block Z-Direction Diffusivity Multipliers</i>	
<i>DIFFMZ- – Define Grid Block Negative Z-Direction Diffusivity Multipliers</i>	
<i>DIFFR – Define Grid Block Radial Direction Diffusivity Values</i>	
<i>DIFFTHT – Define Grid Block Theta Direction Diffusivity Values</i>	
<i>DIFFUSE – Activate Molecular Diffusion Option</i>	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

D

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

<i>DIFFX – Define Grid Block X-Direction Diffusivity Values</i>	
<i>DIFFY – Define Grid Block Y-Direction Diffusivity Values</i>	
<i>DIFFZ – Define Grid Block Z-Direction Diffusivity Values</i>	
<i>DIMENS – Define the Dimension of the Model</i>	
<i>DIMPES – Define IMPES Dynamic Solution Parameters</i>	
<i>DIMPLICIT – Activate Fully Implicit Dynamic Solution Formulation</i>	
<i>DISGAS – Activate the Dissolved Gas Phase in the Model</i>	
<i>DISPDIMS – Define the Maximum Number of Dispersion Tables</i>	
<i>DISPERSE – Define Dispersion Tables</i>	
<i>DOMAINS – Define the Parallel Domain Properties</i>	
<i>DPGRID – Activate The Matrix Cell to Fracture Cell Option</i>	
<i>DPKRMOD – Modify Matrix Oil Relative Permeability Data</i>	
<i>DPNUM – Define Dual and Single Porosity Grid Block Array</i>	
<i>DR - Define the Size of Grid Blocks in the R Direction for All Cells</i>	
<i>DRILPRI – Define Prioritized Drilling Queue Priority Parameters</i>	
<i>DRSDT – Solution Gas (Rs) Maximum Rate of Increase Parameters</i>	
<i>DRSDTCON – CO2 Convective Dissolution Parameter (χ)</i>	OPM Flow
<i>DRSDTR – Solution Gas (Rs) Maximum Rate of Increase Parameters by Region</i>	
<i>DRV - Define the Size of Grid Blocks in the R Direction via a Vector</i>	
<i>DRVDT – Solution Oil (Rv) Maximum Rate of Increase Parameters</i>	
<i>DRVDT – Solution Oil (Rv) Maximum Rate of Increase Parameters by Region</i>	
<i>DSPDEINT – Activate Brine Tracer Dispersion Interpolation by Water Density</i>	
<i>DTHETA - Define the Size of Grid Blocks in the THETA Direction for All Cells</i>	
<i>DTHETAV - Sets the Size of Grid Blocks in THETA Direction via a Vector</i>	
<i>DUALPERM – Activate Dual Permeability Model</i>	
<i>DUALPORO – Activate Dual Porosity Model</i>	
<i>DUMPCUPL – Activate Output to the Reservoir Coupling File</i>	
<i>DUMPFLUX – Activate Writing Out of a Flux File</i>	
<i>DX - Define the Size of Grid Blocks in the X Direction for All Cells</i>	
<i>DXV - Define the Size of Grid Blocks in the X Direction via a Vector</i>	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

D

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

<i>DY - Define the Size of Grid Blocks in the Y Direction for All Cells</i>	
<i>DYNAMICR – Start of Dynamic Region Parameter Definition</i>	
<i>DYNRDIMS – Define Dynamic Region Dimensions</i>	
<i>DYV - Define the Size of Grid Blocks in the Y Direction via a Vector</i>	
<i>DZ - Define the Size of Grid Blocks in the Z Direction for All Cells</i>	
<i>DZMATRIX - Matrix Block Height for Gravity Drainage Model For All Cells</i>	
<i>DZMTRX - Matrix Block Height for Gravity Drainage Model for the Grid</i>	
<i>DZMTRXV - Matrix Block Height for Gravity Drainage Model For All Cells</i>	
<i>DZNET – Define Grid Block Net Thickness for All Cells</i>	
<i>DZV - Define the Size of Grid Blocks in the Z Direction via a Vector</i>	

E

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter E	Status
ECHO – Activate Echoing of User Input Files to the Print File	
ECLMC – Activate Multi-Component Brine Model	
EDIT - Define the Start of the EDIT Section of Keywords	
EDITNNC – Scale Non-Neighbor Connections Between Cells Manually	
EDITNNCR – Reset Non-Neighbor Connections Between Cells Manually	
EHYSTR – Define Hysteresis Model and Parameters	
EHYSTRR – Define Hysteresis Model and Parameters via SATNUM	
END – Define the End of the Input File	
ENDACTIO – End the Definition of ACTION Commands	
ENDBOX – Define the End of the BOX Defined Grid	
ENDDDYN – End of Dynamic Region Parameter Definition	
ENDFIN – End the Definition of a Local Grid Refinement	
ENDINC – Define the End of an Include File	
ENDNUM – Define the End-Point Scaling Depth Region Numbers	
ENDSCALE – Activate Relative Permeability End-Point Scaling Option	
ENDSKIP – DeActivate Skipping of Keywords and Input Data	
ENKRVD – Define Relative Permeability End-Points versus Depth Functions	
ENKRVDX	
ENKRVDX-	
ENKRVDY	
ENKRVDY-	
ENKRVDZ	
ENKRVDZ-	
ENPCVD – Define Maximum Capillary Pressure versus Depth Functions	
ENPTVD – Define Relative Permeability Saturation End-Points versus Depth	
ENPTVDX	
ENPTVDX-	
ENPTVDY	
ENPTVDY-	

E

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter E	Status
ENPTVDZ	
ENPTVDZ-	
<i>ENSPCVD – Define Capillary Pressure End-Points versus Depth</i>	
<i>EPSDBGS - Write End-Point Debug Data to the DEBUG File (Multiple)</i>	
<i>EPSDEBUG - Write End-Point Debug Data to the DEBUG File (Individual)</i>	
<i>EQLDIMS – Define the Equilibration Data Dimensions</i>	
<i>EQLNUM – Define the Equilibration Region Numbers</i>	
<i>EQLOPTS – Activate the Equilibration Options</i>	
<i>EQLZCORN - Modify the Depth of the Corner-Point Depth Array</i>	
<i>EQUALREG – Sets an Array to a Constant by Region Number</i>	
<i>EQUALS – Sets a Specified Array to a Constant</i>	
<i>EQUIL – Define the Equilibration Initialization Data</i>	
<i>ESSNODE – Define Salt Concentration Data for Water-Oil Surface Tension</i>	
<i>EXCAVATE - Set the Status of a Grid Block To Active or Excavate</i>	
<i>EXCEL - Activate the EXCEL Option for the SUMMARY File</i>	
<i>EXIT – Exit Simulation from within an Action Section</i>	OPM Flow
<i>EXTFIN - Define an External Unstructured Local Grid Refinement</i>	
<i>EXTHOST - Define Host Cells for External LGRs</i>	
<i>EXTRAPMS – Activate Extrapolation Warning Messages</i>	
<i>EXTREPGL - Define Host Cells for External Unstructured LGRs</i>	

F

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter F	Status
FAULTDIM – Define the Number of Fault Segments	
FAULTS – Define Faults in the Grid Geometry	
FBHPDEF – Define Well Default BHP Target and Constraints	
FHERCHBL – Define Herschel-Bulkley Data versus Polymer Concentration	
FIELD – Activate the Oil Field System of Units for the Model	
FILEUNIT – Activate Unit Consistency Checking	
FILLEPS – Activate Saturation End-Point Export to the INIT File	
FIP – Define the Fluid In-Place Names and Region and Numbers	
FIPNUM – Define the Fluid In-Place Region Numbers	
FIPOWG – Activate Oil, Gas, and Water FIP Zone Reporting	
FLUXNUM – Define the Flux Regions	
FLUXREG – Define Active Flux Regions	
FLUXTYPE – Defines the Flux Boundary Type	
FMTHMD – Activate The Format History Match Gradient File Option	
FMTIN – Activate The Format Input File Option	
FMTOUT – Activate The Format Output File Option	
FMWSET - Export Well Status Vectors for the Field to File	
FOAM – Activate the Foam Phase and Model	
FOAMADS - Define Foam Rock Adsorption Tables	
FOAMDCYO – Define Foam Decay versus Oil Saturation Tables	
FOAMDCYW – Define Foam Decay versus Water Saturation Tables	
FOAMFCN – Define Foam Gas Mobility Reduction versus Capillary Number	
FOAMFRM – Define Foam Gas Mobility Reduction versus Reference Mobility	
FOAMFSC – Define Foam Gas Mobility versus Surfactant Concentration Functions	
FOAMFSO – Define Foam Gas Mobility Reduction versus Oil Saturation	
FOAMFST – Define Foam Gas-Water Surface Tension versus Surfactant Concentration	
FOAMFSW – Define Foam Gas Mobility Reduction versus Water Saturation	
FOAMMOB - Define Foam Gas Mobility versus Foam Concentration Tables	
FOAMMOBP – Define Foam Mobility Reduction versus Oil Pressure	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

F

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter F	Status
FOAMMOBS – Define Foam Mobility Reduction versus Shear	
FOAMOPTS - Define Foam Model Options	
FOAMROCK - Define Foam Rock Properties	
FORMFEED – Defined the Print File Form-Feed Character	
FMWSET - Export Well Status Vectors for the Field to File	
FRICTION – Activate Wellbore Friction Option	
FULLIMP – Activate Fully Implicit Solution Option	

G

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter G	Status
<i>GAS – Activate the Gas Phase in the Model</i>	
<i>GASBEGIN – Define Start of Annual Scheduling Section</i>	
<i>GASCONC – Define the Initial Equilibration Coal Gas Concentration for All Grid Blocks</i>	
<i>GASDENT – Define Gas Density Temperature Coefficients</i>	OMP Flow
<i>GASEND – Define End of Annual Scheduling Section</i>	
<i>GASFCOMP – Define Automatic Gas Compressors</i>	
<i>GASFDECR – Define Field Gas Sales Contract Monthly Reduction</i>	
<i>GASFDELC – Define Gas Deliverability Calculation</i>	
<i>GASFIELD – Define Gas Field Operations Options</i>	
<i>GASFTARG – Define Field Gas Sales Contract Monthly Target</i>	
<i>GASMONTH – Define Start of Annual Scheduling Event</i>	
<i>GASPERIO – Advance Simulation by Gas Contract Period</i>	
<i>GASSATC – Define the Initial Equilibration Saturated Coal Gas Concentration for All Grid Blocks</i>	
<i>GASVISCT – Define Gas Viscosity versus Temperature Functions</i>	
<i>GASYEAR – Advance Simulation by Gas Contract Year</i>	
<i>GCALECON – Group Economic Criteria for Production Calorific Groups</i>	
<i>GCONCAL – Group Production Calorific Targets</i>	
<i>GCONENG – Group Production Energy Targets</i>	
<i>GCONINJE – Group Injection Targets and Constraints</i>	
<i>GCONPRI – Group Production Priority Targets and Constraints</i>	
<i>GCONPROD – Group Production Targets and Constraints</i>	
<i>GCONSALE – Define Group Sales Gas Production Targets and Constraints</i>	
<i>GCONSUMP – Define Group Gas Consumption and Gas Import Targets</i>	
<i>GCONTOL – Define Group Constraint Tolerance</i>	
<i>GCUTBACK – Define Group Cutback Limits and Parameters</i>	
<i>GCUTBACT – Define Group Tracer Cutback Limits and Parameters</i>	
<i>GCVD – Define Equilibration Coal Gas Concentration versus Depth Tables</i>	
<i>GDCQ – Define Group Multiple Daily Contract Quantities</i>	
<i>GDCQECON – Group Economic Criteria for DCQ Production Groups</i>	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

G

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter G	Status
<i>GDFILE – Load a Grid File</i>	
<i>GDIMS – Activate Instantaneous Gradient Option and Define Dimensions</i>	
<i>GDORIENT - Define Grid Orientation Parameters</i>	
<i>GDRILPOT – Define Group Potential Rates for Automatic Drilling</i>	
<i>GECON – Group Economic Criteria for Production Groups</i>	
<i>GECONT – Group Tracer Economic Criteria for Production Groups</i>	
<i>GEFAC – Define Group Efficiency</i>	
<i>GETDATA – Load and Assign Data Array from INIT or RESTART Files</i>	
<i>GETGLOB – Activate Loading of Global Grid Restart Data Option</i>	
<i>GI - Define the Initial Equilibration Gi Values for All Grid Blocks</i>	
<i>GIALL – Define Gi Values and PVT Properties versus Pressure</i>	
<i>GIMODEL – Activate Gi Pseudo Compositional Option</i>	
<i>GINODE – Define Gi Node Values</i>	
<i>GLIFTLIM – Group Artificial Lift Constraints</i>	
<i>GLIFTOPT – Define Group Gas Optimization Limits</i>	
<i>GMWSET - Export Well Status Vectors by Group to File</i>	
<i>GNETDP – Group Network Pressure and Rate Controls</i>	
<i>GNETINJE – Define Group Injection Network Configuration</i>	
<i>GNETPUMP – Standard Network Automatic Compressor and Pumps</i>	
<i>GPMAINT – Define Group Pressure Maintenance Targets and Controls</i>	
<i>GRADGRUP – Define Group History Match Gradient File Output</i>	
<i>GRADRESV – Define Solution Derivative History Match Gradient Output</i>	
<i>GRADRFT – Define RFT Derivative History Match Gradient Output</i>	
<i>GRADWELL – Define Well History Match Gradient File Output</i>	
<i>GRAVCONS – Re-Define Gravity Constant</i>	
<i>GRAVDR – Activate Gravity Drainage and Imbibition for Dual Porosity Model</i>	
<i>GRAVDRB - Activate Vertical Discretized Gravity Drainage and Imbibition for Dual Porosity Model</i>	
<i>GRAVDRM - Activate Alternative Gravity Drainage and Imbibition for Dual Porosity Model</i>	
<i>GRAVITY– Define the Surface Oil, Water Gas Gravities for the Fluids</i>	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

G

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter G	Status
GRDREACH – Define River and Grid Block Connections	
GRID - Define the Start of the GRID Section of Keywords	
GRIDFILE – Set the Grid File Output Options	
GRIDOPTS - Grid Processing Options	
GRIDUNIT – Define the Grid Units	
GRUPMAST – Define Master and Slave Groups	
GRUPNET – Define Group Standard Network Parameters	
GRUPRIG – Group Drilling and Workover Rig Specifications	
GRUPLAV – Define Slave Groups in Slave Reservoirs	
GRUPTARG – Modify Group Targets and Constraints Values	
GRUPTREE – Define Group Tree Hierarchy	
GSATINJE – Define Group Satellite Injection Rates	
GSATPROD – Define Group Satellite Production Rates	
GSEPCOND – Assign Group Separators	
GSSCPTST – Perform Sustainable Capacity Test	
GSWINGF – Define Group Multiple Gas Contract Parameters	
GTADD – Add a Constant to a Group Target or Constraint	
GTMULT – Multiply Group Target or Constraint by a Constant	
GUIDECAL – Scale Guide Rates Based on Gas Calorific Value	
GUIDERAT – Define Group Guide Rate Formula	
GUPFREQ – Instantaneous Gradient Option Update Frequency	
GWRTWCV – Instantaneous Gradient Option Well Variables	

H

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter H	Status
HALFTRAN – Activate Half Block Transmissibility Calculations	
HA – History Match End-Point Gradient Additive Modifier	
HAKRG	
HAKRGR	
HAKRO	
HAKRORG	
HAKRORW	
HAKRW	
HAKRWR	
HAPCG	
HAPCG	
HASGLPC	
HASOGCR	
HASOWCR	
HASWL	
HASWLPC	
HBNUM – Define Herschel-Bulkley Region Numbers	
HDISP – Define Tracer Mechanical Dispersivity Parameters	
HEATCR – Define Reservoir Rock Heat Capacity for All Cells	
HEATCRT – Define Reservoir Rock Heat Capacity Temperature Dependence for All Cells	
HM – History Match End-Point Gradient Multiplicative Modifier	
HMKRG	
HMKRGR	
HMKRO	
HMKRORG	
HMKRORW	
HMKRW	
HMKRWR	
HMPCG	

H

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter H	Status
HMPCG	
HMSGLPC	
HMSOGCR	
HMSOWCR	
HMSWL	
HMSWLPC	
<i>HM – History Match Region Gradient Parameters</i>	
HMKRG	
HMKRGR	
HMKRO	
HMKRORG	
HMKRORW	
HMKRW	
HMKRWR	
HMPERMx	
HMPERMy	
HMPERMz	
HMPORVM	
HMPRMXY	
HMSGCR	
HMSGL	
HMSGLPC	
HMSIGMA	
HMSOGCR	
HMSOWCR	
HMSWCR	
HMSWL	
HMSWLPC	
HMTRANX	

H

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter H	Status
HMTRANY	
HMTRANZ	
HMTRNXY	
<i>HMAQUCT – History Match Carter-Tracy Aquifer Gradient Parameters</i>	
<i>HMAQUFET – History Match Fetkovich Aquifer Gradient Parameters</i>	
<i>HMAQUNUM - History Match Numerical Aquifer Gradient Parameters</i>	
<i>HMDIMS – Define History Match Gradient Parameter Dimensions</i>	
<i>HMFAULTS – History Match Fault Gradient Parameters</i>	
<i>HMMLAQUN – History Match Numerical Aquifer Gradient Multipliers</i>	
<i>HMMLCTAQ – History Match Carter-Tracy Aquifer Gradient Multipliers</i>	
<i>HMMLFTAQ – History Match Fetkovich Aquifer Gradient Multipliers</i>	
<i>HMMLT – History Match Grid Permeability Gradient Cumulative Multipliers</i>	
HMMLTPR	
HMMLTPTH	
HMMLTPX	
HMMLTPXY	
HMMLTPY	
HMMLTPZ	
<i>HMMLTWCN – History Match Well Connection and Skin Multipliers</i>	
<i>HMMMREGT - History Match Region Transmissibility Gradient Cumulative Multipliers</i>	
<i>HMMROCK – History Match Rock Compressibility Gradient Cumulative Multipliers</i>	
<i>HMMROCKT – History Match Rock Compaction Gradient Cumulative Multipliers</i>	
<i>HMMULRG – History Match Region Transmissibility Parameters</i>	
<i>HMMULT – History Match Grid Transmissibility & Pore Volume Gradient Cumulative Multipliers</i>	
HMULTPV	
HMMULTR	
HMMULTTH	
HMMULTX	
HMMULTXY	

H

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter H	Status
HMMULTY	
HMMULTZ	
<i>HMMULTFT – History Match Fault Transmissibility Gradient Cumulative Multipliers</i>	
<i>HMMULTSG – History Match Dual porosity Sigma Gradient Cumulative Multipliers</i>	
<i>HMPROPS – History Match End-Point Section Start</i>	
<i>HMROCK – History Match Rock Compressibility Gradient Parameters</i>	
<i>HMROCKT – History Match Rock Compaction Gradient Parameters</i>	
<i>HMRREF – History Match Rock Table Reference Pressure Values</i>	
<i>HMWELCON – History Match Well Connection and Skin Parameters</i>	
<i>HMWPIMLT – History Match Well Productivity Index Parameters</i>	
<i>HRFIN - Define the Ratio of LGR Grid Blocks in the R-Direction</i>	
<i>HWKRO – End-Point Scaling of Grid Cell Kro(Swl) (High Salinity and Water Wet)</i>	
<i>HWKRORG – End-Point Scaling of Grid Cell Kro(Sgcr) (High Salinity and Water Wet)</i>	
<i>HWKRORW – End-Point Scaling of Grid Cell Kro(Swcr) (High Salinity and Water Wet)</i>	
<i>HWKRW – End-Point Scaling of Grid Cell Krw(Sw =1.0) (High Salinity and Water Wet)</i>	
<i>HWKRWR – End-Point Scaling of Grid Cell KRWR(Sw=1.0) (High Salinity and Water Wet)</i>	
<i>HWPCW – End-Point Scaling of Grid Cell Water Capillary Pressure (High Salinity and Water Wet)</i>	
<i>HWSNUM – Define the Saturation Table Region Numbers (High Salinity and Water Wet)</i>	
<i>HWSOGCR – End-Point Scaling Grid Cell SOGCR (High Salinity and Water Wet)</i>	
<i>HWSOWCR – End-Point Scaling Grid Cell SOWCR (High Salinity and Water Wet)</i>	
<i>HWSWCR – End-Point Scaling Grid Cell SWCR (High Salinity and Water Wet)</i>	
<i>HWSWL – End-Point Scaling Grid Cell SWL (High Salinity and Water Wet)</i>	
<i>HWSWLPC – End-Point Scaling Grid Cell SWLPC (High Salinity and Water Wet)</i>	
<i>HWSWU – End-Point Scaling Grid Cell SWU (High Salinity and Water Wet)</i>	
<i>HXFIN - Define the Ratio of LGR Grid Blocks in the X-Direction</i>	
<i>HYDRHEAD – Define Hydraulic Head Output Reference Data</i>	
<i>HYFIN - Define the Ratio of LGR Grid Blocks in the Y-Direction</i>	
<i>HYMOBGDR – Activate Carlson and Killough Alternative Drainage Hysteresis Option</i>	
<i>HYST – Activate the Hysteresis Option (Retired)</i>	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

H

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter H	Status
HYSTCHCK - Activate Hysteresis Inhibition and Drainage End-Point Validation	
HZFIN - Define the Ratio of LGR Grid Blocks in the Z-Direction	

I

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter I	Status
<i>IHOST – Assign LGRs to Parallel Process Number</i>	
<i>IKRG – End-Point Scaling of Grid Cell Krg(Sgu) (Imbibition)</i>	
IKRGX	
IKRGX-	
IKRGY	
IKRGY-	
IKRGZ	
IKRGZ-	
<i>IKRGR – End-Point Scaling of Grid Cell Krgr(1-Sogcr) (Imbibition)</i>	
IKRGRX	
IKRGRX-	
IKRGY	
IKRGY-	
IKRGRZ	
IKRGRZ-	
<i>IKRO – End-Point Scaling of Grid Cell Kro(Swl) (Imbibition)</i>	
IKROX	
IKROX-	
IKROY	
IKROY-	
IKROZ	
KROZ-	
<i>IKRORG – End-Point Scaling of Grid Cell Kro(Sgcr) (Imbibition)</i>	
IKRORGX	
IKRORGX-	
IKRORGY	
IKRORGY-	
IKRORGZ	
IKRORGZ-	

I

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter I	Status
<i>IKRORW – End-Point Scaling of Grid Cell Kro(Swcr) (Imbibition)</i>	
IKRORWX	
IKRORWX-	
IKRORWY	
IKRORWY-	
IKRORWZ	
IKRORWZ-	
<i>IKRW – End-Point Scaling of Grid Cell Krw(Sw =1.0) (Imbibition)</i>	
IKRWX	
IKRWX-	
IKRWY	
IKRWY-	
IKRWZ	
IKRWZ-	
<i>IKRWR – End-Point Scaling of Grid Cell KRWR(Sowcr) (Imbibition)</i>	
IKRWRX	
IKRWRX-	
IKRWRY	
IKRWRY-	
IKRWRZ	
IKRWRZ-	
<i>IMBNUM – Define the Imbibition Saturation Table Region Numbers</i>	
IMBNUMX	
IMBNUMY	
IMBNUMZ	
IMBNUMX-	
IMBNUMY-	
IMBNUMZ-	
<i>IMBNUMMF – Define the Imbibition Saturation Table Region Numbers (Matrix-Fracture)</i>	

I

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter I	Status
<i>IMKRVD – Imbibition Relative Permeability End-Points versus Depth Functions</i>	
IMKRVDX	
IMKRVDX-	
IMKRVDY	
IMKRVDY-	
IMKRVDX	
IMKRVDZ-	
<i>IMPCVD – Imbibition Maximum Capillary Pressure versus Depth Functions</i>	
<i>IMPES – Activate Implicit Pressure Explicit Saturation Solution Option</i>	
<i>IMPLICIT – Activate Fully Implicit Solution Option</i>	
<i>IMPORT – Import Grid File Data at the Current Position</i>	
<i>IMPTVD – Imbibition Relative Permeability Saturation End-Points versus Depth</i>	
IMPTVDX	
IMPTVDX-	
IMPTVDY	
IMPTVDY-	
IMPTVDZ	
IMPTVDZ-	
<i>IMSPCVD – Imbibition Capillary Pressure Connate Saturations versus Depth</i>	
<i>INCLUDE – Load Another Data File at the Current Position</i>	
<i>INIT – Activate the INIT File Option</i>	
<i>INRAD – Define the Inner Radius of a Radial Grid</i>	
<i>INSPEC – Activate the INSPEC File Option</i>	
<i>INTPC – Activate Dual Porosity Integrated Capillary Pressure Option</i>	
<i>IONROCK – Define the Ion Exchange Capacity for All the Cells</i>	
<i>IONXROCK - Define Ion Exchange Constant by Saturation Table Regions</i>	
<i>IONXSURF - Define Surfactant Ion Exchange Constant by Saturation Table Regions</i>	
<i>IPCG – End-Point Scaling of Grid Cell Gas Capillary Pressure (Imbibition)</i>	
<i>IPCW – End-Point Scaling of Grid Cell Water Capillary Pressure (Imbibition)</i>	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

I

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter I	Status
<i>ISGCR – End-Point Scaling of Grid Cell Critical Gas Saturation (Imbibition)</i>	
ISGCRX	
ISGCRX-	
ISGCRY	
ISGCRY-	
ISGCRZ	
ISGCRZ-	
<i>ISGL – End-Point Scaling of Grid Cell Connate Gas Saturation (Imbibition)</i>	
ISGLX	
ISGLX-	
ISGLY	
ISGLY-	
ISGLZ	
ISGLZ-	
<i>ISGLPC – End-Point Scaling of Grid Cell Capillary Pressure Connate Gas Saturation (Imbibition)</i>	
<i>ISGU – End-Point Scaling of Grid Cell Maximum Gas Saturation (Imbibition)</i>	
ISGUX	
ISGUX-	
ISGUY	
ISGUY-	
ISGUZ	
ISGUZ-	
<i>ISOGCR – End-Point Scaling of Grid Cell Critical Oil Saturation to Gas (Imbibition)</i>	
ISOGCRX	
ISOGCRX-	
ISOGCRY	
ISOGCRY-	
ISOGCRZ	

I

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter I	Status
ISOGCRZ-	
<i>ISOLNUM – Define the Independent Reservoir Regions</i>	
<i>ISOWCR – End-Point Scaling of Grid Cell Critical Oil Saturation to Water (Imbib.)</i>	
ISOWCRX	
ISOWCRX-	
ISOWCRY	
ISOWCRY-	
ISOWCRZ	
ISOWCRZ-	
<i>ISWCR – End-Point Scaling of Grid Cell Critical Water Saturation (Imbibition)</i>	
ISWCRX	
ISWCRX-	
ISWCRY	
ISWCRY-	
ISWCRZ	
ISWCRZ-	
<i>ISWL – End-Point Scaling of Grid Cell Connate Water Saturation (Imbibition)</i>	
ISWLX	
ISWLX-	
ISWLY	
ISWLY-	
ISWLZ	
ISWLZ-	
<i>ISWLPC – End-Point Scaling Grid Cell Capillary Pressure Connate Water Saturations (Imbibition)</i>	
<i>ISWU – End-Point Scaling of Grid Cell Maximum Water Saturation (Imbibition)</i>	
ISWUX	
ISWUX-	
ISWUY	
ISWUY-	

I

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter I	Status
ISWUZ	
ISWUZ-	

J

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter J	Status
JFUNC - Activate the Leverett J-function Option	
JFUNCR - Activate the Leverett J-function Saturation Table Option	

K

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter K	Status
<i>KRG – End-Point Scaling of Grid Cell Krg(Sgu) (Drainage)</i>	
KRGX	
KRGX-	
KRGY	
KRGY-	
KRGZ	
KRGZ-	
<i>KRGR – End-Point Scaling of Grid Cell Krgr(1-Sogcr) (Drainage)</i>	
KRGRX	
KRGRX-	
KRGY	
KRGY-	
KRGRZ	
KRGRZ-	
<i>KRNUM – Define the Directional Saturation Table Region Numbers</i>	
<i>KRNUMF – Define the Saturation Table Region Numbers (Matrix-Fracture)</i>	
<i>KRO – End-Point Scaling of Grid Cell Kro(Swl) (Drainage)</i>	
KROX	
KROX-	
KROY	
KROY-	
KROZ	
KROZ-	
<i>KRORG – End-Point Scaling of Grid Cell Kro(Sgcr) (Drainage)</i>	
KRORGX	
KRORGX-	
KRORGY	
KRORGY-	
KRORGZ	

K

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter K	Status
KRORGZ-	
<i>KRORW – End-Point Scaling of Grid Cell Kro(Swcr) (Drainage)</i>	
KRORWX	
KRORWX-	
KRORWY	
KRORWY-	
KRORWZ	
KRORWZ-	
<i>KRW – End-Point Scaling of Grid Cell Krw(Sw =1.0) (Drainage)</i>	
KRWX	
KRWX-	
KRWY	
KRWY-	
KRWZ	
KRWZ-	
<i>KRWR – End-Point Scaling of Grid Cell KRWR(Sowcr) (Drainage)</i>	
KRWRX	
KRWRX-	
KRWRY	
KRWRY-	
KRWRZ	
KRWRZ-	

L

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter L	Status
LAB - Activate the Laboratory System of Units for the Model	
LANGMPL - Define Langmuir Pressure Grid Cell Multiplier	
LANGMUIR - Langmuir Adsorption Isotherm Tables	
LANGSOLV - Langmuir Adsorption Isotherm Solvent Tables	
LCUNIT - Define Linear Combination Rate and Volume Units	
LGR - Define Local Grid Refinement Dimensions and Parameters	
LGRCOPY - Activate Local Grid Refinement Inheritance	
LGRFREE - Activate Local Grid Refinement Independent Time Steps	
LGRLOCK - Deactivate Local Grid Refinement Independent Time Steps	
LGROFF - Deactivate a Local Grid Refinement	
LGRON - Activate a Local Grid Refinement	
LICENSES - Define Required Licenses for Run	
LIFTOPT - Activate Gas Lift Optimization	
LINCOM - Define Linear Combination Coefficients	
LINKPERM - Assign Cell Permeabilities to Cell Faces	
LIVEOIL - Activate the Live Oil Phase (Oil with Free and Dissolved Gas)	
LKRO - End-Point Scaling of Grid Cell Kro(Sw) (Low Salinity and Oil Wet)	
LKRORG - End-Point Scaling of Grid Cell Kro(Sgcr) (Low Salinity and Oil Wet)	
LKRORW - End-Point Scaling of Grid Cell Kro(Swcr) (Low Salinity and Oil Wet)	
LKRW - End-Point Scaling of Grid Cell Krw(Sw =1.0) (Low Salinity and Oil Wet)	
LKRWR - End-Point Scaling of Grid Cell KRWR(Sowcr) (Low Salinity and Oil Wet)	
LOAD - Load a SAVE File for a Fast Restart	
LOWSALT - Activate the Low Salt Brine Phase in the Brine Model	
LPCW - End-Point Scaling of Grid Cell Water Capillary Pressure (Low Salinity and Oil Wet)	
LSALTFNC - Define Low Salt Weighting Factors versus Salt Concentration Functions	
LSLTWNUM - Define the Low Salt Water Wet Saturation Table Region Numbers	
LSNUM - Define the Low Salt Oil Wet Saturation Table Region Numbers	
LSOGCR - End-Point Scaling Grid Cell SOGCR (Low Salinity and Oil Wet)	
LSOWCR - End-Point Scaling Grid Cell SOWCR (Low Salinity and Oil Wet)	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

L

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter L	Status
LSWCR – End-Point Scaling Grid Cell SWCR (Low Salinity and Oil Wet)	
LSWL – End-Point Scaling Grid Cell SWL (Low Salinity and Oil Wet)	
LSWLPC – End-Point Scaling Grid Cell SWLPC (Low Salinity and Oil Wet)	
LSWU – End-Point Scaling Grid Cell SWU (Low Salinity and Oil Wet)	
LTOSIGMA - Dual Porosity Viscous Displacement Sigma Parameters	
LWKRO – End-Point Scaling of Grid Cell Kro(Swl) (Low Salinity and Water Wet)	
LWKROG – End-Point Scaling of Grid Cell Kro(Sgcr) (Low Salinity and Water Wet)	
LWKORW – End-Point Scaling of Grid Cell Kro(Swcr) (Low Salinity and Water Wet)	
LWKRW – End-Point Scaling of Grid Cell Krw(Sw=1.0) (Low Salinity and Water Wet)	
LWKRWR – End-Point Scaling of Grid Cell KRWR(Sw=1.0) (Low Salinity and Water Wet)	
LWPCW – End-Point Scaling of Grid Cell Water Capillary Pressure (Low Salinity and Water Wet)	
LWSLTNUM – Define the Low Salt Oil Wet Saturation Table Region Numbers	
LWSNUM – Define the Low Salt Water Wet Saturation Table Region Numbers	
LWSOGCR – End-Point Scaling Grid Cell SOGCR (Low Salinity and Water Wet)	
LWSOWCR – End-Point Scaling Grid Cell SOWCR (Low Salinity and Water Wet)	
LWSWCR – End-Point Scaling Grid Cell SWCR (Low Salinity and Water Wet)	
LWSWL – End-Point Scaling Grid Cell SWL (Low Salinity and Water Wet)	
LWSWLPC – End-Point Scaling Grid Cell SWLPC (Low Salinity and Water Wet)	
LWSWU – End-Point Scaling Grid Cell SWU (Low Salinity and Water Wet)	
LX - Dual Porosity Viscous Displacement X Direction Matrix Size for All Cells	
LXFIN – Define Logarithmic LGR Grid Block Spacing in the X-Direction	
LY - Dual Porosity Viscous Displacement Y Direction Matrix Size for All Cells	
LYFIN – Define Logarithmic LGR Grid Block Spacing in the Y-Direction	
LZ - Dual Porosity Viscous Displacement Z Direction Matrix Size for All Cells	
LZFIN – Define Logarithmic LGR Grid Block Spacing in the Z-Direction	

M

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter M	Status
MAPAXES - Define the Map Origin Input Data	
MAPUNITS - Define the Map Axes Units	
MASSFLOW - Define River Mass Flow versus Time Tables	
MATCORR - Activate the Material Balance Correction Option	
MAXVALUE - Sets a Maximum Value for an Array Element	
MEMORY - Define Allocated Memory (Retired)	
MESSAGE - Output User Message	
MESSAGES - Define Message Print Limits and Stop Limits	
MESSOPTS - Reset Severity Level for Forced Time Steps	
MESSSRVC - Activate or Deactivate Database Message File Output	
METRIC - Activate the Metric System of Units for the Model	
MICP - Activate the Microbially Induced Calcite Precipitation Model	OPM Flow
MICPPARA - Define Microbially Induced Calcite Precipitation Parameters	OPM Flow
MINNNCT - Set a Minimum Non-Neighbor Connection Transmissibility	
MINPORV - Set a Minimum Grid Block Pore Volume Threshold for All Cells	
MINPV - Set a Minimum Grid Block Pore Volume Threshold for All Cells	
MINPVV - Set a Minimum Grid Block Pore Volume Threshold for Individual Cells	
MINVALUE - Set a Minimum Value for an Array Element	
MISC - Define Solvent Miscibility-Immiscibility Transform Functions	
MISCIBLE - Define Miscibility Todd-Longstaff Parameters	
MISNUM - Define the Miscibility Region Numbers	
MLANG - Define Langmuir Maximum Gas Concentration for All Grid Cells	
MLANGSLV - Define Langmuir Maximum Solvent Concentration for All Grid Cells	
MONITOR - Activate Output of the Monitoring Data and File	
MPFANUM - Define Multi-Point Flux Discretization Regions	
MPFNNC - Define Multi-Point Flux Non-Neighbor Connections	
MSFN - Miscible Normalized Relative Permeability Tables	
MSGFILE - Active or Deactivate Message File Output	
MULSGGD - Multiply Matrix-Fracture Coupling for Oil-Gas Gravity Drainage for All Cells	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

M

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter M	Status
MULSGGDV – Multiply Matrix-Fracture Coupling for Oil-Gas Gravity Drainage for Individual Cells	
MULTFLT – Multiply the Transmissibility of a Defined Fault by a Constant	
MULTIN – Activate the Non-Unified Multiple Input File Option	
MULTIPLY – Multiply a Specified Array by a Constant	
MULTIREG – Multiply an Array by a Constant based on a Region Number	
MULTNUM – Define the Multiple Transmissibility Regions	
MULTOUT – Activate the Non-Unified Multiple Output File Option	
MULTOUTS – Activate Non-Unified Multiple Summary Output File Option	
MULTPV – Multiply Cell Pore Volumes by a Constant	
MULTR - Multiply Cell Transmissibility in the +R Direction	
MULTR- - Multiply Cell Transmissibility in the -R Direction	
MULTREAL – Activate Commercial Simulator's Multi-Realization License	
MULTREGD – Multiply Diffusivities Between Regions	
MULTREGH – Multiply Thermal Conductivities Between Regions	
MULTREGP – Multiply Pore Volumes Based On Region Number	
MULTREGT – Multiply Transmissibilities Between Regions	
MULTSIG – Multiply Matrix-Fracture Coupling for All Cells	
MULTSIGV – Multiply Matrix-Fracture Coupling for Individual Cells	
MULTTHT - Multiply Cell Transmissibility in the +Theta Direction	
MULTTHT- - Multiply Cell Transmissibility in the -Theta Direction	
MULTX - Multiply Cell Transmissibility in the +X Direction	
MULTX- - Multiply Cell Transmissibility in the -X Direction	
MULTY - Multiply Cell Transmissibility in the +Y Direction	
MULTY- - Multiply Cell Transmissibility in the -Y Direction	
MULTZ - Multiply Cell Transmissibility in the +Z Direction	
MULTZ- - Multiply Cell Transmissibility in the -Z Direction	

N

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter N	Status
NARROW – Activate Run Summary Narrow Column Output Option	
NCONSUMP - Node Gas Consumption (Extended Network)	
NEFAC - Node Efficiency Factors (Extended Network)	
NETBALAN – Network Balancing Parameters	
NETCOMPA – Define Automatic Compressors (Extended Network)	
NETWORK – Activate the Extended Network Option and Define Parameters	
NEWTON – Activate Newton Iteration SUMMARY Output	
NEWTRAN – Activate Irregular Corner-Point Grid Transmissibilities	
NEXT – Maximum Next Time Step Size (Alias for NEXTSTEP)	
NEXTSTEP – Maximum Next Time Step Size	
NEXTSTPL – Maximum Next Time Step Size (LGR)	
NINENUM – Define the Nine-Point Discretization Region	
NINEPOIN – Activate the Nine-Point Discretization Option	
NMATOPTS – Define the Discretized Matrix Dual Porosity Parameters	
NMATRIX – Activate the Discretized Matrix Dual Porosity Option	
NMESSAGE – Export Cumulative Message Summary Variables to File	
NNC – Define Non-Neighbor Connections Between Cells Manually	
NNEWTF – Activate the Non-Newtonian Fluid Model	
NOCASC – Activate Linear Solver Tracer Algorithm	
NODEPROP – Define Network Node Properties for Extended Network	
NODPPM – Deactivate Fracture Porosity-Permeability Calculation	
NOECHO – Deactivate Echoing of User Input Files to the Print File	
NOGGF – Deactivate Output of Grid Geometry File	
NOHMD – Deactivate History Match Gradient Derivative Calculations	
NOHMO – Deactivate History Match Gradient Derivative Calculations (Alias)	
NOHYST - Deactivate the Hysteresis Option	
NOINSPEC – Deactivate Output of the INIT Index File	
NOMONITO – Deactivate Output of the Monitoring Data and File	
NONNC – Deactivate Non-Neighbor Connections	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

N

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter N	Status
NORSSPEC – Deactivate Output of the RESTART Index File	
NOSIM – Activate the No Simulation Mode for Data File Checking	
NOWARN – Deactivate Warning Messages	
NOWARNEP – Deactivate End-Point Scaling Warning Messages	
NRSOUT – Defined Maximum Number of RESTART Elements	
NSTACK – Define the Stack Length for the Iterative Linear Solver	
NTG – Define the Net-to-Gross Ratio for All the Cells	
NUMRES – Define the Number of Reservoir Grids	
NUPCOL – Define the Number of Newtonian Iterations Used to Update Well Targets	
NWATREM – Node Water Removal (Extended Network)	
NXFIN – Define the Number of LGR Grid Blocks in the X-Direction	
NYFIN – Define the Number of LGR Grid Blocks in the Y-Direction	
NZFIN – Define the Number of LGR Grid Blocks in the Z-Direction	

O

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter O	Status
OFM – Activate OFM File Output of the SUMMARY Data	
OIL – Activate the Oil Phase in the Model	
OILAPI – Define the Initial Equilibration Oil API for All Grid Blocks	
OILDENT – Define Oil Density Temperature Coefficients	OPM Flow
OILVISCT – Define Oil Viscosity versus Temperature Functions	
OLDTRAN – Activate Cartesian Regular Grid Transmissibilities	
OLDTRANR – Activate Radial Regular Grid Transmissibilities	
OPERATE – Define Mathematical Operations on Arrays	
OPERATER – Define Mathematical Operations on Arrays by Region	
OPERNUM – Define Regions for Mathematical Operations on Arrays	
OPTIONS – Activate Various Program Options	
OUTRAD - Define the Outer Radius of a Radial Grid	
OUTSOL – Define Data to be Written to the RESTART File (Retired)	
OVERBURD – Define Rock Overburden Pressure versus Depth Tables	

P

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter P	Status
PARALLEL – Define Parallel Run Configuration	
PARAOPTS – Define Parallel Run Options	
PARTTRAC – Activate and Define Partitioned Tracer Option	
PATHS – Define Filename Directory Path Aliases	
PBUB – Define the Initial Equilibration Bubble-Point Pressure for All Grid Blocks	
PBVD – Equilibration Bubble-Point versus Depth Tables	
PCG – End-Point Scaling of Grid Cell Maximum Gas Capillary Pressure (Drainage)	
PCG32D – Gas-Oil Capillary Pressure versus Oil and Water Saturation Tables	
PCW – End-Point Scaling of Grid Cell Water Capillary Pressure (Drainage)	
PCW32D – Water-Oil Capillary Pressure versus Oil and Gas Saturation Tables	
PDEW – Define the Initial Equilibration Dew-Point Pressure for All Grid Blocks	
PDVD – Define Equilibration Dew-Point versus Depth Tables	
PEBI – Activate and Defined PEBI Grid Options	
PECOEFS – Define Petro-Elastic Model Coefficients	
PEDIMS – Define Petro-Elastic Model Regions and Table Dimensions	
PEGTAB – Petro-Elastic Pressure Shear Modulus Table	
PEGTAB0	
PEGTAB1	
PEGTAB2	
PEGTAB3	
PEGTAB4	
PEGTAB5	
PEGTAB6	
PEGTAB7	
PEKTAB – Petro-Elastic Pressure Bulk Modulus Table	
PEKTAB0	
PEKTAB1	
PEKTAB2	
PEKTAB3	

P

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter P	Status
PEKTAB4	
PEKTAB5	
PEKTAB6	
PEKTAB7	
<i>PENUM – Define the Petro-Elastic Region Numbers</i>	
<i>PERFORMA – Export Standard Simulator Performance Summary Variables to File</i>	
<i>PERMAVE – Define Average Transmissibility Coefficients</i>	
<i>PERMFACT – Permeability Multiplication Factor as a Function of Porosity Change</i>	OPM Flow
<i>PERMJFUN – Define Leverett J-Function Permeability for All Cells</i>	
<i>PERMR – Define the Permeability for Each Cell in the R Direction</i>	
<i>PERMTHT – Define the Permeability for Each Cell in the THETA Direction</i>	
<i>PERMX - Define the Permeability in the X Direction for All the Cells</i>	
<i>PERMY - Define the Permeability in the Y Direction for All the Cells</i>	
<i>PERMZ - Define the Permeability in the Z Direction for All the Cells</i>	
<i>PETGRID – Load a Generic Simulation Grid File</i>	
<i>PETOPTS – Define Petrel and Generic Simulation File Options</i>	
<i>PICOND – Define the Generalized Pseudo Pressure Parameters</i>	
<i>PIMTDIMS – Define Well Productivity Scaling Table Dimensions</i>	
<i>PIMULTAB – Define Well Productivity Index versus Water Cut Tables</i>	
<i>PINCH – Define Pinch-Out Layer Options</i>	
<i>PINCHNUM – Define Pinch-Out Regions for the PINCHREG Keyword</i>	
<i>PINCHOUT - Define Pinch-Out Layers Option (Fixed)</i>	
<i>PINCHREG - Define Pinch-Out Region Options</i>	
<i>PINCHXY – Define Pinch-Out Areal Options</i>	
<i>PLMIXNUM – Define the Polymer Region Numbers</i>	
<i>PLMIXPAR – Define the Polymer Todd-Longstaff Mixing Parameters</i>	
<i>PLYADS - Define Polymer Rock Adsorption Tables</i>	
<i>PLYADSS - Define Polymer Rock Adsorption with Salt Dependence Tables</i>	
<i>PLYATEMP – Define Polymer Adsorption Table Temperature</i>	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

P

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter P	Status
<i>PLYCAMAX - Define Polymer-Rock Maximum Adsorption by Cell</i>	
<i>PLYDHFLF - Define Polymer Thermal Degradation Half-Life Tables</i>	
<i>PLYESAL - Define Polymer Effective Salinity Coefficient</i>	
<i>PLYKRRF - Define Polymer Rock Permeability Reduction by Cell</i>	
<i>PLYMAX - Define Polymer-Salt Viscosity Mixing Concentrations</i>	
<i>PLYRMDEN - Define Polymer Model In Situ Rock Density</i>	
<i>PLYROCK - Define Polymer-Rock Properties</i>	
<i>PLYROCKM - Modify Polymer-Rock Properties</i>	
<i>PLYSHEAR - Activate and Define Polymer Shearing Parameters</i>	
<i>PLYSHLOG - Activate and Define the Polymer Shearing Logarithmic Parameters</i>	
<i>PLYTRRF - Define Polymer Rock Permeability Reduction versus Temperature</i>	
<i>PLYTRRFA - Define Polymer Rock Permeability Reduction versus Temperature Option</i>	
<i>PLYVISC - Define Polymer Viscosity Scaling Factors</i>	
<i>PLYVISCS - Define Polymer-Salt Viscosity Scaling Factors</i>	
<i>PLYVISCT - Define Polymer-Temperature Viscosity Scaling Factors</i>	
<i>PLYVSCST - Define Polymer-Salt-Temperature Viscosity Scaling Factors</i>	
<i>PMAX - Maximum and Minimum Pressure for Total Compressibility Check</i>	
<i>PMISC - Define Miscibility versus Pressure Tables</i>	
<i>POLYMER - Activate the Polymer Phase in the Model</i>	
<i>PORO - Define the Porosity Values for All the Cells</i>	
<i>PORV - Define the Pore Volumes for All the Cells</i>	
<i>PPCWMAX - Define SWATINIT Calculated Capillary Pressure Constraints</i>	
<i>PRECSALT - Activate the OPM Flow Salt Precipitation Model</i>	OPM Flow
<i>PRESSURE - Define the Initial Equilibration Pressures for All Grid Blocks</i>	
<i>PRIORITY - Activate and Define Well Prioritization Coefficients</i>	
<i>PROPS - Define the Start of the PROPS Section of Keywords</i>	
<i>PRORDER - Define a Group Production Rules Sequence</i>	
<i>PRVD - Define the Initial Equilibration Pressures versus Depth</i>	
<i>PSTEADY - Activate Pseudo Steady State Flow Calculation Option</i>	

P

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter P	Status
PVCD0 - Oil PVT Properties for Dead Oil (Constant Compressibility)	
PVCO - Oil PVT Properties for Live Oil	
PVDG - Gas PVT Properties for Dry Gas	
PVDO – Oil PVT Properties for Dead Oil	
PVDS - Solvent PVT Properties for the Solvent Model	
PVTG - Gas PVT Properties for Wet Gas with Vaporized Oil	
PVTGW - Gas PVT Properties for Dry Gas with Vaporized Water	OPM Flow
PVTGWO - Gas PVT Properties for Wet Gas with Vaporized Water and Oil	OPM Flow
PVTNUM – Define the PVT Regions	
PVTO - Oil PVT Properties for Live Oil	
PVTSOL - Oil PVT Properties for Live Oil versus CO2 Mass Fraction	OPM Flow
PVTW - Define Water Fluid Properties for Various Regions	
PVTWSALT - Define Brine Water Fluid Properties for Various Regions	
PVZG - Gas PVT Properties for Dry Gas (Z-Factor)	
PYACTION – Define Python Based Action Conditions and Command Processing	OPM Flow
PYEND – End the Definition of a PYINPUT Section	OPM Flow
PYINPUT – Define the Start of a PYINPUT Section	OPM Flow

Q

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter Q	Status
QDRILL – Define Sequential Drilling Queue Wells	
QHRATING – Define River Mass Flow versus Depth Tables	
QMOBIL Activate or Deactivate LGR End-Point Mobility Correction	

R

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter R	Status
RADFIN – Define a Radial Local Grid Refinement with One Column	
RADFIN4 – Define a Radial Local Grid Refinement with Four Columns	
RADIAL – Radial Grid Activation Option	
RAINFALL – Constant Flux Aquifer Rainfall Flux by Month	
RBEDCONT – Define River Grid Block Contact Area versus Depth	
RCMASTS – Reservoir Coupling Group Minimum Time Step for Flow Restriction	
REACHES – Define River Reaches Structure	
READDATA – Read Schedule Data Based on Current Time Step	
REFINE – Start the Definition of a Local Grid Refinement	
REGDIMS – Define the Maximum Number of Regions for a Region Array	
REGIONS - Define the Start of the REGIONS Section of Keywords	
RESIDNUM – Define Vertical Equilibrium Residual Flow Region Numbers	
RESTART – Restart Run From an Existing Restart File	
RESVNUM – Define Reservoir Coordinate Data Set	
RIVDEBUG – Define the Debug Data to be Printed to File (Rivers)	
RIVERSYS - Define River System (Branch Structure and Boundary Conditions)	
RIVRDIMS – Define the River Dimensions and Associated Data	
RIVRPROP – Modify River Reaches Properties	
RIVRXSEC – Define River Cross-Section versus Depth Parameters	
RIVSALT – Define River Upstream Flow Salt Concentrations	
RIVTRACE – Define River Upstream Flow Tracer Concentrations	
RKTRMDIR - Activate ROCKTAB Keyword Directional Transmissibility Multipliers	
ROCK - Define the Rock Compressibility for Various Regions	
ROCK2D – Pore Volume Compaction versus Pressure and Sw Tables	
ROCK2DTR – Transmissibility Compaction versus Pressure and Sw Tables	
ROCKCOMP – Activate Rock Compaction	
ROCKFRAC - Define the Rock Volume to Bulk Volume Fraction for All the Cells	
ROCKNUM – Define Rock Compaction Table Region Numbers	
ROCKOPTS – Define Rock Compaction and Compressibility Options	

R

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter R	Status
ROCKPAMA – Define Coal Palmer-Mansorri Rock Model Parameters	
ROCKTAB – Rock Compaction Tables	
ROCKTABH – Rock Compaction Hysteresis Tables	
ROCKTABW – Rock Compaction Tables (Water Induced)	
ROCKTHSG – Rock Compaction Hysteresis Tables (Dual Porosity)	
ROCKTSIG – Rock Compaction Tables (Dual Porosity)	
ROCKWNODE – Water Saturation Values for Compaction Pressure-Sw Tables	
RPTCPL – Activate Couple Simulation Reporting	
RPTGRID – Define GRID Section Reporting	
RPTGRIDL – Define GRID Section Reporting for LGRs	
RPTHMD - Define Well History Match Gradient Reporting Options	
RPTHMG - Define Well History Match Gradient Reporting (Groups)	
RPTHMW - Define Well History Match Gradient Reporting (Wells)	
RPTINIT – Define Output to the INIT File	
RPTISOL – Activate Isolated Reservoir Number Reporting	
RPTONLY - Activate the Report Time Steps Only Option for the SUMMARY File	
RPTONLYO - Deactivate the Report Time Steps Only Option for the SUMMARY File	
RPTPROPS – Define PROPS Section Reporting	
RPTREGS – Define REGIONS Section Reporting	
RPTRST – Define Data to be Written to the RESTART File	
RPTRUNSP – Activate RUNSPEC Reporting	
RPTSCHED – Define SCHEDULE Section Reporting	
RPTSMRY - Activate or Deactivate Summary List Report	
RPTSOL – Define SOLUTION Section Reporting	
RS – Define the Initial Equilibration GOR (Rs) for All Grid Blocks	
RSCONST – Define Constant GOR (Rs) for All Dead Oil PVT Fluids	
RSCONSTT – Define Constant GOR (Rs) for Each Dead Oil PVT Fluid	
RSGI – Define Gas-Oil Ratio versus Pressure and Gi Tables	
RSSPEC – Activate Output of the RESTART Index File	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

R

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter R	Status
RSVD – Equilibration Dissolved Gas-Oil Ratio (Rs) versus Depth Tables	
RTEMP - Define the Initial Reservoir Temperature for the Model	
RTEMPA - Define the Initial Reservoir Temperature for the Model	
RTEMPVD - Define the Initial Reservoir Temperature versus Depth Tables	
RUNSPEC - Define the Start of the RUNSPEC Section of Keywords	
RUNSUM – Activate RSM File Output of the SUMMARY Data	
RV – Define the Initial Equilibration CGR (Rv) for All Grid Blocks	
RVCONST – Define Constant CGR (Rv) for All Dry Gas PVT Fluids	
RVCONSTT – Define Constant CGR (Rv) for Each Dry Gas PVT Fluid	
RVGI – Define Condensate-Gas Ratio versus Pressure and Gi Tables	
RVVD – Equilibration Vaporized Oil-Gas Ratio (Rv) versus Depth Tables	
RWGSALT – Water Vaporization versus Pressure and Salt Concentration	OPM Flow

S

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter S	Status
<i>SALINITY – Define the Reservoir Salinity for All Cells</i>	OPM Flow
<i>SALT – Define the Initial Equilibration Salt Concentration for All Grid Blocks</i>	
<i>SALTNODE – Salt Concentration Based PVTNUM Array</i>	
<i>SALTPVD – Equilibration Salt Precipitated Concentration versus Depth Tables</i>	OPM Flow
<i>SALTREST – Define the Restart Salt Concentration for All Grid Blocks</i>	
<i>SALTSOL – Define the Salt Solubility Limit for All Cells</i>	OPM Flow
<i>SALTVD – Equilibration Salt Concentration versus Depth Tables</i>	
<i>SAMG – Activate Algebraic Multi-Grid Linear Solver</i>	
<i>SATNUM – Define the Saturation Table Region Numbers</i>	
<i>SATOPTS – Activate Relative Permeability Assignment Options</i>	
<i>SAVE – Activate Output of a SAVE File for Fast Restarts</i>	
<i>SBIOF - Define The Initial Equilibration Biofilm Volume Fraction For All Grid Blocks</i>	OPM Flow
<i>SCALC – Define The Initial Equilibration Calcite Volume Fraction For All Grid Blocks</i>	OPM Flow
<i>SCALECRS – Define End-Point Scaling Option</i>	
<i>SCALELIM – End-Point Scaling versus Depth Maximum Water Saturation</i>	
<i>SCDATAB – Well Connection PI Multipliers versus Scale Deposit</i>	
<i>SCDETAB – Well Connection Karst Aquifer Properties for Scale Deposit</i>	
<i>SCDPDIMS – Define Scale Deposition and Damage Table Dimensions</i>	
<i>SCDPTAB – Well Connection Scale Deposition Tables</i>	
<i>SCDPTRAC – Allocate Sea Water Tracer for Scale Deposition</i>	
<i>SCHEDULE - Define the Start of the SCHEDULE Section of Keywords</i>	
<i>SCVD – Define Equilibration Coal Solvent Concentration versus Depth Tables</i>	
<i>SDENSITY – Define the Miscible or Solvent Surface Gas Density</i>	
<i>SEPARATE – Activate the Separate RSM File Output Option</i>	
<i>SEPVALS – Define Separator Oil Formation Volume Factor and GOR</i>	
<i>SFOAM – Define the Initial Equilibration Foam Concentration for All Grid Blocks</i>	
<i>SGAS – Define the Initial Equilibration Gas Saturation for All Grid Blocks</i>	
<i>SGCR – End-Point Scaling Grid Cell Critical Gas Saturations</i>	
SGCRX	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

S

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter S	Status
SGCRX-	
SGCRY	
SGCRY-	
SGCRZ	
SGCRZ-	
SGCWMIS – Miscible Critical Gas versus Water Saturation Functions	
SGF32D – Gas Saturation Tables versus Oil and Water Saturations	
SGFN – Gas Saturation Tables (Format Type 2)	
SGL – End-Point Scaling Grid Cell Connate Gas Saturations	
SGLX	
SGLX-	
SGLY	
SGLY-	
SGLZ	
SGLZ-	
SGLPC – End-Point Scaling Grid Cell Capillary Pressure Connate Gas Saturations	
SGOF – Gas-Oil Saturation Tables versus Gas (Format Type 1)	
SGU – End-Point Scaling Grid Cell Gas Saturation	
SGUX	
SGUX-	
SGUY	
SGUY-	
SGUZ	
SGUZ-	
SGWFN – Gas-Water Saturation Tables (Format Type 2)	
SHRATE - Activate and Define the Polymer Shearing Logarithmic Parameters	
SIGMA – Dual Porosity Matrix to Fracture Sigma (All Cells)	
SIGMAGD – Dual Porosity Matrix to Fracture Sigma for Gravity Drainage (All Cells)	
SIGMAGDV – Dual Porosity Matrix to Fracture Sigma Gravity Drainage (Individual Cells)	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

S

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter S	Status
<i>SIGMAV – Dual Porosity Matrix to Fracture Sigma (Individual Cells)</i>	
<i>SIMULATE - Activate the Simulation Mode</i>	
<i>SKIP – Activate Skipping of All Keywords and Input Data</i>	
<i>SKIP100 – Activate Skipping of Black-Oil Keywords and Input Data</i>	
<i>SKIP300 – Activate Skipping of “Compositional” Keywords and Input Data</i>	
<i>SKIPREST – Activate Skipping of Restart Schedule Data</i>	
<i>SKRO – End-Point Scaling of Grid Cell Kro(Swl) (Surfactant)</i>	
<i>SKRORG – End-Point Scaling of Grid Cell Kro(Sgcr) (Surfactant)</i>	
<i>SKRORW – End-Point Scaling of Grid Cell Kro(Swcr) (Surfactant)</i>	
<i>SKRW – End-Point Scaling of Grid Cell Krw(Sw =1.0) (Surfactant)</i>	
<i>SKRWR – End-Point Scaling of Grid Cell KRWR(Sowcr) (Surfactant)</i>	
<i>SLAVES – Define Slave Reservoir Simulation Parameters</i>	
<i>SLGOF – Gas-Oil Saturation Tables versus Gas (Format Type 1)</i>	
<i>SMICR – Define The Initial Equilibration Microbial Concentration For All Grid Blocks</i>	OPM Flow
<i>SMRYDIMS – Define Maximum Number of Summary Vectors to be Written</i>	
<i>SMULTX - Multiply Cell Transmissibility in the +X Direction (Auto-Refinement)</i>	
<i>SMULTY - Multiply Cell Transmissibility in the +Y Direction (Auto-Refinement)</i>	
<i>SMULTZ - Multiply Cell Transmissibility in the +Z Direction (Auto-Refinement)</i>	
<i>SOCRS – End-Point Scaling Grid Cell Miscible Critical Oil Saturation with Respect to Water</i>	
<i>SOF2 – Oil Saturation Tables with Respect to Gas or Water (Format Type 2)</i>	
<i>SOF3 – Oil Saturation Tables with Respect to Gas and Water (Format Type 2)</i>	
<i>SOF32D – Oil Saturation Tables with Respect to Water and Gas (Three Phase)</i>	
<i>SOGCR – End-Point Scaling Grid Cell Critical Oil Saturation with Respect to Gas</i>	
SOGCRX	
SOGCRX-	
SOGCRY	
SOGCRY-	
SOGCRZ	
SOGCRZ-	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

S

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter S	Status
<i>SOIL – Define the Initial Equilibration Oil Saturation for All Grid Blocks</i>	
<i>SOLUTION - Define the Start of the SOLUTION Section of Keywords</i>	
<i>SOLVCONC – Define the Initial Coal Solvent Concentration for All Grid Blocks</i>	
<i>SOLVDIMS – Define PEBI Grid Nested Factorization Solver Dimensions</i>	
<i>SOLVDIRS – Define Linear Solver Principal Directions</i>	
<i>SOLVENT – Activate the SOLVENT Phase in the Model</i>	
<i>SOLVFRAC – Define the Initial Gas Solvent Fraction for All Grid Blocks</i>	
<i>SOLVNUM – Define PEBI Grid Correspondence to Solver Order</i>	
<i>SOMGAS – STONE1 Model Minimum Oil Saturation versus Gas Saturation</i>	
<i>SOMWAT – STONE1 Model Minimum Oil Saturation versus Water Saturation</i>	
<i>SORWMIS – Miscible Residual Oil versus Water Saturation Functions</i>	
<i>SOWCR – End-Point Scaling Grid Cell Critical Oil Saturation with Respect to Water</i>	
SOWCRX	
SOWCRX-	
SOWCRY	
SOWCRY-	
SOWCRZ	
SOWCRZ-	
<i>SOXYG - Define The Initial Equilibration Oxygen Concentration For All Grid Blocks</i>	OPM Flow
<i>SPECGRID- Define the Dimensions of a Corner-Point Grid</i>	
<i>SPECHEAT – Define the Specific Heat of Oil, Water and Gas</i>	
<i>SPECROCK – Define the Specific Heat of the Reservoir Rock</i>	
<i>SPIDER – Spider Grid Activation Option</i>	OPM Flow
<i>SPOLY – Define the Initial Equilibration Polymer Concentration for All Grid Blocks</i>	
<i>SSFN – Solvent and Gas Relative Permeability Tables</i>	
<i>SSGCR – End-Point Scaling Grid Cell Surfactant Critical Gas Saturations</i>	
<i>SSGL – End-Point Scaling Grid Cell Surfactant Connate Gas Saturations</i>	
<i>SSOGCR – End-Point Scaling Grid Cell Surfactant Critical Oil Saturation with Respect to Gas</i>	
<i>SSOL – Define the Initial Equilibration Solvent Saturation for All Grid Blocks</i>	

S

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter S	Status
SSOWCR – End-Point Scaling Grid Cell Surfactant Critical Oil Saturation with Respect to Water	
SSWCR – End-Point Scaling Grid Cell Critical Water Saturation	
SSWL – End-Point Scaling Grid Cell Surfactant Connate Water Saturation	
SSWU – End-Point Scaling Grid Cell Surfactant Maximum Water Saturation	
START – Simulation Start Date	
STOG Define Capillary Pressure Oil-Gas Surface Tension versus Pressure	
STONE – Activate Stone's Second Three Phase Oil Relative Permeability Model (Alias for STONE2)	
STONE1 – Activate Stone's First Three Phase Oil Relative Permeability Model	
STONE1EX – Define Stone's First Three Phase Oil Relative Permeability Parameter	
STONE2 – Activate Stone's Second Three Phase Oil Relative Permeability Model	
STOW Define Capillary Pressure Oil-Water Surface Tension versus Pressure	
STWG Define Capillary Pressure Water-Gas Surface Tension versus Pressure	
SUMMARY - Define the Start of the SUMMARY Section of Keywords	
SUMTHIN – Define SUMMARY Data Reporting Time Steps	
SUREA - Define The Initial Equilibration Urea Concentration For All Grid Blocks	OPM Flow
SURF – Define the Initial Equilibration Polymer Concentration for All Grid Blocks	
SURFACT – Activate the Surfactant Phase in the Model	
SURFACTW – Activate the Surfactant Phase with Wettability Changes in the Model	
SURFADDW – Defined Surfactant Adsorbed Concentration versus Wettability Fraction	
SURFADS - Define Surfactant Rock Adsorption Tables	
SURFCAPD – Capillary Number versus Miscibility Tables	
SURFESAL – Define Surfactant Effective Salinity Coefficient	
SURFNUM – Define the Surfactant Miscible Saturation Table Region Numbers	
SURFROCK - Define Surfactant-Rock Properties	
SURFST - Surfactant Water-Oil Surface Tension versus Surfactant Concentration	
SURFSTES - Surfactant Water-Oil Surface Tension versus Surfactant and Salt Concentrations	
SURFVISC – Surfactant Solution Viscosity versus Concentration	
SURFWNUM – Define the Saturation Table Region Numbers (High Salinity and Water Wet)	
SWAT – Define the Initial Equilibration Water Saturation for All Grid Blocks	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

S

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter S	Status
SWATINIT – Define the Initial Water Saturation Array for Capillary Pressure Scaling	
SWCR – End-Point Scaling Grid Cell Critical Water Saturation	
SWCRX	
SWCRX-	
SWCRY	
SWCRY-	
SWCRZ	
SWCRZ-	
SWF32D – Water Saturation Tables with Respect to Oil and Gas (Three Phase)	
SWFN – Water Saturation Tables (Format Type 2)	
SWINGFAC – Define Field Gas Contract Parameters	
SWL – End-Point Scaling Grid Cell Connate Water Saturation	
SWLX	
SWLX-	
SWLY	
SWLY-	
SWLZ	
SWLZ-	
SWLPC – End-Point Scaling Grid Cell Capillary Pressure Connate Water Saturations	
SWOF – Water-Oil Saturation Tables (Format Type 1)	
SWU – End-Point Scaling Grid Cell Maximum Water Saturation	
SWUX	
SWUX-	
SWUY	
SWUY-	
SWUZ	
SWUZ-	

T

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter T	Status
TABDIMS – Define the Number of Tables and the Table Dimensions	
TBLK – Define Tracer Initial Grid Block Concentrations	
TEMP – Activate the Temperature Modeling Option	
TEMPI – Define the Initial Temperature Values for All Cells	
TEMPNODE - Temperature Table for Polymer Solution Viscosity	
TEMPTVD – Activate Temperature Flux Limited Transport Option	
TEMPVD - Define the Initial Reservoir Temperature versus Depth Tables	
THCGAS – Define Gas Phase Thermal Conductivity for All Cells	
THCOIL – Define Oil Phase Thermal Conductivity for All Cells	
THCONR – Define Rock and Fluid Thermal Conductivity for All Cells	
THCONSF – Define Gas Saturation Dependent Thermal Conductivity Scaling Factor for All Cells	
THCROCK – Define Reservoir Rock Thermal Conductivity for All Cells	
THCWATER – Define Water Phase Thermal Conductivity for All Cells	
THERMAL – Activate the Thermal Modeling Option	
THPRES - Define Equilibration Region Threshold Pressures	
THPRESFT - Define Fault Threshold Pressures	
TIGHTEN – Tighten and Relax Numerical Controls	
TIGHTENP – Tighten and Relax Numerical Controls Individually	
TIME – Advance Simulation by Cumulative Reporting Time	
TITLE – Define the Title for the Input Deck	
TLMIXPAR – Define the Miscible Todd-Longstaff Mixing Parameters	
TNUM – Define Passive Tracer Concentration Regions	
TOLCRIT – Define The Critical Saturation Tolerance	
TOPS - Define the Depth at the Center of the Top Face for Each Cell	
TPAMEPS – Volumetric Strain versus Coal Gas Concentration Tables	
TPAMEPSS - Volumetric Strain versus Coal Solvent Concentration Tables	
TRACER – Define Passive Tracer Variables	
TRACERKM – Multi-Partitioned Tracer Option K(P) Tables	
TRACERKP – Standard Partitioned Tracer Option K(P) Tables	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

T

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter T	Status
TRACERS – Activate Tracer Options and Set Tracer Array Dimensions	
TRACITVD – Activate and Define Tracer Implicit Flux Limited Transport Option	
TRACTVD – Activate Tracer Explicit Flux Limited Transport Option	
TRADS – Environmental Tracer Adsorption Tables	
TRANGL – Define Non-Neighbor Connections Between Global and LGR Cells Manually	
TRANR - Define the Transmissibility in the +R Direction for All the Cells	
TRANHT - Define the Transmissibility in the +Theta Direction for All the Cells	
TRANX - Define the Transmissibility in the X Direction for All the Cells	
TRANY - Define the Transmissibility in the Y Direction for All the Cells	
TRANZ - Define the Transmissibility in the Z Direction for All the Cells	
TRDCY – Environmental Tracer Decay Tables	
TRDIF – Tracer Diffusion Tables	
TRDIS – Tracer Dispersion Table Number Allocation	
TRKPF – Define Partitioned Tracer Regions	
TRNHD – Activate Dispersion Non-Homogeneous Diffusion Option	
TRPLPORO – Activate the Triple Porosity Model Option	
TRROCK – Environmental Tracer-Rock Property Data	
TSTEP – Advance Simulation by Reporting Time	
TUNING - Numerical Tuning Control	
TUNINGDP – Numerical Tuning Control for High Throughput Cases	
TUNINGH – Numerical Tuning Control for History Match Gradient Calculations	
TUNINGL - Numerical Tuning Control for All LGRs	
TUNINGS - Numerical Tuning Control for Individual LGRs	
TVDP – Define the Initial Equilibration Tracer Saturation versus Depth Functions	
TZONE – End-Point Scaling Transition Zone Options	

U

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter U	Status
UDADIMS – Define the Dimensions of the User Defined Arguments	
UDQ - Declare User Define Quantities ("UDQ")	
UDQDIMS – Define the Dimensions of the User Defined UDQ Feature	
UDQPARAM – Define Parameters for the User Defined Quantity Feature	
UDT - Declare User Define Tables ("UDT")	
UDTDIMS – Define the Dimensions of the User Defined Tables	
UNCODHMD – Activate History Match Gradient Unencoded Output	
UNIFIN – Activate The Unified Input File Option	
UNIFOUT – Activate The Unified Output File Option	
UNIFOUTS – Activate The Unified Output Summary File Option	
UNIFSAVE – Activate The Unified Output Save File Option	
USECUPL – Load a Reservoir Coupling File	
USEFLUX – Activate Flux Boundary Model and Define Flux File	
USENOFLO – Activate Flux Boundary Model Without a Flux File	

V

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter V	Status
VAPOIL – Activate the Vaporize Oil in Wet Gas Phase in the Model	
VAPPARS – Oil Vaporization Parameters	
VAPWAT – Activate Vaporize Water in the Dry and Wet Gas Phases	OPM Flow
VDFLOW – Velocity Dependent Flow Coefficient for Grid Block Flow (Grid)	
VDFLOWR – Velocity Dependent Flow Coefficient for Grid Block Flow (Region)	
VE – Activate Vertical Equilibrium Model (Global)	
VEDEBUG – Vertical Equilibrium Debug Data Output	
VEFIN – Activate Vertical Equilibrium Model (LGR)	
VEFRAC – Vertical Equilibrium Relative Permeability Fraction (Grid)	
VEFRACP – Vertical Equilibrium Capillary Pressure Fraction (Grid)	
VEFRACPV – Vertical Equilibrium Capillary Pressure Fraction (Cell)	
VEFRACV – Vertical Equilibrium Relative Permeability Fraction (Cell)	
VFPCHK – Define Production Vertical Flow Performance BHP Check	
VFPIDIMS – Injection Vertical Flow Performance Table Dimensions	
VFPINJ – Define Injection Vertical Flow Performance Tables	
VFPPDIMS – Production Vertical Flow Performance Table Dimensions	
VFPPROD – Define Production Vertical Flow Performance Tables	
VFPTABL – Define Production Vertical Flow Performance ALQ Interpolation	
VISAGE - Activate External Reservoir Geo-Mechanics VISAGE Option	
VISCD – Activate Dual Porosity Viscous Displacement Option	
VISCREF - Define Viscosity-Temperature Reference Conditions	
VISDATES – Define External Reservoir Geo-Mechanics VISAGE Stress Dates	
VISOPTS – Define External Reservoir Geo-Mechanics VISAGE Options	

W

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter W	Status
WAGHYSTR – Define Water-Alternating-Gas Hysteresis Parameters	
WAITBAL – Wait On Network Balance Before Allowing Further Actions	
WALKALIN – Define Water Injection Alkaline Concentration	
WALQCALC – Define Well VFP Surface ALQ Phase Density	
WAPI – Define Oil Well Injection API Gravity	
WARN – Activate Warning Messages	
WATDENT – Define Water Density Temperature Coefficients	
WATER – Activate the Water Phase in the Model	
WATVISCT – Define Water Viscosity versus Temperature Functions	
WBHGLR – Define Well Bottom-Hole GLR Constraint	
WBOREVOL – Define Effective Wellbore Storage Volume	
WCALCVAL – Define Gas Well Calorific Value	
WCONHIST – Define Well Historical Production Rates and Pressures	
WCONINJ – Well Injection Targets and Constraints	
WCONINJE – Well Injection Targets and Constraints	
WCONINJH – Well Historical Observed Injection Rates and Pressures	
WCONINJP – Define Well Injection Targets and Constraints for Pattern Flood Wells	
WCONPROD – Define Well Production Targets and Constraints	
WCUTBACK – Define Well Cutback Limits and Parameters	
WCUTBACT – Define Well Tracer Cutback Limits and Parameters	
WCYCLE – Define Automatic Well Opening and Closing Cycling Parameters	
WDFAC – Define Gas Flow Dependent Skin Factor	
WDFACCOR – Gas Flow Dependent Skin Factor (Correlation)	
WDRILPRI – Add Wells to the Drilling Priority Drilling Queue	
WDRILRES – Activate Prevention of Multi-Completions in the Same Cell for Queued Wells	
WDRILTIM – Define Drilling Parameters for Automatic Drilling of New Wells	
WECON – Well Economic Criteria for Production Wells	
WECONINJ – Well Economic Criteria for Injection Wells	
WECONT – Well Economic Tracer Criteria for Production Wells	

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

W

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter W	Status
WEFAC – Define Well Efficiency	
WELCNTL – Modify Well Control and Targets	
WELDEBUG – Define the Well Debug Data to be Printed to File	
WELDRAW – Define Maximum Draw Down for Production Wells	
WELEVNT – Define Well WPWEM Summary Mnemonic Output Value	
WELLDIMS – Define the Wells and Group Dimensions	
WELMOVEL – Move Global Well Into an LGR	
WELOPEN – Define Well and Well Connections Flowing Status	
WELOPENL – Define Well and Well Connections Flowing Status (LGR)	
WELPI – Define Well Productivity and Injectivity Indices	
WELPRI – Assign Well Priority	
WELSEGS – Define Multi-Segment Wells and Their Segment Structure	
WELSOMIN – Define Well Connection Minimum Oil Saturation for Opening	
WELSPECL – Define Well Specifications for Local Grid Refinements	
WELSPECS – Define Well Specifications	
WELTARG – Modify Well Target and Constraint Values	
WFOAM - Define Well Foam Injection Concentrations	
WFRICSEG – Convert Friction Well to Multi-Segment Well	
WFRICSG – Convert Friction Well to Multi-Segment Well (LGR)	
WFRICTN – Define Well as a Friction Well	
WFRICTNL – Define Well as a Friction Well (LGR)	
WGASPROD – Define Sale Gas Well Production Targets	
WGORPEN – Define Well GOR Penalty Parameters	
WGRUPCON – Define Well Guide Rates for Group Control	
WH2NUM – Define WAG Hysteresis Saturation Table Region Numbers (Two Phase)	
WH3NUM – Define WAG Hysteresis Saturation Table Region Numbers (Three Phase)	
WHEDREFD – Define Well Hydraulic Head Reference Depth	
WHISTCTL - Define Well Historical Target Phase	
WHTEMP – Define Well Tubing Head Temperature Parameters	

W

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter W	Status
WINJMULT – Define Well Pressure Dependent Injectivity Multipliers	
WINJTEMP – Define Injection Fluid Thermal Properties	
WLIFT – Define Well Re-Tubing, THP and Lift Switching Workover Operations	
WLIFTOPT – Define Well Gas Lift Optimization Parameters	
WLIMTOL – Define Well Constraint Tolerance	
WLST – Define Well Lists (Static)	
WLSTARG – Modify Well List Target and Constraint Values (Static)	
WLSTNAM – Define Well Lists (WLSTARG)	
WMICP – Define Water Injection Well's Microbial, Oxygen, And Urea Concentrations	OPM Flow
WNETCTRL – Define Well Control for Network Control Option	
WNETDP – Define Well THP to Network Pressure Drop	
WORKLIM – Define Well Workover Time	
WORKTHP – Define Well Workover Options for THP Killed Wells	
WPAVE – Well Block Average Pressure Calculation Parameters for All Wells	
WPAVEDEP – Define Well Reference Depth for Pressure Calculations	
WPIMULT – Define Well Connection Multipliers	
WPIMULTL – Define Well Connection Multipliers (LGR)	
WPITAB - Assign Well Productivity Index versus Water Cut Tables	
WPLUG – Define Well Plug Back Length	
WPOLYMER - Define Water Injection Well Polymer and Salt Concentrations	
WPOLYRED – Define Well Polymer-Water Viscosity Reduction Factor	
WPOTCALC – Well Potential Calculation Options	
WREGROUP – Automatic Re-Assignment of Wells to Groups	
WRFT – Activate Well RFT Reporting to the RFT File	
WRFTPLT – Activate Well RFT and PLT Reporting to the RFT File	
WSALT - Define Water Injection Well Salt Concentrations	
WSCCLEAN – Well Deposited Scale Adjustment	
WSCCLENL – Well Deposited Scale Adjustment (LGR)	
WSCTAB – Assign Well Scale Deposition and Scale Damage Tables	

W

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
---------	------	------	-------	---------	----------	---------	----------

Alphabetic Listing Of Keywords Starting With The Letter W	Status
WSEGAICD – Define Multi-Segment Well Autonomous ICD Connections	
WSEGDFIN – Define Multi-Segment Well Drift Flux Slip Model Input Data	
WSEGDFMD – Define Multi-Segment Well Drift Flux Slip Model	
WSEGDFPA – Define Multi-Segment Well Drift Flux Slip Model Parameters	
WSEGDIMS – Define Multi-Segment Well Dimensions	
WSEGEXSS – Define Multi-Segment Well Import-Export Segment Volumes	
WSEGFLIM - Define Multi-Segment Well Artificial Choke Connections	
WSEGFMOD – Define Multi-Segment Well Model	
WSEGINIT - Define Multi-Segment Well Initial Conditions	
WSEGITER – Define Multi-Segment Wells Iteration Parameters	
WSEGLABY - Define Multi-Segment Well Labyrinth ICD Connections	
WSEGLINK - Define Multi-Segment Well Looped Flow Paths	
WSEGMULT – Define Multi-Segment Well Frictional Pressure Loss Multipliers	
WSEGPROP – Modify Multi-Segment Wells and Their Segment Structure	
WSEGPULL – Define a Multi-Segment Well Down-Hole Separator Pump	
WSEGSEP – Define a Multi-Segment Well Down-Hole Separator	
WSEGSICD – Define Multi-Segment Well Spiral ICD Connections	
WSEGSOLV Define Multi-Segment Well Iterative Linear Solver Parameters	
WSEGTABL – Assign Multi-Segment Well VLP Tables to Segments	
WSEGVAlV – Define Multi-Segment Well Sub-Critical Valve	
WSOLVENT - Define Gas Injection Well Solvent Fraction	
WSURFACT - Define Water Injection Well Surfactant Concentration	
WTADD – Add a Constant to a Well Target or Constraint	
WTEMP – Define An Injection Well's Fluid Temperature	
WTEMPQ – Output Well Names and Well Lists to the Print File	
WTEST – Well Testing Criteria for Re-Opening Closed Wells	
WTHPMAX – Define a Well's Maximum Flowing THP for Shut-In	
WTMULT – Multiple a Well Target or Constraint by a Constant	
WTRACER – Define An Injection Well's Tracer Concentration	

W

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter W	Status
WVFPDP – Modify Well BHP Obtained from VFP Tables	
WVFPEXP – Define Well VFP Interpolation Options	
WWPAVE – Well Block Average Pressure Calculation Parameters for Individual Wells	

X

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter X	Status
There are No Keywords Beginning with the Letter X	

Y

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter Y	Status
There are No Keywords Beginning with the Letter Y	

Z

RUNSPEC	GRID	EDIT	PROPS	REGIONS	SOLUTION	SUMMARY	SCHEDULE
-------------------------	----------------------	----------------------	-----------------------	-------------------------	--------------------------	-------------------------	--------------------------

Alphabetic Listing Of Keywords Starting With The Letter Z	Status
ZCORN – Define the Depth of Each Corner-Point of a Grid Block	
ZIPP2OFF – Deactivate Automatic Time Step Control	
ZIPPY2 – Activate Automatic Time Step Control	

APPENDIX B: OPM FLOW RELEASE HISTORY

APPENDIX TABLE OF CONTENTS

APPENDIX B: OPM FLOW RELEASE HISTORY.....	1963
B.1 Release 2021-10.....	1966
B.2 Release 2021-04.....	1974
B.3 Release 2020-10.....	1980
B.4 Release 2020-04.....	1984
B.5 Release 2019-10.....	1987
B.6 Release 2019-04.....	1991
B.7 Release 2018-10.....	1993
B.8 Release 2018-04.....	1994
B.9 Release 2017-10 Update 1.....	1996
B.10 Release 2017-10.....	1996
B.11 Release 2017-04.....	1996

B.1 RELEASE 2021-10

The 2021-10 release consists of some new features and various improvements and bug fixes. Highlights for this release includes support for a new output SUMMARY file type Enhanced SMRY (*.ESMRY), passive tracer support, two phase gas-water support and single phase water support (only for Enumeration Initialization), Carter-Tracy and numerical aquifers support with the CO₂ Storage Model, and the implementation of the Microbially Induced Calcite Precipitation ("MICP") model used to investigate CO₂ leakage remediation.

New and Depreciated Command Line Options

The major command line changes made for this release are summarized in Table B.1

OPM Flow 2021-10 New And Depreciated Command Line Options			
No.	Variable Name	Description	Default
1	--accelerator-mode	A defined character string that defines the usage of the GPU (cusparseSolver or openclSolver) or FPGA (fpgaSolver) as the linear solver, usage '--accelerator-mode=[none cusparse opencl fpga amgcl]'.	"none"
2	--enable-esmry	A Boolean value that switches on (true) or off (false) the output SUMMARY vectors to the ESMRY file for fast loading of summary data (#2590, #2606, #2609, #2621, and #3453).	false
3	--enable-well-operability-check-iter	A Boolean value set to true or false that enables (true) checking of a well's operating status <u>during iterations</u> , or disables (false) the checking <u>during iterations</u> .	false
4	--force-disable-resv-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow to <u>not to print</u> the Reservoir Volume Fluid In-Place report after each report time step (true) or not (false).	false
5	--fpga-bitstream	A character string that specifies the bit stream file for the fpgaSolver (including path), usage: '--fpga-bitstream=<filename>'.	""
6	--linsolver	Command line parameter changed from --linear-solver to --lin-solver Functionality is the same as before.	"ilu0"
7	--max-newton-iterations-with-inner-well-iterations	A positive integer that specifies the maximum newton iterations with inner well iterations.	8.0
8	--max-temperature-change	A real positive value that stipulates the maximum absolute change of temperature in a single iteration.	5
9	--maximum-number-of-well-switches	A positive integer values that stipulates the maximum number of times a well can switch to the same control.	3

OPM Flow 2021-10 New And Depreciated Command Line Options			
No.	Variable Name	Description	Default
10	--relaxed-pressure-tol-msw	A real positive value that sets the relaxation tolerance for the multi-segment well <u>pressure</u> solution.	50000
11	--relaxed-well-flow-tol	A real positive value that sets the relaxation tolerance for the well flow residual.	1.0
	-sched-restart	A Boolean value that determines for a restart run if the case should initialize wells and groups from the historical SCHEDULE section (true), or from the well and group data on the restart file (false). Note that the commercial simulator always uses data from the restart file (false). (#3601). <u>This option was also in the previous release.</u>	true
12	--shut-unsolvable-wells	A Boolean value that determines if the simulator should shut unsolvable wells (true), or not (false).	false
13	--solver-continue-on-convergence-failure	A Boolean value that stipulates if the simulator should continue (true) instead of stopping (false) when the minimum solver time step is reached.	false
14	--strict-inner-iter-wells	A positive integer that specifies the number of inner well iterations with strict tolerance.	40
15	--strict-outer-iter-wells	A positive integer that specifies the number of newton iterations for which wells are checked with strict tolerance.	99
16	--temperature-max	A real positive value that sets the maximum absolute temperature.	400
17	--temperature-min	A real positive value that sets the minimum absolute temperature.	280
1	--gpu-mode	Use GPU cusparseSolver or openclSolver as the linear solver; usage: '--gpu-mode=[none cusparse opencl]'	
2	--relaxed-flow-tol-inner-iter-msw	Relaxed tolerance for the inner iteration for the MSW flow solution.	
3	--relaxed-pressure-tol-inner-iter-msw	Relaxed tolerance for the inner iteration for the MSW pressure solution.	
4	--strict-inner-iter-ms-wells	Number of inner iterations for multi-segment wells with strict tolerance.	
5	--use-inner-iterations-ms-wells	Use nested iterations for multi-segment wells.	
6	--use-inner-iterations-wells	Use nested iterations for standard wells.	

OPM Flow 2021-10 New And Depreciated Command Line Options			
No.	Variable Name	Description	Default
Notes: 1) Cells colored in green in the "No." column indicate a new command line option for this release. 2) Cells colored in red in the "No." column indicate a depreciated command line option for this release.			

Table B.1: OPM Flow 2021-10 New and Depreciated Command Line Options

New Simulator Features and Improvements

In addition to the above the following new features have been added to the simulator:

- Added a new output SUMMARY file type Enhanced SMRY (*.ESMRY) that is optimized for fast loading of selected vectors by post-processing applications. The *.ESMRY file is re-written for every time step and does not have a performance impact on the simulation. The file type is compatible with OPM ResInsight and the option is activated via the enable-esmry=true command line option (#2590, #2606, #2609, #2621, and #3453).
- Passive tracer support has now been implemented in this release via the TRACER, TRACERS and TVDP keywords. The feature is activated by the command line variable -enable-tracer-mode and is by default set to "true". Testing indicates the results are comparable to the commercial simulator. Tracer saturations can be visualized in OPM ResInsight together with the field and well SUMMARY vectors. Work on partitioning tracer support, tracers that transfer between phases, for example a gas phase tracer dissolving into the oil phase, is ongoing (#2553 and #3433).
- Added two phase gas-water support and single phase water support. Note this only works with Enumeration Initialization, that is the standard Equilibrium Initialization will result in OPM Flow throwing an exception since currently Equilibrium Initialization only works when oil is present in the model (#3454).
- Carter-Tracy aquifers (AQUCT keyword in the GRID section) can now be used with the CO₂ Storage Model (CO2STORE keyword in the RUNSPEC section). In addition, the TEMP parameter on the AQUCT keyword may be used to define the initial temperature of the aquifer at the aquifer's datum depth (#2694).
- Numerical aquifers (AQUNUM keyword in the GRID section) can also now be used with the CO₂ Storage Model, CO2STORE keyword in the RUNSPEC section (#3532).
- Implemented the Microbially Induced Calcite Precipitation ("MICP") model used to investigate CO₂ leakage remediation. The module requires the WATER and MICP keywords in the RUNSPEC section, in addition to the MICPPARA keyword in the PROPS section to define the model parameters. Enumeration Initialization is via the SBIOF, SCALC, SMICR, SOXYG, and SUREA keywords in the SOLUTION section, to set the initial values for all cells in the model. The WMICP keyword in the SCHEDULE section sets the injection concentrations for the wells (#2743, #671, #3617, and #3590).
- Added the calculation of the SUMMARY variable FPR for when there is no oil in the system (#3491).
- COMPORD added the DEPTH ordering option to the keyword, all options on the keyword are now supported (#2585).
- GCONINJE and GCONPROD keywords in the SCHEDULE section now support the RESV option for the TARGET parameter on both keywords (#3363 and #2476).
- The GCONINJE keyword with the addition of the RESV option, now supports all guide rate options via the GUIPHASE parameter (#3363 and #2476).
- The GPMAINT keyword is now supported which defines the groups under pressure maintenance control, the associated flow rate and pressure targets, and fluid in-place regions associated with pressure maintenance, as well as various pressure maintenance controls (#3541).

- 12) GRIDUNIT keyword in the GRID section is now supported (#2588).
- 13) Keywords MAPAXES and MAPUNITS are now supported in *.EGRID files (#2617).
- 14) Improved how the Guide Rate calculations are calculated for both groups and wells under guide rate control (#2537 and #2552).
- 15) Added the RPTSCHED reservoir volume report with the FIPRESV option on the keyword (#3398).
- 16) Various improvements to the parser in checking valid input to various keywords and the features supported by the keywords (#2586, #2585, and #3440).
- 17) Various improvements to the restart file output to enable restarting from a restart file, including: sequential and parallel aquifer support (#3474), connection level cumulative volumes. Support for loading the ACTIONX and UDQ data from the restart file has also be implemented, although testing of this feature is limited as of this release (#3543). Well test data, as per the WTEST keyword, is now also written to the restart file (#2718).
- 18) Improvements and corrections to the RESTART file for better compatibility with the commercial simulator (#2714), support for Group Guide rate values (#2739, #2751 and #3581), and loading WTEST keyword associated data (#3594, #2746 and #2747).
- 19) Performance improvements in the both the standard and multi-segment well models by optimizing the potential calculation using BHP and THP (#3524).
- 20) Performance improvements in reading and writing out binary files, that reduces load times of around 60% (#2634).
- 21) The code for handling the WTEST keyword in the well model model was improved by only opening wells that satisfy the economic conditions and that can physically flow (#3547, #2737 and #2744).
- 22) Changed how inoperable wells are handled during well model iterations (#3539).

In addition, the following new SUMMARY keywords are now recognized as described by the comments in Table B.2.

No.	Summary Keyword	Comment
1	CVPR, CVPT, CVIR and CVIT	Added support for the connection reservoir voidage volume summary vectors CVPR (production rate), CVPT (cumulative production total), CVIR (injection rate), and CVIT (cumulative injection total).
2	FOIPR, FWIPR, FGIPR, and FRPV	Added support for the Field Reservoir (conditions) Pore Volume (FRPV) vector, as well as the compositional oil, water and gas fluid in-place vectors FOIPR, FWIPR, and FGIPR. that are reported at reservoir conditions, as oppose to FOIP, FGIP and FWIP that are reported at surface conditions (#2701).
3	FGLIR, GGLIR, and WGLIR	Implemented support for gas lift variables. Note that the WALQ is also written out but all the values are zero (#2495).
4	FSIP	Added support for the Field Salt In-Place vector (#3493).
5	FTIC, FTIR, FTIT, FTIC, FTTPR, and FTP	Implemented support for field tracer variables (#3430).

No.	Summary Keyword	Comment
6	MSUMBUG MSUMCOMM MSUMERR MSUMMESS MSUMPROB MSUMWARN NEWTON	In the 2021-04 release the message keywords were recognized by the parser; however, no data associated with these vectors is written to file (#2234). This is still the case.
7	RPTONLY RPTONLYO	Added support for SUMMARY keywords that activates (RPTONLY) and deactivates (RPTONLYO) summary output at report time steps only. The keyword works in both the SUMMARY and SCHEDULE sections (#2597 and #2761).
8	SUMTHIN	Implemented support for the SUMTHIN keyword that defines a time interval for writing out the SUMMARY data to the SUMMARY file and the RSM file. The keyword works in both the SUMMARY and SCHEDULE sections (#2489, #2596, #2489 and #2761).
9	SWCT	The water cut vector for Multi-Segment Well segments has now been implemented (#2636).
10	WTIC, WTIR, WTIT, WTPC, WTPR, and WTPT	Implemented support for well tracer variables (#3430).
11	WWIRT	In the 2021-04 release support for the WWIRT vector for writing out the water injection rate target was implemented (#2071); however, the field (FWIRT) and Group (GWIRT) are still not available. This still the case.

Table B.2: New SUMMARY Keywords for the 2021-10 Release

Bug Fixes

The following bug fixes and improvements have been incorporated into this release.

- 1) Previously, if the ACTNUM keyword was not supplied in the input deck when using the GDFILE keyword to define the grid, then the simulator would abort with a segmentation fault, even though the ACTNUM keyword is optional. This has now been corrected in this release (#2675).
- 2) Fixed a bug in RESTART output when using the FREQ=x option on the RPTRST keyword. which caused the output to the restart file to be based on calendar time instead of simulation time. For example if x was set to six, then the RESTART records were written January and July, instead of every six months of simulated time. This has now been fixed in this release (#2551).
- 3) OPM Flow does not support the SAVE file format but instead writes out a RESTART file record instead at the requested time. However, the RESTART record was written at the $TSTEP_{n+1}$ instead of $TSTEP_n$, this has now been changed so that the RESTART record is written at $TSTEP_n$, the same as the commercial simulator's equivalent SAVE file output (#2661).
- 4) Corrected an issue for when a region has zero active cells, when calculating the average region properties (#3514).
- 5) Fixed an issue with wells shut-in for the *norne* 4_MSW test case which may impact user's cases (#3481).

- 6) Previously the IMPORT keyword could not utilize the directory path declared via the PATHS keyword, this has now been rectified ([#2600](#)).
- 7) Fixed an issue when there are unknown keywords and the parser throws an exception in sequential runs and a segmentation fault in parallel runs ([#3503](#)).
- 8) Production and injection cumulative volumes were not necessarily correct if wells changed from being a producer to an injector or vice versa. This has now been corrected ([#2581](#)).
- 9) Fixed an issue in parallel runs when initially all connections are close for a well ([#3495](#)).
- 10) Fixed a bug on the FIP report so that the PORV and TOTAL PORE VOLUMES values are the same as the commercial simulator; previously there were small discrepancies ([#3398](#)).
- 11) Reverted some changes on how the FACTOR (efficiency factor) parameter is applied on the GEFAC keyword in the SCHEDULE section. Now FACTOR is only applied while accumulating rates from subordinate groups ([#3464](#)).
- 12) Fixed a bug associated with the writing out of SUMMARY variables to the SUMMARY and RSM files referencing the first simulation date as oppose to the start of simulation date as per the START keyword ([#2685](#)).
- 13) Various ACTIONX keyword improvements and fixes, including:
 - 1) Verifying that the ACTIONX parameters and dimensions are consistent with the values entered on the ACTDIMS keyword in the RUNSPEC section. Previously, if the ACTDIMS parameters were inconsistent with the ACTIONX parameters OPM Flow would abort ([#2695](#)).
 - 2) For the ACTIONX date parameter MNTH, an error would occur if the month was enclosed in quotes, now both quoted ('JAN') and unquoted (JAN) values for MNTH are accepted ([#2696](#)).
 - 3) Numerical values for the ACTIONX date parameter MNTH are now also accepted. The values will be rounded to the nearest integer. So a MNTH value of 4.4 would result in the month being APR for April ([#2699](#)).
 - 4) Ensuring that matched wells are passed to WCONPROD and WCONINJE keywords using the '?' string as the well name ([#2753](#)).
- 14) If the WTEST keyword was activated and opened a well to flow, then the well status remained unchanged, instead of being updated to open. This has now been rectified for this release ([#3537](#)).
- 15) Previously, the numerical aquifer keywords AQUCON and AQUNUM were incorrectly reported as unsupported. This has now been corrected in this release ([#3230](#)).
- 16) In the previous release, if the aquifer summary variables ANQR, ANQP and ANQT used the default version of the keywords, that is:

ANQR
/

then the vectors were not written out. This has now been rectified in this release ([#2474](#)).

Note that the FNQR and FNQT keywords are unsupported and a corresponding warning message is issued.
- 17) Hitherto the COPYREG keyword was reported as unsupported but was in fact supported and functioning. The incorrect unsupported message no longer occurs in this release ([#3234](#)).
- 18) In the SOLUTION section the RPTSOL keyword was up to now marked as active and was treated as such by the simulator; however, no output was generated in the print file. The keyword is now labeled as unsupported ([#3248](#)). Note this is the print keyword for the SOLUTION section, and should not be confused with the SCHEDULE section print keyword RPTSCHED.
- 19) Rectified several issues with the GCONINJE re-injection options and fixed several well modeling bugs that caused the simulator to crash ([#2708](#), [#3546](#) and [#2666](#)).

- 20) When running the carbon dioxide (CO₂) storage model, activated by the CO2STORE keyword in the RUNSPEC section, in parallel, the simulator would deadlock due to passed parameters being unreasonable. The deadlock has now be fixed for this release and error trapping is now the same as per a serial run. ([#3545](#) and [#3556](#)).
- 21) In CO₂ sequestration runs, activated by the CO2STORE in the RUNSPEC section, that typically model large time steps, the reported dates were inaccurate, this has now been rectified ([#3560](#)).
- 22) Corrected an error in restart runs for history matching wells. Previously, the wells used the default value of one atmosphere for the BHP instead of the actual BHP value in the restarted run, which resulted in numerical issues ([#2715](#)).
- 23) For the WECON keyword in the SCHEDULE section, the units for GOR and WGR parameters caused the well to prematurely shut-in, this has now been corrected. ([#2726](#)). Also fixed an issue with completions not being opened after a well event ([#3563](#) and [#2723](#)) and how the WTEST keyword in the SCHEDULE section was handled by the simulator ([#2720](#)).
- 24) Fixed an issue with aquifer connections in parallel runs ([#3572](#)).
- 25) Corrected how aquifer connections and MINPV interact so that only active cells are connected to the aquifer ([#2730](#) and [#2734](#)).
- 26) Fix an issue with writing out tracer data to the restart file for time steps that are not report time steps ([#3606](#)).
- 27) Fix several issues with well operability that caused wells to be shut-in ([#3569](#)) and for history match wells that cannot produce terminating the run prematurely ([#3607](#)).
- 28) In the radial model there was a bug that caused all the radial cells in the grid having a zero thickness, this has been addressed in this release ([#2640](#)).
- 29) Previously, both the GLIFTOPT and NETWORK keywords were reported as unsupported when in fact they were supported and fully functional. This has now been fixed for this release ([#3280](#)).

Known Issues

- 1) The tracer related output to summary file does currently not respect the command line variable - *enable-tracer-mode*, this means we may have the situation in which the input deck specifies tracer output, and the simulator is run without enabling the tracer model (*enable-tracer-mode=false*). In this scenario the trace SUMMARY vector output will consists of irrelevant tracer values.
- 2) Although the SUMMARY vector WALQ is written out all the values are zero.
- 3) The GDFILE keyword in the GRID section loads a grid file in various formats, with the FMTOPT parameter setting the format type of the file. If the variable FMTOPT is omitted then the default is for binary file input for the commercial simulator; whereas, OPM Flow derives FMTOPT from the file extension (*.EGRID or *.FEGRID), making FMTOPT superfluous. However, if the extension is lower case then OPM Flow may incorrectly determine the file type. The work around is change the extension to upper case.
- 4) Currently two phase gas-water and single phase water models only work with Enumeration Initialization.
- 5) For the saturation tables (SWOF, SWFN etc.) if the capillary pressure values were defaulted with 1* then the simulator should use linear interpolation to calculate the defaulted values. This is no longer working.
- 6) As per previous releases of the radial model, the COORDSYS keyword item three must be set to COMP to complete the circle, this has not been implemented in this release. Also there appears to be a bug for full radial models when a well goes on BHP control that causes the well not to respect the BHP constraint, this eventually causes the well to die prematurely. See [#2640](#) for a discussion on the topic.

- 7) Using the GRAVITY keyword in the PROPS section will cause an exception to be raised and the simulator to abort. Use the DENSITY keyword instead to avoid this error.
- 8) As per the previous releases, the RPTSCHED WELLS sub-report does not print the FIELD group production data.
- 9) As in previous releases there are some issues with the OPERATE and OPERATER keywords associated with the input parsing; for various reasons a few of the fields require special case treatment in the grid processing, including (at least) MULTZ, PORV and ACTNUM, and for those keywords the OPERATE/OPERATER keyword does not work.
- 10) OPM Flow does not support the SAVE file format for fast restarts like the commercial simulator, but instead writes a standard RESTART record at the requested time step in the SCHEDULE section. If the keyword is encountered in the RUNSPEC section it is ignored. However, the simulator issues a false warning saying the keyword is not supported, when in fact RESTART records are indeed written out in the SCHEDULE section if requested by the SAVE keyword.
- 11) Gas lift optimization currently only works for cases that have the gas phase present, that is runs with dead oil and no gas phase will cause the simulator to throw an exception ([#3658](#)).
- 12) For the UDQ ASSIGN operator after the terminating "/" normally any comments can be entered; however, if there is "/" within the comment field, as per:

ASSIGN FUNGLYLD 1.196 / Condensate Yield (63.5/56.7)/(1.0 – 0.065)

then the simulator will abort. The work around is to manually place the comment characters "--" after the ASSIGN terminating "/", like so:

ASSIGN FUNGLYLD 1.196 / -- Condensate Yield (63.5/56.7)/(1.0 – 0.06)

- 13) At the moment, one cannot initialize tracers using the EQUALS keyword. Instead use the array format, that is the keyword followed by the required number of values, or the TVDP keyword in the SOLUTION section to set the initial tracer concentrations as a function of depth.
- 14) Currently, gas tracers cannot be used if the dissolve gas phase, as per the DISGAS keyword in the RUNSPEC section, is active in the model.

Bård Skaflestad, Jostein Alvestad, Kai Bao, Markus Blatt, Joakim Hove, Arne Morten Kvarving, Cintia Goncalves Machado, David Landa-Marbán, **Atgeirr Flø Rasmussen (Release Manager)**, Alf Birger Rustad, Tor Harald Sandve, Torbjørn Skille, Pieter J. Verveer, and David Baxendale.

B.2 RELEASE 2021-04

The 2021-04 release consists of some new features and various improvements and bug fixes. Highlights for this release includes support for numerical aquifers, gas lift optimization, network models, spider grids and support for diffusive flow for carbon dioxide storage, as well as convective dissolution of carbon dioxide into in situ brine.

New Command Line Options

The major command line made to this release are summarized in Table B.3

OPM Flow 2021-04 Major Command Line Option Changes			
No.	Variable Name	Description	Default
1	-h or --help	A character string that causes OPM Flow to print a help message that gives a brief description of the available command line parameters. This now only prints the active user facing command line options.	N/A
2	--help-all	Prints all the command line options included in the release, including obsolete, hidden and depreciated options.	N/A
3	--allow-distributed-wells	Allow the perforations of a well to be distributed across multiple processes in parallel runs.	false
4	--opencl-ilu-reorder	A defined character string that selects the reordering strategy for ILU for openclSolver and should be set to: 1) "level_scheduling", or 2) "graph_coloring" Note that "level_scheduling" behaves like Dune and cuspars, whereas "graph_coloring" is more aggressive and is likely to be faster, but is random-based and generally increases the number of linear solves and linear iterations significantly.	"graph_coloring"
5	--vtk-write-diffusion-coefficients	A Boolean value that switches on (true) or off (false) the output of the molecular diffusion coefficients to the VTK ²¹² output files.	false
6	--vtk-write-effective-diffusion-coefficients	A Boolean value that switches on (true) or off (false) the output of the effective molecular diffusion coefficients for the medium to the VTK output files.	false
7	--vtk-write-tortuosities	A Boolean value that switches on (true) or off (false) the output of the tortuosity for each phase to the VTK output files.	false

²¹² Virtualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

OPM Flow 2021-04 Major Command Line Option Changes			
No.	Variable Name	Description	Default
8	--zoltan-imbalance-tol	A real positive that defines the tolerable imbalance of the load balancing provided by Zoltan package.	1.1

Table B.3: OPM Flow 2021-04 Major Command Line Option Changes.

New Simulator Features and Improvements

In addition to the above the following new features have been added to the simulator:

- 1) Gas Lift Optimization: Added support for gas lift optimization, including in parallel, that enables the simulator to optimize allocate gas lift to wells and groups.
- 2) Numerical Aquifers. Added support for numerical aquifers that allow for flexible and efficient inclusion of pressure support from adjacent aquifers. Analytical aquifers have been supported in previous releases. See the AQUNUM and AQUCON keywords in the GRID section
- 3) Support for aquifers in MPI runs, that is in parallel runs.
- 4) Support for wells split between several process domains. This potentially gives better parallel grid partitioning. The well split is only implemented for standard wells, not for multi-segment wells; although the latter may be implemented in a future release.
- 5) Added guide rate support for injection groups via the GCONINJE keyword in the SCHEDULE section using the GRPGUIDE and GUIPHASE parameters on the keyword. Only the RATE, NETV and VOID guide rate options are supported.
- 6) Network Option. Implemented the Network option that allows for well/group coupling through common tubing head pressures when required.
- 7) Previously in an ACTIONX block only a subset of the well keywords could be used in the SCHEDULE section, this has now been extended to include the GCONPROD, GCONINJE and GLIFTOPT group keywords.
- 8) ACTIONX block can now handle well lists declared via the WLIST keyword for well keywords that are available within an ACTIONX block.
- 9) ACTIONX User Defined Quantity ("UDQ") can now be used for the artificial lift quantity on the WCONHIST and WCONPROD keywords in the SCHEDULE section, the ALQ-WELL parameter on the aforementioned keywords.
- 10) Expanded possible actions in ACTIONX block, including the use of the WELPI keyword parameter and UDQ updates.
- 11) Implemented convective DRSDT for CO₂ storage as described by Sandve et al.²¹³. The convective DRSDT is activated with the DRSDTCON keyword in the SCHEDULE section.
- 12) Added experimental support for diffuse flow via the DIFFC and DIFFUSE keywords, this facility is not available via OPM Flow but can be accessed via re-compiling the source code with the option enabled. Due to the experimental nature of this feature and the unavailability in the released binary packages, the keywords and the functionality are not documented in this release of the manual.
- 13) Added support for the WELPI keyword for well productivity based scaling of a well's connection transmissibility factors.
- 14) Three-point vertical scaling of relative permeability functions (keywords KRGR, KRORG, KRORW, and KRWR).

²¹³ Tor Harald Sandve I, Sarah E. Gasda, Atgeirr Rasmussen, and Alf Birger Rustad. Convective dissolution in field scale CO₂ storage simulation using the OPM Flow simulator. Submitted to TCCS 11 – Trondheim Conference on CO₂ Capture, Transport and Storage Trondheim, Norway – June 21-23, 2021.

- 15) Support for well and group names with more than eight (8) characters in summary output.
- 16) Added support on the WECON keyword in the SCHEDULE to apply the economic limit test using a well's potential, previously only the default of using a well production rate was implemented.
- 17) Support for IMPORT keyword in GRID section.
- 18) Added support for Python to access the PORO array.
- 19) Added support for SPIDER grids. The SPIDER keyword activates the radial grid geometry option for the model using Cartesian coordinates, if this keyword and the RADIAL keyword are omitted then Cartesian geometry is assumed by OPM Flow. This keyword will create a spiderweb-shaped grid based on a corner-point grid using the standard radial grid keywords: INRAD, DRV, DTHETAV, DZ/DZV etc. in the GRID the section. In addition the PERMR and PERMTHT keywords for radial and spider grids are now supported.
- 20) Added support for the multi-segment well keyword WSEGAICD that incorporates an autonomous inflow control device in a multi-segment well.
- 21) Continued improving OPM Flow's restart capability inline with the commercial simulator's functionality, including obtaining the restart point based on TSTEP in addition to the DATES keyword time steps.

In addition, the following new SUMMARY keywords are now recognized as described by the comments in Table B.4.

No.	Summary Keyword	Comment
1	AAQTD AAQPD	Added support for the AAQTD and AAQPD vectors in the SUMMARY section, for calculating and reporting the dimensionless time (simulator time divided by aquifer's time constant) and pressure (influence function evaluated at dimensionless time) values as part of the Carter-Tracy aquifers.
2	BKROG BKROW	Added support for the BKROG and BKROW vectors that output the block-level values of the relative permeability of oil in the two-phase oil/gas and oil/water subsystems of a three-phase simulation run.
3	BSOIL BSGAS BSWAT BPRESSUR	Added support for SUMMARY variables BSOIL, BSGAS, BSWAT, and BPRESSUR as aliases for BOSAT, BGSAT, BWSAT, and BPR respectively.
4	CORPL COFRL	Added CORPL and CORFL as as aliases for WOFRL for a well's completion oil rate.
5	RHPV	Added RHPV vector, a regions hydrocarbon pore volume, to the SUMMARY section variables.
6	WEPR WEPT	Added support for the WEPR and WEPT energy vectors in the SUMMARY section.
7	WWIRT	Added support for the WWIRT vector in the SUMMARY section for writing out the water injection rate target. Note that the field (FWIRT) and Group (GWIRT) are still not available.

No.	Summary Keyword	Comment
8	MSUMBUG MSUMCOMM MSUMERR MSUMMESS MSUMPROB MSUMWARN NEWTON	The message keywords are now recognized by the parser; however, no data associated with these vectors is written to file. Previously these keywords would cause an error and the simulator would stop due to the error.

Table B.4: New SUMMARY Keywords for the 2021-04 Release

Bug Fixes

The following bug fixes and improvements have been incorporated into this release.

- 1) Various fixes for thermal simulations, including how the thermal conductivity was calculated in thermal runs, now the thermal conductivity is calculated in the same manner as permeability and diffusivity.
- 2) Fixes in the GCONINJE implementation.
- 3) On both the GCONPROD and GCONINJE keywords in the SCHEDULE section, the GRPCNTL property sets if a the group is subject to higher level group control or not. If the group being defined is the FIELD then GRPCNTL is supposed to be ignored, this was previously not the case. This has now been corrected.
- 4) Fixes in the boundary setup when using the OPM specific BC keyword.
- 5) Correct inclusion of the group efficiency for the top group level
- 6) Improved convergence of the multi-segmented well equations.
- 7) Various MPI related fixes, avoiding dead-locks etc.
- 8) Corrected various issues with the UDQ facility, including when the UDQ keyword contains both ASSIGN and DEFINE statements such that only the ASSIGN should be only be evaluated for the first time step, and then in consecutive time steps the DEFINE statement should be executed. Also when a UDQ expression refers to other UDQ's the previous value for the other UDQ's should be used when evaluating the expression.
- 9) Fixed an error in the processing of the COPYREG keyword due to picking up the wrong item; however, COPYREG keyword is reported as unsupported but is in fact supported and functioning.
- 10) Corrected various issues with well reference depths used to report BHP, so that the reference depth is not updated when new connections are added via the COMPDAT keyword, but is updated when the WELSPECS keyword is introduced.
- 11) Fixed an error with the CO2STORE keyword being reported as unsupported. The keyword is now recognized and functioning.
- 12) Fix a bug that causes the simulator to throw an exception if the SUMMARY temperature keywords were used (WBHPT, FTIRHEA, etc.) and were not recognized by the parser.
- 13) Fixed a bug with the WTICHEA and WTPCHEA variables in the SUMMARY section not reporting the correct temperatures. Now the temperature as set by WTEMP is reported for the injector, which is consistent with the commercial simulator. For non-thermal decks both injectors and producers now report the standard condition temperature of 60° F or 15.56° C, depending on the units being used. For thermal decks the producers report the temperature at same reference depth as the BHP and the bottom-hole temperature is now calculated.

- 14) Fix an error associated with the number of FIPNUM regions and the SUMMARY file output associated with using the general form of the region summary vectors, that is:

RPR
/

as opposed to declaring the region format.

RPR
1 2 /

- 15) The issue with the ALL keyword in the SUMMARY section that reports “Warning: Unhandled summary keyword ALL” multiple times has been fixed. The message now states the actual summary vector associated with the ALL keyword that is not available, instead of stating the actual ALL keyword.
- 16) If gas lift optimization was not used the simulator did not use the ALQ value on the WCONPROD keyword as the default value, this has now been fixed.
- 17) A bug that caused the simulator to throw exception when the depth on the SALTVD table did not cover the depth range of the model has been fixed.
- 18) Previously the SUMMARY vector ROEW, that is a regions oil recovery factor, was based on a well’s production total (WOPT), this has now be changed to be based on a well’s completion total (COPT) instead, as it was not obvious how to assign wells to regions.
- 19) Fixed an error in the ALQ calculation for injected gas lift that used rate instead of volume in the calculation.
- 20) Added the unused commercial compositional simulator's threshold saturation of Killough’s hysteresis model to the EHYSTR. The parameter is not used by OPM Flow.
- 21) As per the previous releases, two phase gas-water models (GAS and WATER only keywords in the RUNSPEC section) will not initialize in OPM Flow. Previously, the simulator would throw an exception, this is now trapped and a message is issued stating the gas-water systems are not currently supported. The work around is to convert the model to a three phase model (OIL, GAS and WATER keywords in the RUNSPEC section) and modify the PROPS section PVT keywords accordingly.
- 22) Previously the OPERATE keyword EQUATION options of MAXLIM and MINLIM were not supported, this has been rectified for this release and both options are now fully supported.

Known Issues

- 1) The numerical aquifer keywords AQUCON and AQUNUM are incorrectly reported as unsupported. This has already been corrected in the current MASTER, so will be fixed in the next release.
- 2) The aquifer summary variables ANQR, ANQP and ANQT variables are supposed to be supported and simulator does not issue a warning message if these keywords are in the input deck. However, the output from these keywords is not written to the SUMMARY or RSM file. if the default version of the keywords are used, that is:

ANQR
/

will not work, but specifying the aquifer numbers will work, so for aquifer number one we would use:

ANQR
1 /

Note that the FNQR and FNQT keywords are unsupported and a corresponding warning message is issued.

- 3) The COPYREG keyword is reported as unsupported but is in fact supported and functioning. The issue has been corrected for the next release.
- 4) In the SOLUTION section the RPTSOL keyword is marked as active and is treated as such by the simulator; however, no output is generated in the print file. The keyword should be labeled as

inactive. Note this is the print keyword for the SOLUTION section, and should not be confused with the SCHEDULE section print keyword RPTSCHED. The issue has been corrected for the next release.

- 5) Using radial grids via the RADIAL keyword in the RUNSPEC section will cause the simulator to throw an exception as radial grids are not included in the release. Instead one can use the SPIDER grid keyword for radial flow simulation that converts the radial entered keywords to Cartesian coordinates using Irregular Corner-Point Grid – see the example in the section on SPIDER grids ([Spider Grids](#)).
- 6) For radial grids the COORDSYS keyword item three must be set to COMP to complete the circle, this has not been implemented in this release.
- 7) Both the GLIFTOPT and NETWORK keywords are reported as unsupported when in fact they are supported and fully functional. This has already been fixed for the next release.
- 8) Using the GRAVITY keyword in the PROPS section will cause an exception to be raised and the simulator to abort. Use the DENSITY keyword instead to avoid this error.
- 9) As per the previous releases, the Tracer model is not working. In order to activate the Tracer model the command line variable `-enable-tracer-mode` should be set to “true”; the simulator will still issue a message saying *Warning: Keyword 'TRACERS' is not supported by flow* but will continue to run. However, the results from the tracer tracking appear to be incorrect and should not be relied upon. The standard results, rates, pressures, saturations, etc., are identical to the comparable no tracer run.
- 10) As per the previous releases, the RPTSCHED WELLS sub-report does not print the FIELD group production data.

Bård Skaflestad, Jostein Alvestad, Kai Bao, Markus Blatt, Joakim Hove, Arne Morten Kvarving, Cintia Goncalves Machado, Atgeirr Flø Rasmussen, Alf Birger Rustad, **Tor Harald Sandve (Release Manager)**, Torbjørn Skille, and David Baxendale.

B.3 RELEASE 2020-10

Since the OPM 2020.04 release in May 2020 the developers have worked on many aspects of the simulator, with a particular focus on prediction mode abilities and expanding support for user-defined quantities and dynamic actions (ACTIONX keyword). The project team have also added specialized physics models including Brine and CO₂ storage capabilities as well as two experimental accelerators for the linear solvers based on OpenCL and CUDA for GPU calculations.

New Output Files and Command Line Options

The following new out files and command load options have been implemented in this release:

- 1) Add a new output file, *.INFOSTEP, that contains per time step performance numbers, that is the number of linear solves, number of linear iterations, setup time, etc.
- 2) Improve efficiency in loading summary files, especially to support manipulating summary data from Python wrappers. This also includes a new special purpose utility, called "make_lodsmry", that creates files named *.LODSMRY which contains the summary vectors collected in the time direction for all values for one vector, before all values of another vector.
- 3) Exclusively use the "flexible" framework for selecting linear solvers, through the new command line option "--linsolver". The simulator supports the following pre-configured options:
 - 1) "ilu0",
 - 2) "cpr_trueimpes",
 - 3) "cpr_quasiimpes",
 - 4) "cpr" (alias for "cpr_trueimpes"), or
 - 5) "amg".

Advanced users may alternatively select a runtime configuration represented in a JSON²¹⁴ file by passing a filename with the extension ".json". The default setting is "ilu0".

- 4) Added an option to use non-strict tolerances only if a small fraction of the total pore volume violates the strict tolerances. By default the simulator uses a non-strict pore volume threshold of 0.03 (3%), but this is configurable at run time with the new option '--relaxed-max-pv-fraction'.
- 5) Add new option ProjectSaturations (--project-saturations) which ensures all saturation values are in the interval (0, 1), including runs that use solvents.
- 6) Replaced the various -vtk-write command line options with one global option, --enable-vtk-output, that enables or disables the writing of VTK files.

New Simulator Features

In addition to the above the following new features have been added to the simulator:

- 1) Initial support for calling simulator time step functions from Python language wrappers have been implemented.
- 2) A new PVT model for CO₂ and brine has been implemented; see the C02STORE keyword in the RUNSPEC section and SALINITY keyword in the PROPS section.
- 3) Added support salt dependent water PVT properties, see the PVTWSALT keyword in the PROPS section and SALTVD keyword in the SOLUTION section.

²¹⁴ JavaScript Object Notation is an open standard file format, and data interchange format, that uses human-readable text to store and transmit data objects consisting of attribute-value pairs and array data types.

- 4) Added support for using user defined arguments (UDAs) in the WELTARG and GCONPROD keywords.
- 5) Implemented support for using SOF2 (Family II) with Family I (SGOF/SWOF) keywords in the case of three-phase solvent models.
- 6) Added support for well-level temperature summary output in thermal simulations (SUMMARY keywords WTICHEA and WTPCHEA). However, subsequent testing indicates that data written out is incorrect.
- 7) Implemented support gas lift optimization for standard (non-segmented) wells, see the LIFTOPT, GLIFTOPT and WLIFTOPT keywords in the RUNSPEC section.
- 8) Implemented support for field, group, and well level summary output of gas lift injection rates (keywords FGLIR, GGLIR, WGLIR in the SUMMARY section). However, although the keywords are recognized and the data written to the SUMMARY file, subsequent testing indicates all the values are zero.
- 9) Added summary output for analytical aquifers: AAQR, AAQT, and AAQP. Note that the following analytical aquifer summary keywords will be ignored: FAQR, FAQT, AAQTD and AAQPD.
- 10) Implemented the SUMMARY vectors FMWIA, FMWPA, GMWIA, and GMWPA for counting abandoned producers and injectors. The vectors can also written out via the FMWSET and GMWSET keywords in the SUMMARY section.
- 11) Incorporated the FILLEPS keyword in the PROPS section. Saturation function scaling endpoints now also honor the TOLCRIT value defined by the TOLCRIT keyword when written to the *.INIT file.
- 12) Generalized the implementation of the FIP keyword and to handle the additional summary variables that include fluid in-place region name defined by a five character string following the FIP characters on the FIP keyword, FIP-BLK1 for example. This enables the regional properties for FIP-BLK1 to be written to the SUMMARY file. For example to write the regional pressure for “-BLK1” one would use the SUMMARY keyword RPR-BLK1, where “-BLK1” can be any character string.
- 13) Improved the error messages from the initial input parsing of the input deck for great clarity and to better enable input deck validation.
- 14) Added support for group control targets/prediction mode with guide rates in the simulator (see the GUIDERAT keyword in the SCHEDULE section) that also incorporates voidage replacement and re-injection scenarios. Note that the simulator will erroneously report that the GUIDERAT keyword is not recognized, when in fact it is and will be used by the simulator.
- 15) Added support for outputting guide rate values at well and group levels to the SUMMARY files (summary keywords W*PGR and G*PGR).
- 16) Added the support for the GCONSALE keyword that defines group sales gas production targets and constraints for when the gas production from an oil field group is exported under a Gas Sales Agreement (“GSA”) and the oil field group also has oil production targets and constraints. In addition the GCONSUMP keyword has been implemented that defines the group gas consumption (fuel) rate. Note again the simulator will erroneously report that the two keywords are not recognized, when in fact they are and will be used by the simulator. Secondly, the SUMMARY vectors associated with these keywords (FGSR, FGST, FGCR, FGCT, GGSR, GGST, GGCR, and GGCT) have not been implemented).
- 17) Added additional logging information to the *.PRT file for the setup phase of the simulator when processing the *.DATA file, including which keywords and their file locations are being processed at any one time. This is to assist the user in narrowing down problems in the input file.
- 18) Add support for editing transmissibility values in the EDIT section.
- 19) Add support for handling MULTZ in a pinched-out column of cells when the PINCH multiplier processing mode is 'ALL'.

- 20) Implemented a clean shutdown in a parallel simulation run if any process throws an exception.
- 21) Add support for running Zoltan²¹⁵ based partitioning on a single process only.

Bug Fixes

The following bug fixes and improvements have been incorporated into this release.

- 1) Fix a bug in parsing the UDQ keyword that caused the UDQ tokenizer to split on the '-' character when parsing numerical literals on scientific form: 1E-5.
- 2) Added the missing GLR_LIMIT to the WCUTBACK keyword, solving bug #1877.
- 3) The simulator now correctly handles the RPTRST keyword in SOLUTION section.
- 4) Removed OPERATER and OPERNUM keywords from the keywords not supported since they are supported.
- 5) Fix the default pressure initialization for Carter-Tracey analytical aquifers.
- 6) Fix the way the simulator incorporates the gravity terms in boundary conditions fluxes.
- 7) Fix bugs associated with the TRAN* series of keywords in EDIT section.
- 8) Ensure that VTK data set filenames use relative paths.
- 9) Various bug fixes for the Message Passing Interface ("MPI"). MPI is a standardized and portable message-passing system developed for distributed and parallel computing.
- 10) Fixes to the source building work flow, especially for the "opm-upscaling" module.
- 11) Fix a bug in the interaction of TUNING and WSEGITER. This was needed for compatible with the commercial simulator's restart feature.
- 12) The simulator issued a message "All completions in well XXX is shut at X.XXXXXX days. The well is therefore also shut" multiple times, this has been fixed for this release.
- 13) Fixed missing tubing length data in the WELSPECS Multi-Segment Well Connection sub-report.
- 14) Previously OPM Flow incorrectly reported that the MAXVALUE keyword was not supported. The warning message was incorrect as the values entered on the keyword were applied to the named array. The warning message has been removed for this release.
- 15) Previously for the Brine model, the values entered via the SALTVD keyword were ignored and reset to zero. This has been fixed for this release.
- 16) Fixed an issue with the simulator failing to correctly read the RTEMP and RTEMPA keywords.
- 17) Added the following polymer model summary vectors to the SUMMARY file: FCIR, FCIT, FCPC, FCPR, FCPT, GCIR, GCIT, GCPC, GCPR, GCPT, WCIR, WCIT, WCPC, WCPR, and WCPT.
- 18) Fixed a bug with the standard usage of ROCKTAB and throw an exception on the more exotic usages that are unsupported.

Known Issues

- 1) The simulator will throw an exception if the depth entries on the SALTVD table do not cover the range of the model depths, as this keyword currently not set up to extrapolate outside its domain of definition. The work around is to ensure the depths on the SALTVD keyword cover the depth range in the model.

²¹⁵ The Zoltan library is a toolkit of parallel combinatorial algorithms for unstructured and/or adaptive computations, for dynamic partitioning using graph coloring and ordering. In addition to native implementations of many algorithms, Zoltan interfaces to the graph and hypergraph partitioning libraries of PT-Scotch, PaToH and ParMETIS. See <http://www.cs.sandia.gov/zoltan/> for further information.

- 2) The simulator may throw an exception if a SUMMARY keyword (WBHPT, FTIRHEA, etc.) is not recognized by the parser. The work around is to delete the offending keyword(s) from the input deck.
- 3) There is an issue with the ALL keyword in the SUMMARY section that reports “*Warning: Unhandled summary keyword ALL*” multiple times. The ALL keyword is handled by the simulator and the currently available supported summary vectors will be written out to the SUMMARY and RSM files (if requested). The message should state the actual summary vector associated with the ALL keyword that is not available, instead of stating the actual ALL keyword.
- 4) As per the previous release, two phase gas-water models (GAS and WATER only keywords in the RUNSPEC section) will not initialize in OPM Flow, this has been the status for past versions of the simulator as well. The work around is to convert the model to a three phase model (OIL, GAS and WATER keywords in the RUNSPEC section) and modify the PROPS section PVT keywords accordingly.
- 5) As per the previous release, the Tracer model is not working. In order to activate the Tracer model the command line variable *-enable-tracer-mode* should be set to “true”; the simulator will still issue a message saying *Warning: Keyword 'TRACERS' is not supported by flow* but will continue to run. However, the results from the tracer tracking appear to be incorrect and should not be relied upon. The standard results, rates, pressures, saturations, etc., are identical to the comparable no tracer run.
- 6) The OPERATE keyword EQUATION options of MAXLIM and MINLIM are currently not supported.
- 7) As per the previous release, the RPTSCHEWELLS sub-report does not print the FIELD group production data.

Bård Skaflestad (Release Manager), Jostein Alvestad, Kai Bao, Markus Blatt, Joakim Hove, Arne Morten Kvarving, Cintia Goncalves Machado, Atgeirr Flø Rasmussen, Alf Birger Rustad, Tor Harald Sandve, Torbjørn Skille, and David Baxendale.

B.4 RELEASE 2020-04

New Features

Writing out of the SUMMARY file data in a columnar format to the RSM file has been implemented. Normally the SEPARATE keyword in the SUMMARY section is invoked to direct the data stream to a separate RSM file for easy loading into other programs, for example, Microsoft's EXCEL or LibreOffice's CALC spreadsheet program. However, this is the default behavior for OPM Flow.

Additional SCHEDULE section reports has been added to this release including the WELLS and WELSPEDS options on the RPTSCHED keyword. The reports are similar to those from the commercial simulator.

The Brine Tracking option has now been activated in this release and should be considered experimental and used with caution. The keywords associated with this feature are BRINE, BDENSITY, PVTWALT and WSALT.

A Python scripting facility has been implemented in OPM Flow via the:

- 1) PYINPUT/PYEND keywords that processes standard Python commands that can be used to manipulate and define the simulators input parameters during processing of the input deck. The main purpose of the facility is to script the construction of the various keywords.
- 2) PYACTION keyword that provides similar functionality as the ACTIONX scripting facility, but instead uses the standard Python interpreter. PYACTION provides an interface between the simulator and Python via a Python function that enables obtaining various run times parameters from the simulator.

Experimental support for using the Graphics Processing Unit ("GPU") *—cusparsolver* as the linear solver has been implemented, see the command line parameter *—use-gpu* in section [2.2 Running OPM Flow 2021-10 From The Command Line](#).

A command line parameter *—sched-restart* has been added to allow a restart run to initialize wells and groups from the historical SCHEDULE section (current and past default behavior), or from the well and group data on the RESTART file. Note that the commercial simulator always uses data from the restart file. The intention is to duplicate the behavior of the commercial simulator after suitable testing.

The initialization of parallel cases has been completely reworked, the simulator now uses considerably less memory when initializing a parallel run.

Group control of wells in prediction mode has been made more consistent and improved in several ways, this may impact the results compared to previous versions of the simulator.

All black-oil keywords are now documented to varying level of detail depending on the functionality implemented in OPM Flow, and all are now recognized by the OPM Flow input deck parser.

In addition the following new keywords are now recognized with varying functionality as described by the comments in Table B.5.

No.	Keyword	Comment
1	BDENSITY	Define the Surface Brine Density for the Fluid.
2	BRINE	Activate Brine Tracking Option.
3	DATE	Activate the DATE Option for the SUMMARY File.
4	EXIT	Exit Simulation from within an Action Section, this is an OPM Flow specific keyword.
5	PERMFAC	Permeability Factor Reduction Due to Salt Precipitation for OPM Flow's Salt Precipitation model.

No.	Keyword	Comment
6	PVTGW	Gas PVT Properties for Dry Gas with Vaporized Water for OPM Flow's Salt Precipitation model.
7	PVTGWO	Gas PVT Properties for Wet Gas with Vaporized Water and Oil for OPM Flow's Salt Precipitation model.
8	PVTWSALT	Define Brine Water Fluid Properties for Various Regions for the Brine Tracking and Salt Precipitation models.
9	PYACTION	Define Python Based Action Conditions and Command Processing
10	PYEND	End the Definition of a PYINPUT Section
11	PYINPUT	Define the Start of a PYINPUT Section
12	RUNSUM	Activate RSM File Output of the SUMMARY Data.
13	RWGSALT	Water Vaporization versus Pressure and Salt Concentration or OPM Flow's Salt Precipitation model.
14	SALTSOL	Define the Salt Solubility Limit for All Cells for OPM Flow's Salt Precipitation model.
15	SALTVD	Define the Equilibration Salt Concentration versus Depth Tables for the Brine model. Note: Although the data is read by the simulator it is currently ignored.
16	SEPARATE	Activate the Separate RSM File Output Option.
17	SKIPREST	Activate Skipping of Restart Schedule Data (this keyword is now functional, previously it was only recognized by the input deck).
18	WSALT	Define Water Injection Well Salt Concentrations.
19	WSEGVAlV	Define Multi-Segment Well Sub-Critical Valve for Inflow Control Device
Notes: <ol style="list-style-type: none"> 1) Cells colored in green in the "No." column indicate that the keyword is recognized by the input deck parser and fully or partially supported by OPM Flow. 2) Cells colored in orange in the "No." column indicate that the keyword is recognized by the input deck parser but not supported by OPM Flow. 3) Cells colored in red in the "No." column indicate that the keyword is not recognized by the input deck parser and OPM Flow. 		

Table B.5: New Keywords for the 2020-04 Release

Bug Fixes

The following bug fixes and improvements have been incorporated into this release.

- 1) Fixed a bug with the PVTsalt keyword that caused the keyword to be set to unrecognized.

Known Issues

- 1) Two phase gas-water models (GAS and WATER only keywords in the RUNSPEC section) will not initialize in OPM Flow, this has been the status for past versions of the simulator as well. The work around is to convert the model to a three phase model (OIL, GAS and WATER keywords in the RUNSPEC section) and modify the PROPS section keywords data accordingly.
- 2) OPM Flow incorrectly reports that the MAXVALUE keyword is not supported. The warning message is incorrect and the values entered on the keyword will be applied to the named array.
- 3) For the Brine model the SALTVD is active in this release; however, the values entered via the keyword are ignored and reset to zero. A fix is ongoing but did not make it into the 2020-04 release.
- 4) The Tracer model is not working. In order to activate the Tracer model the command line variable - *enable-tracer-mode* should be set to “true”; the simulator will still issue a message saying *Warning: Keyword 'TRACERS' is not supported by flow* but will continue to run. However, the results from the tracer tracking appear to be incorrect and should not be relied upon. The standard results, rates, pressures, saturations, etc., are identical to the comparable no tracer run.
- 5) The OPERATE keyword EQUATION options of MAXLIM and MINLIM are currently not supported.
- 6) The RPTSCHED WELLS report does not print the FIELD group production data.

Developer Changes

- 1) For restart runs the commercial simulator does not consider the historical part of the SCHEDULE section in the input deck, as all necessary well and group information is obtained from the restart file, and the interpretation of the SCHEDULE keywords starts at the restart date in the input deck. Historically, OPM Flow has treated restart runs differently. OPM Flow uses the SCHEDULE section data to initialize the wells and groups, combined with the solution arrays (PRESSURE, SWAT, etc.) from the restart file. There is an ongoing effort to duplicate the same behavior as the commercial simulator to further increase the compatibility between the commercial simulator and OPM Flow. This work is being done in stages to ensure existing models continue to work. See the *-sched-restart* command line parameter in section [2.2 Running OPM Flow 2021-10 From The Command Line](#).

Joakim Hove (Release Manager), Cintia Goncalves Machado, Kai Bao, Tor Harald Sandve, and David Baxendale.

B.5 RELEASE 2019-10

New Features

An experimental foam module has been added to OPM Flow 2019-10 release. With this it is possible to simulate certain types of surfactant injection. Such injection stimulates formation of foam to change mobility ratios, and give better reservoir sweep. The implemented foam model treats surfactant transported in the gas phase, and reduces the mobility of that phase depending on the surfactant concentration. In addition to mobility reduction, adsorption to the reservoir rock is included in the model. To test the foam module use the keywords, FOAM, FOAMADS, FOAMMOB, FOAMOPTS, FOAMROCK and WFOAM. The model has not been tested on anything but artificial test cases so far, it is therefore likely to have omissions and bugs. If you try it out, please send feedback by the mailinglist (opm-request@opm-project.org), or by raising an issue on GitHub (<https://github.com/OPM>). A simple test case based on SPE1 has been added to the opm-tests repository, in the directory spe1_foam (https://github.com/OPM/opm-tests/tree/master/spe1_foam).

First implementation of the ACTIONX facility and associated keywords. The ACTIONX keyword defines a series of conditions that invoke run time processing of ACTION functions and is similar to executing a run time script. This is the general purpose version of the ACTION series of keywords that can apply Boolean conditional tests to variables at the field, group, region, well segment and well levels. The ACTION, ACTIONG, ACTIONR, ACTIONS and ACTIONW keywords are not implemented in OPM Flow and are unlikely to be so, as the ACTIONX keyword implements their functionality with greater flexibility. As this is the first release with this functionality, users should exercise caution using this functionality.

Rock compaction has been implemented via the OVERBURD, ROCK2D, ROCK2DTR, ROCKCOMP, and the ROCKNUM keywords. The facility is activated by the ROCKCOMP keyword in the RUNSPEC section.

OPM Flow now supports output of a common subset of end-point arrays to OPM Flow's *.INIT file. Specifically, OPM Flow outputs the drainage and imbibition curve end-points but does not currently support directionally dependent end-points (e.g., SGCRX-). This version also supports the FILLEPS keyword to output the actual end-points, whether taken from direct assignment in the deck or derived from the corresponding saturation function table. Note that OPM Flow does not currently support the TOLCRIT keyword which will affect *CR end-points derived from the tables. This version also activates the pertinent flags in the *.INIT file's LOGIHEAD vector which means that the ResInsight relative permeability plot is now able to distinguish the scaled from the unscaled curves in a cell even for result sets generated by OPM Flow.

Initial implementation of the well list facility via the WLIST keyword for static well lists has been incorporated into this release. In addition, improve support for the WTEST keyword has been added and the WECON keyword now supports GOR checking.

The issue with the Ubuntu Linux 18.04 LTS (64-bit version only) release that prevented mpirun working with OPM Flow under this version of the operating system has been resolved in this release of OPM Flow.

There is an on going effort to recognize all known black-oil keywords by the OPM Flow input deck parser, and to document all these keywords with varying level of detail depending on the functionality implemented in OPM Flow.

In addition the following new keywords are now recognized with varying functionality as described by the comments in Table B.6.

No.	Keyword	Comment
1	ACTION	Define Action Conditions and Command Processing (Field).
2	ACTIONG	Define Action Conditions and Command Processing (Groups).
3	ACTIONR	Define Action Conditions and Command Processing (Regions).
4	ACTIONS	Define Action Conditions and Command Processing (Well Segments).
5	ACTIONW	Define Action Conditions and Command Processing (Wells).

No.	Keyword	Comment
6	ACTIONX	Define Action Conditions and Command Processing.
7	ACTPARAM	Define Action Facility Target and Tolerance Parameters.
8	ENDACTIO	End the Definition of ACTION Commands.
9	UDADIMS	Define the Dimensions of the User Defined Arguments.
10	UDQ	Declare User Define Quantities ("UDQ").
11	UDQDIMS	Define the Dimensions of the User Defined UDQ Feature.
12	UDQPARAM	Define Parameters for the User Defined Quantity Feature.
13	UDT	Declare User Define Tables ("UDT").
14	UDTDIMS	Define the Dimensions of the User Defined Tables.
15	FILLEPS	Activate Saturation End Point Export to INIT File.
16	FOAM	Activate the Foam Phase and Model.
17	FOAMADS	Define Foam Rock Adsorption Tables.
18	FOAMDCYO	Define Foam Decay versus Oil Saturation Tables.
19	FOAMDCYW	Define Foam Decay versus Water Saturation Tables.
20	FOAMFCN	Define Foam Gas Mobility Reduction versus Capillary Number.
21	FOAMFRM	Define Foam Gas Mobility Reduction versus Reference Mobility.
22	FOAMFSC	Define Foam Gas Mobility versus Surfactant Concentration Functions.
23	FOAMFSO	Define Foam Gas Mobility Reduction versus Oil Saturation.
24	FOAMFST	Define Foam Gas-Water Surface Tension versus Surfactant Concentration.
25	FOAMFST	Define Foam Gas-Water Surface Tension versus Surfactant Concentration.
26	FOAMMOB	Define Foam Gas Mobility versus Foam Concentration Tables.
27	FOAMMOBP	Define Foam Mobility Reduction versus Oil Pressure.
28	FOAMMOBS	Define Foam Mobility Reduction versus Shear.
29	FOAMOPTS	Define Foam Model Options.
30	FOAMROCK	Define Foam Rock Properties.
31	OVERBURD	Define Rock Overburden Pressure versus Depth Tables.
32	ROCK2D	Pore Volume Compaction versus Pressure and Sw Tables.
33	ROCK2DTR	Transmissibility Compaction versus Pressure and Sw Tables
34	ROCKCOMP	Activate Rock Compaction.
35	ROCKFRAC	Define the Rock Volume to Bulk Volume Fraction for All the Cells.
36	ROCKNUM	Define Rock Compaction Table Region Numbers.
37	ROCKOPTS	Define Rock Compaction and Compressibility Options.
38	ROCKPAMA	Define Coal Palmer-Mansorri Rock Model Parameters.
39	ROCKTAB	Rock Compaction Tables.

No.	Keyword	Comment
40	ROCKTABH	Rock Compaction Hysteresis Tables.
41	ROCKTABW	Rock Compaction Tables (Water Induced).
42	ROCKWNOD	Water Saturation Values for Compaction Pressure-Sw Tables.
43	WFOAM	Define Well Foam Injection Concentrations.
44	WLIST	Define Well Lists (Static).
45	WLISTARG	Modify Well List Target and Constraint Values (Static).
46	WLISTNAM	Define Well Lists (WLISTARG).
Notes: <ol style="list-style-type: none"> 1) Cells colored in green in the "No." column indicate that the keyword is recognized by the input deck parser and fully or partially supported by OPM Flow. 2) Cells colored in orange in the "No." column indicate that the keyword is recognized by the input deck parser but not supported by OPM Flow. 3) Cells colored in red in the "No." column indicate that the keyword is not recognized by the input deck parser and OPM Flow. 		

Table B.6: New Keywords for the 2019-10 Release


Bug Fixes

The following bug fixes and improvements have been incorporated into this release.

- 1) Restart values on the RESTART file are now only read once, previously this was done twice.
- 2) Fixed several bugs concerning the input and output of RESTART files.
- 3) EBOS now logs output to both the *.PRT and *.DBG files.
- 4) OPM Flow now abort a run without reading the deck if the command line parameters are incorrect.
- 5) Use grid region mapping from opm-grid.
- 6) Fixed a bug related to negative THP values when extrapolating values from VFP tables.
- 7) Printing of logging information from Well Testing is now written to both the *.PRT and *.LOG files.
- 8) Several bug fixes to multi-segement well model have been implemented.
- 9) Both the *.INIT and *.GRID files are now written out on a restart run.
- 10) OPM Flow now does not update RESV variable for producers in prediction mode.
- 11) Fixed an issue with the simulator over writing the FPR summary vector instead of writing out the FPRP summary vector instead..
- 12) The simulator now always writes out the transmissibilities between vertical neighbors to TRANZ (even for non-neighbor connections).

Developer Changes

For the 2019-10 release, the module "ewoms" has been renamed "opm-models". The repository on github has been renamed, but the old name will continue to work for some time. The figure below shows the current module structure for the 2019.10 release.

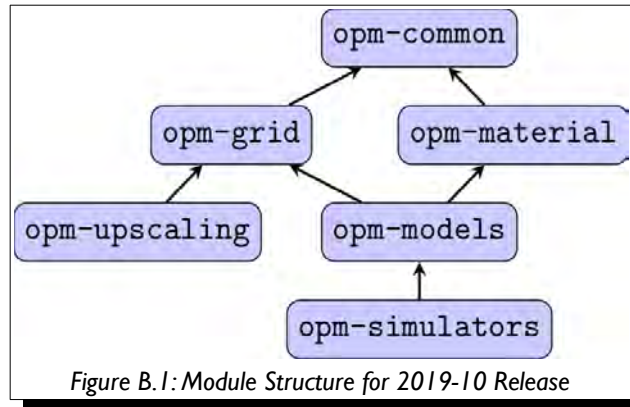

Most files/header that were located in directory `opm/autodiff` in `opm-simulators` have been moved to `opm/simulators/aquifers`, `opm/simulators/linalg`, `opm/simulators/utils`, or `opm/simulators/wells` depending on their content.

Markus Blatt, Atgeirr Flø Rasmussen, Bård Skaflestad, Tor Harald Sandve, Arne Morten Kvarving and David Baxendale.

B.6 RELEASE 2019-04

Error message reporting has been significantly improved for this release. Previously, when OPM Flow found an error in the input deck, an exception was thrown immediately and the program terminated after writing out an error message. In many cases there are multiple errors in an input deck, but only the first will be reported. In this release all errors are collected and OPM Flow continues until the input deck has been completely assembled. If there have been errors during processing all error messages are now written to the standard output files, after which the program will terminate. This should greatly improve debugging of OPM Flow input deck. The feature is activated by the command line option:

flow --strict-mode=true CASE.DATA

See section [2.2Running OPM Flow 2021-10 From The Command Line](#) for additional information.

In addition the following new keywords are now recognized with varying functionality as described by the comments in Table B.7.

No.	Keyword	Comment
1	AQUFETP	The AQUFETP keyword defines Fetkovich Analytical aquifers and the aquifer properties.
2	DRSDTR	DRSDTR defines the maximum rate at which the solution gas-oil ratio (R_s) can be increased in a grid cell for various regions in the model.
3	DRVDTR	DRVDTR defines the maximum rate at which the solution oil-gas ratio or condensate-gas ratio (R_v) can be increased in a grid cell for various regions in the model.
4	FILEUNIT	The FILEUNIT keyword defines the units of the of the data set, and is used to verify that the units in the input deck and any associated include files are consistent grid data.
	GDFILE	The GDFILE keyword loads a GRID file that contains the structural data for the grid as a set of topological cuboidal cells, and EGRID files that contain structural and property data. Added in 2018-10 but didn't work, this has been fixed in 2019-04 and is fully functional.
5	FLUXTYPE	Recognized by the input deck parser only.
6	ISGLPC	ISGLPC defines the <u>imbibition</u> connate gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked. Recognized by the input deck parser, and internalised into OPM Flow's 3D property representations. <u>Missing Some Functionality - Use with Caution.</u>
7	ISWLPC	ISWLPC defines the <u>imbibition</u> connate water saturation for all the cells in the model via an array when the end-point scaling option has been invoked. Recognized by the input deck parser, and internalised into OPM Flow's 3D property representations. Missing some functionality. <u>Use with caution.</u>
8	MULTIN	This keyword switches on the Multiple Input Files option for all input files.
8	MULTOUT	This keyword switches on the Multiple Output Files option for all output files.
9	OVERBURD	Recognized by the input deck parser and simulator support is available in the experimental "ebos" simulator.
10	ROCK2D	Recognized by the input deck parser and simulator support is available in the experimental "ebos" simulator.

No.	Keyword	Comment
11	ROCK2DTR	Recognized by the input deck parser and simulator support is available in the experimental "ebos" simulator
12	ROCKWNOD	Recognized by the input deck parser and simulator support is available in the experimental "ebos" simulator.
13	SGLPC	SGLPC defines the connate gas saturation for all the cells in the model via an array when the end-point scaling option has been invoked. Recognized by the input deck parser, and internalised into OPM Flow's 3D property representations. Missing some functionality. <u>Use with caution.</u>
14	STONE	This keyword is an alias for STONE2 keyword that activates Stone's second three phase oil relative permeability model as modified by Aziz and Settai. Keyword was previously supported by OPM Flow but not recognized by the input deck parser. This has now been fixed and the keyword is fully functional as per the documentation in the manual.
15	STONE2	This keyword activates Stone's second three phase oil relative permeability model as modified by Aziz and Settai. Keyword was previously supported by OPM Flow but not recognized by the input deck parser. This has now been fixed and the keyword is fully functional as per the documentation in the manual.
16	SWLPC	SWLPC defines the connate water saturation for all the cells in the model via an array when the end-point scaling option has been invoked. Recognized by the input deck parser, and internalised into OPM Flow's 3D property representations. Missing some functionality. <u>Use with caution.</u>
17	TBLK	Recognized by the input deck parser and simulator support is available in the experimental "ebos" simulator
18	THPRESFT	Recognized by the input deck parser and simulator support is available in the experimental "ebos" simulator.
19	WLIST	WLIST declares a group of wells to belong to a named well list.
Notes: <ol style="list-style-type: none"> 1) Cells colored in green in the "No." column indicate that the keyword is recognized by the input deck parser and fully or partially supported by OPM Flow. 2) Cells colored in orange in the "No." column indicate that the keyword is recognized by the input deck parser but not supported by OPM Flow. 3) Cells colored in red in the "No." column indicate that the keyword is not recognized by the input deck parser and OPM Flow. 		

Table B.7: New Keywords for the 2019-04 Release

Bård Skaflestad, Tor Harald Sandve, and David Baxendale.

B.7 RELEASE 2018-10

The Open Porous Media project is please to announce that version 2018.10 of the OPM suite of simulation software has been released. Binary packages for Red-Hat Enterprise Linux 6 and 7 and Ubuntu 16.04 and 18.04 are available for download at the OPM website download page https://opm-project.org/?page_id=36. Installation instructions can also be found at the download page as well as in section [CHAPTER 2: INSTALLING AND RUNNING FLOW](#) of this manual.

In addition to the usual list of fixes and improvements two significant improvements include:

- 1) OPM Flow can now write restart files which can be used to restart runs using the commercial simulator.
- 2) Performance has been improved significantly, on selected field models, where OPM Flow is significantly faster than the commercial simulator.

Due to problems with the Zoltan package we have unfortunately been forced to disable MPI for the Ubuntu 18.04 package. We are looking into this, and if possible we will make updated packages at a later stage.

In terms of new features OPM Flow now includes an option for thermal modeling. The energy black-oil implementation in OPM Flow is a mixture of the commercial simulators black-oil and the commercial simulators “compositional thermal” keywords, as well as some OPM Flow specific keywords. The temperature option (TEMP keyword) and the thermal option (THERMAL keyword) are two separate modeling facilities in the commercial simulator. OPM Flow’s thermal implementation is based on solving the energy equation fully coupled with the black-oil equations so the results are not directly equivalent to commercial simulator’s black-oil TEMP or compositional THERMAL formulations. See the [5.3.134 THERMAL– Activate the Thermal Modeling Option](#) keyword in the RUNSPEC section outlining the available keywords.

Apart from the new thermal keywords summarized in section [5.3.134 THERMAL– Activate the Thermal Modeling Option](#), the following new keywords have been incorporated in this release and are active:

No.	Keyword	Comment
1	GDFILE	The GDFILE keyword loads a GRID file that contains the structural data for the grid as a set of topological cuboidal cells, and EGRID files that contain structural and property data. Fully functional – Not Working in this Release
2	PLMIXNUM	The PLMIXNUM keyword defines the polymer region number for each grid block that is used to assign the mixing tables as well as the maximum polymer and salt concentrations, for when the polymer option has been activated.
3	TOLCRIT	This keyword defines the Critical Saturation Tolerance.
4	ISGLPC	The WSEGSICD keyword defines a multi-segment well segment to be a spiral Inflow Control Device. (“ICD”) as part of a completion for a multi-segment well.
Notes: <ol style="list-style-type: none"> 1) Cells colored in green in the “No.” column indicate that the keyword is recognized by the input deck parser and fully or partially supported by OPM Flow. 2) Cells colored in orange in the “No.” column indicate that the keyword is recognized by the input deck parser but not supported by OPM Flow. 3) Cells colored in red in the “No.” column indicate that the keyword is not recognized by the input deck parser and OPM Flow. 		

Table B.8: New Keywords for the 2018-10 Release

Joakim Hove

B.8 RELEASE 2018-04

The Open Porous Media project is please to announce that version 2018.04 of the OPM suite of simulation software has been release. Installation instructions can found on OPM website download page https://opm-project.org/?page_id=36 and in section [CHAPTER 2: INSTALLING AND RUNNING FLOW](#) of this manual. Packages for Ubuntu 16.04 and Red-Hat Enterprise Linux 6 and 7 is prepared. New in this release is that also the Red-Hat packages are shipped with mpi support.

In addition to various minor bug-fixes and a reorganization of the code, the release contains new functionality for the OPM Flow simulator like DRSDT support, experimental CPR preconditioning and enhanced output capability. Note that number of modules are reduced to simplify the build process and the code maintenance. The new module organization is shown opposite.

Since the 2017.10 release the opm-core module has been removed, and the modules opm-parser and opm-output have been folded into opm-common.

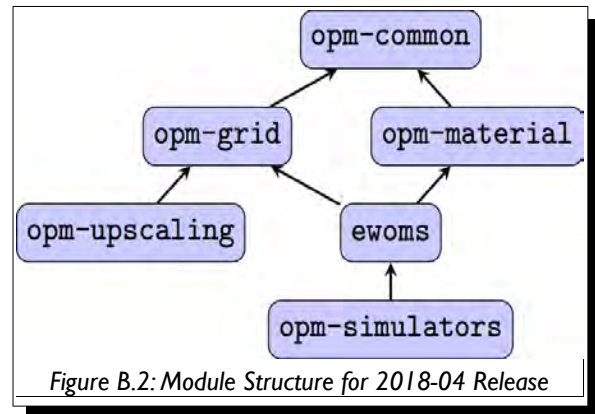


Figure B.2: Module Structure for 2018-04 Release

In terms of new features OPM Flow now includes analytical aquifers using the Carter-Tracy analytical aquifer and the ability model multi-segment wells. The following new keywords have been incorporated in this release and are active:

No.	Keyword	Comment
1	AQUANCON	AQUANCON keyword defines how analytical aquifers are connected to the simulation grid., this includes Carter-Tracy and Fetkovich analytical aquifers.
2	AQUCT	The AQUCT keyword defines Carter-Tracy aquifers, the properties of the aquifer, including the Carter-Tracy aquifer influence function associated with the aquifer.
3	AQUDIMS	The AQUDIMS keyword defines the dimensions of the various aquifer property data.
4	AQUTAB	AQUTAB keyword defines additional Carter-Tracy aquifer functions to be used in the model.
5	COMSEGS	The COMSEGS keyword defines how a multi-segment well is connected to the reservoir by defining or modifying existing well connections..
6	DRSDT	DRSDT defines the maximum rate at which the solution gas-oil ratio (Rs) can be increased in a grid cell.
7	DRVDT	DRVDT defines the maximum rate at which the solution oil-gas ratio or condensate-gas ratio (Rv) can be increased in a grid cell.
8	WELSEGS	The WELSEGS keyword defines a well to be a multi-segment well and defines the well's segment structure.
9	WSEGSDIMS	The WSEGSDIMS keyword defines the multi-segment well dimensions for the multi-segment well model.

No.	Keyword	Comment
Notes:		
1) Cells colored in green in the “No.” column indicate that the keyword is recognized by the input deck parser and fully or partially supported by OPM Flow.		
2) Cells colored in orange in the “No.” column indicate that the keyword is recognized by the input deck parser but not supported by OPM Flow.		
3) Cells colored in red in the “No.” column indicate that the keyword is not recognized by the input deck parser and OPM Flow.		

Table B.9: New Keywords for the 2018-04 Release

Tor Harald Sandve

B.9 RELEASE 2017-10 UPDATE 1

We have created an update for the 2017.10 release. It fixes a few bugs in Flow that could affect simulation results slightly and also lead to very bad performance when running Flow in parallel using MPI. The effect was most pronounced when running with more than 4 MPI processes.

Binary packages for Ubuntu 16.04 and Red Hat Enterprise Linux 6 and 7 have been updated, and for most users your systems will ask to install the updated version or do it automatically.

For those who compile OPM from source, the release branches on GitHub have been updated and tagged with

`release/2017.10/update1`

The master branch of course includes the same fixes.

Atgeirr Flø Rasmussen

B.10 RELEASE 2017-10

On behalf of the OPM project, I'm happy to announce that version 2017.10 has been released. Packages for Ubuntu 16.04 and Red-Hat Enterprise Linux 6 and 7 have been prepared or should be available soon.

As usual, this release contains a multitude of new features and improvements. Most notable are probably that the Flow simulator is now considerably faster than in the 2017.04 release, Flow now supports the solvent and polymer black-oil extensions and that there now is freely available documentation for the file format that is used to specify the input.

Finally, as the release manager, I'd take the opportunity and thank everyone involved in making the release process for 2017.10 go as smoothly as it did.

Andreas Lauser

B.11 RELEASE 2017-04

The Open Porous Media project is glad to announce that version 2017.04 of the OPM suite of simulation software has been released! Installation instructions can found on our download page.

Certainly the most significant change of this release is the introduction of the "flow_ebos" simulator. Compared to the previous "flow" simulators, "flow_ebos" uses a different approach to linearize the non-linear system of partial differential equations and as a result exhibits significantly better performance. The new simulator is intended to eventually fully replace the current family of "flow" simulators (i.e., "flow", "flow_mpi", "flow_solvent", "flow_polymer", etc.) and should already provide a proper superset of the capabilities of the "flow" simulator of previous OPM releases. For this reason, the name "flow" has been made an alias for "flow_ebos" in OPM 2017.04. If, for some reason, the previous "flow" simulator must be used, it is still shipped under the name "flow_legacy", but we strongly encourage you to send us bug reports if you encounter any case that can be simulated using "flow_legacy" but not using "flow_ebos".

Besides the introduction of "flow_ebos", plenty unit tests have been added, a plethora of bugs has been fixed, well handling has been considerably improved and now supports e.g. top-hole pressure controls and vertical flow performance tables, ECL output and restart capabilities have been made much more comprehensive, and all grid related functionality of opm-core has been moved to the opm-grid module in preparation of the former module's eventual retirement. In addition, a Docker container has been uploaded to Docker Hub to ease deployment for people who are into container technologies.

Last but not least, I would like to thank everyone who contributed to making the many changes of this release happen so smoothly.

Modules involved in the release (maintainers are given in parenthesis):

- opm-data (Alf Birger Rustad)
- opm-common (Atgeirr Rasmussen, Bård Skaflestad, Arne Morten Kvarving, Joakim Hove, Robert Klöfkorn, Tor Harald Sandve, and Andreas Lauser)
- opm-parser (Joakim Hove)
- opm-output (Joakim Hove)
- opm-grid (Atgeirr Rasmussen, Robert Klöfkorn, and Bård Skaflestad)
- opm-material (Andreas Lauser, Robert Klöfkorn, and Tor Harald Sandve)
- opm-core (Atgeirr Rasmussen, Robert Klöfkorn, and Bård Skaflestad)
- ewoms (Andreas Lauser, Robert Klöfkorn, and Tor Harald Sandve)
- opm-simulators (Atgeirr Rasmussen, Robert Klöfkorn, Tor Harald Sandve, and Andreas Lauser)
- opm-upscaling (Arne Morten Kvarving, Atgeirr Rasmussen, and Bård Skaflestad)

Andreas Lauser

APPENDIX C: OPMRUN – FLOW JOB SCHEDULER

APPENDIX TABLE OF CONTENTS**APPENDIX C: OPMRUN - FLOW JOB SCHEDULER.....1999**

C.1 Introduction.....	2003
C.2 OPMRUN Functionality.....	2005
C.2.1 Add Job and Select Run Type.....	2006
C.2.2 Edit Job Data and Parameter File.....	2008
C.2.3 Load Previously Saved Queue.....	2010
C.2.4 Reset Job Queue Parameters.....	2011
C.2.5 Run Jobs in Queue with Various Options.....	2012
C.2.6 Menu Options.....	2015
File Menu Options.....	2015
Edit Menu Options.....	2015
View Menu Options.....	2018
Tools Menu Options.....	2018
C.3 OPMRUN Tools.....	2019
C.3.1 OPMRUN Tools: Job File Compression Utility for Saving Space and Archiving.....	2019
C.3.2 OPMRUN Tools: Simulator Input/Keywords.....	2020
Keywords: Menu Options.....	2022
Keywords: File Imports.....	2024
Keywords: Section Standard Set of Keywords.....	2025
Keywords: SUMMARY Section Variables.....	2026
Keywords: SCHEDULE Section Keywords and Date Schedule.....	2027
Keywords: DATA (Sets) Option.....	2028
Keywords: MODEL Option.....	2029
Keywords: USER Templates Option.....	2030
C.3.3 OPMRUN Tools: Simulator Input/Production Schedule.....	2031
C.3.4 OPMRUN Tools: Simulator Input/Sensitivities.....	2034
C.3.5 OPMRUN Tools: Simulator Input/Well Specification.....	2040
C.3.6 OPMRUN Tools: ResInsight.....	2043
C.3.7 OPMRUN Tools: Well Trajectory Conversion.....	2043

APPENDIX INDEX OF FIGURES

Figure C.1: OPMRUN - Initial Display.....	2005
Figure C.2: OPMRUN - Display Elements.....	2006
Figure C.3: OPMRUN - Add Job Dialog Box.....	2006
Figure C.4: OPMRUN - Add Job and Select Run Type.....	2007
Figure C.5: OPMRUN - Edit Job Data and Parameter File.....	2008
Figure C.6: OPMRUN - Edit Job Parameter File.....	2009
Figure C.7: OPMRUN - Load Job Queue Dialog Box and Queue Display.....	2010
Figure C.8: OPMRUN - Reset Job Queue Parameters.....	2011
Figure C.9: OPMRUN - Reset Job Queue Parameters Dialog.....	2011
Figure C.10: OPMRUN - Run Jobs in the Queue.....	2012
Figure C.11: OPMRUN - Select Run Option Dialog.....	2012
Figure C.12: OPMRUN - Log File Creation.....	2013
Figure C.13: OPMRUN - Session Log.....	2014
Figure C.14: OPMRUN - Edit Data File.....	2015
Figure C.15: OPMRUN - Set Default Parameter Set.....	2016
Figure C.16: OPMRUN - Set Application Options.....	2017
Figure C.17: OPMRUN - Set Project Directories.....	2017
Figure C.18: OPMRUN Tools -Compression Utility.....	2019
Figure C.19: OPMRUN Tools - Compression Utility Application.....	2019
Figure C.20: OPMRUN Tools - Keywords Application.....	2020
Figure C.21: OPMRUN Tools - Keywords HEADER Comment Example.....	2021
Figure C.22: OPMRUN Tools - Keywords File Menu.....	2022
Figure C.23: OPMRUN Tools - Keywords Edit Menu.....	2022
Figure C.24: OPMRUN Tools - Keywords Generate Menu.....	2022
Figure C.25: OPMRUN Tools - Keywords Help.....	2022
Figure C.26: OPMRUN Tools - Keywords Generator Help.....	2023
Figure C.27: OPMRUN Tools - Keywords Velocity Template Help.....	2023
Figure C.28: OPMRUN Tools - Keywords File Imports.....	2024
Figure C.29: OPMRUN Tools - Keywords Section Standard Set of Keywords Example.....	2025
Figure C.30: OPMRUN Tools - Keywords Summary Section Keywords.....	2026
Figure C.31: OPMRUN Tools - Keywords Schedule Section and Date Schedule.....	2027
Figure C.32: OPMRUN Tools - Keywords Data (Sets) Option.....	2028
Figure C.33: OPMRUN Tools - Keywords Model Option.....	2029
Figure C.34: OPMRUN Tools - Keywords User Templates Option.....	2030
Figure C.35: OPMRUN Tools - Production Schedule Input File Example.....	2031
Figure C.36: OPMRUN Tools - Production Schedule Application.....	2032
Figure C.37: OPMRUN Tools - Production Schedule Output Example.....	2033
Figure C.38: OPMRUN Tools - Sensitivity Application.....	2034
Figure C.39: OPMRUN Tools - Sensitivity Base Case Data File Example.....	2035
Figure C.40: OPMRUN Tools - Sensitivity Load Factors Example.....	2036
Figure C.41: OPMRUN Tools - Sensitivity Factor Editing Example.....	2037
Figure C.42: OPMRUN Tools - Sensitivity Scenario Option Selection Example.....	2038
Figure C.43: OPMRUN Tools - Sensitivity Case Generation and OPMRUN Queue File.....	2039
Figure C.44: OPMRUN Tools - Well Specification OPM ResInsight Well Completion File Format.....	2040
Figure C.45: OPMRUN Tools - Well Specification OPM ResInsight Reservoir Layer File.....	2041
Figure C.46: OPMRUN Tools - Well Specification Application.....	2042
Figure C.47: OPMRUN Tools - Well Specification WELSPECS and COMPDAT Output Example.....	2042
Figure C.48: OPMRUN Tools - Well Specification OPM ResInsight Perforation File Output.....	2043
Figure C.49: OPMRUN Tools - Well Trajectory Conversion Input File.....	2043
Figure C.50: OPMRUN Tools - Well Trajectory Application.....	2044
Figure C.51: OPMRUN Tools - Well Trajectory Output Trajectory File.....	2045

C.1 INTRODUCTION

OPMRUN is graphical user interface to Flow that has similar functionality to the commercial simulator's ECLRUN program. Target audience are Reservoir Engineers in a production environment. Developers and experienced Linux users will already have compatible work flows. The application performs the following:

- Allows editing and management of OPM Flow's run time parameters. Default parameters are automatically loaded from OPM Flow, and the user can reset the default parameter set either from a parameter or PRT file. Editing of a job's parameter file is also available.
- Runs under Linux and Windows 10. For Windows 10 OPM Flow is run via the Windows Subsystem for Linux ("WSL").
- Allows simulation jobs to be queued and run in either foreground (under OPMRUN), or in background in a xterm terminal session in Linux or WSL under Windows 10. Jobs in the queue can be set to run in NOSIM mode or RUN mode.
- Foreground jobs can be killed from OPMRUN, with the option of killing all the jobs in the queue.
- Queues can be edited, saved and loaded.

Various additional simulation input generation and conversion utilities are available including:

- Compressing a job to save space (DATA, and all OPM Flow output files) and uncompressing previously compressed jobs,
- Keywords, a keyword generator based on the Apache Velocity Template Language ("VTL"). The templates can therefore also be used with any editor that supports VTL, jEdit for example. There is one template per keyword, with the formatting the same as the OPM Flow manual. Over 450 templates are currently implemented. One can also customize the existing templates as well as creating User defined templates. The keywords are examples, one still has to edit the resulting deck with the actual required data, but the format with comments should make this a straight forward process.
- A Production Schedule application that takes a comma delimited CSV file containing historical production and injection data and converts the data to an OPM Flow SCHEDULE file using the WCONHIST series of keywords. Currently only production data is supported.
- Sensitivities application that generates sensitivity cases based on a "Base" case file. The Base file contains "Factors" (variable names), \$X01, \$X02, etc., that are substituted with user defined values using the data entered and the type of Sensitivity Scenario selected.
- A Well Specification application that uses the standard well export files from OPM ResInsight to reformat the data in a more user-friendly manner for the WELSPECS and COMPDAT keywords. Optionally, the application can generate the COMPLUMP keyword based on the OPM ResInsight layers file, with one completion per defined reservoir layer.
- Calling OPM ResInsight and loading the currently selected job into OPM ResInsight for viewing.
- A Well Trajectory Conversion application that converts a Schlumberger Petrel exported well trajectory file into an OPM ResInsight file, containing all the wells.

The software can be downloaded from the following link:

<https://github.com/OPM/opm-utilities/tree/master/opmrunk>

OPMRUN is written in Python 3 and tested under various Ubuntu distributions. Note that only Python 3 is supported and tested, Python2 support has been depreciated.

The program requires the following standard module Python libraries:

- datetime, getpass, importlib, os, numpy, pkg_resources, pandas, pathlib, platform, psutil, sys, re, subprocess, and tkinter as tk.

In addition, the following non-standard Python modules are required:

- airspeed, notify-py, pyDOE2, and PySimpleGUI.

For some Linux systems the relevant package manager may have to be used to install *tkinter* as *tk*; whereas for Windows 10 users the tkinter package is pre-installed with Python.

C.2 OPMRUN FUNCTIONALITY

OPMRUN enables the editing and management of OPM Flow's run time parameters, setting up job queues to run a series of simulation jobs sequentially, as well as the management of the job queues. Figure C.1 shows the initial display.

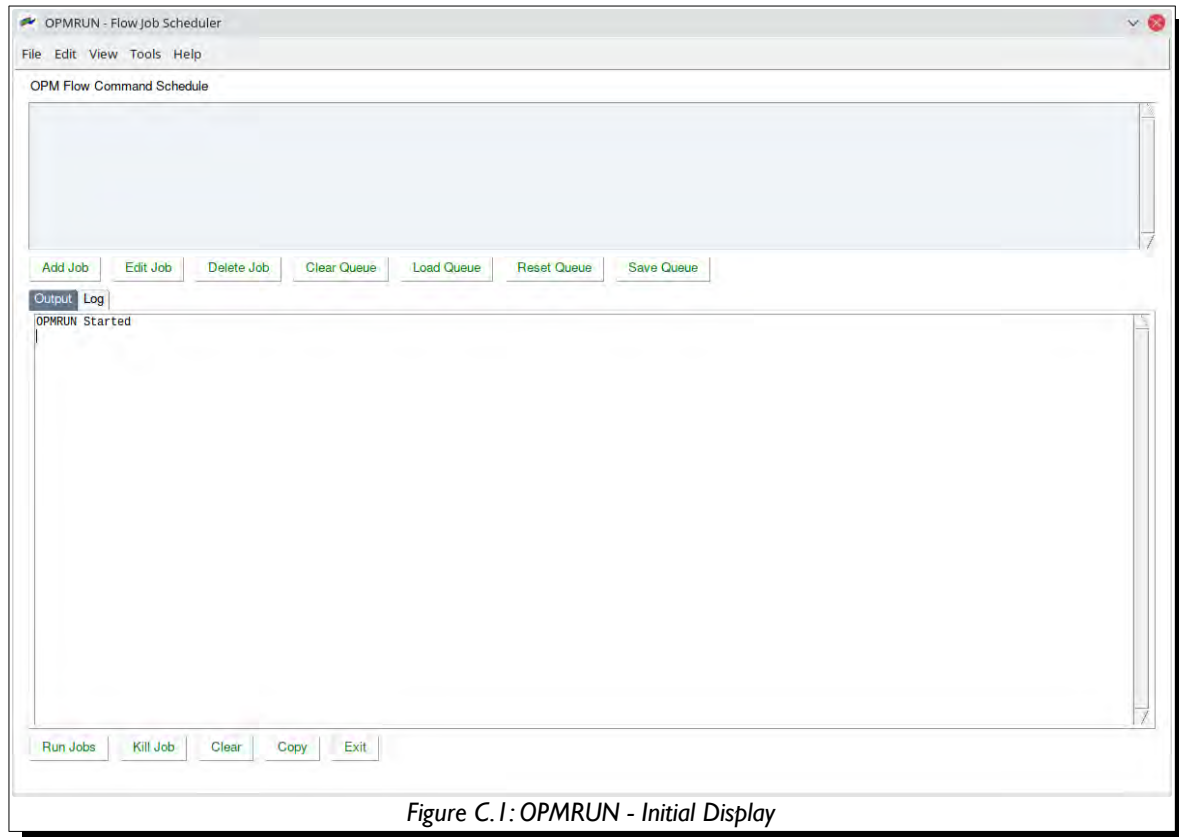


Figure C.1: OPMRUN - Initial Display

Upon launch the program runs OPM Flow to get a list of command line parameters from the current version of OPM Flow. These default parameters can be edited for each case, or alternative default parameter sets can be loaded from an existing parameter file from another job, or a *.PRT file from a completed simulation.

As can be seen in Figure C.2 the program has upper and lower display elements. The upper element shows a list of simulation jobs that are in the job queue and the lower element consists of two elements, one for the OPM Flow Output (the terminal output from OPM Flow) and a second element (OPM Run Log) that is a session log of the jobs run by OPMRUN. Clicking the OPM Flow Output and OPM Run Log tabs switches the display on the lowered element between two display types.

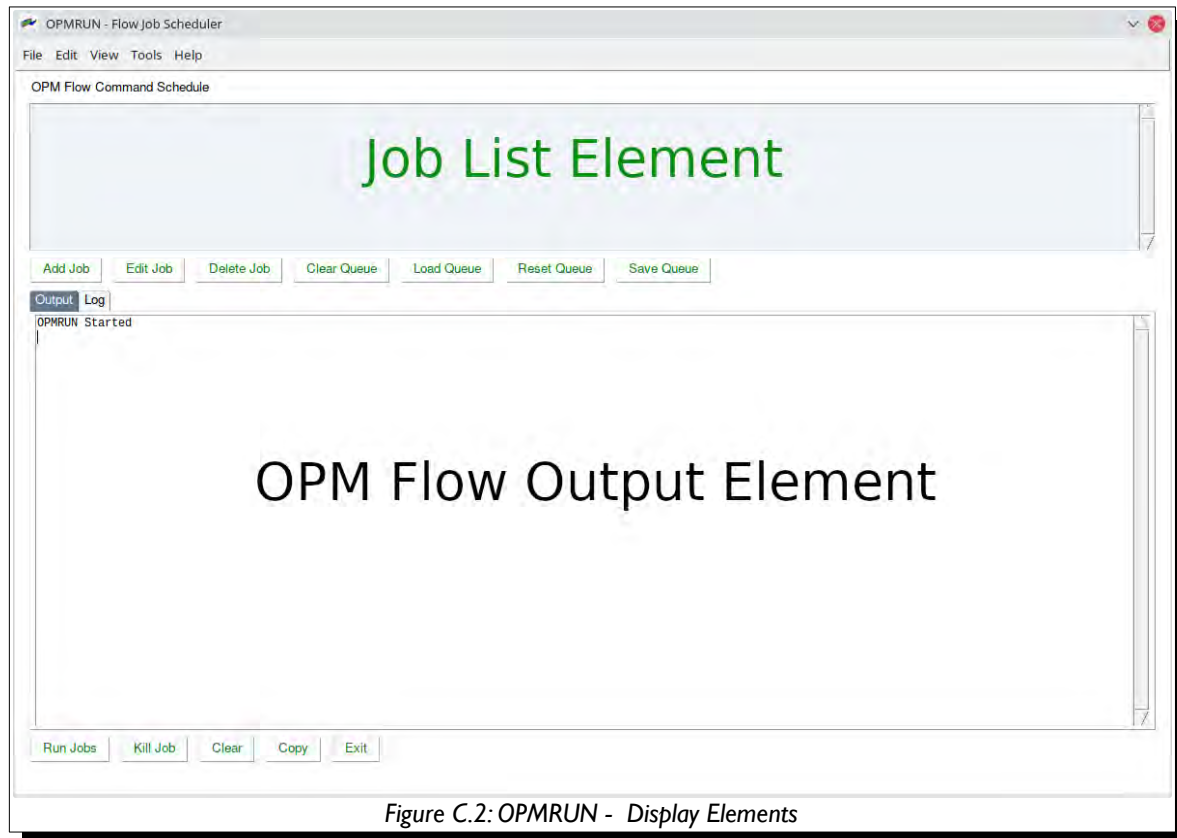


Figure C.2: OPMRUN - Display Elements

C.2.1 ADD JOB AND SELECT RUN TYPE

To add jobs to the queue use the Add Job button or load an existing job queue using the Load Queue button. Jobs can be edited or deleted from the queue using the Edit Job and Delete Job buttons, and a series of jobs can be saved as a job queue by using the Save Queue button. The Clear Queue button deletes all jobs from the queue.

Pressing the Add Job button will display the following dialogue box:

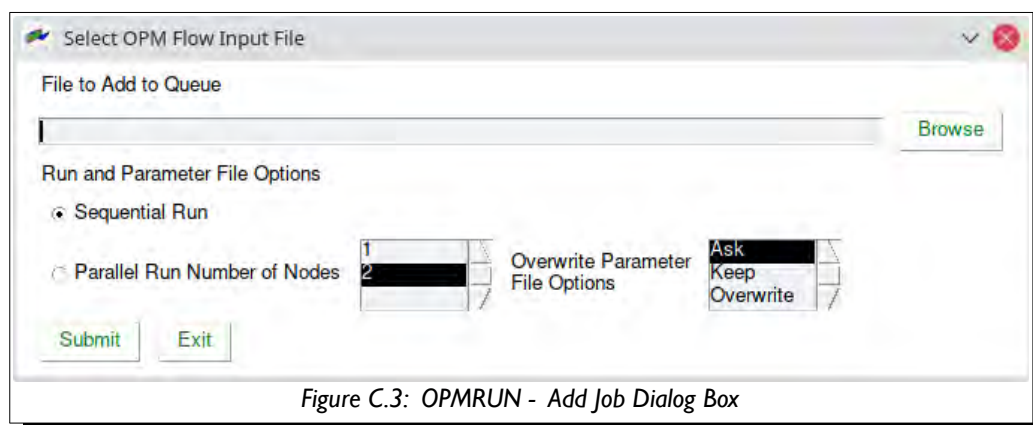


Figure C.3: OPMRUN - Add Job Dialog Box

Use the *Browse* button to select the input file to add to the queue, then select the Run Parameters for this input file, then press the *Submit* button to add the input file to the job queue (Figure C.4).

The *Overwrite Parameter File Options* allow for different default treatments of existing *.PARAM files, which is particularly useful when adding multiple jobs at the same time.

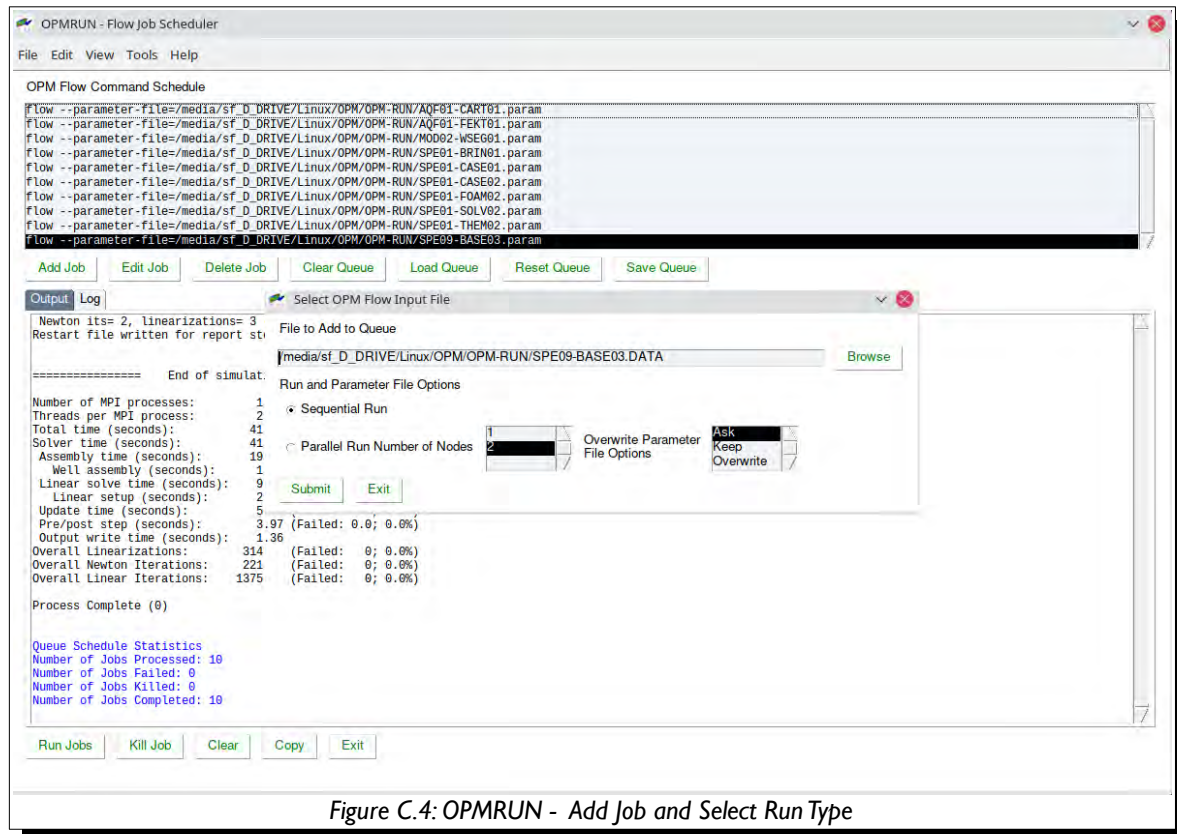


Figure C.4: OPMRUN - Add Job and Select Run Type

The reason for this is because different versions of OPM Flow have different parameter sets and if a newer version of OPM Flow runs with a previous version's *.PARAM file then the simulator will stop with an error message for the various invalid parameters for the current version of the simulator.

C.2.2 EDIT JOB DATA AND PARAMETER FILE

Jobs in the queue can be edited by selecting the *Edit Job* button that will display two options (Figure C.5): one to edit the input file using the defined editor and the second to edit the OPM Flow Parameter File.


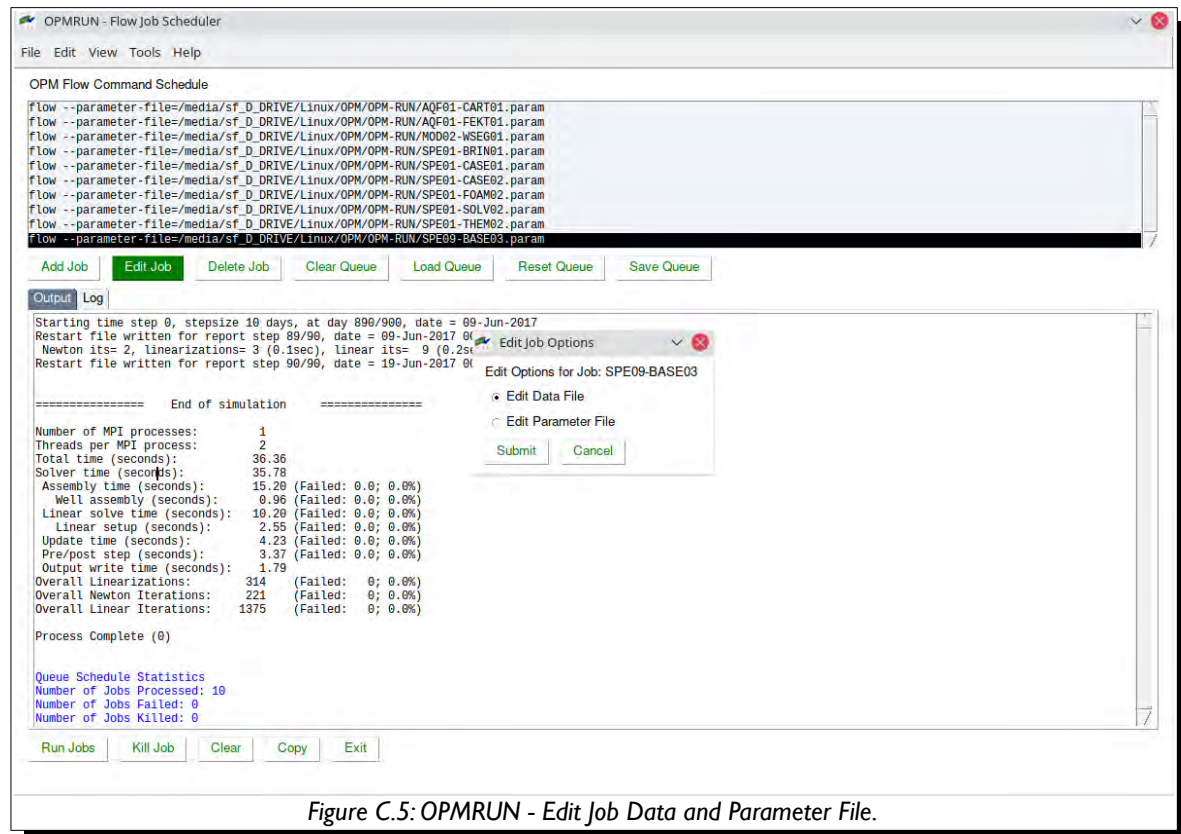


Figure C.5: OPMRUN - Edit Job Data and Parameter File.

If the second option is selected OPMRUN will display a dialog box that shows a list of the OPM Flow command line parameters together with the parameter help information (Figure C.7). Selecting a parameter from the list and selecting the *Edit* button will display the setting for the selected parameter (alternatively one can double click the required entry). One can then edit the parameter as required. Use the *Save* button to save the change and use the *Exit* button to save all the changes to the parameter file. The *Cancel* button will cancel all changes to the parameter file.

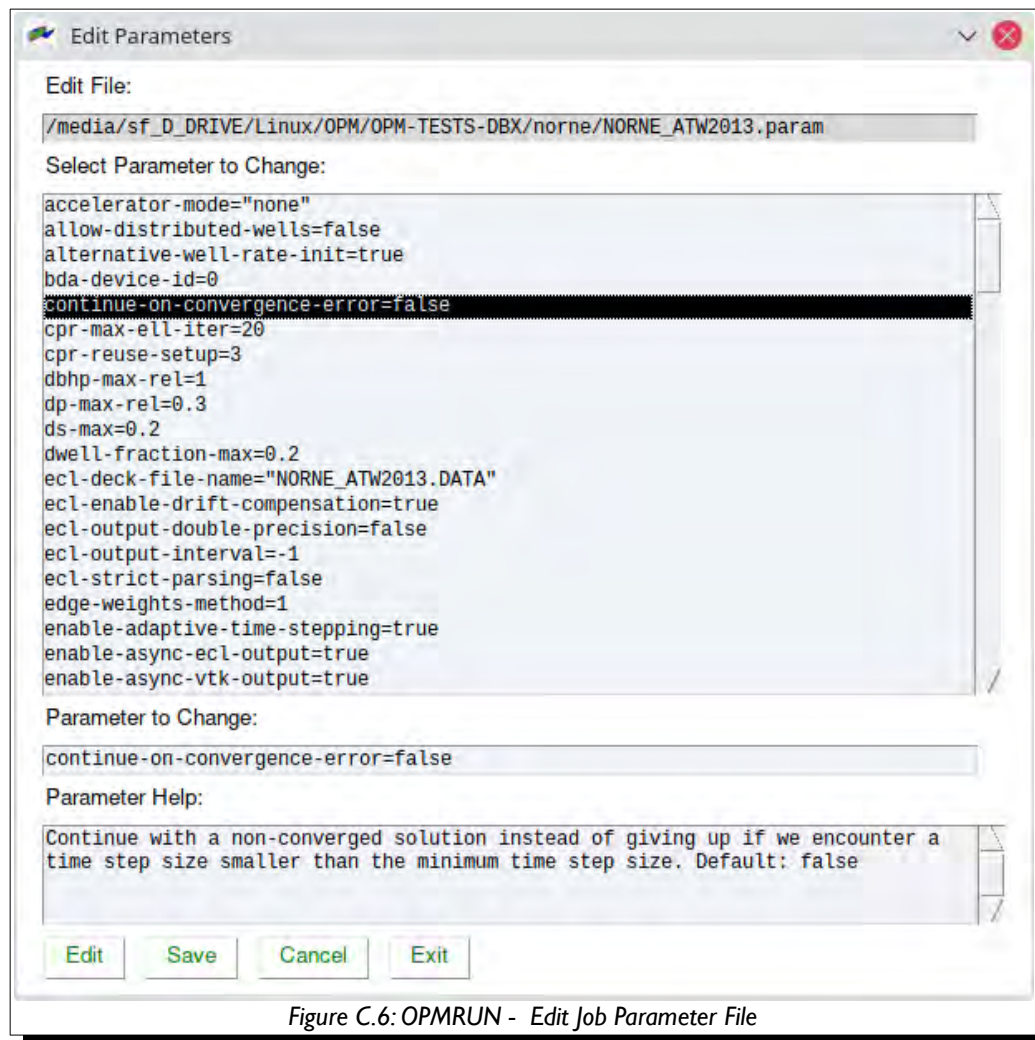

Alternatively one can use the:

- 1) Edit OPM Flow Parameter menu option to edit the parameter file for a job.
- 2) List OPM Flow Parameters menu option to list the commands in the parameter file for a job.
- 3) Set OPM Flow Default Parameters to set the default parameters for all subsequent jobs added to the queue. This option allows the user to load a default set of parameters from (1) OPM Flow, (2) an OPM Flow Parameter File, or (3) an OPM Flow print file (*.PRT).

One can also right-click on a job and select one of the available options.

C.2.3 LOAD PREVIOUSLY SAVED QUEUE

To load a previously saved job queue, press the *Load Queue* button this will display a dialog box allowing the user to select a queue file (*.que), after pressing the *OK* button the jobs will be displayed in the *Job List Element* as illustrated in Figure C.7.

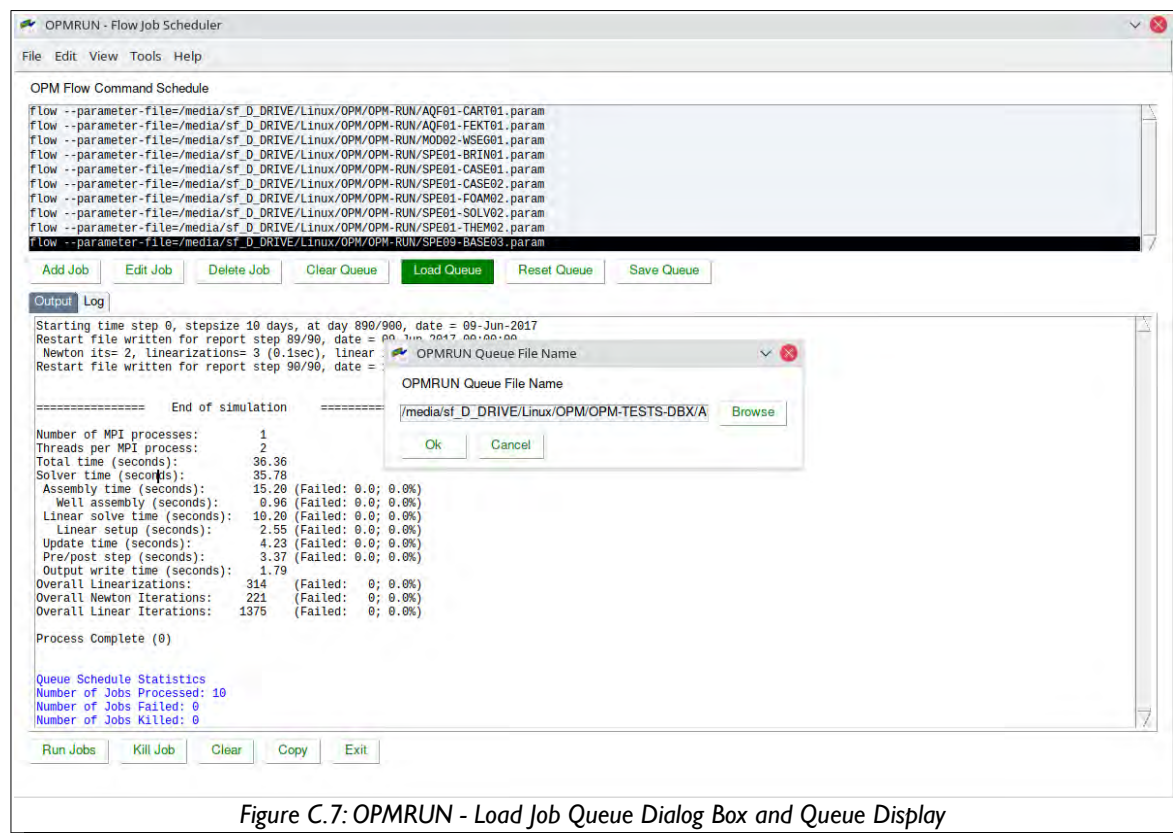


Figure C.7: OPMRUN - Load Job Queue Dialog Box and Queue Display

Queue files allow for various jobs to be load efficiently, especially for ensemble and sensitivity cases and may contain a large number of cases.

Note

When running under Windows 10 the Job names will follow the Windows 10 file naming convention and OPMRUN automatically handles the file names for running the jobs under the Window Subsystem for Linux. However, care is needed for any “included” file in the input deck. In this case the [PATHS – Define Filename Directory Path Aliases](#) keyword in the RUNSPEC section may be of use.

C.2.4 RESET JOB QUEUE PARAMETERS

Reset Job Queue Parameters allows jobs run under Windows 10 WSL to be renamed for running under Linux, and changing jobs from serial to parallel and vice versa.

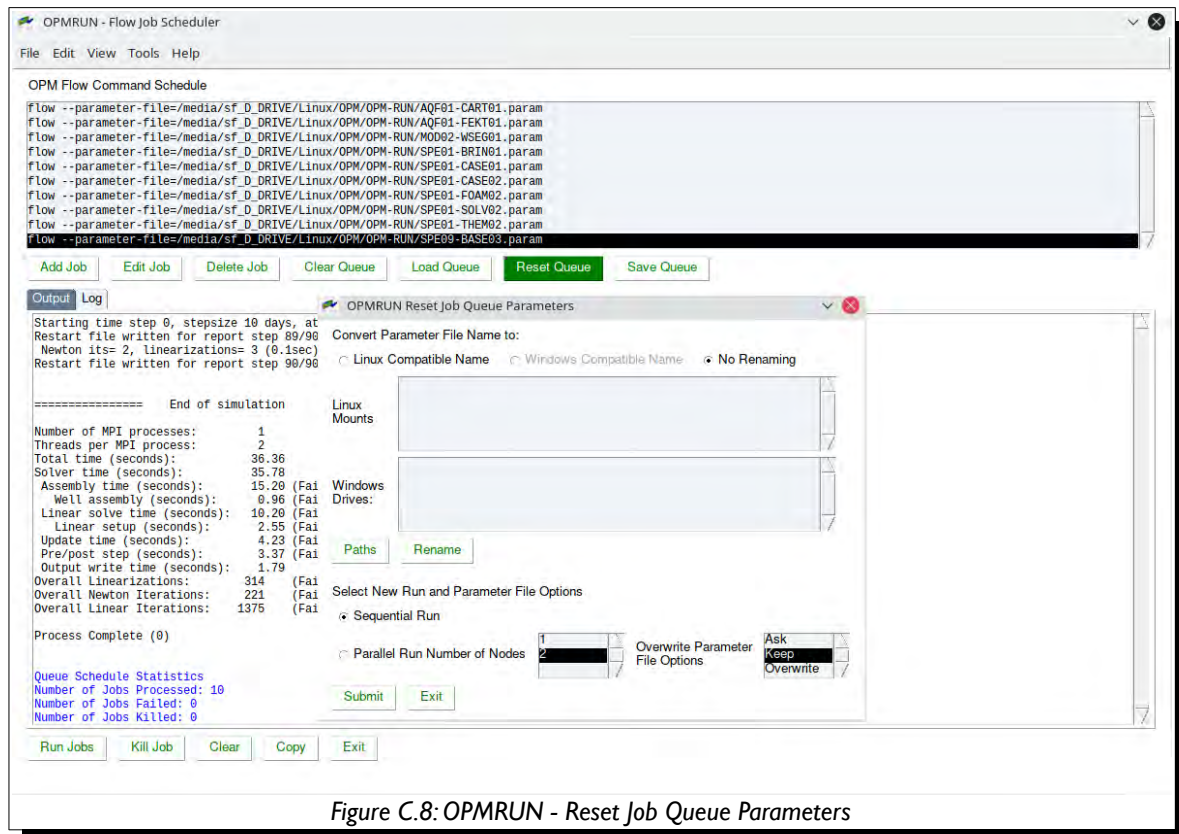


Figure C.8: OPMRUN - Reset Job Queue Parameters

The application will attempt to list or Linux mount points and Windows drives depending on the host operating system, once the two systems mount and drive points have been selected then the files in the queue will be renamed from the previous host system to the current host system. This is only performed for the *.DATA files, included files in the input deck are currently not converted.

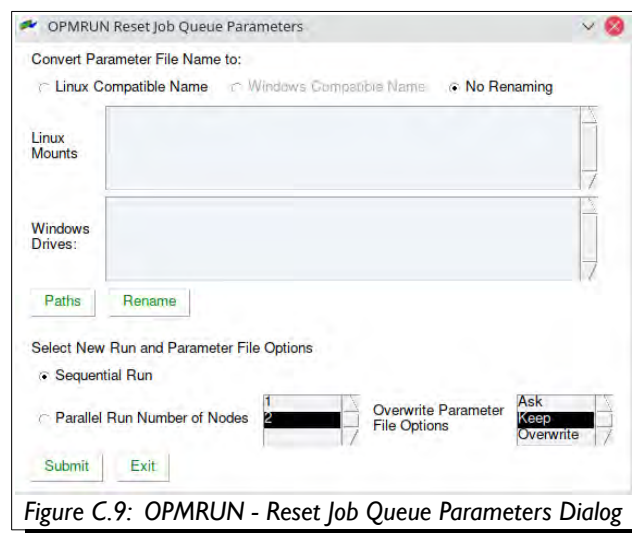


Figure C.9: OPMRUN - Reset Job Queue Parameters Dialog

As previously mentioned, one can also change the queue run time parameters from serial to parallel or vice versa.

C.2.5 RUN JOBS IN QUEUE WITH VARIOUS OPTIONS

Selecting the Run Jobs button displays the Select Run Option dialog box shown in Figure C.10 and Figure C.11.

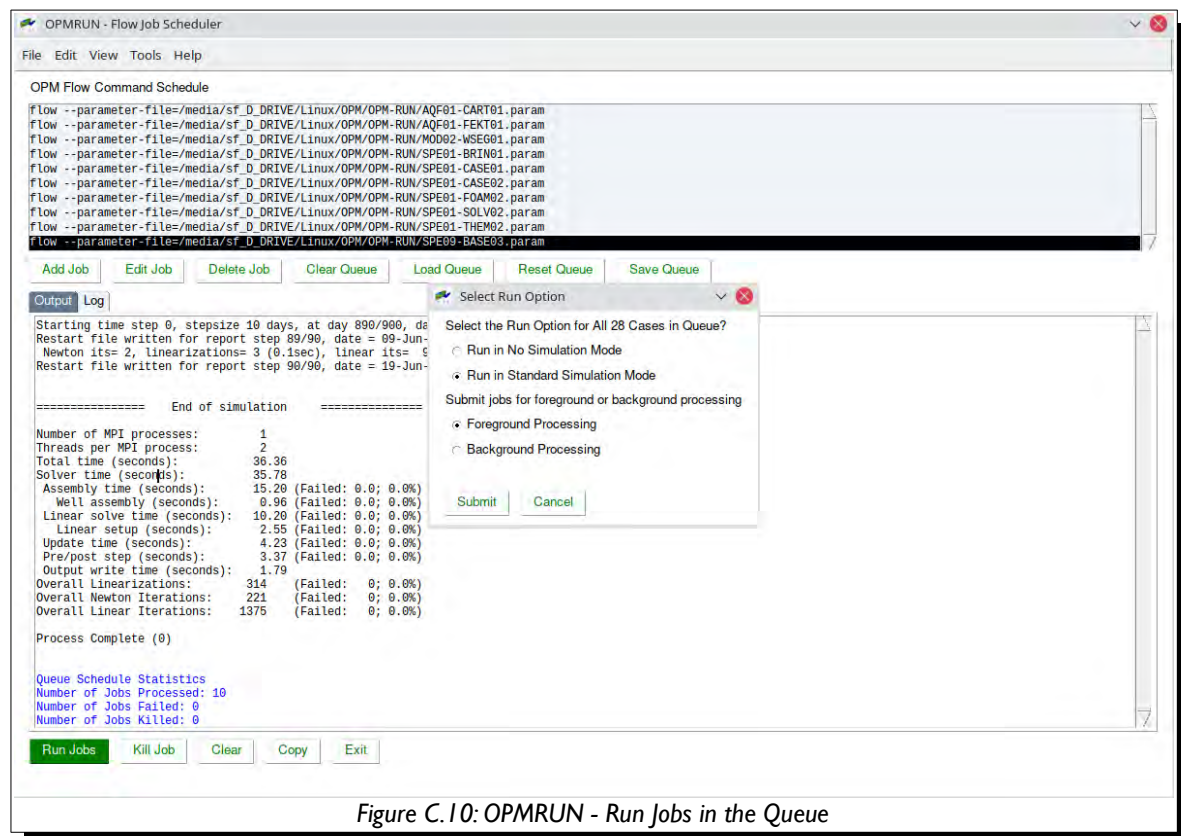


Figure C.10: OPMRUN - Run Jobs in the Queue

On the Select Run Dialog, the Run in No Simulation Mode option is equivalent to setting the NOSIM option in the input deck for all jobs in the queue (see section 5.3.92 NOSIM – Activate the No Simulation Mode for Data File Checking and the –enable-dry-run command line parameter in Table 2.1 in section 2.2 Running OPM Flow 2019-04 From The Command Line. This allows for checking all the jobs at once.

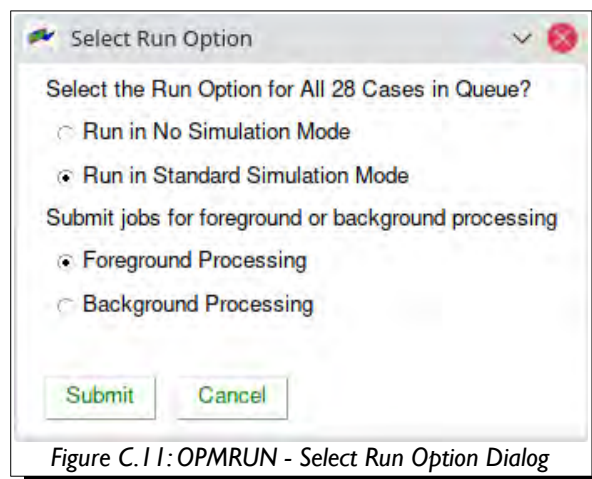


Figure C.11: OPMRUN - Select Run Option Dialog

Selecting Run in Standard Simulation Mode will run all the jobs in the queue sequentially, with the OPM Flow terminal output directed to OPM Flow Output Element, as shown in Figure C.12. The terminal output is also directed to a *.LOG file as well, similar to what the commercial simulator does.


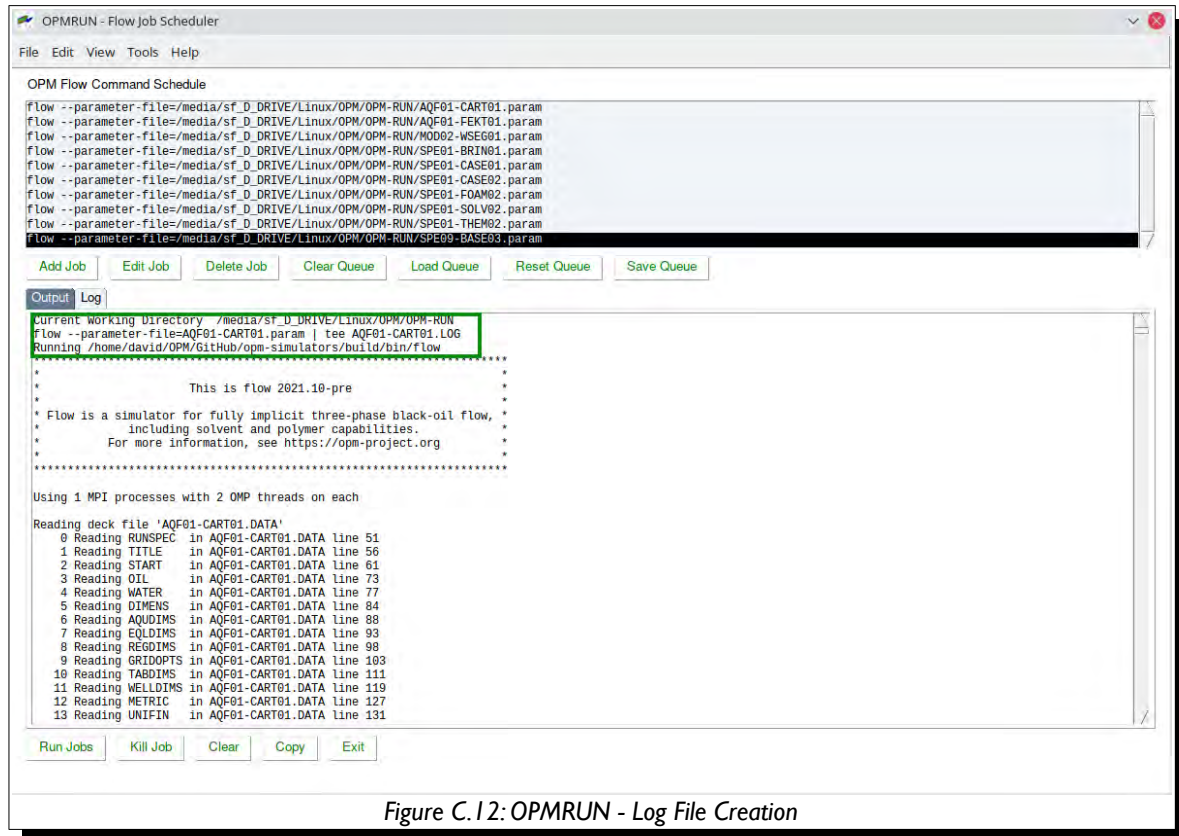


Figure C.12: OPMRUN - Log File Creation

Clicking the OPM Run Log tab displays the OPMRUN's session log file that records the time and date of the major events that have occurred, including the start and end times of each run. Notice also how OPMRUN deletes all the existing output files for a given job, if they exists, before running OPM Flow. as well as creating a Schedule Log for tracking progress (Figure C.13).

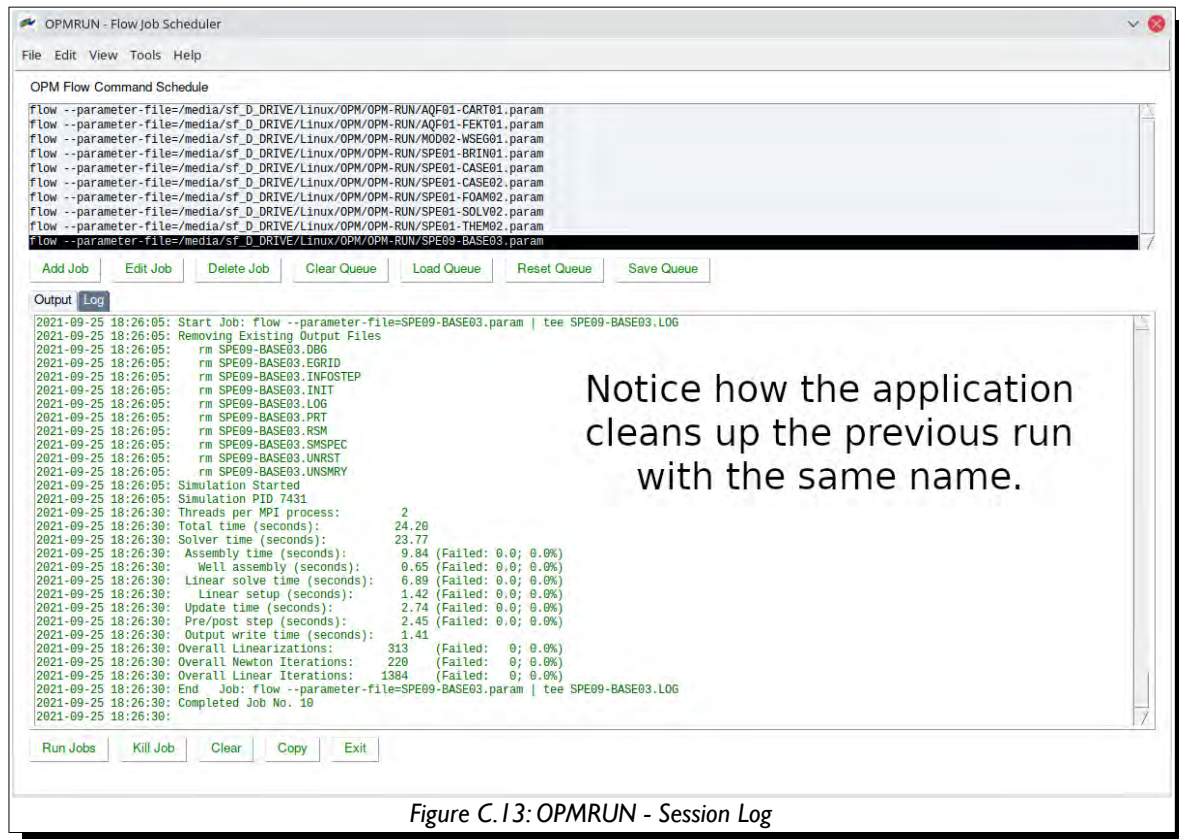


The **Kill** button will ask the user if the current running job should be killed, and if the job is to be killed, the application will prompt as to whether or not all the jobs in the queue should be killed.

The **Clear** button clears the OPM Flow Output Element from the currently displayed tab (**Output** or **Log**) and the **Copy** button copies the data to the clipboard.

C.2.6 MENU OPTIONS

File Menu Options

Enables open and saving the job queue, switching projects and listing OPMRUN's user properties.

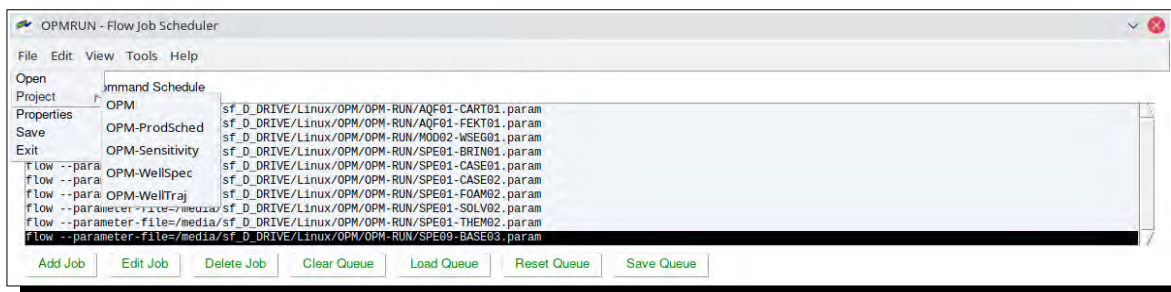

Edit Menu Options

Lets one add jobs, add jobs recursively (all jobs in the selected directory and below), edit the data file (Figure C.14) and the parameter file for the selected job,(see section C.2.2 Edit Job Data and Parameter File) edit, list and set the default parameters for running jobs that will be added to the queue, set OPMRUN options, and set the project's project directories.

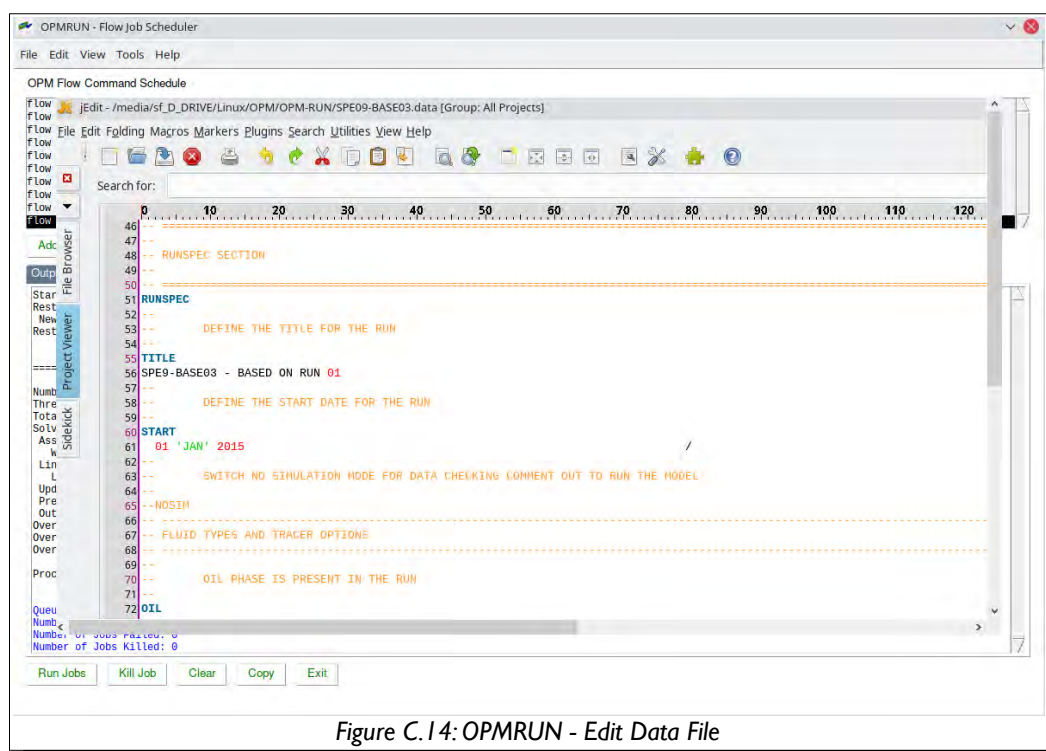
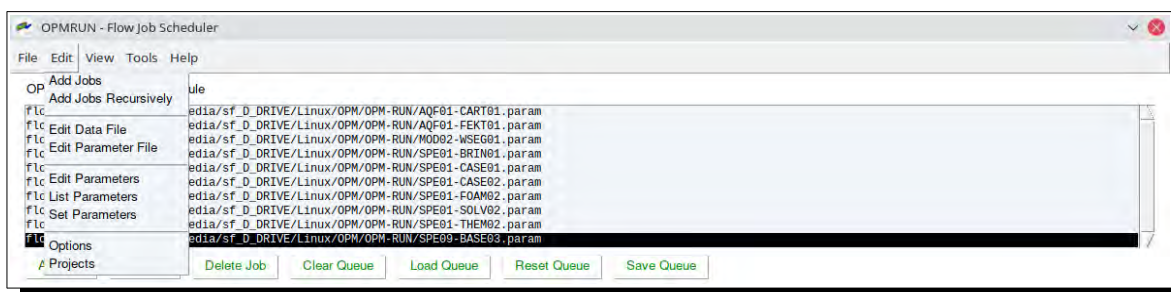


Figure C.14: OPMRUN - Edit Data File

The options are also available by right-clicking a job in the **Job List Element**

The Edit Parameters, List Parameters and Set Parameters relate to the default parameter set, not the parameter set for a particular job. When a new job is added to the queue the application checks if a *.PARAM file exists for the job, if not then the default parameter set is used for the job. Editing the default parameter set is the same as editing a job parameter set (see section C.2.2 Edit Job Data and Parameter File for more information).

One can also define the default parameter set by using the OPM Flow default values, which is the set created when OPMRUN is first initialized. In addition, one can load an existing parameter set from an existing *.PARAM file or from an OPM Flow *.PRT file (Figure C.15).

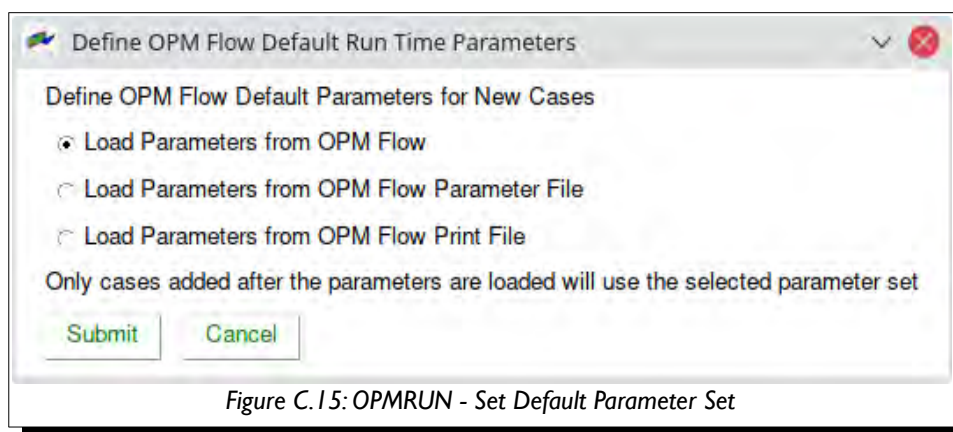


Figure C.15: OPMRUN - Set Default Parameter Set

OPMRUN has several configuration options that can be set via the Edit/Options menu option as illustrated in Figure C.16. These include setting:

- The location of the OPM Flow manual.
- The Keyword Generator Template Directory, one of tools supplied with OPMRUN, see section C.3.2 OPMRUN Tools: Simulator Input/Keywords for further information on this application.
- The location of the ResInsight program, for loading the results of a simulation run for viewing.
- The editor command to used to edit the input deck and view the resulting simulator output files.
- The terminal console to be used for background jobs. WSL ("Windows Subsystem for Linux") should be selected if OPMRUN is running under Windows 10 to enable jobs to be submitted to the installed Linux distribution.
- The User Information series of fields are used by various supplied tools and in some templates used by the Keyword Generator application (see C.3.2 OPMRUN Tools: Simulator Input/Keywords for more information on this application). Note if a "User Information" field is not defined then the template variable will be output instead – this can easily be deleted in the application.
- One can also define the main OPMRUN windows configuration parameters define: input (*Job List Element*) and output panel's (*OPM Flow Output Element*) size, font and font size.

Figure C.16: OPMRUN – Set Application Options


In addition to the aforementioned options, the Edit/Projects menu item enables the setting of project directories that allows the user to set a default directory for loading and saving files within OPMRUN and the auxiliary applications (Figure C.17).

No.	Project Name	Project Directory
1.	OPM	/media/sf_D_DRIVE/Linux/OPM
2.	OPM-ProdSched	/media/sf_D_DRIVE/Linux/OPM/GitHub/opm-utilities/opmrun/.examples/opm_prodsched
3.	OPM-Sensitivity	/media/sf_D_DRIVE/Linux/OPM/GitHub/opm-utilities/opmrun/.examples/opm_sensitivity
4.	OPM-WellSpec	/media/sf_D_DRIVE/Linux/OPM/GitHub/opm-utilities/opmrun/.examples/opm_wellspec
5.	OPM-WellTraj	/media/sf_D_DRIVE/Linux/OPM/GitHub/opm-utilities/opmrun/.examples/opm_welltraj

Figure C.17: OPMRUN - Set Project Directories



View Menu Options.

Allows the user to view the results of an OPM Flow simulation run using the default editor. The options are also available by right-clicking a job in the *Job List Element*.

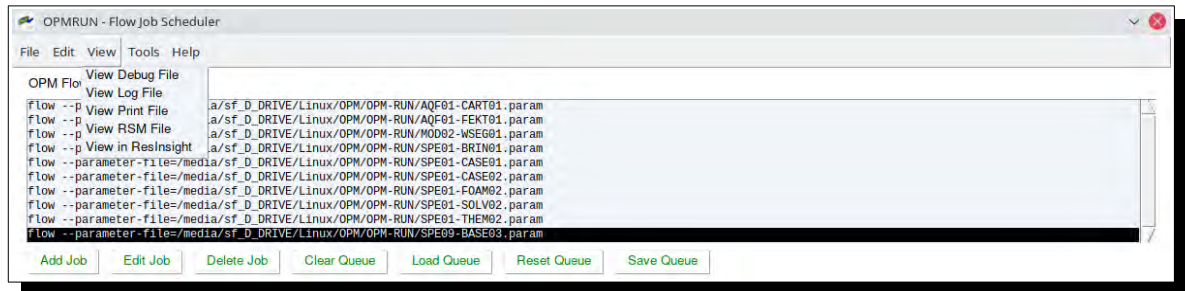


Tools Menu Options

Contains various tool that may be useful in building a simulation model.

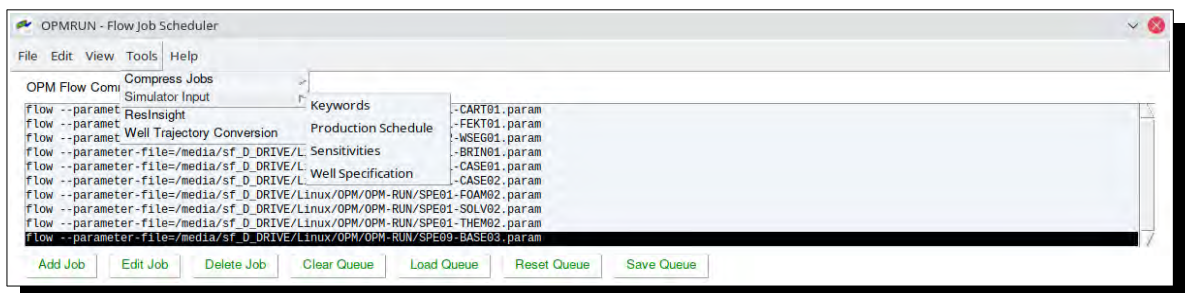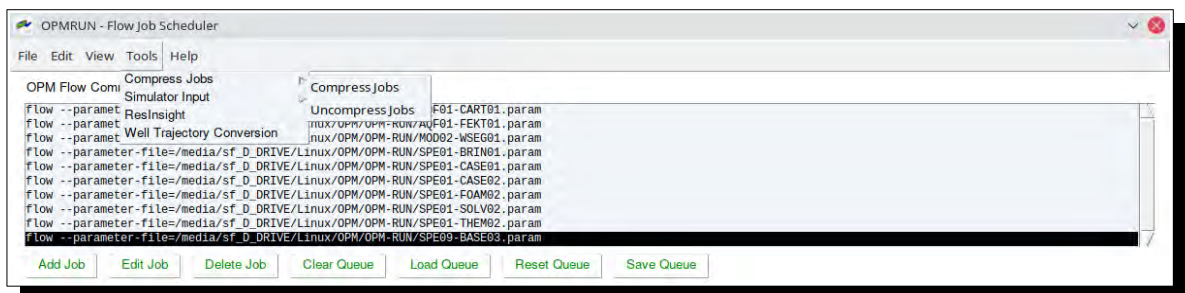

See the section C.3 OPMRUN Tools for further details on the available tools.

Help Menu Options

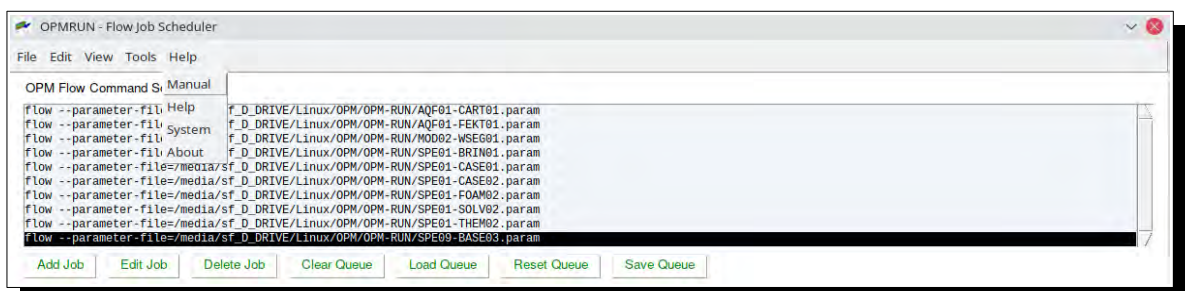

Use the Edit / Options menu option to select the location of the OPM Flow Manual.

C.3 OPMRUN TOOLS

C.3.1 OPMRUN TOOLS: JOB FILE COMPRESSION UTILITY FOR SAVING SPACE AND ARCHIVING.

Simulation input and output files can be extremely large, especially for large full field models. Running multiple cases in these circumstances can easily use up all available disk space, especially if multiple users are running multiple cases. The Tools/Compression Jobs option allows the user to compress a series of jobs into individual zip files (one zip file per job), as well as uncompressing previously zip job files.

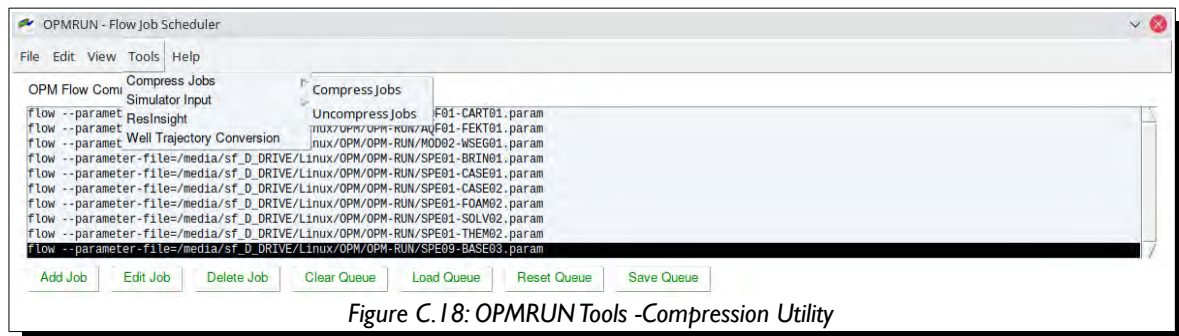


Figure C.18: OPMRUN Tools -Compression Utility

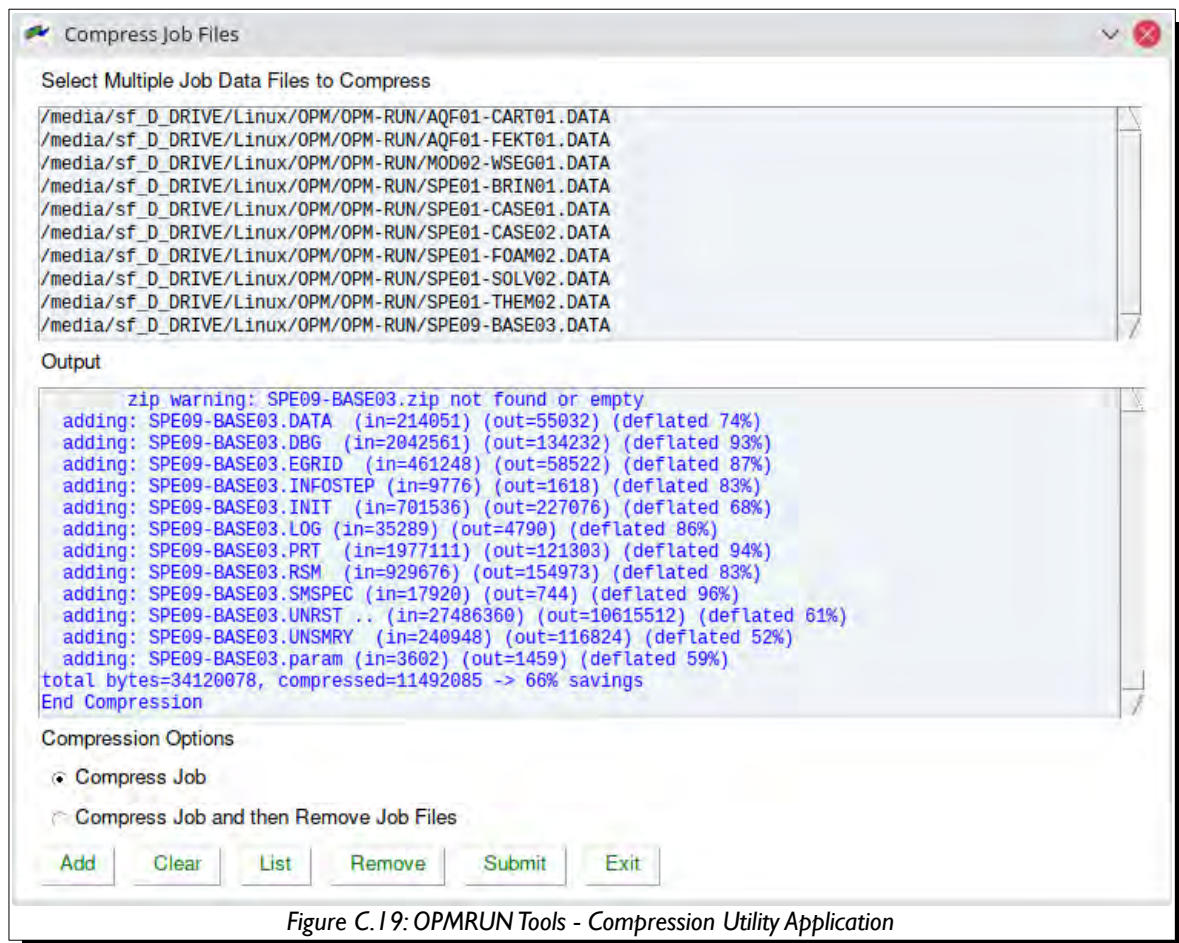


Figure C.19: OPMRUN Tools - Compression Utility Application

Note there is a similar application for uncompressing zip files and that the tool uses the Linux zip and unzip programs both on Linux host systems and Windows 10 systems using WSL.

C.3.2 OPMRUN TOOLS: SIMULATOR INPUT/KEYWORDS

The OPMRUN Keyword generator is an application that generates OPM Flow keywords that can be cut and pasted into any editor or saved to a separate file to form the basis of a new input deck (*.DATA files). The application utilizes templates based on the Apache Velocity Template Language (“VTL”), a commonly used template language used by software engineers. The templates can therefore also be used with any editor that supports VTL, jEdit for example, a popular open source Java based editor and PyCharm, a Python integrated development environment used in computer programming, specifically for the Python language.

There is one template per keyword, with formatting of the keywords being the same as the OPM Flow manual. Currently there are over 450 templates implemented and the intention is for additional keywords to be added as the their usage is implemented within the simulator and documented within the manual. The application allows one to customize the existing templates as well as creating user defined templates by including the templates in the template directory and following the VTL language syntax. One still has to edit the resulting keywords to match the data require, but the structure and comments are provided by the application.

The application is accessed via the Tool/Simulator Input/Keywords menu item and the tool can generate specific keywords, as well as complete sections (Figure C.20)


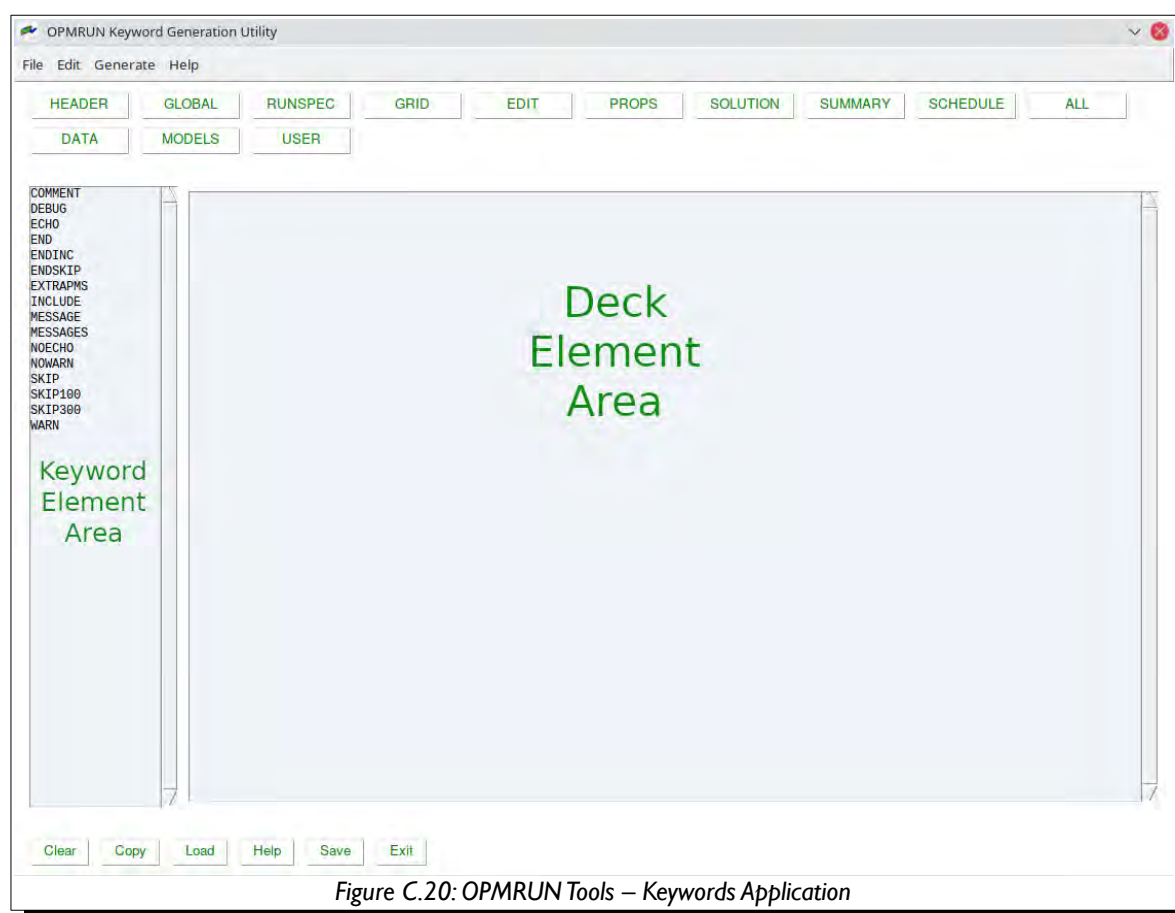


Figure C.20: OPMRUN Tools – Keywords Application

The application consists of several elements, a conventional menu system at the top, a *Deck Element Area* that will contain the resulting generated keywords, a *Keyword Element Area* for the user to select the keyword, data, models or user templates, and finally a series of buttons, *HEADER*, *GLOBAL*, etc., that are used to select the keywords in a OPM Flow section, specific data sets, models or user defined templates. The selection will appear in the *Keyword Element Area*.

Clicking on an item in the *Keyword Element Area* will generate the data for the item in the *Deck Element Area*, as shown below for the OPM Flow copyright header in Figure C.21.

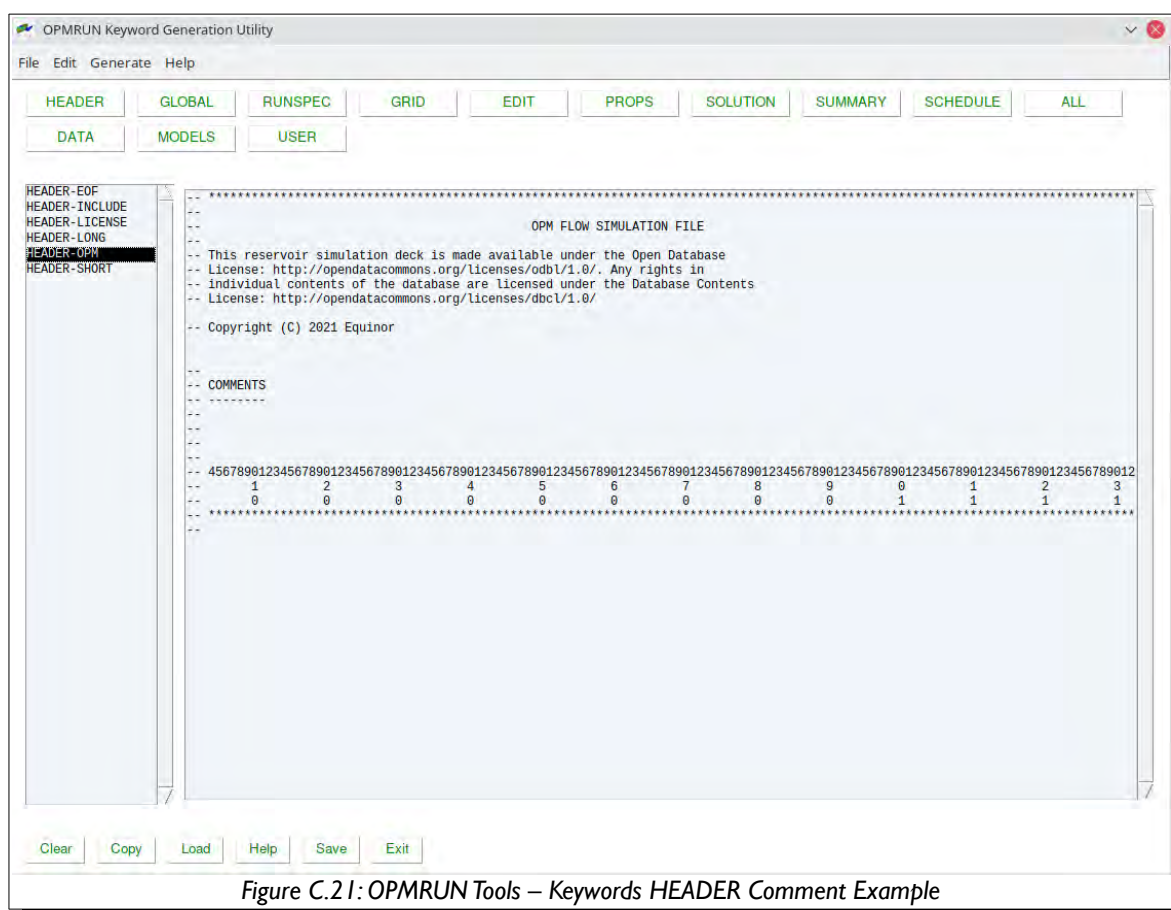


The *Deck Element Area* is editable by simply clicking anywhere in the element and making changes. Use the *Clear* button to clear the *Deck Element Area* display, the *Copy* button to copy the *Deck Element Area* data to the clipboard, and the *Save* button to save the data to a file. The *Load* button allows one to load an existing file into the *Deck Element Area* for additional editing.


Note that the *HEADER* section is not an OPM Flow section, but a list of various comment block headers used to make the deck more readable.

Keywords: Menu Options

The various menu options include the File Menu

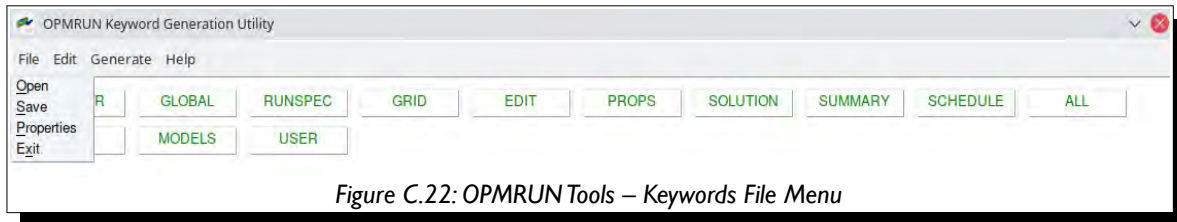


Where the *Open* and *Save* options load and save a file, and the *Properties* displays OPMRUN's properties.

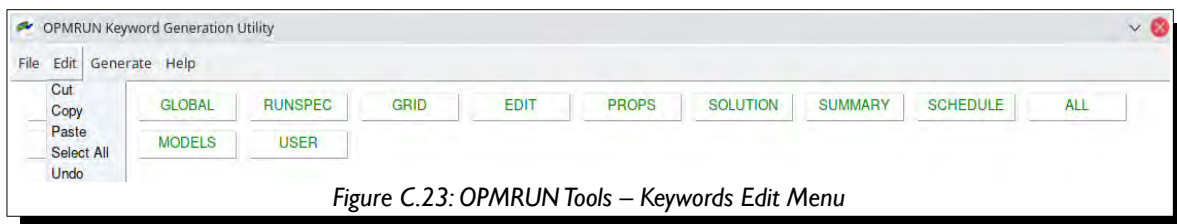

The Edit Menu provides some basic standard editing facilities



Next, the Generate Menu options allows one to generate a complete section of keywords, as described below. These options are equivalent to selecting the equivalent section keyword (*RUNSPEC*, *GRID*, etc.) in the *Keyword Element Area*.

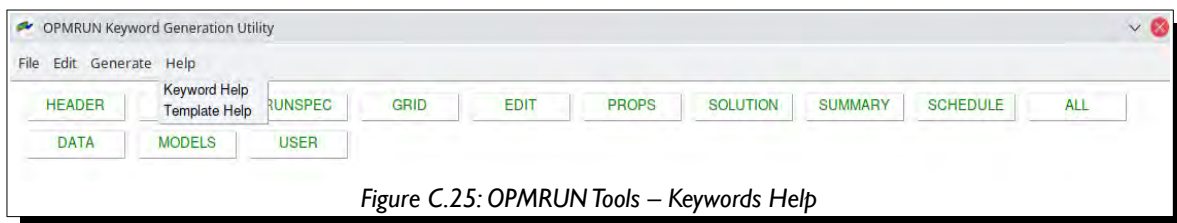

Finally, the Help Menu option display the Keyword Help information (Figure C.26):

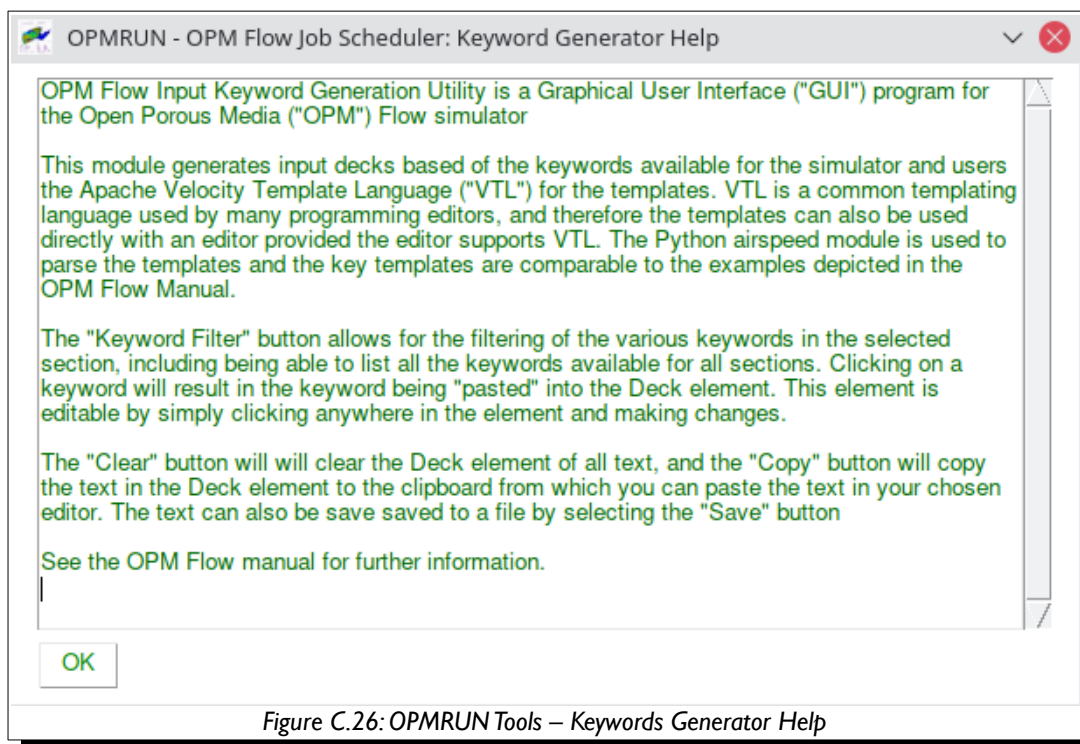


Figure C.26: OPMRUN Tools – Keywords Generator Help

And the Velocity Template Help (Figure C.27).

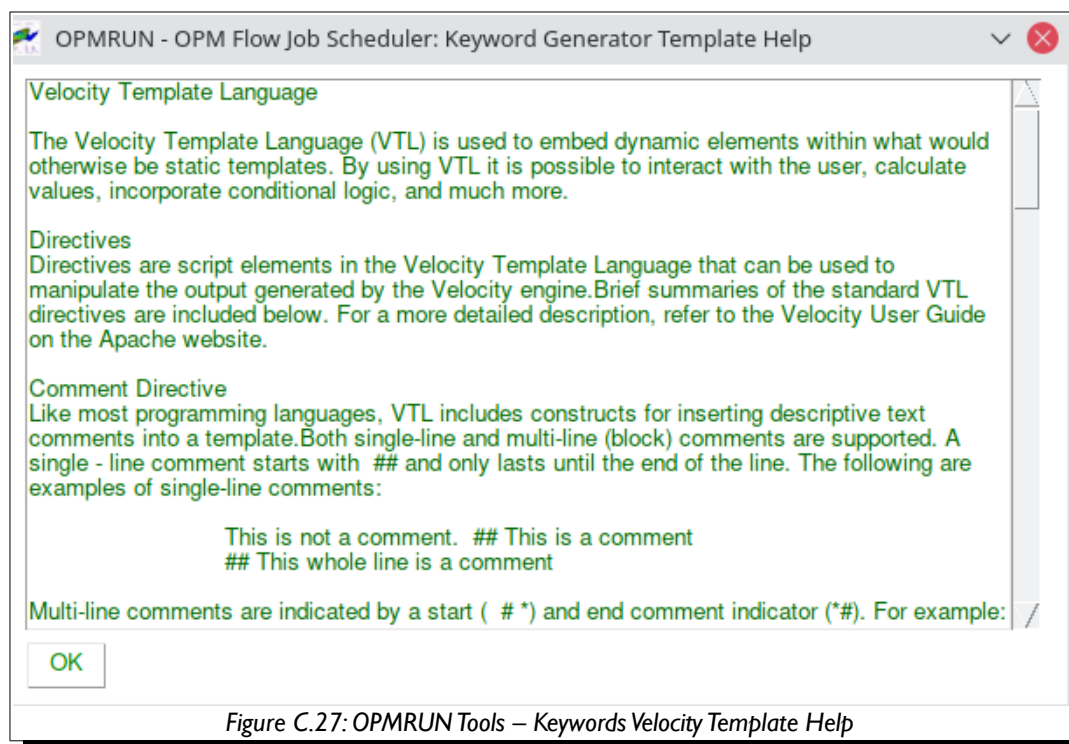


Figure C.27: OPMRUN Tools – Keywords Velocity Template Help

As mentioned previously, the tool uses the Apache Velocity Template Language ("VTL") for the templates, and therefore the templates can also be used directly with an editor, provided the editor supports VTL.

Keywords: File Imports

If a keyword requires a file, for example, the INCLUDE and LOAD keywords, then a dialog box is presented to enable the file to be selected. The application will also allow one to select the file name format, after the file has been selected.

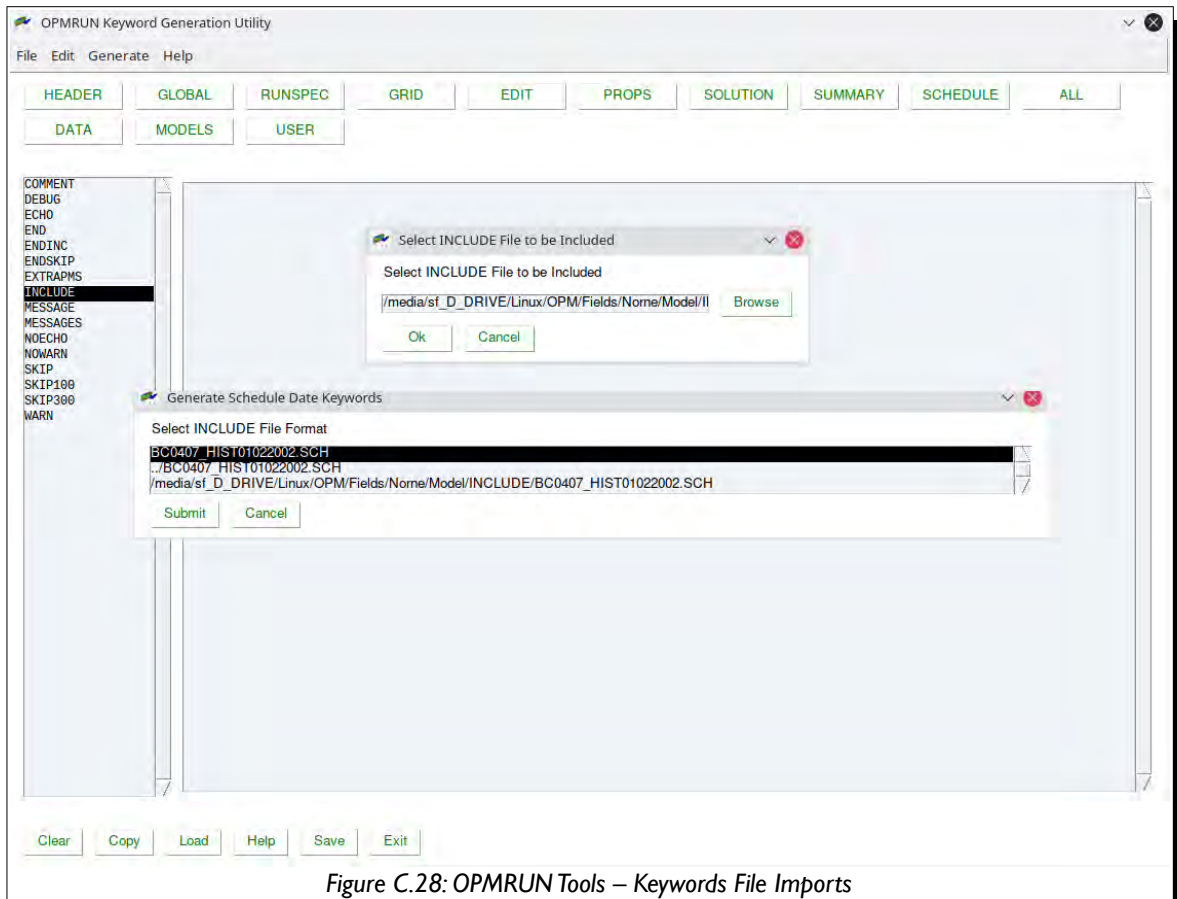


Figure C.28: OPMRUN Tools – Keywords File Imports

Note that COMMENT template is not an actual keyword, but a comment block to make the deck more readable for the user.

Keywords: Section Standard Set of Keywords

Selecting a Generate Menu option or a Section keyword (RUNSPEC, GRID, EDIT, PROPS, SOLUTION, SUMMARY, and SCHEDULE) in the *Keyword Element Area* will give an option to generate a representative set of keywords for that section, as per the RUNSPEC example in Figure C.29.

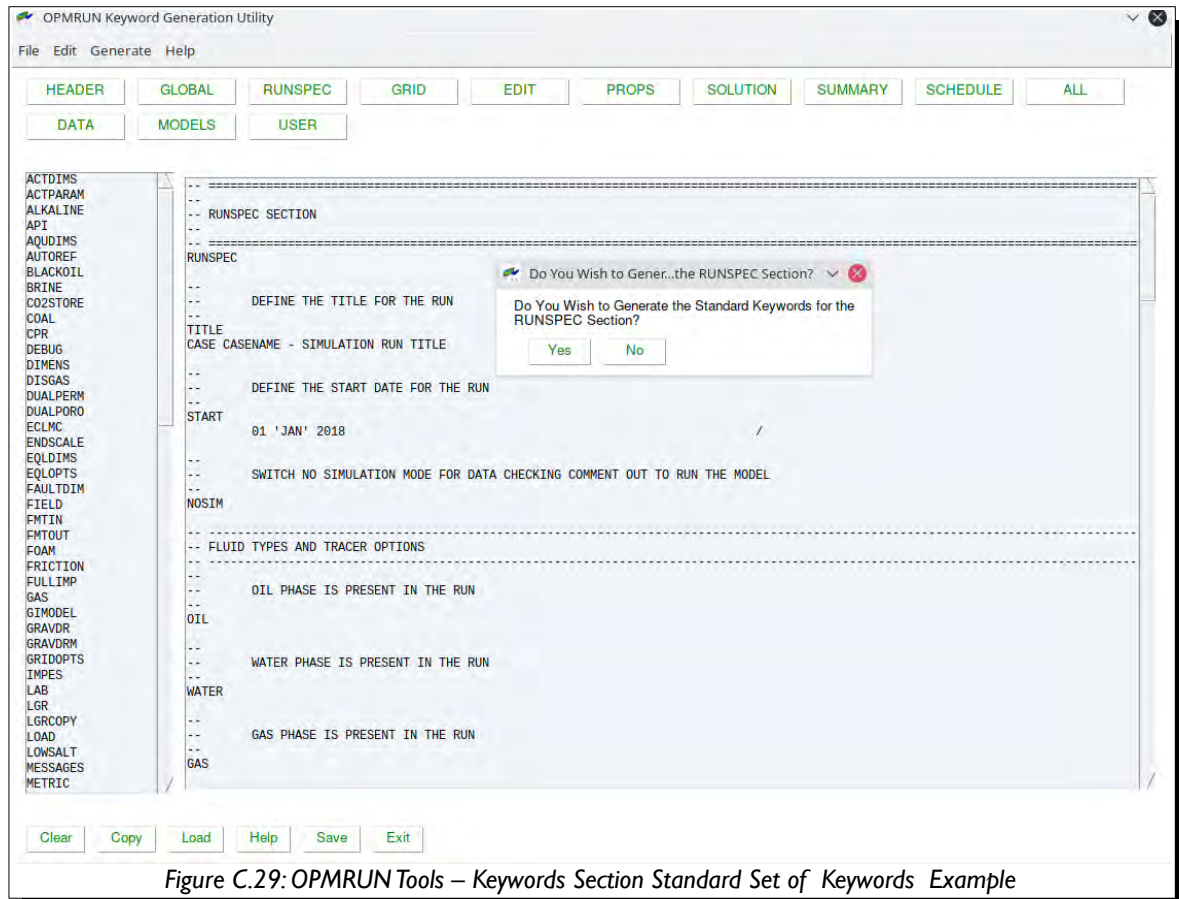


Figure C.29: OPMRUN Tools – Keywords Section Standard Set of Keywords Example

One can therefore generate a complete input deck in a matter of minutes; however, you still have to edit the generated input deck with your actual data.

Keywords: SUMMARY Section Variables

For the SUMMARY section keyword, one can also generate various sets of summary variables based on the options being used in the model. Note that not all the variables are currently available in OPM Flow, but additional variables are added at each release.

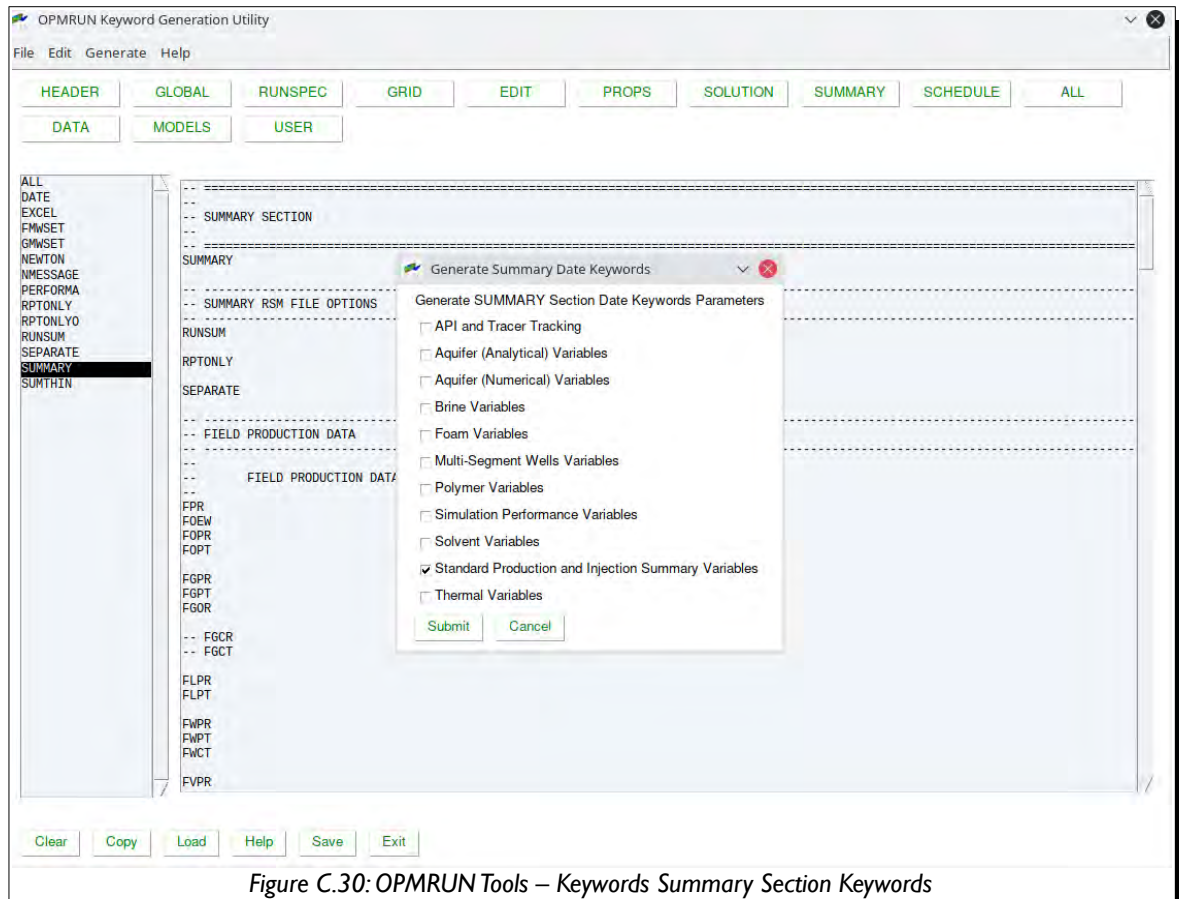


Figure C.30: OPMRUN Tools – Keywords Summary Section Keywords

For SUMMARY variables not recognized by OPM Flow, the simulator will issue a warning message and ignore those variables not implemented.

Keywords: SCHEDULE Section Keywords and Date Schedule

For the SCHEDULE Section keyword, one can also generate a representative set of SCHEDULE keywords, plus a date schedule from a start year to an end year, using Annual, Quarterly, or Monthly time steps.

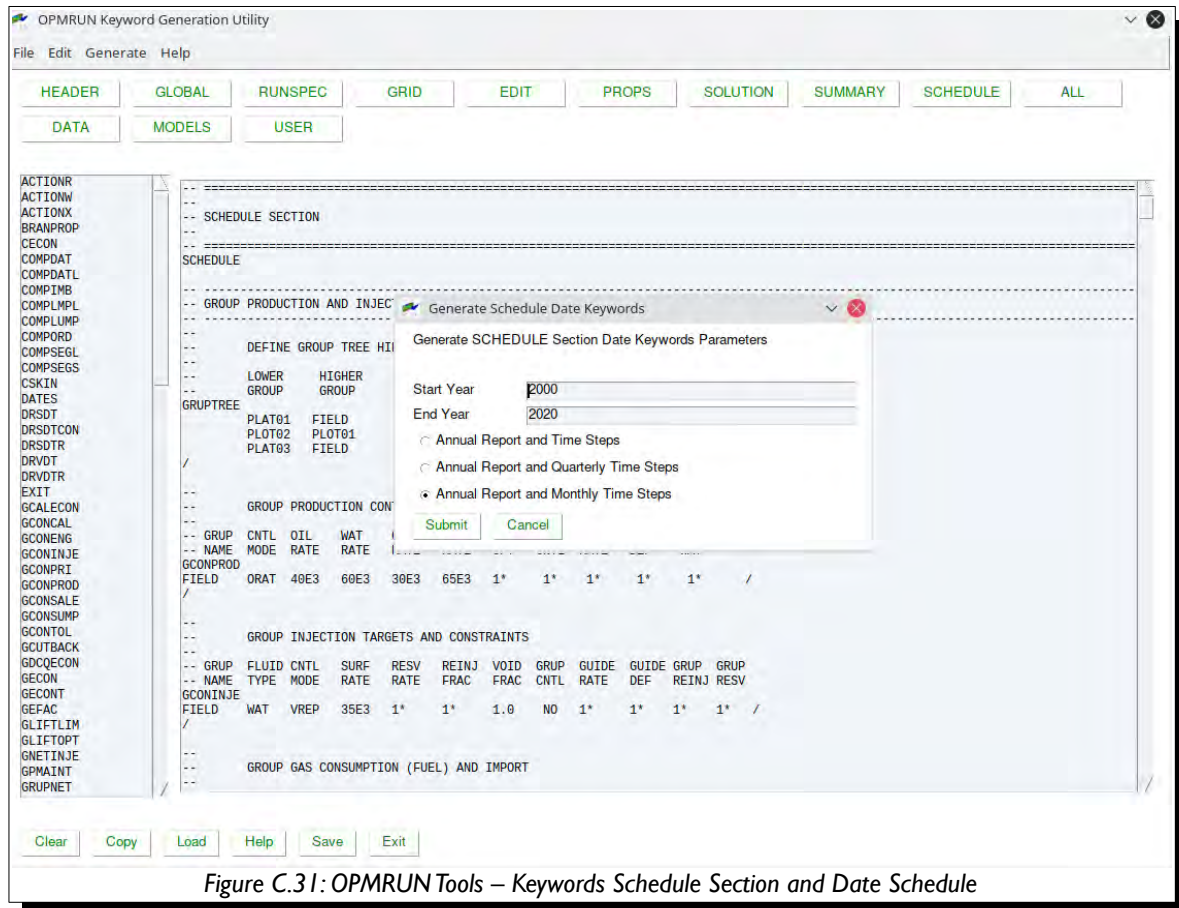


Figure C.31: OPMRUN Tools – Keywords Schedule Section and Date Schedule

This option also writes a standard report using the RPTSCHED keyword at the beginning of each year which is subsequently switch off for the intermediate Quarterly and Monthly time steps. A final report is written at the end of the run.

Keywords: DATA (Sets) Option

There is also a *DATA* option which is not an OPM Flow section, but a series of data sets, as shown in Figure C.32.

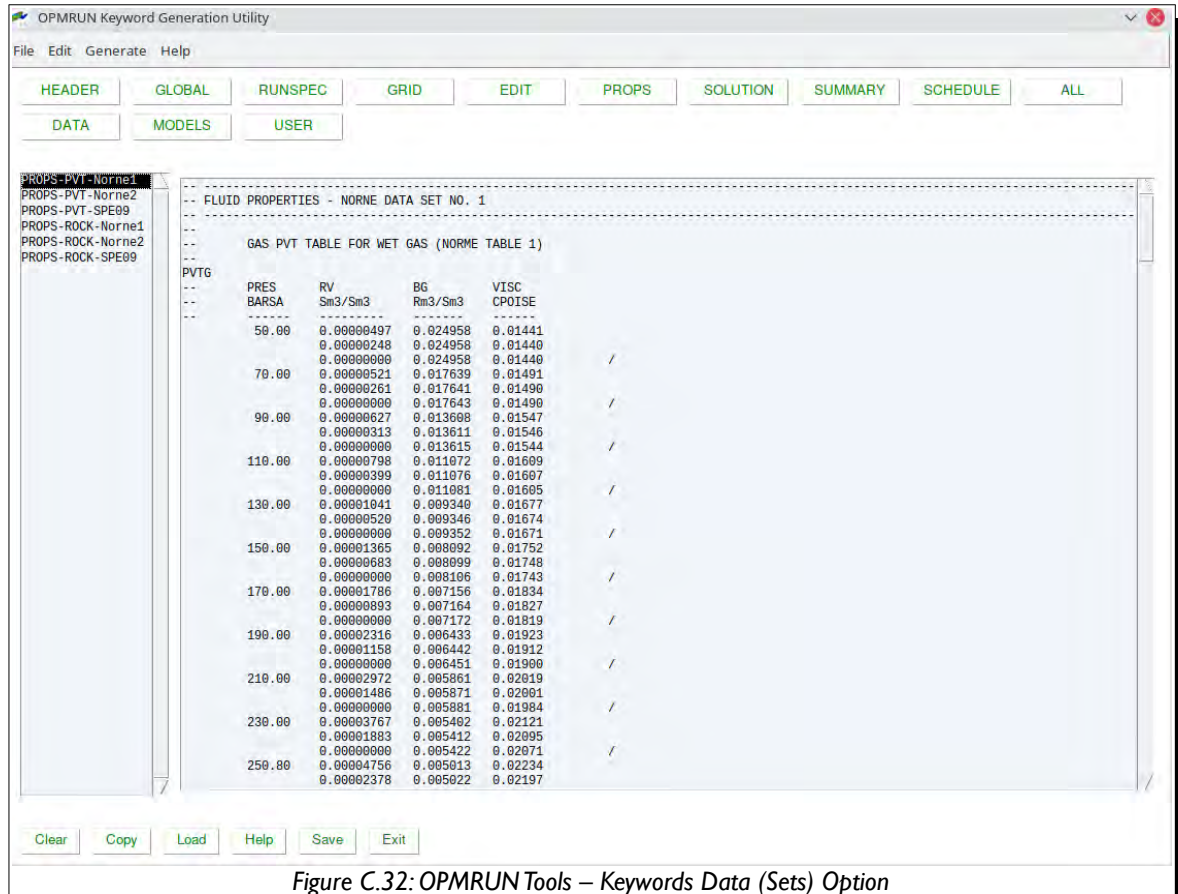


Figure C.32: OPMRUN Tools – Keywords Data (Sets) Option


The data sets are complete examples for a given type of data used in OPM Flow, for example a PVT data set for a wet gas reservoir, or three phase relative permeability data set. The data sets are intended to be used as a guide for generating ones own keyword input, or for building models for testing.

The intention is to expand the collection of data sets over time as more data becomes available.

Keywords: MODEL Option

Like the *DATA* option, the *MODEL* option is not an OPM Flow section, but is instead a collection of working models, as illustrated in Figure C.33.

The purpose of the models is to illustrate the functionality of various features implemented in OPM Flow and to act as guide for users in building their own models.

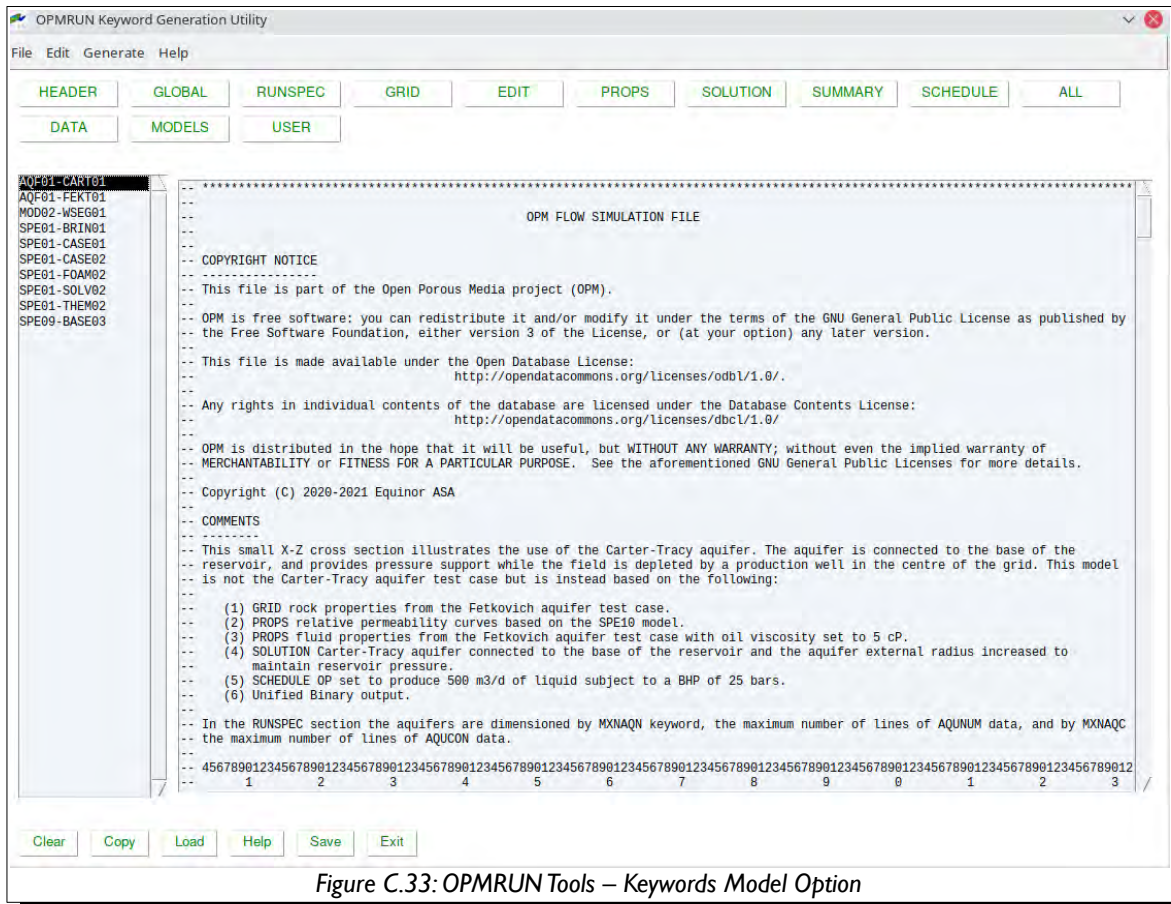

Additional models will be added when available.

Keywords: USER Templates Option

Finally, the *USER* option is where users can store their own templates. *USER* templates with the “vm” extension will automatically be listed by the *USER* button. To use this feature, after selecting a keyword, right clicking on the keyword allows one to load the actual template for the keyword. One can then edit the template and save the changes back to the same template or another template using the *Save* button.

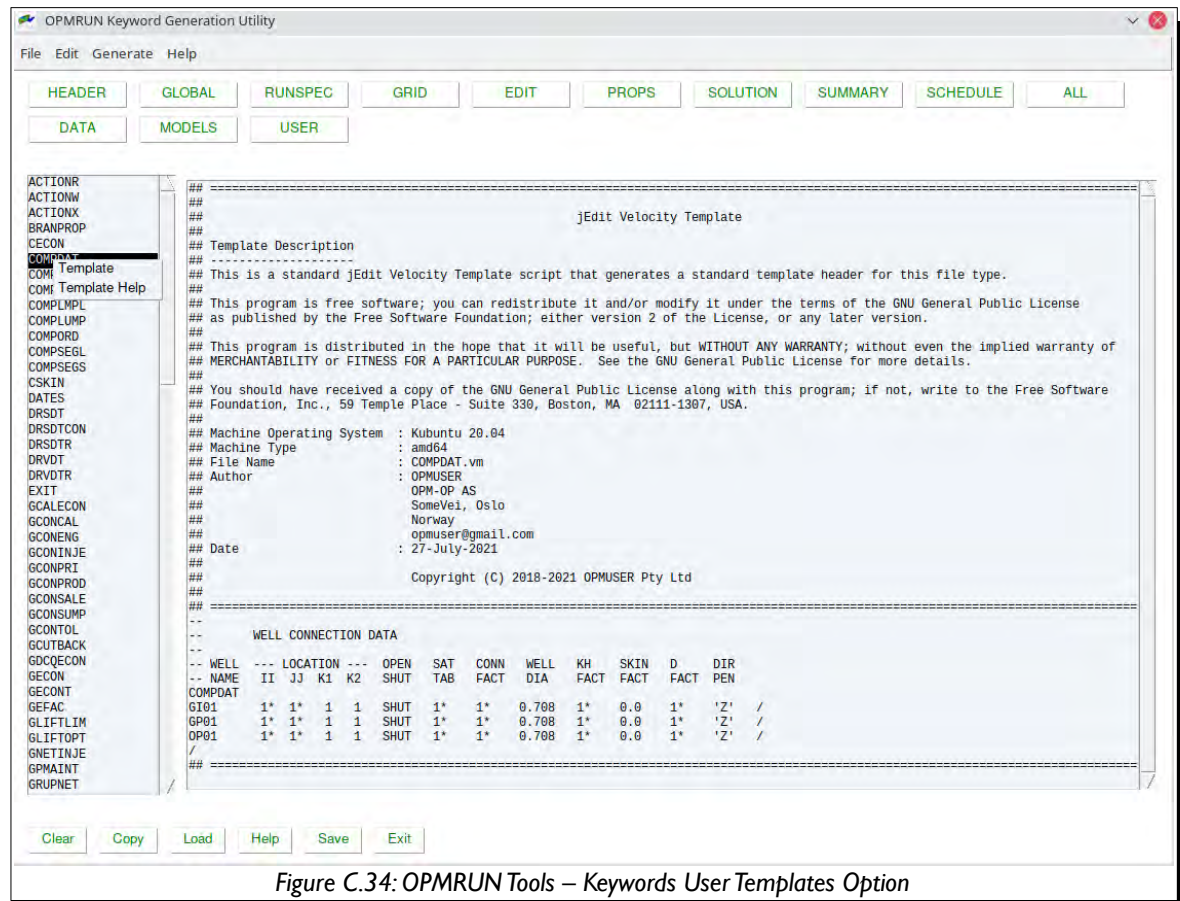


Figure C.34: OPMRUN Tools – Keywords User Templates Option

The Template Help option displays a brief introduction to VTL for further reference.

C.3.3 OPMRUN TOOLS: SIMULATOR INPUT/PRODUCTION SCHEDULE


The *Tools/Simulator Input/Production Schedule* application takes a comma delimited CSV file containing historical production and injection data and converts the data to an OPM Flow SCHEDULE file using the WCONHIST series of keywords. An example input file is shown below:

	A	B	C	D	E	F	G	H
1	Xy.Wellcompl	Date	Prd_dly.Time	Prd_dly.Cond	Prd_dly.Water	Prd_dly.Gas	Prd_dly.whp	Prd_dly.wht
2	GP-P1-01	03/01/2020	24	25	16	10528	551	133
3	GP-P1-01	03/02/2020	24	25	16	10507	551	133
4	GP-P1-01	03/03/2020	24	25	16	10513	550	131
5	GP-P1-01	03/04/2020	24	25	16	10506	549	132
6	GP-P1-01	03/05/2020	24	25	16	10503	550	133
7	GP-P1-01	03/06/2020	24	25	16	10506	549	132
8	GP-P1-01	03/07/2020	24	25	16	10416	556	131
9	GP-P1-01	03/08/2020	24	24	15	10054	595	132
10	GP-P1-01	03/09/2020	24	25	15	10180	584	131
11	GP-P1-01	03/10/2020	24	24	16	10493	549	132
12	GP-P1-01	03/11/2020	24	25	15	10493	549	133
13	GP-P1-01	03/12/2020	24	25	16	10476	550	133
14	GP-P1-01	03/13/2020	24	25	16	10243	607	132
15	GP-P1-01	03/14/2020	24	25	15	10276	596	130
16	GP-P1-01	03/15/2020	24	24	16	10414	548	131
17	GP-P1-01	03/16/2020	24	25	15	10400	549	132
18	GP-P1-01	03/17/2020	24	26	17	10471	601	130
19	GP-P1-01	03/18/2020	24	29	15	10819	647	131
20	GP-P1-01	03/19/2020	24	26	16	10348	653	132
21	GP-P1-01	03/20/2020	24	27	17	10843	626	132
22	GP-P1-01	03/21/2020	24	28	16	10929	649	131
23	GP-P1-01	03/22/2020	24	26	16	10901	648	131
24	GP-P1-01	03/23/2020	24	24	17	10693	575	133

Figure C.35: OPMRUN Tools – Production Schedule Input File Example

The first row in the input file is a header row that declares the data type for a column, the example shows typical Oil Field Manager (“OFM”) header variable names, but various variable names can be used to define the data type.

The tool can convert daily production data to a: daily production schedule, monthly average, or monthly on-stream average production schedule, as shown below:

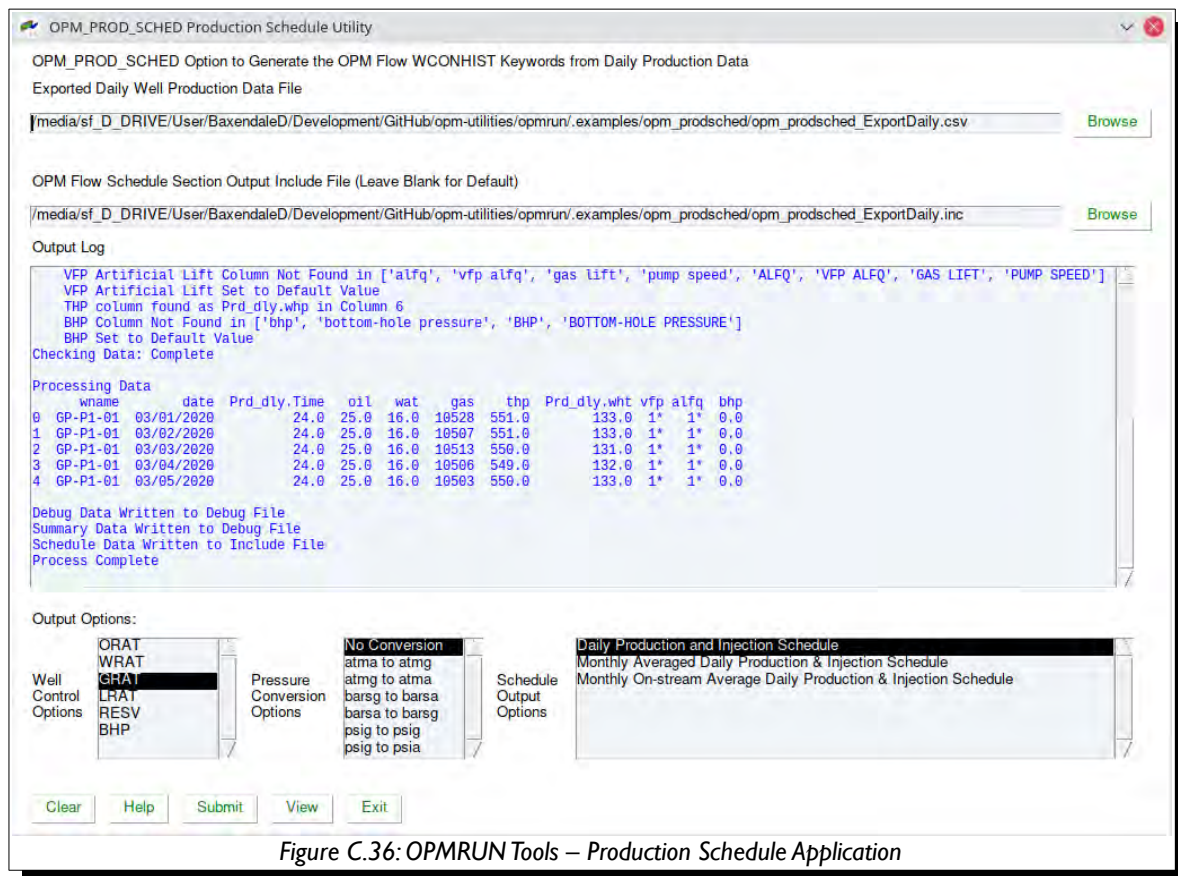

Notice that the application checks various variable names for the column headers. For example for the BHP data, the column names can be: bhp, bottom-hole pressure, BHP, or BOTTOM-HOLE PRESSURE.

A sample of the generated output file is shown in Figure C.37.

```

NOECHO
--
DATES
01 Mar 2020 /
/
--
-- WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL OPEN CNTL OIL WAT GAS VFP VFP THP BHP
-- NAME SHUT MODE RATE RATE RATE TABLE ALFQ PRES PRES
WCONHIST
GP-P1-01 OPEN GRAT 25.0 16.0 10528 1* 1* 551.0 0.0 / 2020-03-01
GP-P1-02 OPEN GRAT 21.0 21.0 13680 1* 1* 557.0 0.0 / 2020-03-01
GP-P1-03 OPEN GRAT 39.0 34.0 16432 1* 1* 625.0 0.0 / 2020-03-01
GP-P1-05 OPEN GRAT 187.0 27.0 51043 1* 1* 1907.0 0.0 / 2020-03-01
GP-P1-06 OPEN GRAT 41.0 17.0 9427 1* 1* 619.0 0.0 / 2020-03-01
GP-P2-02 OPEN GRAT 0.0 0.0 13365 1* 1* 690.0 0.0 / 2020-03-01
GP-P2-03 OPEN GRAT 0.0 0.0 10486 1* 1* 663.0 0.0 / 2020-03-01
GP-P2-04 OPEN GRAT 0.0 0.0 8009 1* 1* 646.0 0.0 / 2020-03-01
/
DATES
02 Mar 2020 /
/
--
-- WELL HISTORICAL PRODUCTION CONTROLS
--
-- WELL OPEN CNTL OIL WAT GAS VFP VFP THP BHP
-- NAME SHUT MODE RATE RATE RATE TABLE ALFQ PRES PRES
WCONHIST
GP-P1-01 OPEN GRAT 25.0 16.0 10507 1* 1* 551.0 0.0 / 2020-03-02
GP-P1-02 OPEN GRAT 21.0 21.0 13653 1* 1* 556.0 0.0 / 2020-03-02
GP-P1-03 OPEN GRAT 39.0 35.0 16400 1* 1* 624.0 0.0 / 2020-03-02
GP-P1-05 OPEN GRAT 186.0 25.0 51054 1* 1* 1905.0 0.0 / 2020-03-02
GP-P1-06 OPEN GRAT 41.0 17.0 9409 1* 1* 618.0 0.0 / 2020-03-02
GP-P2-02 OPEN GRAT 0.0 0.0 13485 1* 1* 681.0 0.0 / 2020-03-02
GP-P2-03 OPEN GRAT 0.0 0.0 10494 1* 1* 659.0 0.0 / 2020-03-02
GP-P2-04 OPEN GRAT 0.0 0.0 8024 1* 1* 641.0 0.0 / 2020-03-02
/
DATES
03 Mar 2020 /
/

```


Figure C.37: OPMRUN Tools – Production Schedule Output Example

Note

Note the current release only support production data via the WCONHIST keyword, injection data via WCONINJH keyword is not supported.

C.3.4 OPMRUN TOOLS: SIMULATOR INPUT/SENSITIVITIES

The *Tools/Simulator Input/Sensitivities* option generates sensitivity cases based on a "Base" case file. The Base file contains "Factors" (variable names), \$X01, \$X02, etc., that are substituted with user defined values using the data entered and the type of Sensitivity Scenario selected. Thus, the first step is to configure the Base file in a text editor by replacing actual values by the variable names, previously mentioned.

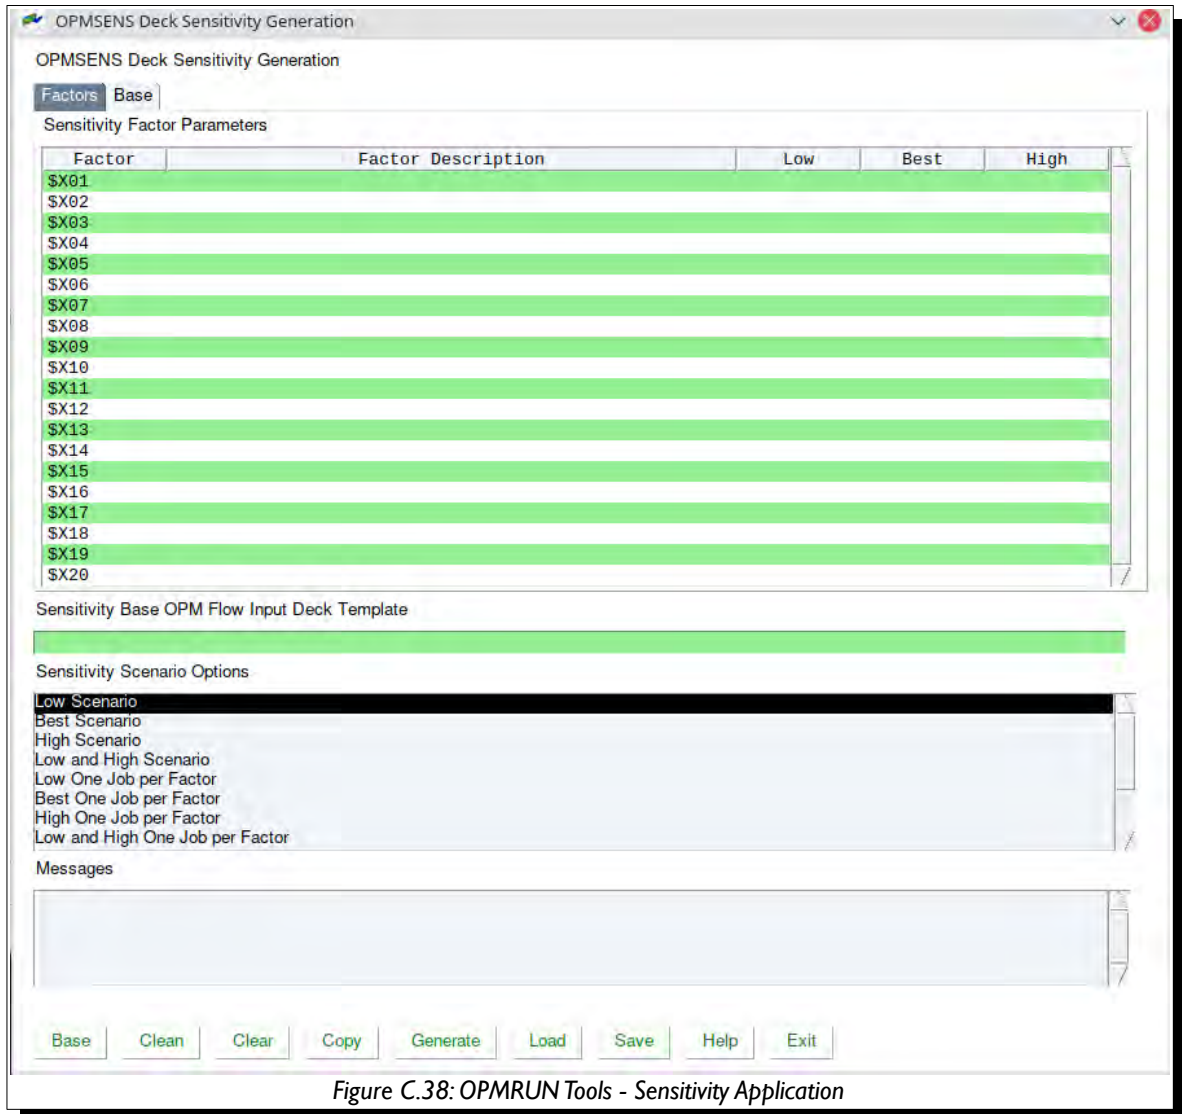

After editing the *Base* file, the next step is to load the Base file into the application using the *Base* button, which will prompt the user for the file to load and then display the file in the *Base* tab, as shown in Figure C.39



Figure C.39: OPMRUN Tools – Sensitivity Base Case Data File Example

Limited editing of the *Base* file is supported on the above screen.

The next step is to define the "Factors" and the factor values. A total of 20 factors are available and each factor consist of a Low, Best and High estimates. Note it is not necessary to enter all three estimates, if one wishes just to generate a limited sensitivity case. For example, if on wishes to only run a Low Scenario sensitivity then it is only necessary to enter data for the Low factor values.

Previously saved factor data can be loaded via the *Load* button, as shown below:

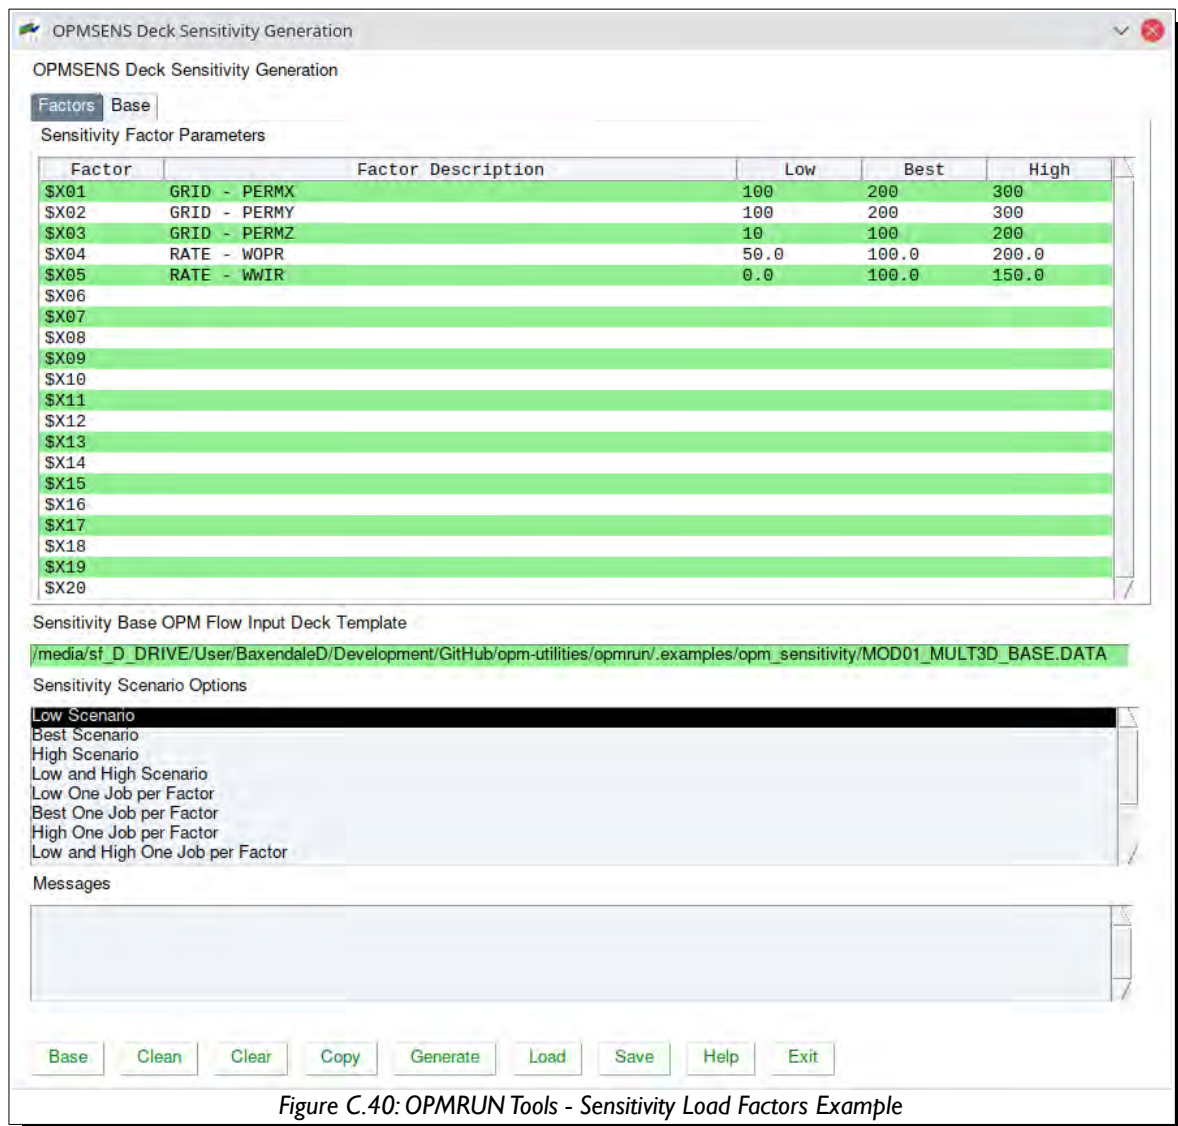


Figure C.40: OPMRUN Tools - Sensitivity Load Factors Example

Selecting a Factor Description row allows one to define a description for the factor variable, so for \$X01 in the above figure the description is GRID - PERMX. When selecting a Factor Description, a popup dialog will be displayed to enter the data, and if one right-clicks on the popup's Factor Description field one can select a description for one of the pre-defined descriptions as illustrated in the next figure.

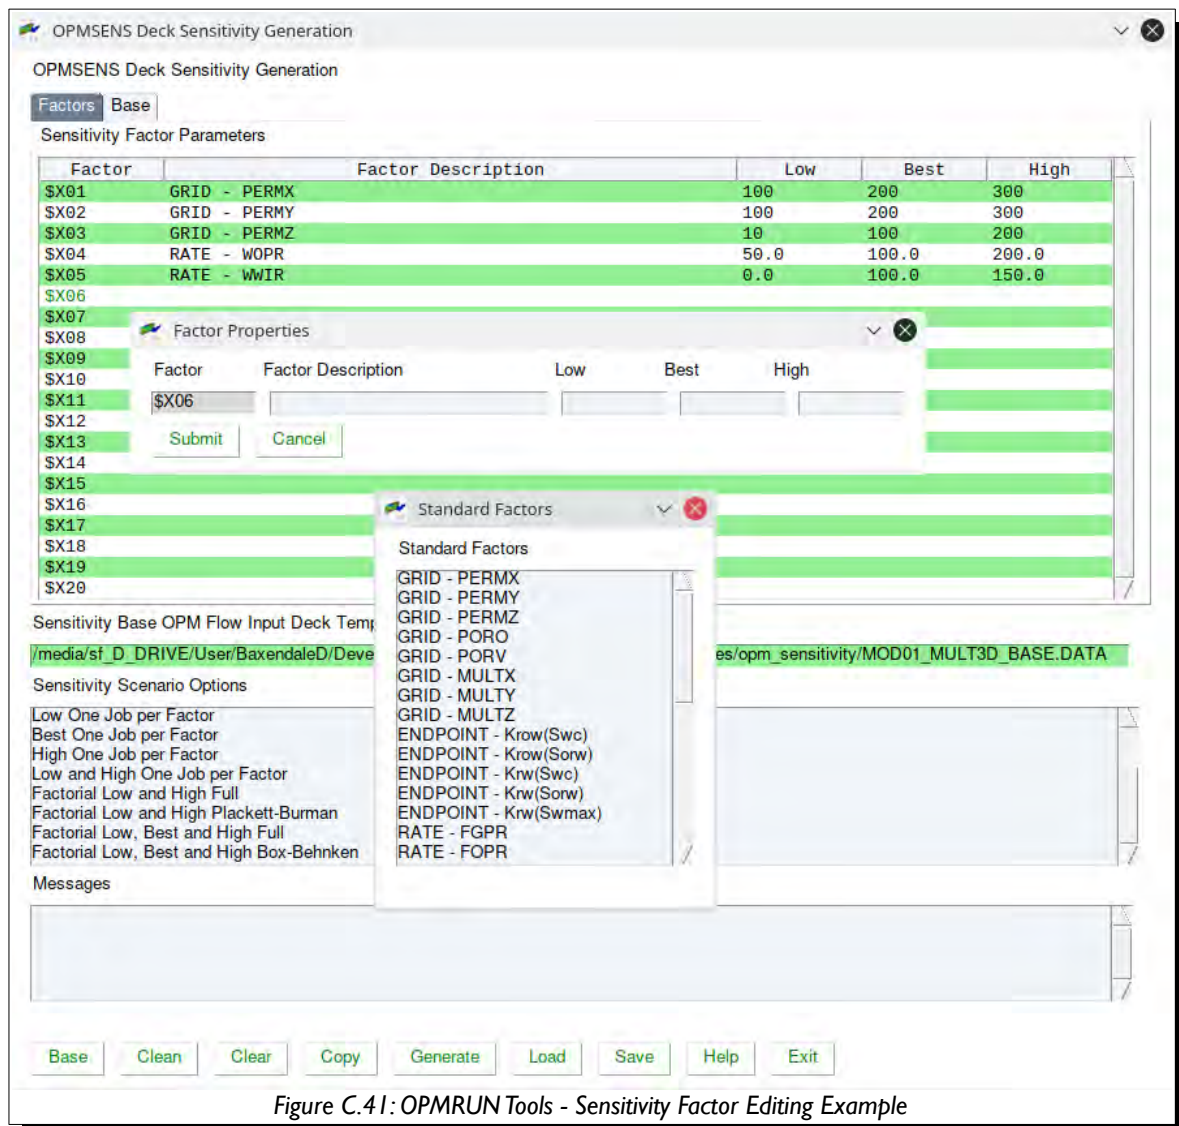


Figure C.41: OPMRUN Tools - Sensitivity Factor Editing Example

After the Sensitivity Factors have been entered one can then select the Sensitivity Scenario that one wishes to use generate the sensitivity cases. In the example in figure Figure C.42 the *Factorial: Low, Best and High Box-Behnken* DOE (Design of Experiments) has been selected. Selecting the *Generate* button, runs a series of checks, and if there are no errors the program will inquire if you wish to generate the set of cases (Figure C.42).

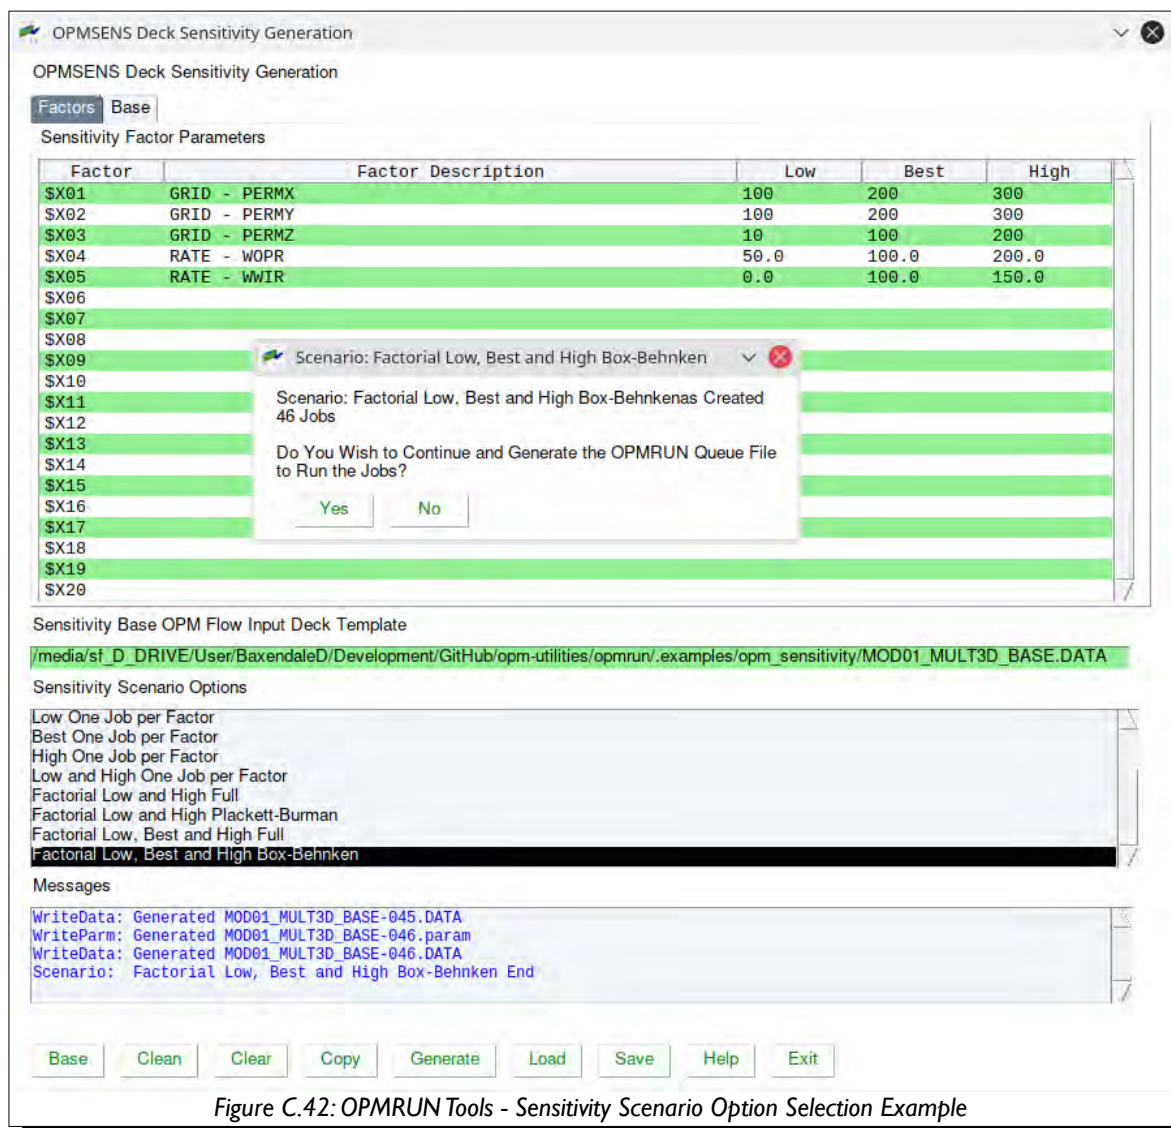


Figure C.42: OPMRUN Tools - Sensitivity Scenario Option Selection Example

If the Yes option is selected then the cases will be generated and the application will ask for the name of OPMRUN Queue file to write the jobs to, as depicted in

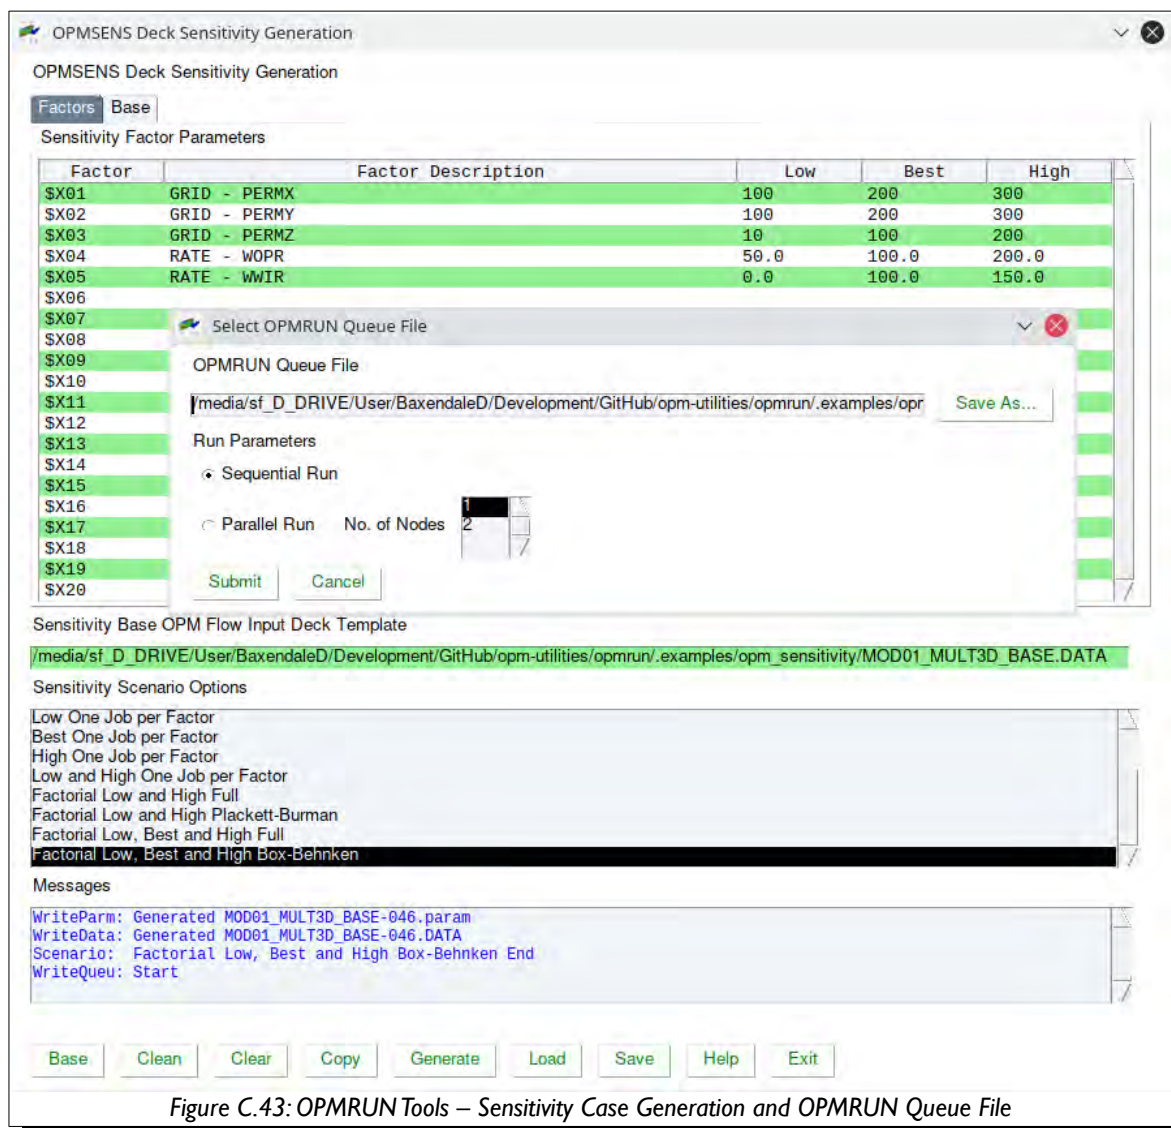


Figure C.43: OPMRUN Tools – Sensitivity Case Generation and OPMRUN Queue File

This allows the user to load the queue file into OPMRUN and to run all the jobs.

C.3.5 OPMRUN TOOLS: SIMULATOR INPUT/Well SPECIFICATION

This tool, *Tools/Simulator Input/Well Specification*, uses the standard well export files from OPM ResInsight to reformat the data in a more user-friendly manner for the WELSPECS and COMPDAT keywords. Optionally, the application can generate the COMPLUMP keyword based on the OPM ResInsight layers file, with one completion per defined reservoir layer.

An example OPM ResInsight Exported Well Completion File Format(*.exp) is shown in Figure C.44

```
-- WELL      GROUP      BHP      PHASE      DRAIN      INFLOW      OPEN      CROSS      PVT      HYDS      FIP
-- NAME      NAME      I      J      DEPTH      FLUID      AREA      EQUANS      SHUT      FLOW      TABLE      DENS      REGN
WELSPECS
GP-P1-06     1*      82      139     1*      OIL      0.0      STD      STOP     YES      0      SEG      0      /
GP-P1-05     1*      72      89      1*      OIL      0.0      STD      STOP     YES      0      SEG      0      /
GP-P1-01     1*      73      102     1*      OIL      0.0      STD      STOP     YES      0      SEG      0      /
GP-P1-02     1*      79      112     1*      OIL      0.0      STD      STOP     YES      0      SEG      0      /
GP-P2-04     1*      74      79      1*      OIL      0.0      STD      STOP     YES      0      SEG      0      /
/
-- WELL      I      J      K1      K2      OPEN      SAT      CONN      WELL      KH      SKIN      D      DIR
-- NAME      I      J      K1      K2      SHUT      TAB      FACT      DIA      FACT      FACT      FACT      PEN
COMPDAT
-- ---- Completions for completion type Perforation ----
-- Perforation Completion : MD In: 10115.8 - MD Out: 10125.6 Transmissibility: 0.0855562
GP-P1-01      73      102      49      49      OPEN     1*      8.555621E-02      0.70900      8.712182E+01      2.00000      1*      'Z' /
-- Perforation Completion : MD In: 10125.6 - MD Out: 10136.6 Transmissibility: 0.153124
GP-P1-01      73      102      50      50      OPEN     1*      1.531236E-01      0.70900      1.559257E+02      2.00000      1*      'Z' /
-- Perforation Completion : MD In: 10136.6 - MD Out: 10147.6 Transmissibility: 0.153119
GP-P1-01      73      102      51      51      OPEN     1*      1.531194E-01      0.70900      1.559215E+02      2.00000      1*      'Z' /
-- Perforation Completion : MD In: 10147.6 - MD Out: 10154.2 Transmissibility: 0.141482
GP-P1-01      73      102      52      52      OPEN     1*      1.414819E-01      0.70900      1.440710E+02      2.00000      1*      'Z' /
-- Perforation Completion : MD In: 10162.4 - MD Out: 10169.6 Transmissibility: 0.0383522
GP-P1-01      73      102      53      53      OPEN     1*      3.835216E-02      0.70900      6.450968E+01      6.70000      1*      'Z' /
-- Perforation Completion : MD In: 10169.6 - MD Out: 10180.6 Transmissibility: 0.0356561
GP-P1-01      73      102      54      54      OPEN     1*      3.565613E-02      0.70900      5.997487E+01      6.70000      1*      'Z' /
-- Perforation Completion : MD In: 10180.6 - MD Out: 10191.7 Transmissibility: 0.0030597
GP-P1-01      73      102      55      55      OPEN     1*      3.059698E-03      0.70900      5.146520E+00      6.70000      1*      'Z' /
-- Perforation Completion : MD In: 10191.7 - MD Out: 10202.7 Transmissibility: 0.0116847
GP-P1-01      73      102      56      56      OPEN     1*      1.168469E-02      0.70900      1.965406E+01      6.70000      1*      'Z' /
-- Perforation Completion : MD In: 10202.7 - MD Out: 10213.7 Transmissibility: 0.00139438
GP-P1-01      73      102      57      57      OPEN     1*      1.394380E-03      0.70900      2.345397E+00      6.70000      1*      'Z' /
-- Perforation Completion : MD In: 10213.7 - MD Out: 10224.7 Transmissibility: 0.0584769
GP-P1-01      73      102      58      58      OPEN     1*      5.847693E-02      0.70900      9.836029E+01      6.70000      1*      'Z' /
```

Figure C.44: OPMRUN Tools - Well Specification OPM ResInsight Well Completion File Format

And an OPM ResInsight Imported Formation Layer File (.Lyr) example is illustrated in Figure C.45

```
--
-- ResInsight Formation Names
-- Zone          Top   Base
-- Name          Layer Layer
--
'Pre-A'          1 - 2
'Shale'          3 - 3
'A Upper'        4 - 5
'Shale'          6 - 6
'A Lower'        7 - 8
'A Lower Pay'    9 - 14
'Shale'         15 - 15
'B Upper'       16 - 18
'Shale'         19 - 19
'B Lower'       20 - 26
'Shale'         27 - 27
'C Upper'       28 - 30
'C Upper Inte'  31 - 36
'C Upper Lobe'  37 - 40
'Shale'         41 - 41
'C Lower'       42 - 47
'Shale'         48 - 48
'D Upper'       49 - 59
'D Middle'      60 - 72
'D Lower'       73 - 80
'Shale'         81 - 81
'D Lower Lobe 1' 82 - 87
'Shale'         88 - 88
'D Lower Lobe 2' 89 - 90
'Shale'         91 - 91
'E Sand'        92 - 97
'Shale'         98 - 98
```

Figure C.45: OPMRUN Tools - Well
Specification OPM ResInsight Reservoir Layer
File

The application also can generate a well a OPM ResInsight perforation file with the formation names for cross-checking the perforations.

The application user interface is shown in Figure C.46. Note that in Figure C.46 the *Output Header* options are used for comments only, no unit conversion is performed.

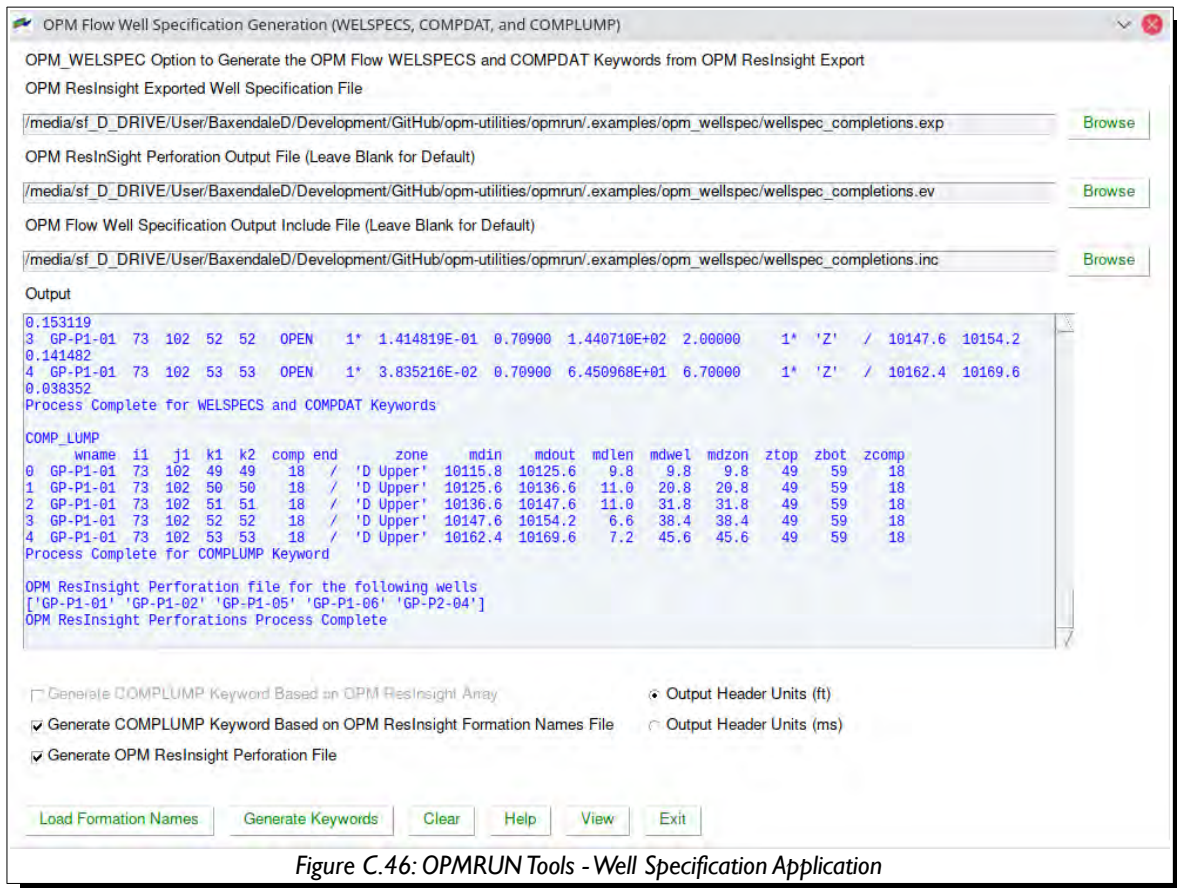


Figure C.46: OPMRUN Tools - Well Specification Application

In terms of output, the next figure shows the resulting well completion file to be used with OPM Flow, showing the WELSPECS and COMPDAT keywords (the COMPLUMP keyword is not shown in this example)

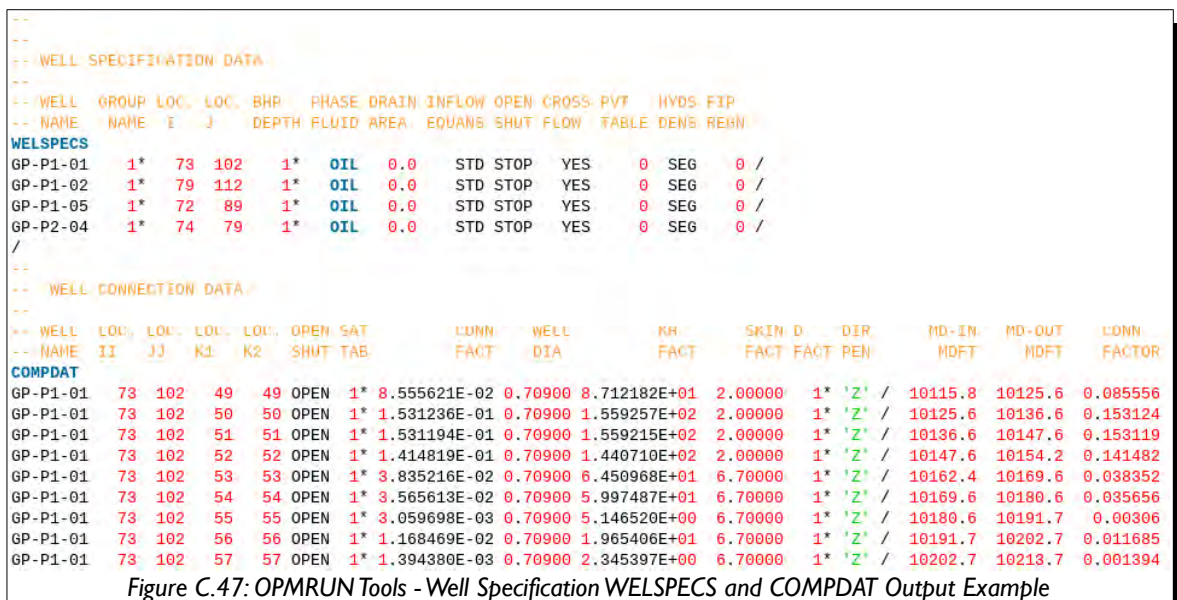


Figure C.47: OPMRUN Tools - Well Specification WELSPECS and COMPDAT Output Example

The final figure for this tool shows the resulting generated OPM ResInsight perforation file.

```
--
UNITS FIELD
--
--
-- DATE PERFORATION TOP BOT WELL SKIN ZONE
-- MDFT MDFT DIAM FACT
WELLNAME GP-P1-01
"SOH" perforation 10115.8 10125.6 0.70900 2.00000 -- 'D Upper'
"SOH" perforation 10125.6 10136.6 0.70900 2.00000 -- 'D Upper'
"SOH" perforation 10136.6 10147.6 0.70900 2.00000 -- 'D Upper'
"SOH" perforation 10147.6 10154.2 0.70900 2.00000 -- 'D Upper'
"SOH" perforation 10162.4 10169.6 0.70900 6.70000 -- 'D Upper'
"SOH" perforation 10169.6 10180.6 0.70900 6.70000 -- 'D Upper'
"SOH" perforation 10180.6 10191.7 0.70900 6.70000 -- 'D Upper'
"SOH" perforation 10191.7 10202.7 0.70900 6.70000 -- 'D Upper'
"SOH" perforation 10202.7 10213.7 0.70900 6.70000 -- 'D Upper'
"SOH" perforation 10213.7 10224.7 0.70900 6.70000 -- 'D Upper'
"SOH" perforation 10224.7 10228.7 0.70900 6.70000 -- 'D Upper'
```

Figure C.48: OPMRUN Tools - Well Specification OPM ResInsight Perforation File Output

C.3.6 OPMRUN TOOLS: RESINSIGHT

This option, *Tools/ResInsight*, loads the currently selected job into OPM ResInsight for viewing, this done via a Python sub-process call in OPMRUN, rather than using OPM ResInsight's Python API.

C.3.7 OPMRUN TOOLS: WELL TRAJECTORY CONVERSION

OPM ResInsight can read well trajectories in a given format into the program, the *Tools/Well Trajectory Conversion* option converts a Schlumberger Petrel exported well trajectory file, as shown Figure C.49, into a OPM ResInsight well trajectory file containing all the wells.

```
# WELL TRACE FROM PETREL
# WELL NAME: GP-P1-01
# DEFINITIVE SURVEY: Explicit survey 1
# WELL HEAD X-COORDINATE: 294774.82000000 (m)
# WELL HEAD Y-COORDINATE: 2623340.30000000 (m)
# WELL DATUM (KB, Kelly bushing, from MSL): 13.60000000 (m)
# WELL TYPE: GAS
# MD AND TVD ARE REFERENCED (=0) AT WELL DATUM AND INCREASE DOWNWARDS
# ANGLES ARE GIVEN IN DEGREES
# XYZ TRACE IS GIVEN IN COORDINATE SYSTEM [Petrel]
# AZIM_TN: azimuth in True North
# AZIM_GN: azimuth in Grid North
# DX DY ARE GIVEN IN GRID NORTH IN m-UNITS
# DEPTH (Z, tvd_z) GIVEN IN m-UNITS
=====
MD X Y Z TVD DX DY AZIM_TN INCL DLS AZIM_GN
=====
0.000000000 294774.82000 2623340.3000 13.600000000 0.000000000 -0.000000001 -0.000000002 359.19018141 0.000000000 0.000000000 0.000000000
224.200000000 294774.88839 2623341.0993 -210.5980866 224.19808660 0.0683874065 0.7993438398 4.0801814067 0.4100000000 0.0548617306 4.8900000000
252.800000000 294774.98621 2623341.2814 -239.1972995 252.79729950 0.1662053919 0.9814199335 47.230181407 0.4800000000 0.3500120164 48.0400000000
282.200000000 294775.19584 2623341.4957 -268.5957535 282.19575352 0.3758445395 1.1957111340 41.010181407 0.6900000000 0.2235585568 41.8200000000
311.100000000 294775.59178 2623341.9055 -297.4898516 311.08985156 0.7717802449 1.6054957099 44.170181407 1.5700000000 0.9154355591 44.9800000000
339.700000000 294776.51776 2623342.6035 -326.0654115 339.66541154 1.6977563415 2.3034936697 56.230181407 3.1000000000 1.6768888626 57.0400000000
368.600000000 294778.20113 2623343.6423 -354.8966452 368.49664522 3.3811279249 3.3422523835 58.350181407 4.7500000000 1.7191224028 59.1600000000
397.500000000 294780.74744 2623345.2481 -383.6372139 397.23721390 5.9274355074 4.9480945668 56.030181407 7.2100000000 2.5654105761 56.8400000000
426.100000000 294784.30376 2623347.6883 -411.9070216 425.50702158 9.4837615496 7.3882779982 53.810181407 10.1400000000 3.0928640683 54.6200000000
454.900000000 294788.99742 2623351.1132 -440.115661 453.71156609 14.177422776 10.813246789 52.500181407 13.1400000000 3.1369063547 53.3100000000
483.900000000 294794.78585 2623355.5409 -468.1780891 481.77808913 19.965846340 15.240878427 51.180181407 15.9700000000 2.9474446939 51.9900000000
```

Figure C.49: OPMRUN Tools - Well Trajectory Conversion Input File

The utility allows for the multiple wells to be converted at once and for conversion of units.

Note in some areas of the world it is not uncommon for the areal units to be in UTM and the depth to be in feet. This configuration is also handled by the application.

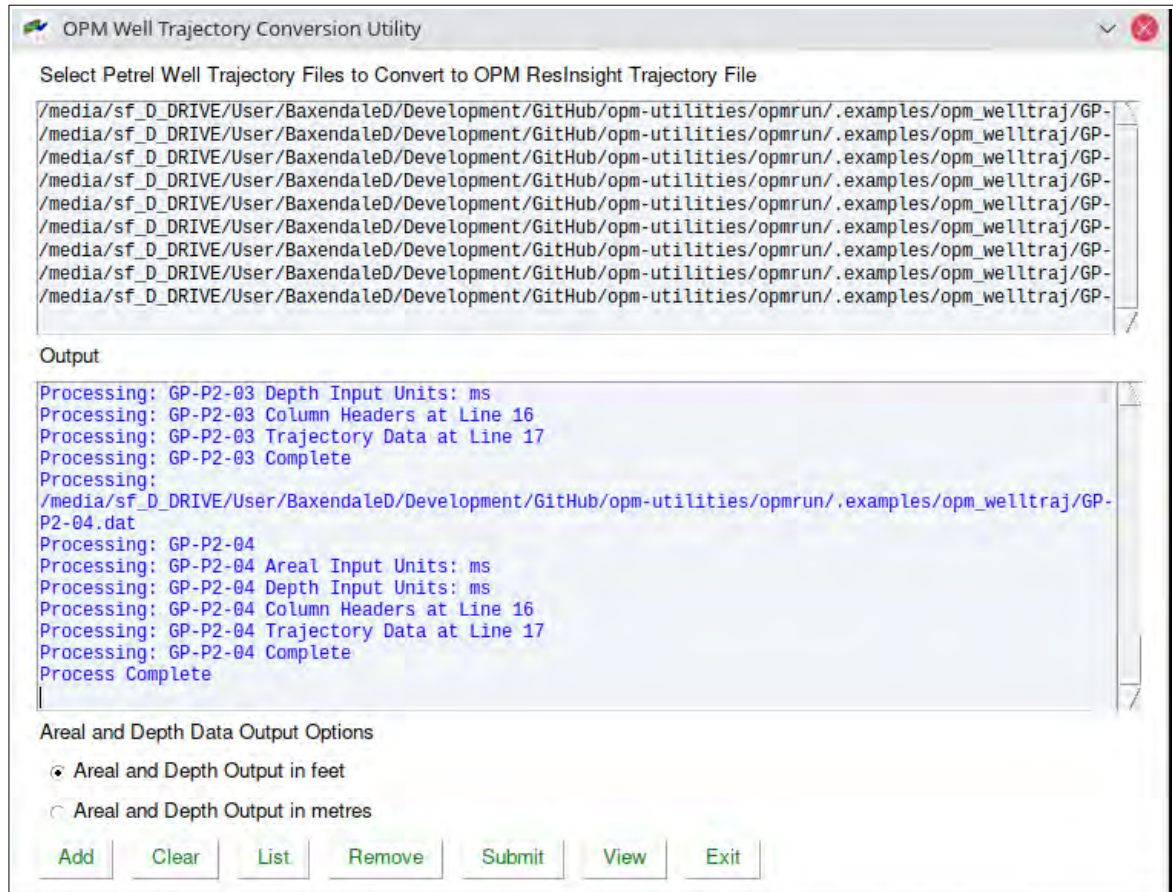


Figure C.50: OPMRUN Tools - Well Trajectory Application

An example output file is shown in Figure C.51

```
-- WELL TRACE FROM PETREL
-- WELL NAME: GP-P1-01
-- DEFINITIVE SURVEY: Explicit survey 1
-- WELL HEAD X-COORDINATE: 294774.82000000 (m)
-- WELL HEAD Y-COORDINATE: 2623340.30000000 (m)
-- WELL DATUM (KB, Kelly bushing, from MSL): 13.60000000 (m)
-- WELL TYPE: GAS
-- MD AND TVD ARE REFERENCED (=0) AT WELL DATUM AND INCREASE DOWNWARDS
-- ANGLES ARE GIVEN IN DEGREES
-- XYZ TRACE IS GIVEN IN COORDINATE SYSTEM [Petrel]
-- AZIM_TN: azimuth in True North
-- AZIM_GN: azimuth in Grid North
-- DX DY ARE GIVEN IN GRID NORTH IN m-UNITS
-- DEPTH (Z, tvd_z) GIVEN IN m-UNITS
--
-- APPLIED AREAL CONVERSION FACTOR: 3.28083989501312
-- APPLIED DEPTH CONVERSION FACTOR: 3.28083989501312
--
WELLNAME:GP-P1-01
--          XCORD          YCORD          TVDSS          MD
--          DEPTH          DEPTH
--          ft            ft            ft            ft
-----
9.671090e+05  8.606760e+06  -44.62         0.00
9.671092e+05  8.606762e+06   690.94        735.56
9.671095e+05  8.606763e+06   784.77        829.40
9.671102e+05  8.606763e+06   881.22        925.85
9.671115e+05  8.606765e+06   976.02       1020.67
9.671146e+05  8.606767e+06  1069.77       1114.50
9.671201e+05  8.606770e+06  1164.36       1209.32
9.671284e+05  8.606776e+06  1258.65       1304.13
9.671401e+05  8.606784e+06  1351.40       1397.97
9.671555e+05  8.606795e+06  1443.94       1492.45
9.671745e+05  8.606810e+06  1536.02       1587.60
9.671965e+05  8.606827e+06  1626.60       1682.41
9.672208e+05  8.606846e+06  1715.81       1776.90
9.672483e+05  8.606868e+06  1803.86       1871.72
```

Figure C.5 I: OPMRUN Tools - Well Trajectory Output Trajectory File.

APPENDIX D: PYTHON INTERFACE TO OPM FLOW

APPENDIX TABLE OF CONTENTS

APPENDIX D: PYTHON INTERFACE TO OPM FLOW.....	2047
D.1 Introduction.....	2050
D.2 Working with the Input Deck.....	2050
D.2.1 The Parser Object.....	2050
D.2.2 Loading an Input Deck.....	2051
D.2.3 Units.....	2051
D.2.4 Accessing the Input Deck.....	2052
D.2.5 Special Parsing.....	2053
D.2.6 Creating EclipseState and Grid Objects.....	2054
D.2.7 Creating a Schedule.....	2055
D.3 Working with the Result Files.....	2055
D.3.1 Loading a Grid File.....	2055
D.3.2 Loading a Summary Case of Results.....	2055
D.3.3 Loading a Restart File.....	2056

D.1 INTRODUCTION

Some of the C++ code in OPM Flow has been “wrapped” in Python which means that one can invoke the simulator’s C++ code from one’s own Python programs. At the moment the wrappers for the input layer and the code for working with the result files is quite complete and usable. Work is also underway to be able to run the simulator and to interact with running simulations from within Python.

The goal is for the Python code to be structured like a native Python API, but some design decisions are certainly influenced by the underlying C++ implementation, and to get a deeper understanding of what is possible and how to achieve specialized tasks one might need to consult the simulator’s C++ code.

Note

Observe that the Python bindings described here are not very mature. The API might change in future releases. It is in general quite simple to expose new functionality to Python.

D.2 WORKING WITH THE INPUT DECK

The reading of the input deck in OPM Flow is a two step process, first a data structure called a “Deck” is created - the “Deck” is essentially a collection of keywords where all elements have been converted to the correct type and default values have been injected into the keyword. The “Deck” is a quite low level data structure, and the actual simulation is based on higher level data structures where the origin in “keywords” from a *.DATA file is no longer so apparent. The most notable high level objects are the “EclipseState” and “Schedule” classes. Large parts of this functionality is available from Python.

D.2.1 THE PARSER OBJECT

The initial building block in the parsing process is the “Parser” object which knows how to interpret the input keywords and create data structures. Virtually all scripts working with the input files will start with creating a Parser object:

```
#!/usr/bin/env python3
from opm.io.parser import Parser
# Create a parser object which can be used to parse a string or input files
parser = Parser()
```

In most cases one will just create a default parser object and be done with it, but it is possible to both add your own keyword definitions to the parser and alternatively create a custom parser which only accepts a subset of keywords. These features will be demonstrated briefly in section [Special Parsing](#).

D.2.2 LOADING AN INPUT DECK

The “Deck” data structure is essentially a list of keywords which have been loaded as “DeckKeyword” instances. The Deck can either be loaded from an input data file or from a string. The following example shows how to load two SCHEDULE section keywords, WELSPECS and COMPDAT:

```
#!/usr/bin/env python3
from opm.io.parser import Parser
deck_string = """
WELSPECS
    'W1'  'G1'   19   4       1*   WATER   1*   1*   SHUT   1*   1*   1*       /
/
COMPDAT
    'W1'   11   3   1   5   OPEN   1*   1*   0.216   1*   0   1*   Z   1* /
/
"""
parser = Parser()
deck = parser.parseString( deck_string )
```

After running this small script the deck variable will contain the two keywords WELSPECS and COMPDAT. For these keywords the '*' have been replaced with the correct default value and the items have been converted to the correct type. In addition, all numerical values have been converted to SI units, more about units can be found in section [Units](#). Alternatively you can use the Parser.parseFile() method to parse an entire input file. In this case INCLUDE and IMPORT keywords will be resolved and everything will be coalesced into one large “DeckKeyword” data structure:

```
#!/usr/bin/env python3
import os.path
import sys
from opm.io.parser import Parser
data_file = sys.argv[1]
print(f"Loading deck from {data_file}")
parser = Parser()
deck = parser.parseFile( data_file )
```

The code above loads a *.DATA file given by calling the Python script. For example, if the name of the input deck, that may contain a complete input deck or just a selection of keywords, is called NORNE.DATA, and the name of the above script is LoadDeck.py, then:

```
python LoadDeck NORNE.DATA
```

would load the NORNE.DATA into the simulator.

D.2.3 UNITS

Internally in OPM Flow all quantities are managed as SI units, whereas input decks use the unit systems METRIC, FIELD, or LAB (laboratory). The METRIC unit system is comparable to SI units, the most notable difference is that time is expressed in days instead of seconds, the FIELD unit system is based on historical units like barrels of oil (stb) and feet for length.

The important point is that when you access the elements in the Deck the values you will get are in SI units, whereas the input you provided has been in one of other set of units. Consider the example:

```
#!/usr/bin/env python3
from opm.io.parser import Parser
deck_string = """
WCONPROD
  'W1'  'OPEN'  'ORAT'  86400 /
/
"""
parser = Parser()
deck = parser.parseString( deck_string )
kw = deck[0]
record0 = kw[0]
orat = record0["ORAT"].value
well = record0["WELL"].value
print("==> The Oil rate in well:{} is {} m3/s".format(orat, well))
```

When this script is run it will print:

```
==> The Oil rate in well:W1 is 1.0 m3/s
```

because the input value of 86,400 m3/day is internally converted to 1.0 m³/second.

The default input unit system is METRIC, that means that if the input is to be interpreted in either FIELD or LAB units, then one needs to add a keyword to declare the units before the entering the data. Thus, to interpret the WCONPROD keyword's oil rate as stb/d in the previous example, the FIELD keyword needs to be added to the example, that is:

```
#!/usr/bin/env python3
from opm.io.parser import Parser
deck_string = """

FIELD

WCONPROD
  'W1'  'OPEN'  'ORAT'  86400 /
/
"""
```

D.2.4 ACCESSING THE INPUT DECK

After you have loaded a Deck you can query it with normal the Python functions:

```
# Check if deck has keyword:
if "GRID" in deck:
    print("Deck contains 'GRID' keyword")
else:
    print("Deck does not have 'GRID' keyword")

# Loop through all the keywords:
for kw in deck:
    print("kw: {}".format(kw.name))
```

To get a keyword from the deck you can access it with index, name or a combination of name and occurrence index:

```
# Get keyword 10
kw10 = deck[10]

# Get the last DATES keyword
last_dates = deck["DATES"]

# Get the third WELSPECS keyword
welspecs3 = deck[("WELSPECS", 3)]
```

A deck keyword is composed of “records”, which are again composed of “items”. The example below shows how one can iterate through the wells in a WELSPECS keyword:

```
kw = deck["WELSPECS"]
print(f"Keyword has {len(kw)} records")
for record in kw:
    well = record["WELL"].get_str()
    group = record[1].get_str()

    print(f"Well {num}: {well} is part of group{group}")
```

D.2.5 SPECIAL PARSING

The keywords OPM Flow recognizes are configured via JSON files which are embedded in the source distribution. The JSON keywords for the simulator are in following the public GitHub repository:

<https://github.com/OPM/opm-common/tree/master/src/opm/parser/eclipse/share/keywords>

By default the Parser class will recognize all the keywords which are known to OPM Flow, but one can create your own custom parser with only a subset of keywords:

```
from opm.io.parser import Builtin
# Create a special parser which only recognizes the corner point grid
# keywords
parser = Parser(add_default = False)
builtin = Builtin()
parser.add_keyword( builtin.COORD )
parser.add_keyword( builtin.ZCORN )
parser.add_keyword( builtin.ACTNUM )
```

The opposite is also possible, here is how one can add a special keyword GCLOSE which could be used to close all the wells in the group:

```
# Create a fictitious home mode keyword GCLOSE:
GCLOSE = {"name" : "GCLOSE",
          "sections" : ["SCHEDULE"],
          "items" : [
              {"name" : "GROUP", "value_type" : "STRING"}
          ]}

parser = Parser()
# Add the keyword description via a JSON string
parser.add_keyword(json.dumps(GCLOSE))
```

By default the parser used in OPM Flow is quite strict - a tad stricter than the one used by the commercial simulator. However you can configure how the parser should react to certain error conditions. By default the parser will fail with an exception if an INCLUDE file is not found, but one can for instance change this behavior to ignore that error condition, for example:

```
parse_context = ParseContext([('PARSE_MISSING_INCLUDE',
                                opm.io.action.ignore)])
parser = Parser()
deck = parser.parseFile(self.norne_fname, parse_context)
```

D.2.6 CREATING ECLIPSESTATE AND GRID OBJECTS

The “Deck” is a quite raw structure and not very user friendly. Before actually used in the simulator the properties from the “Deck” are coalesced to a form more easily usable format. Consider, for example the PORO array configured below where the configuration is given in three steps:

```
-- GRID Dimensions 10 x 10 x 3
DIMENS
  10 10 3 /
--
-- Set A Global Value 0.10 For All Of The Grid
--
PORO
  300*0.10 /
--
-- Set A Value Of 0.15 For All The Cells In The Middle Layer
--
BOX
  1 10 1 10 2 2 /
PORO
  100*0.15 /
ENDBOX
--
-- Scale The Bottom Layer By A Factor OF Two
--
MULTIPLY
  PORO 2 1 10 1 10 3 3 /
/
```

In the deck representation this will be a collection of five different keywords: {"PORO", "BOX", "PORO", "ENDBOX", "MULTIPLY"}, whereas in the “EclipseState” this will be one property "PORO" where all the modifications have been completed. In addition to the grid properties like "PERMX" and "PORO" the “EclipseState” object contains numerous other objects like the fault properties, PVT tables and more.

```
#!/usr/bin/env python3
import syshe
from opm.io.parser import Parser
from opm.io.ecl_state import EclipseState
parser = Parser()
data_file = sys.argv[1]
deck = parser.parseFile( data_file )
es = EclipseState( deck )
#
# Get the FieldPropsManager from the EclipseState. The FieldPropsManager
# is then used to query and look up grid properties like PERMX and PORO.
# Observe that the properties you get from the FieldPropsManager only have
# the active cells only.
#
fp = es.field_props()
poro = fp["PORO"]
satnum = fp["SATNUM"]
#
# Get the input grid from the EclipseState:
#
grid = es.grid()
# Get a manager for all the tables
tables = es.tables()
```

D.2.7 CREATING A SCHEDULE

The Schedule object contains all the dynamic information in the model, in particular that includes all information about wells and groups. The Schedule object is constructed from the “Deck” and the “EclipseState” objects.:

```
#!/usr/bin/env python3
import sys
from opm.io.parser import Parser
from opm.io.ecl_state import EclipseState
parser = Parser()
data_file = sys.argv[1]
deck = parser.parseFile( data_file )
es = EclipseState( deck )
schedule = Schedule(deck, es)
print(f"Schedule file has {len(schedule)} report steps")
print("List of wells")
for well in schedule.well_names():
    print(well)
```

The example above prints the number of report time steps and all the well names in the SCHEDULE section.

D.3 WORKING WITH THE RESULT FILES

In addition to the functionality to load and inspect the input deck, OPM Flow also has a Python interface to load and inspect the various result files, SUMMARY and RESTART files. There is also some functionality to create files with the correct formatting.

D.3.1 LOADING A GRID FILE

Using the class “EclipseGrid” one can load a grid representation from a *.EGRID file on disk:

```
#!/usr/bin/env python3
import sys
from opm.io.ecl import EGrid
grid_file = sys.argv[1]
grid = EGrid(grid_file)
```

The return value from “EclipseState.ecl_grid()” is also of this type.

D.3.2 LOADING A SUMMARY CASE OF RESULTS

Using the class “ESMry” one can load the Extended SUMMARY file for a simulations that contains all the SUMMARY vectors.

```
#!/usr/bin/env python3
import sys
from opm.io.ecl import ESMry
case = sys.argv[1]
summary = Esmry(case)
```

D.3.3 LOADING A RESTART FILE

Finally, one load the solution arrays stored in the *.RESTART file using the Erst class, as shown below.

```
#!/usr/bin/env python
import sys
from opm.io.ecl import ERst

rst_file = sys.argv[1]
rst = Erst(rst_file)
```

Note that restart file can be large, so care must be taken on how these type of files are loaded into Python.

APPENDIX E: RUNNING PREVIOUS RELEASES OF OPM FLOW

APPENDIX TABLE OF CONTENTS

APPENDIX E: RUNNING PREVIOUS RELEASES OF OPM FLOW.....2057

E.1 Running OPM Flow 2021-04.....	2060
E.2 Running OPM Flow 2020-10.....	2073
E.3 Running OPM Flow 2020-04.....	2086
E.4 Running OPM Flow 2019-10.....	2101
E.5 Running OPM Flow 2019-04.....	2114
E.6 Running OPM Flow 2018-10.....	2126
E.7 Running OPM Flow 2018-04.....	2137

E.1 RUNNING OPM FLOW 2021-04

The command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from your terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA.

OPM Flow accepts command line options to control various aspects of the simulator's run time behavior, as described in the table below. To give a command line option use "key=value" syntax, with no spaces around the equals sign. It is also possible to put multiple options together in a parameter file. To do so, put one option on each line of the file with ".param" as the extension and pass that filename as a command line parameter to OPM Flow using:

```
flow --parameter-file=CASENAME.PARAM
```

to instruct OPM Flow to read the parameter file.

The available command line options for this release are listed in Table E.1.

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
General eWoms/ebos Command Line Parameters			
1	-h or --help	A character string that causes OPM Flow to print a help message that gives a brief description of the available command line parameters. This now only prints the active user facing command line options.	N/A
2	--help-all	Prints all the command line options included in the release, including obsolete, hidden and depreciated options.	N/A
3	--allow-distributed-wells	A boolean value set to true or false that allows the perforations of a well to be distributed to interior of multiple processes in a parallel run (true), or not (false).	false
4	--alternative-well-rate-init	A boolean value set to true or false that causes the simulator to use an alternative well rate initialization procedure (true).	true
5	--bda-device-id	Choose device ID for cusparseSolver or openclSolver, use 'nvidia-smi' or 'clinfo' commands to determine valid IDs.	0
6	--continue-on-convergence-error	A Boolean value set to true or false that that instructs the simulator to continue (true) with a non-converged solution instead of giving up (false) if it encounter a time step size smaller than the minimum time step size.	false

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
7	--cpr-max-ell-iter	A positive integer that sets the maximum number of iterations for the elliptic pressure part of the Constrained Pressure Residual ("CPR") solver.	20
8	--cpr-reuse-setup	A positive integer that defines if the CPR solver should re-use the Amg setup. Valid options are: 3 : Recreate the pre-conditioner for every linear solve. 4 : Recreate once every time step. 5 : Recreate if last linear solve took more than 10 iterations. 6 : Never recreate.	0
9	--dbph-max-rel	A real positive value that sets maximum relative change of the bottom-hole pressure in a single iteration	1.0
10	--dp-max-rel	A real positive double precision value that sets the maximum allowed relative change of pressure per iteration.	0.3
11	--ds-max	A real positive double precision value that sets the maximum allowed change in saturation per iteration.	0.2
12	--dwell-fraction-max	A real positive value that sets the maximum allowed change in well's volume fraction per iteration.	0.2
13	--ecl-deck-file-name	A character string that defines the name of the OPM Flow input file which contains the simulator's ECLIPSE formatted input deck to be simulated.	""
14	--ecl-enable-drift-compensation	A Boolean value set to true or false that enables (true) or disables (false) partial compensation of systematic mass losses via the source term of the next time step.	true
15	--ecl-output-double-precision	A Boolean value set to true or false that switches on (true) or off (false) double precision in restart files. Useful for 'perfect' restarts.	false
16	--ecl-output-interval	An integer value defining the number of report steps that ought to be skipped between two writes of restart files results.	-1
17	--ecl-strict-parsing	A Boolean value set to true or false that switches on (true) or off (false) strict parsing mode for parsing - all errors are collected before the application exists. Useful for debugging initial runs.	false

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
18	--edge-weights-method	A defined positive integer value that defines the edge-weighting strategy: 0 : For uniform, 1 : for trans, or 2 : for log(trans).	1
19	--enable-adaptive-time-stepping	A Boolean value set to true or false that turns on (true) or off (false) adaptive time stepping. If set to false the report time steps provided by the input deck are used.	true
20	--enable-async-ecl-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to restart and summary files in the commercial simulators format.	true
21	--enable-async-vtk-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to the VTK output files.	true
22	--enable-dry-run	A Boolean value set to true or false that specifies if the simulation should actually run, (true) or just check the input deck (false). This option is equivalent to activating the NOSIM keyword in the RUNSPEC section of the input deck (see section 5.3.92 NOSIM – Activate the No Simulation Mode for Data File Checking). The default value of “auto” will use whatever is stipulated in the input deck via the NOSIM keyword.	“auto”
23	--enable-ecl-output	A Boolean value set to true or false that specifies if the binary output files (restart, summary files, etc.) should be written in the commercial simulator’s format (true), or OPM Flow’s format (false).	true
24	--enable-logging-fallout-warning	A Boolean value set to true or false that sets the developer option to see whether logging was on non-root processors (true). If set to true output will be appended to the *.DBG or *.PRT files.	false
25	--enable-opm-rst-file	A Boolean value set to true or false to write OPM specific data sets to the commercial simulators restart file to enable restart of an OPM Flow runs (true) by OPM Flow, or not to write the data (false).	false
26	--enable-storage-cache	A Boolean value set to true or false that turns on (true) or off (false) storing previous storage terms and avoid re-calculating them.	true

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
27	--enable-terminal-output	A Boolean value set to true or false that turns on (true) or off (false) high-level information about the simulation's progress to the terminal	true
28	--enable-tracer-model	A Boolean value set to true or false that turns on (true) or off (false) transport tracer calculations for when tracers have been declared in the input deck. Experimental - use with caution.	false
29	--enable-tuning	A Boolean value set to true or false that instructs OPM Flow to read the time stepping parameters from the TUNING - Numerical Tuning Control keyword in the input deck, if set to true. Note that only the first record of the TUNING keyword is processed.	false
30	--enable-vtk-output	A Boolean value set to true or false that turns on (true) or off (false) a global switch for writing VTK files.	false
31	--enable-well-operability-check	A Boolean value set to true or false that enables (true) checking of a well's operating status, or disables (false) the checking.	true
32	--enable-write-all-solutions	A Boolean value set to true or false that turns on (true) or off (false) the writing of all solutions to disk instead of only the ones for the report steps.	false
OPM Flow Specific Command Line Parameters			
33	--flow-linear-solver-verbosity	A positive integer value that defines the output from linear solver: 0 : No extra output, 1 : output per solution iteration, or 2 : output per iteration.	0
34	--flow-newton-max-iterations	A positive integer that defines the maximum number of Newton iterations per time step used by the simulator.	20
35	--flow-newton-min-iterations	A real positive value that sets the minimum number of Newton iterations per time step used by the simulator.	1
General eWoms/ebos Command Line Parameters			
36	--force-disable-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow to <u>not to print</u> the Fluid In-Place report after each report time step (true) or not (false).	false

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
37	--full-time-step-initially	A Boolean value set to true or false that instructs OPM Flow to always attempt to finish a report step using a single time step (true) or not (false).	false
38	--gpu-mode	A character string that defines which GPU option to use for the linear solver cusparseSolver or openclSolver. The parameter should be set to: 1) "none " for no use of the GPU solver; 2) "cusparse" to use the cusparseSolver solver; or 3) "opencl" for the openclSolver.	"none"
39	--ignore-keywords	A character string that defines a list of keywords which should be ignored by OPM Flow. The keyword string should be enclosed in quotes and each keyword separated by a colon, that is ':'.	""
40	--ilu-fillin-level	A positive integer value that sets the fill in level for the ILU pre-conditioner.	0
41	--ilu-redblack	A Boolean value set to true or false that instructs OPM Flow to use red-black partitioning for the ILU pre-conditioner. (true) or not (false).	false
42	--ilu-relaxation	A real positive double precision value that sets the relaxation factor of the linear solver's ILU pre-conditioner	0.9
43	--ilu-reorder-spheres	A Boolean value set to true or false that specifies OPM Flow to reorder the entries of the matrix in the red-black ILU pre-conditioner in spheres starting at an edge (true) or not (false) If false the original ordering is preserved in each color. Otherwise try to ensure D4 ordering (in a 2D structured grid, the diagonal elements are consecutive).	false
44	--initial-time-step-in-days	A real double precision value that sets the size of initial time step in days.	1.0
45	--linear-solver-ignore-convergence-failure	A Boolean value set to true or false that if set to true convergences failures in the linear solver are ignored. This option should be used with care, as the results may be unreliable.	false
46	--linear-solver-max-iter	A positive integer value that defines the maximum number of linear iterations.	200
47	--linear-solver-reduction	A real positive double precision value that sets the tolerance for the linear solver. The linear solver convergences when the residual is reduced sufficiently.	0.01

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
48	--linear-solver-require-full-sparsity-pattern	A Boolean value set to true or false that if set to true the simulator will produce the full sparsity pattern for the linear solver.	false
49	--linear-solver-restart	A positive integer value that sets the number of iterations after which GMRES is restarted.	40
50	--linear-solver	<p>A defined quoted character string that sets the configuration of the solver, valid values are:</p> <ol style="list-style-type: none"> 1) ilu0 (default), 2) cpr_quasiimpes, 3) cpr_trueimpes, or 4) a file specified by the LinearSolverConfigurationJsonFile parameter. <p>The default is "ilu0".</p> <p>Alternatively one can enter a character string enclosed in quotes that defines the filename of a JSON configuration file for the flexible linear solver system. In this case the file extension should be '.json'.</p>	"ilu0"
51	--matrix-add-well-contributions	A Boolean value set to true or false that if set to true explicitly specifies the influences of wells between cells in the Jacobian and pre-conditioner matrices.	false
52	--max-inner-iter-ms-wells	A positive integer value that defines the maximum number of inner iterations for multi-segment wells.	100
53	--max-inner-iter-wells	A positive integer value that defines the maximum number of inner iterations for standard wells.	50
54	--max-pressure-change-ms-wells	A real positive value that defines the maximum relative pressure change for a single iteration of the multi-segment well model.	1.0×10^6
55	--max-residual-allowed	A real positive value that sets the absolute maximum tolerance for residuals without cutting the time step size.	1.0×10^7
56	--max-single-precision-days	A real positive value that set the maximum time step size where single precision floating point arithmetic can be used solving for the linear systems of equations.	20.0
57	--max-strict-iter	A positive integer that sets the maximum number of Newton iterations before relaxed tolerances are used for the CNV convergence criterion.	0

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
58	--max-welleq-iter	A positive integer that defines the maximum number of iterations to determine the solution to the well equations.	30
59	--milu-variant	<p>A defined character string that specifies which variant of the modified-ILU preconditioner ought to be used. Possible variants are:</p> <ol style="list-style-type: none"> 1) ILU (default, plain ILU), 2) MILU_1 (lump diagonal with dropped row entries), 3) MILU_2 (lump diagonal with the sum of the absolute values of the dropped row entries), 4) MILU_3 (if diagonal is positive add sum of dropped row entries. Otherwise subtract them), 5) MILU_4 (if diagonal is positive add sum of dropped row entries. Otherwise do nothing. <p>The default is "ILU"</p>	"ILU"
60	--min-time-step-based-on-newton-iterations	The minimum time step size (in days for field and metric unit and hours for lab unit) can be reduced to based on newton iteration counts.	0
61	--min-time-step-before-shutting-problematic-wells-in-days	A real positive value that sets the minimum time step size in days for which problematic wells are not shut. Time steps below this value will result in problematic wells being shut-in by the simulator.	0.01
62	--newton-max-relax	A real positive value that sets the maximum relaxation factor of a Newton iteration used by the simulator.	0.5
63	--newton-relaxation-type	A character string that defines the type of relaxation used in Newton's method, default is dampen.	"dampen"
64	--opencl-ilu-reorder	<p>A defined character string that selects the reordering strategy for ILU for openclSolver and should be set to:</p> <ol style="list-style-type: none"> 1) "level_scheduling", or 2) "graph_coloring" <p>Note that "level_scheduling" behaves like Dune and cuspars, whereas "graph_coloring" is more aggressive and is likely to be faster, but is random-based and generally increases the number of linear solves and linear iterations significantly.</p>	"graph_coloring"

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
65	--opencl-platform-id	A positive integer that specifies the platform identification ("ID") for the openSolver. Use the "clinfo" command to determine valid IDs.	0
66	--output-dir	A character string that defines the directory to which OPM Flow is to write the commercial simulator compatible output files (restart, summary files etc.). The default value results in the files be written to the same directory as the input file.	""
67	--output-interval	A positive integer that specifies the number of report steps between two consecutive writes of restart data.	1
68	--output-mode	A defined character string that defines the output to the *.PRT and *.DEBUG files: 1) none: No output to the files. 2) log or false: Output logging information only. 3) all or true: Output everything. For example to just output logging information use: --output-mode="log" or --output-mode=false	"all"
69	--owner-cells-first	A Boolean value set to true or false that determines if the cells owned by a rank should be ordered before ghost/overlapping the cells (true), or not (false).	true
70	--parameter-file	A character string that defines the name of a parameter file which contains the simulator's set of run-time parameters, as listed in this table.	""
71	--pri-var-oscillation-threshold	A real positive value that defines the threshold value for the primary variable switching conditions after its meaning has switched to hinder oscillations.	1.0×10^{-5}
72	--print-parameters	A positive integer value that request that the <u>run</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file. 2 : Output to *.DBG and *.PRT files (default).	2

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
73	--print-properties	A positive integer value that request that the <u>compile</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file. 2 : Output to *.DBG and *.PRT files (default).	2
74	--project-saturations	A Boolean value set to true or false that determines if all the fluid saturations should be scaled to ensure the values are in the interval (0, 1), including runs that use solvents (true), or not (false).	false
75	--regularization-factor-msw	A real positive value that defines the "regularization factor" for multi-segment wells.	1.0
76	--relaxed-flow-tol-inner-iter-msw	A real positive value that sets the relaxation tolerance for the inner iteration for the multi-segment well <u>flow</u> solution	1.0
77	--relaxed-max-pv-fraction	A real positive value that defines The fraction of the pore volume of the reservoir where the volumetric error (CNV) may be violated during strict Newton iterations.	0.03
78	--relaxed-pressure-tol-inner-iter-msw	A real positive value that sets the relaxation tolerance for the inner iteration for the multi-segment well <u>pressure</u> solution.	50000
79	--scale-linear-system	A Boolean value set to true or false that switches on (true) or off (false) the scaling of linear system of equations according to the equation scale and primary variable types.	false
80	--sched-restart	A Boolean value that determines for a restart run if the case should initialize wells and groups from the historical SCHEDULE section (true), or from the well and group data on the restart file (false). Note that the commercial simulator always uses data from the restart file (false).	true
81	--serial-partitioning	A Boolean value that determines if partitioning for parallel runs on a single process (true), or not (false).	false
82	--solve-welleq-initially	A Boolean value set to true or false that switches on (true) or off (false) the solving of the well equations as a pre-processing step. Note that the well equations are always added to the full system and solved until converged.	true

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
83	--solver-growth-factor	<p>A real positive value that specifies the allowed value a time step can be increased by, subject to the maximum allowable time step size set by the <i>--flow-solver-max-time-step-in-days</i> parameter.</p> <p>For example, if the current time step has converged at 10 days and <i>--flow-solver-growth-factor</i> is set to the default value, then the next time step will be $2.0 * 10$ days, that is at 20 days.</p>	2.0
84	--solver-max-growth	<p>A real positive value that specifies the maximum allowed value a time step can be increased by after a report time step. subject to the maximum allowable time step size set by the <i>--flow-solver-max-time-step-in-days</i> parameter.</p>	3.0
85	--solver-max-restarts	<p>A positive integer that defines the number of allowed consecutive restarts (or time step chops) before the simulation is terminated.</p>	10
86	--solver-max-time-step-in-days	<p>A real positive double precision value that specifies the maximum allowed time step size in days.</p>	365
87	--solver-min-time-step	<p>A real positive double precision value that specifies the minimum size of a time step in seconds. If a step cannot converge without getting cut below this step size the simulator will stop.</p>	1.0×10^{-12}
88	--solver-restart-factor	<p>A real positive double precision value that sets the time step chop factor of the time step after a convergence failure.</p> <p>For example, if the current non-convergent time step is 30 days and <i>--flow-solver-restart-factor</i> is set to the default value, then the time step will be repeated using $0.33 * 30$ days as the time step, that is 9.9 days.</p>	0.33
89	--solver-verbosity	<p>A positive integer that specifies the "chattiness" of the non-linear solver.</p>	1
90	--strict-inner-iter-ms-wells	<p>A positive integer that specifies the number of inner iterations for multi-segment wells with strict tolerance.</p>	40
91	--threads-per-process	<p>A positive integer value that stipulates the maximum number of threads to be instantiated per process ('-1' means 'automatic').</p>	-1
92	--time-step-after-event-in-days	<p>A real double precision value that sets maximum allowed time step after an event; for example, when a well is open or closed etc.</p> <p>The default value of -1 means that events to do effect the time stepping.</p>	-1

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
93	--time-step-control	<p>A defined character string that defines the time stepping control algorithm and is set to one of the following:</p> <ol style="list-style-type: none"> 1) pid: PID controller based adaptive time step control as suggested by Turek and Kuzmin²¹⁶. 2) pid+iteration: Use PID and linear iteration numbers to guide the time step. 3) pid+newtoniteration: Use PID and non-linear iterations numbers to guide the time step. 4) Hardcoded: Use time steps supplied by user via the time-step-control-filename parameter. 	"pid+newtoniteration"
94	--time-step-control-decay-damping-factor	A real positive value that specifies the decay rate a <u>time step</u> can be decreased by after the number target iterations has been exceeded	1.0
95	--time-step-control-decay-rate	A real positive value that specifies the decay rate a <u>time step size</u> can be decreased by after the number of target iterations has been exceeded	0.75
96	--time-step-control-file-name	<p>A character string enclosed in quotes that specifies a filename where time steps are specified. The default is the character string timesteps</p> <p>For instance time steps can be generated by the ecl_summary application in libecl as per the following UNIX command line:</p> <pre>path_to_libecl_application s/ecl_summary DECK TIME > filename</pre> <p>Where:</p> <p>DECK is the name of the data deck you want to get the time steps from,</p> <p>TIME tells the application to return the timing for the run, and</p> <p>"filename" is the name of the file the times are piped to.</p>	"timesteps"
97	--time-step-control-growth-damping-factor	A real positive value that specifies the growth rate of the <u>time step increase</u> when the number of target iterations are undercut.	3.2
98	--time-step-control-growth-rate	A real positive value that specifies the growth rate of the <u>time step size</u> when the number of target iterations are undercut.	1.25

²¹⁶ Algebraic Flux Correction III. Incompressible Flow Problems. Uni Dortmund, Turek and Kuzmin, January, 2006 (DOI: 10.1007/3-540-27206-2_8)

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
99	--time-step-control-target-iterations	A positive integer that defines the number of linear iterations which the time step control scheme should aim for (if applicable).	30
100	--time-step-control-target-newton-iterations	A positive integer that specifies the number of Newtonian iterations which the time step control scheme should aim for (if applicable).	8
101	--time-step-control-tolerance	A real double precision value that sets the tolerance for PID (only used with the pid and pid+ options defined by the --time-step-control option).	0.1
102	--time-step-verbosity	A positive integer that specifies the "chattiness" during the time integration.	1
103	--tolerance-cnv	A real positive double precision value that specifies the maximum non-linear tolerance error. This is the local convergence tolerance (maximum of local saturation errors).	0.01
104	--tolerance-cnv-relaxed	A real positive value that defines the relaxed local convergence tolerance that applies for iterations after the iterations with the strict tolerance.	1.0
105	--tolerance-mb	A real positive double precision value that sets the maximum mass balance error, that is the tolerated mass balance error relative to total mass present.	1.0×10^{-6}
106	--tolerance-pressure-ms-wells	A real positive double precision value that specifies the tolerance for the pressure equations for multi-segment wells.	1000
107	--tolerance-well-control	A real positive double precision value that sets the maximum tolerance for the well control equations.	1.0×10^{-7}
108	--tolerance-wells	A real positive double precision value that defines the maximum non-linear error for the well equations.	1.0×10^{-4}
109	-update-equations-scaling	A Boolean value that switches on (true) or off (false) the updating of the scaling factors for mass balance equations during the simulation.	false
110	--use-gmres	A Boolean value that when set to true OPM Flow will use Generalized Minimal Residual ("GMRES") solver instead of Biconjugate Gradient Stabilized ("BiCGSTAB") as the linear solver within the Newton iterations.	false
111	--use-inner-iterations-ms-wells	A Boolean value that when set to true the simulator will use nested iterations for multi-segment wells.	true

OPM Flow 2021-04 Command Line Options			
No.	Variable Name	Description	Default
112	--use-inner-iterations-wells	A Boolean value that when set to true the simulator will use nested iterations for standard wells.	false
113	--use-multisegment-well	A Boolean value that when set to true the simulator will use the well model for multi-segment wells instead of the one for single-segment wells.	true
114	--use-update-stabilization	A Boolean value set to true or false that switches on (true) or off (false) the stabilized Newton option. This option may improve convergence for some cases.	true
115	--vtk-write-diffusion-coefficients	A Boolean value that switches on (true) or off (false) the output of the molecular diffusion coefficients to the VTK ²¹⁷ output files.	false
116	--vtk-write-effective-diffusion-coefficients	A Boolean value that switches on (true) or off (false) the output of the effective molecular diffusion coefficients for the medium to the VTK output files.	false
117	--vtk-write-tortuosities	A Boolean value that switches on (true) or off (false) the output of the tortuosity for each phase to the VTK output files.	false
118	--zoltan-imbalance-tol	A real positive that defines the tolerable imbalance of the load balancing provided by Zoltan package.	1.1
<p>Notes:</p> <ol style="list-style-type: none"> Cells colored green in the No. column are new command line parameters for this release. Similarly for the Default column, cells colored green indicate the default value has changed from the previous release. Items shaded in gray are considered to be developer options that should be used with caution as the values associated with these command line parameters are subject to change. VTK Graphics Command Line Parameters²¹⁸ set of commands are no longer listed via the basic help command line command: <pre>flow --help</pre> instead use: <pre>flow --help-all</pre> to get a list of supported command line Parameters. The --enable-vtk-output option above, if set to "true" will write out the data as stipulated by the compile options. One may need to compile the source code to obtain the desired output. As per all UNIX and LINUX based system the input is case dependent. If a parameter file is used to set one of the above parameters, the leading "--" should <u>not</u> be incorporated in the parameter file. 			

Table E.1: OPM Flow 2021-04 Command Line Options

²¹⁷ Virtualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

E.2 RUNNING OPM FLOW 2020-10

The command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from your terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA.

OPM Flow accepts command line options to control various aspects of the simulator's run time behavior, as described in the table below. To give a command line option use "key=value" syntax, with no spaces around the equals sign. It is also possible to put multiple options together in a parameter file. To do so, put one option on each line of the file with ".param" as the extension and pass that filename as a command line parameter to OPM Flow using:

```
flow --parameter-file=CASENAME.PARAM
```

to instruct OPM Flow to read the parameter file.

The available command line options for this release are listed in Table E.2.

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
General eWoms/ebos Command Line Parameters			
1	-h or --help	A character string that causes OPM Flow to print a help message that gives a brief description of the available command line parameters.	N/A
2	--bda-device-id	Choose device ID for cusparseSolver or openclSolver; use 'nvidia-smi' or 'clinfo' commands to determine valid IDs.	0
3	--continue-on-convergence-error	A Boolean value set to true or false that instructs the simulator to continue (true) with a non-converged solution instead of giving up (false) if it encounter a time step size smaller than the minimum time step size.	false
4	--cpr-max-ell-iter	A positive integer that sets the maximum number of iterations for the elliptic pressure part of the Constrained Pressure Residual ("CPR") solver.	20

²¹⁸ Virtualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
5	--cpr-reuse-setup	A positive integer that defines if the CPR solver should re-use the Amg setup. Valid options are: 0 : Recreate the pre-conditioner for every linear solve. 1 : Recreate once every time step. 2 : Recreate if last linear solve took more than 10 iterations. 3 : Never recreate.	0
6	--dbph-max-rel	A real positive value that sets maximum relative change of the bottom-hole pressure in a single iteration	1.0
7	--dp-max-rel	A real positive double precision value that sets the maximum allowed relative change of pressure per iteration.	0.3
8	--ds-max	A real positive double precision value that sets the maximum allowed change in saturation per iteration.	0.2
9	--dwell-fraction-max	A real positive double precision value that sets the maximum allowed change in well's volume fraction per iteration.	0.2
10	--ecl-deck-file-name	A character string that defines the name of the OPM Flow input file which contains the simulator's ECLIPSE formatted input deck to be simulated.	""
11	--ecl-enable-drift-compensation	A Boolean value set to true or false that enables (true) or disables (false) partial compensation of systematic mass losses via the source term of the next time step.	false
12	--ecl-output-double-precision	A Boolean value set to true or false that switches on (true) or off (false) double precision in restart files. Useful for 'perfect' restarts.	false
13	--ecl-output-interval	An integer value defining the number of report steps that ought to be skipped between two writes of restart files results.	-1
14	--ecl-strict-parsing	A Boolean value set to true or false that switches on (true) or off (false) strict parsing mode for parsing - all errors are collected before the application exists. Useful for debugging initial runs.	false
15	--edge-weights-method	A defined positive integer value that defines the edge-weighting strategy: 0 : For uniform, 1 : for trans, or 2 : for log(trans).	1

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
16	--enable-adaptive-time-stepping	A Boolean value set to true or false that turns on (true) or off (false) adaptive time stepping. If set to false the report time steps provided by the input deck are used.	true
17	--enable-async-ecl-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to restart and summary files in the commercial simulators format.	true
18	--enable-async-vtk-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to the VTK output files.	true
19	--enable-dry-run	<p>A Boolean value set to true or false that specifies if the simulation should actually run, (true) or just check the input deck (false).</p> <p>The option is equivalent to activating the NOSIM keyword in the RUNSPEC section of the input deck (see section 5.3.92 NOSIM – Activate the No Simulation Mode for Data File Checking).</p> <p>The default value of “auto” will use whatever is stipulated in the input deck via the NOSIM keyword.</p>	“auto”
20	--enable-ecl-output	A Boolean value set to true or false that specifies if the binary output files (restart, summary files, etc.) should be written in the commercial simulator’s format (true), or OPM Flow’s format (false).	true
21	--enable-logging-fallout-warning	A Boolean value set to true or false that sets the developer option to see whether logging was on non-root processors (true). If set to true output will be appended to the *.DBG or *.PRT files.	false
22	--enable-opm-rst-file	A Boolean value set to true or false to write OPM specific data sets to the commercial simulators restart file to enable restart of an OPM Flow runs (true), or not to write the data (false).	true
23	--enable-storage-cache	A Boolean value set to true or false that turns on (true) or off (false) storing previous storage terms and avoid re-calculating them.	true
24	--enable-terminal-output	A Boolean value set to true or false that turns on (true) or off (false) high-level information about the simulation's progress to the terminal	true

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
25	--enable-tracer-model	A Boolean value set to true or false that turns on (true) or off (false) transport tracer calculations for when tracers have been declared in the input deck. Experimental - use with caution.	false
26	--enable-tuning	A Boolean value set to true or false that instructs OPM Flow to read the time stepping parameters from the TUNING - Numerical Tuning Control keyword in the input deck, if set to true. Note that only the first record of the TUNING keyword is processed.	false
27	--enable-vtk-output	A Boolean value set to true or false that turns on (true) or off (false) a global switch for writing VTK files.	false
28	--enable-well-operability-check	A Boolean value set to true or false that enables (true) checking of a well's operating status, or disables (false) the checking.	true
29	--enable-write-all-solutions	A Boolean value set to true or false that turns on (true) or off (false) the writing of all solutions to disk instead of only the ones for the report steps.	false
OPM Flow Specific Command Line Parameters			
30	--flow-linear-solver-verbosity	A positive integer value that defines the output from linear solver: 0 : No extra output, 1 : output per solution iteration, or 2 : output per iteration.	0
31	--flow-newton-max-iterations	A positive integer that defines the maximum number of Newton iterations per time step used by the simulator.	20
32	--flow-newton-min-iterations	A real positive value that sets the minimum number of Newton iterations per time step used by the simulator.	1
General eWoms/ebos Command Line Parameters			
33	--force-disable-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow to <u>not to print</u> the Fluid In-Place report after each report time step (true) or not (false).	false
34	--full-time-step-initially	A Boolean value set to true or false that instructs OPM Flow to always attempt to finish a report step using a single time step (true) or not (false).	false

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
35	--gpu-mode	A character string that defines which GPU option to use for the linear solver <code>cusparseSolver</code> or <code>openclSolver</code> . The parameter should be set to: <ol style="list-style-type: none"> 1) "none" for no use of the GPU solver, 2) "cusparse" to use the <code>cusparseSolver</code> solver, or 3) "opencl" for the <code>openclSolver</code>. 	"none"
36	--ignore-keywords	A character string that defines a list of keywords which should be ignored by OPM Flow. The keyword string should be enclosed in quotes and each keyword separated by a colon, that is ':'.	""
37	--ilu-fillin-level	A positive integer value that sets the fill in level for the ILU pre-conditioner.	0
38	--ilu-redblack	A Boolean value set to true or false that instructs OPM Flow to use red-black partitioning for the ILU pre-conditioner. (true) or not (false).	false
39	--ilu-relaxation	A real positive double precision value that sets the relaxation factor of the linear solver's ILU pre-conditioner	0.9
40	--ilu-reorder-spheres	A Boolean value set to true or false specifies OPM Flow to reorder the entries of the matrix in the red-black ILU pre-conditioner in spheres starting at an edge (true) or not (false) If false the original ordering is preserved in each color. Otherwise try to ensure D4 ordering (in a 2D structured grid, the diagonal elements are consecutive).	false
41	--initial-time-step-in-days	A real double precision value that sets the size of initial time step in days.	1.0
42	--linear-solver-ignore-convergence-failure	A Boolean value set to true or false that if set to true convergences failures in the linear solver are ignored. This option should be used with care, as the results may be unreliable.	false
43	--linear-solver-max-iter	A positive integer value that defines the maximum number of linear iterations.	200
44	--linear-solver-reduction	A real positive double precision value that sets the tolerance for the linear solver. The linear solver convergences when the residual is reduced sufficiently.	0.01
45	--linear-solver-require-full-sparsity-pattern	A Boolean value set to true or false that if set to true the simulator will produce the full sparsity pattern for the linear solver.	false

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
46	--linear-solver-restart	A positive integer value that sets the number of iterations after which GMRES is restarted.	40
47	--linear-solver	<p>A defined quoted character string that sets the configuration of the solver; valid values are:</p> <ol style="list-style-type: none"> 1) ilu0 (default), 2) cpr_quasiimpes, 3) cpr_trueimpes, or 4) a file specified by the LinearSolverConfigurationJsonFile parameter. <p>The default is "ilu0".</p> <p>Alternatively one can enter a character string enclosed in quotes that defines the filename of a JSON configuration file for the flexible linear solver system. In this case the file extension should be '.json'.</p>	"ilu0"
48	--matrix-add-well-contributions	A Boolean value set to true or false that if set to true explicitly specifies the influences of wells between cells in the Jacobian and pre-conditioner matrices.	false
49	--max-inner-iter-ms-wells	A positive integer value that defines the maximum number of inner iterations for multi-segment wells.	100
50	--max-inner-iter-wells	A positive integer value that defines the maximum number of inner iterations for standard wells.	50
51	--max-pressure-change-ms-wells	A real positive value that defines the maximum relative pressure change for a single iteration of the multi-segment well model.	1.0×10^6
52	--max-residual-allowed	A real positive value that sets the absolute maximum tolerance for residuals without cutting the time step size.	1.0×10^7
53	--max-single-precision-days	A real positive value that set the maximum time step size where single precision floating point arithmetic can be used solving for the linear systems of equations.	20.0
54	--max-strict-iter	A positive integer that sets the maximum number of Newton iterations before relaxed tolerances are used for the CNV convergence criterion.	0
55	--max-welleq-iter	A positive integer that defines the maximum number of iterations to determine the solution to the well equations.	30

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
56	--milu-variant	<p>A defined character string that specifies which variant of the modified-ILU preconditioner ought to be used. Possible variants are:</p> <ol style="list-style-type: none"> 1) ILU (default, plain ILU), 2) MILU_1 (lump diagonal with dropped row entries), 3) MILU_2 (lump diagonal with the sum of the absolute values of the dropped row entries), 4) MILU_3 (if diagonal is positive add sum of dropped row entries. Otherwise subtract them), 5) MILU_4 (if diagonal is positive add sum of dropped row entries. Otherwise do nothing). <p>The default is ILU</p>	"ILU"
57	--min-time-step-before-shutting-problematic-wells-in-days	A real positive value that sets the minimum time step size in days for which problematic wells are not shut. Time steps below this value will result in problematic wells being shut-in by the simulator.	0.001
58	--newton-max-relax	A real positive value that sets the maximum relaxation factor of a Newton iteration used by the simulator.	0.5
59	--newton-relaxation-type	A character string that defines the type of relaxation used in Newton's method, default is dampen.	"dampen"
60	--opencl-platform-id	A positive integer that specifies the platform identification ("ID") for the openSolver. Use the "clinfo" command to determine valid IDs.	0
61	--output-dir	<p>A character string that defines the directory to which OPM Flow is to write the commercial simulator compatible output files (restart, summary files etc.).</p> <p>The default value results in the files be written to the same directory as the input file.</p>	""
62	--output-interval	A positive integer that specifies the number of report steps between two consecutive writes of restart data.	1

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
63	--output-mode	<p>A character string that defines the output to the *.PRT and *.DEBUG files:</p> <ul style="list-style-type: none"> 1) none: No output to the files. 2) log or false: Output logging information only. 3) all or true: Output everything. <p>For example to just output logging information use:</p> <p style="color: red;">--output-mode=log</p> <p>or</p> <p style="color: red;">--output-mode=false</p>	"all"
64	--owner-cells-first	A Boolean value set to true or false that determines if the cells owned by a rank should be ordered before ghost/overlapping the cells (true), or not (false).	true
65	--parameter-file	A character string that defines the name of a parameter file which contains the simulator's set of run-time parameters, as listed in this table.	""
66	--pri-var-oscillation-threshold	A real positive value that defines the threshold value for the primary variable switching conditions after its meaning has switched to hinder oscillations.	1×10^{-5}
67	--print-parameters	<p>A positive integer value that request that the <u>run</u> time parameters be printed at the start of the run:</p> <ul style="list-style-type: none"> 0 : No output to the files. 1 : Output *.DBG file. 2 : Output to *.DBG and *.PRT files (default). 	2
68	--print-properties	<p>A positive integer value that request that the <u>compile</u> time parameters be printed at the start of the run:</p> <ul style="list-style-type: none"> 0 : No output to the files. 1 : Output *.DBG file. 2 : Output to *.DBG and *.PRT files (default). 	2
69	--project-saturations	A Boolean value set to true or false that determines if all the fluid saturations should be scaled to ensure the values are in the interval (0, 1), including runs that use solvents (true), or not (false).	false
70	--regularization-factor-msw	A real positive value that defines the "regularization factor" for multi-segment wells.	1.0
71	--relaxed-flow-tol-inner-iter-msw	A real positive value that sets the relaxation tolerance for the inner iteration for the multi-segment well <u>flow</u> solution	1.0

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
72	--relaxed-max-pv-fraction	A real positive value that defines The fraction of the pore volume of the reservoir where the volumetric error (CNV) may be violated during strict Newton iterations.	0.03
73	--relaxed-pressure-tol-inner-iter-msw	A real positive value that sets the relaxation tolerance for the inner iteration for the multi-segment well <u>pressure</u> solution.	50000
74	--scale-linear-system	A Boolean value set to true or false that switches on (true) or off (false) the scaling of linear system of equations according to the equation scale and primary variable types.	false
75	--sched-restart	A Boolean value that determines for a restart run if the case should initialize wells and groups from the historical SCHEDULE section (true), or from the well and group data on the restart file (false). Note that the commercial simulator always uses data from the restart file (false).	true
76	--serial-partitioning	A Boolean value that determines if partitioning for parallel runs on a single process (true), or not (false).	false
77	--solve-welleq-initially	A Boolean value set to true or false that switches on (true) or off (false) the solving of the well equations as a pre-processing step. Note that the well equations are always added to the full system and solved until converged.	true
78	--solver-growth-factor	A real positive value that specifies the allowed value a time step can be increased by, subject to the maximum allowable time step size set by the <code>--flow-solver-max-time-step-in-days</code> parameter. For example, if the current time step has converged at 10 days and <code>--flow-solver-growth-factor</code> is set to the default value, then the next time step will be $2.0 * 10$ days, that is at 20 days.	2.0
79	--solver-max-growth	A real positive value that specifies the maximum allowed value a time step can be increased by after a report time step. subject to the maximum allowable time step size set by the <code>--flow-solver-max-time-step-in-days</code> parameter.	3.0
80	--solver-max-restarts	A positive integer that defines the number of allowed consecutive restarts (or time step chops) before the simulation is terminated.	10

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
81	--solver-max-time-step-in-days	A real positive double precision value that specifies the maximum allowed time step size in days.	365
82	--solver-min-time-step	A real positive double precision value that specifies the minimum size of a time step in seconds. If a step cannot converge without getting cut below this step size the simulator will stop.	0.0
83	--solver-restart-factor	A real positive double precision value that sets the time step chop factor of the time step after a convergence failure. For example, if the current non-convergent time step is 30 days and --flow-solver-restart-factor is set to the default value, then the time step will be repeated using $0.33 * 30$ days as the time step, that is 9.9 days.	0.33
84	--solver-verbosity	A positive integer that specifies the "chattiness" of the non-linear solver.	1
85	--strict-inner-iter-ms-wells	A positive integer that specifies the number of inner iterations for multi-segment wells with strict tolerance.	40
86	--threads-per-process	A positive integer value that stipulates the maximum number of threads to be instantiated per process ('-1' means 'automatic').	-1
87	--time-step-after-event-in-days	A real double precision value that sets maximum allowed time step after an event; for example, when a well is open or closed etc. The default value of -1 means that events to do effect the time stepping.	-1
88	--time-step-control	A defined character string that defines the time stepping control algorithm and is set to one of the following: <ol style="list-style-type: none"> 1) pid: PID controller based adaptive time step control as suggested by Turek and Kuzmin²¹⁹. 2) pid+iteration: Use PID and linear iteration numbers to guide the time step. 3) pid+newtoniteration: Use PID and non-linear iterations numbers to guide the time step. 4) Hardcoded: Use time steps supplied by user via the time-step-control-filename parameter. 	pid

²¹⁹ Algebraic Flux Correction III. Incompressible Flow Problems. Uni Dortmund, Turek and Kuzmin, January, 2006 (DOI: 10.1007/3-540-27206-2_8)

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
89	--time-step-control-decay-damping-factor	A real positive value that specifies the decay rate a <u>time step</u> can be decreased by after the number target iterations has been exceeded	1.0
90	--time-step-control-decay-rate	A real positive value that specifies the decay rate a <u>time step size</u> can be decreased by after the number of target iterations has been exceeded	0.75
91	--time-step-control-file-name	<p>A character string enclosed in quotes that specifies a filename where time steps are specified. The default is the character string timesteps</p> <p>For instance time steps can be generated by the ecl_summary application in libecl as per the following UNIX command line:</p> <pre>path_to_libecl_application s/ecl_summary DECK TIME > filename</pre> <p>Where:</p> <p>DECK is the name of the data deck you want to get the time steps from,</p> <p>TIME tells the application to return the timing for the run, and</p> <p>"filename" is the name of the file the times are piped to.</p>	"timesteps"
92	--time-step-control-growth-damping-factor	A real positive value that specifies the growth rate of the <u>time step increase</u> when the number of target iterations are undercut.	0.833
93	--time-step-control-growth-rate	A real positive value that specifies the growth rate of the <u>time step size</u> when the number of target iterations are undercut.	1.25
94	--time-step-control-target-iterations	A positive integer that defines the number of linear iterations which the time step control scheme should aim for (if applicable).	30
95	--time-step-control-target-newton-iterations	A positive integer that specifies the number of Newtonian iterations which the time step control scheme should aim for (if applicable).	8
96	--time-step-control-tolerance	A real double precision value that sets the tolerance for PID (only used with the pid and pid+ options defined by the --time-step-control option).	0.1
97	--time-step-verbosity	A positive integer that specifies the "chattiness" during the time integration.	1

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
98	--tolerance-cnv	A real positive double precision value that specifies the maximum non-linear tolerance error. This is the local convergence tolerance (maximum of local saturation errors).	0.01
99	--tolerance-cnv-relaxed	A real positive value that defines the relaxed local convergence tolerance that applies for iterations after the iterations with the strict tolerance.	1.0
100	--tolerance-mb	A real positive double precision value that sets the maximum mass balance error, that is the tolerated mass balance error relative to total mass present.	1.0×10^{-6}
101	--tolerance-pressure-ms-wells	A real positive double precision value that specifies the tolerance for the pressure equations for multi-segment wells.	1000
102	--tolerance-well-control	A real positive double precision value that sets the maximum tolerance for the well control equations.	1.0×10^{-7}
103	--tolerance-wells	A real positive double precision value that defines the maximum non-linear error for the well equations.	1.0×10^{-4}
104	-update-equations-scaling	A Boolean value set to true or false that switches on (true) or off (false) the updating of the scaling factors for mass balance equations during the simulation.	false
105	--use-gmres	A Boolean value set to true or false that when set to true OPM Flow will use Generalized Minimal Residual ("GMRES") solver instead of Biconjugate Gradient Stabilized ("BiCGSTAB") as the linear solver within the Newton iterations.	false
106	--use-inner-iterations-ms-wells	A Boolean value set to true or false that when set to true the simulator will use nested iterations for multi-segment wells.	true
107	--use-inner-iterations-wells	A Boolean value set to true or false that when set to true the simulator will use nested iterations for standard wells.	false
108	--use-multisegment-well	A Boolean value set to true or false that when set to true the simulator will use the well model for multi-segment wells instead of the one for single-segment wells.	false
109	--use-update-stabilization	A Boolean value set to true or false that switches on (true) or off (false) the stabilized Newton option. This option may improve convergence for some cases.	true

OPM Flow 2020-10 Command Line Options			
No.	Variable Name	Description	Default
	VTK Graphics Command Line Parameters²²⁰ This set of commands are no longer supported from the command line interface but can be assessed when compiling OPM Flow from source. The <code>--enable-vtk-output</code> option above, if set to “true” will write out the data as stipulated by the compile options.		
Notes: 1) Cells colored green in the No. column are new command line parameters for this release. 2) Items shaded in gray are considered to be developer options that should be used with caution as the values associated with these command line parameters are subject to change. 3) As per all UNIX and LINUX based system the input is case dependent. 4) If a parameter file is used to set one of the above parameters, the leading “--” should <u>not</u> be incorporated in the parameter file.			

Table E.2: OPM Flow 2020-10 Command Line Options

²²⁰ Virtualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

E.3 RUNNING OPM FLOW 2020-04

The command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from your terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA.

OPM Flow accepts command line options to control various aspects of the simulator's run time behavior, as described in the table below. To give a command line option use "key=value" syntax, with no spaces around the equals sign. It is also possible to put multiple options together in a parameter file. To do so, put one option on each line of the file with ".param" as the extension and pass that filename as a command line parameter to OPM Flow using:

```
flow --parameter-file=CASENAME.PARAM
```

to instruct OPM Flow to read the parameter file.

The available command line options for this release are listed in Table E.3.

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
General eWoms/ebos Command Line Parameters			
1	-h or --help	A character string that causes OPM Flow to print a help message that gives a brief description of the available command line parameters.	N/A
2	--continue-on-convergence-error	A Boolean value set to true or false that that instructs the simulator to continue (true) with a non-converged solution instead of giving up (false) if it encounter a time step size smaller than the minimum time step size.	false
3	--cpr-ell-solvetype	A positive integer that defines the solver type of the elliptic pressure solver: 0 : bicgstab, 1 : cg, 2 : only amg preconditioner.	0
4	--cpr-max-ell-iter	A positive integer that sets the maximum number of iterations for the elliptic pressure part of the Constrained Pressure Residual ("CPR") solver.	20
5	--cpr-reuse-setup	A positive integer that defines if the CPR solver should re-use the Amg setup.	0

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
6	--cpr-solver-verbose	A defined positive integer value that defines the output from CPR solver: 0 : no output 1 : output summary of inner linear solver 2 : output extensive information about inner linear solve, including setup information	0
7	--cpr-use-drs	A Boolean value set to true or false that switches on (true) or off (false) the use of dynamic row sum weights in the CPR solver.	false
8	--dbph-max-rel	A real positive value that sets maximum relative change of the bottom-hole pressure in a single iteration	1.0
9	--dp-max-rel	A real positive double precision value that sets the maximum allowed relative change of pressure per iteration.	0.3
10	--ds-max	A real positive double precision value that sets the maximum allowed change in saturation per iteration.	0.2
11	--dwell-fraction-max	A real positive double precision value that sets the maximum allowed change in well's volume fraction per iteration.	0.2
12	--ecl-deck-file-name	A character string that defines the name of the OPM Flow input file which contains the simulator's ECLIPSE formatted input deck to be simulated.	""
13	--ecl-enable-drift-compensation	A Boolean value set to true or false that enables (true) or disables (false) partial compensation of systematic mass losses via the source term of the next time step.	false
14	--ecl-output-double-precision	A Boolean value set to true or false that switches on (true) or off (false) double precision in restart files. Useful for 'perfect' restarts.	false
15	--ecl-output-interval	An integer value defining the number of report steps that ought to be skipped between two writes of restart files results.	-1
16	--ecl-strict-parsing	A Boolean value set to true or false that switches on (true) or off (false) strict parsing mode for parsing - all errors are collected before the application exists. Useful for debugging initial runs.	false

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
17	--edge-weights-method	A defined positive integer value that defines the edge-weighting strategy: 0 : for uniform, 1 : for trans, or 2 : for log(trans).	1
18	--enable-adaptive-time-stepping	A Boolean value set to true or false that turns on (true) or off (false) adaptive time stepping. If set to false the report time steps provided by the input deck are used.	true
19	--enable-async-ecl-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to restart and summary files in the commercial simulators format.	true
20	--enable-async-vtk-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to the VTK output files.	true
21	--enable-dry-run	A Boolean value set to true or false that specifies if the simulation should actually run, (true) or just check the input deck (false). This option is equivalent to activating the NOSIM keyword in the RUNSPEC section of the input deck (see section 5.3.92 NOSIM – Activate the No Simulation Mode for Data File Checking).	true
22	--enable-ecl-output	A Boolean value set to true or false that specifies if the binary output files (restart, summary files, etc.) should be written in the commercial simulator's format (true), or OPM Flow's format (false).	true
23	--enable-logging-fallout-warning	A Boolean value set to true or false that sets the developer option to see whether logging was on non-root processors (true). If set to true output will be appended to the *.DBG or *.PRT files.	false
24	--enable-opm-rst-file	A Boolean value set to true or false to write OPM specific data sets to the commercial simulators restart file to enable restart of an OPM Flow runs (true), or not to write the data (false).	true
25	--enable-storage-cache	A Boolean value set to true or false that turns on (true) or off (false) storing previous storage terms and avoid re-calculating them.	true

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
26	--enable-terminal-output	A Boolean value set to true or false that turns on (true) or off (false) high-level information about the simulation's progress to the terminal	true
27	--enable-tracer-mode	A Boolean value set to true or false that turns on (true) or off (false) transport tracer calculations for when tracers have been declared in the input deck. Experimental - use with caution.	false
28	--enable-tuning	A Boolean value set to true or false that instructs OPM Flow to read the time stepping parameters from the TUNING - Numerical Tuning Control keyword in the input deck, if set to true. Note that only the first record of the TUNING keyword is processed.	false
29	--enable-vtk-output	A Boolean value set to true or false that turns on (true) or off (false) a global switch for writing VTK files.	false
30	--enable-well-operability-check	A Boolean value set to true or false that enables (true) checking of a well's operating status, or disables (false) the checking.	true
31	--enable-write-all-solutions	A Boolean value set to true or false that turns on (true) or off (false) the writing of all solutions to disk instead of only the ones for the report steps.	false
OPM Flow Specific Command Line Parameters			
32	--flow-linear-solver-verbosity	A positive integer value that defines the output from linear solver: 0 : no extra output 1 : output per solution iteration 2 : output per iteration	0
33	--flow-newton-max-iterations	A positive integer that defines the maximum number of Newton iterations per time step used by the simulator.	20
34	--flow-newton-min-iterations	A real positive value that sets the minimum number of Newton iterations per time step used by the simulator.	1
General eWoms/ebos Command Line Parameters			
35	--force-disable-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow to <u>not to print</u> the Fluid In-Place report after each report time step (true) or not (false).	false

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
36	--full-time-step-initially	A Boolean value set to true or false that instructs OPM Flow to always attempt to finish a report step using a single time step (true) or not (false).	false
37	--ignore-keywords	A character string that defines a list of keywords which should be ignored by OPM Flow. The keyword string should be enclosed in quotes and each keyword separated by a colon, that is ':'.	""
38	--ilu-fillin-level	A positive integer value that sets the fill in level for the ILU pre-conditioner.	0
39	--ilu-redblack	A Boolean value set to true or false that instructs OPM Flow to use red-black partitioning for the ILU pre-conditioner. (true) or not (false).	false
40	--ilu-relaxation	A real positive double precision value that sets the relaxation factor of the linear solver's ILU pre-conditioner	0.9
41	--ilu-reorder-spheres	A Boolean value set to true or false specifies OPM Flow to reorder the entries of the matrix in the red-black ILU pre-conditioner in spheres starting at an edge (true) or not (false) If false the original ordering is preserved in each color. Otherwise try to ensure D4 ordering (in a 2D structured grid, the diagonal elements are consecutive).	false
42	--initial-time-step-in-days	A real double precision value that sets the size of initial time step in days.	1.0
43	--linear-solver-configuration	A defined quoted character string that sets the configuration of the solver; valid values are: 1) ilu0 (default), 2) cpr_quasiimpes, 3) cpr_trueimpes, or 4) a file specified by the LinearSolverConfigurationJsonFile parameter. The default is "ilu0".	ilu0
44	--linear-solver-configuration-json-file	A character string enclosed in quotes that defines the filename of a JSON configuration file for the flexible linear solver system.	none
45	--linear-solver-ignore-convergence-failure	A Boolean value set to true or false that if set to true convergences failures in the linear solver are ignored. This option should be used with care, as the results may be unreliable.	false

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
46	--linear-solver-max-iter	A positive integer value that defines the maximum number of linear iterations.	200
47	--linear-solver-reduction	A real positive double precision value that sets the tolerance for the linear solver. The linear solver convergences when the residual is reduced sufficiently.	0.01
48	--linear-solver-require-full-sparsity-pattern	A Boolean value set to true or false that if set to true the simulator will produce the full sparsity pattern for the linear solver.	false
49	--linear-solver-restart	A positive integer value that sets the number of iterations after which GMRES is restarted.	40
50	--matrix-add-well-contributions	A Boolean value set to true or false that if set to true explicitly specifies the influences of wells between cells in the Jacobian and pre-conditioner matrices.	false
51	--max-inner-iter-ms-wells	A positive integer value that defines the maximum number of inner iterations for multi-segment wells.	100
52	--max-pressure-change-ms-wells	A real positive value that defines the maximum relative pressure change for a single iteration of the multi-segment well model.	1.0×10^6
53	--max-residual-allowed	A real positive value that sets the absolute maximum tolerance for residuals without cutting the time step size.	1.0×10^7
54	--max-single-precision-days	A real positive value that set the maximum time step size where single precision floating point arithmetic can be used solving for the linear systems of equations.	20.0
55	--max-strict-iter	A positive integer that sets the maximum number of Newton iterations before relaxed tolerances are used for the CNV convergence criterion.	8
56	--max-welleq-iter	A positive integer that defines the maximum number of iterations to determine the solution to the well equations.	30

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
57	--milu-variant	<p>A defined character string that specifies which variant of the modified-ILU preconditioner ought to be used. Possible variants are:</p> <ol style="list-style-type: none"> 1) ILU (default, plain ILU), 2) MILU_1 (lump diagonal with dropped row entries), 3) MILU_2 (lump diagonal with the sum of the absolute values of the dropped row entries), 4) MILU_3 (if diagonal is positive add sum of dropped row entries. Otherwise subtract them), 5) MILU_4 (if diagonal is positive add sum of dropped row entries. Otherwise do nothing). <p>The default is ILU</p>	ILU
58	--min-time-step-before-shutting-problematic-wells-in-days	A real positive value that sets the minimum time step size in days for which problematic wells are not shut. Time steps below this value will result in problematic wells being shut-in by the simulator.	0.25
59	--newton-max-relax	A real positive value that sets the maximum relaxation factor of a Newton iteration used by the simulator.	0.5
60	--newton-relaxation-type	A character string that defines the type of relaxation used in Newton's method, default is dampen.	dampen
61	--output-dir	<p>A character string that defines the directory to which OPM Flow is to write the commercial simulator compatible output files (restart, summary files etc.).</p> <p>The default value results in the files be written to the same directory as the input file.</p>	""
62	--output-interval	A positive integer that specifies the number of report steps between two consecutive writes of restart data.	1
63	--output-mode	<p>A character string that defines the output to the *.PRT and *.DEBUG files:</p> <ol style="list-style-type: none"> 1) none: No output to the files. 2) log or false: Output logging information only. 3) all or true: Output everything. <p>For example to just output logging information use:</p> <p>--output-mode=log</p> <p>or</p> <p>--output-mode=false</p>	all

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
64	--owner-cells-first	A Boolean value set to true or false that determines if the cells owned by a rank should be ordered before ghost/overlapping the cells (true), or not (false).	true
65	--parameter-file	A character string that defines the name of a parameter file which contains the simulator's set of run-time parameters, as listed in this table.	""
66	--pri-var-oscillation-threshold	A real positive value that defines the threshold value for the primary variable switching conditions after its meaning has switched to hinder oscillations.	1×10^{-5}
67	--print-parameters	A positive integer value that request that the <u>run</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file 2 : Output to *.DBG and *.PRT files (default)	2
68	--print-properties	A positive integer value that request that the <u>compile</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file 2 : Output to *.DBG and *.PRT files (default)	2
69	--scale-linear-system	A Boolean value set to true or false that switches on (true) or off (false) the scaling of linear system of equations according to the equation scale and primary variable types.	false
70	--sched-restart	A Boolean value that determines for a restart run if the case should initialize wells and groups from the historical SCHEDULE section (true), or from the well and group data on the restart file (false). Note that the commercial simulator always uses data from the restart file (false).	true
71	--solve-welleq-initially	A Boolean value set to true or false that switches on (true) or off (false) the solving of the well equations as a pre-processing step. Note that the well equations are always added to the full system and solved until converged.	true

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
72	--solver-growth-factor	<p>A real positive value that specifies the allowed value a time step can be increased by, subject to the maximum allowable time step size set by the <code>--flow-solver-max-time-step-in-days</code> parameter.</p> <p>For example, if the current time step has converged at 10 days and <code>--flow-solver-growth-factor</code> is set to the default value, then the next time step will be $2.0 * 10$ days, that is at 20 days.</p>	2.0
73	--solver-max-growth	A real positive value that specifies the maximum allowed value a time step can be increased by after a report time step. subject to the maximum allowable time step size set by the <code>--flow-solver-max-time-step-in-days</code> parameter.	3.0
74	--solver-max-restarts	A positive integer that defines the number of allowed consecutive restarts (or time step chops) before the simulation is terminated.	10
75	--solver-max-time-step-in-days	A real positive double precision value that specifies the maximum allowed time step size in days.	365
76	--solver-min-time-step	A real positive double precision value that specifies the minimum size of a time step in seconds. If a step cannot converge without getting cut below this step size the simulator will stop.	0.0
77	--solver-restart-factor	<p>A real positive double precision value that sets the time step chop factor of the time step after a convergence failure.</p> <p>For example, if the current non-convergent time step is 30 days and <code>--flow-solver-restart-factor</code> is set to the default value, then the time step will be repeated using $0.33 * 30$ days as the time step, that is 9.9 days.</p>	0.33
78	--solver-verbosity	A positive integer that specifies the "chattiness" of the non-linear solver.	1

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
79	--system-strategy	<p>A character string that defines the strategy for reformulating and scaling linear system of equations and is set to one of the following:</p> <ol style="list-style-type: none"> 1) none: No scaling - should not be used with the CPR solver. 2) original: Use weights that are equivalent to no scaling - should not be used with the CPR solver. 3) simple: Form pressure equation as simple sum of conservation equations. 4) quasiimpes: Form pressure equation based on diagonal block. 5) trueimpes: Form pressure equation based on linearization of the accumulation term. 	none
80	--threads-per-process	A positive integer value that stipulates the maximum number of threads to be instantiated per process ('-1' means 'automatic').	-1
81	--time-step-after-event-in-days	<p>A real double precision value that sets maximum allowed time step after an event; for example, when a well is open or closed etc.</p> <p>The default value of -1 means that events to do effect the time stepping.</p>	-1
82	--time-step-control	<p>A character string that defines the time stepping control algorithm and is set to one of the following:</p> <ol style="list-style-type: none"> 1) pid: PID controller based adaptive time step control as suggested by Turek and Kuzmin²²¹. 2) pid+iteration: Use PID and linear iteration numbers to guide the time step. 3) pid+newtoniteration: Use PID and non-linear iterations numbers to guide the time step. 4) Hardcoded: Use time steps supplied by user via the time-step-control-filename parameter. 	pid
83	--time-step-control-decay-rate	A real positive value that specifies the decay rate a time step can be decreased by after the number of target iterations has been exceeded	0.75

²²¹ Algebraic Flux Correction III. Incompressible Flow Problems. Uni Dortmund, Turek and Kuzmin, January, 2006 (DOI: 10.1007/3-540-27206-2_8)

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
84	--time-step-control-file-name	<p>A character string enclosed in quotes that specifies a filename where time steps are specified. The default is the character string timesteps</p> <p>For instance time steps can be generated by the ecl_summary application in libecl as per the following UNIX command line:</p> <pre>path_to_libecl_application s/ecl_summary DECK TIME > filename</pre> <p>Where:</p> <p>DECK is the name of the data deck you want to get the time steps from,</p> <p>TIME tells the application to return the timing for the run, and</p> <p>"filename" is the name of the file the times are piped to.</p>	timesteps
85	--time-step-control-growth-rate	A real positive value that specifies the growth rate of the time step size of the number of target iterations is undercut.	1.25
86	--time-step-control-target-iterations	A positive integer that defines the number of linear iterations which the time step control scheme should aim for (if applicable).	30
87	--time-step-control-target-newton-iterations	A positive integer that specifies the number of Newtonian iterations which the time step control scheme should aim for (if applicable).	8
88	--time-step-control-tolerance	A real double precision value that sets the tolerance for PID (only used with the pid and pid+ options defined by the --time-step-control option).	0.1
89	--time-step-verbosity	A positive integer that specifies the "chattiness" during the time integration.	1
90	--tolerance-cnv	A real positive double precision value that specifies the maximum non-linear tolerance error. This is the local convergence tolerance (maximum of local saturation errors).	0.01
91	--tolerance-cnv-relaxed	A real positive value that defines the relaxed local convergence tolerance that applies for iterations after the iterations with the strict tolerance.	1.0×10^9
92	--tolerance-mb	A real positive double precision value that sets the maximum mass balance error, that is the tolerated mass balance error relative to total mass present.	1.0×10^6

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
93	--tolerance-pressure-ms-wells	A real positive double precision value that specifies the tolerance for the pressure equations for multi-segment wells.	1000
94	--tolerance-well-control	A real positive double precision value that sets the maximum tolerance for the well control equations.	1.0×10^{-7}
95	--tolerance-wells	A real positive double precision value that defines the maximum non-linear error for the well equations.	0.0001
96	-update-equations-scaling	A Boolean value set to true or false that switches on (true) or off (false) the updating of the scaling factors for mass balance equations during the simulation.	false
97	--use-amg	A Boolean value set to true or false that if set to true OPM Flow will use AMG as the linear solver's pre-conditioner	false
98	--use-cpr	A Boolean value set to true or false that when set to true OPM Flow will use CPR as the linear solver's pre-conditioner	false
99	--use-gmres	A Boolean value set to true or false that when set to true OPM Flow will use Generalized Minimal Residual ("GMRES") solver instead of Biconjugate Gradient Stabilized ("BiCGSTAB") as the linear solver within the Newton iterations.	false
100	--use-gpu	A Boolean value that when set to true will result in OPM Flow using the Graphics Processing Unit ("GPU") cusparseSolver as the linear solver.	false
101	--use-inner-iterations-ms-wells	A Boolean value set to true or false that when set to true the simulator will use nested iterations for multi-segment wells.	true
102	--use-multisegment-well	A Boolean value set to true or false that when set to true the simulator will use the well model for multi-segment wells instead of the one for single-segment wells.	false
103	--use-update-stabilization	A Boolean value set to true or false that switches on (true) or off (false) the stabilized Newton option. This option may improve convergence for some cases.	true
VTK Graphics Command Line Parameters ²²²			

²²² Virtualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
104	--vtk-write-average-molar-masses	A Boolean value set to true or false that turns on (true) or off (false) the output of the average phase mass in the VTK output files.	false
105	--vtk-write-densities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase densities to the VTK output files	true
106	--vtk-write-dof-index	A Boolean value set to true or false that turns on (true) or off (false) the output of the tracer concentrations to the VTK output files.	false
107	--vtk-write-ecl-tracer-concentration	A Boolean value set to true or false that turns on (true) or off (false) the output of the index of the degrees of freedom to the VTK output files.	false
108	--vtk-write-extrusion-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the of the extrusion factor of the degrees of freedom to the VTK output files.	false
109	--vtk-write-filter-velocities	A Boolean value set to true or false that turns on (true) or off (false) the output of the filter velocities of the phases in the VTK output files.	false
110	--vtk-write-fugacities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component fugacities to the VTK output files.	false
111	--vtk-write-fugacity-coeffs	A Boolean value set to true or false that turns on (true) or off (false) the output of the component fugacity coefficients to the VTK output files.	false
112	--vtk-write-gas-dissolution-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas dissolution factor (Rs) of the observed oil to the VTK output files.	false
113	--vtk-write-gas-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas formation volume factor (Bg) to the VTK output files.	false
114	--vtk-write-gas-saturation-pressure	A Boolean value set to true or false that turns on (true) or off (false) the output of the saturation pressure of gas (Pg,sat) to the VTK output files'	false
115	--vtk-write-intrinsic-permeabilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the intrinsic permeability to the VTK output files.	false
116	--vtk-write-mass-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the mass fractions to the VTK output files.	false

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
I17	--vtk-write-mobilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase mobilities to the VTK output files.	false
I18	--vtk-write-molarities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component molarities to the VTK output files.	false
I19	--vtk-write-mole-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the mole fractions to the VTK output files.	true
I20	--vtk-write-oil-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil formation volume factor (Bo) to the VTK output files.	false
I21	--vtk-write-oil-saturation-pressure	A Boolean value set to true or false that turns on (true) or off (false) the output of the saturation pressure of oil (Po,sat) to the VTK output files.	false
I22	--vtk-write-oil-vaporization-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil vaporization factor (Rv) of the observed gas to the VTK output files.	false
I23	--vtk-write-porosity	A Boolean value set to true or false that turns on (true) or off (false) the output of the porosity array to the VTK output files.	true
I24	--vtk-write-potential-gradients	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase pressure potential gradients to the VTK output files.	false
I25	--vtk-write-pressures	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase pressures to the VTK output files.	true
I26	--vtk-write-primary-vars	A Boolean value set to true or false that turns on (true) or off (false) the output of the primary variables to the VTK output files.	false
I27	--vtk-write-primary-vars-meaning	A Boolean value set to true or false that turns on (true) or off (false) the output of the how the primary variables should be interpreted to the VTK output files.	false
I28	--vtk-write-process-rank	A Boolean value set to true or false that turns on (true) or off (false) the output of the MPI process rank to the VTK output files.	false
I29	--vtk-write-relative-permeabilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase relative permeabilities to the VTK output files.	true

OPM Flow 2020-04 Command Line Options			
No.	Variable Name	Description	Default
130	--vtk-write-saturated-gas-oil-vaporization-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil vaporization factor ($R_{v,sat}$) of oil saturated gas to the VTK output files.	false
131	--vtk-write-saturated-oil-gas-dissolution-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas dissolution factor ($R_{s,sat}$) of gas saturated oil to the VTK output files.	false
132	--vtk-write-saturation-ratios	A Boolean value set to true or false that turns on (true) or off (false) the output of the ratio of the actually and maximum dissolved component of the mixture to the VTK output files	false
133	--vtk-write-saturations	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase saturations to the VTK output files.	true
134	--vtk-write-temperature	A Boolean value set to true or false that turns on (true) or off (false) the output of the temperature array to the VTK output files.	true
135	--vtk-write-total-mass-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the total mass fractions to the VTK output files.	false
136	--vtk-write-total-mole-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the total mole fractions to the VTK output files.	false
137	--vtk-write-viscosities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component phase viscosities to the VTK output files.	false
138	--vtk-write-water-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil formation volume factor (B_o) to the VTK output files.	false
Notes: <ol style="list-style-type: none"> Cells colored green in the No. column are new command line parameters for this release. Items shaded in gray are considered to be developer options that should be used with caution as the values associated with these command line parameters are subject to change. As per all UNIX and LINUX based system the input is case dependent. If a parameter file is used to set one of the above parameters, the leading "--" should <u>not</u> be incorporated in the parameter file. 			

Table E.3: OPM Flow 2020-04 Command Line Options

E.4 RUNNING OPM FLOW 2019-10

The command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from your terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA.

OPM Flow accepts command line options to control various aspects of the simulator's run time behavior, as described in the table below. To give a command line option use "key=value" syntax, with no spaces around the equals sign. It is also possible to put multiple options together in a parameter file. To do so, put one option on each line of the file with ".param" as the extension and pass that filename as a command line parameter to OPM Flow using:

```
flow --parameter-file=CASENAME.PARAM
```

to instruct OPM Flow to read the parameter file.

The available command line options for this release are listed in Table E.4.

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
General eWoms/ebos Command Line Parameters			
1	-h or --help	A character string that causes OPM Flow to print a help message that gives a brief description of the available command line parameters.	N/A
2	--continue-on-convergence-error	A Boolean value set to true or false that that instructs the simulator to continue (true) with a non-converged solution instead of giving up (false) if it encounter a time step size smaller than the minimum time step size.	false
3	--cpr-ell-solvetype	A positive integer that defines the solver type of the elliptic pressure solver: 0 : bicgstab, 1 : cg, 2 : only amg preconditioner	0
4	--cpr-max-ell-iter	A positive integer that sets the maximum number of iterations for the elliptic pressure part of the Constrained Pressure Residual ("CPR") solver.	20
5	--cpr-reuse-setup	A positive integer that defines if the CPR solver should re-use the Amg setup.	0
6	--cpr-solver-verbose	A defined positive integer value that defines the output from CPR solver: 0 : no output 1 : output summary of inner linear solver 2 : output extensive information about inner linear solve, including setup information	0

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
7	--cpr-use-drs	A Boolean value set to true or false that switches on (true) or off (false) the use of dynamic row sum weights in the CPR solver.	false
8	--dbph-max-rel	A real positive value that sets maximum relative change of the bottom-hole pressure in a single iteration	1.0
9	--dp-max-rel	A real positive double precision value that sets the maximum allowed relative change of pressure per iteration.	0.3
10	--ds-max	A real positive double precision value that sets the maximum allowed change in saturation per iteration.	0.2
11	--dwell-fraction-max	A real positive double precision value that sets the maximum allowed change in well's volume fraction per iteration.	0.2
12	--ecl-deck-file-name	A character string that defines the name of the OPM Flow input file which contains the simulator's ECLIPSE formatted input deck to be simulated.	""
13	--ecl-enable-drift-compensation	A Boolean value set to true or false that enables (true) or disables (false) partial compensation of systematic mass losses via the source term of the next time step.	false
14	--ecl-output-double-precision	A Boolean value set to true or false that switches on (true) or off (false) double precision in restart files. Useful for 'perfect' restarts.	false
15	--ecl-output-interval	An integer value defining the number of report steps that ought to be skipped between two writes of restart files results.	-1
16	--ecl-strict-parsing	A Boolean value set to true or false that switches on (true) or off (false) strict parsing mode for parsing - all errors are collected before the application exists. Useful for debugging initial runs.	false
17	--edge-weights-method	A defined positive integer value that defines the edge-weighting strategy: 0 : for uniform, 1 : for trans, or 2 : for log(trans).	1
18	--enable-adaptive-time-stepping	A Boolean value set to true or false that turns on (true) or off (false) adaptive time stepping. If set to false the report time steps provided by the input deck are used.	true
19	--enable-async-ecl-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to restart and summary files in the commercial simulators format.	true

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
20	--enable-async-vtk-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to the VTK output files.	true
21	--enable-dry-run	A Boolean value set to true or false that specifies if the simulation should actually run, (true) or just check the input deck (false). This option is equivalent to activating the NOSIM keyword in the RUNSPEC section of the input deck (see section 5.3.92 NOSIM – Activate the No Simulation Mode for Data File Checking).	true
22	--enable-ecl-output	A Boolean value set to true or false that specifies if the binary output files (restart, summary files, etc.) should be written in the commercial simulator's format (true), or OPM Flow's format (false).	true
23	--enable-logging-fallout-warning	A Boolean value set to true or false that sets the developer option to see whether logging was on non-root processors (true). If set to true output will be appended to the *.DBG or *.PRT files.	false
24	--enable-opm-rst-file	A Boolean value set to true or false to write OPM specific data sets to the commercial simulators restart file to enable restart of an OPM Flow runs (true), or not to write the data (false).	true
25	--enable-storage-cache	A Boolean value set to true or false that turns on (true) or off (false) storing previous storage terms and avoid re-calculating them.	true
26	--enable-terminal-output	A Boolean value set to true or false that turns on (true) or off (false) high-level information about the simulation's progress to the terminal	true
27	--enable-tracer-mode	A Boolean value set to true or false that turns on (true) or off (false) transport tracer calculations for when tracers have been declared in the input deck. Experimental - use with caution.	false
28	--enable-tuning	A Boolean value set to true or false that instructs OPM Flow to read the time stepping parameters from the TUNING - Numerical Tuning Control keyword in the input deck, if set to true. Note that only the first record of the TUNING keyword is processed.	false
29	--enable-vtk-output	A Boolean value set to true or false that turns on (true) or off (false) a global switch for writing VTK files.	false
30	--enable-well-operability-check	A Boolean value set to true or false that enables (true) checking of a well's operating status, or disables (false) the checking.	true
31	--enable-write-all-solutions	A Boolean value set to true or false that turns on (true) or off (false) the writing of all solutions to disk instead of only the ones for the report steps.	false

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
OPM Flow Specific Command Line Parameters			
32	--flow-linear-solver-verbosity	A positive integer value that defines the output from linear solver: 0 : no extra output 1 : output per solution iteration 2 : output per iteration	0
33	--flow-newton-max-iterations	A positive integer that defines the maximum number of Newton iterations per time step used by the simulator.	20
34	--flow-newton-min-iterations	A real positive value that sets the minimum number of Newton iterations per time step used by the simulator.	1
General eWoms/ebos Command Line Parameters			
35	--force-disable-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow to <u>not to print</u> the Fluid In-Place report after each report time step (true) or not (false).	false
36	--full-time-step-initially	A Boolean value set to true or false that instructs OPM Flow to always attempt to finish a report step using a single time step (true) or not (false).	false
37	--ignore-keywords	A character string that defines a list of keywords which should be ignored by OPM Flow. The keyword string should be enclosed in quotes and each keyword separated by a colon, that is ':'.	""
38	--ilu-fillin-level	A positive integer value that sets the fill in level for the ILU pre-conditioner.	0
39	--ilu-redblack	A Boolean value set to true or false that instructs OPM Flow to use red-black partitioning for the ILU pre-conditioner. (true) or not (false).	false
40	--ilu-relaxation	A real positive double precision value that sets the relaxation factor of the linear solver's ILU pre-conditioner	0.9
41	--ilu-reorder-spheres	A Boolean value set to true or false specifies OPM Flow to reorder the entries of the matrix in the red-black ILU pre-conditioner in spheres starting at an edge (true) or not (false) If false the original ordering is preserved in each color. Otherwise try to ensure D4 ordering (in a 2D structured grid, the diagonal elements are consecutive).	false
42	--initial-time-step-in-days	A real double precision value that sets the size of initial time step in days.	1.0
43	--linear-solver-configuration-json-file	A character string enclosed in quotes that defines the filename of a JSON configuration file for the flexible linear solver system.	none

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
44	--linear-solver-ignore-convergence-failure	A Boolean value set to true or false that if set to true convergences failures in the linear solver are ignored. This option should be used with care, as the results may be unreliable.	false
45	--linear-solver-max-iter	A positive integer value that defines the maximum number of linear iterations.	200
46	--linear-solver-reduction	A real positive double precision value that sets the tolerance for the linear solver. The linear solver convergences when the residual is reduced sufficiently.	0.01
47	--linear-solver-require-full-sparsity-pattern	A Boolean value set to true or false that if set to true the simulator will produce the full sparsity pattern for the linear solver.	false
48	--linear-solver-restart	A positive integer value that sets the number of iterations after which GMRES is restarted.	40
49	--matrix-add-well-contributions	A Boolean value set to true or false that if set to true explicitly specifies the influences of wells between cells in the Jacobian and pre-conditioner matrices.	false
50	--max-inner-iter-ms-wells	A positive integer value that defines the maximum number of inner iterations for multi-segment wells.	100
51	--max-pressure-change-ms-wells	A real positive value that defines the maximum relative pressure change for a single iteration of the multi-segment well model.	1.0×10^6
52	--max-residual-allowed	A real positive value that sets the absolute maximum tolerance for residuals without cutting the time step size.	1.0×10^7
53	--max-single-precision-days	A real positive value that set the maximum time step size where single precision floating point arithmetic can be used solving for the linear systems of equations.	20.0
54	--max-strict-iter	A positive integer that sets the maximum number of Newton iterations before relaxed tolerances are used for the CNV convergence criterion.	8
55	--max-welleq-iter	A positive integer that defines the maximum number of iterations to determine the solution to the well equations.	30

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
56	--milu-variant	<p>A defined character string that specifies which variant of the modified-ILU preconditioner ought to be used. Possible variants are:</p> <ol style="list-style-type: none"> 1) ILU (default, plain ILU), 2) MILU_1 (lump diagonal with dropped row entries), 3) MILU_2 (lump diagonal with the sum of the absolute values of the dropped row entries), 4) MILU_3 (if diagonal is positive add sum of dropped row entries. Otherwise subtract them), 5) MILU_4 (if diagonal is positive add sum of dropped row entries. Otherwise do nothing). <p>The default is ILU</p>	ILU
57	--newton-max-relax	A real positive value that sets the maximum relaxation factor of a Newton iteration used by the simulator.	0.5
58	--newton-relaxation-type	A character string that defines the type of relaxation used in Newton's method, default is dampen.	dampen
59	--output-dir	<p>A character string that defines the directory to which OPM Flow is to write the commercial simulator compatible output files (restart, summary files etc.).</p> <p>The default value results in the files be written to the same directory as the input file.</p>	""
60	--output-interval	A positive integer that specifies the number of report steps between two consecutive writes of restart data.	1
61	--output-mode	<p>A character string that defines the output to the *.PRT and *.DEBUG files:</p> <ol style="list-style-type: none"> 1) none: No output to the files. 2) log or false: Output logging information only. 3) all or true: Output everything. <p>For example to just output logging information use:</p> <p>--output-mode=log</p> <p>or</p> <p>--output-mode=false</p>	all
62	--parameter-file	A character string that defines the name of a parameter file which contains the simulator's set of run-time parameters, as listed in this table.	""
63	--pri-var-oscillation-threshold	A real positive value that defines the threshold value for the primary variable switching conditions after its meaning has switched to hinder oscillations.	1×10^{-5}
64	--print-parameters	<p>A positive integer value that request that the <u>run</u> time parameters be printed at the start of the run:</p> <ol style="list-style-type: none"> 0: No output to the files. 1: Output *.DBG file 2: Output to *.DBG and *.PRT files (default) 	2

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
65	--print-properties	A positive integer value that request that the <u>compile</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file 2 : Output to *.DBG and *.PRT files (default)	2
66	--scale-linear-system	A Boolean value set to true or false that switches on (true) or off (false) the scaling of linear system of equations according to the equation scale and primary variable types.	false
67	--solve-welleq-initially	A Boolean value set to true or false that switches on (true) or off (false) the solving of the well equations as a pre-processing step. Note that the well equations are always added to the full system and solved until converged.	true
68	--solver-growth-factor	A real positive value that specifies the allowed value a time step can be increased by, subject to the maximum allowable time step size set by the <i>--flow-solver-max-time-step-in-days</i> parameter. For example, if the current time step has converged at 10 days and <i>--flow-solver-growth-factor</i> is set to the default value, then the next time step will be $2.0 * 10$ days, that is at 20 days.	2.0
69	--solver-max-growth	A real positive value that specifies the maximum allowed value a time step can be increased by after a report time step, subject to the maximum allowable time step size set by the <i>--flow-solver-max-time-step-in-days</i> parameter.	3.0
70	--solver-max-restarts	A positive integer that defines the number of allowed consecutive restarts (or time step chops) before the simulation is terminated.	10
71	--solver-max-time-step-in-days	A real positive double precision value that specifies the maximum allowed time step size in days.	365
72	--solver-restart-factor	A real positive double precision value that sets the time step chop factor of the time step after a convergence failure. For example, if the current non-convergent time step is 30 days and <i>--flow-solver-restart-factor</i> is set to the default value, then the time step will be repeated using $0.33 * 30$ days as the time step, that is 9.9 days.	0.33
73	--solver-verbosity	A positive integer that specifies the "chattiness" of the non-linear solver.	1

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
74	--system-strategy	<p>A character string that defines the strategy for reformulating and scaling linear system of equations and is set to one of the following:</p> <ol style="list-style-type: none"> 1) none: No scaling - should not be used with the CPR solver. 2) original: Use weights that are equivalent to no scaling - should not be used with the CPR solver. 3) simple: Form pressure equation as simple sum of conservation equations. 4) quasiimpes: Form pressure equation based on diagonal block. 5) trueimpes: Form pressure equation based on linearization of the accumulation term. 	none
75	--threads-per-process	A positive integer value that stipulates the maximum number of threads to be instantiated per process ('-1' means 'automatic').	-1
76	--time-step-after-event-in-days	<p>A real double precision value that sets maximum allowed time step after an event; for example, when a well is open or closed etc.</p> <p>The default value of -1 means that events to do effect the time stepping.</p>	-1
77	--time-step-control	<p>A character string that defines the time stepping control algorithm and is set to one of the following:</p> <ol style="list-style-type: none"> 1) pid: PID controller based adaptive time step control as suggested by Turek and Kuzmin²²³. 2) pid+iteration: Use PID and linear iteration numbers to guide the time step. 3) pid+newtoniteration: Use PID and non-linear iterations numbers to guide the time step. 4) Hardcoded: Use time steps supplied by user via the time-step-control-filename parameter. 	pid
78	--time-step-control-decay-rate	A real positive value that specifies the decay rate a time step can be decreased by after the number of target iterations has been exceeded	0.75

²²³ Algebraic Flux Correction III. Incompressible Flow Problems. Uni Dortmund, Turek and Kuzmin, January, 2006 (DOI: 10.1007/3-540-27206-2_8)

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
79	--time-step-control-file-name	<p>A character string enclosed in quotes that specifies a filename where time steps are specified. The default is the character string timesteps</p> <p>For instance time steps can be generated by the ecl_summary application in libecl as per the following UNIX command line:</p> <pre>path_to_libecl_applications/ ecl_summary DECK TIME > filename</pre> <p>Where:</p> <p>DECK is the name of the data deck you want to get the time steps from,</p> <p>TIME tells the application to return the timing for the run, and</p> <p>"filename" is the name of the file the times are piped to.</p>	timesteps
80	--time-step-control-growth-rate	A real positive value that specifies the growth rate of the time step size of the number of target iterations is undercut.	1.25
81	--time-step-control-target-iterations	A positive integer that defines the number of linear iterations which the time step control scheme should aim for (if applicable).	30
82	--time-step-control-target-newton-iterations	A positive integer that specifies the number of Newtonian iterations which the time step control scheme should aim for (if applicable).	8
83	--time-step-control-tolerance	A real double precision value that sets the tolerance for PID (only used with the pid and pid+ options defined by the --time-step-control option).	0.1
84	--time-step-verbosity	A positive integer that specifies the "chattiness" during the time integration.	1
85	--tolerance-cnv	A real positive double precision value that specifies the maximum non-linear tolerance error. This is the local convergence tolerance (maximum of local saturation errors).	0.01
86	--tolerance-cnv-relaxed	A real positive value that defines the relaxed local convergence tolerance that applies for iterations after the iterations with the strict tolerance.	1.0×10^9
87	--tolerance-mb	A real positive double precision value that sets the maximum mass balance error; that is the tolerated mass balance error relative to total mass present.	1.0×10^6
88	--tolerance-pressure-ms-wells	A real positive double precision value that specifies the tolerance for the pressure equations for multi-segment wells.	1000
89	--tolerance-well-control	A real positive double precision value that sets the maximum tolerance for the well control equations.	1.0×10^{-7}
90	--tolerance-wells	A real positive double precision value that defines the maximum non-linear error for the well equations.	0.0001

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
91	-update-equations-scaling	A Boolean value set to true or false that switches on (true) or off (false) the updating of the scaling factors for mass balance equations during the simulation.	false
92	--use-amg	A Boolean value set to true or false that if set to true OPM Flow will use AMG as the linear solver's preconditioner	false
93	--use-cpr	A Boolean value set to true or false that when set to true OPM Flow will use CPR as the linear solver's preconditioner	false
94	--use-gmres	A Boolean value set to true or false that when set to true OPM Flow will use Generalized Minimal Residual ("GMRES") solver instead of Biconjugate Gradient Stabilized ("BiCGSTAB") as the linear solver within the Newton iterations.	false
95	--use-inner-iterations-ms-wells	A Boolean value set to true or false that when set to true the simulator will use nested iterations for multi-segment wells.	true
96	--use-multisegment-well	A Boolean value set to true or false that when set to true the simulator will use the well model for multi-segment wells instead of the one for single-segment wells.	false
97	--use-update-stabilization	A Boolean value set to true or false that switches on (true) or off (false) the stabilized Newton option. This option may improve convergence for some cases.	true
VTK Graphics Command Line Parameters²²⁴			
98	--vtk-write-average-molar-masses	A Boolean value set to true or false that turns on (true) or off (false) the output of the average phase mass in the VTK output files.	false
99	--vtk-write-densities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase densities to the VTK output files	true
100	--vtk-write-dof-index	A Boolean value set to true or false that turns on (true) or off (false) the output of the tracer concentrations to the VTK output files.	false
101	--vtk-write-ecl-tracer-concentration	A Boolean value set to true or false that turns on (true) or off (false) the output of the index of the degrees of freedom to the VTK output files.	false
102	--vtk-write-extrusion-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the of the extrusion factor of the degrees of freedom to the VTK output files.	false
103	--vtk-write-filter-velocities	A Boolean value set to true or false that turns on (true) or off (false) the output of the filter velocities of the phases in the VTK output files.	false

²²⁴ Visualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
I04	--vtk-write-fugacities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component fugacities to the VTK output files.	false
I05	--vtk-write-fugacity-coeffs	A Boolean value set to true or false that turns on (true) or off (false) the output of the component fugacity coefficients to the VTK output files.	false
I06	--vtk-write-gas-dissolution-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas dissolution factor (Rs) of the observed oil to the VTK output files.	false
I07	--vtk-write-gas-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas formation volume factor (Bg) to the VTK output files.	false
I08	--vtk-write-gas-saturation-pressure	A Boolean value set to true or false that turns on (true) or off (false) the output of the saturation pressure of gas (Pg,sat) to the VTK output files'	false
I09	--vtk-write-intrinsic-permeabilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the intrinsic permeability to the VTK output files.	false
I10	--vtk-write-mass-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the mass fractions to the VTK output files.	false
I11	--vtk-write-mobilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase mobilities to the VTK output files.	false
I12	--vtk-write-molarities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component molarities to the VTK output files.	false
I13	--vtk-write-mole-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the mole fractions to the VTK output files.	true
I14	--vtk-write-oil-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil formation volume factor (Bo) to the VTK output files.	false
I15	--vtk-write-oil-saturation-pressure	A Boolean value set to true or false that turns on (true) or off (false) the output of the saturation pressure of oil (Po,sat) to the VTK output files.	false
I16	--vtk-write-oil-vaporization-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil vaporization factor (Rv) of the observed gas to the VTK output files.	false
I17	--vtk-write-porosity	A Boolean value set to true or false that turns on (true) or off (false) the output of the porosity array to the VTK output files.	true
I18	--vtk-write-potential-gradients	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase pressure potential gradients to the VTK output files.	false

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
119	--vtk-write-pressures	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase pressures to the VTK output files.	true
120	--vtk-write-primary-vars	A Boolean value set to true or false that turns on (true) or off (false) the output of the primary variables to the VTK output files.	false
121	--vtk-write-primary-vars-meaning	A Boolean value set to true or false that turns on (true) or off (false) the output of the how the primary variables should be interpreted to the VTK output files.	false
122	--vtk-write-process-rank	A Boolean value set to true or false that turns on (true) or off (false) the output of the MPI process rank to the VTK output files.	false
123	--vtk-write-relative-permeabilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase relative permeabilities to the VTK output files.	true
124	--vtk-write-saturated-gas-oil-vaporization-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil vaporization factor (Rv,sat) of oil saturated gas to the VTK output files.	false
125	--vtk-write-saturated-oil-gas-dissolution-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas dissolution factor (Rs,sat) of gas saturated oil to the VTK output files.	false
126	--vtk-write-saturation-ratios	A Boolean value set to true or false that turns on (true) or off (false) the output of the ratio of the actually and maximum dissolved component of the mixture to the VTK output files	false
127	--vtk-write-saturations	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase saturations to the VTK output files.	true
128	--vtk-write-temperature	A Boolean value set to true or false that turns on (true) or off (false) the output of the temperature array to the VTK output files.	true
129	--vtk-write-total-mass-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the total mass fractions to the VTK output files.	false
130	--vtk-write-total-mole-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the total mole fractions to the VTK output files.	false
131	--vtk-write-viscosities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component phase viscosities to the VTK output files.	false
132	--vtk-write-water-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil formation volume factor (Bo) to the VTK output files.	false

OPM Flow 2019-10 Command Line Options			
No.	Variable Name	Description	Default
Notes: <ol style="list-style-type: none"> 1) Cells colored green in the No. column are new command line parameters for this release. 2) Items shaded in gray are considered to be developer options that should be used with caution as the values associated with these command line parameters are subject to change. 3) The --preconditioner-add-well-contributions parameter option that switches on (true) or off (false) the influences of wells between cells for the pre-conditioner matrix only, has been retired in the 2019-10 release. 4) As per all UNIX and LINUX based system the input is case dependent. 5) If a parameter file is used to set one of the above parameters, the leading "--" should <u>not</u> be incorporated in the parameter file. 			

Table E.4: OPM Flow 2019-10 Command Line Options

E.5 RUNNING OPM FLOW 2019-04

The command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from your terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA.

OPM Flow accepts command line options to control various aspects of the simulator's run time behavior, as described in the table below. To give a command line option use "key=value" syntax, with no spaces around the equals sign. It is also possible to put multiple options together in a parameter file. To do so, put one option on each line of the file with ".param" as the extension and pass that filename as a command line parameter to OPM Flow using:

```
flow --parameter-file=CASENAME.PARAM
```

to instruct OPM Flow to read the parameter file.

The available command line options for this release are listed in Table E.5.

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
General eWoms/ebos Command Line Parameters			
1	-h or --help	A character string that causes OPM Flow to print a help message that gives a brief description of the available command line parameters.	N/A
2	--cpr-ell-solvetype	A positive integer that defines the solver type of the elliptic pressure solver: 0 : bicgstab, 1 : cg, or 2 : only amg preconditioner.	0
3	--cpr-max-ell-iter	A positive integer that sets the maximum number of iterations for the elliptic pressure part of the Constrained Pressure Residual ("CPR") solver.	20
4	--cpr-reuse-setup	A positive integer that that defines if the CPR solver should re-use the Amg setup.	0
5	--cpr-solver-verbose	A positive integer value that defines the output from CPR solver: 0 : no output 1 : output summary of inner linear solver 2 : output extensive information about inner linear solve, including setup information	0
6	--cpr-use-drs	A Boolean value set to true or false that switches on (true) or off (false) the use of dynamic row sum weights in the CPR solver.	false

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
7	--dbph-max-rel	A real positive value that sets maximum relative change of the bottom-hole pressure in a single iteration	1.0
8	--dp-max-rel	A real positive double precision value that sets the maximum allowed relative change of pressure per iteration.	0.3
9	--ds-max	A real positive double precision value that sets the maximum allowed change in saturation per iteration.	0.2
10	--dwell-fraction-max	A real positive double precision value that sets the maximum allowed change in well's volume fraction per iteration.	0.2
11	--ecl-deck-file-name	A character string that defines the name of the OPM Flow input file which contains the simulator's ECLIPSE formatted input deck to be simulated.	""
12	--ecl-output-double-precision	A Boolean value set to true or false that switches on (true) or off (false) double precision in restart files. Useful for 'perfect' restarts.	false
13	--ecl-output-interval	An integer value defining the number of report steps that ought to be skipped between two writes of restart files results.	-1
14	--ecl-strict-parsing	A Boolean value set to true or false that switches on (true) or off (false) strict parsing mode for parsing - all errors are collected before the application exists. Useful for debugging initial runs.	false
15	--enable-adaptive-time-stepping	A Boolean value set to true or false that turns on (true) or off (false) adaptive time stepping. If set to false the report time steps provided by the input deck are used.	true
16	--enable-async-ecl-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to restart and summary files in the commercial simulators format.	true
17	--enable-async-vtk-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to the VTK output files.	true
18	--enable-dry-run	A Boolean value set to true or false that specifies if the simulation should actually run, (true) or just check the input deck (false). This option is equivalent to activating the NOSIM keyword in the RUNSPEC section of the input deck (see section 5.3.92 NOSIM – Activate the No Simulation Mode for Data File Checking).	true
19	--enable-ecl-output	A Boolean value set to true or false that specifies if the binary output files (restart, summary files, etc.) should be written in the commercial simulator's format (true), or OPM Flow's format (false).	true

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
20	--enable-logging-fallout-warning	A Boolean value set to true or false that sets the developer option to see whether logging was on non-root processors (true). If set to true output will be appended to the *.DBG or *.PRT files.	false
21	--enable-opm-rst-file	A Boolean value set to true or false to write OPM specific data sets to the commercial simulators restart file to enable restart of an OPM Flow runs (true), or not to write the data (false).	true
22	--enable-storage-cache	A Boolean value set to true or false that turns on (true) or off (false) storing previous storage terms and avoid re-calculating them.	true
23	--enable-terminal-output	A Boolean value set to true or false that turns on (true) or off (false) high-level information about the simulation's progress to the terminal	true
24	--enable-tracer-mode	A Boolean value set to true or false that turns on (true) or off (false) transport tracer calculations for when tracers have been declared in the input deck. Experimental - use with caution.	false
25	--enable-tuning	A Boolean value set to true or false that that instructs OPM Flow to read the time stepping parameters from the <i>TUNING - Numerical Tuning Control</i> keyword in the input deck, if set to true. Note that only the first record of the TUNING keyword is processed.	false
26	--enable-vtk-output	A Boolean value set to true or false that turns on (true) or off (false) a global switch for writing VTK files.	false
27	--enable-write-all-solutions	A Boolean value set to true or false that turns on (true) or off (false) the writing of all solutions to disk instead of only the ones for the report steps.	false
OPM Flow Specific Command Line Parameters			
28	--flow-linear-solver-verbosity	A positive integer value that defines the output from linear solver: 0 : no extra output 1 : output per solution iteration 2 : output per iteration	0
29	--flow-newton-max-iterations	A positive integer that defines the maximum number of Newton iterations per time step used by the simulator.	20
30	--flow-newton-min-iterations	A real positive value that sets the minimum number of Newton iterations per time step used by the simulator.	1
General eWoms/ebos Command Line Parameters			
31	--force-disable-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow to not to print the Fluid In-Place report after each report time step (true) or not (false).	false

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
32	--full-time-step-initially	A Boolean value set to true or false that instructs OPM Flow to always attempt to finish a report step using a single time step (true) or not (false).	false
33	--ignore-keywords	A character string that defines a list of keywords which should be ignored by OPM Flow. The keyword string should be enclosed in quotes and each keyword separated by a colon, that is ':' .	""
34	--ilu-fillin-level	A positive integer value that sets the fill in level for the ILU pre-conditioner.	0
35	--ilu-redblack	A Boolean value set to true or false that instructs OPM Flow to use red-black partitioning for the ILU pre-conditioner. (true) or not (false).	false
36	--ilu-relaxation	A real positive double precision value that sets the relaxation factor of the linear solver's ILU pre-conditioner	0.9
37	--ilu-reorder-spheres	A Boolean value set to true or false specifies OPM Flow to reorder the entries of the matrix in the red-black ILU pre-conditioner in spheres starting at an edge (true) or not (false) If false the original ordering is preserved in each color. Otherwise try to ensure D4 ordering (in a 2D structured grid, the diagonal elements are consecutive).	false
38	--initial-time-step-in-days	A real double precision value that sets the size of initial time step in days.	1.0
39	--linear-solver-ignore-convergence-failure	A Boolean value set to true or false that if set to true convergences failures in the linear solver are ignored. This option should be used with care, as the results may be unreliable.	false
40	--linear-solver-max-iter	A positive integer value that defines the maximum number of linear iterations.	200
41	--linear-solver-reduction	A real positive double precision value that sets the tolerance for the linear solver. The linear solver convergences when the residual is reduced sufficiently.	0.01
42	--linear-solver-require-full-sparsity-pattern	A Boolean value set to true or false that if set to true the simulator will produce the full sparsity pattern for the linear solver.	false
43	--linear-solver-restart	A positive integer value that sets the number of iterations after which GMRES is restarted.	40
44	--matrix-add-well-contributions	A Boolean value set to true or false that if set to true explicitly specifies the influences of wells between cells in the Jacobian and pre-conditioner matrices.	false
45	--max-inner-iter-ms-wells	A positive integer value that defines the maximum number of inner iterations for multi-segment wells.	10
46	--max-pressure-change-ms-wells	A real positive value that defines the maximum relative pressure change for a single iteration of the multi-segment well model.	200000

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
47	--max-residual-allowed	A real positive value that sets the absolute maximum tolerance for residuals without cutting the time step size.	1.0×10^7
48	--max-single-precision-days	A real positive value that set the maximum time step size where single precision floating point arithmetic can be used solving for the linear systems of equations.	20.0
49	--max-strict-iter	A positive integer that sets the maximum number of Newton iterations before relaxed tolerances are used for the CNV convergence criterion.	8
50	--max-welleq-iter	A positive integer that defines the maximum number of iterations to determine the solution to the well equations.	30
51	--milu-variant	<p>A defined character string that specifies which variant of the modified-ILU preconditioner ought to be used. Possible variants are:</p> <ol style="list-style-type: none"> 1) ILU (default, plain ILU), 2) MILU_1 (lump diagonal with dropped row entries), 3) MILU_2 (lump diagonal with the sum of the absolute values of the dropped row entries), 4) MILU_3 (if diagonal is positive add sum of dropped row entrires. Otherwise subtract them), 5) MILU_4 (if diagonal is positive add sum of dropped row entrires. Otherwise do nothing. <p>The default is ILU</p>	ILU
52	--newton-max-relax	A real positive value that sets the maximum relaxation factor of a Newton iteration used by the simulator.	0.5
53	--newton-relaxation-type	A character string that defines the type of relaxation used in Newton's method., default is dampen.	dampen
54	--output-dir	<p>A character string that defines the directory to which OPM Flow is to write the commercial simulator compatible output files (restart, summary files etc.).</p> <p>The default value results in the files be written to the same directory as the input file.</p>	""
55	--output-interval	A positive integer that specifies the number of report steps between two consecutive writes of restart data.	1
56	--output-mode	<p>A character string that defines the output to *.PRT and *.DEBUG files:</p> <ol style="list-style-type: none"> 1) none: No output to the files. 2) log or false: Output logging information only. 3) all or true: Output everything. <p>For example to just output logging information use:</p> <p>--output-mode=log or --output-mode=false</p>	all

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
57	--parameter-file	A character string that defines the name of a parameter file which contains the simulator's set of run-time parameters, as listed in this table.	""
58	--preconditioner-add-well-contributions	A Boolean value set to true or false that switches on (true) or off (false) the influences of wells between cells for the pre-conditioner matrix only. Note this parameter is missing from the help when executing: <code>flow -h</code>	false
59	--pri-var-oscillation-threshold	A real positive value that defines the threshold value for the primary variable switching conditions after its meaning has switched to hinder oscillations.	1×10^{-5}
60	--print-parameters	A positive integer value that request that the <u>run</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file 2 : Output to *.DBG and *.PRT files (default)	2
61	--print-properties	A positive integer value that request that the <u>compile</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file 2 : Output to *.DBG and *.PRT files (default)	2
62	--scale-linear-system	A Boolean value set to true or false that switches on (true) or off (false) the scaling of linear system of equations according to the equation scale and primary variable types.	false
63	--solve-welleq-initially	A Boolean value set to true or false that switches on (true) or off (false) the solving of the well equations as a pre-processing step. Note that the well equations are always added to the full system and solved until converged.	true
64	--solver-growth-factor	A real positive value that specifies the allowed value a time step can be increased by, subject to the maximum allowable time step size set by the <code>--flow-solver-max-time-step-in-days</code> parameter. For example, if the current time step has converged at 10 days and <code>--flow-solver-growth-factor</code> is set to the default value, then the next time step will be 2.0×10 days, that is at 20 days.	2.0
65	--solver-max-growth	A real positive value that specifies the maximum allowed value a time step can be increased by after a report time step, subject to the maximum allowable time step size set by the <code>--flow-solver-max-time-step-in-days</code> parameter.	3.0
66	--solver-max-restarts	A positive integer that defines the number of allowed consecutive restarts (or time step chops) before the simulation is terminated.	10

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
67	--solver-max-time-step-in-days	A real positive double precision value that specifies the maximum allowed time step size in days.	365
68	--solver-restart-factor	A real positive double precision value that sets the time step chop factor of the time step after a convergence failure. For example, if the current non-convergent time step is 30 days and --flow-solver-restart-factor is set to the default value, then the time step will be repeated using $0.33 * 30$ days as the time step, that is 9.9 days.	0.33
69	--solver-verbosity	A positive integer that specifies the "chattiness" of the non-linear solver.	1
70	--system-strategy	A character string that defines the strategy for reformulating and scaling linear system of equations and is set to one of the following: <ol style="list-style-type: none"> 1) none: No scaling - should not be used with the CPR solver. 2) original: Use weights that are equivalent to no scaling - should not be used with the CPR solver. 3) simple: Form pressure equation as simple sum of conservation equations. 4) quasiimpes: Form pressure equation based on diagonal block. 5) trueimpes: Form pressure equation based on linearization of the accumulation term. 	none
71	--threads-per-process	A positive integer value that stipulates the maximum number of threads to be instantiated per process ('-1' means 'automatic').	1
72	--time-step-after-event-in-days	A real double precision value that sets maximum allowed time step after an event; for example, when a well is open or closed etc. The default value of -1 means that events to do effect the time stepping.	-1
73	--time-step-control	A character string that defines the time stepping control algorithm and is set to one of the following: <ol style="list-style-type: none"> 1) pid: PID controller based adaptive time step control as suggested by Turek and Kuzmin²²⁵. 2) pid+iteration: Use PID and linear iteration numbers to guide the time step. 3) pid+newtoniteration: Use PID and non-linear iterations numbers to guide the time step. 4) Hardcoded: Use time steps supplied by user. Via timestep.control.filename 	pid
74	--time-step-control-decay-rate	A real positive value that specifies the decay rate a time step can be decreased by after the number of target iterations has been exceeded	0.75

²²⁵ Algebraic Flux Correction III. Incompressible Flow Problems. Uni Dortmund, Turek and Kuzmin, January, 2006 (DOI: 10.1007/3-540-27206-2_8)

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
75	--time-step-control-file-name	<p>A character string that specifies a filename where time steps are specified. The default is the character string <code>timesteps</code></p> <p>For instance time steps can be generated by the <code>ecl_summary</code> application in <code>libecl</code> as per the following UNIX command line:</p> <pre>path_to_libecl_applications/ ecl_summary DECK TIME > filename</pre> <p>Where:</p> <p><code>DECK</code> is the name of the data deck you want to get the time steps from,</p> <p><code>TIME</code> tells the application to return the timing for the run, and</p> <p>"filename" is the name of the file the times are piped to.</p>	timesteps
76	--time-step-control-growth-rate	A real positive value that specifies the growth rate of the time step size of the number of target iterations is undercut.	1.25
77	--time-step-control-target-iterations	A positive integer that defines the number of linear iterations which the time step control scheme should aim for (if applicable).	30
78	--time-step-control-target-newton-iterations	A positive integer that specifies the number of Newtonian iterations which the time step control scheme should aim for (if applicable).	8
79	--time-step-control-tolerance	A real double precision value that sets the tolerance for PID (only used with the <code>pid</code> and <code>pid+</code> options defined by the <code>--time-step-control</code> option).	0.1
80	--time-step-verbosity	A positive integer that specifies the "chattiness" during the time integration.	1
81	--tolerance-cnv	A real positive double precision value that specifies the maximum non-linear tolerance error. This is the local convergence tolerance (maximum of local saturation errors).	0.01
82	--tolerance-cnv-relaxed	A real positive value that defines the relaxed local convergence tolerance that applies for iterations after the iterations with the strict tolerance.	1.0×10^9
83	--tolerance-mb	A real positive double precision value that sets the maximum mass balance error; that is the tolerated mass balance error relative to total mass present.	1.0×10^6
84	--tolerance-pressure-ms-wells	A real positive double precision value that specifies the tolerance for the pressure equations for multi-segment wells.	1000
85	--tolerance-well-control	A real positive double precision value that sets the maximum tolerance for the well control equations.	1.0×10^{-7}
86	--tolerance-wells	A real positive double precision value that defines the maximum non-linear error for the well equations.	0.0001

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
87	-update-equations-scaling	A Boolean value set to true or false that switches on (true) or off (false) the updating of the scaling factors for mass balance equations during the simulation.	false
88	--use-amg	A Boolean value set to true or false that if set to true OPM Flow will use AMG as the linear solver's preconditioner	false
89	--use-cpr	A Boolean value set to true or false that when set to true OPM Flow will use CPR as the linear solver's preconditioner	false
90	--use-gmres	A Boolean value set to true or false that when set to true OPM Flow will use Generalized Minimal Residual ("GMRES") solver instead of Biconjugate Gradient Stabilized ("BiCGSTAB") as the linear solver within the Newton iterations.	false
91	--use-inner-iterations-ms-wells	A Boolean value set to true or false that when set to true the simulator will use nested iterations for multi-segment wells.	true
92	--use-multisegment-well	A Boolean value set to true or false that when set to true the simulator will use the well model for multi-segment wells instead of the one for single-segment wells.	false
93	--use-update-stabilization	A Boolean value set to true or false that switches on (true) or off (false) the stabilized Newton option. This option may improve convergence for some cases.	true
VTK Graphics Command Line Parameters²²⁶			
94	--vtk-write-average-molar-masses	A Boolean value set to true or false that turns on (true) or off (false) the output of the average phase mass in the VTK output files.	false
95	--vtk-write-densities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase densities to the VTK output files	true
96	--vtk-write-dof-index	A Boolean value set to true or false that turns on (true) or off (false) the output of the tracer concentrations to the VTK output files.	false
97	--vtk-write-ecl-tracer-concentration	A Boolean value set to true or false that turns on (true) or off (false) the output of the index of the degrees of freedom to the VTK output files.	false
98	--vtk-write-extrusion-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the of the extrusion factor of the degrees of freedom to the VTK output files.	false
99	--vtk-write-filter-velocities	A Boolean value set to true or false that turns on (true) or off (false) the output of the filter velocities of the phases in the VTK output files.	false

²²⁶ Visualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For the commercial simulator's compatible output files OPM's ResInsight 3D visualization package can be used instead and is specifically tailored for OPM Flow and the commercial simulator.

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
I00	--vtk-write-fugacities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component fugacities to the VTK output files.	false
I01	--vtk-write-fugacity-coeffs	A Boolean value set to true or false that turns on (true) or off (false) the output of the component fugacity coefficients to the VTK output files.	false
I02	--vtk-write-gas-dissolution-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas dissolution factor (Rs) of the observed oil to the VTK output files.	false
I03	--vtk-write-gas-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas formation volume factor (Bg) to the VTK output files.	false
I04	--vtk-write-gas-saturation-pressure	A Boolean value set to true or false that turns on (true) or off (false) the output of the saturation pressure of gas (Pg,sat) to the VTK output files'	false
I05	--vtk-write-intrinsic-permeabilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the intrinsic permeability to the VTK output files.	false
I06	--vtk-write-mass-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the mass fractions to the VTK output files.	false
I07	--vtk-write-mobilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase mobilities to the VTK output files.	false
I08	--vtk-write-molarities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component molarities to the VTK output files.	false
I09	--vtk-write-mole-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the mole fractions to the VTK output files.	true
I10	--vtk-write-oil-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil formation volume factor (Bo) to the VTK output files.	false
I11	--vtk-write-oil-saturation-pressure	A Boolean value set to true or false that turns on (true) or off (false) the output of the saturation pressure of oil (Po,sat) to the VTK output files.	false
I12	--vtk-write-oil-vaporization-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil vaporization factor (Rv) of the observed gas to the VTK output files.	false
I13	--vtk-write-porosity	A Boolean value set to true or false that turns on (true) or off (false) the output of the porosity array to the VTK output files.	true
I14	--vtk-write-potential-gradients	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase pressure potential gradients to the VTK output files.	false

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
115	--vtk-write-pressures	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase pressures to the VTK output files.	true
116	--vtk-write-primary-vars	A Boolean value set to true or false that turns on (true) or off (false) the output of the primary variables to the VTK output files.	false
117	--vtk-write-primary-vars-meaning	A Boolean value set to true or false that turns on (true) or off (false) the output of the how the primary variables should be interpreted to the VTK output files.	false
118	--vtk-write-process-rank	A Boolean value set to true or false that turns on (true) or off (false) the output of the MPI process rank to the VTK output files.	false
119	--vtk-write-relative-permeabilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase relative permeabilities to the VTK output files.	true
120	--vtk-write-saturated-gas-oil-vaporization-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil vaporization factor (Rv,sat) of oil saturated gas to the VTK output files.	false
121	--vtk-write-saturated-oil-gas-dissolution-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas dissolution factor (Rs,sat) of gas saturated oil to the VTK output files.	false
122	--vtk-write-saturation-ratios	A Boolean value set to true or false that turns on (true) or off (false) the output of the ratio of the actually and maximum dissolved component of the mixture to the VTK output files	false
123	--vtk-write-saturations	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase saturations to the VTK output files.	true
124	--vtk-write-temperature	A Boolean value set to true or false that turns on (true) or off (false) the output of the temperature array to the VTK output files.	true
125	--vtk-write-total-mass-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the total mass fractions to the VTK output files.	false
126	--vtk-write-total-mole-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the total mole fractions to the VTK output files.	false
127	--vtk-write-viscosities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component phase viscosities to the VTK output files.	false
128	--vtk-write-water-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil formation volume factor (Bo) to the VTK output files.	false

OPM Flow 2019-04 Command Line Options			
No.	Variable Name	Description	Default
Notes: <ul style="list-style-type: none">1) Cells colored green in the No. column are new command line parameters for this release.2) Items shaded in gray are considered to be developer options that should be used with caution as the values associated with these command line parameters are subject to change.3) As per all UNIX and LINUX based system the input is case dependent.4) If a parameter file is used to set one of the above parameters, the leading "--" should <u>not</u> be incorporated in the parameter file.			

Table E.5: OPM Flow 2019-04 Command Line Options

E.6 RUNNING OPM FLOW 2018-10

OPM Flow release 2018-10 and beyond have switched to the eWoms/ebos²²⁷ command line interface. Previously the simulator used only OPM Flow specific command line parameters which were internally translated to the equivalent eWoms/ebos command line parameters. The pre 2018-10 set of command line parameters are now depreciated but are still documented in this section for backward compatibility with previous releases of the simulator.

The command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from your terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA.

OPM Flow accepts command line options to control various aspects of the simulator's run time behavior, as described in the table below. To give a command line option use "key=value" syntax, with no spaces around the equals sign.

```
flow --ecl-deck-file-name=path_to_data/CASENAME
```

It is also possible to put multiple options together in a parameter file. To do so, put one option on each line of the file with ".param" as the extension and pass that filename as a command line parameter to OPM Flow using:

```
flow --parameter-file=CASENAME.PARAM
```

to instruct OPM Flow to read the parameter file.

The available command line options for this release are depicted in Table E.6.

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
General eWoms/ebos Command Line Parameters			
1	-h or --help	A character string that causes OPM Flow to print a help message that gives a brief description of the available command line parameters.	N/A
2	--dbph-max-rel	A real positive value that sets maximum relative change of the bottom-hole pressure in a single iteration	1.0
3	--dp-max-rel	A real positive double precision value that sets the maximum allowed relative change of pressure per iteration.	0.3
4	--ds-max	A real positive double precision value that sets the maximum allowed change in saturation per iteration.	0.2
5	--dwell-fraction-max	A real positive double precision value that sets the maximum allowed change in well's volume fraction per iteration.	0.2

²²⁷ eWorms is a C++ software framework concerned with fully-implicit numerical models for flow and transport in porous media. It is developed as an integral part of the Open Porous Media (OPM) initiative.

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
6	--ecl-deck-file-name	A character string that defines the name of the OPM Flow input file which contains the simulator's ECLIPSE formatted input deck to be simulated.	N/A
7	--ecl-output-double-precision	A Boolean value set to true or false that switches on (true) or off (false) double precision in restart files. Useful for 'perfect' restarts.	false
8	--ecl-output-interval	An integer value defining the number of report steps that ought to be skipped between two writes of restart files results.	-1
9	--enable-adaptive-time-stepping	A Boolean value set to true or false that turns on (true) or off (false) adaptive time stepping. If set to false the report time steps provided by the input deck are used.	true
10	--enable-async-ecl-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to restart and summary files.	true
11	--enable-async-vtk-output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to the VTK output files.	true
12	--enable-dry-run	A Boolean value set to true or false that specifies if the simulation should actually run, (true) or just check the input deck (false). This option is equivalent to activating the NOSIM keyword in the RUNSPEC section of the input deck (see section 5.3.92 NOSIM – Activate the No Simulation Mode for Data File Checking).	true
13	--enable-ecl-output	A Boolean value set to true or false to write the binary output which is compatible with the ECLIPSE commercial simulator (restart and summary files).	true
14	--enable-opm-rst-file	A Boolean value set to true or false to write OPM specific data sets to the commercial simulators restart file to enable restart of an OPM Flow run (true), or not to write the data (false).	true
15	--enable-storage-cache	A Boolean value set to true or false that turns on (true) or off (false) storing previous storage terms and avoid re-calculating them.	true
16	--enable-terminal-output	A Boolean value set to true or false that turns on (true) or off (false) high-level information about the simulation's progress to the terminal	true
17	--enable-tuning	A Boolean value set to true or false that instructs OPM Flow to read the time stepping parameters from the TUNING - Numerical Tuning Control keyword in the input deck, if set to true. Note that only the first record of the TUNING keyword is processed.	false

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
18	--enable-vtk-output	A Boolean value set to true or false that turns on (true) or off (false) a global switch for writing VTK files.	false
19	--enable-write-all-solutions	A Boolean value set to true or false that turns on (true) or off (false) the writing of all solutions to disk instead of only the ones for the report steps.	false
OPM Flow Specific Command Line Parameters			
20	--flow-linear-solver-verbosity	A positive integer value that defines the output from linear solver: 0 : no extra output 1 : output per solution iteration 2 : output per iteration	0
21	--flow-newton-max-iterations	A positive integer that defines the maximum number of Newton iterations per time step used by the simulator.	20
22	--flow-newton-min-iterations	A real positive value that sets the minimum number of Newton iterations per time step used by the simulator.	1
General eWoms/ebos Command Line Parameters			
23	--force-disable-fluid-in-place-output	A Boolean value set to true or false that instructs OPM Flow to not to print the Fluid In-Place report after each report time step (true) or not (false).	false
24	--full-time-step-initially	A Boolean value set to true or false that instructs OPM Flow to always attempt to finish a report step using a single time step (true) or not (false).	false
25	--ilu-fillin-level	A positive integer value that sets the fill in level for the ILU pre-conditioner.	0
26	--ilu-redblack	A Boolean value set to true or false that instructs OPM Flow to use red-black partitioning for the ILU pre-conditioner. (true) or not (false).	false
27	--ilu-relaxation	A real positive double precision value that sets the relaxation factor of the linear solver's ILU pre-conditioner	0.9
28	--ilu-reorder-spheres	A Boolean value set to true or false specifies OPM Flow to reorder the entries of the matrix in the red-black ILU pre-conditioner in spheres starting at an edge (true) or not (false) If false the original ordering is preserved in each color. Otherwise try to ensure D4 ordering (in a 2D structured grid, the diagonal elements are consecutive).	false
29	--initial-time-step-in-days	A real double precision value that sets the size of initial time step in days.	1.0

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
30	--linear-solver-ignore-convergence-failure	A Boolean value set to true or false that if set to true convergences failures in the linear solver are ignored. This option should be used with care, as the results may be unreliable.	false
31	--linear-solver-max-iter	A positive integer value that defines the maximum number of linear iterations.	200
32	--linear-solver-reduction	A real positive double precision value that sets the tolerance for the linear solver. The linear solver convergences when the residual is reduced sufficiently.	0.01
33	--linear-solver-require-full-sparsity-pattern	A Boolean value set to true or false that if set to true the simulator will produce the full sparsity pattern for the linear solver.	false
34	--linear-solver-restart	A positive integer value that sets the number of iterations after which GMRES is restarted.	40
35	--matrix-add-well-contributions	A Boolean value set to true or false that if set to true explicitly specifies the influences of wells between cells in the Jacobian and pre-conditioner matrices.	false
36	--max-inner-iter-ms-wells	A positive integer value that defines the maximum number of inner iterations for multi-segment wells.	10
37	--max-pressure-change-ms-wells	A real positive value that defines the maximum relative pressure change for a single iteration of the multi-segment well model.	200000
38	--max-residual-allowed	A real positive value that sets the absolute maximum tolerance for residuals without cutting the time step size.	1.0×10^7
39	--max-single-precision-days	A real positive value that set the maximum time step size where single precision floating point arithmetic can be used solving for the linear systems of equations.	20.0
40	--max-strict-iter	A positive integer that sets the maximum number of Newton iterations before relaxed tolerances are used for the CNV convergence criterion.	8
41	--max-welleq-iter	A positive integer that defines the maximum number of iterations to determine the solution to the well equations.	15

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
42	--milu-variant	<p>A defined character string that specifies which variant of the modified-ILU preconditioner ought to be used. Possible variants are:</p> <ol style="list-style-type: none"> 1) ILU (default, plain ILU), 2) MILU_1 (lump diagonal with dropped row entries), 3) MILU_2 (lump diagonal with the sum of the absolute values of the dropped row entries), 4) MILU_3 (if diagonal is positive add sum of dropped row entrires. Otherwise substract them), 5) MILU_4 (if diagonal is positive add sum of dropped row entrires. Otherwise do nothing. <p>The default is ILU</p>	ILU
43	--newton-max-relax	A real positive value that sets the maximum relaxation factor of a Newton iteration used by the simulator.	0.5
44	--newton-relaxation-type	A character string that defines the type of relaxation used in Newton's method., default is dampen.	dampen
45	--output-dir	A character string that defines the directory to which OPM Flow to write the ECLIPSE compatible output files (restart and summary files).	N/A
46	--output-interval	A positive integer that specifies the number of report steps between two consecutive writes of restart data.	1
47	--output-mode	<p>A character string that defines the output to *.PRT and *.DEBUG files:</p> <ol style="list-style-type: none"> 1) none: No output to the files. 2) log or false: Output logging information only. 3) all or true: Output everything. <p>For example to just output logging information use: <code>--output-mode=log</code> or <code>--output-mode=false</code></p>	all
48	--parameter-file	A character string that defines the name of a parameter file which contains the simulator's set of run-time parameters, as listed in this table.	N/A
49	--preconditioner-add-well-contributions	A Boolean value set to true or false that switches on (true) or off (false) the influences of wells between cells for the pre-conditioner matrix only.	false
50	--pri-var-oscilation-threshold	A real positive value that defines the threshold value for the primary variable switching conditions after its meaning has switched to hinder oscilations.	1×10^{-5}
51	--print-parameters	<p>A positive integer value that request that the <u>run</u> time parameters be printed at the start of the run:</p> <ol style="list-style-type: none"> 0 : No output to the files. 1 : Output *.DBG file 2 : Output to *.DBG and *.PRT files (default) 	2

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
52	--print-properties	A positive integer value that request that the <u>compile</u> time parameters be printed at the start of the run: 0 : No output to the files. 1 : Output *.DBG file 2 : Output to *.DBG and *.PRT files (default)	2
53	--solve-welleq-initially	A Boolean value set to true or false that switches on (true) or off (false) the solving of the well equations as a pre-processing step. Note that the well equations are always added to the full system and solved until converged.	true
54	--solver-growth-factor	A real positive value that specifies the allowed value a time step can be increased by, subject to the maximum allowable time step size set by the <i>--flow-solver-max-time-step-in-days</i> parameter. For example, if the current time step has converged at 10 days and <i>--flow-solver-growth-factor</i> is set to the default value, then the next time step will be $2.0 * 10$ days, that is at 20 days.	2.0
55	--solver-max-growth	A real positive value that specifies the maximum allowed value a time step can be increased by after a report time step. subject to the maximum allowable time step size set by the <i>--flow-solver-max-time-step-in-days</i> parameter.	3.0
56	--solver-max-restarts	A positive integer that defines the number of allowed consecutive restarts (or time step chops) before the simulation is terminated.	10
57	--solver-max-time-step-in-days	A real positive double precision value that specifies the maximum allowed time step size in days.	365
58	--solver-restart-factor	A real positive double precision value that sets the time step chop factor of the time step after a convergence failure. For example, if the current non-convergent time step is 30 days and <i>--flow-solver-restart-factor</i> is set to the default value, then the time step will be repeated using $0.33 * 30$ days as the time step, that is 9.9 days.	0.33
59	--solver-verbosity	A positive integer that specifies the "chattiness" of the non-linear solver.	1
60	--threads-per-process	A positive integer value that stipulates the maximum number of threads to be instantiated per process ('-1' means 'automatic').	1
61	--time-step-after-event-in-days	A real double precision value that sets maximum allowed time step after an event; for example, when a well is open or closed etc. The default value of -1 means that events to do effect the time stepping.	-1

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
62	--time-step-control	A character string that defines the time stepping control algorithm and is set to one of the following: <ul style="list-style-type: none"> 1) pid: PID controller based adaptive time step control as suggested by Turek and Kuzmin²²⁸. 2) pid+iteration: Use PID and linear iteration numbers to guide the time step. 3) pid+newtoniteration: Use PID and non-linear iterations numbers to guide the time step. 4) Hardcoded: Use time steps supplied by user. Via timestep.control.filename 	pid
63	--time-step-control-decay-rate	A real positive value that specifies the decay rate a time step can be decreased by after the number of target iterations has been exceeded	0.75
64	--time-step-control-file-name	A character string that specifies a filename where time steps are specified. The default is the character string timesteps For instance generated by the ecl_summary application in libecl as per the following UNIX command line: path_to_libecl_applications/ ecl_summary DECK TIME > filename Where: DECK is the name of the data deck you want to get the time steps from, TIME tells the application to return the timing for the run, and "filename" is the name of the file the times are piped to.	timesteps
65	--time-step-control-growth-rate	A real positive value that specifies the growth rate of the time step size of the number of target iterations is undercut.	1.25
66	--time-step-control-target-iterations	A positive integer that defines the number of linear iterations which the time step control scheme should aim for (if applicable).	30
67	--time-step-control-target-newton-iterations	A positive integer that specifies the number of Newtonian iterations which the time step control scheme should aim for (if applicable).	8
68	--time-step-control-tolerance	A real double precision value that sets the tolerance for PID (only used with the pid and pid+ options defined by the --flow-timestep.control option).	0.1
69	--time-step-verbosity	A positive integer that specifies the "chattiness" during the time integration.	1
70	--tolerance-cnv	A real positive double precision value that specifies the maximum non-linear tolerance error. This is the local convergence tolerance (maximum of local saturation errors).	0.01

²²⁸ Algebraic Flux Correction III. Incompressible Flow Problems. Uni Dortmund, Turek and Kuzmin, January, 2006 (DOI: 10.1007/3-540-27206-2_8)

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
71	--tolerance-cnv-relaxed	A real positive value that defines the relaxed local convergence tolerance that applies for iterations after the iterations with the strict tolerance.	1.0×10^9
72	--tolerance-mb	A real positive double precision value that sets the maximum mass balance error, that is the tolerated mass balance error relative to total mass present.	1.0×10^5
73	--tolerance-pressure-ms-wells	A real positive double precision value that specifies the tolerance for the pressure equations for multi-segment wells.	1000
74	--tolerance-well-control	A real positive double precision value that sets the maximum tolerance for the well control equations.	1.0×10^{-7}
75	--tolerance-wells	A real positive double precision value that defines the maximum non-linear error for the well equations.	0.0001
76	-update-equations-scaling	A Boolean value set to true or false that switches on (true) or off (false) the updating of the scaling factors for mass balance equations during the simulation.	false
77	--use-amg	A Boolean value set to true or false that if set to true OPM Flow will use AMG as the linear solver's preconditioner	false
78	--use-cpr	A Boolean value set to true or false that when set to true OPM Flow will use CPR as the linear solver's preconditioner	false
79	--use-gmres	A Boolean value set to true or false that when set to true OPM Flow will use GMRes instead of BiCGStab as linear solver within the Newton iterations.	false
80	--use-inner-iterations-ms-wells	A Boolean value set to true or false that when set to true the simulator will use nested iterations for multi-segment wells.	true
81	--use-multisegment-well	A Boolean value set to true or false that when set to true the simulator will use the well model for multi-segment wells instead of the one for single-segment wells.	false
82	--use-update-stabilization	A Boolean value set to true or false that switches on (true) or off (false) the stabilized Newton option. This option may improve convergence for some cases.	true
VTK Graphics Command Line Parameters²²⁹			
83	--vtk-write-average-molar-masses	A Boolean value set to true or false that turns on (true) or off (false) the output of the average phase mass in the VTK output files.	false
84	--vtk-write-densities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase densities to the VTK output files	true

²²⁹ Virtualization ToolKit ("VTK") files used to visualize the 3D results from the model using ParaView, an open-source, multi-platform general purpose data analysis and visualization application (<https://www.paraview.org/overview/>). For ECLIPSE compatible output files OPM's ResInsight 3D visualization package can be used which is specifically tailored for OPM Flow and the commercial simulator.

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
85	--vtk-write-dof-index	A Boolean value set to true or false that turns on (true) or off (false) the output of the index of the degrees of freedom to the VTK output files.	false
86	--vtk-write-extrusion-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the of the extrusion factor of the degrees of freedom to the VTK output files.	false
87	--vtk-write-filter-velocities	A Boolean value set to true or false that turns on (true) or off (false) the output of the filter velocities of the phases in the VTK output files.	false
88	--vtk-write-fugacities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component fugacities to the VTK output files.	false
89	--vtk-write-fugacity-coeffs	A Boolean value set to true or false that turns on (true) or off (false) the output of the component fugacity coefficients to the VTK output files.	false
90	--vtk-write-gas-dissolution-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas dissolution factor (Rs) of the observed oil to the VTK output files.	false
91	--vtk-write-gas-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas formation volume factor (Bg) to the VTK output files.	false
92	--vtk-write-gas-saturation-pressure	A Boolean value set to true or false that turns on (true) or off (false) the output of the saturation pressure of gas (Pg,sat) to the VTK output files'	false
93	--vtk-write-intrinsic-permeabilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the intrinsic permeability to the VTK output files.	false
94	--vtk-write-mass-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the mass fractions to the VTK output files.	false
95	--vtk-write-mobilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase mobilities to the VTK output files.	false
96	--vtk-write-molarities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component molarities to the VTK output files.	false
97	--vtk-write-mole-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the mole fractions to the VTK output files.	true
98	--vtk-write-oil-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil formation volume factor (Bo) to the VTK output files.	false
99	--vtk-write-oil-saturation-pressure	A Boolean value set to true or false that turns on (true) or off (false) the output of the saturation pressure of oil (Po,sat) to the VTK output files.	false

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
I00	--vtk-write-oil-vaporization-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil vaporization factor (R_v) of the observed gas to the VTK output files.	false
I01	--vtk-write-porosity	A Boolean value set to true or false that turns on (true) or off (false) the output of the porosity array to the VTK output files.	true
I02	--vtk-write-potential-gradients	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase pressure potential gradients to the VTK output files.	false
I03	--vtk-write-pressures	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase pressures to the VTK output files.	true
I04	--vtk-write-primary-vars	A Boolean value set to true or false that turns on (true) or off (false) the output of the primary variables to the VTK output files.	false
I05	--vtk-write-primary-vars-meaning	A Boolean value set to true or false that turns on (true) or off (false) the output of the how the primary variables should be interpreted to the VTK output files.	false
I06	--vtk-write-process-rank	A Boolean value set to true or false that turns on (true) or off (false) the output of the MPI process rank to the VTK output files.	false
I07	--vtk-write-relative-permeabilities	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase relative permeabilities to the VTK output files.	true
I08	--vtk-write-saturated-gas-oil-vaporization-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil vaporization factor ($R_{v,sat}$) of oil saturated gas to the VTK output files.	false
I09	--vtk-write-saturated-oil-gas-dissolution-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the gas dissolution factor ($R_{s,sat}$) of gas saturated oil to the VTK output files.	false
I10	--vtk-write-saturation-ratios	A Boolean value set to true or false that turns on (true) or off (false) the output of the ratio of the actually and maximum dissolved component of the mixture to the VTK output files	false
I11	--vtk-write-saturations	A Boolean value set to true or false that turns on (true) or off (false) the output of the phase saturations to the VTK output files.	true
I12	--vtk-write-temperature	A Boolean value set to true or false that turns on (true) or off (false) the output of the temperature array to the VTK output files.	true
I13	--vtk-write-total-mass-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the total mass fractions to the VTK output files.	false

OPM Flow 2018-10 Command Line Options			
No.	Variable Name	Description	Default
114	--vtk-write-total-mole-fractions	A Boolean value set to true or false that turns on (true) or off (false) the output of the total mole fractions to the VTK output files.	false
115	--vtk-write-viscosities	A Boolean value set to true or false that turns on (true) or off (false) the output of the component phase viscosities to the VTK output files.	false
116	--vtk-write-water-formation-volume-factor	A Boolean value set to true or false that turns on (true) or off (false) the output of the oil formation volume factor (Bo) to the VTK output files.	false
Notes: <ol style="list-style-type: none"> 1) Items shaded in gray are considered to be developer options that should be used with caution as the values associated with these command line parameters are subject to change. 2) As per all UNIX and LINUX based system the input is case dependent. 3) If a parameter file is used to set one of the above parameters, the leading "--" should <u>not</u> be incorporated in the parameter file. 			

Table E.6: OPM Flow 2018-10 Command Line Options

E.7 RUNNING OPM FLOW 2018-04

This section describes the command line options up to the 2018-04 release of OPM Flow, post this release the command line options were changed to be the same as eWoms/ebos²³⁰ command line parameters. It is anticipated that this section will be removed from the manual once the 2018-10 and later versions are firmly established.

The command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from your terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA.

OPM Flow accepts command line options to control various aspects of the simulator's run time behavior, as described in the table below. To give a command line option use "key=value" syntax, with no spaces around the equals sign. It is also possible to put multiple options together in a parameter file. To do so, put one option on each line of the file with ".param" as the extension and pass that filename as a command line parameter to OPM Flow using:

```
flow --parameter-file=CASENAME.PARAM
```

to instruct OPM Flow to read the parameter file.

The available command line options for this release are listed in Table E.7.

OPM Flow 2018-04 Command Line Options			
No.	Variable Name	Description	Default
1	deck_filename	A character string that defines the name of the OPM Flow input file which contains the simulator's ECLIPSE formatted input deck to be simulated.	N/A
2	output_ecl	A Boolean value set to true or false that turns on (true) or off (false) output to the *.RST and *.SMRY files.	true
3	output	A character string that defines the output to *.PRT and *.DEBUG files: 1) none: No output to the files. 2) log or false: Output logging information only. 3) all or true: Output everything. For example to just output logging information use: output=log or output=false	all
4	output_dir	Set the directory to which output files are written.	deck location

²³⁰ eWorms is a C++ software framework concerned with fully-implicit numerical models for flow and transport in porous media. It is developed as an integral part of the Open Porous Media (OPM) initiative.

OPM Flow 2018-04 Command Line Options			
No.	Variable Name	Description	Default
5	restart_double_si	A Boolean value set to true or false that switches on (true) or off (false) double precision in restart files and stores all restart data in SI units rather than using the unit family (METRIC, FIELD etc.) used in the input deck. The option improves the quality of the restart.	false
6	async_output	A Boolean value set to true or false that sets the output mode to be asynchronously (true), letting the simulator continue computing the next time step while writing results to restart and summary files.	true
7	newton_use_gmres	A Boolean value set to true or false that when set to true OPM Flow will use GMRes instead of BiCGStab as linear solver within the Newton iterations.	false
8	linear_solver_reduction	A real positive double precision value that sets the tolerance for the linear solver. The linear solver convergences when the residual is reduced sufficiently.	0.01
9	linear_solver_maxiter	A positive integer value that defines the maximum number of linear iterations.	150
10	linear_solver_verbosity	A positive integer value that defines the output from linear solver: 0 : no extra output 1 : output per solution iteration 2 : output per iteration	0
11	linear_solver_ignoreconvergencefailure	A Boolean value set to true or false that if set to true convergences failures in the linear solver are ignored. This option should be used with care, as the results may be unreliable.	false
12	linear_solver_use_amg	A Boolean value set to true or false that if set to true OPM Flow will use amg as the pre-conditioner instead of ilu.	false
13	ilu_relaxation	A real positive double precision value that sets the relaxation parameter for the ILU pre-conditioner.	0.9
14	ilu_fillin_level	A positive integer value that sets the fill in level for the ILU pre-conditioner.	0
15	dp_max_rel	A real positive double precision value that sets the maximum allowed relative change of pressure per iteration.	0.3
16	ds_max	A real positive double precision value that sets the maximum allowed change in saturation per iteration.	0.2
17	dr_max_rel	A real positive double precision value that sets the maximum allowed relative change in dissolved gas and vaporized oil per iteration	1e+09

OPM Flow 2018-04 Command Line Options			
No.	Variable Name	Description	Default
18	dbhp_max_rel	A real positive double precision value that sets the maximum allowed relative change in BHP per iteration.	1
19	dwell_fraction_max	A real positive double precision value that sets the maximum allowed change in well's volume per iteration.	1e+07
20	tolerance_mb	A real positive double precision value that sets the maximum mass balance error.	1e-05
21	tolerance_cnv	A real positive double precision value that specifies the maximum non-linear tolerance error.	0.01
22	tolerance_wells	A real positive double precision value that defines the maximum non-linear error for the well equations.	0.0001
23	max_strict_iter	A positive integer value that sets the maximum number of non-linear iterations. After this maximum value has been exceeded only the mass balance error is checked.	8
24	solve_welleq_initially	A Boolean value set to true or false that switches on (true) or off (false) the solving of the well equations as a pre-processing step. Note that the well equations are always added to the full system and solved until converged.	true
25	use_update_stabilization	A Boolean value set to true or false that switches on (true) or off (false) the stabilized Newton option. This option may improve convergence for some cases.	true
26	relax_max	A real positive double precision value that is used to tune the stabilized Newton option.	0.5
27	relax_type	A character string that sets relaxation type of the stabilized Newton option.	dampen
28	max_iter	A positive integer that sets the maximum number of non-linear iterations.	10
29	min_iter	A positive integer that sets the minimum number of non-linear iterations.	1
30	output_terminal	A Boolean value set to true or false that turns on (true) or off (false) output to terminal.	true
31	use_TUNING	A Boolean value set to true or false that that instructs OPM Flow to read the time stepping parameters from the <i>TUNING - Numerical Tuning Control</i> keyword in the input deck, if set to true. Note that only the first record of the TUNING keyword is processed.	false
32	timestep.adaptive	A Boolean value set to true or false that that turns on (true) or off (false) adaptive time stepping. If set to false the report time steps provided by the input deck are used.	true

OPM Flow 2018-04 Command Line Options			
No.	Variable Name	Description	Default
33	<code>solver.restartfactor</code>	<p>A real positive double precision value that sets the time step chop factor of the time step after convergence failure.</p> <p>For example, if the current non-convergent time step is 30 days and <code>solver.restartfactor</code> is set to the default value, then the time step will be repeated using $0.33 * 30$ days as the time step, that is 9.9 days.</p>	0.33
34	<code>timestep.control.maxgrowth</code>	<p>A real positive double precision value that sets the maximum allowed value a time step can be increased by, subject to the maximum allowable time step size set by the <code>timestep.max_timestep_in_days</code> parameter.</p> <p>For example, if the current time step has converged at 10 days and <code>solver.restartfactor</code> is set to the default value, then the next time step will be $3.0 * 10$ days, that is at 30 days.</p>	3
35	<code>timestep.max_timestep_in_days</code>	A real positive double precision value that sets the maximum allowed time step size in days.	365
36	<code>solver.restart</code>	A positive integer that defines the number of allowed consecutive restarts (or time step chops) before the simulation is terminated.	10
37	<code>solver.verbose</code>	A Boolean value set to true or false that switches on (true) or off (false) solver specific output.	true
38	<code>timestep.verbose</code>	A Boolean value set to true or false that switches on (true) or off (false) time step specific output.	true
39	<code>timestep.initial_timestep_in_days</code>	<p>A real double precision value that sets the size of initial time step in days.</p> <p>The default value of -1 sets the initial time step to be <code>solver.restartfactor</code> * the length of the first report step.</p>	-1
40	<code>full_timestep_initially</code>	Try to use the report steps as time steps.	false
41	<code>timestep.timestep_in_days_after_event</code>	<p>A real double precision value that sets maximum allowed time step after an event; for example, when a well is open or closed etc.</p> <p>The default value of -1 means that events to do effect the time stepping.</p>	-1

OPM Flow 2018-04 Command Line Options			
No.	Variable Name	Description	Default
42	timestep.control	<p>A character string that defines the time stepping control algorithm and is set to one of the following:</p> <ol style="list-style-type: none"> 1) pid: PID controller based adaptive time step control as suggested by Turek and Kuzmin²³¹. 2) pid+iteration: Use PID and linear iteration numbers to guide the time step. 3) pid+newtoniteration: Use PID and non-linear iterations numbers to guide the time step. 4) Hardcoded: Use time steps supplied by user. Via timestep.control.filename 	pid
43	timestep.control.tol	A real double precision value that sets the tolerance for PID (only used with the pid and pid+ options defined by the <i>timestep.control</i> option).	0.1
44	timestep.control.targetiteration	A positive integer that sets the target number of linear / non-linear iterations. This option can only be only used by pid+iterations and pid+newtoniteration defined by the <i>timestep.control</i> option.	8
45	timestep.control.filename	<p>A character string that specifies a file name where time steps are specified. For instance generated by the ecl_summary application in libecl as per the following UNIX command line:</p> <pre>path_to_libecl_applications/ ecl_summary DECK TIME > filename</pre> <p>Where:</p> <p>DECK is the name of the data deck you want to get the time steps from,</p> <p>TIME tells the application to return the timing for the run, and</p> <p>"filename" is the name of the file the times are piped to.</p>	
<p>Notes:</p> <p>1) As per all UNIX and LINUX based system the input is case dependent.</p>			

Table E.7: OPM Flow 2018-04 Command Line Options

²³¹ Algebraic Flux Correction III. Incompressible Flow Problems. Uni Dortmund, Turek and Kuzmin, January, 2006 (DOI: 10.1007/3-540-27206-2_8)

APPENDIX F: OPM FLOW OUTPUT FILE FORMATS

APPENDIX TABLE OF CONTENTS**APPENDIX F: OPM FLOW OUTPUT FILE FORMATS.....2143**

F.1 Overview.....	2147
F.1.1 File Types.....	2147
F.1.2 File Naming Conventions.....	2151
F.1.3 Unformatted File Format Considerations.....	2153
F.1.4 File Output Format.....	2155
F.2 EGRID - Model Structural Data for Irregular Corner-Point Grids File.....	2159
F.2.1 EGRID Header Keywords.....	2161
F.2.2 EGRID Global Irregular Corner Point Grid Keywords.....	2164
F.2.3 EGRID LGR Irregular Corner Point Grid Keywords.....	2168
F.2.4 EGRID Non-Neighbor Connections for Irregular Corner Point Grid Keywords.....	2171
F.3 EGRID - Model Structural Data for Unstructured Grids File.....	2174
F.4 EGRID - Model Structural Data for Mixed Grids File.....	2174
F.5 GRID - Model Structural Data File.....	2174
F.6 INIT - Model Initialization and Static Data File.....	2175
F.6.1 INIT Index File.....	2175
F.6.2 INIT Data File Specification.....	2176
F.6.3 INIT Data - Static Data Header Keywords.....	2179
F.6.4 INIT Data - Static Grid Array Data Keywords.....	2184
F.6.5 INIT Data - LGR Static Data Header Keywords.....	2187
F.6.6 INIT Data - LGR Grid Array Data Keywords.....	2190
F.6.7 INIT Data - Static Tabular Data Header Keyword.....	2192
F.6.8 INIT Data - Static Tabular and Constant Data Array Keywords.....	2195
F.7 RESTART Files - Dynamic Data (Solution, Groups, Wells, Connections, Aquifers etc.).....	2197
F.7.1 RESTART Index Files.....	2198
F.7.2 RESTART Data File Specification.....	2199
F.7.3 RESTART Data - Header Keywords.....	2201
F.7.4 RESTART Data - Group, Well and Connection Data Keywords.....	2212
F.7.5 RESTART Data - UDQ and ACTIONX Keywords.....	2231
F.7.6 RESTART Data - Aquifer Data Keywords.....	2237
F.7.7 RESTART Data - Hidden Keyword.....	2242
F.7.8 RESTART Data - Solution Data keyword.....	2243
F.7.9 RESTART Data - LGR Grid Header Keywords.....	2251
F.7.10 RESTART Data - LGR Solution Data Keywords.....	2253
F.8 RFT Files - Pressure, Saturation and Production Log Data.....	2256
F.8.1 RFT Data File Specification.....	2256
F.8.2 RFT Data File - Time and Date keywords.....	2257
F.8.3 RFT Data File - Well and Connection Data Keyword.....	2258
F.8.4 RFT Data File - RFT Solution Data Keyword.....	2260
F.8.5 RFT Data File - Solution PLT Data Keywords.....	2262
F.8.6 RFT Data File - Solution Multi-Segment Well Keywords.....	2262
F.8.7 RFT Data File - Solution River Keywords.....	2262
F.9 SUMMARY Files - Time Based Vector Data.....	2263
F.9.1 Enhanced SUMMARY Data File Keywords.....	2263
F.9.2 SUMMARY Index File keywords.....	2266
F.9.3 SUMMARY Data File Keywords.....	2271
F.10 SAVE Files - Initialization and Solution Data.....	2273

APPENDIX INDEX OF TABLES

Table F.1: OPM Flow Output File Types Summary.....	2150
Table F.2: RUNSPEC Input and Output File Format Keywords.....	2151
Table F.3: OPM Flow File Naming Conventions.....	2153
Table F.4: Big-Endian and Little-Endian Representation.....	2154
Table F.5: Output File Keyword Format.....	2155
Table F.6: INTEHEAD Keyword - IWEL Example.....	2157
Table F.7: EGRID - Model Structural Data for Irregular Corner-Point Grids.....	2160
Table F.8: EGRID Header Keywords.....	2162
Table F.9: EGRID Global Irregular Corner Point Grid Keywords.....	2166
Table F.10: EGRID LGR Irregular Corner Point Grid Keywords.....	2169
Table F.11: EGRID NNC Keywords for Irregular Corner Point Grids.....	2172
Table F.12: INIT Data File Structure.....	2178
Table F.13: INIT Data - Static Data Header Keywords.....	2182
Table F.14: INIT Data - Static Grid Array Data Keywords.....	2186
Table F.15: INIT Data - LGR Static Data Header Keywords.....	2188
Table F.16: INIT Data - LGR Grid Array Data Keywords.....	2190
Table F.17: INIT Data - Static Tabular Data Header Keyword.....	2194
Table F.18: INIT Data - Static Tabular and Constant Data Array Keywords.....	2195
Table F.19: RESTART Data File Structure.....	2200
Table F.20: RESTART Data - Header Keywords.....	2210
Table F.21: RESTART Data - Group, Well and Connection Keywords (Groups).....	2217
Table F.22: RESTART Data - Group, Well and Connection Keywords (Multi-Segment Wells).....	2220
Table F.23: RESTART Data - Group, Well and Connection Keywords (Wells).....	2225
Table F.24: RESTART Data - Group, Well and Connection Keywords (Connections).....	2228
Table F.25: RESTART Data - Group, Well and Connection Keywords (Tracers).....	2229
Table F.26: RESTART Data - Group, Well and Connection Keywords (Network).....	2230
Table F.27: RESTART Data - UDQ Keywords.....	2233
Table F.28: RESTART Data - ACTIONX Keywords.....	2236
Table F.29: RESTART Data - Analytical Aquifer Data Keywords.....	2239
Table F.30: RESTART Data - Numerical Aquifer Data Keywords.....	2240
Table F.31: RESTART Data - Hidden Keyword.....	2242
Table F.32: RESTART Data - Solution Data keyword.....	2243
Table F.33: RESTART Data - Solution Data Keyword for Tracer Concentration Name.....	2244
Table F.34: RESTART Data - Solution Data Keywords.....	2249
Table F.35: RESTART Data - LGR Grid Header Keywords.....	2252
Table F.36: RESTART Data - LGR Solution Data Keywords.....	2253
Table F.37: RFT Data File Format.....	2257
Table F.38: RFT Data File - Time and Date Keywords.....	2257
Table F.39: RFT Data File - Well and Connection Data Keyword.....	2259
Table F.40: RFT Data File - RFT Solution Data Keywords.....	2260
Table F.41: Enhanced SUMMARY File Keywords.....	2265
Table F.42: SUMMARY Index File Keywords (Global).....	2268
Table F.43: SUMMARY Index File Keywords (LGR).....	2268
Table F.44: SUMMARY Index File Keywords (Commercial Simulator).....	2269
Table F.45: SUMMARY Data File Keywords.....	2271
Table F.46: SUMMARY Data File Keywords (LGR).....	2272

F.1 OVERVIEW

This section of the manual describes the various output files generated by OPM Flow and attempts to outline the format of the various files, in order for third party software to read and write these type of files. From the 2019-04 release a substantial effort has been undertaken to make OPM Flow's output files compatible with the commercial simulator's output files. This compatibility enables OPM Flow to "restart" from the commercial simulator's generated RESTART files as well as the commercial simulator to "restart" from the OPM Flow's RESTART files. Although, this might not be the case for all models, as restarting a simulation model from another simulators restart file is complicated and may not be possible in all cases.

Where applicable, files written by OPM Flow can be loaded into OPM ResInsight post processing software for further analysis and for displaying the results. Please see section [2.2 Running OPM Flow 2021-10 From The Command Line](#) for the various command line options for setting the output format type.

F.1.1 FILE TYPES

OPM Flow, similar to the commercial simulator, writes out various files, some of which are used by post processing software (OPM ResInsight) and some that are directly used by the user, for example the *.PRT file that contains various reports. Table F.1 summaries the various file formats and the status of the file formats currently supported by OPM Flow.

File Type	Data Type	Description	OPM Flow Status
DATA	Input Data	DATA files contain the input data in ASCII format used to run OPM Flow.	Fully Supported, as outlined in the manual
DBG	Debug Data	This file contains ASCII developer debug output specific to OPM Flow, that is there no compatibility with the commercial simulator's DBG file.	OPM Flow Specific
EGRID	Structure Data	EGRID files contain the structural information for the model via the COORD and ZCORN etc., keywords, and employs the extensible GRID format, which is more compact than the GRID formatted files and is the only format supported by OPM Flow. The output for this file type must be requested via the GRIDFILE – Set the Grid File Output Options in the GRID section. The data is used in post-processing software to view the grid and is not in itself used by OPM Flow.	Fully Supported
GRID	Structure Data	This file type contains the structural information for the model via the COORD and ZCORN etc., keywords, and consists of two data formats: 1) The standard GRID file format that contains only the active global cells. 2) The extended GRID file format that contains (1) plus local grid refinements and local coarsening grid specifications. Neither of these two formats are currently supported by OPM Flow.	Not Supported
INIT Index	Static Property Index	The INIT index file type specifies and defines the format and data type written to the INIT Data file. This file is not required by OPM Flow or OPM ResInsight to be able to read and write the INIT data file.	Not Supported and Not Required

File Type	Data Type	Description	OPM Flow Status
INIT Data	Static Property Data	<p>This file type contains static model properties, that is,</p> <ol style="list-style-type: none"> 1) Grid property data: porosity (PORO array), permeability (PERMX, PERMY, and PERMZ), net-to-gross (NTG), etc. 2) Region allocation array data: EQLUM, FIPNUM, PVTNUM, SATNUM, etc. 3) Fluid and rock property static data, including end-point scaling arrays: SGC, SGL, SOWCR, PCW etc. 4) Fluid and rock property tables: PVDG, PVTO, PCW, SGFN, SWFN, etc. <p>In order to request this type of output see the INIT – Activate the INIT File Option in the GRID section. Activating this keyword results in both the INIT static property index and data files being written out by the commercial simulator. OPM Flow only writes out this file as the index file is not required by OPM ResInsight.</p> <p>The data is used in post-processing software to view the grid property data and is not in itself used by OPM Flow.</p>	Fully Supported
LOG	Output File	<p>The LOG file for the commercial simulator contains an ASCII copy of the output from the terminal. The file itself is not generated by the commercial simulator but by an auxiliary program, ECLRUN, that is used to call and execute all the commercial simulators.</p> <p>OPM Flow does not generate a LOG file; however, the file can be generated by using the Linux <code>tee</code> command, for example:</p> <pre>flow CASENAME tee CASENAME.LOG</pre> <p>Which will copy the terminal output to the CASENAME.LOG file. Alternatively, one can use the OPMRUN, the Graphical User Interface (“GUI”) program for OPM Flow, that provides similar functionality to the commercial simulator’s auxiliary program.</p>	OPM Flow Specific
PRT	Output File	<p>This file contains ASCII user output reports specific to OPM Flow, although there is a strong desire to make the OPM Flow reports similar to those that are produced by the commercial simulator.</p>	OPM Flow Specific
RESTART Index	Dynamic Solution Index	<p>The RESTART index file type specifies and defines the format and data type written to the RESTART Data file. This file is not required by OPM Flow or OPM ResInsight to be able to read and write the RESTART data file.</p>	Not Supported and Not Required

File Type	Data Type	Description	OPM Flow Status
RESTART Data	Dynamic Solution Data	<p>This file type contains dynamic solution data for each active cell in the model at the user requested time steps, that is,</p> <ol style="list-style-type: none"> 1) Grid solution pressure and saturation data (PRESSURE, SGAS, SOIL, and SWAT). Note that Ternary saturations are normally computed by the post-processing software. 2) Grid solution fluid property data (GAS_DEN, GAS_VISC, OIL-DENS, etc.). <p>The <i>RPTRST – Define Data to be Written to the RESTART File</i> and the <i>RPTSCHED – Define SCHEDULE Section Reporting</i> keywords in the SCHEDULE defines the data and frequency of the data to be written to the RESTART file at each requested restart point. Activating this keyword results in both the RESTART index and data files being written out by the commercial simulator; OPM Flow only writes this file.</p> <p>In addition to the solution data, this file type also includes group and well configuration data (number of connections, connections open and closed etc.) This information is required to ensure that the correct group and well configuration is available at a given time in order to be able to restart the simulation at a restart point.</p> <p>The data is used to visualize the simulation results of the model in two and three dimensional space using post-processing software. The file is also used by OPM Flow to “restart” from a previous simulation case.</p>	Fully Supported
RFT	Dynamic Wellbore Vector Data	<p>Data written to the RFT file consists of wellbore vector data, for example, pressure and saturation versus wellbore depth at various time steps. The data written out is not restricted to just Repeat Formation Tester (“RFT”) data, but can contain any Production Logging Tool (“PLT”) data made available in the simulator. Note that only the RFT data set is currently supported by OPM Flow.</p> <p>The keywords <i>WRFT – Activate Well RFT Reporting to the RFT File</i> and <i>WRFTPLT – Activate Well RFT and PLT Reporting to the RFT File</i> in the SCHEDULE section are used to define the wells, data and time step at which the data should be written to the RFT file. The data is used in post-processing software to compare the actual wire line logging data with the simulation derived results.</p> <p>The file is not in itself used by OPM Flow.</p>	Fully Supported (RFT)
RSM	Output File	<p>The RSM file contains the variables requested to be written to the SUMMARY file via the keywords described in the <i>SUMMARY SECTION</i>, in a tabulated ASCII output format. The format of the file enables the data to be easily loaded into the LibreOffice Calc program for further processing, as each vector represents one column.</p> <p>The report is written at the end of the simulation run by parsing the SUMMARY Index and SUMMARY Data files.</p>	Fully Supported
SAVE	Static and Dynamic Data	<p>SAVE files are basically a combination of both the INIT and RESTART files, except for the static initialization data that also includes the processed data, that is the PORV and TRANX, TRANY and TRANZ arrays etc. This enables “fast restarts” as the pore volumes and transmissibility arrays do not have to be re-calculated in a “restart” run.</p> <p>This file type is currently not supported by OPM Flow.</p>	Not Supported

File Type	Data Type	Description	OPM Flow Status
SUMMARY ESMRY	Dynamic Vector Data	This is an OPM FLOW specific Enhanced SUMMARY (*.ESMRY) output file format that is optimized for fast loading of selected vectors by post-processing applications. The *.ESMRY file is re-written for every time step and does not have a performance impact on the simulation. Load times are in the order of 30 times faster compared with fetching selected vectors using the *.UNSMRY file format in post processing software.	Fully Supported
SUMMARY Index	Dynamic Vector Index	The SUMMARY index file type specifies and defines the format and data type written to the SUMMARY Data file.	Fully Supported
SUMMARY Data	Dynamic Vector Data	<p>The SUMMARY data file contains the variables requested to be written to the file via the keywords described in the SUMMARY SECTION. The data consists of vectors that are used to generate line graphs of properties such as oil flow rate versus time, grid plot pressure versus time, etc. The properties to be stored on the SUMMARY file are written to the summary file at the end of each successful time step.</p> <p>The data can be used to compare actual production data with the simulation derived results in post processing software.</p> <p>Note that although the file format is fully supported, not all of the SUMMARY variables are available.</p>	Fully Supported
<p>Notes:</p> <ol style="list-style-type: none"> 1) All files can be written out in either ASCII or binary formats, except for DBG , LOG. PRT and RSM files that are always written in ASCII format. 2) In addition, SUMMARY and RESTART files can be loaded or written out in either unified or non-unified formats. 3) File Type cells colored in gray indicate the output may be different to the commercial simulators equivalent file type. File Type cells colored in orange represent file types that are not currently supported by OPM Flow. 			

Table F.1: OPM Flow Output File Types Summary

As mentioned in Table F.1 all files can be written out in either ASCII or binary formats and in addition the SUMMARY and RESTART files can be loaded or written out in either unified or non-unified formats. The file type (ASCII or binary) and file structure format (unified or non-unified formats) are set via various keywords in the RUNSPEC section, as outlined in Table F.2.

Process	RUNSPEC Keyword	Description	Files
Input	FMTIN	<p>The keyword defines the input files to be formatted as ASCII i.e. text files, as oppose to binary files. The input deck file is always of this type.</p> <p>The option relates to the OPM Flow derived files that used as input, for for example when restarting from another case.</p> <p><u>If the keyword is omitted then the default is for binary file input.</u></p>	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY

Process	RUNSPEC Keyword	Description	Files
	MULTIN	A character string that defines the input files to be non-unified multiple files, as opposed to unified files. In this case, one file is read in per reporting time step, as opposed to all time steps reports being read from one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X0001 *.SMSPEC *.S0001
	UNIFIN	UNIFIN defines the input files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. For this option a single summary file and a single restart file will be read. <u>If the keyword is omitted then the default is for one file per report time step.</u>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Output	FMTOUT	The keyword sets all output files to be formatted as ASCII i.e. text files, as opposed to binary files. The *.DBG, *.LOG, *.PRT and *.RSM files are always of this type. The option relates to the OPM Flow output files only. In this case the files will be portable across operating systems, but will also be very large in terms of hard disk space. For this reason it is recommend that the default option is used so that only binary files are written out. <u>If the keyword is omitted then the default is for binary file input.</u>	*.FEGRID *.FINSPEC *.FINIT *.FRSSPEC *.FUNRST *.FSMSPEC *.FUNSMRY
	MULTOUT	A character string that defines the output files to be non-unified multiple files, as opposed to unified files. In this case, one file is written for each reporting time step, as opposed to all time steps reports being written in one file. <u>If the keyword is omitted then the default is for one file per reporting time step.</u>	*.RSSPEC *.X0001 *.SMSPEC *.S0001
	UNIFOUT	UNIFOUT defines the output files to be unified files, as opposed to non-unified multiple files. A unified file is a single file containing output for each reporting time step. Here a single summary file and a single restart file will be generated, as opposed to one file per report time step. <u>If the keyword is omitted then the default is for one file per report time step input.</u>	*.RSSPEC *.UNRST *.SMSPEC *.UNSMRY
Notes: <ol style="list-style-type: none"> 1) A binary file is computer-readable but not human-readable. All executable programs are stored in binary files, as are most numeric data files. In contrast, text files are stored in a form (usually ASCII) that is human-readable. 2) For unified files if the run terminates unexpectedly, or there is sufficient disk space, then the last report output is not stored. The main advantage of unified files is that if a number of simulation cases reside in one directory, the number of output files per case is minimum compared to using non-unified multiple files. There is no limit on the number of reporting steps that a unified file can store. 			

Table F.2: RUNSPEC Input and Output File Format Keywords

F.1.2 FILE NAMING CONVENTIONS

OPM Flow automatically generates the file names based on the input file name and the output options selected via the keywords in the RUNSPEC summarized in in Table F.2. For example, the command line syntax for running OPM Flow is:

```
flow [OPTIONS] CASENAME
```

and typing the following command from the terminal:

```
flow CASENAME
```

will start the simulator and run the case specified by CASENAME.DATA. Here CASENAME is the “root” of the filename and DATA is the extension of the filename. OPM Flow will generate the output files based on the CASENAME with the extension based on the type (ASCII or binary) and file structure format (unified or non-unified formats), as outlined in Table F.3. Note that if CASENAME includes a relative or absolute path to the data file, run directory will be set so that all output files are generated in the directory holding the data file.

File Type	Unformatted Extension	Description	Formatted Extension
DATA		Input data file.	*.DATA
DBG		Output debug file.	*.DBG
EGRID	*.EGRID	EGRID files containing the structural grid data and is the only format supported by OPM Flow. This output for this file type must be requested via the GRIDFILE – Set the Grid File Output Options in the GRID section.	*.FEGRID
GRID	*.GRID	Grid file in either the standard GRID file format or the extended GRID file format Neither of these two formats are currently supported by OPM Flow.	*.FGRID
INIT Index	*.INSPEC	The INIT index file for both unified and non-unified formats	*.FINSPEC
INIT	*.INIT	This file type contains static model properties.	*.FINIT
LOG		Output log file that contains a copy of the output from the terminal. The file itself is not generated by the commercial simulator but by an auxiliary program, ECLRUN, that is used to call and execute all the commercial simulators.	*.LOG
PRT		Output print file.	*.PRT
RESTART Index	*.RSSPEC	The RESTART index file for both unified and non-unified formats. This file is not required by OPM Flow or OPM ResInsight to be able to read and write the RESTART data file.	*.FRSSPEC
RESTART Data Non-Unified	*.Xnnnn	The RESTART data files containing the solution arrays requested to be written to the RESTART files. For example: CASENAME.X0001 CASENAME.X0002 CASENAME.X0003 etc. CASENAME.RSSPEC	*.Fnnnn
RESTART Data Unified	*.UNRST	The RESTART data file containing the solution arrays requested to be written to the RESTART file. For example: CASENAME.UNRST CASENAME.RSSPEC	*.FUNRST
RFT	*.RFT	The RFT data file containing wellbore vector data requested to be written to the RFT file. For example: CASENAME.RFT	*.FRFT
RSM		Output RSM file.	*.RSM

File Type	Unformatted Extension	Description	Formatted Extension
SAVE	*.SAVE	The SAVE file type is currently not supported by OPM Flow.	*.FSAVE
SUMMARY ESMRY	*.ESMRY	OPM Flow Enhanced SUMMARY (*.ESMRY) output file format that is optimized for fast loading of selected vectors by post-processing applications. Note that the FMTOUT, MULTOUT, and UNIFOUT keywords have no impact on this file type.	
SUMMARY Index	*.SMSPEC	The SUMMARY index file for both unified and non-unified formats.	*.FMSPEC
SUMMARY Data Non-Unified	*.Snnnn	The SUMMARY data files containing the variables requested to be written to the SUMMARY files. For example: CASENAME.S0001 CASENAME.S0002 CASENAME.S0003 etc. CASENAME.SMSPEC	*.Annnn
SUMMARY Data Unified	*.UNSMRY	The SUMMARY data file containing the variables requested to be written to the SUMMARY file. For example: CASENAME.UNSMRY CASENAME.SMSPEC	*.FUNSMRY
Notes: <ol style="list-style-type: none"> 1) The above file naming convention is for Linux type operating systems, as OPM Flow is currently only officially supported for Linux distributions. 2) File Type cells colored in gray indicate the output may be different to the commercial simulators equivalent file type. File Type cells colored in orange represent file types that are not supported by OPM Flow. 3) Formatted and Unformatted Extension cells colored in gray indicate the format is not available or not applicable. 			

Table F.3: OPM Flow File Naming Conventions

F.1.3 UNFORMATTED FILE FORMAT CONSIDERATIONS

Originally the commercial simulator was written in FORTRAN 77 and the current version is still written in a version of FORTRAN. FORTRAN unformatted file output is dependent on the FORTRAN compiler used to generated the executable program. Typically an unformatted record consists of a four byte prefix outlining the length of the record in bytes, then the actual data record, followed by suffix containing the length of the record in bytes. Most but not all compilers use four bytes. This aids in reading records, for example, the four byte record size at the end of the record assists with a backspace operation. If the record size is greater than two Gigabytes (2^{31} bytes), the record is divide into sub-records. In this case the sign bit of the prefix inform that the record is continued by a sub-record or not and the sign bit of the suffix indicate whether or not there is a preceding sub record.

OPM Flow unformatted files are written using the big-endian mode, that is the most significant value in the sequence is stored at the lowest storage address, that is first. This is opposite to the little-endian mode, where the least significant value in the sequence is stored first. For example, consider the number 1025 (2 to the tenth power plus one) stored in a for byte integer:

00000000 00000000 00000100 00000001

Address	Big-Endian Representation Of 1025	Little-Endian Representation Of 1025
00	00000000	00000001
01	00000000	00000100
02	00000100	00000000
03	00000001	00000000

Table F.4: Big-Endian and Little-Endian Representation

OPM Flow is written in C++ using the open source GNU C++ compiler and therefore developers using C++ need to ensure that unformatted files are read or written using the correct big-endian mode.

F.1.4 FILE OUTPUT FORMAT

All the files consist of a series of “header” keywords that defined various parameters based on their format type: integer, real, Boolean, double precision and character. For example for the INT and RESTART files the header keywords are:

- 1) SEQNUM: Report time step keyword (RESTART file only).
- 2) INTEHEAD: Integer (four byte) keyword that contains constant values for example, the dimensions of the model, as well as the location and length of data contained in the subsequent property keywords.
- 3) LOGIHEAD: Boolean or logical (four byte) keyword that consists of a set of either T (true) or F (false) character strings, for example, if dissolved gas is present in the model then set to T for true or F for false.
- 4) DOUBHEAD: Real double precision keyword (eight byte) that contain real values, for example, the current time step SCHEDULE section TUNING keyword parameter real values. Note that the integer parameters on the TUNING keyword are stored in the INTEHEAD keyword data array.

These are then followed by a series of “property” keywords that that outline the various additional data. For the RESTART files the header keywords are repeated for each time step a RESTART record is written. There are also additional header keywords for Local Grid Refinements (“LGR”) that are repeated for each LGR and for time step.

All the keywords follow the same format, including the property keywords, as outlined in Table F.5, which shows a portion of the INTEHEAD header keyword definition for the RESTART file.

No.	Description	Output File Keyword Format			Status Or Value
		Keyword	No. of Entries	Data Type	
	INTEHEAD	Global grid header keyword for the RESTART Data file that defines the integer variables for this time step. NIHEAD is the number of entries associated with this keyword, and is dependent on the features being used in the model. Undefined values should be set to zero.			Required
1-1	Format	INTEHEAD	NIHEAD	INTE	
2-1	Data	An encoded integer corresponding to the time the file was created. For files not originating from the commercial simulator, this value may be set to zero.			ISNUM
2-2	Data	Simulator version, should be set to zero.			VERSION
2-3	Data	Unit system used in the simulation, set to 1 for metric, 2 for field, and 3 for laboratory			
2-4	Data	Undefined.			0
Notes: 1) Rows shaded in gray indicate the start of a keyword. 2) Cells colored red in the No. column indicate that this item is either “Not Used” or “Undefined”.					

Table F.5: Output File Keyword Format

The row colored gray in the table specifies the start of a keyword definition and shows the format for the keyword (INTEHEAD) together with a description of the keyword. The next row, item 1-1 in the No. column, outlines the format of the keyword, that is the keyword name (INTEHEAD), the number of data entries for the keyword (NIHEAD) and the type of entries (INTE for integers). The next set of rows specify the individual data entries, for example, item 2-3 in the No. column is the third integer value that declares the

unit system for the file. Note that Cells colored red in the No. column indicate that this item is either “Not Used” or “Undefined”.

Note

Under the No. column in Table F.5 the count base is one (offset one), as per FORTRAN; however, in C++ the base is zero (offset zero) and therefore C++ programmers must subtract one from this column to obtain the correct reference.

This reference adjustment should be applied to all references in this Appendix.

OPM Flow is written in C++ developers should use offset zero in reviewing or modifying the code.

The Data Type variable in row I-I in Table F.5 should have one of the following values:

- 1) CHAR for eight character words enclosed in single quotes (ASCII character decimal 39) for formatted output.
- 2) DOUB for double precision eight byte real values.
- 3) INTE for standard four byte integers.
- 4) LOGI for standard four byte Boolean (logical) values.
- 5) MESS keyword that has no associated data.
- 6) REAL for single precision four byte real values.

All keywords follow the same format including the property array like PORO and PRESSURE. So for example, the INTEHEAD keyword would be like this in a typical formatted RESTART file:

```
'INTEHEAD'      249 'INTE'
-955283513      200400      2      -2345      -2345      -2345
      -2345      -2345      10      10      1      100
      10      -2345      7      -2345      0      1
      0      2      2      0      0      0
      110      108      109      3      97      93
      -2345      -2345      19      38      53      -2345
      97      93      146      5      0      1
      15      24      8      5      2      4
```

And the pressure and water saturation arrays would be of the same form in a typical formatted RESTART file:

```
'PRESSURE'      44431 'REAL'
0.26889725E+03  0.26838983E+03  0.26826810E+03  0.26820352E+03
0.26814493E+03  0.26809378E+03  0.26807767E+03  0.26806363E+03
0.26802625E+03  0.26798474E+03  0.26795001E+03  0.26791434E+03
0.26787915E+03  0.26783920E+03  0.26777118E+03  0.26769208E+03

'SWAT'          44431 'REAL'
0.10500000E+00  0.10500000E+00  0.10500000E+00  0.10500000E+00
0.10500000E+00  0.10500000E+00  0.10500000E+00  0.14000000E+00
0.14000000E+00  0.14500000E+00  0.14500000E+00  0.14500000E+00
0.14500000E+00  0.14500000E+00  0.16000000E+00  0.16000000E+00
```

Secondly, the No. Entries is the number of values following the keyword and as such cannot be used to determine the size of an array that is not associated with the grid, say for example the number of active

connections in a well. Instead, the array size is given in another property keyword. In this case, the number of elements for each well in the IWEL property array is given in the INTEHEAD keyword as shown in Table F.6 (see Table F.20 for a full description of the RESTART INTEHEAD keyword).

No.	Keyword Name	RESTART Data - Header Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	INTEHEAD	Global grid header keyword for the RESTART Data file.			Required
1-1	Format	INTEHEAD	NIHEAD	INTE	
2-17	Data	Number of wells in the model.			NWELLS
2-25	Data	Number of values per well in the IWEL array (default value is 97)			NIWELZ

Table F.6: INTEHEAD Keyword - IWEL Example

Now if INTEHEAD(17) was equal to three and INTEHEAD(5) was equal to five then the IWEL property array for the three wells would have the data arranged as shown in Figure F.1.

IWEL Property Array Data Layout INTEHEAD(17) = 3 and INTEHEAD(25) = 5														
Well-1					Well-2					Well-3				
Item 1	Item 2	Item 3	Item 4	Item 5	Item 1	Item 2	Item 3	Item 4	Item 5	Item 1	Item 2	Item 3	Item 4	Item 5
Pos 1	Pos 2	Pos 3	Pos 4	Pos 5	Pos 6	Pos 7	Pos 8	Pos 9	Pos 10	Pos 11	Pos 12	Pos 13	Pos 14	Pos 15

Figure F.1: IWEL Property Keyword Example

Here the Items are the values affiliated with a specific well and Pos(ition) is the actual position in the IWEL property array, shown as gray boxes in Figure F.1.

Similarly for well connections and completions. In this case the maximum number of connections for all the wells is given in INTEHEAD(18) element and a well's current number of connections is given via the IWEL(5) element in the IWEL property array (see Table F.26 for a detailed description of the IWEL keyword).

Now if the number of wells equal two (INTEHEAD(17)) and INTEHEAD(18) is equal to four, that is the maximum number of connections is set to four, together with IWEL(5) equal to three for the first well and four for the second well, the ICON property array for the two wells would have the data arranged as shown in Figure F.2.

ICON Property Array Data Layout

INTEHEAD(17) = 2 and INTEHEAD(18) = 4

Well-1 with IWEL(5) = 3 and Well-2 with IWEL(5) = 4

ICON Array																							
Well-1												Well-2											
Conn-1			Conn-2			Conn-3			Conn-4			Conn-1			Conn-2			Conn-3			Conn-4		
I	J	K	I	J	K	I	J	K	0	0	0	I	J	K	I	J	K	I	J	K	I	J	K
Position																							
1	2	3	4	5	6	7	8	9	1	1	1	1	1	1	1	1	1	1	2	2	2	2	2
									0	1	2	3	4	5	6	7	8	9	0	1	2	3	4

Figure F.2: ICON Property Keyword Example

Here the connection co-ordinates are given by (I,J,K) and the actual position in the ICON array is shown in the gray colored boxes. Notice that Well-1 has the required maximum number of connections but the fourth connection has the default values of zero, as the $IWEL(5)$ value for this well only has three active connections.

Note also that the number of data elements per connection in the ICON vector is given by $NICONZ$ which is given by $INTEHEAD(33)$ and that the size of the ICON vector is $NICONZ \times NCWMAX \times NWELLS$, where $NCWMAX$ is set by $INTEHEAD(18)$ and $NWELLS$ by $INTEHEAD(17)$. In the example, $NICONZ$ was assumed to be three for illustrative purposes, while the actual value is a constant 25 in the most recent versions of the commercial simulator. These arbitrary constants, like $NICONZ$, use to determine vector lengths, appear to be constant for various versions of the commercial simulator.

The following sections outline the format of the various individual files supported by OPM Flow, except for the DBG, LOG, PRT, and RSM ASCII format files.

F.2 EGRID - MODEL STRUCTURAL DATA FOR IRREGULAR CORNER-POINT GRIDS FILE

EGRID files contain the structural information for the model via the COORD and ZCORN etc., keywords, and employs the extensible GRID format, which is more compact than the GRID formatted files and is the only format supported by OPM Flow.

The output for this file type must be requested via the [GRIDFILE – Set the Grid File Output Options](#) in the GRID section, as shown below:

```
--
--      GRID FILE OUTPUT OPTIONS
--      GRID      EGRID
--      OPTN      OPTN
GRIDFILE      0      1      /
```

The above example defines that no GRID file will be written out and that the extensible GRID (that is the EGRID geometry format) file will be produced. This is the only configuration that OPM Flow supports.

The FMTIN and FMOUT keywords in the RUNSPEC section defines the input and output files to be formatted as ASCII i.e. text files, (*.FEGRID), as oppose to unformatted binary files (*.EGRID). If these keywords are omitted then the default is for unformatted binary file input.

The EGRID file structure consists of a series header keywords that define the header keyword data type, the number of data entries, and then the associated header keyword data. There are a total of four major keyword header types for this file type (1) File Header, (2) Global Grid Header, (3) Local Grid Refinement Header²³² (repeated for each local grid refinement in the model), and (4) Non-Neighbor Connection Header.

In addition to the structural data, this file type also contains information describing the geometry relationship between the global grid and any Local Grid Refinements (“LGR”) that are present in the model, together with the Non-Neighbor Connections (“NNC”) that may be present due to structural discontinuities. The overall structure of this file is outlined in Table F.7

Reference Section	Global Section Keywords	Global Data Keywords	LGR Section Keywords	LGR Data Keywords	Notes
F.2.1	FILEHEAD MAPUNITS MAPAXES GRIDUNIT GDORIENT				EGRID header keyword that defines various Global Grid grid properties
F.2.2	GRIDHEAD	COORD ZCORN etc.			EGRID global irregular corner point grid keyword that defines the grid geometry
F.2.2	ENDGRID				Marks the end of the EGRID global irregular corner point grid keyword
F.2.3			LGR LGRPARNT LGRSGRID		EGRID LGR irregular corner point grid keyword that defines the LGR name and optionally the nested or parent LGRs associated with this LGR.

²³² Several keywords are used for both global and LGR grids, for example the GRIDHEAD, COORD, ZCORN keywords.

Reference Section	Global Section Keywords	Global Data Keywords	LGR Section Keywords	LGR Data Keywords	Notes
F.2.3			GRIDHEAD	COORD ZCORN etc.	EGRID LGR irregular corner point grid keyword that defines the grid geometry
F.2.3			ENDGRID		Marks the end of the EGRID LGR irregular corner point grid keyword
F.2.3			ENDLGR		Sets the end of current LGR section.
F.2.3			LGR LGRPARNT LGRSGRID		EGRID LGR irregular corner point grid keyword that defines the LGR name and optionally the nested or parent LGRs associated with this LGR
F.2.3			GRIDHEAD	COORD ZCORN etc.	EGRID LGR irregular corner point grid keyword that defines the grid geometry
F.2.3			ENDGRID		End of the EGRID LGR grid section.
F.2.3			ENDLGR		Sets the end of current LGR section.
F.2.4	NNCHEAD	NNC1 NNC2			EGRID Global Non-Neighbor Connections for Irregular Corner Point Grid keywords.
F.2.4			NNCHEAD	NNC1 NNC2 NNCL NNCG	First LGR EGRID global and local non-neighbor connections for irregular corner point grid keywords.
F.2.4			NNCHEAD	NNC1 NNC2 NNCL NNCG	Second LGR EGRID global and local non-neighbor connections for irregular corner point grid keywords.
F.2.4			NNCHEADA	NNA1 NNA2	EGRID amalgamated and local non-neighbor connections for irregular corner point grid keywords.
Notes: 1) Cells shaded in gray indicate the combination is not applicable and cells colored orange indicate that this item is not currently supported by OPM Flow.					

Table F.7: EGRID - Model Structural Data for Irregular Corner-Point Grids

Each major header keyword is subdivided into a series of sub-header keywords that define a particular data set. The general format for a header keyword is the keyword (enclosed in single quotes), followed by the number of data entries (an integer value), followed by the data type which is set to CHAR, INTE, or REAL (enclosed in quotes). This will then be followed by the data for the keyword.

The following sections describe the format of the various keywords and the associated data sets.

F.2.1 EGRID HEADER KEYWORDS

The FILEHEAD keyword defines the key attributes of the file via a series of integer constants, this is then followed by the MAPUNITS, MAPAXES, GRIDUNIT and GDORIENT keywords and their data sets. Note that some keywords are optional and are not used by OPM Flow per se, but are used by pre- and post processing software. Secondly, some features are not supported by OPM Flow, for example local grid refinements, and thus OPM will not write out the data associated with these features.

Table F.8 outlines the structure of the EGRID Header Keywords and their affiliated data.

No.	Keyword Name	EGRID Header Keyword Table F.8			Status Or Value
		Keyword	No. of Entries	Data Type	
	FILEHEAD	This keyword marks the start of the EGRID file and defines various parameters associated with this file type.			Required
1-1	Format	FILEHEAD	100	INTE	
2-1	Data	Version number for this file type, for example 3.			3
2-2	Data	The year this version of the file format was released, for example 2004.			2004
2-3	Data	Not used.			
2-4	Data	Version number of earliest this file format is supported, normally set to 0.			0
2-5	Data	Type of grid, set to 0 for Irregular Corner-Point Grids, 1 for Unstructured Grids, or 2 for a mixture of Irregular Corner-Point and Unstructured Grids (Mixed Grids).			0
2-6	Data	Type of rock model, set to 0 for a single porosity/permeability rock model, 1 for dual porosity rock model, or 3 for a dual permeability rock model.			0
2-7	Data	Original grid format, set to 0 for unknown, 1 for Irregular Corner-Point Grids, or 2 for Cartesian Regular Grids.			
2-8 to 2-100	Data	Not used			0
	MAPUNITS	This keyword defines the MAPUNITS.			Optional
1-1	Format	MAPUNITS	1	CHAR	
2-1	Data	The units of the map data, normally set to FEET or METRES.			
	MAPAXES	The MAPAXES keyword defines the grid position relative to the map coordinates. The six values in the data fields define the relative map (x, y) coordinates for three locations to enable conversion from grid to map coordinate in pre- and post processing software.			Optional
1-1	Format	MAPAXES	6	REAL	
2-1	Data	X-coordinate on the y-axis located at the end of the y-axis.			
2-2	Data	Y-coordinate on the y-axis located at the end of the y-axis.			
2-3	Data	X-coordinate at the origin.			
2-4	Data	Y-coordinate at the origin.			
2-5	Data	X-coordinate on the x-axis located at the end of the x-axis.			
2-6	Data	Y-coordinate on the x-axis located at the end of the x-axis.			

No.	Keyword Name	EGRID Header Keyword Table F.8			Status Or Value
		Keyword	No. of Entries	Data Type	
	GRIDUNIT	The GRIDUNIT keyword defines units of the COORD and ZCORN arrays and the grid coordinate space			Required
1-2	Format	GRIDUNIT	2	CHAR	
2-1	Data	The first entry defines units of the COORD and ZCORN arrays and should be normally set to FEET or METRES (enclosed in single quotes).			
2-2	Data	The second entry defines the grid coordinate space (MAP or MAPFT if COORD and ZCORN are defined in map coordinates, or blank if in grid coordinates (' ')).			
	GDORIENT	Grid orientation keyword defines the property ordering in the I, J, and K dimensions, the direction of the Z-direction, and the “handedness of the grid.			Optional
1-1	Format	GDORIENT	5	CHAR	
2-1	Data	Define the property ordering in the I dimension (set to either INC for increasing or DEC for decreasing).			
2-2	Data	Define the property ordering in the J dimension (set to either INC for increasing or DEC for decreasing).			
2-3	Data	Define the property ordering in the K dimension (set to either INC for increasing or DEC for decreasing).			
2-4	Data	Declare the direction of the Z-direction, should be set to either UP or DOWN.			
2-5	Data	Set the “handedness of the grid., should be set to either LEFT or RIGHT.			
Notes:					
1) Rows shaded in gray indicate the start of a keyword.					
2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow and those colored red are either “Not Used” or “Undefined”.					
3) For formatted output all character variables, including the keywords should be enclosed in single quotes, for example the FILEHEAD keyword should be written out as 'FILEHEAD'.					
4) GDORIENT keyword in the GRID section is not supported by OPM Flow.					

Table F.8: EGRID Header Keywords

Example: EGRID Header Keywords

The following example shows a typical formatted file EGRID header keyword data set taken from the Norne model.

```
'FILEHEAD'      100 'INTE'
                   3      2004      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
                   0      0      0      0      0      0
'MAPAXES'      6 'REAL'
  0.00000000E+00  0.10000000E+03  0.00000000E+00  0.00000000E+00
  0.10000000E+03  0.00000000E+00
'GRIDUNIT'      2 'CHAR'
'METRES'      ' '      ' '      ' '      ' '      ' '
```

Notice that the GDORIENT keyword is not written out.

F.2.2 EGRID GLOBAL IRREGULAR CORNER POINT GRID KEYWORDS

Following the EGRID Header Keyword data set, the EGRID Global Irregular Corner Point Grid Keywords should be read or written to the EGRID file. This data set includes the actual structural data for the model, that is the COORD and ZCORN keyword data, as well as the ACTNUM keyword data that defines if a given cell is active (set to 1), or inactive (set to zero). The structure for this type data is defined in Table F.9.

No.	Keyword Name	EGRID Global Irregular Corner Point Grid Keywords Table F.9			Status Or Value
		Keyword	No. of Entries	Data Type	
	GRIDHEAD	Global grid keyword that defines the start of this keyword type.			Required
1-1	Format	GRIDHEAD	100	INTE	
2-1	Data	Type of grid, set to 0 for a mixture of Irregular Corner-Point and Unstructured Grids, 1 for Irregular Corner-Point Grids, and 2 for Unstructured Grids. Only the default value of one is supported by OPM Flow.			1
2-2	Data	The number of grid blocks in the x-direction (NX).			
2-3	Data	The number of grid blocks in the y-direction (NY).			
2-4	Data	The number of grid blocks in the z-direction (NZ).			
2-5	Data	The grid reference number set to zero for the global grid or a value greater than zero to represent a LGR. For example if there are five LGR's, then this complete data set is repeated six times, once for the global grid, and five times for the five LGRs., with the first LGR having a reference number of 1 and the last LGR having a reference number of 5.			
2-6 to 2-24	Data	Not used.			0
2-25	Data	NUMRES the number of reservoirs, that is the number COORD data sets to be processed by OPM Flow. This should be set to one as the only value supported by OPM Flow			1
2-26	Data	NSEG the number of coordinate line segments, should be set to 1.			1
2-27	Data	Cartesian/Radial grid indicator set to 0 for Cartesian grids and greater than zero for radial grids. Currently OPM Flow does not support radial geometries so this value should always be set to zero.			0
2-28	Data	The LGR location of the lower I-index LGR in the global grid. This value should be set to zero if there is no LGR grids.			0
2-29	Data	The LGR location of the lower J-index LGR in the global grid. This value should be set to zero if there is no LGR grids.			0
2-30	Data	The LGR location of the lower K-index LGR in the global grid. This value should be set to zero if there is no LGR grids.			0
2-31	Data	The LGR location of the upper I-index LGR in the global grid. This value should be set to zero if there is no LGR grids.			0
2-32	Data	The LGR location of the upper J-index LGR in the global grid. This value should be set to zero if there is no LGR grids.			0
2-33	Data	The LGR location of the upper K-index LGR in the global grid. This value should be set to zero if there is no LGR grids.			0

No.	Keyword Name	EGRID Global Irregular Corner Point Grid Keywords Table F.9			Status Or Value
		Keyword	No. of Entries	Data Type	
2-34 to 2-100	Data	Not used by OPM Flow.			0
	BOXORIG	Not supported.			Optional
1-1	Format	BOXORIG	3	INTE	
2-1 to 2-3	Data	Ignored by OPM Flow.			
	COORD	Property keyword that defines the start of the COORD data set. The COORD data defines a set of coordinate lines or pillars for a reservoir grid via an array. The number of data values for this keyword should be $6 \times (NX+1) \times (NY+1) \times NUMRES$. Where NUMRES represents the number of separate coordinate lines (or reservoirs). In OPM Flow NUMRES can only be set to one.			Required
1-1	Format	COORD	$6 \times (NX+1) \times (NY+1)$	REAL	
2-1	Data	COORD data in the same format as the COORD keyword described in the GRID section of the manual.			
	COORDSYS	Coordinate definitions for each NUMRES reservoir. The number of data values for this keyword should be $6 \times NUMRES$. Where NUMRES represents the number of separate coordinate lines (or reservoirs). In OPM Flow NUMRES can only be set to one.			Optional
1-1	Format	COORDSYS	6	INTE	
2-1 to 2-6	Data	Ignored by OPM Flow.			
	ZCORN	Property keyword that defines the start of the ZCORN data set. ZCORN defines the depth of each corner point of a grid block on the pillars defining the reservoir grid. The number of data values for this keyword should be $8 \times NX \times NY \times NZ$.			Required
1-2	Format	ZCORN	$8 \times NX \times NY \times NZ$	REAL	
1-3	Type	Type of data in the Data fields.			
2-1	Data	ZCORN data in the same format as the ZCORN keyword described in the GRID section of the manual.			
	ACTNUM	Property keyword that defines the start of the ACTNUM data set. ACTNUM specifies which grid blocks are active or inactive. A value of 1 indicates the block is active and a value of 0 indicates the block is inactive. Although this data set status is set to Optional, it is normally always written out by pre-processing software. The number of data values for this keyword should be $NX \times NY \times NZ$ integer values.			Optional
1-1	Format	ACTNUM	$NX \times NY \times NZ$	INTE	

No.	Keyword Name	EGRID Global Irregular Corner Point Grid Keywords Table F.9			Status Or Value
		Keyword	No. of Entries	Data Type	
2-1	Data	ACTNUM data in the same format as the ACTNUM keyword described in the GRID section of the manual.			
	CORSNUM	Property keyword that defines the start of the CORSNUM data set for when the grid has been coarsened. The number of data values for this keyword should be NX x NY x NZ integer values. Grid coarsening is currently not supported in OPM Flow.			Optional
1-1	Format	CORSNUM	NX x NY x NZ	INTE	
2-1	Data	CORSNUM data set.			
1-1	ENDGRID	The ENDGRID keyword marks the end of the these set of keywords. Always set to 0 to indicate that there is no data section following this keyword.			Required
1-2	Format	ENDGRID	0	INTE	0
Notes: <ol style="list-style-type: none"> 1) Rows shaded in gray indicate the start of a keyword. 2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow and those colored red are either "Not Used" or "Undefined". 3) For formatted output all character variables, including the keywords, should be enclosed in single quotes, for example the GRIDHEAD keyword should be written out as 'GRIDHEAD'. 					

Table F.9: EGRID Global Irregular Corner Point Grid Keywords

Example: EGRID Global Irregular Corner Point Grid Keywords

The following example shows a typical formatted EGRID Global Irregular Corner Point Grid Keywords data set, taken from the Norne model.

'GRIDHEAD'		100 'INTE'				
1	46	112	22	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
1	1	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
0	0	0	0	0	0	
'COORD'		31866 'REAL'				
0.45311400E+06	0.73199210E+07	0.30374729E+04	0.45311400E+06	0.73199210E+07	0.30374729E+04	0.45311400E+06
0.73199210E+07	0.31328311E+04	0.45315503E+06	0.73198400E+07	0.31328311E+04	0.45315503E+06	0.73198400E+07
0.29839331E+04	0.45314275E+06	0.73198640E+07	0.31735720E+04	0.45314275E+06	0.73198640E+07	0.31735720E+04
0.45319609E+06	0.73197590E+07	0.30059690E+04	0.45317150E+06	0.73197590E+07	0.30059690E+04	0.45317150E+06
0.73198075E+07	0.32158359E+04	0.45323716E+06	0.73196780E+07	0.32158359E+04	0.45323716E+06	0.73196780E+07
0.30002649E+04	0.45320025E+06	0.73197510E+07	0.32172500E+04	0.45320025E+06	0.73197510E+07	0.32172500E+04
0.45327819E+06	0.73195970E+07	0.29893479E+04	0.45322903E+06	0.73195970E+07	0.29893479E+04	0.45322903E+06
0.73196940E+07	0.32139509E+04	0.45331925E+06	0.73195165E+07	0.32139509E+04	0.45331925E+06	0.73195165E+07
.....						
'ZCORN'		906752 'REAL'				
0.30374729E+04	0.29839331E+04	0.29839331E+04	0.30059690E+04	0.30374729E+04	0.29839331E+04	0.29839331E+04
0.30059690E+04	0.30002649E+04	0.30002649E+04	0.29893479E+04	0.30059690E+04	0.30002649E+04	0.30002649E+04
0.29893479E+04	0.29956799E+04	0.29956799E+04	0.30008550E+04	0.29893479E+04	0.29956799E+04	0.29956799E+04
0.30008550E+04	0.30052520E+04	0.30052520E+04	0.30308621E+04	0.30008550E+04	0.30052520E+04	0.30052520E+04
0.30308621E+04	0.30368701E+04	0.30368701E+04	0.30380171E+04	0.30308621E+04	0.30368701E+04	0.30368701E+04
0.30380171E+04	0.30450271E+04	0.30450271E+04	0.30554099E+04	0.30380171E+04	0.30450271E+04	0.30450271E+04
0.30554099E+04	0.30665410E+04	0.30665410E+04	0.30766240E+04	0.30554099E+04	0.30665410E+04	0.30665410E+04
0.30766240E+04	0.30869380E+04	0.30869380E+04	0.30961531E+04	0.30766240E+04	0.30869380E+04	0.30869380E+04
.....						
'ACTNUM'		113344 'INTE'				
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
.....						
'ENDGRID'		0 'INTE'				

End of Example

F.2.3 EGRID LGR Irregular Corner Point Grid Keywords

The data structure for Local Grid Refinement ("LGR") Irregular Corner Point Grids is similar to the global grid format described in the previous section. Additional data that defines the LGR properties (LGR Name for example) are included in this definition and the LGR keywords are repeated for each LGR in the model. The keyword description is outlined in Table F.10.

Note that currently OPM Flow does not support LGR grids and therefore this series of keywords cannot be used by OPM Flow.

No.	Keyword Name	EGRID LGR Irregular Corner Point Grid Keywords Table F.10 (Repeated For Each LGR In The Model)			Status Or Value
		Keyword	No. of Entries	Data Type	
	LGR	LGR keyword defines the start of the LGR section of keywords and is required when LGRs are in the model.			Required
1-1	Format	LGR	1	CHAR	
2-1	Data	Name of the LGR			
	LGRPARNT	Start of LGRPARNT keyword that defines the parent LGR for when nested LGR have been used.			Optional
1-1	Format	LGRPARNT	1	CHAR	
2-1	Data	Name of parent LGR			
	LGRSGRID	Start of the LGRSGRID keyword for LGRs parented from a sub-grid.			Optional
1-1	Format	LGRSGRID	1	CHAR	
2-1	Data	Name of parent LGR			
	GRIDHEAD	LGR grid keyword that defines the start of this keyword type for the LGR. The format is the same as the Global grid keyword - see Table F.9.			Required
	BOXORIG	Not supported. The format is the same as the Global grid keyword - see Table F.9.			Optional
	COORD	Property keyword that defines the start of the LGR COORD data set. The COORD data defines a set of coordinate lines or pillars for LGR grid via an array. The format is the same as the Global grid keyword - see Table F.9.			Required
	COORDSYS	Coordinate definitions for the LGR. The format is the same as the Global grid keyword - see Table F.9.			Optional
	ZCORN	Property keyword that defines the start of the LGR ZCORN data set. The format is the same as the Global grid keyword - see Table F.9.			Required
	ACTNUM	Property keyword that defines the start of the LGR ACTNUM data set. The format is the same as the Global grid keyword - see Table F.9.			Optional
	HOSTNUM	Property keyword that defines the start of the HOSTNUM data set, which is only applicable to LGR grids. Number of data values for this keyword should be NX x NY x NZ integer values.			Required
1-1	Format	HOSTNUM	NX x NY x NZ	INTE	

No.	Keyword Name	EGRID LGR Irregular Corner Point Grid Keywords Table F.10 (Repeated For Each LGR In The Model)			Status Or Value
		Keyword	No. of Entries	Data Type	
2-1	Data	HOSTNUM data set.			
	ENDGRID	The ENDGRID keyword marks the end of the LGR Grid Header section. Always set to 0 to indicate that there is no Data section for this keyword.			Required
1-1	Format	ENDGRID	0	INTE	0
	ENDLGR	ENDLGR keyword marks the end of the LGR Header section. Always set to 0 to indicate that there is no Data section for this keyword.			Required
1-1	Format	ENDLGR	0	INTE	0
Notes: <ol style="list-style-type: none"> 1) Rows shaded in gray indicate the start of a keyword. 2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow. 3) For formatted output all character variables, including the keywords, should be enclosed in single quotes, for example the LGR keyword should be written out as 'LGR'. 					

Table F.10: EGRID LGR Irregular Corner Point Grid Keywords

Note that this data set is repeated for each LGR in the model as demonstrated in the following example.

Example: EGRID LGR Irregular Corner Point Grid Keywords

The following example shows a typical formatted data set for this series of keywords with two Cartesian LGR grids, named LGR-1 and LGR-2 define via the following CARFIN keyword statements:

```
--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- FINE GRID -----  -- CARFIN GRID --  MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS  NAME
CARFIN
      'LGR-1'      2  2  2  2  1  1      2      2      2      1      GLOBAL /
CARFIN LGR GRID PARAMETERS

--
--      CARFIN LGR GRID COMMANDS
--
--      LGR      ----- FINE GRID -----  -- CARFIN GRID --  MAX      HOST
--      NAME      I1  I2  J1  J2  K1  K2      NX      NY      NZ      WELLS  NAME
CARFIN
      'LGR-2'      9  9  9  9  1  1      2      2      2      1      GLOBAL /
CARFIN LGR GRID PARAMETERS

ENDFIN
```

The resulting keywords are as follows:

```

'LGR' 1 'CHAR'
'LGR-1'
'LGRPARNT' 1 'CHAR'
'
'GRIDHEAD' 100 'INTE'
1 2 2 2 1 0
0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0
1 1 0 2 2 1
.....
0 0 0 0
'COORD' 54 'REAL'
0.10000000E+04 0.10000000E+04 0.00000000E+00 0.10000000E+04
0.10000000E+04 0.10000000E+04 0.15000000E+04 0.10000000E+04
0.00000000E+00 0.15000000E+04 0.10000000E+04 0.10000000E+04
0.20000000E+04 0.10000000E+04 0.00000000E+00 0.20000000E+04
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.15000000E+04
.....
0.20000000E+04 0.10000000E+04
'ZCORN' 64 'REAL'
0.83250000E+04 0.83250000E+04 0.83250000E+04 0.83250000E+04
0.83250000E+04 0.83250000E+04 0.83250000E+04 0.83250000E+04
0.83250000E+04 0.83250000E+04 0.83250000E+04 0.83250000E+04
0.83350000E+04 0.83350000E+04 0.83350000E+04 0.83350000E+04
.....
0.83450000E+04 0.83450000E+04 0.83450000E+04 0.83450000E+04
'ACTNUM' 8 'INTE'
1 1 1 1 1 1
1 1
'HOSTNUM' 8 'INTE'
12 12 12 12 12 12
12
'ENDGRID' 0 'INTE'
'ENDLGR' 0 'INTE'
'LGR' 1 'CHAR'
'LGR-2'
'LGRPARNT' 1 'CHAR'
'
'GRIDHEAD' 100 'INTE'
1 2 2 2 2 0
.....
0 0 0 0
'COORD' 54 'REAL'
0.80000000E+04 0.80000000E+04 0.00000000E+00 0.80000000E+04
0.80000000E+04 0.10000000E+04 0.85000000E+04 0.80000000E+04
.....
0.90000000E+04 0.10000000E+04
'ZCORN' 64 'REAL'
0.83250000E+04 0.83250000E+04 0.83250000E+04 0.83250000E+04
.....
0.83450000E+04 0.83450000E+04 0.83450000E+04 0.83450000E+04
'ACTNUM' 8 'INTE'
1 1 1 1 1 1
1 1
'HOSTNUM' 8 'INTE'
89 89 89 89 89 89
89
'ENDGRID' 0 'INTE'
'ENDLGR' 0 'INTE'

```

End of Example

F.2.4 EGRID Non-Neighbor Connections for Irregular Corner Point Grid KEYWORDS

The keywords in this section are used to define Non-Neighbor Connections (“NNC”) for both the global grid and any LGR’s included in the model. This data set is only written out if there are NNCs in the model and can be skipped if this is the case; however, apart from very simple models, nearly all full field models will have NNCs as a result of modeling the structural faults in the model. Likewise, the keywords affiliate with LGRs are also skipped if there are no LGRs in the model.

Note that actual NNC transmissibility data for the NNCs (TRANX, TRANY and TRANZ) are stored in the INIT Data File and not in the EGRID File.

The keyword definitions are tabulated in Table F.11.

No.	Keyword Name	EGRID Non-Neighbor Connections Keywords For Irregular Corner Point Grids			Status Or Value
		Table F.11			
		Keyword	No. of Entries	Data Type	
	NNCHEAD	This keyword marks the start of the non-neighbor keywords and defines the number of non-neighbor connections.			Required
1-1	Format	NNCHEAD	10	INTE	
2-1	Data	The number of non-neighbor connections (NUMNNC)			
2-2	Data	Grid identifier set to zero for the global grid, or a value greater than zero to represent a LGR.			
2-3 to 2-10	Data	Not used.			
	NNC1	NNC1 defines the cell numbers for the UPSTREAM non-neighbor connections, where NUMNNC is the number of non-neighbor connections.			Required
1-1	Format	NNC1	NUMNNC	INTE	
2-1	Data	NUMNNC integer values defining the cell numbers for the UPSTREAM non-neighbor connections.			
	NNC2	NNC2 defines the cell numbers for the DOWNSTREAM non-neighbor connections, where NUMNNC is the number of non-neighbor connections			Required
1-1	Format	NNC2	NUMNNC	INTE	
2-1	Data	NUMNNC integer values defining the cell numbers for the DOWNSTREAM non-neighbor connections.			
	NNCL	This keyword defines the local cells connected to the global grid, where NCONGL is the number of entries.			Optional
1-1	Format	NNCL	NCONCL	INTE	
2-1	Data	NCONCL integer values defining the local cells connected to the global grid.			
	NNCG	This keyword defines the global cells connected to the current local grid being defined by this section of keywords, where NCONGL is the number of entries.			Optional
1-1	Format	NNCG	NCONGL	INTE	

No.	Keyword Name	EGRID Non-Neighbor Connections Keywords For Irregular Corner Point Grids			Status Or Value
		Table F.11			
		Keyword	No. of Entries	Data Type	
2-1	Data	NCONGL integer values defining the global cells connected to the current local grid.			
	NNCHEADA	This keyword defines the connection between two LGRs that have been amalgamated.			Optional
1-1	Format	NNCHEADA	10	INTE	
2-1	Data	LGR index of the first LGR in the amalgamation (ILOCI).			
2-2	Data	LGR index of the second LGR in the amalgamation (ILOCI2).			
2-3 to 2-10		Not used			
	NNAI	This keyword defines the ILOCI cells connected in the amalgamation, where NUMNCA is the number of entries.			Optional
1-1	Format	NNAI	NUMNCA	INTE	
2-1	Data	NUMNCA integer values defining the ILOCI cells connected in the amalgamation.			
	NNA2	This keyword defines the ILOCI2 cells connected in the amalgamation, where NUMNCA is the number of entries.			
1-1	Format	NNA2	NUMNCA	INTE	
2-1	Data	NUMNCA integer values defining the ILOCI2 cells connected in the amalgamation.			

Notes:

1)

Rows shaded in gray indicate the start of a keyword.

2)

Cells colored orange in the No. column indicate that this item is not supported by OPM Flow and those colored red are either “Not Used” or “Undefined”.

3)

For formatted output all character variables, including the keywords, should be enclosed in single quotes, for example the NNCHHEAD keyword should be written out as ‘NNCHHEAD’.

4)

Local Grid Refinements are currently not supported by OPM Flow and neither therefore is LGR amalgamation of LGRs.

Table F.11: EGRID NNC Keywords for Irregular Corner Point Grids

Note that if LGR's are present in the model then the keywords relating to LGRs are repeated for each LGR in the model.

Example: EGRID Grid Keywords for Non-Neighbor Connections for Irregular Corner Point Grids

The example shows the NNCs for the global grid and two LGRs.

```

'NNCHEAD '      10 'INTE '
      11363      0      0      0      0      0
      0      0      0      0
'NNC1 '      11363 'INTE '
      5717      5717      21173      26325      31477      36629
      41781      46933      52085      57237      62389      67541
      72693      77845      82997      88149      93301      103605
.....
'NNC2 '      11363 'INTE '
      566      10870      26326      31478      36630      41782
      46934      52086      57238      62390      67542      72694
      77846      82998      88150      93302      98454      98454
      103606      612      5764      26372      21220      31524
.....

'NNCHEAD '      10 'INTE '
      0      1      0      0      0      0
      0      0      0      0
'NNC1 '      0 'INTE '
'NNC2 '      0 'INTE '
'NNCL '      16 'INTE '
      1      5      3      7      1      5
      2      6      2      6      4      8
      3      7      4      8
'NNCG '      16 'INTE '
      11      11      11      11      2      2
      2      2      13      13      13      13
      22      22      22      22
'NNCHEAD '      10 'INTE '
      0      2      0      0      0      0
      0      0      0      0
'NNC1 '      0 'INTE '
'NNC2 '      0 'INTE '
'NNCL '      16 'INTE '
      1      5      3      7      1      5
      2      6      2      6      4      8
      3      7      4      8
'NNCG '      16 'INTE '
      88      88      88      88      79      79
      79      79      90      90      90      90
      99      99      99      99

```

End of Example

F.3 EGRID - MODEL STRUCTURAL DATA FOR UNSTRUCTURED GRIDS FILE

This file format is currently not supported by OPM Flow.

F.4 EGRID - MODEL STRUCTURAL DATA FOR MIXED GRIDS FILE

This file format is currently not supported by OPM Flow.

F.5 GRID - MODEL STRUCTURAL DATA FILE

This file format is currently not supported by OPM Flow.

F.6 INIT – MODEL INITIALIZATION AND STATIC DATA FILE

The INIT files contain the static data specified in the GRID, PROPS and REGIONS sections. For example, the PORO, PERM and NTG arrays from the GRID section and the resulting PORV and TRANX, TRANY and TRANZ arrays. The data is used in post-processing software, for example OPM ResInsight, to visualize the static grid properties and the tabular PVT and relative permeability data, and is not used per se by the simulator.

The data is written to file if the INIT keyword in the GRID section has been activated ([INIT – Activate the INIT File Option](#)). Similar to the EGRID file, the INIT file can either be written out in formatted form as ASCII i.e. text files, if the FMTOUT keyword has been activated, or binary format if the FMTOUT keyword has not been activated. Normally, this option is always activated by the user and when activated the binary form of the file is used.

There are two files types associated with the INIT data:

- 1) an index file (INIT Index) that contains a list of variables, the array type (character, integer, or real) and the size of the arrays that are written out to the initialization data file and,
- 2) the initialization data file (INIT Data) that contains the actual data written out at the beginning of the run once the model has been initialized.

The commercial simulator writes out both files, whereas OPM Flow only writes out the INIT Data file, as the data can be read by most post-processing software, including OPM ResInsight, using only the INIT Data file as input.

The following sections outline the format for these two file types.

F.6.1 INIT INDEX FILE

This file type is not supported or required by OPM Flow or OPM ResInsight to read or write the static data written to the INIT Data file.

F.6.2 INIT DATA FILE SPECIFICATION

This file type contains the global and any LGR grid property data present in the model²³³, for example porosity (PORO) and permeability data arrays (PERMX,PERMY, and PERMZ) for properties allocated to each grid cell, as well as the fluid and rock property functions tabular data. The overall structure of this file is similar to the RESTART file with the individual keywords being structured as shown in Table F.12.

Reference Section	Global Section Keywords	Global Data Keywords	LGR Section Keywords	LGR Data Keywords	Notes
F.6.3	INTEHEAD LOGIHEAD DOUBHEAD				Global grid header keywords that defines the integer, logical and double precision variables for this header keyword.
F.6.4	Property Keywords	PORV PORO etc.			Global grid property keywords that defines the global grid property data defined in the GRID and Edit sections. For example, PORV, NTG, PERMX etc.)
F.6.5			LGR LGRHEAD1 LGRHEADQ LGRHEADD		Defines the start of an LGR section of keywords and the LGR header keywords
F.6.5			INTEHEAD LOGIHEAD DOUBHEAD		LGR grid header keywords defining the same data as the global keywords, except for the given LGR. This set of keywords are only written once for each LGR.
F.6.4			Property Keywords	PORV PORO etc.	LGR property keywords; same format as the global grid keywords.
F.6.5			LGR LGRHEAD1 LGRHEADQ LGRHEADD		The LGR header keywords
F.6.5			INTEHEAD LOGIHEAD DOUBHEA		The LGR header keywords which are only written once for each LGR.
F.6.4			Property Keywords	PORV PORO etc.	LGR property keywords
			etc.		Repeated for each LGR in the model.
F.6.5			LGRSGONE		Marks the end of LGR section of keywords.
F.6.7	TABDIMS				TABDIMS defines the tables dimensions, for the subsequent TAB keywords.
F.6.8	TAB				Rock and fluid tabular property data keywords.

²³³ Several keywords are used for both global and LGR grids, for example the INTEHEAD, LOGIHEAD, DOUBHEAD, PROPERTY and REGION keywords and arrays.

Reference Section	Global Section Keywords	Global Data Keywords	LGR Section Keywords	LGR Data Keywords	Notes
F.6.8	CON				CON keyword defines the constant PVT dead oil data (the data associated with RSCONST, RSCONSTT, RVCONT and RVCONSTT keywords).
F.6.4	Region Keywords	PVTNUM SATNUM etc.			Region property data for the global grid as defined in the REGION section (PVTNUM, SATNUM etc.). The keyword is repeated to account for all region property data.
F.6.5			LGR LGRHEAD1 LGRHEADQ LGRHEADD		The LGR header keywords
F.6.4			Region Keywords	PVTNUM SATNUM etc.	LGR region property data for the LGR grid.
F.6.5			LGR LGRHEAD1 LGRHEADQ LGRHEADD		The LGR header keywords
F.6.4			Region Keywords	PVTNUM SATNUM etc.	LGR region property data for the LGR grid.
			etc.		Repeated for each LGR in the model.
F.6.5			LGRSGONE		Marks the end of LGR section of keywords.
F.6.4	End-Point Keywords	SWATINIT SWL etc.			Global grid saturation and end-point data keywords. The keyword uses the same keywords outlined in the GRID and PROPS section, for example, the SWL, SWATINIT, KRG, PCW, etc. arrays
F.6.5			LGR LGRHEAD1 LGRHEADQ LGRHEADD		The LGR header keywords
F.6.4			End-Point Keywords	SWATINIT SWL etc.	LGR grid saturation and end-point data keywords.
F.6.5			LGR LGRHEAD1 LGRHEADQ LGRHEADD		The LGR header keywords
F.6.4			End-Point Keywords	SWATINIT SWL	LGR grid saturation and end-point data keywords.

Reference Section	Global Section Keywords	Global Data Keywords	LGR Section Keywords	LGR Data Keywords	Notes
F.6.5				etc.	
			etc.		
			LGRSGONE		Marks the end of LGR section of keywords.
F.6.4	NNC Keywords	TRANNC			Non-neighbor connection property data ("NNC") for the global grid. The keyword is repeated to account for various NNC arrays.
		HEATNNC			
		etc.			
F.6.5			LGR LGRHEAD1 LGRHEADQ LGRHEADD		The LGR header keywords
F.6.4			NNC Keywords	TRANNC	LGR NNC property data.
				TRANGL	
				etc.	
F.6.5			LGR LGRHEAD1 LGRHEADQ LGRHEADD		The LGR header keywords
F.6.4			NNC Keywords	TRANNC	LGR NNC property data.
				TRANGL	
				etc.	
			etc.		Repeated for each LGR in the model.
F.6.5			LGRSGONE		Marks the end of LGR section of keywords.
Notes: 1) Cells shaded in gray indicate the combination is not applicable and cells colored orange indicate that this item is not currently supported by OPM Flow.					

Table F.12: INIT Data File Structure

F.6.3 INIT DATA – STATIC DATA HEADER KEYWORDS

The INIT Data – Static Data Header Keyword section is the first data set that should be read or written to the INIT Data file. This data set includes INTEHEAD, LOGIHEAD and DOUBHEAD keywords that define versus parameters used in subsequent keywords in the INIT Data file. This is then followed by a series of global grid PROPERTY data keywords that define the various global grid property arrays for each grid cell in the model, as well as the static tabular data (relative permeability tables and PVT tables), etc.

The structure for this set of keywords is defined in Table F.13.

No.	Keyword Name	INIT Data – Static Data Header Keywords Table F.13			Status Or Value
		Keyword	No. of Entries	Data Type	
	INTEHEAD	Global static header keyword for the INIT Data file that defines the start of INIT static data set, and contains the integer variables for this header keyword. NIHEAD is the number of entries associated with this keyword, and is dependent on the features being used in the model.			Required
1-1	Format	INTEHEAD	NIHEAD	INTE	
2-1		Undefined			0
2-2		Undefined			0
2-3	Data	Unit system used in the simulation, set to 1 for metric, 2 for field, and 3 for laboratory.			
2-4 to 2-8		Undefined.			0
2-9	Data	DIMENS key word in the RUNSPEC section - the number of grid blocks in the x-direction.			NX
2-10	Data	DIMENS key word in the RUNSPEC section - the number of grid blocks in the y-direction.			NY
2-11	Data	DIMENS key word in the RUNSPEC section - the number of grid blocks in the z-direction.			NZ
2-12	Data	Number of global active cells in the model.			NACTIV
2-13	Data	Not used.			0
2-14	Data	Type of grid, set to 0 for Irregular Corner-Point Grids, 1 for Unstructured Grids, or 2 for a mixture of Irregular Corner-Point, Unstructured Grids (Mixed Grids) and 3 for Cartesian grids.			I
2-15	Data	Type of phases in the model, set to 1 for oil, 2 for water, 3 for oil-water, 4 for gas, 5 for oil-gas, 6 for gas-water and 7 for oil-water-gas.			PHASE
2-16 to 2-64		Undefined.			0
2-65	Data	First part of start date of the run, DAY, the value should be greater than or equal to one and less than or equal to 31 for the calendar days.			DAY
2-66	Data	Second part of start date of the run, MONTH, the value should be greater than or equal to one and less than or equal to 12 for the calendar month.			MONTH

No.	Keyword Name	INIT Data – Static Data Header Keywords Table F.13			Status Or Value
		Keyword	No. of Entries	Data Type	
2-77	Data	Third part of start date of run, YEAR, a positive four digit integer value of the start year, which must be specified fully by four digits, that is 1986.			YEAR
2-68 to 2-94		Undefined.			0
2-95	Data	Simulator code used to generate the file, set to 100 for Schlumberger's ECLIPSE 100, 300 for Schlumberger's ECLIPSE 300, 500 for Schlumberger's ECLIPSE 300 Thermal, 700 for Schlumberger's INTERSECT simulator, 800 for Schlumberger's FrontSim simulator, or a negative value for other simulators. OPM Flow uses a value of 100.			I PROG
2-96 to 206		Undefined.			0
2-207	Data	The first part of the current simulation time in the form HH;MM:SS, that is HH for hours. The value should be greater than or equal to zero and less than or equal to 23.			I HOURZ
2-208	Data	The second part of the current simulation time in the form HH;MM:SS, that is MM for minutes. The value should be greater than or equal to zero and less than or equal to 59.			I MINTS
2-209 to 410		Undefined.			0
411	Data	The third part of the current simulation time in the form HH;MM:SS, that is SS for seconds. The value should be greater than or equal to zero and less than or equal to 59.			I SECND
	LOGIHEAD	Global static data keyword for the INIT Data file that defines the logical variables (T for true and F for false) for this keyword. NLHEAD is the number of entries associated with this keyword, and is dependent on the features being used in the model. Undefined items should be set to F (False).			Required
1-1	Format	LOGIHEAD	NLHEAD	LOGI	
2-1	Data	Dissolved gas is present in the model indicator, set to T if present in the model else set to F.			DISGAS
2-2	Data	Vaporized oil is present in the model indicator, set to T if present in the model else set to F.			VAPOIL
2-3	Data	SATOPTS in the RUNSPEC section - directional relative permeability curves are active in the model.			DIRECT
2-4	Data	SATOPTS keyword in the RUNSPEC section - reversible relative permeability (black-oil) are active in the model.			IRREVERS

No.	Keyword Name	INIT Data – Static Data Header Keywords Table F.13			Status Or Value
		Keyword	No. of Entries	Data Type	
		Radial grid geometry has been used for a compositional model indicator, set to T or F. Note that currently OPM Flow does not support radial grids and therefore this item should be set to F.			RADIAL
2.5	Data	Radial grid geometry has been used for a black-oil model indicator, set to T or F. Note that currently OPM Flow does not support radial grids and therefore this item should be set to F.			RADIAL
		Reversible relative permeability (compositional) are active in the model.			IRREVERS
2.6		Undefined.			F
2-7	Data	The hysteresis option has been activated in the model indicator, set to T or F.			HYSTER
2-8 to 2-14	Data	Undefined.			F
2-15	Data	The dual porosity option has been activated in the model indicator, set to T or F. Note that currently OPM Flow does not support dual porosity grids and therefore this item should be set to F.			DUALPORO
2-16		Undefined.			F
2-17	Data	ENDSCALE keyword in the RUNSPEC section - enable end-point scaling indicator.			ENDSCALE
2-18	Data	ENDSCALE keyword in the RUNSPEC section - directional end-point scaling indicator.			DIRECT
2-19	Data	ENDSCALE keyword in the RUNSPEC section - reversible end-point scaling indicator.			IRREVERS
2-20	Data	SCALECRS keyword in the PROPS section - alternative three point end-point scaling indicator.			SCALECRS
2-21 to 2-35		Undefined.			F
2-36	Data	Miscible displacement has been activated in the model indicator, set to T or F. See the MISCIBLE – Define Miscibility Todd-Longstaff Parameters keyword in the RUNSPEC section for further information.			
2-37 to 2-55		Undefined.			F
2-56	Data	The scale water capillary pressure at maximum water saturation (that is minimum pressure) has been activated in the model, set to T or F.			
2-57	Data	The scale water capillary pressure at maximum water saturation (that is minimum pressure) has been activated in the model, set to T or F.			

No.	Keyword Name	INIT Data – Static Data Header Keywords Table F.13			Status Or Value
		Keyword	No. of Entries	Data Type	
2-58 to 2-127		Undefined.			0
2-128	Data	Coal Bed Methane option has been activated in the compositional model indicator, set to T or F. Note that currently OPM Flow does not support the Coal Bed Methane option and therefore this item should be set to F.			F
	DOUBHEAD	Global static data keyword for the INIT Data file that defines the double precision REAL variables for this keyword. NDHEAD is the number of entries associated with this keyword, and is dependent on the features being used in the model.			Required
1-1	Format	DOUBHEAD	NDHEAD	DOUB	
2-1 to 2-185		Undefined			0.0

Notes:

- 1) Rows shaded in gray indicate the start of a keyword.
- 2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow and those colored red are either “Not Used” or “Undefined”.
- 3) For formatted output all character variables, including the keywords should be enclosed in single quotes, for example the SEQNUM should be written out as ‘SEQNUM ’.

Table F.13: INIT Data – Static Data Header Keywords

Example: INIT Data – Static Header Keywords

The following example shows a typical formatted INIT Data header set of keywords.

```

'INTEHEAD'          249 'INTE'
-955283513          200400          2          -2345          -2345          -2345
  -2345            -2345          10          10          1          100
    10            -2345          7          -2345          0          1
      0              2          2          0          0          0
    110            108          109          3          97          93
  -2345            -2345          19          38          53          -2345
    97             93          146          5          0          1
    15             24          8          5          2          4
      0              0          0          0          0          0
      0              0          0          0          0          0
      0              0          0          0          19         10
    1982            0          0          0          1          0
      0              0          0          0          1          10
      0              0          12         1          25          1
.....
'LOGIHEAD'          79 'LOGI'
T F F T F F F F T F F F F F F F T F T F F F F F F
F F F F F F F F F F F F F F F F F F F F F F F
F F F F F F F F F F F F F F F F F F F F F F
F F F F
'DOUBHEAD'          185 'DOUB'
0.00000000000000D+00 0.10000000000000D+01 0.36500000000000D+03
0.10000000149012D+00 0.15000000596046D+00 0.30000000000000D+01
0.300000001192093D+00 0.10000000149012D+00 0.10000000149012D+00
-0.10000000200409D+21 0.10000000000000D+01 0.10000000000000D+01
0.10000000000000D+01 0.00000000000000D+00 0.00000000000000D+00
0.10000000000000D+01 0.10000000000000D-03
.....

```

End of Example

F.6.4 INIT DATA – STATIC GRID ARRAY DATA KEYWORDS

This series of keywords define various static global and LGR grid property arrays for each grid cell in the model. The grid array keywords use the same grid property keywords described in the GRID section of the manual. For example, the DEPTH, PORO, PERMX, PERMY, PERMZ, NTG, TOPS arrays etc. In addition, the keywords also include the calculated pore volumes (PORV) and transmissibility arrays (TRANX, TRANY and TRANZ) after processing the GRID and EDIT sections. Note the first property should always be the PORV array for both global and LGR grid types.

This format is also used to define the global grid REGION, NNC and ENPOINTS section arrays, with the keyword name corresponding to the array name. For example, for the REGION keywords the same keywords outlined in the REGION section of the manual; that is EQLNUM, FIPNUM, PVTNUM, ROCKNUM, SATNUM are utilized as the keywords in this section.

The structure for this type of data and the keywords are defined in Table F.14.

No.	Keyword Name	INIT Data – Static Grid Array Data Keywords			Status Or Value
		Table F.14			
		Keyword	No. of Entries	Data Type	
	PROPERTY	<p>The PROPERTY keyword defines the start of a grid property array section of the INIT file. PROPERTY is the keyword name of the array being written out, as outlined in the GRID section. For example, DEPTH, PORO, PERMX, PERMY, PERMZ, NTG, TOPS keywords and the calculated PORV, TRANX, TRANY and TRANZ arrays.</p> <p>The PROPERTY keyword (items 1-1 and 2-1) is repeated for each grid property.</p> <p>The PORV property must be the first data set for this keyword type and is written out in full for each cell in the model (that is NXYZ = NX x NY x NZ values). Note the PORV array values for inactive cells are set to a constant value of zero.</p> <p>Subsequent grid property arrays can be in any order and only the active cells are written out (NACTIV).</p>			Required
1-1	Format	PROPERTY	NXYZ or NACTIV	REAL	
2-1	Data	PROPERTY data set.			
LGR Property Data for Each LGR Keyword and Data					
Table and Constant Keywords (TABDIMS, TAB and CON)					
	REGION	<p>The REGION keyword defines the start of grid region array section. REGION is the keyword name of the region array being written out, as outlined in the REGIONS section. For example, EQLNUM, FIPNUM, PVTNUM, ROCKNUM, SATNUM, etc.</p> <p>For analytical aquifers in the model, the AQUIFERA variable name is used to indicate which cells are connected to a given aquifer. If a cell is connected to an aquifer number N, then the cell value will be set to $2^{(N-1)}$ in the array.</p> <p>The REGION keyword (items 1-1 and 2-1) is repeated for each global region array and the arrays can be written out in any order.</p>			Required
1-1	Format	REGION	NACTIV	INTE	
2-1	Data	REGION data set.			
LGR Region Keywords and Data for Each Grid					

No.	Keyword Name	INIT Data – Static Grid Array Data Keywords			Status Or Value
		Table F.14			
		Keyword	No. of Entries	Data Type	
	ENDPOINT	<p>The ENDPOINT keywords define the start of a grids saturation and end-point data arrays. ENDPOINT is the keyword name of the saturation (SWL, SWATINIT, etc.) array or end-point array (PWC, KROW, etc.) being written out, as described in the GRID and PROPS sections.</p> <p>The type of data for the keyword should be set to REAL for arrays with real values (SWL, SWATINIT, etc) or INTE for integer arrays (ENDNUM etc.). ENDPOINT arrays can be in any order and only the active cells are written out (NACTIV).</p> <p>This keyword (items 1-1 and 2-1) is repeated for each saturation and end-point array being written out. The data written out is dependent on the various options declared in the RUNSPEC section as well as the data declared in the GRID and PROPS sections.</p>			Required
1-1	Keyword	ENDPOINTS	NACTIV	INTE or REAL	
2-1	Data	ENDPOINT data set.			
LGR Saturation End-Point Keywords and Data for Each LGR					
	NNC	<p>The NNC keyword defines the start of a grids non-neighbor connection array data. NNC is the keyword name of the non-neighbor connection array being written out, and should be set to one of the following keywords:</p> <ul style="list-style-type: none">1) TRANNNC: the non-neighbor connection transmissibilities within the grid. Always required even if there are no NNC, in which case NUMNCC is set to zero.1) DIFFNNC: the non-neighbor connection diffusivities within the grid. Only required if the Diffusivity option has been activated by the DIFFUSE keyword in the RUNSPEC section. This option is currently not supported by OPM Flow2) HEATNNC: the non-neighbor connection thermal transmissibilities within the grid. Only required if OPM Flow's THERMAL option has been activated by the THERMAL keyword in the RUNSPEC section. <p>The following two additional NNC keywords are required for when the data for an LGR is being defined:</p> <ul style="list-style-type: none">1) TRANCC: the non-neighbor connection transmissibilities within the LGR (always required for an LGR).2) TRANGL: the non-neighbor connections transmissibilities between the LGR and the global grid (always required for an LGR). <p>Number of data values for this keyword data set should set to the number of non-neighbor connection to be read or written out (NUMNNC) for the TRANNC, DIFFNNC, HEATNCC, TRANCC, and TRANGL arrays.</p> <p>The NNC keyword (items 1-1 and 2-1) are repeated for each non-neighbor connection array being written out.</p>			Required
1-1	Format	NNC	NUMNCC	REAL	
2-1	Data	NNC data set.			
LGR Non-Neighbor Connection Keywords for Each LGR					

No.	Keyword Name	INIT Data – Static Grid Array Data Keywords			Status Or Value
		Table F.14			
		Keyword	No. of Entries	Data Type	
Notes: 1) Rows shaded in gray indicate the start of a keyword and rows colored orange indicate the location of LGR data if LGRs are present in the model. 2) For formatted output all character variables, including the keyword should be enclosed in single quotes, for example the PORV and PROPERTY fields should be written out as 'PORV ' and 'DEPTH ', etc.					

Table F.14: INIT Data – Static Grid Array Data Keywords

Example: INIT Data – Static Grid Array Data Keywords

The following example shows a typical formatted global grid property data keyword.

```
'PORV ' 100 'REAL'
0.10686456E+07 0.10686456E+07 0.10686456E+07 0.10686456E+07
0.10686456E+07 0.10686456E+07 0.10686456E+07 0.10686456E+07
.....
0.10686456E+07 0.10686456E+07 0.10686456E+07 0.10686456E+07
0.10686456E+07 0.10686456E+07 0.10686456E+07 0.10686456E+07
'DX ' 100 'REAL'
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.10000000E+04
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.10000000E+04
.....
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.10000000E+04
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.10000000E+04
'DY ' 100 'REAL'
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.10000000E+04
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.10000000E+04
.....
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.10000000E+04
0.10000000E+04 0.10000000E+04 0.10000000E+04 0.10000000E+04
'DZ ' 100 'REAL'
0.20000000E+02 0.20000000E+02 0.20000000E+02 0.20000000E+02
0.20000000E+02 0.20000000E+02 0.20000000E+02 0.20000000E+02
.....
0.20000000E+02 0.20000000E+02 0.20000000E+02 0.20000000E+02
0.20000000E+02 0.20000000E+02 0.20000000E+02 0.20000000E+02
'PERMX ' 100 'REAL'
0.50000000E+03 0.50000000E+03 0.50000000E+03 0.50000000E+03
.....
0.50000000E+03 0.50000000E+03 0.50000000E+03 0.50000000E+03
0.50000000E+03 0.50000000E+03 0.50000000E+03 0.50000000E+03
```

TABULAR DATA

```
'PVTNUM ' 100 'INTE'
1 1 1 1 1 1
1 1 1 1 1 1
.....
1 1 1 1 1 1
'SATNUM ' 100 'INTE'
1 1 1 1 1 2
1 1 1 2 2 2
.....
'EQLNUM ' 100 'INTE'
1 1 1 1 1 1
1 1 1 1 1 1
.....
```

End of Example

F.6.5 INIT DATA - LGR STATIC DATA HEADER KEYWORDS

The file structure for this series of keywords consists of two sets of keywords, the first set is repeated each time an LGR data set is written out and the second set, which is the same as global static header keywords in section INIT Data – Static Data Header Keywords, is only written once. The first set of keywords define an LGR's properties, LGR Name for example, and always proceeds an LGR data set for a given LGR; that is this series of keywords are repeated for each LGR data set in the model. This is then followed by the second set of static data header keywords, or the actual array or table keywords. Termination of the LGR data set occurs after the last LGR data set has been written out using the LGRSGONE keyword, which switches input back to the global grid properties. Table F.15 outlines the structure of the INIT Data - LGR Static Header Keywords and their affiliated data.

Note that currently OPM Flow does not support LGR grids and therefore this set of keywords cannot be used by OPM Flow.

No.	Keyword Name	INIT Data - LGR Static Header Keywords Table F.15 (Repeated Each Time An LGR Each Data Set Is Written Out)			Status Or Value
		Keyword	No. of Entries	Data Type	
	LGR	LGR static data header keyword for the INIT Data file that defines the name of the LGR.			Always Required
1-1	Keyword	LGR	1	CHAR	
2-1	Data	Name of the LGR.			
	LGRHEAD1	LGR that defines the integer variables for this keyword.			Always Required
1-1	Format	LGRHEAD1	45	INTE	
2-1 to 2-45	Data	Undefined.			
	LGRHEADQ	LGR grid keyword for the INIT Data file that defines the logical variables (T for true and F for false) for this keyword.			Always Required
1-1	Format	LGRHEADQ	5	LOGI	
2-1 to 2-5	Data	Undefined			
	LGRHEADD	LGR grid keyword for the INIT Data file that defines the double precision REAL variables for this keyword.			Always Required
1-1	Format	LGRHEADD	5	DOUB	5
2-1 to 2-5	Data	Undefined.			
	LGRSGONE	The LGRSGONE keyword marks the end of the LGR section. Number of entries is always set to zero. There is no data set associated with this keyword.			Always Required
1-1	Format	LGRSGONE	0	MESG	

No.	Keyword Name	INIT Data - LGR Static Header Keywords			Status Or Value
		Table F.15			
		(Repeated Each Time An LGR Each Data Set Is Written Out)			
		Keyword	No. of Entries	Data Type	
	INTEHEAD	The keywords are the same as the INIT Data Static Data Header keywords but the data pertains to the current LGR. See Table F.13 for a detailed description of this keyword type.			Required Only Once
	LOGIHEAD	See Table F.13 for a detailed description of this keyword type.			Required Only Once
	DOUBHEAD	See Table F.13 for a detailed description of this keyword type.			Required Only Once

Notes:

- 1) Rows shaded in gray indicate the start of a keyword.
- 2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow and those colored red are either “Not Used” or “Undefined”.
- 3) For formatted output all character variables, including the keyword name should be enclosed in single quotes, for example the LGR keyword should be written out as ‘LGR ’.

Table F.15: INIT Data - LGR Static Data Header Keywords

This series of keywords are repeated for each LGR in the model followed by the pertinent data and in the order outlined in Table F.12 and with the last LGR data set terminated by the LGSGONE keyword to mark the end of the LGR input section.

Note

The LGR, LGRHEAD, LGRHEADQ and LGRHEADD keywords always proceeds and LGR data sets and the LGRSGONE keyword terminates the end of the LGR data section, which causes the data to revert back to the global grid data.

Example: INIT Data - LGR Static Header Keywords

The following example shows a typical formatted INIT Data - LGR Grid Header Keyword data set for a single LGR grid named LGR-I. As this is the first time LGR data is being written out both sets of LGR header keywords are written out followed by the property array data.

```
'LGR'          1 'CHAR'
'LGR-1'
'LGRHEAD1'      45 'INTE'
      1      100      -2345      -2345      -2345      -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345
'LGRHEADQ'      5 'LOGI'
F F F F F
'LGRHEADD'      5 'DOUB'
0.000000000000000D+00 -0.100000000200409D+21 -0.100000000200409D+21
-0.100000000200409D+21 -0.100000000200409D+21
.....

'INTEHEAD'      249 'INTE'
-955283513      200400      2      -2345      -2345      -2345
    -2345    -2345      2      2      2      8
.....
      1      6      1      10      1      10
      1      1      1      0      30      3
      18     10      9
'LOGIHEAD'      79 'LOGI'
T F F T F F F F T F F F F F F F T F T F F F F F F
F F F F F F F F F F F F F F F F F F F F F F F F
F F F F F F F F F F F F F F F F F F F F F F F
F F F F
'DOUBHEAD'      185 'DOUB'
0.000000000000000D+00 0.100000000000000D+01 0.365000000000000D+03
0.100000000149012D+00 0.150000000596046D+00 0.300000000000000D+01
.....
0.100000000000000D+01 0.000000000000000D+00 0.000000000000000D+00
0.100000000000000D+01 0.100000000000000D-03
.....

'PORV'          8 'REAL'
0.13358070E+06 0.13358070E+06 0.13358070E+06 0.13358070E+06
0.13358070E+06 0.13358070E+06 0.13358070E+06 0.13358070E+06
'DX'            8 'REAL'
0.500000000E+03 0.500000000E+03 0.500000000E+03 0.500000000E+03
0.500000000E+03 0.500000000E+03 0.500000000E+03 0.500000000E+03
'DY'            8 'REAL'
0.500000000E+03 0.500000000E+03 0.500000000E+03 0.500000000E+03
0.500000000E+03 0.500000000E+03 0.500000000E+03 0.500000000E+03
'DZ'            8 'REAL'
0.100000000E+02 0.100000000E+02 0.100000000E+02 0.100000000E+02
0.100000000E+02 0.100000000E+02 0.100000000E+02 0.100000000E+02
'PERMX'         8 'REAL'
0.500000000E+03 0.500000000E+03 0.500000000E+03 0.500000000E+03
0.500000000E+03 0.500000000E+03 0.500000000E+03 0.500000000E+03
.....
```

End of Example

F.6.6 INIT DATA - LGR GRID ARRAY DATA KEYWORDS

The file structure for this set of keywords is identical to the Static Grid Array Data Keywords described in Table F.14, except that LGR header keywords prefix the actual data keywords. Both the LGR header and data keywords are repeated for each LGR in the model, and the last LGR data set is terminated by the LGSGONE keyword to mark the end of the LGR input section. The keyword description for this type of data set is outlined in Table F.16.

Note that currently OPM Flow does not support LGR grids and therefore this series of keywords cannot be used by OPM Flow.

No.	Keyword Name	INIT Data - LGR Grid Array Data Keywords Table F.16 (Repeated For Each LGR In The Model)	Status Or Value
I-1	LGR	LGR Header Keywords (see Table F.15).	Required
	LGRHEAD1		
	LGRHEADQ		
	LGRHEADD		
I-2	INTEHEAD	LGR Header Keywords (see Table F.15).	Required Only Once
	LOGIHEAD		
	DOUBHEAD		
I-3	PROPERTY REGION NNC or ENPOINIT	LGR array data set for the current LGR – same format as the INIT Data - Grid Array Data Keywords (see Table F.14).	Required
I-4	LGRSGONE	LGR Header Section termination keyword (see Table F.15).	Required
Notes: <ol style="list-style-type: none"> 1) Rows shaded in gray indicate the start of a keyword. 2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow. 3) For formatted output all character variables, including the keyword should be enclosed in single quotes, for example the LGR keyword should be written out as 'LGR '. 			

Table F.16: INIT Data - LGR Grid Array Data Keywords

This keyword data set is repeated for each LGR in the model with the last LGR data set terminated by the LGSGONE keyword to mark the end of the LGR data section.

Example: INIT Data - LGR Static Grid Array Data Keywords

The following example shows a typical formatted INIT Data - LGR Static Grid Array Data Keywords for the region data set with two LGR grids named LGR-1 and LGR-2.

```
'LGR      ' 1 'CHAR'
'LGR-1    '
'LGRHEAD1' 45 'INTE'
      1      100      -2345      -2345      -2345      -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345
'LGRHEADQ' 5 'LOGI'
F F F F F
'LGRHEADD' 5 'DOUB'
0.000000000000000D+00 -0.100000000200409D+21 -0.100000000200409D+21
-0.100000000200409D+21 -0.100000000200409D+21
'PVTNUM   ' 8 'INTE'
      1      1      1      1      1      1
      1      1
'SATNUM   ' 8 'INTE'
      1      1      1      1      2      2
      2      2
'EQLNUM   ' 8 'INTE'
      1      1      1      1      1      1
      1      1
'FIPNUM   ' 8 'INTE'
      1      1      1      1      1      1
      1      1
'LGR      ' 1 'CHAR'
'LGR-2    '
'LGRHEAD1' 45 'INTE'
      2      100      -2345      -2345      -2345      -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345    -2345    -2345    -2345
    -2345    -2345    -2345
'LGRHEADQ' 5 'LOGI'
F F F F F
'LGRHEADD' 5 'DOUB'
0.000000000000000D+00 -0.100000000200409D+21 -0.100000000200409D+21
-0.100000000200409D+21 -0.100000000200409D+21
'PVTNUM   ' 8 'INTE'
      1      1      1      1      1      1
      1      1
'SATNUM   ' 8 'INTE'
      1      2      1      2      2      1
      2      1
'EQLNUM   ' 8 'INTE'
      1      1      1      1      1      1
      1      1
'FIPNUM   ' 8 'INTE'
      1      1      1      1      1      1
      1      1
'LGRSGONE' 0 'MESS'
```

End of Example

F.6.7 INIT DATA – STATIC TABULAR DATA HEADER KEYWORD

The INIT Data – Static Tabular Data Header Keyword precedes the TAB keyword and consists of just one keyword followed by a series of integer values that define the dimensions of the data in the TAB keyword. TABDIMS is then followed by the TAB keyword that contains the actual tabular data in one continuous array.

The structure for this keyword is defined in Table F.17.

No.	Keyword Name	INIT Data – Static Tabular Data Header Keyword Table F.17			Status Or Value
		Keyword	No. of Entries	Data Type	
	TABDIMS	Tabular header keyword for the INIT Data file that defines the start of the tabular data and contains the base addresses and dimension of subsequent tabular array keyword TAB. Missing values should be defaulted to one.			Required
1-1	Format	TABDIMS	100	INTE	
2-1	Data	Total size of TAB data array, value should be the same as that on the TAB keyword.			NTABDA
2-2	Data	Location of the first entry in the TAB array for the rock property table.			IBROCK
2-3	Data	Maximum umber of rock property tables.			NTROCK
2-4	Data	Location of the first entry in the TAB array of rock compaction data.			IBROCC
2-5	Data	Maximum number of pressure nodes in rock compaction data table.			NPROCC
2-6	Data	Maximum number of rock compaction data tables.			NTROCC
2-7	Data	Location of the first entry in the TAB array for the oil PVT property tables.			IBPVTO
2-8	Data	Location of the first entry in the TAB array for the oil pressure nodes.			JBPVTO
2-9	Data	Maximum number of composition nodes in oil PVT tables.			NRPVTO
2-10	Data	Maximum number of pressure nodes in oil PVT tables.			NPPVTO
2-11	Data	Maximum number of oil PVT property tables.			NTPVTO
2-12	Data	Location of the first entry in the TAB array for water PVT property tables.			IBPVTW
2-13	Data	Maximum number of water property tables.			NTPVTW
2-14	Data	Location of the first entry in the TAB array for gas PVT property tables.			IBPVTG
2-15	Data	Location of the first entry in the TAB array for the gas pressure nodes.			JBPVTG
2-16	Data	Maximum number of composition nodes in the gas PVT tables.			NRPVTG
2-17	Data	Maximum number of pressure nodes in the gas PVT tables.			NPPVTG
2-18	Data	Maximum number of gas PVT property tables.			NTPVTG
2-19	Data	Location of the first entry in the TAB array for surface density tables.			IBDENS
2-20	Data	Maximum number of surface densities tables.			NTDENS
2-21	Data	Location of the first entry in the TAB array for water saturation tables.			IBSWFN
2-22	Data	Maximum number of saturation nodes in water saturation tables.			NSSWFN
2-23	Data	Maximum number of water saturation tables.			NTSWFN

No.	Keyword Name	INIT Data – Static Tabular Data Header Keyword Table F.17			Status Or Value
		Keyword	No. of Entries	Data Type	
2-24	Data	Location of the first entry in the TAB array for gas saturation tables .			IBSGFN
2-25	Data	Maximum number of saturation nodes in gas saturation tables.			NSSGFN
2-26	Data	Maximum number of gas saturation tables.			NTSGFN
2-27	Data	Location of the first entry in the TAB array for oil saturation tables.			IBSOFN
2-28	Data	Location of the first entry in the TAB array for array of connate water saturations.			IBSWCO
2-29	Data	Maximum number of saturation nodes in the oil saturation tables.			NSSOFN
2-30	Data	Maximum number of oil saturation tables			NTSOFN
2-31 to 40		Undefined			I
2-41	Data	Location of the first entry in the TAB array to the VE table data.			IBVETB
2-42	Data	Maximum number of items in a VE table.			NSVETB
2-43	Data	Maximum number of VE tables.			NTVETB
2-44	Data	Location of the first entry in the TAB array to the threshold pressure array.			IBTHPR
2.45	Data	Location of the first entry in the TAB array to SCALELIM data			IBSLIM
2.46	Data	Maximum number of end-point versus depth nodes.			NSENDP
2.47	Data	Maximum number of end-point versus depth tables.			NTENDP
2.48	Data	Location of the first entry in the TAB array to the reference temperature RTEMP used in PVZG keyword in the PROPD section.			IBRTEM
2.49	Data	Location of the first entry in the TAB array to the value specified by the TOLCRIT keyword. Note that this is a single value applied to all the saturation tables.			IBCTOL
2.50		Undefined			I
2-51	Data	Location of the first entry in the TAB array to LANGMUIR table.			IBLANG
2-52	Data	Maximum number of columns in LANGMUIR tables.			NCLANG
2-53	Data	Maximum number of rows in the LANGMUIR tables			NSLANG
2-54	Data	Maximum number of LANGMUIR tables			NTLANG
2-55	Data	Location of the first entry in the TAB array to a LANGSOLV table.			IBLING2
2-56	Data	Location of the first entry in the TAB array to a COALPP table.			IBCADP
2-57	Data	Location of the first entry in the TAB array to a COALADS table.			IBCADS
2-58	Data	Location of the first entry in the TAB array to a ROCKPAMA table.			IBROCP
2-59	Data	Maximum number of tables of ROCKPAMA tables			NTRPMA

No.	Keyword Name	INIT Data – Static Tabular Data Header Keyword			Status Or Value
		Table F.17			
		Keyword	No. of Entries	Data Type	
2-60 to 2-100		Undefined			I

Notes:

- 1) Rows shaded in gray indicate the start of a keyword.
- 2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow and those colored red are either “Not Used” or “Undefined”.
- 3) For formatted output all character variables, including the keywords should be enclosed in single quotes, for example the PORV and PROPERTY fields should be written out as ‘PORV ’ and ‘DEPTH ’, etc.

Table F.17: INIT Data – Static Tabular Data Header Keyword

Example: INIT Data – Static Tabular Data Header Keyword

The following example shows a typical formatted INIT Data – Static Tabular Data Header Keyword and the affiliated data.

```

'TABDIMS '      100 'INTE '
  77006          1          2          1          60          1
    17        36017          60          60          2        36799
    2        37139        73139          60          60          2
    5          2        36809          33          2        73259
   33          2        36137        36797          66          2
  73589          5        73644          20          5        74044
   20          5          0          0        74444          25
    2        74494        75835          20          1        77003
    0          0          0          0          0          0
    0          0          0          0          0          0
    0          0          0          0          0          0
    0          0          0          0          0          0
    0          0          0          0          0          0
    0          0          0          0          0          0
    0          0          0          0          0          0
    0          0          0          0          0          0
    0          0          0          0          0          0
    0          0          0          0          0          0

```

End of Example

F.6.8 INIT DATA – STATIC TABULAR AND CONSTANT DATA ARRAY KEYWORDS

The INIT Data – Static Tabular and Constant Data Array Keyword section contains the actual tabular data in one continuous array, followed by the constant data array. The tabular array data is parse according to the phases present in the model and the location and dimension data given by the TABDIMS keyword.

The structure for this set of keywords is defined in Table F.18.

No.	Keyword Or Variable Name	INIT Data – Static Tabular And Constant Data Array Keyword			Status Or Value
		Table F.18			
		Keyword	No. of Entries	Data Type	
	TAB	Tabular data array keyword for the INIT Data file that defines the start of the tabular data array. The total number of entries is given by the NTABDA and the value should be the same as declared on the TABDIMS keyword.			Required
1-1	Format	TABDIMS	NTABDA	DOUB	
2-1	Data	Tabular data array. The data should be written out in double precision and missing data should be set to less than or equal to -10.0×10^{20} or greater than or equal to 10.0×10^{20} .			
	CON	Constant data array that contains the constant dead oil, dead vaporized oil, and saturation pressure PVT entered via the RSCONST/RSCONSTT and RVCONT/RVCONSTT keywords in the PROPS section.			Required
1-1	Format	CON	NPVT x 3	DOUB	
2-1	Data	The data consists of three values for each PVT data set (NPVT), RS, RV and the saturation pressure of the active phase in the model (bubble-point or dew point).			

Notes:

1) Rows shaded in gray indicate the start of a keyword.

2) Note both TAB and CON keywords should be enclosed in single quotation marks, that is ‘TAB ’ and ‘CON ’.

Table F.18: INIT Data – Static Tabular and Constant Data Array Keywords

The phases present in the model are given on the INTEHEAD keyword (Table F.13) in location 2-15 where the type of phases in the model are set via an integer: 1 for oil, 2 for water, 3 for oil-water, 4 for gas, 5 for oil-gas, 6 for gas-water and 7 for oil-water-gas. This data is used to access the phase dependent data (PVT, saturation functions tables etc.) combine with the location (or base address) and the dimension data given on the TABDIMS keyword in Table F.17.

Note that data given in Table F.17 refers to the maximum values and therefore missing data should be set to the default value.

Example: INIT Data – Static Tabular and Constant Data Array Keywords

The following example shows a typical formatted data set for this type set of keywords and the affiliated data. Here the CON array has two PVT tables but the values are all set to zero indicating that dead oil and vaporized dead oil are not active phases in the model.

```
'TAB      '          73576 'DOUB'
  0.497000000000000D-05  0.248000000000000D-05  0.000000000000000D+00
 -0.200000000000000D+21 -0.200000000000000D+21 -0.200000000000000D+21
 -0.200000000000000D+21 -0.200000000000000D+21 -0.200000000000000D+21
..... *
 -0.200000000000000D+21 -0.200000000000000D+21 -0.200000000000000D+21
  0.521000000000000D-05  0.261000000000000D-05  0.000000000000000D+00
 -0.200000000000000D+21 -0.200000000000000D+21 -0.200000000000000D+21
'CON      '          6 'DOUB'
  0.000000000000000D+00  0.000000000000000D+00  0.000000000000000D+00
  0.000000000000000D+00  0.000000000000000D+00  0.000000000000000D+00
..... *

```

End of Example

F.7 RESTART FILES – DYNAMIC DATA (SOLUTION, GROUPS, WELLS, CONNECTIONS, AQUIFERS ETC.)

RESTART files contain the solution data arrays for each active cell in the model, and represents a “snapshot” of the reservoir state at a reporting time step, for example the pressure (PRESSURE, PPCW, and PPCG), fluid saturations (SGAS, SOIL and SWAT), and fluid state (RS and RV) for all active cells. The PPCW and PPCG arrays are the water and capillary solution arrays and the RS and RV arrays are the gas-oil and vaporized-oil ratio (condensate-gas ratio) solution arrays. The data written to the RESTART file is dependent on the fluid phases and options invoked in the model, as well as any additional user requested solution data. The default arrays written out are always sufficient to enable the simulator to restart from a previous run²³⁴. This was the original purpose of the RESTART file, that is saving the reservoir state in such a manner, is to enable a “restart” of the simulation.

RESTART files also contain the necessary information to do restart runs for Groups, Wells, Connections, Aquifer data etc. This information enables restart runs based on Schedule information read from the Restart file only, using the SKIPREST keyword in the SCHEDULE section.

As of the OPM Flow 2019-04 release the simulator can “restart” from the commercial simulator’s generated RESTART files as well as the commercial simulator being to “restart” from the OPM Flow’s generated RESTART files. See section [2.2 Running OPM Flow 2021-10 From The Command Line](#) for additional information.

As RESTART files contain a complete description of the reservoir state, they are also used in post processing software to visualize the reservoir solutions through time, for example by OPM ResInsight. And as the functionality of the both OPM Flow and the commercial simulator have expanded over time additional solution arrays have been added to the RESTART file to enable “restarts” (POLYMER – polymer saturations), as well as to write out additional user specific solution arrays (FIPOIL - fluid in-place oil array), that are not necessary for a “restart”, but are consider useful in understanding the reservoir performance.

The frequency and type of data written to the RESTART file is controlled via the RPTSCHED and RPTRST keywords in the SCHEDULE, with the latter having greater functionality and flexibility. For example, to request that the standard restart data be written out every month using the RPTRST keyword:

```
--
--      RESTART CONTROL BASIC = 4 (YEARLY) 5 (MONTHLY)
--
RPTRST
      BASIC=5
```

The next example requests that the standard restart data be written at every report time step until this switch is reset and all the restarts are kept. In addition to the standard the data the gas, oil and water relative permeability data will also be written out at each report time step.

```
--
--      RESTART CONTROL BASIC = 4 (YEARLY) 5 (MONTHLY)
--
RPTRST
      BASIC=2   KRG   KRO   KRW
```

RESTART solution data is written out via two separate files; the RESTART Index file that specifies and defines the format and data type written to the RESTART Data file, and the RESTART Data file that contains the solution data for each active cell in the model for the requested report time steps. The commercial simulator writes out both files, where as OPM Flow only writes out the RESTART Data file, as the data can be read by most post-processing software, including OPM ResInsight, using only the RESTART Data file as input. Secondly, both the commercial simulator and OPM Flow can be “restarted” using just the RESTART Data file.

The following sections outline the format for these two file types.

²³⁴ For example in a three phase (oil, gas and water) runs only two phase saturations are needed for a “restart” run, as the third phase can be calculated in by summing two phases and subtracting from one.

F.7.1 RESTART INDEX FILES

This file type is not supported or required by OPM Flow or OPM ResInsight to read or write restart files.

F.7.2 RESTART DATA FILE SPECIFICATION

This file type contains the global and LGR grid solution data property data²³⁵ (PRESSURE, SGAS, SOIL and SWAT) and the group, well and connection data²³⁶. The overall structure of this file is similar to the INIT file, and the individual data keywords are structured as presented in Table F.19.

Reference Section	Global Section Keywords	Global Data Keywords	LGR Data Keywords	Global Section Keywords	Notes
F.7.3	SEQNUM				Global grid header keyword that defines the start of a RESTART global grid time step data set.
F.7.3	INTEHEAD LOGIHEAD DOUBHEAD				Global grid header keyword that defines the integer, logical and double precision variables for this header keyword.
F.7.4	IGRP SGRP etc.				Group, well, and connection data status keywords for this reporting time step.
F.7.6	IAAQ SAAQ ect.				Aquifer definition arrays.
F.7.7	HIDDEN				Defines HIDDEN solution data, that is a list of solution arrays NOT to be read by post processing software.
F.7.8	STARTSOL				This keyword marks the start of the solution variable section for the global grid.
F.7.8		PRESSURE SWAT etc.			Solution array section (PRESSURE, SGAS, SOIL, SWAT, etc.) for the Global grid.
F.7.8	LGRNAMES				A list of LGRs in this report step
F.7.8	ENDSOL				Marks the end of the solution variable section for the global grid.
F.7.9			LGR LGRHEAD1 LGRHEADQ LGRHEADD		LGR grid header keyword for that defines the start of a RESTART LGR data set.
F.7.3			INTEHEAD LOGIHEAD DOUBHEAD		LGR header keyword and defines the integer, logical and double precision variables for this header keyword.
F.7.4			IGRP SGRP etc.		Group, well, and connection data status keywords for this reporting time step.

²³⁵ Several keywords are used for both global and LGR grids, for example the INTEHEAD, LOGIHEAD, DOUBHEAD keywords and SOLUTION arrays.

²³⁶ The group, well, and connection production data is not stored on the RESTART file, but is instead stored on the SUMMARY file. The RESTART file contains the group, well and connection configurations as they change versus time. For example, the status of a well (OPEN or SHUT), or the connections open to flow in a well.

Reference Section	Global Section Keywords	Global Data Keywords	LGR Data Keywords	Global Section Keywords	Notes
F.7.7			HIDDEN		Defines HIDDEN solution data section.
F.7.8			STARTSOL		Start of LGR solution array section.
F.7.8			Solution Keywords	PRESSURE	LGR solution array section – same as global grid
				SWAT	
				etc.	
F.7.8			ENDSOL		End of the solution variable section for the current LGR grid.
F.7.9			ENDLGR		End of current LGR section.
F.7.9			LGR LGRHEAD1 LGRHEADQ LGRHEADD		LGR grid header keywords
F.7.4			IGRP SGRP etc.		Group, well, and connection data status keywords for this reporting time step.
F.7.7			HIDDEN		Defines HIDDEN solution data section.
F.7.8			STARTSOL		Start of solution array section.
F.7.8			Solution Keywords	PRESSUE	LGR solution array section.
				SWAT	
				etc.	
F.7.8			ENDSOL		End of the solution variable section.
F.7.9			ENDLGR		End of current LGR section.
F.7.3	SEQNUM				Global grid header keyword that defines the start of a RESTART global grid time step data set.
Notes: 1) Cells shaded in gray indicate the combination is not applicable and cells colored orange indicate that this item is not currently supported by OPM Flow.					

Table F.19: RESTART Data File Structure

The individual keywords are described in the following sections.

F.7.3 RESTART DATA - HEADER KEYWORDS

This set of keywords²³⁷ are the first set of keywords that should be read or written to the RESTART file. This data set includes INTEHEAD, LOGIHEAD and DOUBHEAD keywords that define versus parameters used in subsequent keywords in the RESTART file for the global and LGR grids.

The structure for this type of keyword is defined in Table F.20.

No.	Keyword Name	RESTART Data - Header Keywords Table F.20			Status Or Value
		Keyword	No. of Entries	Data Type	
	SEQNUM	Global grid header keyword for the RESTART Data file that defines the start of a RESTART global grid time step data set for unified restart files only.			Optional
1-1	Format	SEQNUM	I	INTE	
2-1	Data	Report time step number.			0
	INTEHEAD	Global grid header keyword for the RESTART Data file that defines the integer variables for this time step. NIHEAD is the number of entries associated with this keyword, and is dependent on the features being used in the model. Undefined values should be set to zero.			Required
1-1	Format	INTEHEAD	NIHEAD	INTE	
2-1	Data	An encoded integer corresponding to the time the file was created. For files not originating from the commercial simulator, this value may be set to zero.			ISNUM
2-2	Data	Simulator version, should be set to zero.			VERSION
2-3	Data	Unit system used in the simulation, set to 1 for metric, 2 for field, and 3 for laboratory			
2-4 to 2-8	Data	Undefined.			0
2-9	Data	DIMENS key word in the RUNSPEC section - the number of grid blocks in the x-direction.			NX
2-10	Data	DIMENS key word in the RUNSPEC section - the number of grid blocks in the y-direction.			NY
2-11	Data	DIMENS key word in the RUNSPEC section - the number of grid blocks in the z-direction.			NZ
2-12	Data	Number of global active cells in the model .			NACTIV
2-13	Data	Not used.			0
2-14	Data	Not used.			0
2-15	Data	Type of phases in the model, set to 1 for oil, 2 for water, 3 for oil-water, 4 for gas, 5 for oil-gas, 6 for gas-water and 7 for oil-water-gas.			PHASE
2-16	Data	Undefined.			0
2-17	Data	Number of wells in the model.			NWELLS
2-18	Data	Maximum number of grid block connections per well.			NCWMAX
2-19	Data	Actual number of groups.			NGRP

²³⁷ The RESTART Data – Header keywords are used both for global and LGR grids with the global grid data for the global grid and the individual LGR data for the LGR grids. The LGR data is preceded by a series of LGR header keywords and terminated by an LGR termination keyword.

No.	Keyword Name	RESTART Data - Header Keywords Table F.20			Status Or Value
		Keyword	No. of Entries	Data Type	
2-20	Data	Maximum number of wells belonging to a group in the model.			NWGMAX
2-21	Data	Maximum number of groups for this model.			NGMAXZ
2-22 to 2-24	Data	Not used.			
2-25	Data	Number of values per well in the IWEL array (default value is 97).			NIWELZ
2-26	Data	Number of values per well in the SWEL array.			NSWELZ
2-27	Data	Number of values per well in the XWEL array.			NXWELZ
2-28	Data	Number of eight character words per well in the ZWEL array.			NZWELZ
2-29 to 2-32	Data	Not used.			
2-33	Data	Number of values per completion in ICON array (default 19).			NICONZ
2-34	Data	Number of values per completion in SCON array.			NSCONZ
2-35	Data	Number of values per completion in XCON array.			NXCONZ
2-36		Not used.			0
2-37	Data	Number of values per group in IGRP array.			NIGRPZ
2-38	Data	Number of values per group in SGRP array.			NISGRPZ
2-39	Data	Number of values per group in XGRP array.			NIXGRPZ
2-40	Data	Number of values per group in ZGRP array.			NIZGRPZ
2-41		Not used.			
2-42	Data	Maximum number of analytical aquifer connections.			NCAMAX
2-43	Data	Number of values per aquifer in the IAAQ array.			NIAAQZ
2-44	Data	Number of values per aquifer in the SAAQ array.			NSAAQZ
2-45	Data	Number of values per aquifer in the XAAQ array.			NXAAQZ
2-46	Data	Number of values per aquifer connection in the ICAQ array.			NICAQZ
2-47	Data	Number of values per aquifer connection in the SCAQ array.			NSCAQZ
2-48	Data	Number of values per aquifer connection in the ACAQ array.			NXCAQZ
2-49 to 2-51		Not used.			
2-52	Data	Index indicating if group control is used or not (1 – for GCONPROD group control, 2 for GCONINJE control, or 0 if no group control)			NGCTRL
2-53 to 2-58		Undefined.			
2-59	Data	Parameter to determine the nominated phase for the guide rate.			NGRNPH
2-60 to 2-64		Undefined.			

No.	Keyword Name	RESTART Data - Header Keywords			Status Or Value
		Table F.20			
		Keyword	No. of Entries	Data Type	
2-65	Data	Calendar day of report step, the value should be greater than or equal to one and less than or equal to 31 for the calendar days.			DAY
2-66	Data	Calendar month of report step, the value should be greater than or equal to one and less than or equal to 12 for the calendar month.			MONTH
2-67	Data	Calendar year of report step, a positive four digit integer value of the start year, which must be specified fully by four digits, that is 2019.			YEAR
2-68	Data	Numerical solver step, that is the number of solver steps the simulator has performed so far.			NUM_SOLVER_STEP
2-69	Data	Report step.			REPORT_STEP
2-70 to 2-71		Undefined.			0
2-72	Data	Index for WHISTCTL keyword.			WHISTC
2-73 to 2-80		Undefined			
2-81	Data	TUNING keyword in the SCHEDULE section - the maximum number of Newtonian iterations for a time step.			NEWTMX
2-82	Data	TUNING keyword in the SCHEDULE section - the minimum number of Newtonian iterations for a time step			NEWTMN
2-83	Data	TUNING keyword in the SCHEDULE section - the maximum number of linear iterations within a Newtonian iteration.			LITMAX
2-84	Data	TUNING keyword in the SCHEDULE section - the minimum number of linear iterations within a Newtonian iteration.			LITMIN
2-85		Undefined.			
2-86		Undefined.			
2-87	Data	TUNING keyword in the SCHEDULE section - the maximum number of iterations within a well flow calculation.			MXWSIT
2-88	Data	TUNING keyword in the SCHEDULE section - he maximum number of iterations for solving the bottom-hole pressure for wells under tubing head pressure control within a well flow calculation.			MXWPIT
2-89		Undefined.			
2-90	Data	REGDIMS and TABDIMS keywords in the RUNSPEC section. The maximum number of regions in the FIPNUM region array. Note that this parameter may also be set on the TABDIMS keyword as well. If NTFIP is set in both places then the maximum value should be used.			NTFIP
2-91 to 2-94		Undefined.			

No.	Keyword Name	RESTART Data - Header Keywords			Status Or Value
		Table F.20			
		Keyword	No. of Entries	Data Type	
2-95	Data	Simulator code used to generate the file, set to 100 for Schlumberger's ECLIPSE 100, 300 for Schlumberger's ECLIPSE 300, 500 for Schlumberger's ECLIPSE 300 Thermal, 700 for Schlumberger's INTERSECT simulator, 800 for Schlumberger's FrontSim simulator, or a negative value for other simulators. OPM Flow uses a value of 100.			IPROG
2-96 to 2-99		Undefined.			0
2-100	Data	REGDIMS keyword in the RUNSPEC section.The total maximum number of regions.The FIPNUM regions are defined by (2-90). if additional sets of fluid in-place regions are used, as per the FIPxxx series of fluid in-place region keywords, then NMFIPR is the sum of all FIP regions.			NMFIPR
2-101 to 2-131					
2-132	Data	NETWORK keyword in the RUNSPEC section - maximum number of nodes in an extended network model or zero if the extended network option has not been activated.			NODMAX
2-133	Data	NETWORK keyword in the RUNSPEC section - maximum number of branches in an extended network model or zero if the extended network option has not been activated.			NBRMAX
2-134	Data	Number of items per branch in the IBRAN array when the extended network model is active, or zero if the extended network option has not been activated.			NIBRAN
2-135	Data	Number of items per branch in the RBRAN array when the extended network model is active, or zero if the extended network option has not been activated.			NRBRAN
2-136	Data	Number of items per node in the INODE array when the extended network model is active, or zero if the extended network option has not been activated.			NINODE
2-137	Data	Number of items per node in the RNODE array when the extended network model is active, or zero if the extended network option has not been activated.			NRNODE
2-138	Data	Number of items per node in the ZNODE array when the extended network model is active, or zero if the extended network option has not been activated.			NZNODE
2-139	Data	Number of items in the INOBR array.			NINOBR
2-140 to 2-156		Undefined.			0
2-157	Data	The number of actions in the data set.			NO_ACT
2-158	Data	Maximum number of lines of schedule data for ACTION keyword - including ENDACTIO.			MAX_LINES
2-159	Data	Maximum number of eight character strings per input line of Action data (rounded up from input deck).			MAXSPRLINE

No.	Keyword Name	RESTART Data - Header Keywords Table F.20			Status Or Value
		Keyword	No. of Entries	Data Type	
2-160 to 2-162		Undefined.			
2-163	Data	Maximum number of aquifer connections actually used in the model.			NGCAUS
2-164	Data	Maximum number of wells in the model.			NWMAXZ
2-165 to 2-174		Undefined.			0
2-175	Data	Number of multi-segmented wells defined with the WELSEG keyword in the SCHEDULE section, for when multi-segment wells have been activated, or zero otherwise.			NSEGWL
2-176	Data	WSEGDIMS keyword in the RUNSPEC section - maximum number of multi-segment wells, for when multi-segment wells have been activated, or zero otherwise.			NSWLMX
2-177	Data	WSEGDIMS keyword in the RUNSPEC section - maximum number of segments per multi-segment well, for when multi-segment wells have been activated, or zero otherwise.			NSEGMX
2-178	Data	WSEGDIMS keyword in the RUNSPEC section - maximum number of branches per multi-segment well, including the main branch, for when multi-segment wells have been activated, or zero otherwise.			NLBRMX
2-179	Data	Number of entries per segment in the multi-segment well ISEG array, for when multi-segment wells have been activated, or zero otherwise.			NISEGZ
2-180	Data	Number of entries per segment in the multi-segment well RSEG array, for when multi-segment wells have been activated, or zero otherwise. The number of data items per well segment in the RSEG restart vector is dependent on the number of active phases (oil, gas, water) in the simulation run. In particular, the following relations hold:			NRSEGZ
		Scenario	Phases	NRSEGZ	
		Single Phase	Oil, Gas, or Water	126	
		Two Phase	Oil/Gas, Oil/Water, Gas/Water	134	
		Three Phase	Oil/Gas/Water	146	
2-181	Data	Number of entries per segment in the multi-segment well ILBR array, for when multi-segment wells have been activated, or zero otherwise.			NILBRZ
2-181 to 2-206		Undefined.			0
2-207	Data	The first part of the current simulation time in the form HH;MM:SS, that is HH for hours. The value should be greater than or equal to zero and less than or equal to 23.			IHOURZ
2-208	Data	The second part of the current simulation time in the form HH;MM:SS, that is MM for minutes. The value should be greater than or equal to zero and less than or equal to 59.			IMINTS

No.	Keyword Name	RESTART Data - Header Keywords			Status Or Value
		Table F.20			
		Keyword	No. of Entries	Data Type	
2-209 to 2-223		Undefined.			0
2-224	Data	Number of INTEGER lines in the AQUNUM data set.			NILAQN
2-225	Data	Number of REAL lines in the AQUNUM data set.			NIRAQN
2-226		Undefined.			0
2-227	Data	Number of entries in the AQUNUM data set.			NUMAQN
2-228 to 2-234		Undefined.			0
2-235	Data	Number of items in the ICOT array.			NICOTZ
2-236	Data	Number of items in the XCOT array.			NXCOTZ
2-237	Data	Number of items in the IWET array.			NIWETZ
2-238	Data	Number of items in the XWET array.			NXWETZ
2-239	Data	Number of items in the IGRT array.			NIGRTZ
2-240	Data	Number of items in the XGRT array.			NXGRTZ
2-241	Data	Number of tracers in the model plus two.			NSTRA2
2-242 to 2-245		Undefined.			0
2-246	Data	Maximum number of conditions per action.			MAXACTC
2-253	Data	Maximum umber of analytical aquifers in the model.			MAAQID
2-254 to 2-262		Undefined.			0
2-263	Data	No of Field UDQ data (parameters)			NOFUDQS
2-264	Data	No of Group UDQ data (parameters)			NOGUDQS
2-265		Undefined.			
2-266		Undefined.			
2-267	Data	No of Well UDQ data (parameters)			NOWUDQS
2-268	Data	Integer seed value for the RAND			UDQPAR_I
2-269		Undefined.			
2-270		Undefined.			
2-271	Data	Maximum number of Chord segment links per multi-segment well for when multi-segment wells have been activated, or zero otherwise.			NCRDMX
2-272 to 2-290		Undefined.			0
2-291		Number of integer IUADs			NOIUADS
2-292		Number of integer IUAPs			NOIUAPS

No.	Keyword Name	RESTART Data - Header Keywords			Status Or Value
		Table F.20			
		Keyword	No. of Entries	Data Type	
2-293 to 2-296		Undefined.			
2-297	Data				RSEED
2-298 to 2-410		Undefined.			
2-411	Data	The third part of the current simulation time in the form HH;MM:SS, that is SS for seconds. The value should be greater than or equal to zero and less than or equal to 59.			ISECND
	LOGIHEAD	Global grid keyword for the RESTART Data file that defines the logical variables (T for true and F for false) for this time step. NLHEAD is the number of entries associated with this keyword, and is dependent on the features being used in the model. Undefined items should be set to F (False).			Required
1-1	Format	LOGIHEAD	NLHEAD	LOGI	
2-1	Data	Dissolved gas is present in the model indicator, set to T if present in the model else set to F.			DISGAS
2-2	Data	Vaporized oil is present in the model indicator, set to T if present in the model else set to F.			VAPOIL
2-3	Data	SATOPTS in the RUNSPEC section - directional relative permeability curves are active in the model.			DIRECT
2-4	Data	SATOPTS keyword in the RUNSPEC section - reversible relative permeability curves (black-oil) are active in the model.			IRREVERS
		Radial grid geometry has been used for a compositional model indicator, set to T or F. Note that currently OPM Flow does not support radial grids and therefore this item should be set to F.			RADIAL
2-5	Data	Radial grid geometry has been used for a black-oil model indicator, set to T or F. Note that currently OPM Flow does not support radial grids and therefore this item should be set to F.			RADIAL
		Reversible relative permeability (compositional) are active in the model.			IRREVERS
2-6		Undefined.			
2-7	Data	Enable hysteresis indicator.			HYSER
2-8 to 2-14		Undefined.			F
2-15	Data	The dual porosity option has been activated in the model indicator, set to T or F. Note that currently OPM Flow does not support dual porosity grids and therefore this item should be set to F.			DUALPORO
2-16		Undefined.			F
2-17	Data	ENDSCALE keyword in the RUNSPEC section - enable end-point scaling indicator.			ENDSCALE

No.	Keyword Name	RESTART Data - Header Keywords Table F.20			Status Or Value
		Keyword	No. of Entries	Data Type	
2-18	Data	ENDSCALE keyword in the RUNSPEC section - directional end-point scaling indicator.			DIRECT
2-19	Data	ENDSCALE keyword in the RUNSPEC section - reversible end-point scaling indicator.			IRREVERS
2-20	Data	SCALECRS keyword in the PROPS section - alternative three point end-point scaling indicator.			SCALECRS
2-21 to 2-30		Undefined.			F
2-31	Data	Coal Bed Methane option has been activated in the black-oil model indicator, set to T or F. Note that currently OPM Flow does not support the Coal Bed Methane option and therefore this item should be set to F.			F
2-32 to 2-38		Undefined.			F
2-39	Data	Constant oil compressibility (PVCDO) indicator.			ConstCo
2-40 to 2-75		Undefined.			
2-76	Data	Multi-segment wells are present in the model indicator.			HasMSWells
2-77 to 2-127		Undefined.			
2-128		Coal Bed Methane option has been activated in the compositional model indicator, set to T or F. Note that currently OPM Flow does not support the Coal Bed Methane option and therefore this item should be set to F.			F
	DOUBHEAD	Global grid keyword for the RESTART Data file that defines the double precision REAL variables for this time step. NDHEAD is the number of entries associated with this keyword, and is dependent on the features being used in the model. Undefined values should be set to zero.			Required
1-1	Format	DOUBHEAD	NDHEAD	DOUB	
2-1	Data	The simulation REPORT TIME STEP, expressed in days for all units, except for the LAB system of units which should be expressed in hours.			
2-2	Data	TUNING keyword in the SCHEDULE section - maximum length of next time step.			TSINIT
2-3	Data	TUNING keyword in the SCHEDULE section - maximum length of time step after next.			TSMAXZ
2-4	Data	TUNING keyword in the SCHEDULE section - minimum length of all time steps.			TSMINZ
2-5	Data	TUNING keyword in the SCHEDULE section - minimum length of all chopped time steps.			TSMCHP

No.	Keyword Name	RESTART Data - Header Keywords			Status Or Value
		Table F.20			
		Keyword	No. of Entries	Data Type	
2-6	Data	TUNING keyword in the SCHEDULE section - maximum growth rate a time step can be increased by, subject to the maximum allowable time step size set by TSMAXZ.			TSFMAX
2-7	Data	TUNING keyword in the SCHEDULE section - minimum decay rate a time step can be decreased by, subject to the minimum allowable time step size set by TSMINZ.			TSFMIN
2-8	Data	TUNING keyword in the SCHEDULE section - the decay rate a time step can be decreased by after the number of target iterations has been exceeded.			TSFCNV
2-9	Data	TUNING keyword in the SCHEDULE section - the time truncation error target.			TRGTTE
2-10	Data	TUNING keyword in the SCHEDULE section - thee non-linear convergence error.			TRGCNV
2-11	Data	TUNING keyword in the SCHEDULE section - the target material balance error.			TRGMBE
2-12	Data	TUNING keyword in the SCHEDULE section - the linear convergence error target.			TRGLCV
2-13 to 2-16		Undefined			
2-17	Data	TUNING keyword in the SCHEDULE section - the maximum time truncation error.			XXXTTE
2-18	Data	TUNING keyword in the SCHEDULE section - the maximum non-linear convergence error.			XXXCNV
2-19	Data	TUNING keyword in the SCHEDULE section - the maximum mass balance error.			XXXMBE
2-20	Data	TUNING keyword in the SCHEDULE section - the maximum linear convergence error.			XXXLCV
2-21	Data	TUNING keyword in the SCHEDULE section - the maximum well flow convergence error.			XXXWFL
2-22 to 2-82		Undefined.			
2-83	Data	TUNING keyword in the SCHEDULE section - target pressure change within a time step.			TRGDPR
2-84	Data	TUNING keyword in the SCHEDULE section - time step growth factor of the time step after a convergence failure.			TFDIFF
2-85	Data	TUNING keyword in the SCHEDULE section - the maximum pressure change at the last Newtonian iteration.			DDPLIM
2.86	Data	TUNING keyword in the SCHEDULE section - the maximum saturation change at the last Newtonian iteration.			DDSLIM
2.87		Undefined.			
2-88	Data	GUIDERAT keyword in the SCHEDULE section - guide rate parameter A.			GRPAR_A
2-89	Data	GUIDERAT keyword in the SCHEDULE section - guide rate parameter B.			GRPAR_B
2-90	Data	GUIDERAT keyword in the SCHEDULE section - guide rate parameter C.			GRPAR_C
2-91	Data	GUIDERAT keyword in the SCHEDULE section - guide rate parameter D.			GRPAR_D

No.	Keyword Name	RESTART Data - Header Keywords			Status Or Value
		Table F.20			
		Keyword	No. of Entries	Data Type	
2-92	Data	GUIDERAT keyword in the SCHEDULE section - guide rate parameter E.			GRPAR_E
2-93	Data	GUIDERAT keyword in the SCHEDULE section - guide rate parameter F.			GRPAR_F
2-94 to 2-97		Undefined.			
2.98	Data	Guide rate parameter delay interval.			GRPAR_INT
2-99		Undefined.			
2-100	Data	TUNING keyword in the SCHEDULE section - the maximum throughput ratio over a time step.			THRURPT
2-101	Data	TUNING keyword in the SCHEDULE section - maximum tolerable pressure change within a time step.			XXXDPR
2-102	Data	TUNING keyword in the SCHEDULE section - the target fluid in-place error in Local Grid Refinements.			TRGFIP
2-103	Data	TUNING keyword in the SCHEDULE section - target surfactant change when the Surfactant Model is active in the run.			TRGSFT
2-104 to 2-144		Undefined.			
2-145	Data	Guide rate parameter damping factor.			GRPAR_DAMP
2-146 to 2-161		Undefined.			
2-161	Data	The simulation START time, expressed in days for all units, except for the LAB system of units which should expressed in hours.			
2-162	Data	Cumulative time from the start of the simulation, expressed in days for all units, except for the LAB system of units which should expressed in hours. That is the sum of values (2-1) and (2-161).			
2-163 to 2-212		Undefined.			0
2-213	Data	UDQPARAM item number 2 (Permitted range (+/-) of user-defined quantities).			UDQPAR_2
2-214	Data	UDQPARAM item number 3 (Value given to undefined elements when outputting data).			UDQPAR_3
2-215	Data	UDQPARAM item number 4 (fractional equality tolerance used in == <= etc. functions).			UDQPAR_4
Notes:					
1) Rows shaded in gray indicate the start of a keyword.					
2) Cells colored red in the No. column indicate that this item is either “Not Used” or “Undefined”.					
3) For formatted output all character variables, including the keyword should be enclosed in single quotes, for example the DOUBHEAD keyword should be written out as ‘DOUBHEAD’.					

Table F.20: RESTART Data - Header Keywords

Example: RESTART Data - Header Keywords

The following example shows a typical formatted RESTART Data - Header keywords.

```
'INTEHEAD'      249 'INTE'
-955283513      200400      2      -2345      -2345      -2345
-2345      -2345      10      10      1      100
10      -2345      7      -2345      0      1
0      2      2      0      0      0
110      108      109      3      97      93
-2345      -2345      19      38      53      -2345
97      93      146      5      0      1
15      24      8      5      2      4
0      0      0      0      0      0
0      0      0      0      0      0
0      0      0      0      19      10
1982      0      0      0      1      0
0      0      0      0      1      10
0      0      12      1      25      1
-2345      -2345      8      8      5      1
2      1      2      0      100      2
7      0      -11      1      0      1
0      0      0      10      10      1
100      1      1      1      1      10
10      1      19      1      0      0
0      0      0      1      1      1
0      0      0      0      0      0
0      14      10      10      16      1
1      1      1      1      2      1
1      1      1      1      1      31
108      0      0      0      0      0
0      50      10      4      5      9
0      2      8      8      12      1
25      1      -32767      -32767      -32767      -32767
0      1      1      1      18      86
5      1      1      1      1      18
86      -32767      -32767      0      0      109
53      146      8      0      19      110
0      0      1      1      86      0
0      0      0      0      0      1
0      0      0      0      1      0
0      1      0      -1      12      0
0      10      13      1      0      0
0      0      2      0      0      3600
1      6      1      10      1      10
1      1      1      0      30      3
18      10      9

'LOGIHEAD'      79 'LOGI'
T F F T F F F F T F F F F F F T F T F F F F F
F F F F F F F F F F F F F F F F F F F F F F
F F F F F F F F F F F F F F F F F F F F F
F F F F

'DOUBHEAD'      185 'DOUB'
0.000000000000000D+00      0.100000000000000D+01      0.365000000000000D+03
0.100000000149012D+00      0.150000000596046D+00      0.300000000000000D+01
0.300000001192093D+00      0.100000000149012D+00      0.100000000149012D+00
.....
-0.100000000200409D+21      0.100000000000000D+01      0.100000000000000D+01
0.100000000000000D+01      0.000000000000000D+00      0.000000000000000D+00
0.100000000000000D+01      0.100000000000000D-03
```

End of Example

F.7.4 RESTART DATA – GROUP, WELL AND CONNECTION DATA KEYWORDS

The Restart Data – Well and Group Completion Keywords²³⁸ define various parameters associated with groups, wells and connection keywords in the RESTART file for both global and LGR grids.

The structure for this type of keyword is based on the data type as summarized below:

- 1) The group data set keywords are specified in Table F.21 and consists of the IGRP, SGRP, XGRP, and ZGRP keywords.
- 2) Table F.22 contains the multi-segment well keywords that consist of the ISEG, RSEG, ILBS, ILBR and ICRD keywords.
- 3) For wells the keywords are IWEL, SWEL, XWEL and ZWEL and Table F.23 describes these keywords.
- 4) Well connection keywords are specified in Table F.24 and consist of the ICON, SCON, and XCON keywords.
- 5) Tracer keywords are listed in Table F.25 and consists of the ICOT, XCOT, IWET, XWET, IGRT, and XGRT keywords.
- 6) Finally, the network keywords INODE, IBRAN, INOBR, RNODE, RBRAN, and ZNODE are specified in Table F.26.

Note that if multi-segment wells, tracers and networks are absent from the simulation deck then this data will not be written to the RESTART Data file.

The following table outlines the keywords for groups.

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.21 - Group Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	IGRP	Keyword defines the integer Group, well, and connection data for this time step. Undefined values should be set to zero.			Required
1-1	Format	IGRP	NSGRPZ x NGMAXZ	INTE	
2-1 to 2- NWG MAX	Data	Integer group data array IGRP(NIGRPZ,NGMAXZ) where NIGRPZ and NGMAXZ are defined on the INTEHEAD keyword. Entries 1 to NWGMAX define the index of each well in the group, if this is a well group, or the index of each child group in this group if it is a node group. Note that undefined items in this array may be set to zero.			
2 - (NWG MAX + 1)		The number of wells or child groups belonging to this group.			

²³⁸ The RESTART Data – Group, Well and Connection keywords are used both for global and LGR grids with groups, well and connection data for the global grid, and wells and connection data for wells contained in the individual LGRs for the LGR grids. The LGR data is preceded by a series of LGR header keywords and terminated by an LGR termination keyword.

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.21 - Group Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2 - (NWG MAX + 2)		A parameter indicating production group control mode, set to: 3 : NONE or FIELD 4 : Oil rate. 5 : Water rate. 6 : Gas rate. 7 : Liquid rate. 8 : Reservoir volume rate.			
2 - (NWG MAX + 6)		A parameter that defines if the group is controlled by its own targets/limits, or is open to respond to higher level control, or is controlled by a higher level group (see details in code). 0 : If group is injection group.			
2 - (NWG MAX + 7)		A parameter that is dependent on the higher level group control active and guide rate defined for the group. 0 : No group guide rate, or the group is the FIELD group. 1 : Unknown. 2 : Unknown. 3 : Unknown. 4 : Unknown. 5 : Unknown. 6 : Unknown. 7 : Unknown. 8 : Group guide rate defined and higher level guide rate control.			
2 - (NWG MAX + 8)		A parameter that defines which rate reduction option is used for a production group. If rate reduction is used, the value is generally four (4). 0 : FIELD group.			
2 - (NWG MAX + 11)		A parameter describing the production control item defined via item two, the TARGET variable, on the GCONPROD keyword: 0 : NONE or FIELD. 1 : Oil rate. 2 : Water rate. 3 : Gas rate. 4 : Liquid rate. 5 : Reservoir volume rate.			
2 - (NWG MAX + 17)		A parameter describing the water injection control defined via item three, the TARGET variable, on the GCONINJE keyword: 0 : NONE or FIELD. 1 : Rate. 2 : Reservoir volume rate. 3 : Re-injection fraction. 4 : Voidage replacement.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.21 - Group Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2 - (NWG MAX + 18)		A parameter for a water injection group that defines if the group is controlled by its own targets/limits, or is open to respond to higher level control, or is controlled by a higher level group (see details in code).			
2 - (NWG MAX + 22)		A parameter dependent on the gas injection control defined via item three, the TARGET variable, on the GCONINJE keyword: 0 : NONE or FIELD. 1 : Rate. 2 : Reservoir volume rate. 3 : Re-injection fraction. 4 : Voidage replacement.			
2 - (NWG MAX + 23)		A parameter for a gas injection group that defines if the group is controlled by its own targets/limits, or is open to respond to higher level control, or is controlled by a higher level group (see details in code).			
2 - (NWG MAX + 27)		A variable that defines the group type with: 0 : for a well group,. 1 : for a node group, For a satellite group, and 2 : for a slave group.			
2 - (NWG MAX + 28)		The level of the group, with 0 representing the Field group.			
2 - (NWG MAX + 29)		The index of the parent group.			
2 - (NWG MAX + 34)		The sum of the number of active production and injection wells for the group.			
2 - (NWG MAX + 89)		Group sequence number according to the sequence in the input deck, equals NGMAXZ for the FIELD group.			
	SGRP	Keyword defines the real group data array SGRP(NIGRPZ, NGMAXZ) where NIGRPZ and NGMAXZ are defined on the INTEHEAD keyword.			Required
I-I	Format	SGRP	NSGRPZ x NGMAXZ	REAL	
2-1 to 2-6		Undefined.			
2-7	Data	Group's oil production target/limit.			
2-8	Data	Group's water production target/limit.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.21 - Group Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-9	Data	Group's gas production target/limit.			
2-10	Data	Group's liquid production target/limit.			
2-11	Data	Group's oil surface volume injection rate target/limit.			
2-12	Data	Group's oil reservoir volume injection rate target/limit.			
2-13	Data	Group's oil re-injection fraction target/limit.			
2-14	Data	Group's oil voidage injection fraction target/limit.			
2-15		Undefined.			
2-16	Data	Group's water surface volume injection rate target/limit.			
2-17	Data	Group's water reservoir volume injection rate target/limit.			
2-18	Data	Group's water re-injection fraction target/limit.			
2-19	Data	Group's water voidage injection fraction target/limit.			
2-20		Undefined.			
2-21	Data	Group's gas surface volume injection rate target/limit.			
2-22	Data	Group's gas reservoir volume injection rate target/limit.			
2-23	Data	Group's gas re-injection fraction target/limit.			
2-24	Data	Group's gas voidage injection fraction target/limit.			
	XGRP	Keyword defines the double precision group data array XGRP(NIGRPZ,NGMAXZ) where NIGRPZ and NGMAXZ are defined on the INTEHEAD keyword.			Required
1-1	Format	XGRP	NSGRPZ x NGMAXZ	DOUB	
2-1	Data	Group's oil production rate.			
2-2	Data	Group's water production rate.			
2-3	Data	Group's gas production rate.			
2-4	Data	Group's liquid production rate.			
2-5		Undefined.			
2-6	Data	Group's water injection rate.			
2-7	Data	Group's gas injection rate.			
2-8		Undefined.			
2-9	Data	Group's producing water cut.			
2-10	Data	Group's producing gas/oil ratio.			
2-11	Data	Group's total cumulative oil production.			
2-12	Data	Group's total cumulative water production.			
2-13	Data	Group's total cumulative gas production.			
2-14	Data	Group's total cumulative reservoir voidage production.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.21 - Group Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-15	Data	Undefined.			
2-16	Data	Group's total cumulative water injection.			
2-17	Data	Group's total cumulative gas injection.			
2-18	Data	Group's total cumulative reservoir volume injection.			
2-19		Undefined.			
2-20		Undefined.			
2-21		Undefined.			
2-22		Undefined.			
2-23	Data	Group's oil production potential.			
2-24	Data	Group's water production potential.			
2-25 to 2-86		Undefined.			
2-86	Data	Group's producer guide rate for oil.			
2-87	Data	Group's producer guide rate for water.			
2-88	Data	Group's producer guide rate for gas.			
2-89	Data	Group's producer guide rate for reservoir voidage volume.			
2-90	Data	Group's injection guide rate for oil.			
2-91		Undefined.			
2-92	Data	Group's injection guide rate for water.			
2-93	Data	Second copy of group's injection guide rate for water. Not fully characterized.			
2-94	Data	Groups injection guide rate for gas.			
2-95 to 2-127		Undefined.			
2-128	Data	Second copy of group's producer guide rate for oil. Not fully characterized.			
2-129	Data	Second copy of group's producer guide rate for water. Not fully characterized.			
2-130	Data	Second copy of group's producer guide rate for gas. Not fully characterized.			
2-131	Data	Second copy of group's producer guide rate for reservoir voidage volume. Not fully characterized.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.21 - Group Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-132 to 2-135		Undefined.			
2-136	Data	Group's total cumulative oil production (observed/historical rates).			
2-137		Undefined.			
2-138		Undefined.			
2-139		Undefined.			
2-140	Data	Group's total cumulative water production (observed/historical rates).			
2-141	Data	Group's total cumulative water injection (observed/historical rates).			
2-142		Undefined.			
2-143		Undefined.			
2-144	Data	Group's total cumulative gas production (observed/historical rates).			
2-145	Data	Group's total cumulative gas injection (observed/historical rates).			
	ZGRP	Keyword defines the character GROUP data for this keyword.			Required
1-1	Format	ZGRP	NSGRPZ x NGMAXZ	CHAR	
2-1	Data	Character group data array ZGRP(NIGRPZ,NGMAXZ) where NIGRPZ and NGMAXZ are defined on the INTEHEAD keyword.			

Table F.21: RESTART Data – Group, Well and Connection Keywords (Groups)

The next table (Table F.22) contains the multi-segment well keywords that consist of the ISEG, RSEG, ILBS, ILBR and ICRD keywords.

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.22 - Multi-Segment Well Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	ISEG	Integer multi-segment well data array ISEG (NISEGZ, NSEGMX, NSWLMX) where NISEGZ, NSEGMX, and NSWLMX are defined on the INTEHEAD keyword.			Optional
1-1	Format	ISEG	NISEGZ x NSEGMX x NSWLMX	INTE	
2-1	Data	Segment number (one-based). Special ordering – see code for details.			
2-2	Data	Outlet segment (one-based). Defines the multi-segment outlet segment number starting with 0 for the segment nearest wellhead (NISEGZ = 2).			
2-3	Data	Inflow segment current branch (one-based).			
2-4	Data	Branch number (one-based). Defines the multi-segment branch for this segment number 1 for main stem and 0 if not active (NISEGZ = 4).			
2-5 to 2-11		Undefined.			
2-12	Data	Segment type.			
2-123 to 2-18		Undefined.			
2-19	Data	ICD scaling mode.			
2-20	Data	ICD open/shut flag.			
	RSEG	Double precision multi-segment well data array RSEG (NISEGZ, NSEGMX, NSWLMX) where NISEGZ, NSEGMX, and NSWLMX are defined on the INTEHEAD keyword.			Optional
1-1	Format	RSEG	NISEGZ x NSEGMX x NSWLMX	DOUB	
2-1	Data	Segment's distance to outlet.			
2-2	Data	Segment's depth differential to outlet.			
2-3	Data	Internal diameter of segment.			
2-4	Data	Roughness parameter of segment.			
2-5	Data	Cross-sectional area of segment.			
2-6	Data	Physical volume of segment.			
2-7	Data	Segment's distance to BHP reference node.			
2-8	Data	Segment's depth differential to BHP reference node.			
2-9	Data	Normalized total segment flow rate.			
2-10	Data	Normalized Water flow rate fraction.			
2-11	Data	Normalized Gas flow rate fraction.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.22 - Multi-Segment Well Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-12	Data	Segment pressure.			
2-13 to 2-30		Undefined.			
2-31	Data	Very close to normalized water flow rate fraction.			
2-32 to 2-39		Undefined.			
2-40	Data	Undefined.			
2-41	Data	Length of valve.			
2-42	Data	Cross-sectional area of valve.			
2-43	Data	Valve's dimensionless flow coefficient.			
2-44	Data	Maximal cross-sectional valve area.			
2-45 to 2-86		Undefined.			
2-87	Data	Device base strength.			
2-88		Undefined.			
2-89	Data	Calibrated fluid density.			
2-90	Data	Calibrated fluid viscosity.			
2-91	Data	Critical water fraction.			
2-92	Data	Transition region width.			
2-93	Data	Maximum emulsion ratio.			
2-94 to 2-97		Undefined.			
2-98	Data	Maximum valid flow rate.			
2-99 to 2-102		Undefined.			
2-103	Data	ICD length.			
2-104	Data	Valve area fraction.			
2-105 to 2-111		Undefined.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.22 - Multi-Segment Well Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	ILBS	Integer multi-segment well data array for lateral branches ILBR (NLBRMX, NSWLMX) where NLBRMX and NSWLMX are defined on the INTEHEAD keyword.			Optional
1-1	Format	ILBS	NLBRMX x NSWLMX	INTE	
2-1 to no_branches	Data	The segment number of the first segment in the branch for branch number two and upwards.			
	ILBR	Integer multi-segment well data array for chords ILBR (NILBRZ, NLBRMX, NSWLMX) where NILBRZ, NLBRMX, and NSWLMX are defined on the INTEHEAD keyword.			Optional
1-1	Format	ILBR	NILBRZ x NLBRMX x NSWLMX	INTE	
2-1	Data	Outlet segment number.			
2-2	Data	Number of segments in the branch.			
2-3	Data	First segment in branch.			
2-4	Data	Last segment in branch.			
2-5	Data	Branch number minus one.			
	ICRD	Integer multi-segment well data array for chords ICRD (2, NCRDMX, NSWLMX) where NCRDMX, and NSWLMX are defined on the INTEHEAD keyword.			Optional
1-1	Format	ILBR	2 x NCRDMX x NSWLMX	INTE	
2-1	Data	ICRD (2, NCRDMX, NSWLMX) array.			

Table F.22: RESTART Data – Group, Well and Connection Keywords (Multi-Segment Wells)

The wells keywords are IWEL, SWEL, XWEL and ZWEL and Table F.23 below describes these keywords in detail.

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.23 - Well Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	IWEL	Well integer data array IWEL(NIWELZ, NWELLS) where NIWELZ and NWELLS are defined on the INTEHEAD keyword. Undefined values should be set to zero.			
1-1	Format	IWEL	NIWELZ x NWELLS	INTE	Required
2-1	Data	Defines the location of the wellhead in the grid for the I dimension (NIWELZ = 1).			
2-2	Data	Defines the location of the wellhead in the grid for the J dimension (NIWELZ = 2).			
2-3	Data	Layer ID (one-based) of top/first connection.			
2-4	Data	Layer ID (one-based) of bottom/last connection.			
2-5	Data	Number of active cells connected to a well.			
2-6	Data	Index (one-based) of well's current group.			
2-7	Data	Defines the well type, set 1 for a production well, 2 for an oil injection well, 3 for a water injection well or 4 for a gas injection well (NIWELZ = 7).			
2-8	Data	Well's active target control mode (constraint).			
2-9		Undefined.			
2-10		Undefined.			
2-11	Data	Defines the well status, set to greater than zero for producing and less than or equal to zero for being shut (NIWELZ = 11).			
2-12	Data	ID (one-based) of well's current VFP table.			
2-13		Undefined.			
2-14		Undefined.			
2-15		Undefined.			
2-16	Data	Well's requested control mode from simulation deck (WCONINJE, WCONPROD).			
2-17 to 2-22		Undefined.			
2-23	Data	Cross flow indicator.			
2-24 to 2-42		Undefined.			
2-43	Data	Defines the LGR index for a well with local completions in a LGR (NIWELZ = 43).			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.23 - Well Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-44 to 2-48		Undefined.			
2-49	Data	Defines the well friction indicator, set to non-zero for horizontal wells (NIWELZ = 49).			
2-50	Data	Well's requested control mode from simulation deck (WCONHIST, WCONINJH).			
2-51 to 2-70		Undefined.			
2-71	Data	Multi-segment well ID; value of one for regular wells, or zero for multi-segment wells.			
2-72	Data	Number of well segments: value of one for regular wells, or the number of segments for multi-segment wells.			
2-73 to 2-98		Undefined.			
2-99	Data	Well's completion ordering scheme, set to: 0) Connections ordered along well track (increasing MD) 1) Connections ordered by increasing true vertical depth. Not really supported in OPM Flow. 2) Connections listed in order of appearance in simulation model's COMPDAT keyword.			
	SWEL	Well real data array SWEL(NSWELZ, NWELLS) where NSWELX and NWELLS are defined on the INTEHEAD record.			
1-1	Format	SWEL	NSWELZ x NWELLS	REAL	Required
2-1	Data	Well's current oil rate production target.			
2-2	Data	Well's current water rate production target.			
2-3	Data	Well's current gas rate production target.			
2-4	Data	Well's current liquid rate production target.			
2-5	Data	Well's current reservoir voidage rate production target.			
2-6	Data	Well's tubing head pressure target.			
2-7	Data	Well's bottom hole pressure target.			
2-8		Undefined.			
2-9		Undefined.			
2-10		Well's reference depth for BHP.			
2-11		Well's artificial lift quantity.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.23 - Well Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-12 to 2-17		Undefined.			
2-18		Well's drainage radius - item seven from the WELSPECS keyword.			
2-19 to 2-20		Undefined.			
2-25		Item two from WEFAC; this value is repeated at two locations.			
2-26 to 2-31		Undefined.			
2-32		Item two from WEFAC keyword.			
2-33		Undefined.			
2-34		Well's historical/observed liquid rate target/limit.			
2-35 to 2-54		Undefined.			
2-55		Well's historical/observed gas rate target/limit.			
2-56		Well's historical/observed bottom hole pressure target/limit.			
	XWEL	Well's injection and production data array XWEL(NXWELZ, NWELLS).			
I-1	Format	XWEL	NSWELZ x NWELLS	DOUB	Required
2-1	Data	Well's oil production rate.			
2-2	Data	Well's water production rate.			
2-3	Data	Well's gas production rate.			
2-4	Data	Well's liquid production rate.			
2-5	Data	Well's reservoir voidage production rate.			
2-6	Data	Well's tubing head pressure.			
2-7	Data	Well's flowing/producing bottom hole pressure.			
2-8	Data	Well's producing water cut.			
2-9	Data	Well's producing gas/oil ratio.			
2-10 to 2-18		Undefined.			
2-19	Data	Well's total cumulative oil production.			
2-20	Data	Well's total cumulative water production.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.23 - Well Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-21	Data	Well's total cumulative gas production.			
2-22	Data	Well's total cumulative reservoir voidage production.			
2-23		Undefined.			
2-24	Data	Well's total cumulative water injection.			
2-25	Data	Well's total cumulative gas injection.			
2-26	Data	Well's total cumulative reservoir volume injection.			
2-27 to 2-34		Undefined.			
2-35	Data	Well's producing gas formation volume factor.			
2-36		Undefined.			
2-37		Undefined.			
2-38		Undefined.			
2-39 to 2-41		Undefined.			
2-42	Data	Well's current BHP Target/Limit.			
2-43 to 2-48		Undefined.			
2-49	Data	Well's "primary" guide rate (oil for producers, preferred phase for injectors).			
2-50	Data	Well's producer guide rate for water.			
2-51	Data	Well's producer guide rate for gas.			
2-52 to 2-68	Data	Undefined.			
2-69	Data	Well's producer guide rate for reservoir voidage volume.			
2-70 to 2-75		Undefined.			
2-76	Data	Well's total cumulative oil production (observed/historical rates).			
2-77	Data	Well's total cumulative water production observed/historical rates).			
2-78	Data	Well's total cumulative gas production (observed(historical rates).			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.23 - Well Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-79 to 2-81		Undefined.			
2-82	Data	Well's total cumulative water injection (observed/historical rates).			
2-83	Data	Well's total cumulative gas injection (observed/historical rates).			
2-84 to 2-91		Undefined.			
2-92		Second copy of well's primary guide rate. Not fully characterized.			
2-93	Data	Second copy of well's producer guide rate for water. Not fully characterized.			
2-94	Data	Second copy of well's producer guide rate for gas. Not fully characterized.			
2-95	Data	Second copy of well's producer guide rate for reservoir voidage. Not fully characterized.			
2-96 to 2-122		Undefined.			
2-123	Data	Well's voidage production rate.			
2-124	Data	Well's voidage production rate.			
	ZWEL	Well character data array ZWEL(NXWELZ, NWELLS) where NXWELX and NWELLS are defined on the INTEHEAD keyword. All strings are eight characters in length.			
1-1	Format	ZWEL	NSWELZ x NWELLS	CHAR	Required
2-1	Data	Defines the well name consisting of eight characters (NXWELZ = 1).			
2-2	Data	Defines the name of the Well List the well belongs to, set to "blank" for the well does not belong to Well List (NXWELZ = 2), that is the ACTIONX name.			
2-3	Data	Defines the end of time step action for the well (NXWELZ = 3).			

Table F.23: RESTART Data – Group, Well and Connection Keywords (Wells)

The well connection keywords are specified in Table F.24 and consist of the ICON, SCON, and XCON keywords.

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.24 - Connection Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	ICON	Connection integer data array ICON(NICONZ, NCWMAX, NWELLS) where NICONZ, NCWMAX, and NWELLS are defined on the INTEHEAD keyword. Data keywords are required for each completion in the well and the number of data items, N, should be NICONZ x NCWMAX x NWELLS. Undefined values should be set to zero.			
1-1	Format	ICON	N	INTE	
2-1	Data	Defines the well connect index (NICONZ = 1).			0
2-2	Data	Defines the location of connection in the grid for the I dimension (NICONZ = 2).			0
2-3	Data	Defines the location of connection in the grid for the J dimension (NICONZ = 3).			0
2-4	Data	Defines the location of connection in the grid for the K dimension (NICONZ = 4).			0
2-5		Undefined.			0
2-6	Data	Defines the status of the connection, set to less than or equal to zero for being shut or greater than zero for being open (NICONZ = 5).			0
2-7		Drainage saturation function table number.			0
2-8		Undefined.			0
2-9		Undefined.			0
2-10		Imbibition saturation function table number.			0
2-11		Undefined.			0
2-12		Undefined.			0
2-13		Completion ID (I-based).			0
2-14	Data	Defines the direction of connection, set to one for the x-direction, two for the y-direction, three for the z-direction. The default value of zero indicates the z-direction (NICONZ = 14).			0
2-15	Data	Defines, for multi-segment wells, the segment number the connect belongs to, for conventional wells the default value of zero should be used (NICONZ = 15).			
	SCON	Connection real data array SCON(NSCONZ, NCWMAX, NWELLS) where NSCONZ, NCWMAX, and NWELLS are defined on the INTEHEAD keyword. Data are required for each completion in the well and the number of data items, N, should be NSCONZ x NCWMAX x NWELLS.			Required
1-1	Format	ICON	N	REAL	
2-1	Data	Connection transmissibility factor NSCONZ = 1 in the SCON array.			
2-2	Data	Connection center depth.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.24 - Connection Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-3	Data	Connection diameter.			
2-4	Data	Connection KH, that is the net thickness times the permeability, NSCONZ = 4 in the SCON array.			
2-5	Data	Skin factor - item 'SKIN' from COMPDAT keyword in the SCHEDULE section.			
2-6 to 2-11		Undefined.			
2-12	Data	Connection transmissibility factor.			
2-13 to 2-20		Undefined.			
2-21	Data	Distance to end of connection in segment.			
2-22	Data	Distance to start of connection in segment.			
2-23 to 2-29		Undefined.			
2-30	Data	Undefined.			
2-31	Data	Undefined.			
2-32 to 2-40		Undefined.			
2-41	Data	Connection factor defined in input deck (set to one), or zero for undefined in input deck.			
	XCON	Connection double precision data array XCON(NXCONZ, NCWMAX, NWELLS) where NXCONZ, NCWMAX, and NWELLS are defined on the INTEHEAD keyword. The number of data items, N, should be NXCONZ x NCWMAX x NWELLS			Required
1-1	Format	ICON	N	DOUB	
2-1	Data	Oil surface rate.			
2-2	Data	Water surface rate.			
2-3	Data	Gas surface rate.			
2-4 to 2-34		Undefined.			
2-35		Connection pressure value.			

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.24 - Connection Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-36 to 2-49		Undefined.			
2-50		Reservoir voidage rate.			

Table F.24: RESTART Data – Group, Well and Connection Keywords (Connections)

The tracer keywords are listed in Table F.25 and consists of the ICOT, XCOT, IWET, XWET, IGRT, and XGRT keywords. Not this series of keywords are only available if tracers are present in the run.

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.25 - Tracer Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	ICOT	Tracer connection integer data array ICOT(NICOTZ, NSTRA2, NCWMAX, NWELLS) where NICOTZ, NSTRA2, NCWMAX, and NWELLS are defined on the INTEHEAD keyword. The number of data items, N, should be NICONZ x NSTRA2 x NCWMAX x NWELLS.			Optional
1-1	Format	ICOT	N	INTE	
2-1	Data	ICOT(NICOTZ, NSTRA2, NCWMAX, NWELLS) array.			
	XCOT	Tracer connection double precision data array ICOT(NICOTZ, NSTRA2, NCWMAX, NWELLS) where NICOTZ, NSTRA2, NCWMAX, and NWELLS are defined on the INTEHEAD keyword. The number of data items, N, should be NICONZ x NSTRA2 x NCWMAX x NWELLS.			Optional
1-1	Format	XCOT	N	DOUB	
2-1	Data	XCOT(NICOTZ, NSTRA2, NCWMAX, NWELLS) array.			
	IWET	Tracer well integer data array IWET(NIWETZ, NSTRA2, NWMAXZ, NWELLS) where NIWETZ, NSTRA2, and NWMAXZ are defined on the INTEHEAD keyword. The number of items, N, should be NIWETNZ x NSTRA2 x NWMAXZ.			Optional
1-1	Format	IWET	N	INTE	
2-1	Data	IWET(NIWETZ, NSTRA2, NWMAXZ, NWELLS) array.			
	XWET	Tracer connection double precision data array XWET(NXWETZ, NSTRA2, NWMAXZ) where NXWETZ, NSTRA2, and NWMAXZ are defined on the INTEHEAD keyword. The number of items, N, should be NXWETNZ x NSTRA2 x NWMAXZ.			Optional
1-1	Format	XWET	N	DOUB	
2-1	Data	XWET(NXWETZ, NSTRA2, NWMAXZ) array.			
	IGRT	Tracer well integer data array IGRT(NIGRTZ, NSTRA2, NWMAXZ, NWELLS) where NIGRTZ, NSTRA2, and NWMAXZ are defined on the INTEHEAD keyword. The number of elements, N, should be NIGRTNZ x NSTRA2 x NWMAXZ.			Optional
1-1	Format	IGRT	N	INTE	

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords			Status Or Value
		Table F.25 - Tracer Keywords			
2-I	Data	IGRT(NIGRTZ, NSTRA2, NWMAXZ, NWELLS) array.			
	XGRT	Tracer connection double precision data array XGRT(NXGRTZ, NSTRA2, NWMAXZ) where NXGRTZ, NSTRA2, and NWMAXZ are defined in the INTEHEAD keyword. The number of data items, N, should be NXGRTNZ x NSTRA2 x NWMAXZ.			Optional
1-I	Format	XGRT	N	DOUB	
2-I	Data	XWET(NXWETZ, NSTRA2, NWMAXZ) array.			

Table F.25: RESTART Data – Group, Well and Connection Keywords (Tracers)

Finally, the network keywords INODE, IBRAN, INOBR, RNODE, RBRAN, and ZNODE are specified in Table F.26. Again, this series of keywords are only available if networks are present in the run.

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords			Status Or Value
		Table F.26 - Network Keywords			
		Keyword	No. of Entries	Data Type	
	INODE	Network node integer data array INODE(NINODE, NODMAX) where NINODE and NODMAX are defined in the INTEHEAD keyword.			Optional
1-I	Format	INODE	NINODE x NODMAX	INTE	
2-I	Data	INODE(NINODE, NODMAX) array			
	IBRAN	Network node branch integer data array IBRAN(NIBRAN, NBRMAX) where NIBRAN and NBRMAX are defined in the INTEHEAD keyword.			Optional
1-I	Format	IBRAN	NIBRAN x NBRMAX	INTE	
2-I	Data	IBRAN(NIBRAN, NBRMAX)			
	INOBR	Network node-branch integer data array INOBR(NIOBR) where NIOBR are defined in the INTEHEAD keyword.			Optional
1-I		INOBR	NIOBR	INTE	
2-I		INOBR(NIOBR) array.			
	RNODE	Network node double precision data array RNODE(NRNODE, NODMAX) where NRNODE and NODMAX are defined in the INTEHEAD keyword.			Optional
1-I	Format	RNODE	NRNODE x NODMAX	DOUB	
2-I	Data	RNODE(NRNODE, NODMAX) array.			
	RBRAN	Network node branch integer data array RBRAN(NRBRAN, NBRMAX) where NRBRAN and NBRMAX are defined in the INTEHEAD keyword.			Optional
1-I	Format	RBRAN	NRBRAN x NBRMAX	DOUB	
2-I	Data	RBRAN(NRBRAN, NBRMAX) array.			
	ZNODE	Network node character data array ZNODE(NZNODE, NODMAX) where NZNODE and NODMAX are defined in the INTEHEAD keyword.			Optional
1-I	Format	ZNODE	NZNODE x NODMAX	CHAR	

No.	Keyword Name	RESTART Data – Group, Well And Connection Keywords Table F.26 - Network Keywords	Status Or Value
2-1	Data	ZNODE(NZNODE, NODMAX) array.	

Notes:

- 1) Rows shaded in gray indicate the start of a keyword.
- 2) Cells colored red in the No. column indicate that this item is either “Not Used” or “Undefined”.
- 3) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the ZNODE keyword should be written out as 'ZNODE'.

Table F.26: RESTART Data – Group, Well and Connection Keywords (Network)

Example: RESTART Data – Group, Well and Connection Keywords

The following example shows a typical formatted RESTART Data – Group, Well and Connection keyword data set, showing the IGRP SGRP XGRP and ZGRP keywords.

[illegible]

End of Example

F.7.5 RESTART DATA – UDQ AND ACTIONX KEYWORDS

The restart data for the UDQ and ACTIONX keywords are written out in a set of UDQ and ACTIONX arrays. If there are no UDQ or ACTIONX data, the corresponding arrays are not written to the restart file and only the relevant arrays are written out.

The structure for this type of keyword is based on the data type as summarized below:

- 1) The UDQ data set keywords are specified in Table F.27 and consists of the IUDQ, IUAD, ZUDN, ZUDL, IGPH, IUAP, DUDW, DUDG, and DUDF keywords.
- 2) The ACTIONX data set keywords are specified in Table F.28 and consists of the keywords IACT, SACT, ZACT, ZLACT, ZACN, IACN and SACN.

No.	Keyword Name	RESTART Data – UDQ And ACTIONX Keywords Table F.27 - UDQ Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	IUDQ	Keyword defines the integer properties as per the UDQ variable.			Required
1-1	Format	IUDQ	No. UDQ's x 3	INTE	
2-1	Data	0 : ASSIGN UDQ 1 : Undefined 2 : DEFINE UDQ			
2-2	Data	-4 : ASSIGN UDQ (-1) times the number of operators in expression: DEFINE UDQ (see code for details)			
2-3	Data	Sequence number of UDQ pr type (F, G, etc.)			
	IUAD	This keyword defines the various controls for wells, groups, etc.			Required
1-1	Format	IUAD	No. IUAD's x 5	INTE	
2-1	Data	Set to: 1) 200000 + 19 for GCONPROD and ORAT 2) 300000 + 19 for GCONPROD and WRAT 3) 400000 + 19 for GCONPROD and GRAT 4) 500000 + 19 for GCONPROD and LRAT 5) 300000 + 4 for WCONPROD + ORAT 6) 400000 + 4 for WCONPROD + WRAT 7) 500000 + 4 for WCONPROD + GRAT 8) 600000 + 4 for WCONPROD + LRAT 9) 300000 + 3 for WCONINJE + ORAT 10) 400000 + 3 for WCONINJE + RATE (surface rate) 11) 500000 + 3 for WCONINJE + RESV (reservoir vol rate) 12) 1000000 + 27 for CECON + minimum oil rate			
2-2	Data	Sequence number of UDQ used (from input sequence) for the actual constraint/target.			
2-3	Data	Set to one (1).			
2-4	Data	Number of times the UDQ variable is used.			

No.	Keyword Name	RESTART Data – UDQ And ACTIONX Keywords Table F.27 - UDQ Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-5	Data	The sequence number for the first use of the actual UDQ, equal to one (1) plus the (sum over the earlier UDQ's of the number of uses of the respective UDQ's).			
	IUAP	The keyword defines the sequence number of the actual well, group etc. for each UDQ-Use in WYCONPROD, GCONPROD, GCONINJE etc.			Required
1-1	Format	IUAP	No. IUAP's	INTE	
2-1	Data	Equals the well, group etc. sequence number for the UDQ-Variable used in actual target, limit.			
	IGPH	This keyword defines an integer number per group, and for the FIELD which is the last group in the list).			Required
1-1	Format	IGPH	Max Number Groups in the Field plus one.	INTE	
2-1	Data	The value of the integer denotes the phase (or component) for injection group control (GCONINJE): 0 : No injection control. 1 : Oil phase injection control. 2 : Water phase injection. 3 : Gas injection.			
	ZUDN	Keyword pairs of data for each UDQ.			Required
1-1	Format	ZUDN	No. UDQ's x 2	CHAR	
2-1	Data	UDQ name (maximum of eight characters per UDQ).			
2-2	Data	UDQ's units (maximum of eight characters per UDQ).			
	ZUDL	This keyword contains the EXPRESSION variable (item three) on the UDQ keyword in the input deck "Data for operation".			Required
1-1	Format	ZUDL	No. UDQ's x 16	CHAR	
2-1 to 2-16	Data	A character string that defines the EXPRESSION variable, "Data for operation", split into strings of eight characters each.			
	DUDW	Keyword containing the values of all the well UDQ's.			Required
1-1	Format	DUDW	No. Well UDQs x Max No. of Wells.	DOUBLE	
2-1 to no of well UDQ's	Data	The value of the UDQ for the actual well (repeated for all wells in the well input sequence).			
	DUDG	Keyword containing the values of all the group UDQ's.			Required
1-1	Format	DUDG	No. Group UDQs x Max No. of Groups.	DOUBLE	
2-1 to no of group UDQ's	Data	The value of UDQ for the actual group (repeated for all groups in the group input sequence).			

No.	Keyword Name	RESTART Data – UDQ And ACTIONX Keywords Table F.27 - UDQ Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	DUDF	Keyword containing the values of all the field UDQ's.			Required
1-1	Format	DUDF	No. Field UDQs	DOUBLE	
2-1 to no of field UDQ's	Data	Value of UDQ for field UDQs			

Table F.27: RESTART Data – UDQ Keywords

No.	Keyword Name	RESTART Data – UDQ And ACTIONX Keywords Table F.28 - ACTIONX Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	IACT	The keyword defines the integer properties for the ACTIONX variable.			Required
1-1	Format	IACT	No. of Actions x 9	INTE	
2-1	Data	0 : Undefined.			
2-2	Data	Number of lines of SCHEDULE data.			
2-3	Data	1 : For condition and previous condition equal to AND, and combinations OR/AND 2 : For all conditions and previous conditions equal to OR			
2-4	Data	7 : Undefined.			
2-5	Data	0 : Undefined.			
2-6	Data	The number of times the action is triggered.			
2-7	Data	0 : Undefined.			
2-8	Data	0 : Undefined.			
2-9	Data	The number of conditions for the action.			
	IACN	Keyword defines various parameters for			Required
1-1	Format	IACN	No.Actions x 26 x Max No. Conditions per Action.	INTE	
2-1 to 2-10	Data	0 : Undefined.			

No.	Keyword Name	RESTART Data – UDAQ And ACTIONX Keywords Table F.28 - ACTIONX Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-11	Data	The type of quantity for the condition: 1 : For a field quantity (number of flowing producing wells). 2 : For a well quantity 3 : For a (node) group quantity. 9 : For a well group quantity 10 : For the DAY. 11 : For the MONTH. 12 : For the YEAR.			
2-12	Data	Quantity type for the Right Hand Side ("RHS") quantity: 1 : For field variables. 2 : For well variables? 3 : For group variables. 8 : For constant values.			
2-13	Data	Index for relational operator (<, =, >): 0 : For LHS quantity greater RHS quantity. 1 : For LHS quantity less than or equal to RHS quantity.			
2-14	Data	Relates to operator: 1 : AND 2 : OR			
2-17	Data	Defines the operator used in ACTIONX for defined quantities: 1 : For the > operator. 2 : For the < operator. 3 : For the >= operator. 4 : For the <= operator. 5 : For the = operator.			
2-18	Data	The value relates to the operator for the triggering condition and if the right hand quantity is a constant or not. There is one value for each condition and the value is determined as follows: 1) For the first condition in an ACTIONX statement $iactn[17] = 0$ 2) For the second, third etc. conditions $iactn[17]$ is determined using the following logic: If the previous condition has a constant rhs $\Rightarrow iactn[17] = 0$. If previous rhs is of type {W,G,F} and If previous boolean operator is AND $\Rightarrow iactn[17] = 1$ If previous boolean operator is OR $\Rightarrow iactn[17] = 0$ Note as mentioned previously, the No. column in this table and all tables in APPENDIX F, the count is based on one (offset one); however, in C++ the base is zero (offset zero) and therefore C++ programmers must subtract one from this column to obtain the correct reference. Hence, the $iactn[17]$ reference is the correct reference for C++.			
	SACT	Keyword defines various parameters for an ACTIONX keyword			Required

No.	Keyword Name	RESTART Data – UDQ And ACTIONX Keywords Table F.28 - ACTIONX Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
1-1	Format	SACT	No.Actions x 5	REAL	
2-1 to 2-5	Data	0 : Undefined			
	ZACT	Keyword defines the name of an action			Required
1-1	Format	ZACT	No.Actions x 4	CHAR	
2-1	Data	The name of an ACTION (maximum eight characters).			
	ZLACT	Keyword containing the actions defined for an ACTIONX keyword.			Required
1-1	Format	ZLACT	No_Actions x Max No. of Input Lines x Max No. Characters per Input Line.	CHAR	
2-1 to 2-?	Data	Contains the actions defined for an ACTIONX keyword.			
	ZACN	Keyword containing the EXPRESSION parameter (item 3) on the UDQ keyword, the "Data for operation".			Required
1-1	Format	ZACN	No_Actions x Max No. of Conditions x 13	CHAR	
2-1	Data	Left hand side quantity if (DAY, MONTH or YEAR).			
2-2	Data	Right hand side quantity if (Well or Group).			
2-3	Data	Operator.			
2-4	Data	Well name – left hand quantity, if it is a well quantity.			
2-5	Data	Well name – right hand quantity, if it is a well quantity.			
2-6	Data	Group name – left hand quantity, if it is a group quantity.			
2-7	Data	Group name – right hand quantity, if it is a group quantity.			
	SACN				Required
1-1	Format	SACN	No. of Actions x Max No. Conditions x 16	DOUBLE	
2-1	Data	0 : Undefined			
2-2	Data	0 : Undefined			
2-3	Data	Value of condition: 1 : If Month otherwise zero.			
2-4	Data	0 : Undefined			
2-5	Data	0 : Well or Field data, or 1 : Group data.			
2-6	Data	Value of right hand side.			
2-7	Data	Value of left hand side.			

No.	Keyword Name	RESTART Data – UDQ And ACTIONX Keywords Table F.28 - ACTIONX Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
2-8	Data	Value of right hand side.			
2-9	Data	Value of left hand side.			
2-10	Data	Value of right hand side.			

Table F.28: RESTART Data – ACTIONX Keywords

Example: RESTART Data – Group, Well and Connection Keywords

The following example shows a typical formatted RESTART Data – UDQ – data.

```
'ZUDN      ' 22 'CHAR'
'WUWI3     ' 'WUPR1' ' 'WUPR3' ' 'WUPR4'
'WUPR5     ' 'GUOPR1' ' 'GULPR1'
'GUOPR2    ' 'GULPR2' ' 'GUOPR3' ' 'GULPR3'

'ZUDL      ' 176 'CHAR'
' (GOPR 'L' 'OWER' *0' '.931 *0' '50 *1)
' '1/(WWCT 'OP*' )
' 'SORTA(WU' 'PR1)
' '1/(WWCT
'OPU*' )
' 'SORTA(WU' 'PR4)
'UPPER *0' '.15) * 0' '.899
'ER *0.03' - GOPR 'UPPER *0' '.15) * 0' '.899
' (2500 - 'GOPR LOW' 'ER *0.03' - GOPR 'UPPER *0' '.15) * 0' '.920
' .15) * 0' '.920
' (4500 - 'GOPR LOW' 'ER *0.03' - GOPR 'UPPER *0'
' - GOPR 'UPPER *0' '.15) * 0' '.880
'GOPR LOW' 'ER *0.03' - GOPR 'UPPER *0' '.15) * 0' '.880
' (4500 -

'IUDQ      ' 33 'INTE'
2 -4 1 2 -1 2
2 -1 3 2 -1 4
2 -1 5 2 -4 1
2 -4 2 2 -4 3
2 -4 4 2 -4 5
2 -4 6
```

End of Example

F.7.6 RESTART DATA – AQUIFER DATA KEYWORDS

This set of keywords are used to define the various aquifer arrays written out by OPM Flow. If there are no aquifers in the model then this set of keywords are skipped. If an analytical or numerical model aquifer is present in the model, a complete set of keywords, for a given aquifer type, should be written out. For example, if a numerical model is defined in the model then the IAQN and RAQN keywords should be written to the file.

The structure for this set of keywords is dependent on the aquifer type, for analytical aquifers the format is outlined in Table F.29 and numerical aquifers are characterized in Table F.30.

No.	Keyword Name	RESTART Data – Aquifer Data Keywords Table F.29 - Analytical Aquifer Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	IAAQ	Analytical aquifers integer data array IAAQ(NIAAQZ, MAAQID) where NIAAQZ and MAAQIDR are defined in the INTEHEAD keyword.			Optional
1-1	Format	IAAQ	NIAAQZ x MAAQID	INTE	
2-1	Data	Aquifer connection number.			
2-2	Data	Water property table.			PVTNUM
2-3 to 2-9		Undefined.			
2-10	Data	Analytical aquifer type, set to zero for Fetkovich aquifers and one for CarterTracy aquifers.			
2-11	Data	Type Related 2.			
	SAAQ	Analytical aquifers real data array SAAQ(NSAAQZ, MAAQID) where NSAAQZ and MAAQIDR are defined in the INTEHEAD keyword.			Optional
1-1	Format	SAAQ	NSAAQZ x MAAQID	REAL	
2-1	Data	Total Compressibility.			COMP
2-2	Data	Fetkovich analytical aquifer pore volume.			PORV
		Carter-Tracy aquifer external radius.			RE
2-3	Data	Fetkovich analytical aquifer productivity index.			PI
		Carter-Tracy aquifer permeability.			PERM
2-4	Data	Fetkovich analytical aquifer time constant.			
		Carter-Tracy aquifer porosity.			PORO
2-5	Data	Analytical aquifer pressure.			PRESS
2-6	Data	Analytical aquifer datum depth.			DATUM
2-7	Data	Carter-Tracy aquifer thickness.			DZ
2-8	Data	Carter-Tracy aquifer influence angle.			ANGLE
2-9	Data	Carter-Tracy aquifer mass density of water.			
2-10	Data	Carter-Tracy aquifer water viscosity.			

No.	Keyword Name	RESTART Data – Aquifer Data Keywords Table F.29 - Analytical Aquifer Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	XAAQ	Analytical aquifers double precision data array XAAQ(NXAAQZ, MAAQID) where NXAAQZ and MAAQIDR are defined in the INTEHEAD keyword.			Optional
1-1	Format	XAAQ	NXAAQZ x MAAQID	DOUB	
2-1	Data	Aquifer flow rate (AAQR: N).			
2-2	Data	Dynamic aquifer pressure (AAQP: N).			
2-3	Data	Liquid volume produced from the aquifer into the reservoir (AAQT: N).			
2-4	Data	Total aquifer influx coefficient across all aquifer connections.			
2-5	Data	Reciprocal time constant for Carter-Tracy aquifer.			
2-6	Data	Influx constant "beta" for Carter-Tracy aquifer.			
2-7	Data	Unknown.			
2-8	Data	Unknown.			
2-9	Data	Dimensionless time for Carter-Tracy aquifer (AAQTD: N)			
2-10	Data	Dimensionless pressure for Carter-Tracy aquifer (AAQPD: N)			
	IAQL	Analytical aquifers integer <u>aquifer list</u> data array IAQL(NIAQLX, MXNALI, MXAAQL) where NIAQLX, MXNALI, and MXAAQL are defined in the INTEHEAD keyword.			Optional
1-1	Format	IAQL	NIAQLX x MXNALI x MXAAQL	INTE	
2-1	Data	IAQL(NIAQLX, MXNALI, MXAAQL) array.			
	ZAQL	Analytical aquifers character <u>aquifer list</u> data array ZAQL(NZAQLX, MXNALI) where NZAQLX, and MXNALI are defined in the INTEHEAD keyword.			Optional
1-1	Format	ZAQL	NZAQLX x MXNALI	CHAR	
2-1	Data	ZAQL(NZAQLX, MXNALI) array.			
	ICAQ	Analytical aquifers integer aquifer connection data array MAAQID arrays, each of size ICAQ (NICAQZ, NGCAUS) where NICAQZ, NGCAUS, and MAAQID are defined in the INTEHEAD keyword.			Optional
1-1	Format	ICAQ	NICAQZ x NGCAUS x MAAQID	INTE	
2-1	Data	Reservoir connecting cell in the I-direction.			I
2-2	Data	Reservoir connecting cell in the J-direction.			J
2-3	Data	Reservoir connecting cell in the K-direction.			K
2-4	Data	Connecting cell status, with active equal to one otherwise zero.			
2-5	Data	Connecting "face" of the reservoir cell, where I- = 1, I+ = 2, J- = 3, J+ = 4, K- = 5, and K+ = 6.			AQUFACE

No.	Keyword Name	RESTART Data – Aquifer Data Keywords Table F.29 - Analytical Aquifer Keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	SCAQ	Analytical aquifers real aquifer connection data array MAAQID arrays, each of size SCAQ (NSCAQZ, NGCAUS) where NSCAQZ, NGCAUS, and MAAQID are defined in the INTEHEAD keyword.			Optional
1-1	Format	SCAQ	NICAQZ x NGCAUS x MAAQID	REAL	
2-1	Data	Connection's fraction of total aquifer influx coefficient.			
2-2	Data	Connection's effective face area divided by aquifer's total influx coefficient.			
	ACAQ	Analytical aquifers double precision aquifer connection data array MAAQID arrays, each of size aCAQ (NACAQZ, NGCAUS) where NACAQZ, NGCAUS, and MAAQID are defined in the INTEHEAD keyword.			Optional
1-1	Format	ACAQ	NACAQZ x NGCAUS x MAAQID	DOUB	
2-1	Data	ACAQ(NSCAQZ, NGCAUS, MAAQID) array.			
Notes:					
1) Rows shaded in gray indicate the start of a keyword.					
2) For formatted output all character variables, including the keywords should be enclosed in single quotes, for example the ACAQ keyword should be written out as 'ACAQ'.					

Table F.29: RESTART Data – Analytical Aquifer Data Keywords

And for numerical aquifers the format is outlined in Table F.30.

No.	Keyword Name	RESTART Data – Aquifer Data Keywords Table F.30 - Numerical Aquifer keywords			Status Or Value
		Keyword	No. of Entries	Data Type	
	IAQN	Numerical aquifers integer data array IAQN (NIIAQN, NUMAQN) where NIIAQN and NUMAQN are defined in the INTEHEAD keyword.			Optional
I-1	Format	IAAQ	NIIAQN x NUMAQN	INTE	
2-1	Data	Aquifer identification number.			AQUID
2-2	Data	Aquifer coordinate in the I-direction			I
2-3	Data	Aquifer coordinate in the J-direction			J
2-4	Data	Aquifer coordinate in the K-direction			K
2-5	Data	Aquifer Water Property Table.			PVTNUM
2-6	Data	Aquifer SATNUM table.			SATNUM
	RAQN	Numerical aquifers double precision data array RAQN (NIRAQN, NUMAQN) where NIIAQN and NUMAQN are defined in the INTEHEAD keyword.			Optional
I-1	Format	RAAQ	NIRAQN x NUMAQN	REAL	
2-1	Data	Aquifer inflow area.			AREA
2-2	Data	Aquifer length.			LENGTH
2-3	Data	Aquifer porosity			PORO
2-4	Data	Aquifer permeability.			PERM
2-5	Data	Aquifer datum depth.			DATUM
2-6	Data	Aquifer pressure.			PRESS
2-7	Data	Unknown			
2-8	Data	Unknown			
2-9	Data	Unknown			
2-10	Data	Total aquifer pore-volume.			
2-11	Data	Aquifer inflow rate (ANQR: N).			
2-12	Data	Total liquid volume produced from aquifer (AQNT: N).			
2-13	Data	Dynamic aquifer pressure (ANQP: N).			
Notes:					
1) Rows shaded in gray indicate the start of a keyword.					
2) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the RAQN keyword should be written out as 'RAQN'.					

Table F.30: RESTART Data – Numerical Aquifer Data Keywords

Example: RESTART Data – Aquifer Data Keywords

The following example shows a typical formatted RESTART Data – Aquifer Data keyword data set for an analytical aquifer.

```

'IAAQ      '      15 'INTE'
      3      1      0      0      0      0
      0      0      0      1      1      1
      0      0      0
'SAAQ      '      24 'REAL'
0.29999999E-04 0.24000000E+04 0.20000000E+02 0.10000000E+00
0.49619409E+04 0.54000000E+04 0.14000000E+03 0.13333334E-01
0.63151001E+02 0.31000000E+00 0.00000000E+00 0.43846342E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
'XAAQ      '      8 'DOUB'
0.63857101611063D+03 0.49619408179004D+04 0.26831697328212D+05
0.150000000000000D+06 0.23624684055200D-01 0.36097145428688D+02
0.000000000000000D+00 0.000000000000000D+00
'ICAQNUM   '      1 'INTE'
      1
'ICAQ      '      15 'INTE'
      5      1      1      13      2      5
      1      2      14      2      5      1
      3      15      2
'SCAQNUM   '      1 'INTE'
      1
'SCAQ      '      6 'REAL'
0.33333334E+00 0.33333334E+00 0.33333334E+00 0.33333334E+00
0.33333334E+00 0.33333334E+00

```

End of Example

F.7.7 RESTART DATA – HIDDEN KEYWORD

This keyword²³⁹ defines solution arrays that have been exported by OPM Flow that should not be processed by post-processing software.

The structure for this type of keyword is defined in Table F.31.

No.	Keyword Name	RESTART Data – Hidden Keyword			Status Or Value
		Table F.31			
		Keyword	No. of Entries	Data Type	
	HIDDEN	The keyword defines the solution arrays that have not been exported by the simulator, where N is the number of solution variable names that have been “hidden”, each enclosed in single quotes and of eight characters in length.			Required
1-1	Format	HIDDEN	N	CHAR	
2-1	Data	Character list of solution arrays to be hidden from post processing software.			

Notes:

1) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the HIDDEN keyword should be written out as 'HIDDEN '.

Table F.31: RESTART Data – Hidden Keyword

Example: RESTART Data – Hidden Keyword

The following example shows a typical formatted hidden data set, showing 51 Solution arrays that should be hidden.

```
'HIDDEN ' 51 'CHAR'
'ISTHGGI' 'SWMAX' 'SWHY1' 'SWHY2' 'SWHY3' 'ISTHW' 'SOMAX'
'SGHY1' 'SGHY2' 'SGHY3' 'ISTHG' 'SGMAX' 'SHMAX' 'WATQUIES'
'GASQUIES' 'PRESROCC' 'SPDOIL' 'SPDWATER' 'SPDGAS' 'SWINIT' 'SGINIT'
'POLYMAX' 'EIP0' 'EIP' 'TINIT' 'IOCN' 'SGMIN' 'SGSTRD'
'SWSTRD' 'RISTRD' 'SGSTRI' 'SWSTRI' 'RISTR' 'SGTRPD' 'SGSTRWD'
'SGSTRWI' 'SWMIN' 'SGSTRWS' 'RPTHMW' 'PPCW' 'GRADWELL' 'GRADCONN'
'SWHY4' 'SGHY4' 'GRADGRUP' 'GRADRESV' 'GRADFIP' 'GRADSOL' 'GRADEXP'
'IAQN' 'RAQN'
```

End of Example

²³⁹ The RESTART Data – Hidden keyword format is used both for global and LGR grids.

F.7.8 RESTART DATA - SOLUTION DATA KEYWORD

The solution data keywords²⁴⁰ define the solution for each active cell for both global and LGR grids. This is then followed by a series of global data for a global entry or LGR data for a LGR entry.

The structure for this type of keyword is defined in Table F.32 for standard solution data and Table F.33 for tracers. A list of all solution names is tabulated in Table F.34.

No.	Keyword Name	RESTART Data - Solution Data Keyword Table F.32			Status Or Value
		Keyword	No. of Entries	Data Type	
	STARTSOL	This keyword marks the start of the solution variable section for both global and local grids. Note that there is no data associated with this keyword.			Required
1-1	Format	STARTSOL	0	MESG	
	LGRNAMES	This keyword defines a list of LGR names for the reporting time step, where N is the number of LGR names.			
1-1	Format	LGRNAMES	N	CHAR	
2-1	Data	A character list of LGR names with each name enclosed in single quotes and each having a length of eight characters.			
	SOLUTION	The SOLUTION keyword defines the start of a SOLUTION array data set, where SOLUTION is the name of the array being written out, as outlined in Table F.34. For example, PRESSURE, SWAT, SGAS, RS, RV etc. The SOLUTION keyword (items 1-1 and 2-1) is repeated for each SOLUTION array being written out. SOLUTION arrays can be in any order and only the active cells are written out (NACTIV).			Required
1-1	Format	SOLUTION	NACTIV	REAL	
2-1	Data	SOLUTION data set.			
	ENDSOL	This keyword marks the end of the solution variable section for both global and local grids. Note that there is no data associated with this keyword.			Required
1-1	Format	ENDSOL	0	MESG	
Notes: <ol style="list-style-type: none"> 1) Rows shaded in gray indicate the start of a keyword. 2) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the SOLUTION array for PRESSURE should be written out as 'PRESSURE'. 					

Table F.32: RESTART Data - Solution Data keyword

For SOLUTION tracer concentration arrays the ZTRACER keyword must precede the SOLUTION tracer data array – see Table F.33 for a description of ZTRACER keyword.

²⁴⁰ The RESTART Data - Solution Data keywords are used both for global and LGR grids SOLUTION arrays. The LGR data is preceded by a series of LGR head keywords and terminated by an LGR termination keyword.

No.	Keyword Name	RESTART Data – Solution Data Keyword For Tracer Concentration Name			Status Or Value
		Table F.33			
		Keyword	No. of Entries	Data Type	
	ZTRACER	This keyword marks the start of the solution variable section for both global and local grids. The TRACER in the Data field is the name of the tracer concentration being processed.			Optional
1-1	Format	ZTRACER	2	CHAR	
2-1	Data	TRACER	‘ ‘		
	TRACER	TRACER is the name of the tracer concentration that is contained on the next keyword. Tracer arrays can be in any order and only the active cells are written out (NACTIV).			
1-1	Format	TRACER	NACTIV	REAL	
2-1	Data	Tracer solution data array.			
Notes:					
1) The ZTRACER and the TRACER keywords are repeated for each tracer.					
2) For formatted output all character variables, including the keyword, should be enclosed in single quotes, including the tracer name.					

Table F.33: RESTART Data – Solution Data Keyword for Tracer Concentration Name

The SOLUTION keywords are listed in Table F.34.

Model Type		Model Option	Solution Data Keywords	Solution Variable Description	OPM Output Status
Black-Oil	Compositional				
		STANDARD	IOVERBO	Reciprocal of oil formation volume factor.	
		STANDARD	IOVERBW	Reciprocal of water formation volume factor.	
		STANDARD	CNV_DGAS	Worst cells depending on the gas saturation increment / Rv increment / Rs increment.	
		STANDARD	CNV_DPRE	Worst cells depending on the pressure increment.	
		STANDARD	CNV_DWAT	Worst cells depending on the water saturation increment.	
		STANDARD	CNV_GAS	Worst cells depending on the residual of gas equation.	
		STANDARD	CNV_OIL	Worst cells depending on the residual of the oil equation.	
		STANDARD	CNV_WAT	Worst cells depending on the residual of the water equation.	
		STANDARD	CONV_NEW	Number of Newtons required by each cell in order to satisfy the solution change convergence	

Model Type		Model Option	Solution Data Keywords	Solution Variable Description	OPM Output Status
Black-Oil	Compositional				
				criteria at the last time step.	
		STANDARD	CONV_PRU	Worst cells depending on the pressure update.	
		STANDARD	CONV_VBR	Worst cells depending on the volume balance residual.	
		STANDARD	DRAINAGE	Drainage region numbers.	
		STANDARD	DRAINMIN	Drainage sink indicator.	
		STANDARD	FIPGAS	Gas fluid-in-place.	
		STANDARD	FIPOIL	Oil fluid-in-place.	
		STANDARD	FIPWAT	Water fluid-in-place.	
		STANDARD	GAS-DEN	Gas density.	
		STANDARD	GAS-POTN	Gas potential.	
		STANDARD	GAS-PRES	Gas phase pressure.	
		STANDARD	GAS-VISC	Gas viscosity.	
		STANDARD	IOVERBG	Reciprocal of gas formation volume factor.	
		STANDARD	ISTHG	Gas capillary pressure state.	
		STANDARD	ISTHW	Water capillary pressure state.	
		STANDARD	OIL-DEN	Oil density.	
		STANDARD	OIL-POTN	Oil potential.	
		STANDARD	OIL-VISC	Oil viscosity.	
		STANDARD	PBUB	Bubble point pressure.	
		STANDARD	PCOG	Oil-gas capillary pressure.	
		STANDARD	PCOW	Oil-water capillary pressure.	
		STANDARD	PDEW	Dew point pressure.	
		STANDARD	PORV	Pore volume at surface conditions.	
		STANDARD	PRESSURE	Pressure.	
		STANDARD	RFIPGAS	Gas fluid-in-place at reservoir conditions.	
		STANDARD	RFIPOIL	Oil fluid-in-place at reservoir conditions.	
		STANDARD	RFIPWAT	Water fluid-in-place at reservoir conditions.	
		STANDARD	RPORV	Pore volume at reservoir conditions.	
		STANDARD	RS	Gas-oil ratio.	
		STANDARD	RSSAT	Saturated gas-oil ratio.	

Model Type		Model Option	Solution Data Keywords	Solution Variable Description	OPM Output Status
Black-Oil	Compositional				
		STANDARD	RV	Oil-gas ratio.	
		STANDARD	RVSAT	Saturated oil-gas ratio.	
		STANDARD	SFIPGAS	Gas fluid-in-place at surface/separator conditions.	
		STANDARD	SFIPOIL	Oil fluid-in-place at surface/separator conditions.	
		STANDARD	SFIPWAT	Water fluid-in-place at surface/separator conditions.	
		STANDARD	SGAS	Gas saturation.	
		STANDARD	SGMAX	Maximum gas saturation.	
		STANDARD	SGMIN	Minimum gas saturation.	
		STANDARD	SOIL	Oil saturation.	
		STANDARD	SOMAX	Maximum oil saturation.	
		STANDARD	SSOL	Solvent saturation.	
		STANDARD	STATES	Gas-oil state indicator.	
		STANDARD	SWAT	Water saturation.	
		STANDARD	SWMAX	Maximum water saturation.	
		STANDARD	SWMIN	Minimum water saturation.	
		STANDARD	WAT-DEN	Water density.	
		STANDARD	WAT-POTN	Water potential.	
		STANDARD	WAT-PRES	Water phase pressure.	
		STANDARD	WAT-VISC	Water viscosity.	
		STANDARD	XMF	Liquid mole fractions.	
		STANDARD	YMF	Vapor mole fractions.	
		STANDARD	ZMF	Total mole fractions.	
		ALKALINE	ALKADS	Alkaline adsorption.	
		ALKALINE	ALKALINE	Alkaline concentration.	
		ALKALINE	ALKMAX	Alkaline maximum historic concentration.	
		ALKALINE	PADMAX	Alkaline polymer maximum historic adsorption.	
		ALKALINE	PLADALK	Alkaline polymer adsorption multipliers.	
		ALKALINE	SFADALK	Alkaline surfactant adsorption multipliers.	
		ALKALINE	STMALK	Alkaline water/oil surface tension multipliers.	

Model Type		Model Option	Solution Data Keywords	Solution Variable Description	OPM Output Status
Black-Oil	Compositional				
		API	SDENO	Oil surface densities.	
		API	OILAPI	Oil API values.	
		AQUIFER	HYDH	Hydraulic head aquifer.	
		AQUIFER	HYDHFH	Fresh water hydraulic head aquifer.	
		BRINE	CNV_DSAL	Worst cells depending on the brine concentration increment.	
		BRINE	CNV_SAL	Worst cells depending on the residual of the brine equation (BRINEoption when used with polymer).	
		BRINE	ESALSUR	Effective salinity for surfactant.	
		BRINE	SALT	Brine concentration.	
		COAL	COALGAS	Coal gas concentration for coal bed methane option.	
		COAL	COALSOLV	Solvent concentration for coal bed methane option.	
		COAL	GASSATC	Initial coal gas saturated content for coal bed methane option.	
		COAL	MLANG	Langmuir scaling factors for coal bed methane option.	
		COAL	MLANGSLV	Langmuir scaling factors for solvent in coal bed methane option.	
		ENDSCALE	GASKR	Gas relative permeability.	
		ENDSCALE	OILKR	Oil relative permeability.	
		ENDSCALE	WATKR	Water relative permeability.	
		EXCAVATE	EXCAVNUM	Excavation status identifier.	
		EXCAVATE	TRANEXX/Y/Z	Transmissibilities in excavation runs.	
		FOAM	FOAM	Foam concentration.	
		FOAM	FOAM_HL	Foam half-life.	
		FOAM	FOAMADS	Foam adsorption.	
		FOAM	FOAMCNM	Foam capillary numbers.	
		FOAM	FOAMDCY	Foam decay.	
		FOAM	FOAMMAX	Foam maximum historic concentration.	
		FOAM	FOAMMOB	Foam mobility multiplier.	
		GIMODEL	CNV_DGGI	Worst cells depending on the dry injection gas parameter (Gi) increment.	

Model Type		Model Option	Solution Data Keywords	Solution Variable Description	OPM Output Status
Black-Oil	Compositional				
		GIMODEL	CNV_GGI	Worst cells depending on the residual of the Gi Pseudo-Compositional model.	
		GIMODEL	GGI	GI injected gas ratio.	
		GIMODEL	RFIPGGI	Dry injection gas in place at reservoir conditions.	
		GIMODEL	SFIPGGI	Dry injection gas in place at surface conditions.	
		POLYMER	CABINnnn	This is for use with the PLYTRRFA keyword only.	
		POLYMER	CNV_DPLY	Worst cells depending on the polymer concentration increment.	
		POLYMER	CNV_PLY	Worst cells depending on the residual of the polymer equation.	
		POLYMER	PADS	Adsorbed polymer concentrations.	
		POLYMER	POLYMAX	Maximum historic polymer concentration.	
		POLYMER	POLYMER	Polymer concentrations.	
		POLYMER	SFIPPLY,RFIPPLY	Polymer-in-place.	
		POLYMER	SFIPSAL,RFIPSAL	Salt-in-place (BRINE option when used with polymer).	
		ROCKCOMP	PRESROCC	Rock pressure values used for rock compaction model.	
		SOLVENT	CNV_DSOL	Worst cells depending on the solvent concentration increment.	
		SOLVENT	CNV_SOL	Worst cells depending on the residual of the solvent equation.	
		SOLVENT	RFIPSOL	Solvent-in-place at reservoir conditions.	
		SOLVENT	SFIPSOL	Solvent-in-place at surface conditions.	
		SURFACT	CATROCK	Divalent cation concentration associated with rock.	
		SURFACT	CATSURF	Divalent cation concentration associated with surfactant.	
		SURFACT	SURFACT	Surface interactions.	
		SURFACT	SURFADS	Adsorbed surfactant concentrations.	
		SURFACT	SURFCNM	Surfactant capillary numbers.	
		SURFACT	SURFMAX	Maximum surfactant concentrations.	
		SURFACT	SURFST	Surface tension in surfactant runs.	
		TEMP	TEMP	Temperature.	

Model Type		Model Option	Solution Data Keywords	Solution Variable Description	OPM Output Status
Black-Oil	Compositional				
OPM		THERMAL	TEMP	Temperature.	
		VE	EOGC	Maximum oil-gas contact.	
		VE	EOWC	Minimum oil-water contact.	
		VE	GWC	Gas-water contact.	
		VE	OGC	Oil-gas contact.	
		VE	OWC	Oil-water contact.	
		VE	POT_CORR	Initial contact corrected potential.	

Notes:

- 1) The Model Type columns indicate if the solution keyword applies to a black-oil model, a compositional model or both. Since OPM Flow is a black-oil model the compositional keywords are not valid, as shown by the orange cells under the Compositional column.
- 2) The Model Option column states the model option the solution keyword is associated with and a green cell in the Model Type column indicates that OPM Flow has this option.
- 3) Finally, the OPM Output Status column indicates if the current version of OPM Flow writes out the data associated with the solution keyword, with a green cell indicating it does and orange it does not.

Table F.34: RESTART Data - Solution Data Keywords

Example: RESTART Data – Solution Data Keyword

The following example shows a typical formatted global grid data set for this keyword set.

```
'STARTSOL ' 0 'MESS '
'PRESSURE ' 44431 'REAL '
0.26889725E+03 0.26838983E+03 0.26826810E+03 0.26820352E+03
0.26814493E+03 0.26809378E+03 0.26807767E+03 0.26806363E+03
0.26802625E+03 0.26798474E+03 0.26795001E+03 0.26791434E+03
0.26787915E+03 0.26783920E+03 0.26777118E+03 0.26769208E+03
.....
'SWAT ' 44431 'REAL '
0.10500000E+00 0.10500000E+00 0.10500000E+00 0.10500000E+00
0.10500000E+00 0.10500000E+00 0.10500000E+00 0.14000000E+00
0.14000000E+00 0.14500000E+00 0.14500000E+00 0.14500000E+00
0.14500000E+00 0.14500000E+00 0.16000000E+00 0.16000000E+00
.....
'SGAS ' 44431 'REAL '
0.00000000E+00 0.89499998E+00 0.89499998E+00 0.89499998E+00
0.89499998E+00 0.89499998E+00 0.89499998E+00 0.86000001E+00
0.86000001E+00 0.85500002E+00 0.85500002E+00 0.85500002E+00
.....
'RS ' 44431 'REAL '
0.11697504E+03 0.12030303E+03 0.12023456E+03 0.12019825E+03
0.12016528E+03 0.12013654E+03 0.12012746E+03 0.12011956E+03
0.12009855E+03 0.12007520E+03 0.12005566E+03 0.12003561E+03
0.12001582E+03 0.11999335E+03 0.11995509E+03 0.11991060E+03
0.11987761E+03 0.11985194E+03 0.11983020E+03 0.11981972E+03
0.11980798E+03 0.11977385E+03 0.11970672E+03 0.11963727E+03
.....
'RV ' 44431 'REAL '
0.57879315E-04 0.57552861E-04 0.57483696E-04 0.57447018E-04
0.57413723E-04 0.57384681E-04 0.57375513E-04 0.57367535E-04
0.57346311E-04 0.57322733E-04 0.57302990E-04 0.57282738E-04
0.57262747E-04 0.57240050E-04 0.57201407E-04 0.57156467E-04
0.57123143E-04 0.57097215E-04 0.57075260E-04 0.57064670E-04
0.57052810E-04 0.57018340E-04 0.56950528E-04 0.56880377E-04
.....
'TRFIELD ' 28 'DOUB '
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
0.00000000000000D+00 0.00000000000000D+00 0.00000000000000D+00
.....
'ZTRACER ' 2 'CHAR '
'SEAF ' ' '
'SEAF ' 44431 'REAL '
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
.....
```

End of Example

F.7.9 RESTART DATA - LGR GRID HEADER KEYWORDS

This set of keywords define an LGR's properties, LGR Name for example, and always proceeds an LGR data set for a given LGR; that is the keywords are repeated for each LGR data set in the model and each time step. Note that a given LGR data set is terminated by the ENDLGR keyword and the SEQNUM keyword terminates the input for a time step, which switches the input back to the global grid properties. The keyword description is outlined in Table F.35.

Note that currently OPM Flow does not support LGR grids and therefore this set of keywords cannot be used by OPM Flow.

No.	Keyword Name	RESTART Data - LGR Grid Header Keywords Table F.35 (Repeated For Each LGR In The Model)			Status Or Value
		Keyword	No. Of Entries	Data Type	
	LGR	LGR grid header keyword that defines the name of the LGR.			Always Required
1-1	Keyword	LGR	1	CHAR	
2-1	Data	Name of the LGR.			
	LGRHEAD1	LGR that defines the integer variables for this time step.			Always Required
1-1	Format	LGRHEAD1	45	INTE	
2-1 to 2-45	Data	Undefined.			
	LGRHEADQ	LGR grid keyword that defines the logical variables (T for true and F for false) for this time step.			Always Required
1-1	Format	LGRHEADQ	5	LOGI	
2-1 to 2-5	Data	Undefined.			
	LGRHEADD	LGR grid keyword that defines the double precision REAL variables for this time step.			Always Required
1-1	Format	LGRHEADD	5	DOUB	5
2-1 to 2-5	Data	Undefined.			
	ENDLGR	The ENDLGR keyword marks the end of an LGR section for a given LGR.			Always Required
1-1	Format	ENDLGR	1	MESG	
	Data	LGR number.			

No.	Keyword Name	RESTART Data - LGR Grid Header Keywords			Status Or Value
		Table F.35			
		(Repeated For Each LGR In The Model)			
		Keyword	No. Of Entries	Data Type	

Notes:

1)

Rows shaded in gray indicate the start of a keyword.

2)

Cells colored orange in the No. column indicate that this item is not supported by OPM Flow and those colored red are either “Not Used” or “Undefined”.

3)

For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the LGR keyword should be written out as ‘LGR’.

Table F.35: RESTART Data - LGR Grid Header Keywords

This keyword type is repeated for each LGR in the model with the last LGR data set terminated by the LGSGONE keyword to mark the end of the LGR input.

Note

The LGR, LGRHEAD, LGRHEADQ and LGRHEADD always proceed LGR data sets and the ENDLGR keyword terminates the end of a data section of LGR data.

Example: RESTART Data - LGR Grid Header Keywords

The following example shows a typical formatted LGR grid header data set for a single LGR grid named LGR-1.

```

'LGR'          1 'CHAR'
'LGR-1'
'LGRHEAD'      45 'INTE'
      1      100      -2345      -2345      -2345      -2345
      -2345      -2345      -2345      -2345      -2345      -2345
      -2345      -2345      -2345      -2345      -2345      -2345
      -2345      -2345      -2345      -2345      -2345      -2345
      -2345      -2345      -2345      -2345      -2345      -2345
      -2345      -2345      -2345      -2345      -2345      -2345
      -2345      -2345      -2345      -2345      -2345      -2345
      -2345      -2345      -2345      -2345
'LGRHEADQ'     5 'LOGI'
F F F F F
'LGRHEADD'     5 'DOUB'
0.000000000000000D+00 -0.10000000200409D+21 -0.10000000200409D+21
-0.10000000200409D+21 -0.10000000200409D+21

```

End of Example

F.7.10 RESTART DATA - LGR SOLUTION DATA KEYWORDS

The file structure for this series of keywords is similar to the global grid RESTART Data keywords described previously. However, additional data that defines the LGR properties (LGR Name for example) are included in this keyword definition and the LGR keyword is repeated for each LGR in the model. The keyword description is outlined in Table F.36.

Note that currently OPM Flow does not support LGR grids and therefore this keyword format cannot be used by OPM Flow.

No.	Keyword Name	RESTART Data - LGR Grid Property Data Keyword Table F.36 (Repeated For Each LGR In The Model)	Status Or Value
	LGR	LGR Grid Header keyword. See section F.7.9 RESTART Data - LGR Grid Header Keywords.	Required
	LGRHEAD1		
	LGRHEADQ		
	LGRHEADD		
	INTEHEAD	Header keyword. See section F.7.3 RESTART Data - Header Keywords.	
	LOGIHEAD		
	DOUBHEAD		
IGRP SGRP etc.	Group, well, and connection data status keywords for this reporting time step. See section F.7.4 RESTART Data – Group, Well and Connection Data Keywords.	Required	
IAAQ SAAQ ect.	Aquifer definition arrays, only applicable if an aquifer is connected to an LGR. See section F.7.6 RESTART Data – Aquifer Data Keywords.	Optional	
HIDDEN	HIDDEN solution data, that is a list of solution arrays NOT to be read by post processing software. See section F.7.7 RESTART Data – Hidden Keyword.	Required	
SOLUTION	LGR SOLUTION array section (PRESSURE, SGAS, SOILS, WAT, etc.). See section F.7.8 RESTART Data - Solution Data keyword.	Required	
ENDSOL	LGR SOLUTION section termination keyword. See section F.7.8 RESTART Data - Solution Data keyword.	Required	
ENDLGR	LGR grid header section termination keywords. See section F.7.9 RESTART Data - LGR Grid Header Keywords.	Required	

Notes:

- 1) Rows shaded in gray indicate the start of a keyword.
- 2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow.
- 3) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the LGR keyword should be written out as 'LGR'.

Table F.36: RESTART Data – LGR Solution Data Keywords

This set of keywords are repeated for each LGR in the model with the last LGR data set terminated by the ENDSOL and ENDLGR keywords to mark the end of the LGR input - see the example.

Example: RESTART Data - LGR Solution Data Keywords

The following example shows a typical formatted data set with two LGR grids named LGR-1 and LGR-2.

```

'LGR      '      1 'CHAR'
'LGR-1    '
'LGRHEAD1'      45 'INTE'
      1      100    -2345      -2345      -2345      -2345
.....
      -2345      -2345      -2345
'LGRHEADQ'      5 'LOGI'
  F F F F F
'LGRHEADD'      5 'DOUB'
  0.00000000000000D+00  -0.10000000200409D+21  -0.10000000200409D+21
 -0.10000000200409D+21  -0.10000000200409D+21
'INTEHEAD'      249 'INTE'
.....
'LOGIHEAD'      79 'LOGI'
.....
'DOUBHEAD'      185 'DOUB'
.....
'IGRP      '      358 'INTE'
      0      0      0      0      0      0
.....
      0      0      0      0
'SGRP      '      186 'REAL'
  0.00000000E+00  0.00000000E+00  0.00000000E+00  0.00000000E+00
.....
  0.00000000E+00  0.10000000E+01
'XGRP      '      348 'DOUB'
  0.00000000000000D+00  0.00000000000000D+00  0.00000000000000D+00
.....
  0.00000000000000D+00  0.00000000000000D+00  0.00000000000000D+00
'ZGRP      '      10 'CHAR'
'      '      '      '      '      '      '      '      '      '      '
'      '      '      '      '      '      '      '      '      '      '
'ICOT      '      0 'INTE'
'XCOT      '      0 'DOUB'
'IWET      '      0 'INTE'
'XWET      '      0 'DOUB'
'IGRT      '      18 'INTE'
.....
'XGRT      '      180 'DOUB'
  0.00000000000000D+00  0.00000000000000D+00  0.00000000000000D+00
.....
  0.10000000200409D+21  0.10000000200409D+21  0.10000000200409D+21
'DLYTIM      '      30 'DOUB'
  0.00000000000000D+00  0.00000000000000D+00  0.00000000000000D+00
.....
  0.00000000000000D+00  0.00000000000000D+00  0.00000000000000D+00
'HIDDEN      '      51 'CHAR'
'ISTHGGI      ' 'SWMAX'      'SWHY1'      'SWHY2'      'SWHY3'      'ISTHW'      'SOMAX'
.....
'IAQN      ' 'RAQN'      '
'STARTSOL      '      0 'MESS'
'PRESSURE      '      9 'REAL'
  0.26823886E+03  0.26824997E+03  0.26826108E+03  0.26822879E+03
.....
'SWAT      '      9 'REAL'
  0.10500000E+00  0.10500000E+00  0.10500000E+00  0.10500000E+00
.....
'SGAS      '      9 'REAL'
  0.89499998E+00  0.89499998E+00  0.89499998E+00  0.89499998E+00
.....

```

'RS'	9	'REAL'	0.12021812E+03	0.12022437E+03	0.12023062E+03	0.12021246E+03
'RV'	9	'REAL'	0.57467099E-04	0.57473411E-04	0.57479720E-04	0.57461380E-04
'ENDSOL'	0	'MESS'				
'ENDLGR'	1	'INTE'				
'LGR'	1	'CHAR'				
'LGR-2'						
'LGRHEAD1'	45	'INTE'				
'LGRHEADQ'	5	'LOGI'				
'LGRHEADD'	5	'DOUB'				
'INTEHEAD'	249	'INTE'				
'LOGIHEAD'	79	'LOGI'				
'DOUBHEAD'	185	'DOUB'				
'IGRP'	358	'INTE'				
'SGRP'	186	'REAL'				
'XGRP'	348	'DOUB'				
'ZGRP'	10	'CHAR'				
'ICOT'	0	'INTE'				
'XCOT'	0	'DOUB'				
'IWET'	0	'INTE'				
'XWET'	0	'DOUB'				
'IGRT'	18	'INTE'				
'XGRT'	180	'DOUB'				
'DLTIM'	30	'DOUB'				
'HIDDEN'	51	'CHAR'				
'STARTSOL'	0	'MESS'				
'PRESSURE'	9	'REAL'				
'SWAT'	9	'REAL'				
'SGAS'	9	'REAL'				
'RS'	9	'REAL'				
'RV'	9	'REAL'				
'ENDSOL'	0	'MESS'				
'ENDLGR'	1	'INTE'				
'SEQNUM'	1	'INTE'				

End of Example

F.8 RFT FILES – PRESSURE, SATURATION AND PRODUCTION LOG DATA

The Repeat Formation Tester (“RFT”) file contains a well’s depth pressure profile at the time the data is requested using the WRFT or WRFTPLT keywords in the SCHEDULE section. The data is meant to be used to compare the simulator’s pressure profile with the field measured data collected from one of the open hole wire line logging tools: Formation Interval Tester (“FIT”), Repeat Formation Tester (“RFT”) tool, Modular Dynamics Tester (“MDT”), or similar tool. The keywords also export the fluid saturations for the well connections at the same time.

In addition to the pressure and saturation data, the WRFTPLT keyword can also active the writing out of each well connection’s fluid rates, connection factors and KH data, etc., collectively known as the Production Logging Tool (“PLT”) data. The PLT data is used to compare with measured data from wire line production logging tools. Currently, output of the PLT data is not supported by OPM Flow.

F.8.1 RFT DATA FILE SPECIFICATION

The file structure for the RFT Data File consists of various keywords: a Time and Date keyword, a Well and Connection keyword followed by the requested optional keywords of RFT, PLT, Multi-Segment Well, and River keywords, that are written out depending on the data requested. A brief description of the keywords is given in Table F.37. A complete RFT data set is written to file for each well and time step as requested on the WRFT and WRFTPLT keywords.

Reference Section	Keyword Name	Keyword Type	Description
F.8.2	TIME	Time and Date Date	This data set contains the simulated time and date information that the date was written out.
	DATE		
F.8.3	WELLETC	Well and Connection Data	The Well and Connection keywords outlines the type and units being written out, the type of well and the well connections at the simulated time the data is written out to the RFT file.
	CONIPOS		
	CONJPOS		
	CONKPOS		
	HOSTGRID		
F.8.4	DEPTH	RFT Solution Data	RFT keyword data consists of the pressure and saturations for each declared connection in the well at the simulated time the data is written out to file.
	PRESSURE		
	SWAT		
	SGAS		
	CPLY		
	CPLAD		
	CBRI		
F.8.5		PLT Solution Data	PLT series of keywords contain the production logging data which consists of the mid-point depth of each connection, the tubing length for the connection from the bottom-hole reference depth, the pressures and fluid rates for the connections. In addition, this data also includes the well pressures, fluid rates, connection transmissibility and KH vales, for the given simulated time. Currently this data set is not supported.

Reference Section	Keyword Name	Keyword Type	Description
F8.6		Multi-Segment Well Data	The Multi-Segment Well data set consists of pressure and flow rate data for segments and branches, currently this data set is not supported.
F8.7		River Data	Data pertaining to the Rivers option, this option is not supported by OPM Flow.

Notes:

- 1) Reference Section cells colored orange indicate that this item is not supported by OPM Flow.

Table F.37: RFT Data File Format

F.8.2 RFT DATA FILE – TIME AND DATE KEYWORDS

The time and date keywords define the start of an RFT data set and declares the time and date for the subsequent property data written to file. The structure for these two keywords is summarized in Table F.38.

No.	Keyword Name	RFT Data File – Time And Date Keywords Table F.38			Status Or Value
		Keyword	No. of Entries	Data Type	
	TIME	This keyword marks the start of of an RFT file data set.			Required
1-1	Format	TIME	1	REAL	
2-1	Data	Simulation time the data is being written to file.			
	DATE	Three integer values representing the date of the data being written out.			Required
1-1	Format	DATE	3	INTE	
2-1	Data	Calendar day and should range between one and 31.			DAY
2-2	Data	Calendar month and should range between one and 12.			MONTH
2-3	Data	Calendar year in four digits, that is 2020.			YEAR

Notes:

- 1) Rows shaded in gray indicate the start of a keyword.
- 2) For formatted output all character variables, including the keyword should be enclosed in single quotes, for example the TIME should be written out as 'TIME'.

Table F.38: RFT Data File – Time and Date Keywords

The DATE keyword is immediate followed by the well and connection keywords.

F.8.3 RFT DATA FILE – WELL AND CONNECTION DATA KEYWORD

The well and connection data set of keywords specify the well and the well connection data as well as the system of units for the pressure and flow data being written to the RFT file. The structure for this set of keywords is outlined in Table F.39 and consists of WELLETC, CONIPOS, CONJPOS, CONKPOS and HOSTGRID keywords.

No.	Keyword Name	RFT Data File – Well And Connection Data Keyword Table F.39			Status Or Value
		Keyword	No. of Entries	Data Type	
	WELLETC	This keyword marks the start of the well and connection data set and comprises of 16 character variables all enclose in single quotes.			Required
1-1	Format	WELLETC	16	CHAR	
2-1	Data	Time units.			
2-2	Data	Well name.			
2-3	Data	Local Grid Refinement (“LGR”) name or left blank if the well is not in an LGR. LGRs are not currently supported by OPM Flow.			Blank
2-4	Data	Depth units.			
2-5	Data	Pressure units.			
2-6	Data	Type of data being written out in subsequent keywords and should be set to R for RFT data, P for PLT data, or S for Segment data. The Segment data option is not currently supported in OPM Flow.			
2-7	Data	Well type data set to STANDARD for a standard well, FRICTION for a wellbore friction well, and MULTSEG for a multi-segment well. Only the STANDARD well option is currently supported by OPM Flow.			
2-8	Data	Liquid flow rate units.			
2-9	Data	Gas flow rate units.			
2-10	Data	Local volumetric flow rate units.			
2-11	Data	Flow velocity units.			
2-12	Data	Not used and should be a blank character string.			Blank
2-13	Data	Liquid and gas viscosity units.			
2-14	Data	Polymer and Brine concentration units.			
2-15	Data	Polymer and Brine flow rate units.			
2-16	Data	Adsorbed Polymer concentration units.			
	CONIPOS	This keyword defines the grid index in the x direction (I direction) for all NCON connections in the well associated with the RFT data set.			Required
1-1	Format	CONIPOS	NCON	INTE	
2-1	Data	Grid index in the I direction for each connection.			
	CONJPOS	This keyword defines the grid index in the y direction (J direction) for all NCON connections in the well associated with the RFT data set.			Required
1-1	Format	CONJPOS	NCON	INTE	

No.	Keyword Name	RFT Data File – Well And Connection Data Keyword			Status Or Value
		Table F.39			
		Keyword	No. of Entries	Data Type	
2-1	Data	Grid index in the J direction for each connection.			
	CONKPOS	This keyword defines the grid index in the z direction (K direction) for all NCON connections in the well associated with the RFT data set.			Required
1-1	Format	CONKPOS	NCON	INTE	
2-1	Data	Grid index in the K direction for each connection.			
	HOSTGRID	Defines the LGR name for each of the NCON connections. LGR's have not been implemented in OPM Flow and therefore this keyword should contain NCON blank character strings.			Blank
1-1	Format	HOSTGRID	NCON	CHAR	Blank
2-1	Data	Connections host LGR grid name.			
Notes:					
1) Rows shaded in gray indicate the start of a keyword.					
2) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the WELLETC should be written out as 'WELLETC'.					

Table F.39: RFT Data File – Well and Connection Data Keyword

This series of keywords are immediate followed by the RFT solution keywords: DEPTH, PRESSURE, SWAT, and SGAS.

F.8.4 RFT DATA FILE – RFT SOLUTION DATA KEYWORD

The RFT solution keywords specify the actual solution data (pressure, saturation etc.) for each connection in the well, as described in Table F.40.

No.	Keyword Name	RESTART Data - Solution Data Keyword Table F.40			Status Or Value
		Keyword	No. of Entries	Data Type	
1-1	DEPTH	Connection grid block depth.			Required
1-1	Format	DEPTH	NCON	REAL	
2-1	Data	Depth data for each connection.			
	PRESSURE	Connection grid block pressure at the requested time.			Required
1-1	Format	PRESSURE	NCON	REAL	
2-1	Data	Pressure data for each connection.			
	SWAT	Connection grid block water saturation at the requested time.			Required
1-1	Format	SWAT	NCON	REAL	
2-1	Data	Water saturation data for each connection.			
2-4	SGAS	Connection grid block gas saturation at the requested time.			Required
1-1	Format	SGAS	NCON	REAL	
2-1	Data	Gas saturation data for each connection.			
	CPLY	Connection grid block polymer concentration at the requested time.			Optional
1-1	Format	CPLY	NCON	REAL	
2-1	Data	Polymer concentration data for each connection.			
	CPLAD	Connection grid block adsorbed polymer concentration at the requested time.			Optional
1-1	Format	CPLAD	NCON	REAL	
2-1	Data	Adsorbed polymer concentration data for each connection.			
	CBRI	Connection grid block brine concentration at the requested time.			Optional
1-1	Format	CBRI	NCON	REAL	
2-1	Data	Brine concentration data for each connection.			
Notes:					
1) Rows shaded in gray indicate the start of a keyword.					
2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow.					
3) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the PRESSURE keyword should be written out as 'PRESSURE '.					

Table F.40: RFT Data File – RFT Solution Data Keywords

A complete standard RFT example showing the TIME, DATE, WELLECT, CONIPOS, CONJPOS, CONKPOS, DEPTH, PRESSURE, SWAT, and SGAS keywords, for one well at one time step is shown on the following page.

Example

The example shows all the keywords required to define a standard RFT data set for well B-4H which has 20 connection as of March 29, 1998. The units declared on the WELLETTC keyword indicate the standard metric unit system.

```

' TIME ' 1 ' REAL '
0.14300000E+03
' DATE ' 3 ' INTE '
29 3 1998
' WELLETTC ' 16 ' CHAR '
' DAYS ' ' B-4H ' ' ' ' METRES ' ' ' BARS ' ' ' R ' ' ' STANDARD '
' SM3/DAY ' ' SM3/DAY ' ' RM3/DAY ' ' M/SEC ' ' ' CP ' ' ' KG/SM3 '
' KG/DAY ' ' KG/KG '
' CONIPOS ' 20 ' INTE '
10 10 10 10 10
10 10 10 9 9
9 9 9 9 9
9 9
' CONJPOS ' 20 ' INTE '
32 32 32 32 32
32 32 32 32 32
32 32 32 32 31
31 31
' CONKPOS ' 20 ' INTE '
1 2 3 5 6 7
8 9 10 13 14 15
16 17 18 19 20 20
21 22
' HOSTGRID ' 20 ' CHAR '
' ' ' ' ' ' ' ' ' ' ' ' '
' ' ' ' ' ' ' ' ' ' ' '
' ' ' ' ' ' ' ' ' ' '
' DEPTH ' 20 ' REAL '
0.25333979E+04 0.25452786E+04 0.25577705E+04 0.25742898E+04
0.25797493E+04 0.25855930E+04 0.25918203E+04 0.25966951E+04
0.26071150E+04 0.26206902E+04 0.26333235E+04 0.26461284E+04
0.26576768E+04 0.26637878E+04 0.26665945E+04 0.26786790E+04
0.27012888E+04 0.27033108E+04 0.27381892E+04 0.27746746E+04
' PRESSURE ' 20 ' REAL '
0.27384171E+03 0.27406891E+03 0.27430649E+03 0.25063243E+03
0.25072800E+03 0.25085713E+03 0.25126656E+03 0.25138820E+03
0.25212048E+03 0.25290869E+03 0.25380568E+03 0.25471658E+03
0.25669318E+03 0.25713290E+03 0.25733768E+03 0.26151834E+03
0.26378452E+03 0.26398804E+03 0.28049472E+03 0.28405634E+03
' SWAT ' 20 ' REAL '
0.79952940E-01 0.10493817E+00 0.16989987E+00 0.10517924E+00
0.10518920E+00 0.14012721E+00 0.14357868E+00 0.80211885E-01
0.80138676E-01 0.80140039E-01 0.90355128E-01 0.19185907E+00
0.12343995E+00 0.29019111E+00 0.14448708E+00 0.32566309E+00
0.10000000E+01 0.10000000E+01 0.10000000E+01 0.10000000E+01
' SGAS ' 20 ' REAL '
0.92004704E+00 0.89506185E+00 0.83010012E+00 0.89231288E+00
0.89236671E+00 0.14750090E+00 0.17341191E-01 0.64456672E-02
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00
0.00000000E+00 0.00000000E+00 0.00000000E+00 0.00000000E+00

```

End of Example

F.8.5 RFT DATA FILE – SOLUTION PLT DATA KEYWORDS

This data set is currently not supported.

F.8.6 RFT DATA FILE – SOLUTION MULTI-SEGMENT WELL KEYWORDS

This data set is currently not supported.

F.8.7 RFT DATA FILE – SOLUTION RIVER KEYWORDS

This data set is currently not supported.

F.9 SUMMARY FILES – TIME BASED VECTOR DATA

The SUMMARY files contain the variables requested to be written to the summary files via the keywords declared in the SUMMARY section. The data are used to generate line graphs of properties such as oil flow rate versus time, grid block pressure versus time, etc. See sections [11.2 Data Requirements](#) and [11.3 Keyword Definitions](#) that declare the variables to be written out to the SUMMARY files. The default behavior is write out the requested variables at each time step. As this can lead to large files, especially for full field simulation models, the [RPTONLY - Activate the Report Time Steps Only Option for the SUMMARY File](#) keyword allows one to write out the data only at a report time step instead.

There are three types of SUMMARY files, the first SUMMARY file is the OPM Flow specific Enhanced SUMMARY (*.ESMRY) output file that is optimized for fast loading of selected vectors by post-processing applications, including OPM ResInsight. This file type is standalone, that is there is no separate index file.

The other two files types associated with the time based vector data, is an index file (SUMMARY Index) that contains a list of variables and objects (wells, groups, connections etc.) that are to be written out to summary data file, and the summary data file (SUMMARY Data) that contains the actual data written out at the required time steps. The commercial simulator uses the term “MINISTEP” to describe the time the data is written, and as mentioned above, “MINISTEP” may be either a time step or a reporting time step.

F.9.1 ENHANCED SUMMARY DATA FILE KEYWORDS

Again, this is an OPM FLOW specific Enhanced SUMMARY (*.ESMRY) output file format that is optimized for fast loading of selected vectors by post-processing applications. The *.ESMRY file is re-written for every time step and load times are in the order of 30 times faster compared with fetching selected vectors using the *.UNSMRY file format in post processing software. The file type is compatible with OPM ResInsight and the option is activated via the enable-esmry=true command line option.

The structure for this series of keywords is outlined in Table F.41 and depends on the data requested to be written out to the SUMMARY files.

No.	Keyword Name	Enhanced SUMMARY File Keywords Table F.41			Status Or Value
		Keyword	No. of Entries	Data Type	
	START	Three integer values representing the start date of the simulation., and four integers representing the hour, minutes, seconds and micro seconds the start date.			Required
1-1	Format	START	7	INTE	
2-1	Data	First part of start date of the run, DAY, the value should be greater than or equal to one and less than or equal to 31 for the calendar days.			DAY
2-2	Data	Second part of start date of the run, MONTH, the value should be greater than or equal to one and less than or equal to 12 for the calendar month.			MONTH
2-3	Data	Third part of start date of run, YEAR, a positive four digit integer value of the start year, which must be specified fully by four digits, for example 1986.			YEAR
2-4	Data	The first part of the start time in the form HH;MM:SS:MS, that is HH for hours. The value should be greater than or equal to zero and less than or equal to 23.			IHOURLZ
2-5	Data	The second part of the start time in the form HH;MM:SS:MS, that is MM for minutes. The value should be greater than or equal to zero and less than or equal to 59.			IMINTS

No.	Keyword Name	Enhanced SUMMARY File Keywords Table F.4I			Status Or Value
		Keyword	No. of Entries	Data Type	
2-6	Data	The third part of the start time in the form HH;MM:SS:MS, that is SS for seconds. The value should be greater than or equal to zero and less than or equal to 59.			ISECND
2-7	Data	The fourth part of the start time in the form HH;MM:SS:MS, that is MS for milliseconds. The value should be greater than or equal to zero and less than or equal to 999.			
	RESTART	RESTART is only present for restarted runs and contains the root file name (absolute or relative path) to the case which this run was restarted from.			Optional
1-1	Format	RESTART	I	C0nn	
2-1	Data	The name of file, enclosed in quotes, which contains the name of the case the current run was re-started from. The length of the character string is set by the Data Type, C0nn, for example, C125 would mean that the RESTART filename character length is 125 characters.			
	RSTNUM	The RSTNUM keyword is only present for restart runs and defines the report time step this case was restarted from.			Optional
1-1	Format	RSTNUM	I	INTE	
2-1	Data	Restart report time step. number.			
	KEYCHECK	A list of all the summary variable mnemonics written to the file at each time step., where NLIST is the number of vectors and C0nn is the constant fixed length of each variable character string. For example: <pre>'KEYCHECK' 6 'C010' 'TIME ' 'YEARS ' 'FOPR ' 'GGOR:PROD ' ' 'TCPU ' 'WOPR:PROD1'</pre> Where each vector name consists of 10 characters. For vectors associated with objects, groups, wells etc., the vector name is followed by a “.” and then the object name as shown in the above example.			Required
1-1	Format	KEYCHECK	NLIST	C0nn	
2-1	Data	Each mnemonic string should be enclosed in quotes and have a character length of C0nn, for example 'C010' in the above example.			
	UNITS	Units			Required
1-1	Format	UNITS	NLIST	CHAR	
2-1	Data	Units for the associated summary variable mnemonics.			
	RSTEP	An array that holds one integer value for each time step. An integer value of one indicates time steps that are also report time steps and a zero indicates time steps only.			Required
1-1	Format	RSTEP	NSTEP	INTE	
2-1	Data	One value for each time step and the values should be either zero or one.			

No.	Keyword Name	Enhanced SUMMARY File Keywords Table F.4I			Status Or Value
		Keyword	No. of Entries	Data Type	
	TSTEP	An array holding one integer value for each time step with the values representing the time step indices. Note that the values starts from zero, such that the Data will have values of the form 0, 1, 2,..., NSTEP - 1, that is unless the RPTONLY keyword has been used in the SUMMARY section to write only the report time steps to the file. Values should range between 0 to NSTEP - 1			Required
1-1	Format	TSTEP	NSTEP	INTE	
2-1	Data	One value for each time step. with the value ranging from zero to NSTEP - 1.			
	VX	One data array (length = NSTEP) for each summary vector specified in array KEYCHECK. Naming of these arrays should be V0,V1,V2, ... etc.			Required
1-1	Format	VX	NSTEP	REAL	
2-1	Data	One real value for each time step for one specific summary vector VX vector, where X ranges from zero to NLIST – 1, for the NLIST variables declared via the KEYCHECK keyword.			
Notes: 1) Keywords are order dependent. 2) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the START and KEYCHECK keywords should be written out as 'START' and 'KEYCHECK'.					

Table F.4I: Enhanced SUMMARY File Keywords

Example: Enhanced SUMMARY File Keywords

The following example shows a typical formatted Enhanced SUMMARY file set of keywords.

```
'START'      7 'INTE'
              1      11      2018      0      0      0
              0
'KEYCHECK'   6 'C010'
'TIME'       'YEARS'      'FOPR'      'GGOR:PROD' 'TCPU'      'WOPR:PROD1'
'UNITS'      'CHAR'
'DAYS'       'SM3/DAY' 'SM3/SM3' 'SECONDS' 'SM3/DAY'
'RSTEP'      4 'INTE'
              1      1      0      1
'TSTEP'      4 'INTE'
              1      2      3
'V0'         4 'REAL'
              1.0000000E+00 4.0000000E+00 9.0000000E+00 1.4000000E+01
'V1'         4 'REAL'
              2.7378509E-03 1.0951404E-02 2.4640657E-02 3.8329910E-02
'V2'         4 'REAL'
              0.0000000E+00 0.0000000E+00 0.0000000E+00 0.0000000E+00
'V3'         4 'REAL'
              0.0000000E+00 0.0000000E+00 0.0000000E+00 0.0000000E+00
'V4'         4 'REAL'
              6.0681427E-01 6.5710169E-01 7.0169014E-01 7.6383120E-01
'V5'         4 'REAL'
              0.0000000E+00 0.0000000E+00 0.0000000E+00 0.0000000E+00
```

The example shows the file holding six summary vector and four time steps, with the first, second and fourth time steps being report time steps.

F.9.2 SUMMARY INDEX FILE KEYWORDS

The structure for this series of keywords is outlined in Table F.42, Table F.43, and Table F.44 and depends on the data requested to be written out to the SUMMARY Data File.

No.	Keyword Name	SUMMARY Index File Keywords (Global)			Status Or Value
		Table F.42			
		Keyword	No. of Entries	Data Type	
	INTEHEAD	The integer header keyword contains two values indicating the units system and the simulator used to generate the file.			Required
1-1	Format	INTEHEAD	2	INTE	
2-1	Data	Unit system used in the simulation, set to 1 for metric, 2 for field, and 3 for laboratory			
2-2	Data	Simulator code used to generate the file, set to: 100 for Schlumberger's ECLIPSE 100, 300 for Schlumberger's ECLIPSE 300, 500 for Schlumberger's ECLIPSE 300 Thermal, 700 for Schlumberger's INTERSECT simulator, 800 for Schlumberger's FrontSim simulator, or a negative value for other simulators. OPM Flow uses a value of 100.			100
	RESTART	Contains the root file name of the case which this run was restarted from, if this was a restart run, other wise blank.			Required
1-1	Format	RESTART	9	CHAR	
2-1	Data	Maximum of 72 characters divided into eight character words. For example, if the data file is restarted from NOR01-PRED01-OPM2004-R00, then this data will be of the form: 'NOR01-PR' 'ED01-OPM' '2010-R00' '			
	DIMENS	This keyword contains the number of vectors and objects written to the SUMMARY Data file at each time step.			Required
1-1	Format	DIMENS	6	REAL	
2-1	Data	NLIST is the number of values stored at each time step on the SUMMARY Data File.			
2-2	Data	The number of grid blocks in the x-direction (NX).			
2-3	Data	The number of grid blocks in the y-direction (NY).			
2-4	Data	The number of grid blocks in the z-direction (NZ).			
2-5	Data	Not Used.			0
2-6	Data	Report time step of the case which this run was restated from, if this was a restart run.			0
	KEYWORDS	A list of all the summary variable mnemonics written to the SUMMARY Data file at each time step.			Required
1-1	Format	KEYWORDS	NLIST	CHAR	
2-1	Data	Each mnemonic string should be enclosed in quotes.			
	WGNAMES	A list of all well and group objects associated with summary variable mnemonics			Required
1-1	Format	WGNAMES	NLIST	CHAR	

No.	Keyword Name	SUMMARY Index File Keywords (Global) Table F.42			Status Or Value
		Keyword	No. of Entries	Data Type	
2-1	Data	Each well and group name should be enclosed in quotes			
	NUMS	Integer grid cell or region number associated with the summary variable mnemonics.			Required
1-1	Format	NUMS	NLIST	INTE	
2-1	Data	Integer values.			
	LENGTHS	Horizontal well length.			Optional
1-1	Format	LENGTHS	NLIST	REAL	
2-1	Data	The distance from the bottom-hole reference depth to the completion depth for the associated summary variable mnemonics for horizontal wells			
	LENUNITS	Horizontal well length units.			Optional
1-1	Format	LENUNITS	I	CHAR	
2-1	Data	Horizontal well length units.			
	MEASRMNT	Measurements associated with each summary variable mnemonic.			Optional
1-1	Format	MEASRMNT	NBLOCK x NLIST	CHAR	
2-1	Data	NBLOCK is equal to the number of elements provided by this keyword divided by NLIST.			
	UNITS	Units			Required
1-1	Format	UNITS	NLIST	CHAR	
2-1	Data	Units for the associated summary variable mnemonics.			
	STARTDAT	Three integer values representing the date of the data being written out., and four integers representing the hour, minutes, seconds and micro seconds the data is being written out.			Required
1-1	Format	STARTDAT	3	INTE	
2-1	Data	Calendar day and should range between one and 31.			DAY
2-2	Data	Calendar month should range between one and 12.			MONTH
2-3	Data	Calendar year in four digits, that is 2020.			YEAR
2-4	Data	Hour.			HOUR
2-5	Data	Minutes.			MINUTE
2-6	Data	Seconds in micro seconds, 0-59:999:999			SECOND

Notes:

- Keywords up to including the NUMS keyword are order dependent, after the NUMS keyword the keywords may be in any order.
- Rows shaded in gray indicate the start of a keyword.
- Cells colored orange in the No. column indicate that this item is not supported by OPM Flow and those colored red are either "Not Used" or "Undefined".
- For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the INTEHEAD and DIMENS keywords should be written out as 'INTEHEAD ' and 'DIMENS '.

Table F.42: SUMMARY Index File Keywords (Global)

In addition, Table F.43 summarizes the SUMMARY Index File keywords associated with Local Grid Refinements.

No.	Keyword Name	SUMMARY Index File Keywords (LGR)			Status Or Value
		Table F.43			
		Keyword	No. of Entries	Data Type	
	LGRS	Local Grid Refinement names associated summary variable mnemonic for LGR grids.			Optional
1-1	Format	LGRS	NLIST	CHAR	
2-1	Data	Name of the LGRs.			
	NUMLX	This keyword defines the LGR grid index in the x direction (I direction) for the associated summary variable mnemonic for LGR grids.			Optional
1-1	Format	NUMLX	NLIST	INTE	
2-1	Data	LGR I location of local grid block data or the connection data.			
	NUMLY	This keyword defines the LGR grid index in the y direction (J direction) for the associated summary variable mnemonic for LGR grids.			Optional
1-1	Format	NUMLY	NLIST	INTE	
2-1	Data	LGR J location of local grid block data or the connection data.			
	NUMLZ	This keyword defines the LGR grid index in the z direction (K direction) for the associated summary variable mnemonic for LGR grids.			Optional
1-1	Format	NUMLX	NLIST	INTE	
2-1	Data	LGR K location of local grid block data or the connection data.			
	LGRNAMES	The names of all the LGRs in this case with the number of of LGRs in the case given by NLGR.			Optional
1-1	Format	LGRNAMES	NLGR	CHAR	
2-1	Data	List of LGR names.			
	LGRVEC	Integer list of the number of summary variable mnemonics for each LGR.			Optional
1-1	Format	LGRVEC	NLGR	INTE	
2-1	Data	Number of summary variable mnemonics for each LGR.			
	LGRTIMES	A list of the total number of local time steps for each LGR.			
1-1	Format	LGRTIMES	NLGR	INTE	
2-1	Data	Number of local time steps for each LGR.			

Notes:

- 1) The LGR keywords may be in any order but must come after the NUMS keyword in Table F.42.
- 2) Rows shaded in gray indicate the start of a keyword.
- 3) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow
- 4) For formatted output all character variables, including the keyword, should be enclosed in single quotes, for example the LGRTIMES keyword should be written out as 'LGRTIMES'.

Table F.43: SUMMARY Index File Keywords (LGR)

Finally, Table F.44 summarizes the SUMMARY Index File keywords specific to the commercial simulator and are therefore not described in any detail.

No.	Keyword Name	SUMMARY Index File Keywords (Commercial Simulator) Table F.44	Status Or Value
	RUNTIMEI	Run time monitoring – not supported.	
	RUNTIMED	Run time monitoring – not supported.	
	STEPRESN	Run time monitoring – not supported.	
	XCOORD	OFM Data – not supported.	
	YCOORD	OFM – not supported.	
	TIMESTMP	Not supported.	

Notes:

- 1) Rows shaded in gray indicate the start of a keyword.
- 2) Cells colored orange in the No. column indicate that this item is not supported by OPM Flow.
- 3) For formatted output all character variables, including the keyword should be enclosed in single quotes.

Table F.44: SUMMARY Index File Keywords (Commercial Simulator)

Example: SUMMARY Index File Keywords

The following example shows a typical formatted SUMMARY Index file set of keywords.

```

'INTEHEAD'          2 'INTE'
      1          100
'RESTART'  ' '      9 'CHAR'
' '        ' '      ' '      ' '      ' '      ' '      ' '
' '        ' '      '
'DIMENS'          6 'INTE'
      164          10          10          10          0          0
'KEYWORDS' 164 'CHAR'
'TIME'      'YEARS' 'FGIP' 'FGIPG' 'FGIPL' 'FGIR' 'FGIT'
'FGOR'      'FGPR' 'FGPT' 'FOIP' 'FOIPG' 'FOIPL' 'FOIR'
'FOIT'      'FOPR' 'FOPT' 'FPR' 'FVIR' 'FVIT' 'FVPR'
'FVPT'      'FWCT' 'FWIP' 'FWIR' 'FWIT' 'FWPR' 'FWPT'
'GGIR'      'GGIT' 'GGOR' 'GGPR' 'GGPT' 'GOIR' 'GOIT'
'GOPR'      'GOPT' 'GVIR' 'GVIT' 'GVPR' 'GVPT' 'GWCT'
'GWIR'      'GWIT' 'GWPR' 'GWPT' 'SPR' 'SPR' 'SPR'
'SPR'       'SPR' 'SPR' 'SPR' 'SPR' 'SPR' 'SPR'
.....

'WWCT'      'WWCT' 'WWIR' 'WWIR' 'WWIT' 'WWIT' 'WWPR'
'WWPR'      'WWPT' 'WWPT'
'WGNAMEs'   164 'CHAR'
':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++'
':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++'
':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++'
':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++' ':+:+:+++'
'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM'
'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM'
'PLATFORM' 'PLATFORM' 'PLATFORM' 'PLATFORM' 'OP01' 'OP01' 'OP01'
'OP01'      'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01'
'OP01'      'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01'
'OP01'      'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01'
'OP01'      'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01'
'OP01'      'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01' 'OP01'
.....

'WI01'      'OP01' 'WI01'
'NUMS'      164 'INTE'
      0          0          0          0          0          0
      0          0          0          0          0          0
      0          0          0          0          0          0
      0          0          0          0          0          0
      0          0          0          0          0          0
      0          0          0          0          0          0
      0          0          0          0          1          2
      3          4          5          6          7          8
      9          10         11         12         13         14
.....

      0          0
'UNITS'      164 'CHAR'
'DAYS'      'YEARS' 'SM3' 'SM3' 'SM3' 'SM3/DAY' 'SM3'
'SM3/SM3'   'SM3/DAY' 'SM3' 'SM3' 'SM3' 'SM3' 'SM3/DAY'
'SM3'       'SM3/DAY' 'SM3' 'BARSA' 'RM3/DAY' 'RM3' 'RM3/DAY'
'RM3'       'SM3/SM3' 'SM3' 'SM3/DAY' 'SM3' 'SM3/DAY' 'SM3'
.....
'SM3/DAY'   'SM3' 'SM3'
'STARTDAT'  6 'INTE'
      1          1          2020          0          0          0

```

End of Example

F.9.3 SUMMARY DATA FILE KEYWORDS

The structure for this series of keywords is relatively simple compared to the SUMMARY Index file, in that it only consists of four keyword types that are written out at the requested time steps, as outlined in Table F.45.

No.	Keyword Name	SUMMARY Data File Keywords Table F.45			Status Or Value
		Keyword	No. of Entries	Data Type	
	SEQNUM	<p>This keyword contains a sequence data value corresponding to an encoded integer representing the time the file was created. Although required the data is not used.</p> <p>Secondly, this keyword is written at each report step only and not for each inter leaving mini step, that is the file format is of the following format:</p> <div><div>SEQNUM MINISTEP PARAMS MINISTEP PARAMS MINISTEP PARAMS INISTEP PARAMS SEQNUM MINISTEP PARAMS MINISTEP PARAMS</div><div>Report step n</div><div>Report step n + 1</div></div>			Required
1-1	Format	SEQNUM	I	INTE	
2-1	Data	The value entered is not used by either OPM Flow or OPM ResInsight			0
	MINSTEP	The time step number starting from zero and incremented by one for each subsequent time step.			Required
1-1	Format	MINISTEP	I	INTE	
2-1	Data	Time step.			
	PARAMS	This keyword contains the actual data for all the vectors and objects specified in the index file.			Required
1-1	Format	PARAMS	NLIST	REAL	
2-1	Data	There should be NLIST values corresponding to the variable list declared on the corresponding SUMMARY Index file.			
Notes:					
1) Rows shaded in gray indicate the start of a keyword.					

Table F.45: SUMMARY Data File Keywords

For LGRs, the global cell data is written to the standard SUMMARY Data file containing an additional keyword that states the LGR name, as depicted in Table F.46.

No.	Keyword Name	SUMMARY Data File Keywords (LGR)			Status Or Value
		Table F.46			
		Keyword	No. of Entries	Data Type	
	SEQNUM	As per Table F.45			Required
	LGRNAME	Name of Local Grid Refinement.			Required
	Format	LGRNAME	I	CHAR	
	Data	LGR name enclosed in single quotes.			
	MINSTEP	As per Table F.45.			Required
	PARAMS	As per Table F.45.			Required
Notes:					
I) Rows shaded in gray indicate the start of a keyword.					

Table F.46: SUMMARY Data File Keywords (LGR)

The data for the LGR time steps, as opposed to the global time step, are written out to a separate SUMMARY Data File, with the suffix of LGR or FLG for fixed format output. In this case, the MINSTEP keyword states the “local” time step and the keyword is repeated for each local grid in the model.

Example: SUMMARY Data Data File keyword

The following example shows a typical formatted SUMMARY Data File keyword data set for one complete report time step and part of a second report time step.

```
'SEQHDR'      1 'INTE'
1
'MINISTEP'    1 'INTE'
0
'PARAMS'      164 'REAL'
0.50000000E+00 0.13689254E-02 0.18381236E+11 0.51459348E+10
0.13235301E+11 0.00000000E+00 0.00000000E+00 0.37649313E+03
0.95391960E+07 0.47695980E+07 0.10947282E+09 0.30000488E+06
0.10917282E+09 0.00000000E+00 0.00000000E+00 0.25336973E+05
0.12668486E+05 0.27468176E+03 0.15571577E+05 0.77857886E+04
0.63867320E+05 0.31933660E+05 0.12643164E-02 0.60474832E+08
0.15000000E+05 0.75000000E+04 0.32074501E+02 0.16037251E+02
0.00000000E+00 0.00000000E+00 0.37649313E+03 0.95391960E+07
0.47695980E+07 0.00000000E+00 0.00000000E+00 0.25336973E+05
0.12668486E+05 0.15571577E+05 0.77857886E+04 0.63867320E+05
0.31933660E+05 0.12643164E-02 0.15000000E+05 0.75000000E+04
0.32074501E+02 0.16037251E+02 0.26000000E+03 0.26172531E+03
0.26362421E+03 0.26596732E+03 0.26747589E+03 0.26896045E+03
0.26282996E+03 0.26332187E+03 0.26378699E+03 0.26365936E+03
.....
'SEQHDR'      1 'INTE'
2
'MINISTEP'    1 'INTE'
1
'PARAMS'      164 'REAL'
0.10000000E+01 0.27378509E-02 0.18377710E+11 0.51453399E+10
0.13232370E+11 0.00000000E+00 0.00000000E+00 0.32637939E+03
.....
```

End of Example

F.10 SAVE FILES - INITIALIZATION AND SOLUTION DATA

This file format is currently not supported by OPM Flow.

End of Document

